



## LCD TV

MODELS: 32LC2DU  
37LC2DU  
42LC2DU

## PLASMA TV

MODELS: 42PC3DU  
42PC3DVU  
50PC3DU  
60PC1D

## OWNER'S MANUAL



Internet Home Page : <http://www.lge.com>  
<http://www.lg.ca>

ENERGYSTAR is a set of power-saving guidelines issued by the U.S. Environmental Protection Agency(EPA).



As an ENERGY STAR Partner LGE U. S. A.,Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

- Applied models: 42PC3DU/3DVU/50PC3DU  
32/37/42LC2DU

Please read this manual carefully before operating your set. Retain it for future reference. Record model number and serial number of the set. See the label attached on the back cover and quote this information to your dealer when you require service.

P/NO : 38289U0527F ①  
Printed in Korea

# Warning



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



## WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## NOTE TO CABLE/TV INSTALLER:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

## REGULATORY INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## CAUTION:

Do not attempt to modify this product in any way without written authorization from LG Electronics Corporation. Unauthorized modification could void the user's authority to operate this product.

## COMPLIANCE:

The responsible party for this product's compliance is:  
LG Electronics U.S.A., Inc.  
1000 Sylvan Avenue, Englewood Cliffs, NJ 07632  
Phone: 1-800-243-0000  
<http://www.lgusa.com>

# Safety Instructions

## WARNING :

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.

2. Keep these instructions.

3. Heed all warnings.

4. Follow all instructions.



5. Do not use this apparatus near water.



6. Clean only with a dry cloth.



7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.

 


8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

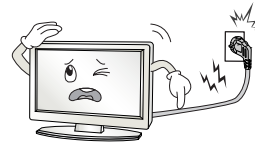


11. Only use the attachments / accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.



 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

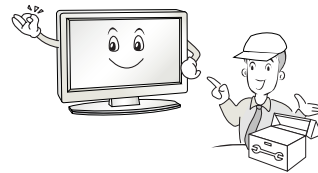

13. Unplug this apparatus during lightning storms or when unused for long periods of time.



15. DISCONNECTING DEVICE FROM MAINS  
Main plug is the disconnecting device. The plug must remain readily operable.

**Note**

- If the TV feels cold to the touch, there may be a small “flicker” when when it is turned on. This is normal, there is nothing wrong with TV.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However, they have no adverse effect on the monitor's performance.
- Avoid touching the LCD screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effects on the screen.

**CAUTION concerning the Power Cord**

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

**On Disposal**

- a. The fluorescent lamp used in this product contains a small amount of mercury.
- b. Do not dispose of this product with general household waste.  
Disposal of this product must be carried out in accordance to the regulations of your local authority.

# Contents

<b>Introduction</b>		<b>2</b>	<b>Warnings</b>
		<b>3~4</b>	<b>Safety Instructions</b>
		<b>7</b>	<b>Accessories</b>
		<b>8</b>	<b>Controls (Model Name: 50PC3DU / 60PC1D)</b>
		<b>9</b>	<b>Connection Options (Model Name: 50PC3DU / 60PC1D)</b>
		<b>10</b>	<b>Controls (Model Name: 32/37/42LC2DU)</b>
		<b>11</b>	<b>Connection Options (Model Name: 32/37/42LC2DU)</b>
		<b>12~13</b>	<b>Remote Control Key Functions</b>
		<hr/>	
		<b>Installation</b>	<b>External Equipment Connections</b>
<b>15</b>	Desktop Pedestal Installation		
<b>16~17</b>	Basic Connection		
<b>18</b>	Antenna or Cable Connection		
<b>19~20</b>	VCR Setup		
<b>20</b>	External AV Source Setup		
<b>21~22</b>	DVD Setup		
<b>23~24</b>	HDSTB Setup		
<b>25</b>	AV Out Setup		
<b>25</b>	Digital Audio Output		
<b>26~28</b>	PC Setup		
<hr/>			
<b>Operation</b>	<b>Basic operation</b>	<b>29</b>	Turning on the TV
		<b>29</b>	Volume Adjustment
		<b>29</b>	Channel Selection
		<b>29</b>	On Screen Menus Language Selection
	<b>30</b>	On Screen Menus Selection and Adjustment	
	<hr/>		
	<b>Setup Menu Options</b>	<b>31</b>	EZ Scan (Channel Search)
		<b>31</b>	Manual Scan
		<b>32</b>	Channel Edit
		<b>33</b>	DTV Signal Strength
		<b>33</b>	Input Source
	<b>Video Menu Options</b>	<b>34</b>	Input Label
		<hr/>	
		<b>35</b>	Auto Picture Control(EZ Picture)
		<b>35~36</b>	Color Temperature Control
		<b>37</b>	XD
<b>Audio Menu Options</b>	<b>38</b>	Advanced-Cinema 3:2 Mode / Black Level	
	<b>39</b>	Video Reset	
	<hr/>		
	<b>40</b>	Audio Language	
	<b>41</b>	Auto Sound Control(EZ Sound)	
<b>41~42</b>	Manual Sound Control (EZ Sound-User option)		
<b>43</b>	Balance		
<b>43</b>	TV Speakers On/Off Setup		

Operation	Time Menu Options	44 Auto Clock Setup
	Option Menu Features	44 Manual Clock Setup
	Lock Menu Options	45 On/Off Timer Setup
		45 Sleep Timer
		46 Auto Off
		47 Aspect Ratio Control
		48 Caption/Text
		49 Caption Option
		49 Low Power ( 50PC3DU / 60PC1D only)
		50 ISM (Image Sticking Minimization) Method (50PC3DU / 60PC1D only)
		51~52 Parental Lock Setup
Reference		<b>53~58 External Control Device Setup</b>
		<b>59~60 IR Codes</b>
		<b>61 Programming the Remote</b>
		<b>62~63 Programming Codes</b>
		<b>64~65 Troubleshooting Checklist</b>
		<b>65 Maintenance</b>
		<b>66~67 Product Specifications</b>

# Introduction

## Accessories

 
Ensure that the following accessories are included with your TV. If any accessory is missing, please contact the dealer from where you purchased the product. User must use shielded signal interface cables(D-sub 15 pin cable) with ferrite cores to maintain standard compliance for the product.




Power Cord



75Ω Round Cable



Owner's Manual

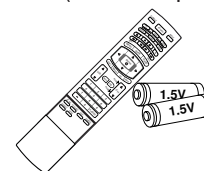 Remote Control /  
Batteries

### For 42PC3DU/3DVU/ 50PC3DU



2-Wall brackets

 


2-eye-bolts

#### 42PC3DU/3DVU only

2-bolts  
(Refer p.14)

#### Option Extras



D-sub 15 pin cable

### For 32/37/42LC2DU

2-TV brackets  
2-Wall brackets

2-TV Bracket Bolts

Twister Holder  
Arrange the wires  
with the twister holder.Cable  
Management  
(Refer p.16)

#### 42LC2DU only

Polishing Cloth  
Polish the TV with  
the cloth.

#### 32LC2DU only

4-bolts for stand  
assembly  
See below for detail  
information.

#### [Polishing Cloth]

Slightly wipe stained spot on the exterior only with the cleansing cloths for the product exterior if there is stain or fingerprint on surface of the exterior.  
Do not wipe roughly when removing stain. Please be cautious of that excessive power may cause scratch or discoloration.

### For 60PC1D

2-TV brackets  
2-Wall brackets

 
4- Bolts




4-RING SPACER

## Stand Installation for 32LC2DU


- Carefully place the product screen side down on a cushioned surface that will protect product and screen from damage.

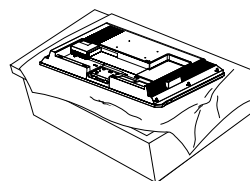

 - Place the hook of the stand in the back of the product as shown.


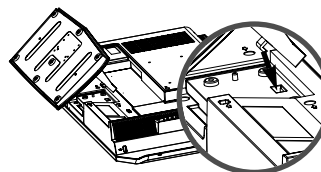


 - Install the 4 bolts provided securely, in the back of the product.

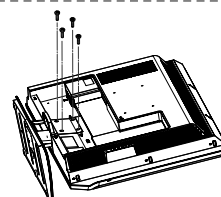

## Controls (Model Name: 42PC3DU/3DVU/50PC3DU/60PC1D)

  
- This is a simplified representation of front panel.
- This picture shown below may be somewhat different from your TV.

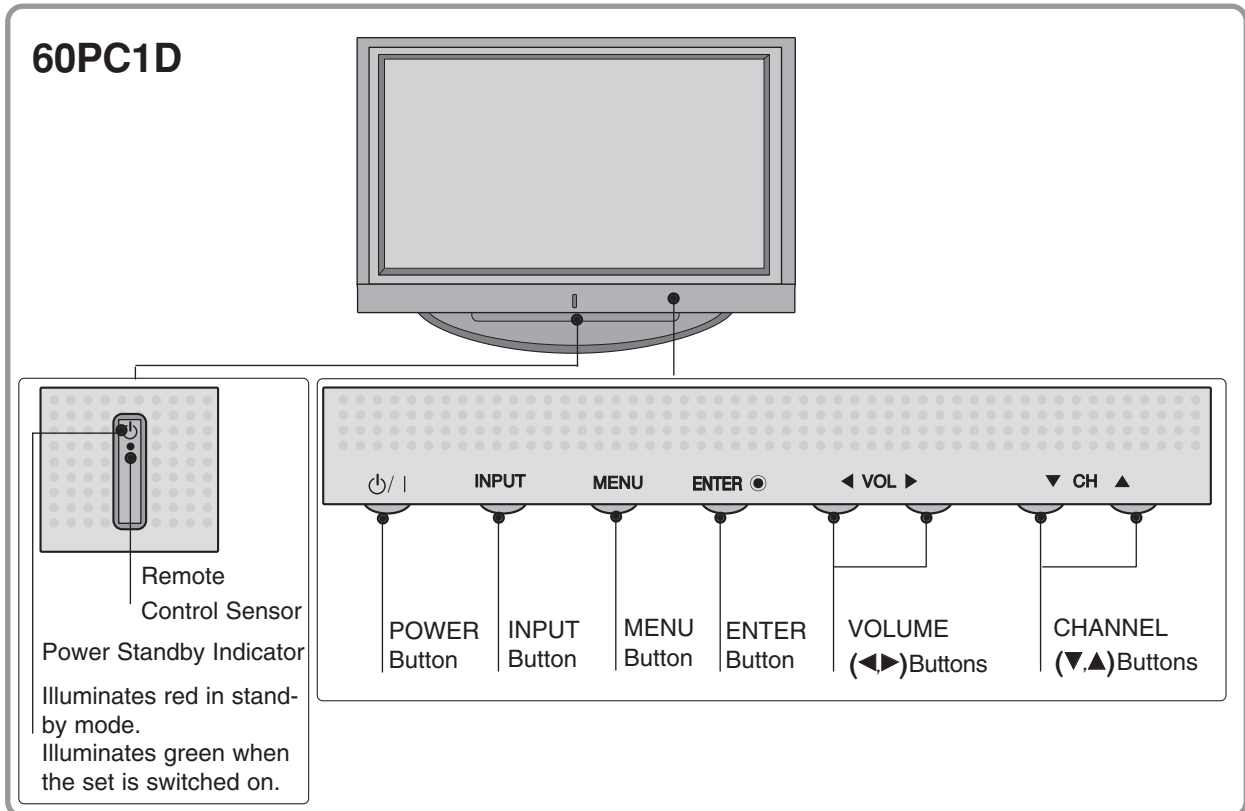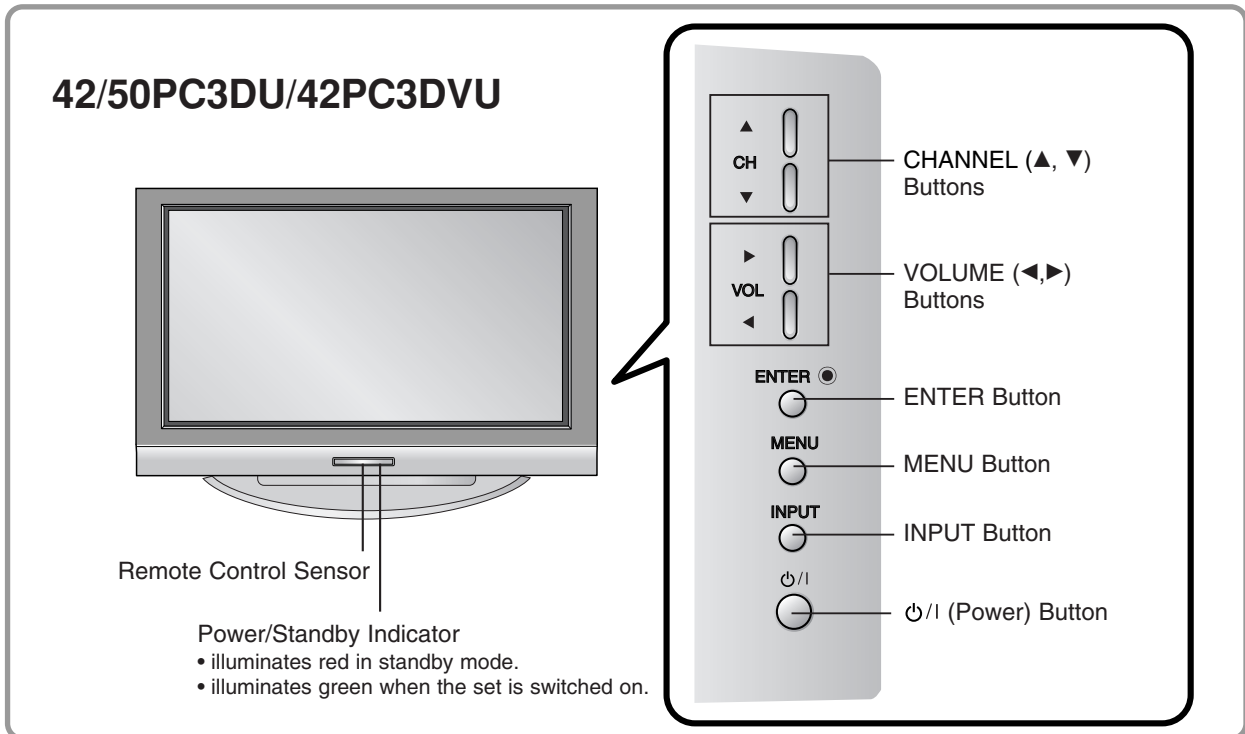



## Connection Options (Model Name: 42PC3DU/3DVU/50PC3DU/60PC1D)

- This picture shown below may be somewhat different from your TV.

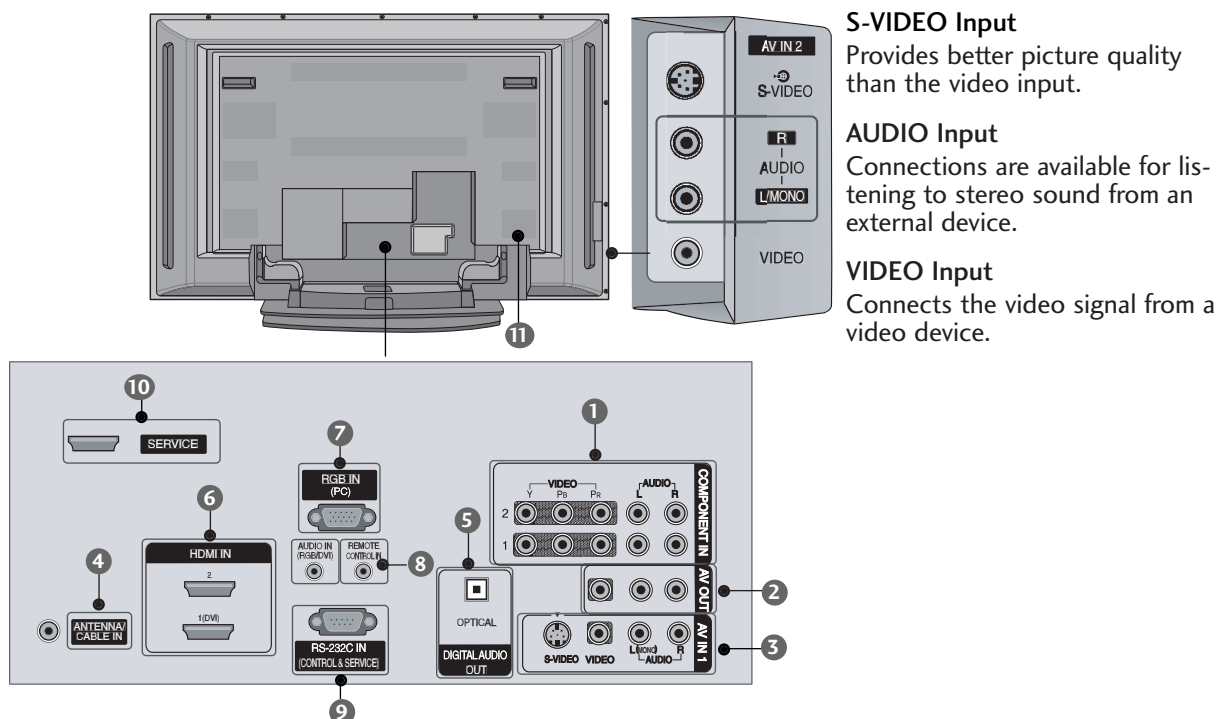 

### S-VIDEO Input

Provides better picture quality than the video input.

### AUDIO Input

Connections are available for listening to stereo sound from an external device.

### VIDEO Input

Connects the video signal from a video device.

### 1 COMPONENT IN

Connect a component video/audio device to these jacks.

### 2 AV OUT

Connect a second TV or monitor.

### 3 AV (Audio/Video) IN 1

Connect audio/video output from an external device to these jacks.

#### S-VIDEO

Connect S-Video out from an S-VIDEO device.

### 4 ANTENNA/CABLE IN

Connect over-the air signals to this jack.  
Connect cable signals to this jack.

### 5 DIGITAL AUDIO OUT

Connect digital audio from various types of equipment.

Note: In standby mode, these ports do not work.

### 6 HDMI IN

Connect a HDMI signal to 1 (DVI) or 2.  
Or DVI (VIDEO) signal to the 1 (DVI) port with a DVI to HDMI cable.

### 7 RGB IN (PC)

Connect the monitor output from a PC to the appropriate input port.

### 8 Remote Control Port

Connect your wired remote control.

#### AUDIO IN (RGB/DVI)

Connect the monitor output from a PC to the appropriate input port.

### 9 RS-232C IN (CONTROL & SERVICE) PORT

Connect to the RS-232C port on a PC.

### 10 SERVICE

### 11 Power Cord Socket

 
For operation with AC power.

Caution:


Never attempt to operate the TV on DC power.

## Controls (Model Name: 32/37/42LC2DU)

- This is a simplified representation of front panel.
- This picture shown below may be somewhat different from your TV.

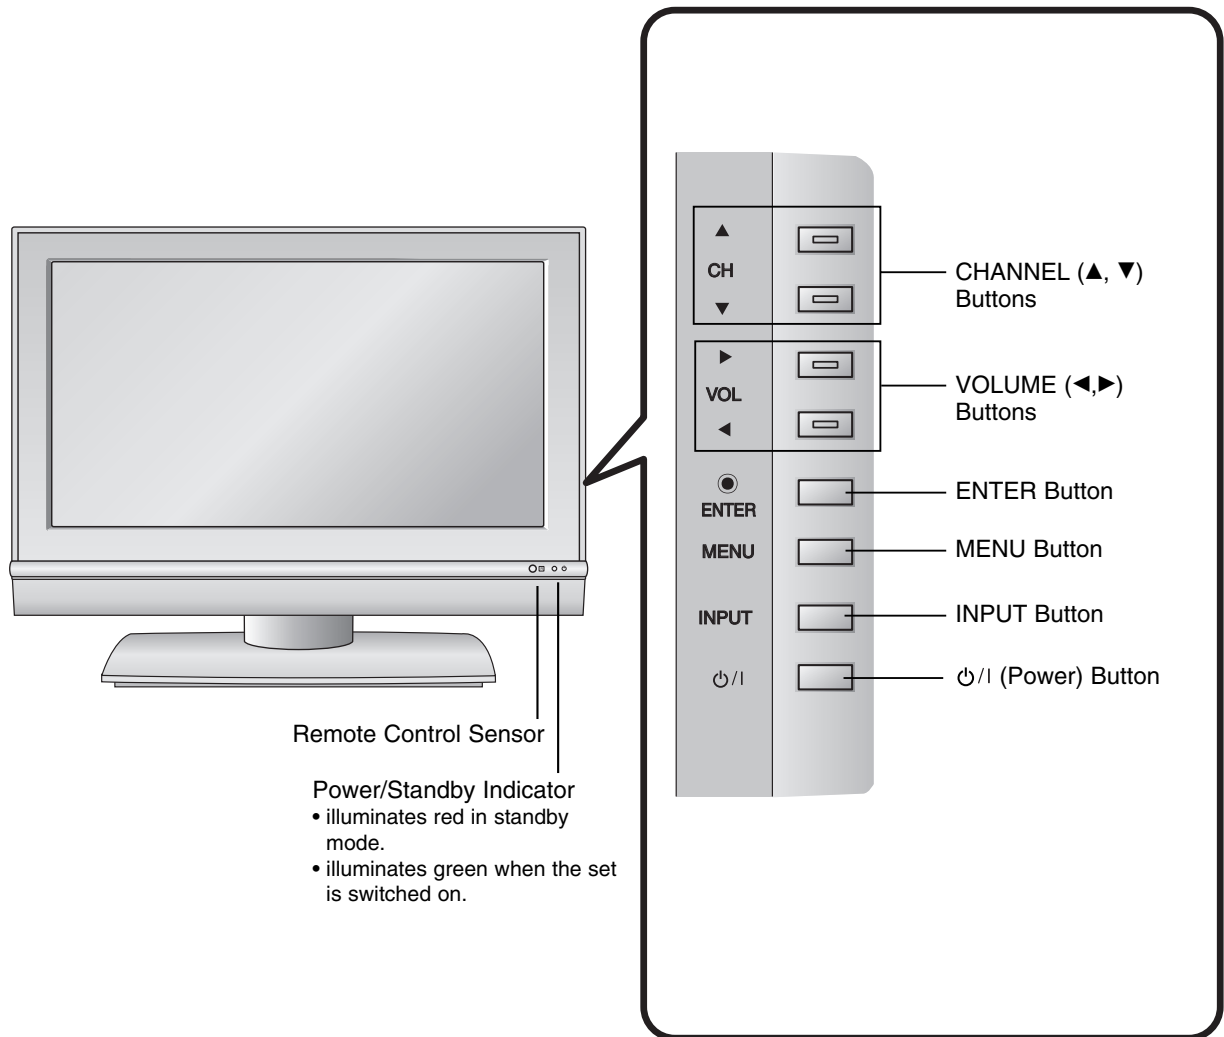


## Swivel Stand (42LC2DU Only)

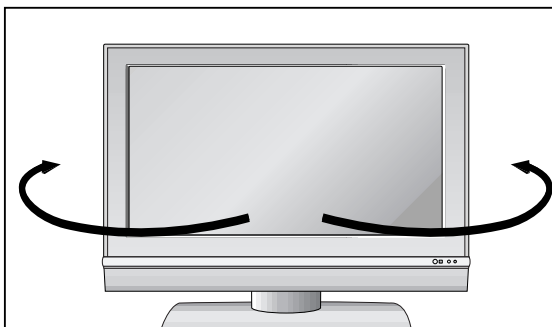 

- The TV can be conveniently swivelled on its stand 30° to the left or right to provide the optimum viewing angle.

## Connection Options (Model Name: 32/37/42LC2DU)

- This picture shown below may be somewhat different from your TV.

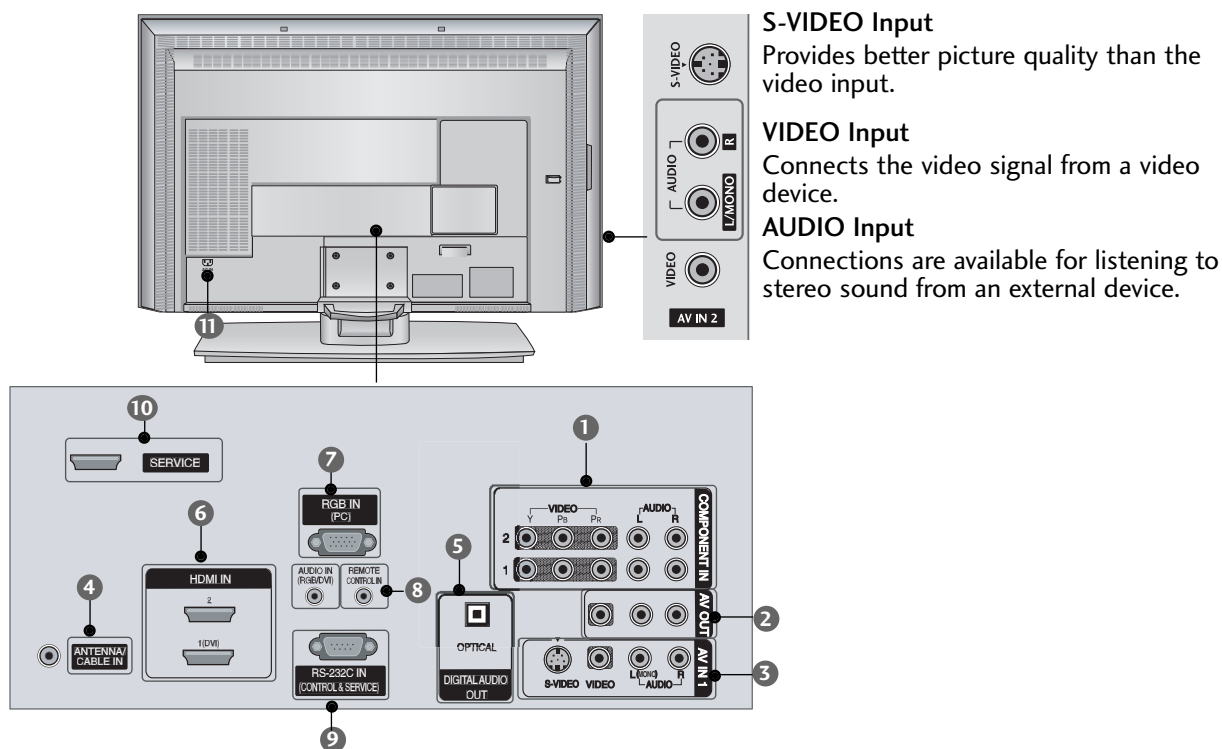 

### 1 COMPONENT IN

Connect a component video/audio device to these jacks.

### 2 AV OUT

Connect a second TV or monitor.

### 3 AV (Audio/Video) IN 1

Connect audio/video output from an external device to these jacks.

#### S-VIDEO

Connect S-Video out from an S-VIDEO device.

### 4 ANTENNA/CABLE IN

Connect over-the air signals to this jack.  
Connect cable signals to this jack.

### 5 DIGITAL AUDIO OUT

Connect digital audio from various types of equipment.

Note: In standby mode, these ports do not work.

### 6 HDMI IN

Connect a HDMI signal to 1 (DVI) or 2.  
Or DVI (VIDEO) signal to the 1 (DVI) port with a DVI to HDMI cable.

### S-VIDEO Input

Provides better picture quality than the video input.

### VIDEO Input

Connects the video signal from a video device.

### AUDIO Input

Connections are available for listening to stereo sound from an external device.

### 7 RGB IN (PC)

Connect the monitor output from a PC to the appropriate input port.

### 8 Remote Control Port

Connect your wired remote control.

#### AUDIO IN (RGB/DVI)

Connect the monitor output from a PC to the appropriate input port.

### 9 RS-232C IN (CONTROL & SERVICE) PORT

Connect to the RS-232C port on a PC.

### 10 SERVICE

 
### 11 Power Cord Socket

For operation with AC power.

Caution:

Never attempt to operate the TV on DC power.

# Remote Control Key Functions

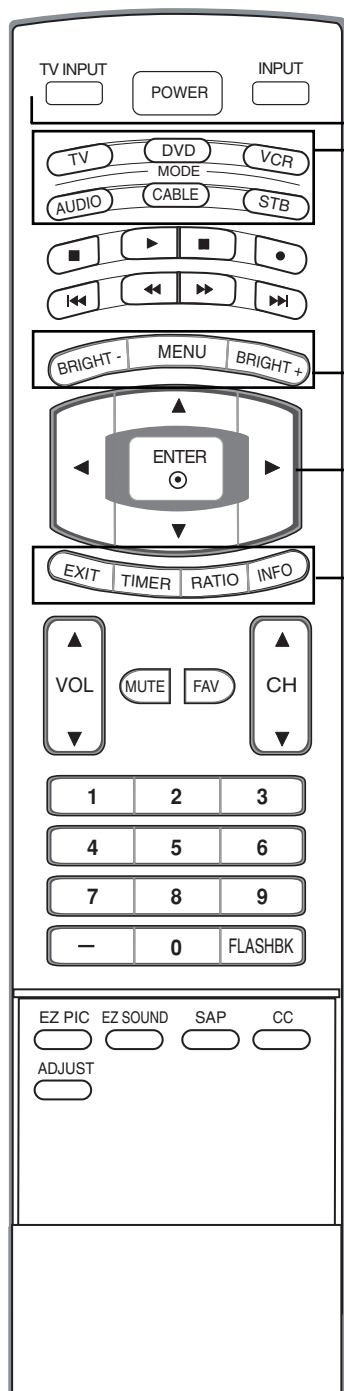

**POWER**

Turns your TV or any other programmed equipment on or off, depending on mode.

**TV INPUT**

Rotates the input mode between Antenna and Cable. In AV1-2, Component 1-2, RGB-DTV (or RGB-PC), HDMI1/DVI, and HDMI2 input sources, screen returns to the last TV channel.

**INPUT**

External input modes rotate in regular sequence: TV, AV1-2, Component 1-2, RGB-PC, HDMI1/DVI or HDMI2. (AV 1-2, Component 1-2, RGB-PC, HDMI1/DVI or HDMI2 input sources are linked automatically, only if these are connected.)

**MODE**

Selects the remote operating mode: TV, DVD, VCR, AUDIO, CABLE, or STB. Select a mode other than TV, for the remote to operate an external device.

**MENU**

Brings up the main menu to the screen.

**BRIGHT + / -**

- Adjust brightness on screen.
- It turns to the default settings brightness by changing mode source.

**THUMBSTICK (Up/Down/Left/Right/ENTER)**

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

**EXIT**

Clears all on-screen displays and returns to TV viewing from any menu.

**TIMER** ▶ p.45

 
Lets you select the amount of time before your TV turns itself off automatically.

**RATIO** ▶ p.47

Changes the aspect ratio.

**INFO**

When you watch the TV, information displays on top of the screen. Not available in Component 1-2, RGB, HDMI1/DVI and HDMI2 mode.

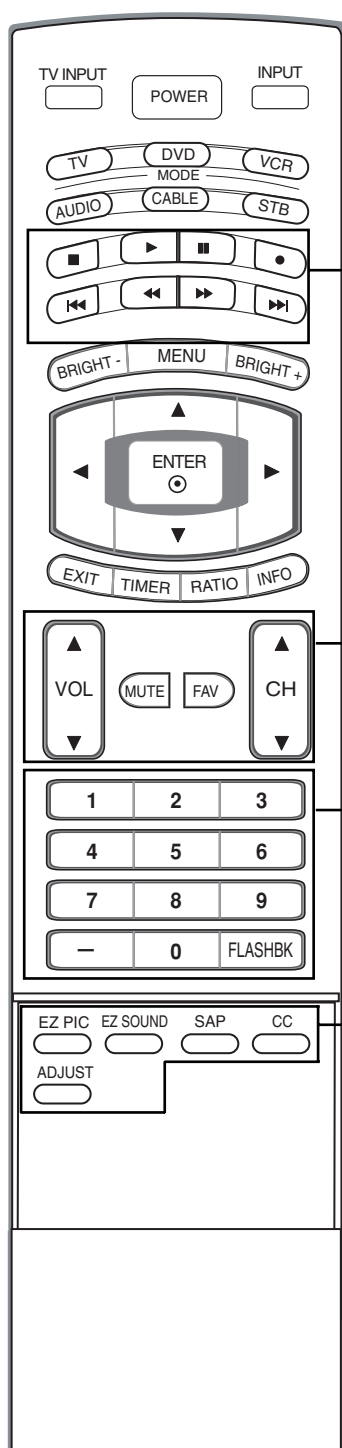**VCR/DVD/DVHS/Camcorder BUTTONS**

Control some video cassette recorders or DVD players ("RECORD" button is not available for DVD player).

**VOLUME UP/DOWN**

Increases/decreases the sound level.

**CHANNEL UP/DOWN**

Selects available channels found with EZ scan and Manual scan.

**MUTE** ▶ p.29

Switches the sound on or off.

**FAV**

Use to scroll the Favorite channels.

**NUMBER BUTTONS****— (DASH)**

Used to enter a program number for multiple program channels such as 2-1, 2-2, etc.

**FLASHBK**

Returns to the last channel viewed.

**EZ PIC** ▶ p.35

Selects a factory preset picture mode depending on the viewing environment.

**EZ SOUND** ▶ p.41

Selects the sound appropriate for the program's character.

**SAP**

Selects MTS sound: Mono, Stereo, and SAP in analog mode. Change the audio language in DTV mode.

 
**CC** ▶ p.48 (\*In DTV/CADTV mode ▶ p.48)

Select a closed caption: Off, CC1~4, Text1~4.

**ADJUST**

Adjusts screen position, size, and phase in PC mode.


### Installing Batteries

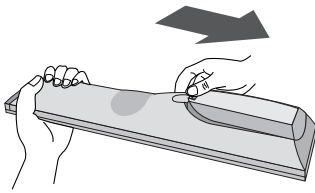

- Open the battery compartment cover on the back side and install the batteries matching correct polarity (+with +,-with -).
- Install two 1.5V AA batteries. Don't mix old or used batteries with new ones.
- Close cover.

### Remote control effective range

 32/37/42LC2DU    42PC3DU/3DVU/50PC3DU    60PC1D

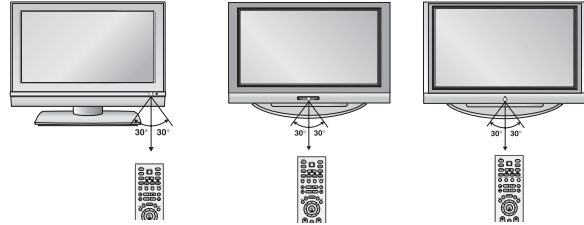


- Use a remote control up to 7 meters distance and 30 degree (left/right) within the receiving unit scope.
- Dispose of used batteries in a recycle bin to preserve environment.

## ATTACHING THE TV TO A WALL

 
We recommend that you set up the TV close to a wall so it cannot fall over if pushed backwards. Additionally, we recommend that the TV be attached to a wall so it cannot be pulled in a forward direction, potentially causing injury or damaging the product.

Caution: Please make sure that children don't climb on or hang from the TV.

#### 42PC3DU/3DVU/50PC3DU/60PC1D

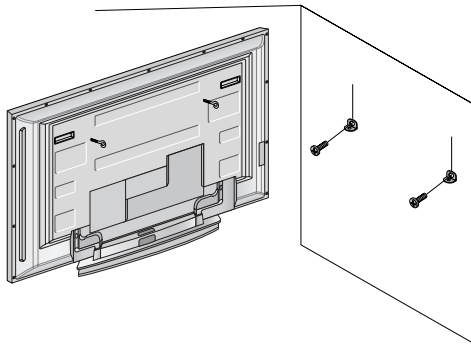

#### 32/37/42LC2DU

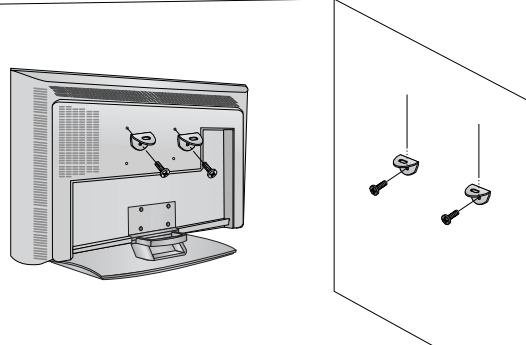 


- Insert the eye-bolts (or TV brackets and bolts) to tighten the product to the wall as shown in the picture.

\* If your product has the bolts in the eye-bolts position, loosen the bolts.

Secure the wall brackets with the bolts (not provided as parts of the product, must purchase separately) on the wall. Match the height of the bracket that is mounted on the wall to the holes in the product.

 Ensure the eye-bolts or brackets are tightened securely.

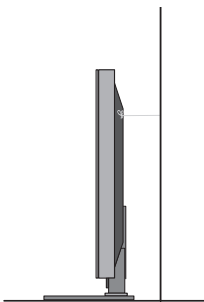



- Use a sturdy rope (not provided as parts of the product, must purchase separately) to tie the product. It is safer to tie the rope so it becomes horizontal between the wall and the product.

# Installation

 
 
## DESKTOP PEDESTAL INSTALLATION

For proper ventilation, allow a clearance of 4 inches on each side from the wall.

42PC3DU/3DVU/50PC3DU/60PC1D

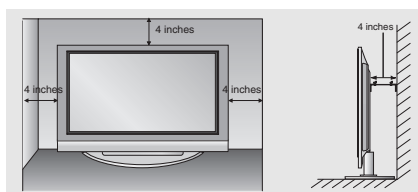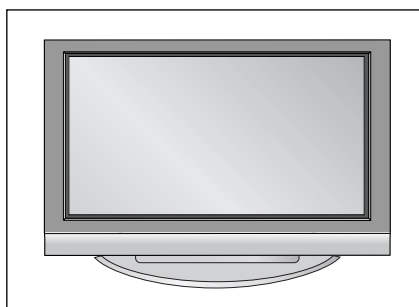

32/37/42LC2DU

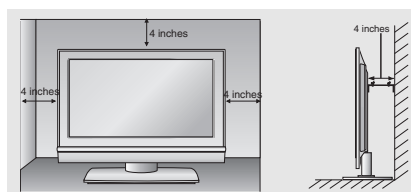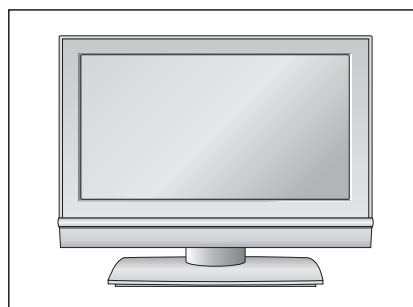  

### ⚠ CAUTION

- ▶ Ensure adequate ventilation by following the clearance recommendations.

- This picture shown below may be somewhat different from your TV.



### GROUNDING

 
Ensure that you connect the earth ground wire to prevent possible electric shock. If grounding methods are not possible, have a qualified electrician install a separate circuit breaker.

Do not try to ground the unit by connecting it to telephone wires, lightning rods, or gas pipes.

## Basic Connection (For 32/37/42LC2DU)

- 1 Connect the cables as necessary. After connecting the cables neatly, arrange the cables to the Cable Holder.


To connect an additional equipment, see the **External equipment Connections** section.

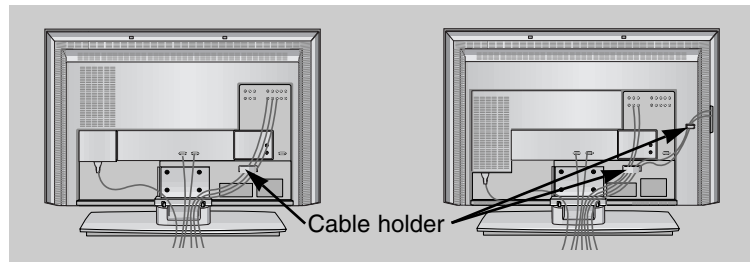

32LC2DU

37/42LC2DU

 - 2 Reinstall the **CABLE MANAGEMENT** as shown.

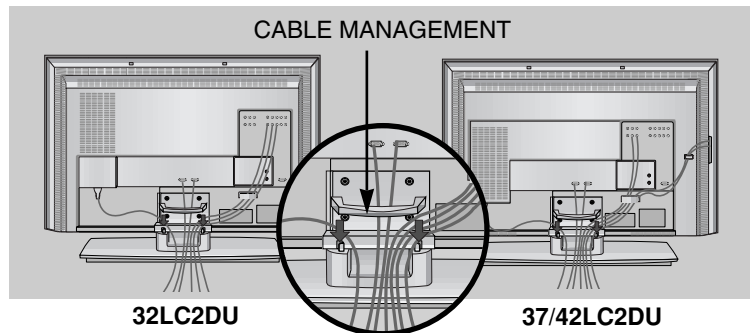

32LC2DU

37/42LC2DU

- 3 Bundle the cables using the supplied twister holder.




32LC2DU

37/42LC2DU

### How to remove the **CABLE MANAGEMENT**

 - Hold the **CABLE MANAGEMENT** with both hands and pull it upward.

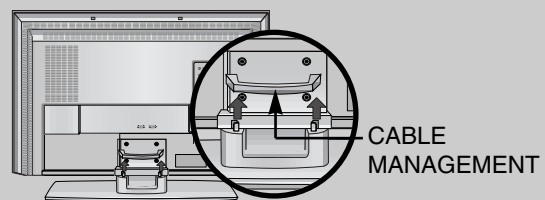

- Do not hold the **CABLE MANAGEMENT** when moving the product.
- If the product is dropped, you may be injured or the product may be broken.