



## LCD TV

MODELS: 32LC2D  
37LC2D  
42LC2D

## PLASMA TV

MODELS: 42PC3D      42PC3D-UD  
42PC3DV      42PC3DV-UD  
50PC3D      50PC3D-UD

## OWNER'S MANUAL





Internet Home Page : <http://www.lge.com>  
<http://www.lg.ca>


Please read this manual carefully before operating your set.  
Retain it for future reference.  
Record model number and serial number of the set.  
See the label attached on the back cover and quote  
this information to your dealer  
when you require service.


P/NO : 38289U0527A (0511-REV00)  
Printed in Korea

# Warning

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
---	---	--

**WARNING:**  
TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**NOTE TO CABLE/TV INSTALLER:**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

**REGULATORY INFORMATION**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**CAUTION:**

Do not attempt to modify this product in any way without written authorization from LG Electronics Corporation. Unauthorized modification could void the user's authority to operate this product.

**U.S.A. only -----**

**COMPLIANCE:**

The responsible party for this product's compliance is:  
LG Electronics U.S.A., Inc.  
1000 Sylvan Avenue, Englewood Cliffs, NJ 07632  
Phone: 1-201-816-2000  
<http://www.lgusa.com>

-----

# Safety Instructions

## WARNING :

To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.

2. Keep these instructions.

3. Heed all warnings.

 
4. Follow all instructions.



5. Do not use this apparatus near water.



6. Clean only with a dry cloth.

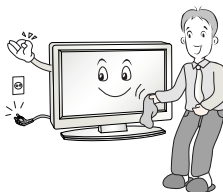

7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.



8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

 


11. Only use the attachments / accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

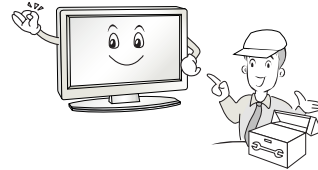

13. Unplug this apparatus during lightning storms or when unused for long periods of time.



**Note**

- If the TV feels cold to the touch, there may be a small “flicker” when when it is turned on. This is normal, there is nothing wrong with TV.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However, they have no adverse effect on the monitor's performance.
- Avoid touching the LCD screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effects on the screen.

**CAUTION concerning the Power Cord**

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

**On Disposal**

- a. The fluorescent lamp used in this product contains a small amount of mercury.
- b. Do not dispose of this product with general household waste.  
Disposal of this product must be carried out in accordance to the regulations of your local authority.

# Contents

Introduction		2	<b>Warnings</b>		
		3~4	<b>Safety Instructions</b>		
		7	<b>Accessories</b>		
		8	<b>Controls (Model Name: 32/37/42LC2D)</b>		
		9	<b>Connection Options (Model Name: 32/37/42LC2D)</b>		
		10	<b>Controls (Model Name: 42PC3D/42PC3DV/50PC3D)</b>		
		11	<b>Connection Options (Model Name: 42PC3D/42PC3DV/50PC3D)</b>		
		12~16	<b>Remote Control Key Functions</b>		
		17	Various Installation		
		18~20	Basic Connection (For 32/37/42LC2D)		
Installation	External Equipment Connections	21	Antenna or Cable Connection		
		22~23	VCR Setup		
		23	External AV Source Setup		
		24~25	DVD Setup		
		26~27	HDSTB Setup		
		28	Monitor Out Setup		
		28	Digital Audio Output		
		29~31	PC Setup		
		Operation	Basic operation	32	Turning on the TV
				32	Volume Adjustment
32	Channel Selection				
32	On Screen Menus Language Selection				
33	On Screen Menus Selection and Adjustment				
Setup Menu Options	34		EZ Scan (Channel Search)		
	34		Manual Scan		
	35		Channel Edit		
	36		DTV Signal Strength		
	36		Input Source		
Video Menu Options	37		Input Label		
	38		EZ Picture		
	38		APM (Adaptive Picture Mode)		
	39		Manual Picture Control (EZ Picture-Custom option)		
	39		Color Temperature Control		
Audio Menu Options	39		Video Reset		
	40		Audio Language		
	40		EZ SoundRite		
	41		EZ Sound		
	41		Manual Sound Control (EZ Sound-Custom option)		
	42	Stereo/SAP Broadcasts Setup			
	42	Front Surround			
	43	TV Speakers On/Off Setup			
43	BBE				

Operation	Time Menu Options	44	Auto Clock Setup
	Option Menu Features	44	Manual Clock Setup
		45	On/Off Timer Setup
45		Sleep Timer	
46		Auto Off	
47		Aspect Ratio Control	
48		Cinema 3:2 Mode Setup	
48		Caption	
Lock Menu Options	Lock Menu Options	49	Caption/Text
		50	Low Power (42PC3D/3DV, 50PC3D only)
		51	ISM (Image Sticking Minimization) Method (42PC3D/3DV, 50PC3D only)
		52~53	Parental Lock Setup
<hr/>			
Reference	<b>4~59 External Control Device Setup</b>		
	<b>60~61 IR Codes</b>		
	<b>62 Programming the Remote</b>		
	<b>63~64 Programming Codes</b>		
	<b>65~66 Troubleshooting Checklist</b>		
	<b>67 Maintenance</b>		
	<b>67 Product Specifications</b>		

# Introduction

## Accessories

 
Ensure that the following accessories are included with your TV. If any accessory is missing, please contact the dealer from where you purchased the product.




Power Cord




75Ω Round Cable



D-sub 15 pin cable

 

Owner's Manual

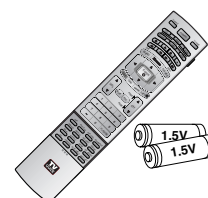 Remote Control /  
Batteries

### For 42PC3D/3DV, 50PC3D



2-Wall brackets



2-eye-bolts

 
2-TV brackets  
2-Wall brackets

2-bolts


Twister Holder  
Arrange the wires  
with the twister holder.Cable  
Management4-bolts (32LC2D only)  
See below for detail  
information.

### Stand Installation for 32LC2D


- 1 Carefully place the product screen side down on a cushioned surface that will protect product and screen from damage.

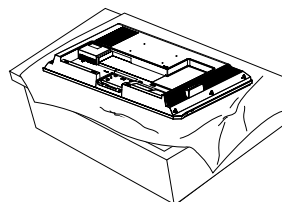

 - 2 Place the hook of the stand in the back of the product as shown.

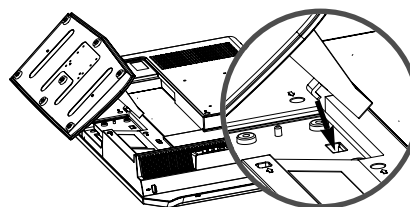


 - 3 Install the 4 bolts provided securely, in the back of the product.

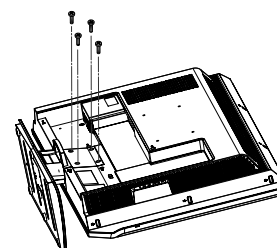

## Controls (Model Name: 32/37/42LC2D)

 
- This is a simplified representation of front panel.
- Here shown may be somewhat different from your TV.

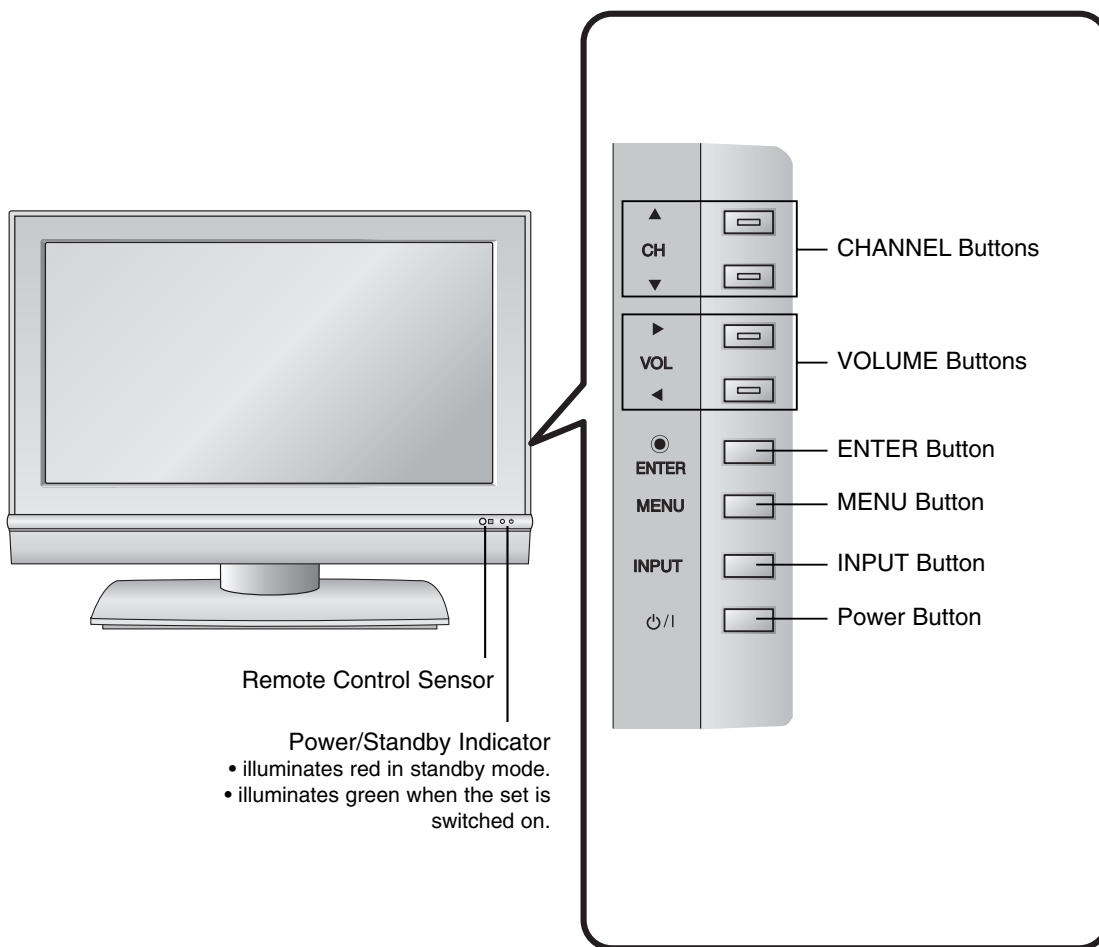




# Connection Options (Model Name: 32/37/42LC2D)

 - Here shown may be somewhat different from your TV.

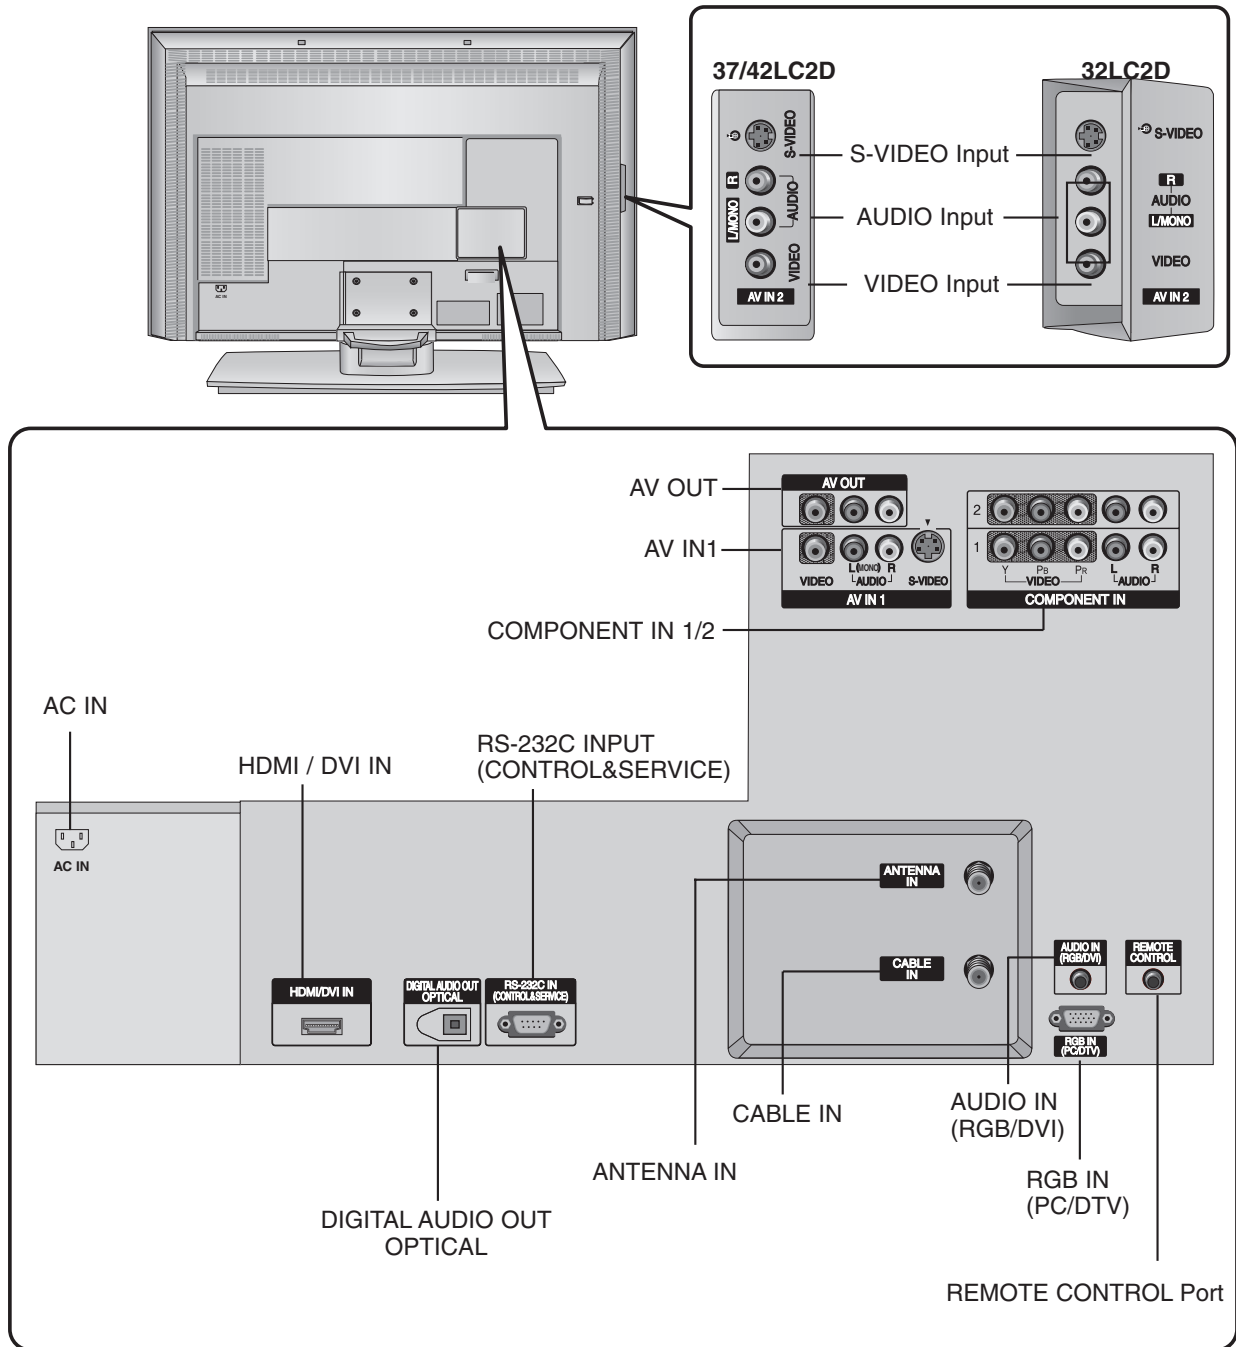



## Controls (Model Name: 42PC3D/42PC3DV/50PC3D)

 - This is a simplified representation of front panel.
- Here shown may be somewhat different from your TV.

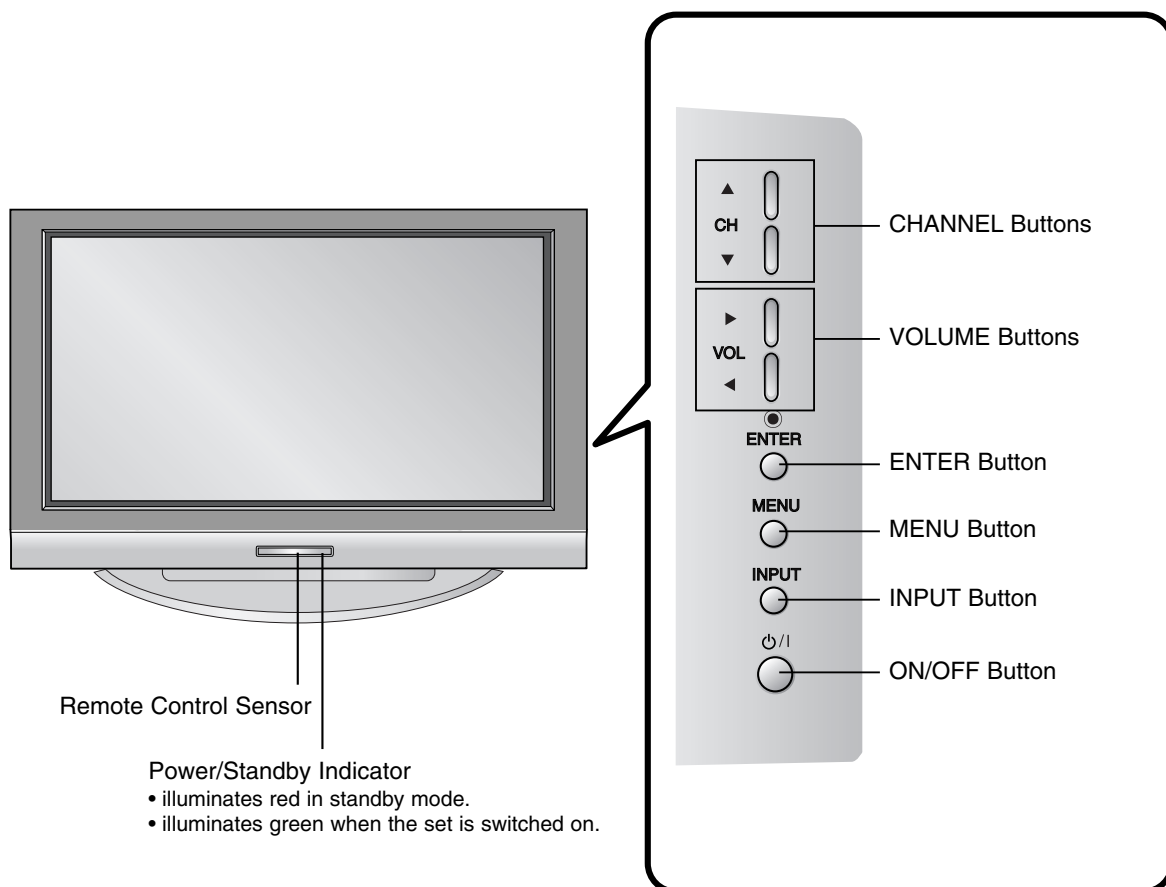


# Connection Options (Model Name: 42PC3D/42PC3DV/50PC3D)

  - Here shown may be somewhat different from your TV.

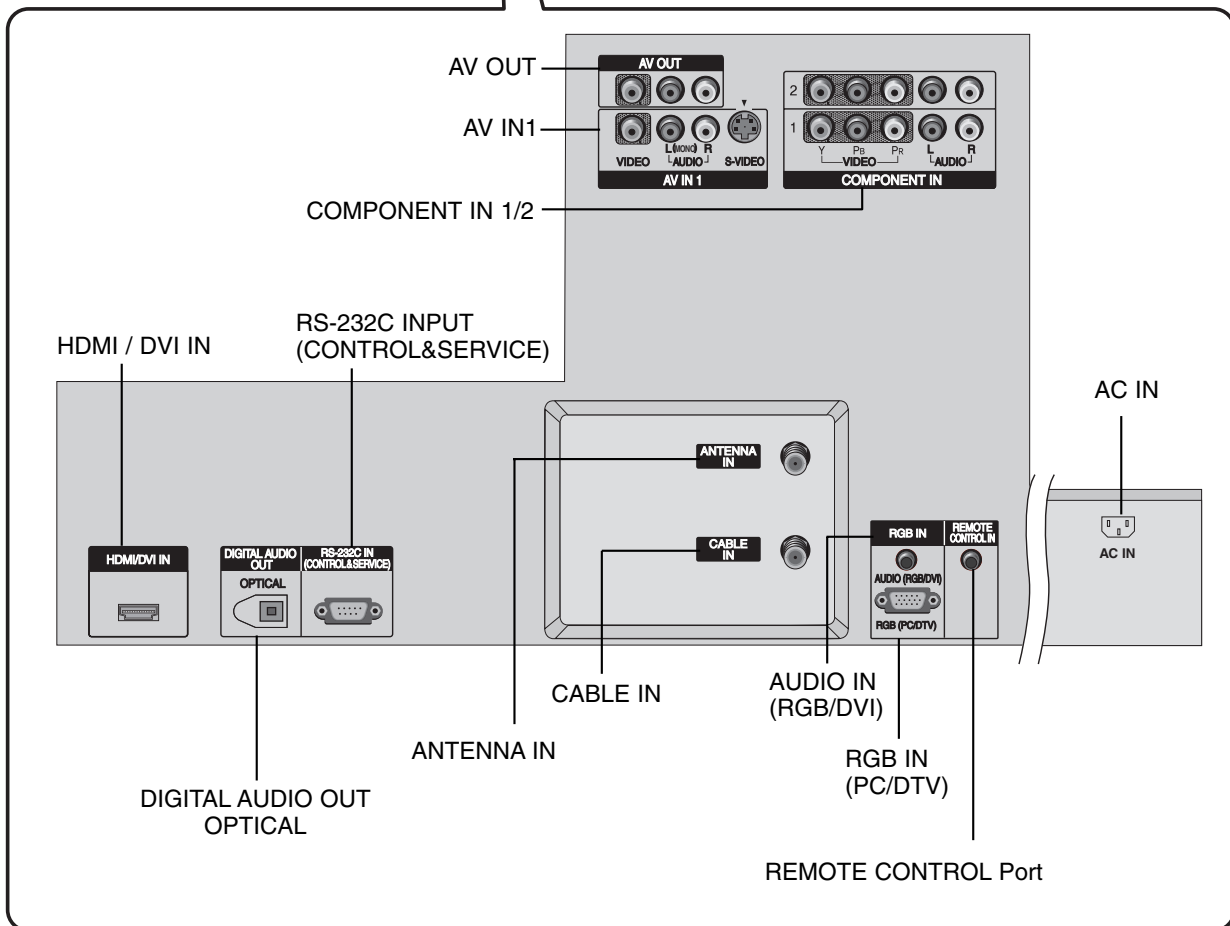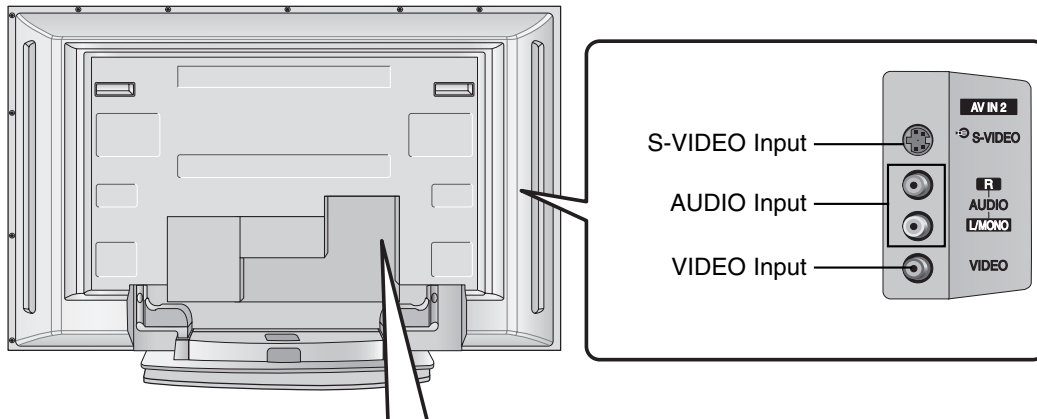

# Remote Control Key Functions

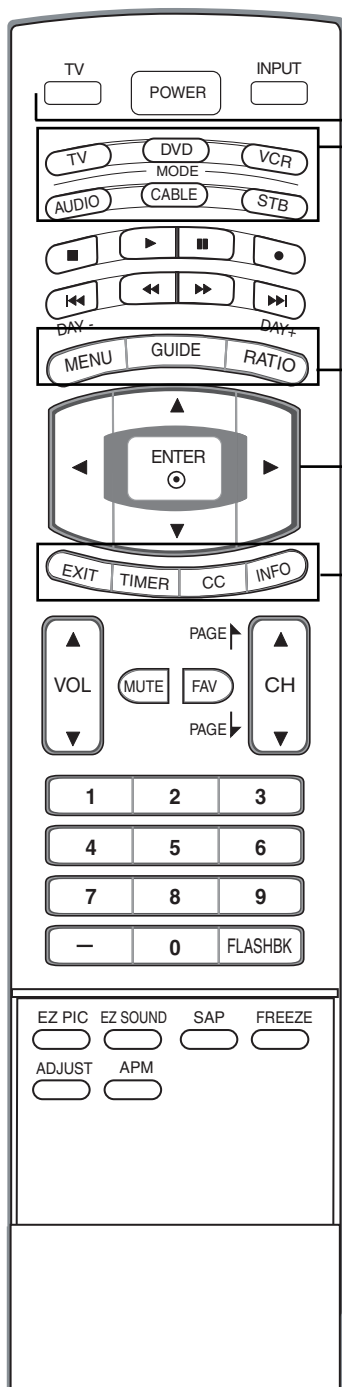 

**POWER**

Turns your TV or any other programmed equipment on or off, depending on mode.

**TV**

Rotates the input mode between Antenna and Cable. In AV1, AV2, Component 1-2, RGB-DTV (or RGB-PC), and HDMI/DVI input sources, screen returns to the last TV channel.

**INPUT** (Refer to p.14)

External input modes rotate in regular sequence: Antenna, Cable, AV1, AV2, Component 1-2, RGB-DTV (or RGB-PC), HDMI/DVI). (AV1, AV2, Component 1-2 input sources are linked automatically, Only if these are connected)

**MODE**

Selects the remote operating mode: TV, VCR, DVD, CABLE, STB or AUDIO. Select a mode other than TV, for the remote to operate an external device.

**MENU**

Brings up the main menu to the screen.

**GUIDE** (Refer to p.16)

Shows program schedule.

**RATIO** (Refer to p.47)

Changes the aspect ratio.

**THUMBSTICK (Up/Down/Left/Right/ENTER)**

Allows you to navigate the on-screen menus and adjust the system settings to your preference.

**EXIT**

Clears all on-screen displays and returns to TV viewing from any menu.

**TIMER** (Refer to p.45)

 
Lets you select the amount of time before your TV turns itself off automatically.

**CC** (Refer to p.49)

Select a closed caption: Off, CC1~4, Text1~4.

**INFO** (Refer to p.15)

When you watch the TV, information displays on top of the screen. Not available in Component 1-2, RGB and HDMI/DVI mode.

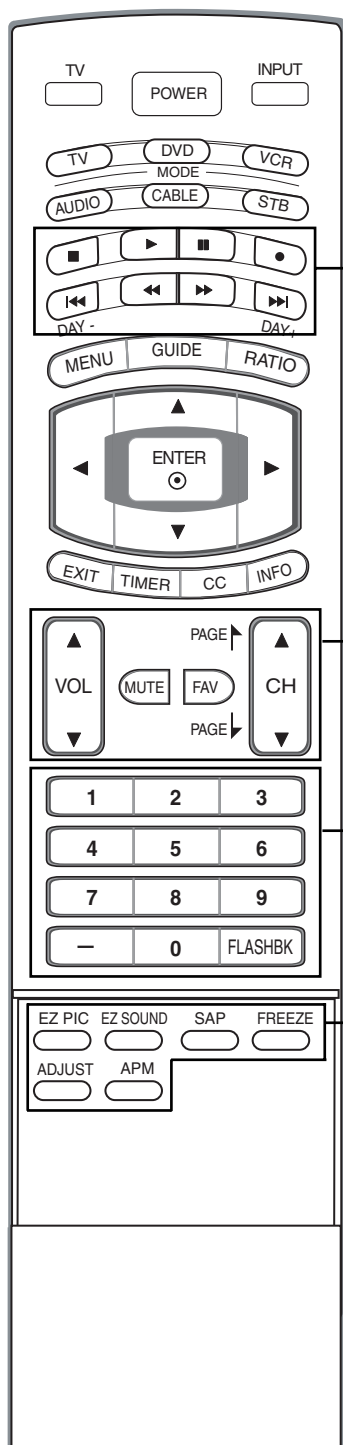**VCR/DVD/DVHS/Camcorder BUTTONS**

Control some video cassette recorders or DVD players ("RECORD" button is not available for DVD player).

**DAY + / DAY-**

Moves forward or backward in 24 hour increments.

**VOLUME UP/DOWN**

Increases/decreases the sound level.

**CHANNEL UP/DOWN**

Selects available channels found with EZ scan and Manual scan.

**PAGE UP/DOWN**

Moves from one full set of screen information to the next one.

**MUTE**

Switches the sound on or off.

**FAV**

Use to scroll the Favorite channels.

**NUMBER BUTTONS****— (DASH)**

Used to enter a program number for multiple program channels such as 2-1, 2-2, etc.

**FLASHBK**

Returns to the last channel viewed.

**EZ PIC** (Refer to p.38)

Selects a factory preset picture mode depending on the viewing environment.

**EZ SOUND** (Refer to p.41)

Selects the sound appropriate for the program's character.

**SAP** (Refer to p.42)

Selects MTS sound: Mono, Stereo, and SAP in analog mode. Change the audio language in DTV mode.

**FREEZE**

 
Freezes the currently-viewed picture.

**ADJUST** (Refer to p.31)

Adjusts screen position, size, and phase in PC mode.


**APM** (Refer to p.38)

Concurrently, compare with the Daylight, Normal, Night Time and Custom on the screen.

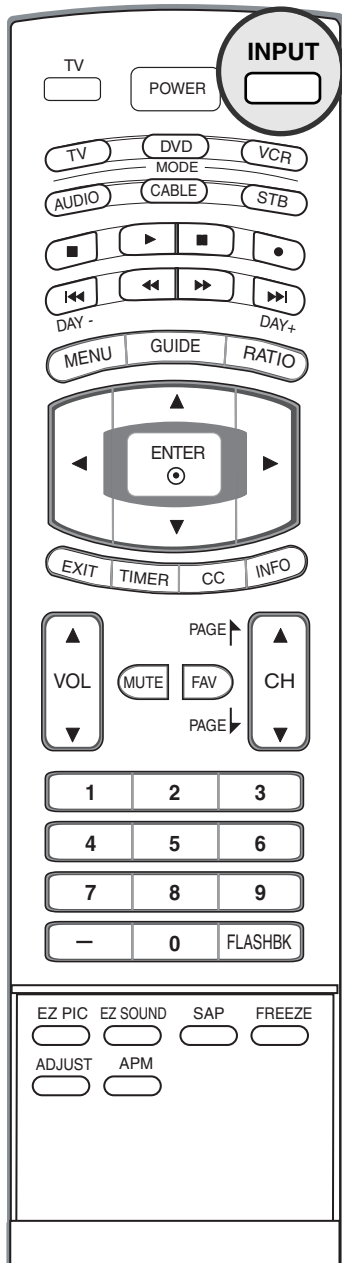

## Auto Link

 
1. When every external equipment is connected:




2. When any external equipment is not connected:



 3. When some External Equipment is connected:  
(ex: When connected to AV IN1)



 • You can also select **Input Source** in the **SETUP** menu.

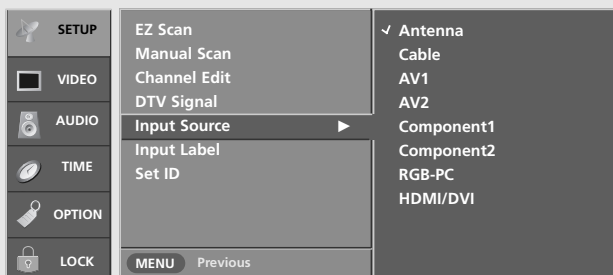

- **Antenna:** Select it when watching the TV/DTV.
- **Cable:** Select it when watching the CATV/CADTV.
- **AV1, AV2:** Select it when watching the VCR or external equipment.
- **Component 1-2:** Select it when using the DVD or the Digital set-top box depend on connector.
- **RGB-PC / RGB-DTV:** Select it when using PC or Digital set-top box depend on connector.
- **HDMI / DVI:** Select it when using DVD, PC or Digital set-top box depend on connector.