 
 


 


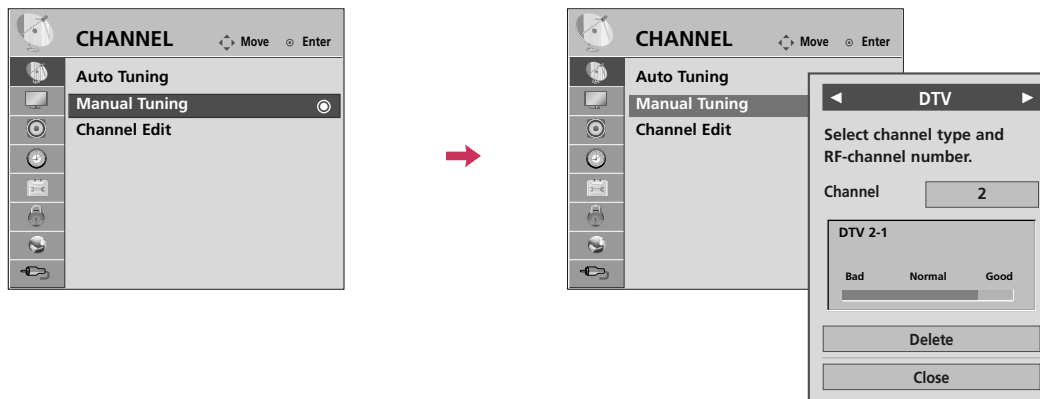 





# WATCHING TV / CHANNEL CONTROL

## Add/Delete Channel (Manual Tuning)

When selecting DTV or CADTV input signal, you can view the on-screen signal strength monitor to see the quality of the signal being received.



- 1   Select **CHANNEL**.
- 2   Select **Manual Tuning**.
- 3   Select **DTV, TV, CADTV, or CATV**.
- 4   Select channel you want to add or delete.
- 5   Select **Add or Delete**.
- 6  Return to the previous menu.
-  Return to TV viewing.

 
■ The TV will ask for a password if parental control has been activated (LOCK Menu). Use the password you set up in the LOCK Menu to allow a channel search.

## Channel Editing

The channels in the Channel Edit List are displayed in black and the channels deleted from the Channel Edit List are displayed in blue.

When a channel number is deleted, it means that you will be unable to select it using **CH** ^ v button during TV viewing.


If you wish to select the deleted channel, directly enter the channel number with the **NUMBER** buttons or select it in the **Channel Edit** menu.

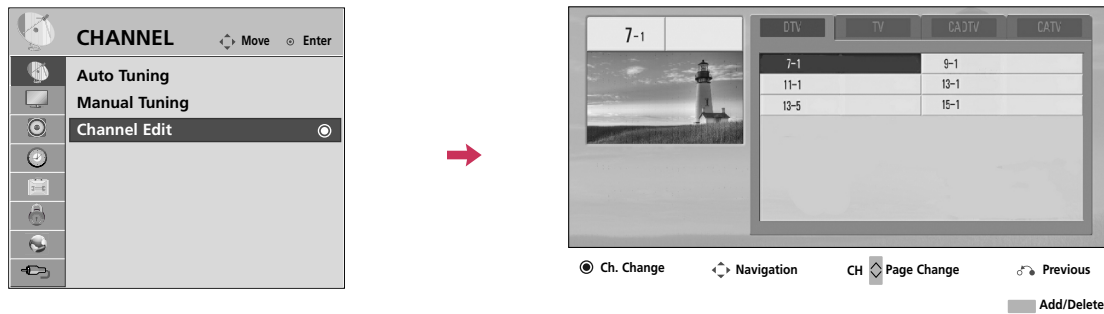


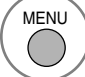
1   Select **CHANNEL**.

2   Select **Channel Edit**.

3   Select a channel.

4  Add or delete a channel.

5  Return to the previous menu.

 
 Return to TV viewing.

# WATCHING TV / CHANNEL CONTROL


## CHANNEL LIST

You can check which channels are stored in the memory by displaying the channel list.



This padlock is displayed when the channel is locked with parental control.

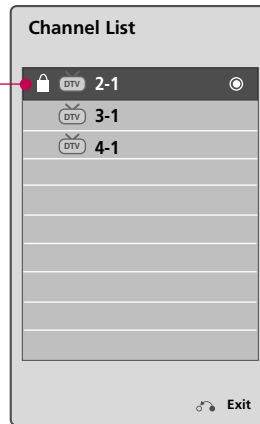



### Displaying Channel List

- 1  Display the **Channel List**.

### Selecting a channel in the channel list

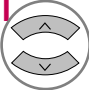- 1  Select a channel.
- 2  Switch to the chosen channel number.

 
### Paging through a channel list


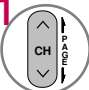


- 1  Turn the pages.
- 2  Return to TV viewing.

## FAVORITE CHANNEL SETUP

 
Favorite Channels are a convenient feature that lets you quickly select channels of your choice without waiting for the TV to select all the in-between channels.

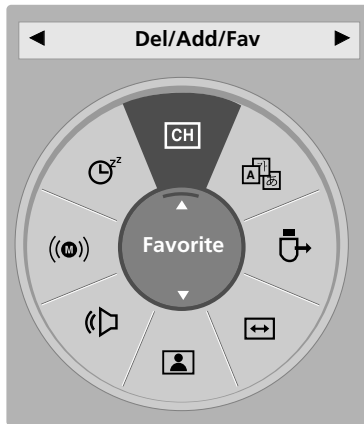To tune to a favorite channel, press the **FAV** (Favorite) button repeatedly.

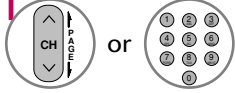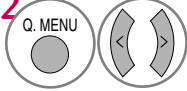


- 1  Select your desired channel.
- 2  Select **Del/Add/Fav**.
- 3  Select **Favorite**.
- 4  Return to TV viewing.



## FAVORITE CHANNEL LIST

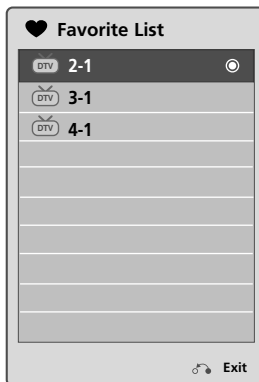



### Displaying the favorite channel list

- 1  Display the Favorite channel list.

### Selecting a channel in the favorite channel list

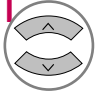- 1  Select a channel.
- 2  Switch to the chosen channel number.

### Paging through a favorite channel list

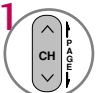
- 1  Turn the pages.
- 2  Return to TV viewing.

 
# WATCHING TV / CHANNEL CONTROL

## BRIEF INFORMATION

Brief Info shows the present screen information.

**1**  Show the Brief Info on the screen.

**2**  Return to TV viewing.

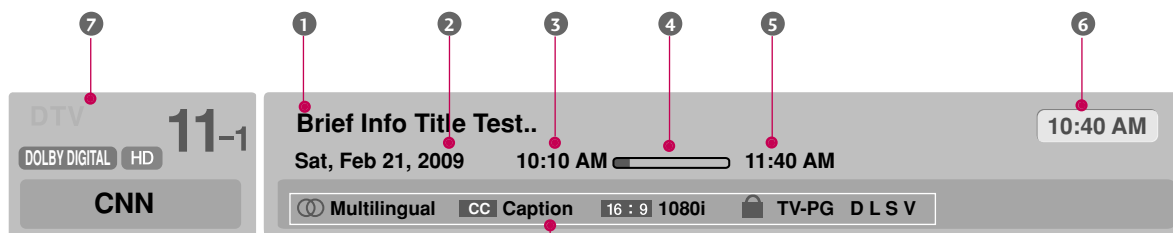

**Multilingual** : The program contains two or more audio services. Use the **Q.MENU** menu to select wanted Audio.



**Caption** : The program contains one or more caption services. Use the **Q.MENU** menu to select wanted Closed caption.

4:3

The original aspect ratio of the video is 4:3

16:9

The original aspect ratio of the video is 16:9 (wide)

480i

The video resolution is 720x480i

480p

The video resolution is 720x480p

720p

The video resolution is 1280x720p

1080i

The video resolution is 1920x1080i

1080p

The video resolution is 1920x1080p



**V-Chip**: The program contains V-Chip information. Refer to the **LOCK** menu: A (Age), D (Dialogue), L (Language), S (Sex), V (Violence), FV (Fantasy Violence)

**1** Program title

**2** Day, Month, Year

**3** Program start time

**4** Program progress bar

 
**5** Program finish time



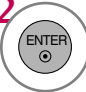
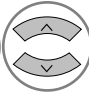

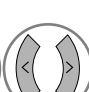

**6** Present time

**7** Banner information

# SIMPLE MANUAL

You can easily and effectively access the TV information by viewing a simple manual on the TV. During the Simple Manual operation, audio will be muted.

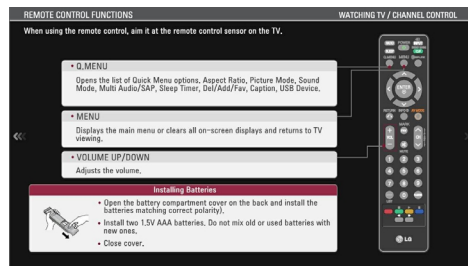 


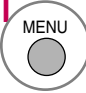-   Select **OPTION**.
-   Select **Simple Manual**.
-   Select the part of the manual you want to see.
-  Return to TV viewing.

# WATCHING TV / CHANNEL CONTROL

 
## INPUT LIST

Only these input signals which are connected to a TV can be activated and selected.



Select the desired input source.

- You can also select the desired input source in the **INPUT** menu.

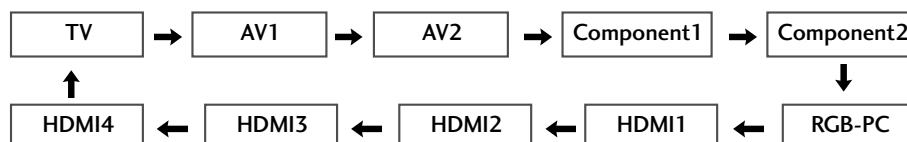

ie)



 
Disconnected inputs are inactive (grayed out)

Select a desired input source (except TV). Then, you can select your desired **Input Label** with using Blue button. ► p.63

ie) In case of changing the input label using Blue button



 
- When new external device is connected, this popup menu is displayed automatically. If selecting **Yes**, you can select input source that you want to appreciate.
- But, when selecting "**SIMPLINK - On**", popup menu for HDMI input will not be displayed.

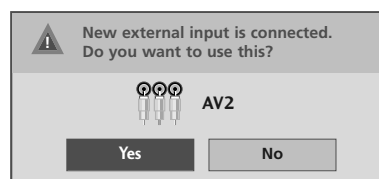






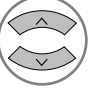
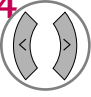

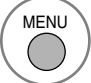
- TV:** Select it to watch over-the-air, cable and digital cable broadcasts.
- AV:** Select them to watch a VCR or other external equipment.
- Component:** Select them to watch DVD or a Digital set-top box.
- RGB-PC:** Select it to view PC input.
- HDMI:** Select them to watch high definition devices.

# INPUT LABEL




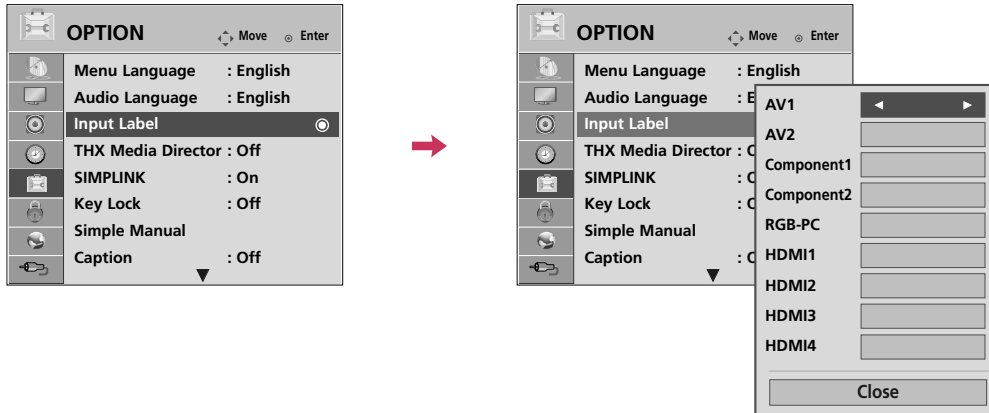

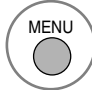
You can set a label for each input source when it's not in use.

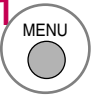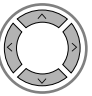

## With using OPTION menu

- 1   Select **OPTION**.
- 2   Select **Input Label**.
- 3   Select the source.
- 4  Select the label.
- 5  Return to the previous menu.
-  Return to TV viewing.

## With using INPUT button

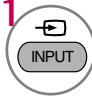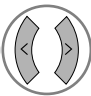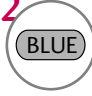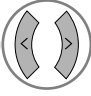 
- 1   Select the source.
- 2   Select the label.
- 3  Return to the previous menu.
-  Return to TV viewing.



# WATCHING TV / CHANNEL CONTROL

## AV MODE

AV Mode toggles through preset Video and Audio settings.

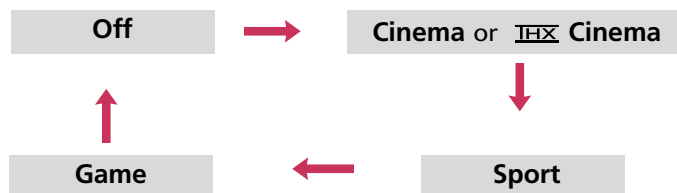

1



Press the **AV MODE** button repeatedly to select the desired source.

 
2








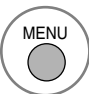


- If you select “**Cinema / THX Cinema**” in AV mode, **Cinema** will be selected both for “**PICTURE** menu - **Picture Mode**” and “**AUDIO** menu - **Sound Mode**” respectively.
- If you select “**Off**” in AV mode, the “**Picture Mode**” and “**Sound Mode**” return to previous selected value.
- **Off**: Disables the AV MODE.
- **Cinema**: Optimizes video and audio for watching movies.
- **Sport**: Optimizes video and audio for watching sports events.
- **Game**: Optimizes video and audio for playing games.
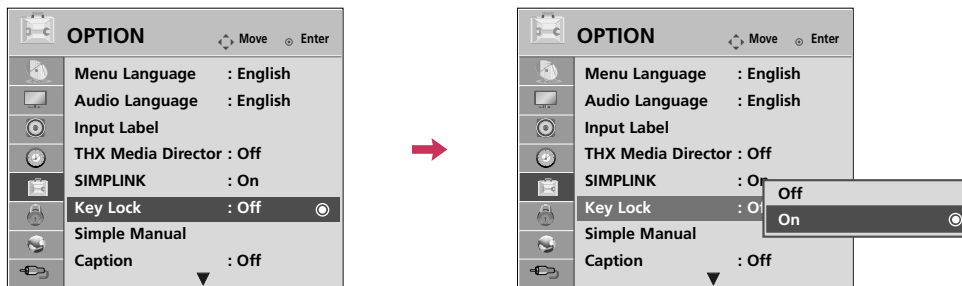
# KEY LOCK

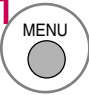The TV can be set up so that it can only be used with the remote control. This feature can be used to prevent unauthorized viewing by locking out the front panel controls. This TV is programmed to remember which option it was last set to even if you turn the TV off.

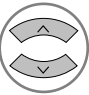

- 1   Select **OPTION**.
- 2   Select **Key Lock**
- 3   Select **On** or **Off**.
- 4  Return to the previous menu.
-  Return to TV viewing.

 
- In **Key Lock 'On'**, if the TV is turned off, press the  $\phi$  / I, **INPUT, CH** ( $\blacktriangle$  or  $\blacktriangledown$ ) button on the TV or **POWER, INPUT, CH** ( $\wedge$   $\vee$ ) or **NUMBER** buttons on the remote control.
- With the **Key Lock On**, the display **'⚠ Key Lock'** appears on the screen if any button on the front panel is pressed while viewing the TV.

# WATCHING TV / CHANNEL CONTROL



SIMPLINK allows you to control and play other AV devices connected with HDMI cable without additional cables and settings. This TV may work with devices with HDMI-CEC support, but only devices with the SIMPLINK logo are fully supported.

SIMPLINK can be turned on and off in the user menus.

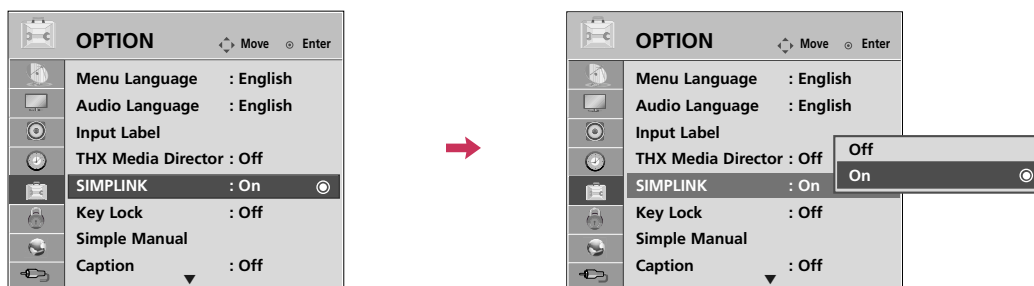

1 MENU Select **OPTION**.

2 ENTER Select **SIMPLINK**.

3 ENTER Select **On** or **Off**.

4 RETURN Return to the previous menu.

MENU Return to TV viewing.

## NOTE

- ▶ Connect the HDMI/DVI IN or HDMI IN terminal of the TV to the rear terminal (HDMI terminal) of the SIMPLINK device with the HDMI cable.
- ▶ When you switch the Input source with the INPUT button on the remote control, the SIMPLINK device will stop.
- ▶ When you select a device with home theater functionality, the sound output automatically switches to the home theater speakers and the TV speakers are turned off.
- ▶ If a connected SIMPLINK home theater system doesn't play the audio from the TV, connect the DIGITAL AUDIO OUT terminal on the back of the TV to the DIGITAL AUDIO IN terminal on the back of the SIMPLINK device with an OPTICAL cable.


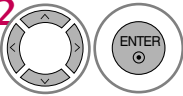
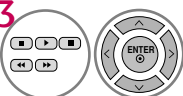
## SIMPLINK Functions

 
- **Direct Play:** After connecting AV devices to the TV, you can directly control the devices and play media without additional settings.
- **Select AV device:** Enables you to select one of the AV devices connected to TV.
- **Disc playback:** Control connected AV devices by pressing the  $\wedge \vee < >$ , ENTER,  $\blacktriangleright$ ,  $\blacksquare$ ,  $\|\$ ,  $\blacktriangleleft$  and  $\blacktriangleright$  buttons.
- **Power off all devices:** When you power off the TV, all connected devices are turned off.
- **Switch audio-out:** Offers an easy way to switch audio-out.
- **Sync Power on:** When the equipment with Simplink function connected HDMI terminal starts to play, The TV will change automatically to turn on mode.

(A device, which is connected to the TV through a HDMI cable but does not support SIMPLINK, does not provide this function)

Note: To operate SIMPLINK, an HDMI cable over Version 1.3 with \*CEC function should be used. (\*CEC: Consumer Electronics Control).

## SIMPLINK Menu

-  Display **SIMPLINK** menu.
-  Select the desired device.
-  Control connected AV devices.

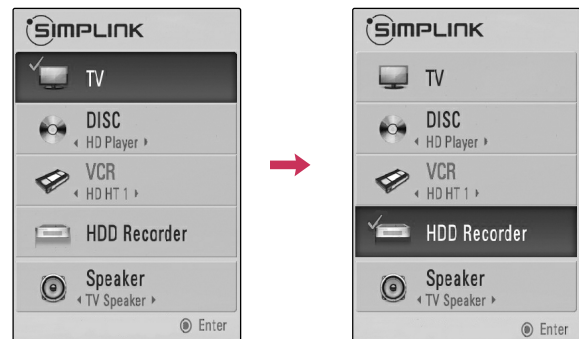

- 1 **TV viewing:** Switch to the previous TV channel regardless of the current mode.
- 2 **DISC playback:** Select and play discs. When multiple discs are available, the titles of discs are conveniently displayed at the bottom of the screen.
- 3 **VCR playback:** Control the connected VCR.
- 4 **HDD Recordings playback:** Control recordings stored in HDD.
- 5 **Audio Out to Home Theater speaker/Audio Out to TV:** Select Home Theater speaker or TV speaker for Audio Out.



- ▶ When no device is connected (displayed in gray)
- ▶ Selected Device
- ▶ When a device is connected (displayed in bright color)

# NETWORK

 
## NETWORK SETTING






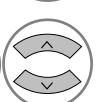
If there is a DHCP server on the local area network (LAN), the TV will automatically be allocated an IP address. If you're using a broadband router or broadband modem that has a DHCP (Dynamic Host Configuration Protocol) server function, select **Auto Resetting**. The IP address will automatically be determined.

If there is no DHCP server on the network and you want to set the IP address manually, select **Manual Resetting**.

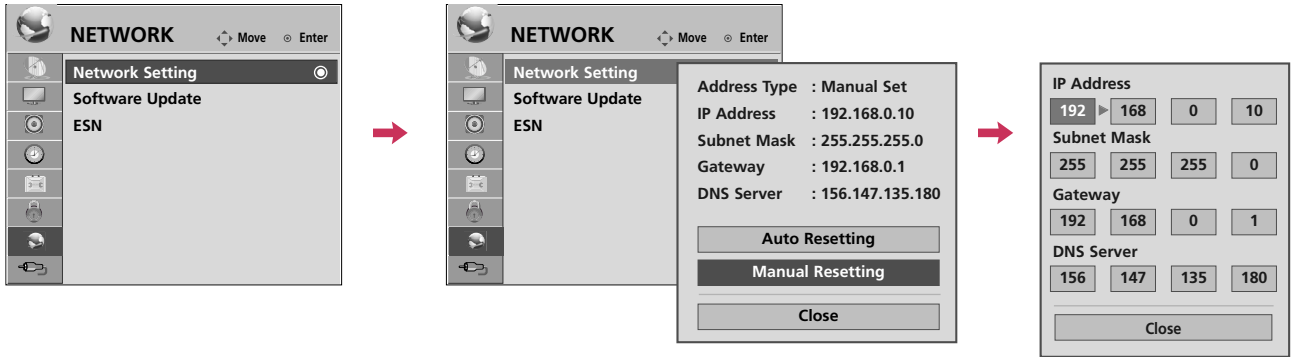



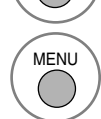
For detail information, contact your internet provider.

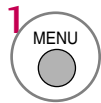NETWORK

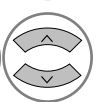

-   Select **NETWORK**.
-   Select **Network Setting**.
-   Select **Auto Resetting** or **Manual Resetting**.

 
## Manual Resetting

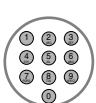




-    Input the setting value.
-  Return to the previous menu.
-  Return to TV viewing.

# SOFTWARE UPDATE

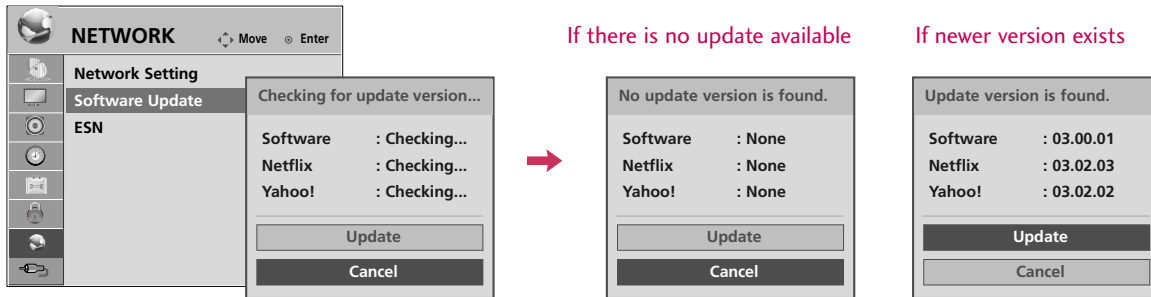You can update the TV using the latest software to enhance the products operation and/or add new features. You can update the software by connecting the unit directly to the software update server.

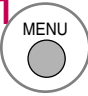The Software Update function may not work properly depending on your internet environment. In this case, you can obtain the latest software from the authorized LG Electronics Service Center then update your player.



- 1   Select **NETWORK**.
- 2   Select **Software Update**.
- 3  Start update version checking.  
If newer version exists, start update.

 
- Before updating the software, remove USB Device from the TV.
- Before updating the software, turn the TV off and then turn it on again.
- During the software update procedure, do not turn off the TV or disconnect AC power, or do not press any button.
- If you cancel the update, turn off the TV and turn it on for stable performance.
- This TV cannot be updated to previous software version.
- After software update, you can confirm the update software version in ??/ menu.

# NETWORK







## NETFLIX ESN (ELECTRONIC SERIAL NUMBER)

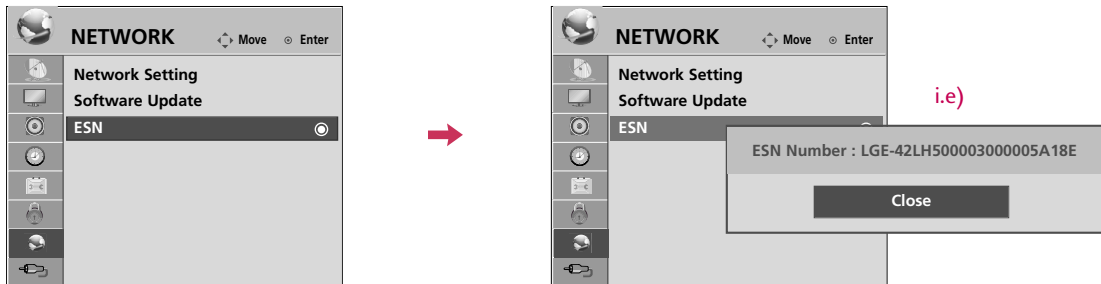We provide you the Netflix ESN (Electronic Serial Number) that allows you to rent and purchase videos using the Netflix website.

For more information, please visit: [www.netflix.com](http://www.netflix.com)

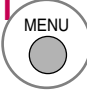

NETWORK

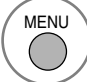-   Select **NETWORK**.
-   Select **ESN**.  
The serial number will appear.
-  Return to the previous menu.
-  Return to TV viewing.

 
# NETFLIX

## Activating TV

The TV with Netflix® straming capabilities lets you instantly access a library of over 12000 video titles right on our HDTV. It's simple. With high-speed internet access and a Netflix® subscription, you have your choice of any Netflix® "Watch Instantly" title to view to home in a matter of seconds.

To become a Netflix member visit: [www.netflix.com/LG](http://www.netflix.com/LG)

Activating your TV establishes a connection between your TV and your Netflix account. You must activate your TV before you can use it to watch movies streamed over the INTERNET from Netflix.

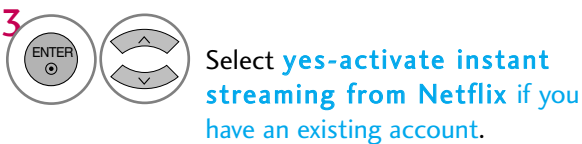

- "no-start my FREE trial" : If you have no an account, visit <http://www.netflix.com/LG> on your computer.

yes-activate instant streaming from Netflix



no - start my FREE trial



5 On your computer, visit [www.netflix.com/activate](http://www.netflix.com/activate).

Wait for the activation screen to appear on your TV screen. You are now ready to complete activation on the Netflix website.

If necessary, enter your **Sign in Name** and **Password** to log into your account.

6 Enter the activation code that appears on your TV screen.

7 When the "Congratulations" screen appears on your TV, you're ready to add movies to your instant Queue. See **Filling your instant Queue** for instruction.

### Netflix Deactivation

- ▶ To deactivates the TV, press the **BLUE** button on the remote control.



## Watching instant by Netflix

After you activate your player, you're ready to add movies & TV episodes to your instant Queue. You can then use your player's remote to browse your instant Queue and to select and watch titles on your TV. You will be amazed at how quick and easy it is.

Your instant Queue works just like your DVD Queue. Add and manage the movies & TV episodes in your instant Queue from the Netflix website on your computer. Your instant Queue also appears on your TV via your player, so your selections are available to watch anytime.

1

Visit the Netflix website on your computer:

<http://www.netflix.com>

If necessary, enter your Sign in Name and Password to log into your account.



2

Click **Watch Instantly**.

3

When you find a movie or TV episode you want to watch, mouse over the **Add/Play** button to reveal additional options, and then click **Add to instant Queue**.

4

Repeat step 4 to add more movies & TV episodes to your instant Queue.

 
5

(Optional) Arrange your instant Queue by clicking the **Instant** subtab.

- To rearrange your instant Queue, drag and drop the titles in the order you want them, or change the numbers to the left of the titles and then click **Update Instant Queue** to your changes.
- To remove a title from your instant Queue, click the **Remove** check box to the right of the title and then click **Update Instant Queue** to your changes.

## The Poster Screen Components

 
It shows “box art” (title-specific DVD cover or movie poster images) for each of the movie in the member’s instant queue and allows navigation through that queue using the remote control. The instant queue is a list of movies and TV shows selected previously by the member on the Netflix web site.

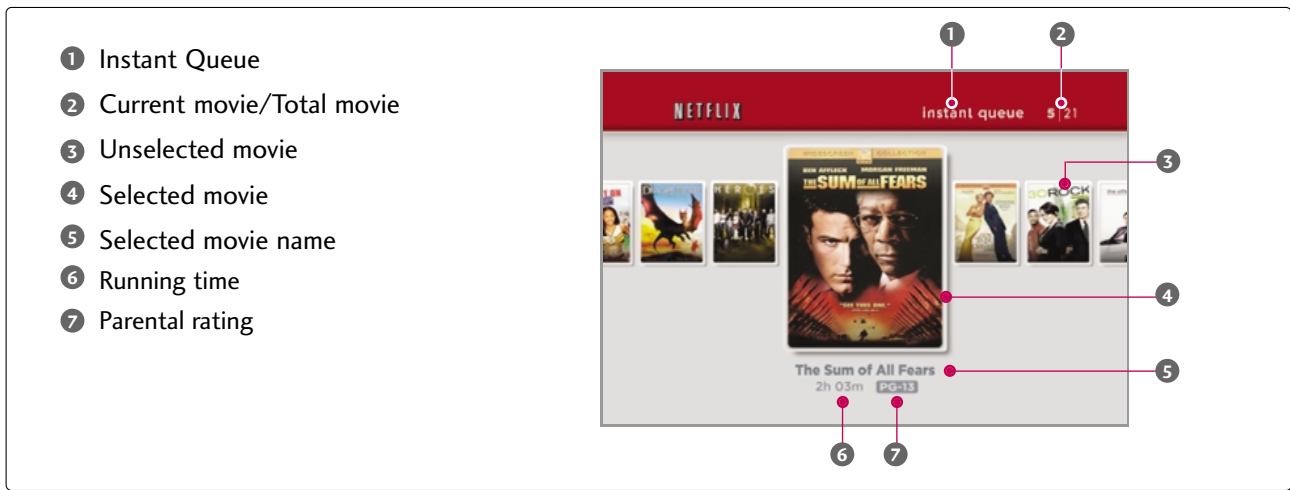

- 1 Instant Queue
- 2 Current movie/Total movie
- 3 Unselected movie
- 4 Selected movie
- 5 Selected movie name
- 6 Running time
- 7 Parental rating

## The Springboard Screen Components




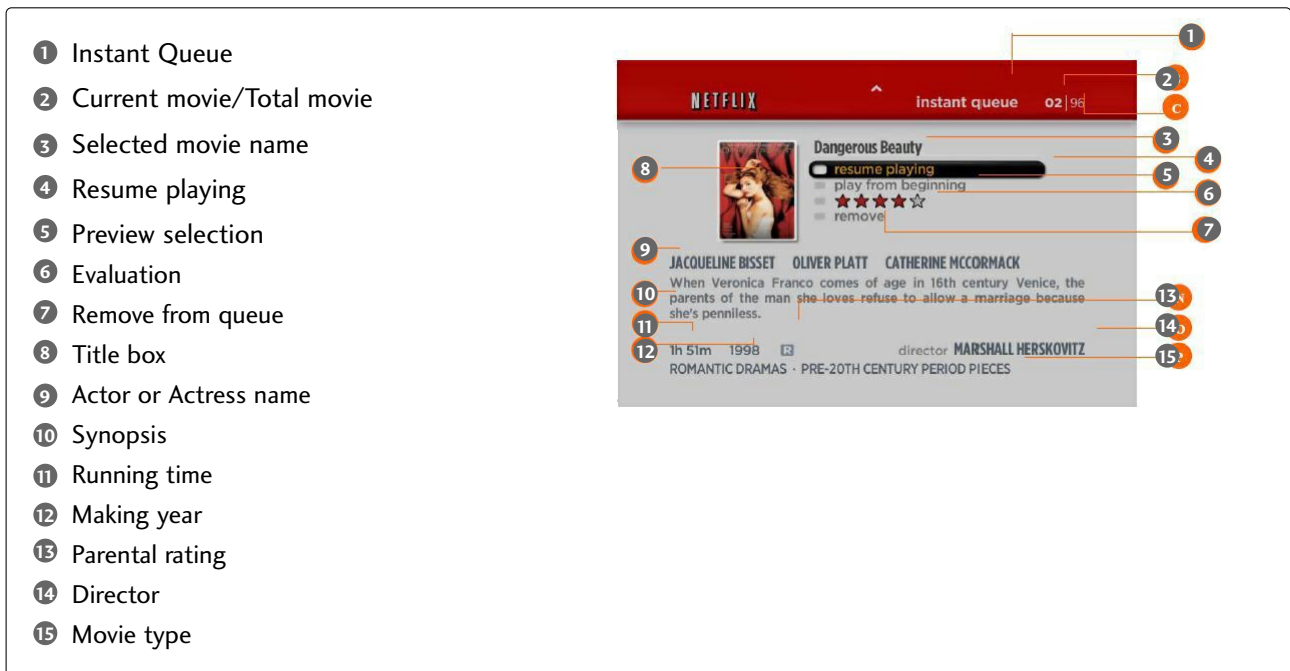







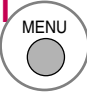

It shows a synopsis and other details about the title, and lists actions that can be taken on it (including resuming playback, rating the title, and selecting a different episode if the title has episodes).



- 1 Instant Queue
- 2 Current movie/Total movie
- 3 Selected movie name
- 4 Resume playing
- 5 Preview selection
- 6 Evaluation
- 7 Remove from queue
- 8 Title box
- 9 Actor or Actress name
- 10 Synopsis
- 11 Running time
- 12 Making year
- 13 Parental rating
- 14 Director
- 15 Movie type

## Selecting a movie to watch on your TV

 
After you set up your player and add movies & TV episodes, you can browse and watch them on your TV.

- 1   Select **NETWORK**.
- 2    Select **NETFLIX**.  
The instant Queue screen will appear.
- 3  Move to previous or next movie on your instant Queue.
- 4   Move to the previous or next page.  
The selected movie shows the title, rating and total time.
- 5  Play back the highlighted title.
- 6  View details for the highlighted title.
- 7  Choose any of the menu items
- 8  Show springboard screen for selected title (See previous page).
- 9  Return to your instant Queue.

- **play**: Starts playing the selected title.
- **resume playing**: Plays a previously paused title from the scene where you paused it. This option is available only if you begin watching a title and then pause it.
- **play from beginning**: Starts playing from the beginning of the selected title.
- **choose a different episode** (TV series only): Enables you to select a specific show of a TV series. Press b / B to highlight the show you want to view, and then press ENTER to choose it.
- **rate**: Enables you to rate a movie or show. The more stars, the higher the rating. Press ENTER to access the rating feature, and then press b / B to increase or decrease the rating. Press ENTER again to confirm the selected rating.
- **remove**: Deletes the selected movie from your instant Queue.
- **remove series** (TV series only): Deletes the selected TV series from your instant Queue.

## Playing a movie

While watching a movie or TV episode from Netflix via your TV, you have full control over your viewing experience. You can use the buttons on the remote to pause and resume viewing and to scan forward and backward, just like when you watch a DVD. While playing a movie, the buttons on the remote do the following:

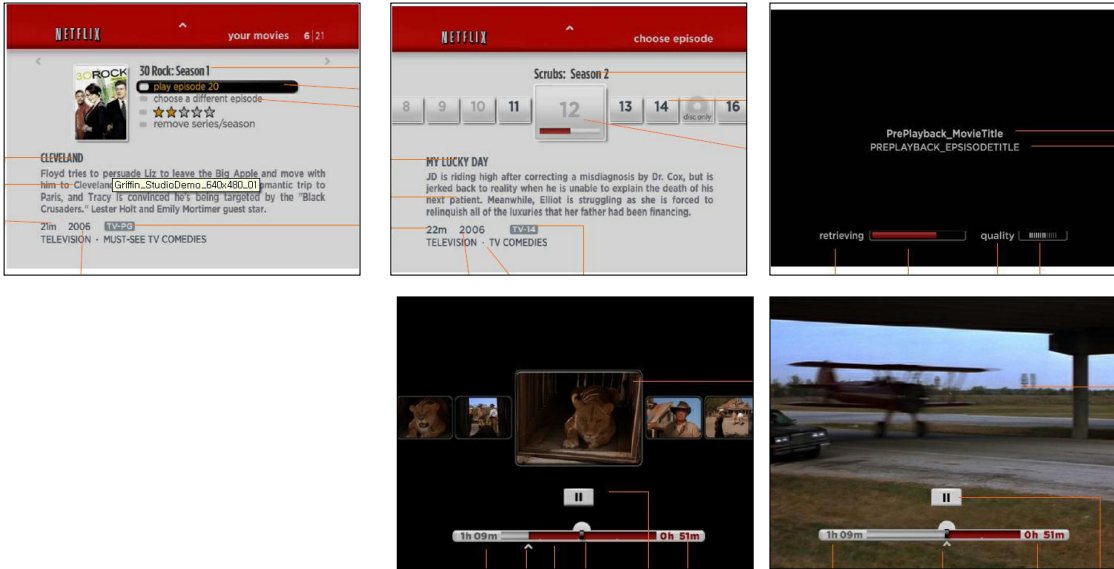

Button	Operation
	Starts playing back the movie.
	To pause a movie while it's playing. To resume playing a paused movie, press button again.
	Stops the movie.
	Displays your instant Queue.
	Pauses playing the movie and enters frame scanning mode.
	Pauses playing the movie and enters frame scanning mode. To scan forward one frame at a time, press the button again.
	Pauses playing the movie and enters frame scanning mode. To scan backward one frame at a time, press the button again.
	Pauses playing the movie and scans forward or backward through the movie. To scan faster, press the button again. To play the highlighted scene, press ENTER or ► (Play). To resume playing from the point you paused the movie, press ^.
	When you have finished watching movies streamed from Netflix, simply press the button on the remote control to go to the NETWORK Menu.

### ! NOTE

- ▶ Even if you use a high-resolution setup, audio/video quality may be compromised based on the speed of your broadband internet connection.
- ▶ Your Internet Service Provider (ISP) determines your broadband speed. We recommend a minimum connection speed of 1.5 Mbps. For the best quality picture, a connection speed of 4.0 Mbps is required.
- ▶ Sometimes your broadband speed varies based on your ISP's network conditions. Contact your ISP if you have problems maintaining a fast connection that is reliable, or if you want to increase your connection speed. Many ISPs offer a variety of broadband speed options.

## MY MEDIA

 
### Entry mode using USB device

When you connect a USB device, this pop up menu is displayed automatically.

~~When the Pop-Up menu does not appear, you can select Photo List or Music List in the NETWORK menu.~~

 
In USB device, you can not add a new folder or delete the existing folder.

1 Connect the USB device to the **USB IN** jacks on the TV.

 
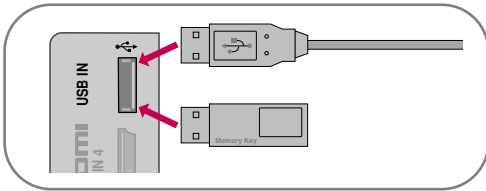 


■ This TV supports JPG and MP3 files.

2 **NETCAST** Select **MY MEDIA**.



3 Select **Photo List** or **Music List**.

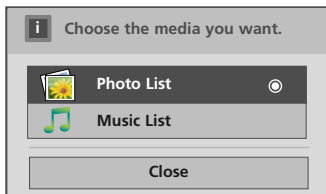

#### When removing the USB device

Select the **USB Device** menu before removing the USB device.

1 **Q. MENU** Select **USB Device**.

2 **ENTER** Select **Eject**.

#### Precautions when using the USB device

 
- ▶ Only a USB storage device is recognizable.
- ▶ If the USB storage device is connected through a USB hub, the device is not recognizable.
- ▶ A USB storage device using an automatic recognition program may not be recognized.
- ▶ A USB storage device which uses its own driver may not be recognized.
- ▶ The recognition speed of a USB storage device may depend on each device.
- ▶ Please do not turn off the TV or unplug the USB device when the connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- ▶ Only use a USB storage device which has normal music files or image files.
- ▶ Please use only a USB storage device which was formatted as a FAT 32 or NTFS file system provided with the Windows operating system. In case of a storage device formatted as a different utility program which is not supported by Windows, it may not be recognized.
- ▶ Please connect power to a USB storage device (over 0.5A) which requires an external power supply. If not, the device may not be recognized.
- ▶ Please connect a USB storage device with cable is offered by USB maker. If connected with cable is not offered by USB maker or an excessively long cable, the device may not be recognized.
- ▶ Some USB storage devices may not be supported or operate properly.
- ▶ Please backup important files because data on USB device may be damaged. Data management is consumer's responsibility and as a result, the manufacturer does not cover data damage.
- ▶ If your USB memory device has multiple partitions, or if you use a USB multi-card reader, you can use up to 4 partitions or USB memory devices.
- ▶ In case of USB storage devices formatted as NTFS, deletion is not allowable.
- ▶ File alignment method of USB storage device is similar to Window XP and file name can recognize up to 100 English characters.
- ▶ The recommended capacity is 1TB or less for a USB external hard disk and 32 GB or less for USB memory.
- ▶ If a USB external hard disk with a "Energy Saving" function doesn't work, turn the hard disk off and on again to make it work properly. Refer to the user manual of the application USB external hard disk.

# Entry mode using Network

 
 
You can view the photo or listen musics in the folder shared by the network.

- 1 Setup CIFS (Commom Internet File System) in your PC.

 
Click **Sharing**.

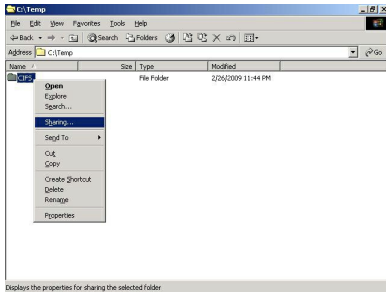

Check **Share this folder**.

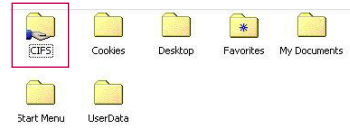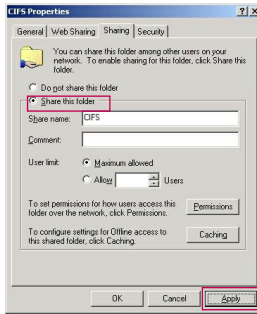 


- 2 Connect the Modem or Router LAN port to the LAN port of the TV.

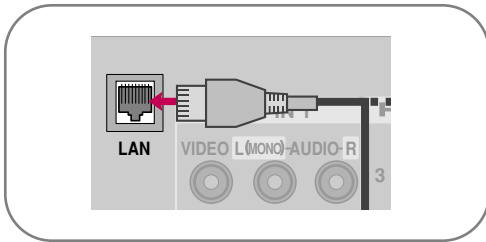

- 3   Select **MY MEDIA**.

- 4    Select **Photo List** or **Music List**.

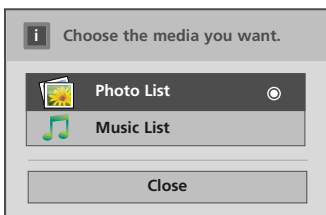

# NETWORK

## PHOTO LIST

You can view .JPG files from USB storage devices or the folder shared by the network.  
The On Screen Display on your model may be slightly different.

### Supported photo file: \*.JPG

- You can play JPG files only.
- Only baseline scan is supported among JPG.
- Available JPG size (width x height, pixel): 64 x 64 - 15360 x 8640

 
 
 
 
### Screen Components

The screenshot shows a 'Photo List' interface. On the left, a preview window displays a butterfly photo with the text 'Drive1 butterfly' and '1366x768, 125KB'. Below the preview is an 'Up Folder' button. To the right is a table of photo files. At the bottom is a navigation bar with buttons for 'Navigation', 'Popup Menu', 'Page Change', 'MARK Mark', and 'Exit'. Numbered callouts 1-5 point to the 'Up Folder' button, the photo preview, the 'Page 2/3' indicator, the 'No Marked' indicator, and the 'Navigation' button respectively.

Page 2/3 <input checked="" type="checkbox"/> No Marked	
<input type="checkbox"/> Up Folder	<input checked="" type="checkbox"/> butterfly 04/05/2008
<input checked="" type="checkbox"/> G_990425_show 04/05/2008	<input checked="" type="checkbox"/> G_040704_arena 04/05/2008
<input checked="" type="checkbox"/> G_051224_dome 04/05/2008	<input checked="" type="checkbox"/> G_060114_korea 04/05/2008
<input type="checkbox"/> G_070107_drama 04/05/2008	

Navigation     Popup Menu    CH    Page Change    MARK Mark    Exit

## Photo Selection and Popup Menu

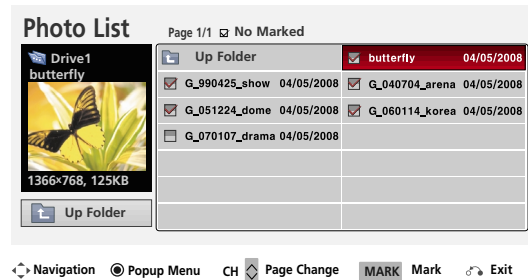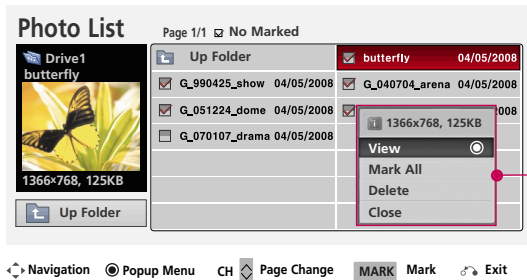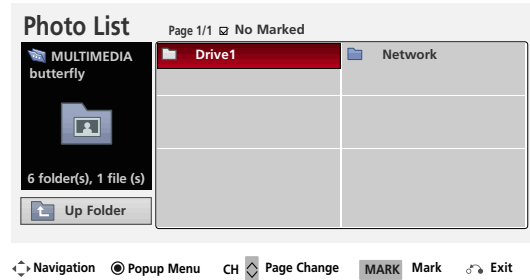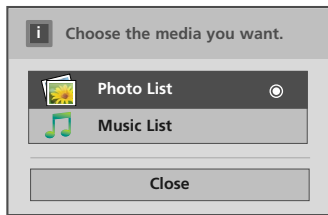





When you select a file (not folder), this PopUp menu is displayed.


- ▶ **View:** Display the selected item.
- ▶ **Mark All:** Mark all photos on the screen.
- ▶ **Unmark All:** Deselect all marked photos.
- ▶ **Delete:** Delete the selected photo item.
- ▶ **Close:** Close the pop-up menu.



1   Select **MY MEDIA**.



2   Select **Photo List**.

3   Select the target drive or Network.  
(It displays the device which connected TV).

4   Select the desired photos.

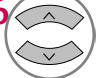5  Show the Popup menu.

6   Select the desired Popup menu.

 
 
- Use the **CH**   button to navigation in the photo page.
- Use the **MARK** button to mark or unmark a photo. When one or more photos are marked, you can view individual photos or a slide show of the marked photos. If no photos are marked, you can view all photos individually or all photos in the folder in a slide show.




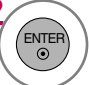




# NETWORK

## Full Screen Menu

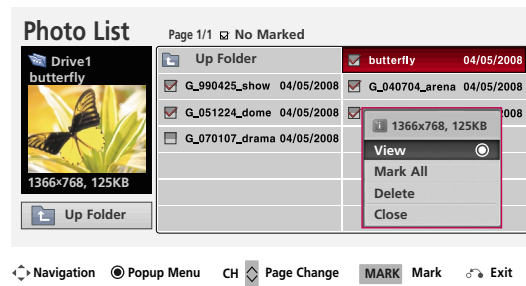 
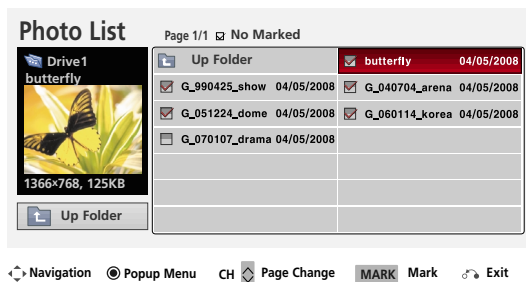 
You can change the Photo List view so that it fills the screen. More operations are available in full screen mode.




The aspect ratio of a photo may change the size of the photo displayed on the screen in full size.

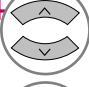

-  Select the target drive or Network.
-   Select the desired photos.
-  Show the Popup menu.
-  Select **View**.
-  The selected photo is displayed in full size.

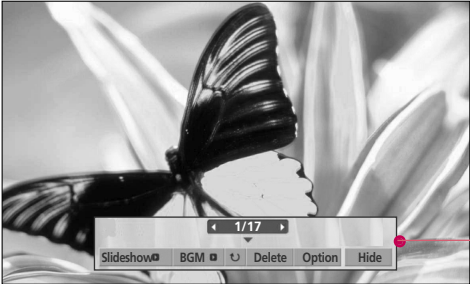 
■ Use the CH ^ v button to navigation in the photo page.

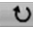

6 Select the **Slideshow**, **BGM**,  (**Rotate**), **Delete**, **Option**, or **Hide**.

- Use < > button to select the previous or next photo.
- Use ^ v < > button to select and control the menu on the full-sized screen.

- ▶ **Slideshow:** Selected photos are displayed during the slide show. If no photo is selected, all photos in the current folder are displayed during slide show.
  - Set the time interval of the slide show in **Option**.
- ▶ **BGM:** Listen to music while viewing photos in full size.
  - Set the BGM device and album in **Option**.
- ▶  (**Rotate**): Rotate photos.
  - Rotates the photo 90°, 180°, 270°, 360° clockwise.
  - Photo cannot be rotated if its width is greater than the available supported resolution height.
- ▶ **Delete:** Delete photos.
- ▶ **Option:** Set values for **Slide Speed** and **Music Album**.
  - Use ^ v < > button and **ENTER** button to set values. Then go to  and press **ENTER** to save the settings.
  - You cannot change **Music Album** while BGM is playing.
- ▶ **Hide :** Hide the menu on the full-sized screen.
  - To see the menu again on the full-sized screen, press **ENTER** button to display.

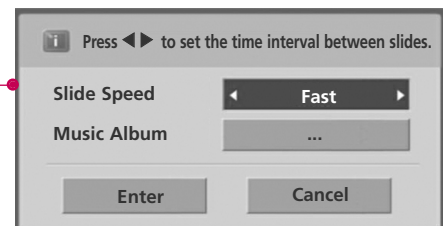

### ! NOTE

- ▶ This TV will not be able to decode most JPG images saved using the Progressive option.

# NETWORK

## MUSIC LIST

You can use the Music List menu to play MP3 files from a USB storage device or the folder shared by the network

This TV cannot play back copy-protected files.

The On Screen Display on your model may be slightly different.

### Supported music file: \*.MP3

- Bit rate range 32 Kbps - 320 Kbps
- Sampling rate (Sampling Frequency)
  - MPEG1 layer 3: 32 kHz, 44.1 kHz, 48 kHz
  - MPEG2 layer 3: 16 kHz, 22.05 kHz, 24 kHz
  - MPEG2.5 layer 3: 8 kHz, 11.025 kHz, 12 kHz

### Screen Components

1 Moves to upper level folder

2 Preview: If any album jacket for the file exists, this jacket is displayed.

3 Current page/Total pages

4 Total number of marked musics

5 Corresponding buttons on the remote control

 
 
 
 
**Music List**

 
 
 



Page 2/3  No Marked

 
Title	Duration
Up Folder	
Aisensi	03:28
Metamorphoze	03:46
Kimigamatteirukara	04:17
mind forest	04:35
Sunano zyuzika ~ Interlude ~	03:15

Navigation ● Popup Menu CH Page Change MARK Mark Exit

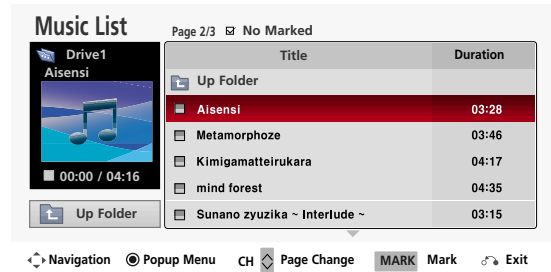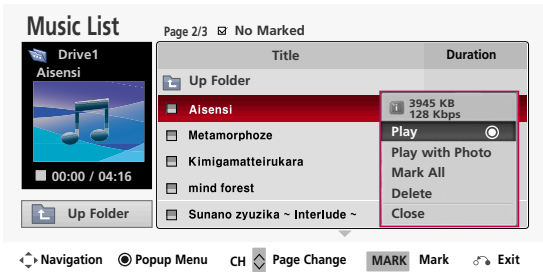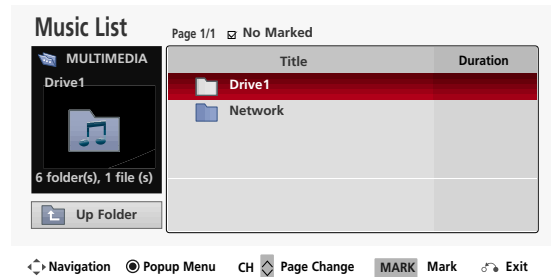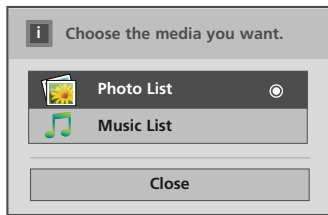
 

 

## Music Selection and Popup Menu



- 1  Select **MY MEDIA**.
- 2  Select **Music List**.
- 3  Select **Drive 1** or **Network**.  
(It displays the device which connected TV).
- 4  Select the desired musics.
- 5  Show the Popup menu.
- 6  Select the desired Popup menu.

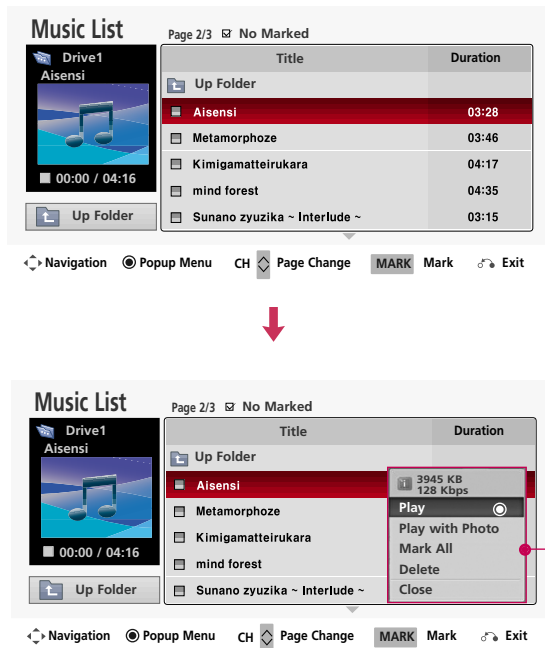

- ▶ **Play** (During stop): Play the selected music.  
Once a song finishes playing, the next selected one will be played. When there are no selected musics to play, the next one in the current folder will be played. If you go to a different folder and press the **ENTER** button, the current music in playback will stop.
- ▶ **Play Marked**: Play the selected musics. Once a music finishes playing, the next selected one will be played automatically.
- ▶ **Stop Play** (During playback): Stop the playing musics.
- ▶ **Play with Photo**: Start playing the selected musics and then move to the Photo List.
- ▶ **Mark All**: Mark all musics in the folder.
- ▶ **Unmark All**: Deselect all marked music.
- ▶ **Delete**: Delete the selected music.
- ▶ **Close**: Close the pop-up menu.

- 1  Select the target folder or drive.
- 2  Select the desired musics.
- 3  Show the Popup menu.
- 4  Select the desired Popup menu.
- 5  Return to TV viewing.

- Use the **CH** ^ v button to navigation in the music page.
- Use **MARK** button to mark or unmark a music file. If no music is marked, all the music in the folder will be played in sequence. When one or more music files are marked, the marked music files will be played in sequence. If you want to listen to only one song repeatedly, just mark that one file and play.

- The play information box (as shown below) will automatically move across the screen when there is no user input to prevent a fixed image remaining on the screen for an extended period of time.



### ! NOTE

- ▶ When music is playing, 🎵 is displayed in front of the music play time.
- ▶ A damaged or corrupted music file that does not play displays 00:00 as the play time.
- ▶ Music files with copy-protection will not play.
- ▶ Press **ENTER**, **■**, or **RETURN** button to stop the screen saver.