 


CLEAR VOICE II

By differentiating the human sound range from others, it improves the sound quality of voices.

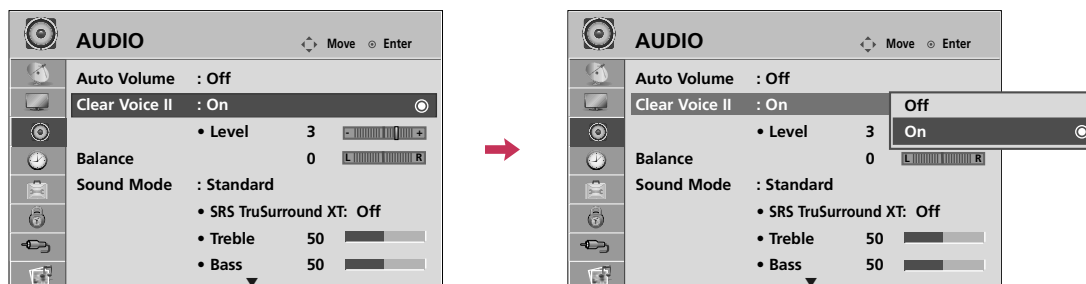

1   or   Select **AUDIO**.

2   Select **Clear Voice II**.

3   Select **On** or **Off**.

Adjustment for Clear Voice II Level With selecting **On**

4   Select **Level**.

5   Make appropriate adjustments.

 
6  Return to the previous menu.

 or  Return to TV viewing.

SOUND & LANGUAGE CONTROL

BALANCE

Adjust the left/right sound of speaker to suit your taste and room situations.

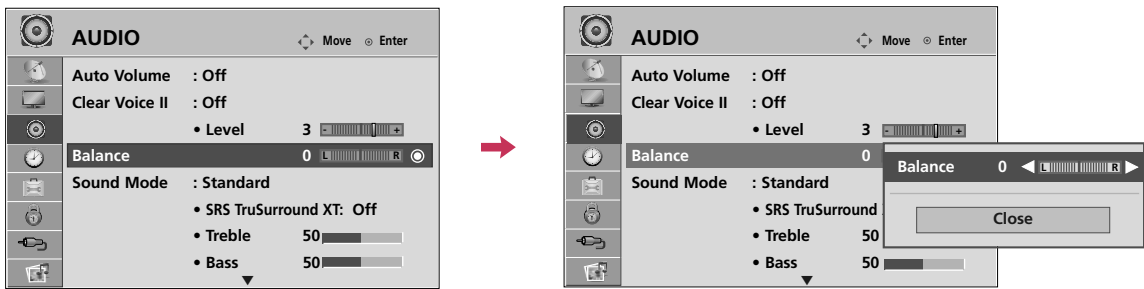


- 1   or   Select **AUDIO**.
- 2   Select **Balance**.
- 3   Make appropriate adjustments.
- 4  Return to the previous menu.
 or  Return to TV viewing.

TV SPEAKERS ON/OFF SETUP

If you wish to use an external Hi-Fi system or a SRS System, turn off the TV's internal speakers.

In **AV**, **Component**, **RGB** and **HDMI** with HDMI to DVI cable, the TV speaker can be operational even when there is no video signal.

 Turn the TV speakers off if using external audio equipment.

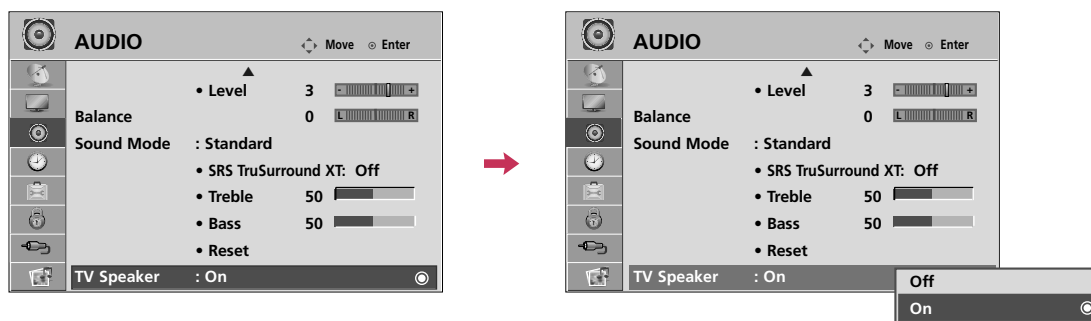

1   or   Select **AUDIO**.

2   Select **TV Speaker**.

3   Select **On** or **Off**.

 
4  Return to the previous menu.

 
 
 
 
 or  Return to TV viewing.

SOUND & LANGUAGE CONTROL

AUDIO RESET

Settings of the selected Sound Mode return to the default factory settings.

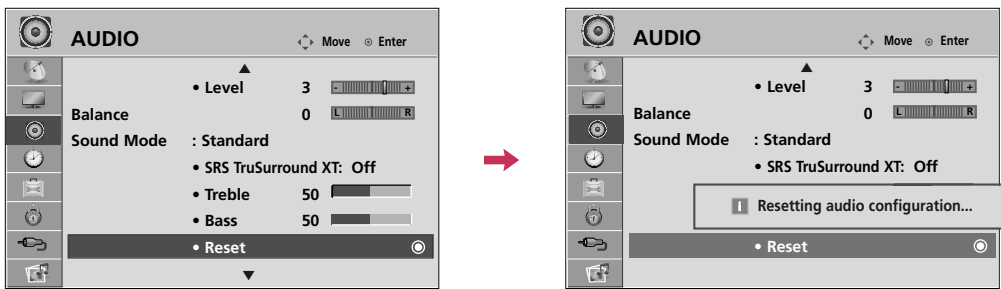


- 1   or   Select **AUDIO**.
- 2   Select **Reset**.
- 3  Initialize the adjusted value.
- 4  or  Return to TV viewing.

STEREO/SAP BROADCAST SETUP

For Analog only: This TV can receive MTS stereo programs and any SAP (Secondary Audio Program) that accompanies the stereo program if the station transmits an additional sound signal. Mono sound is automatically used if the broadcast is only in Mono.

 If other languages are available on the digital signal, select them with the **SAP** button.

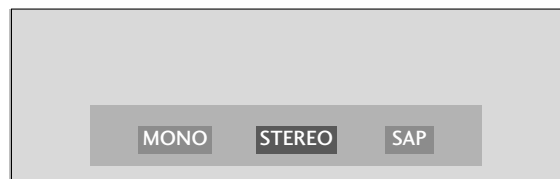


1  Each time you press the **SAP** button, **Mono, Stereo, or SAP** appear in turn.

2  Return to TV viewing.

SOUND & LANGUAGE CONTROL

AUDIO LANGUAGE

 Other languages may be available if a digital signal is provided by the broadcasting station.
This feature operates only in DTV mode.

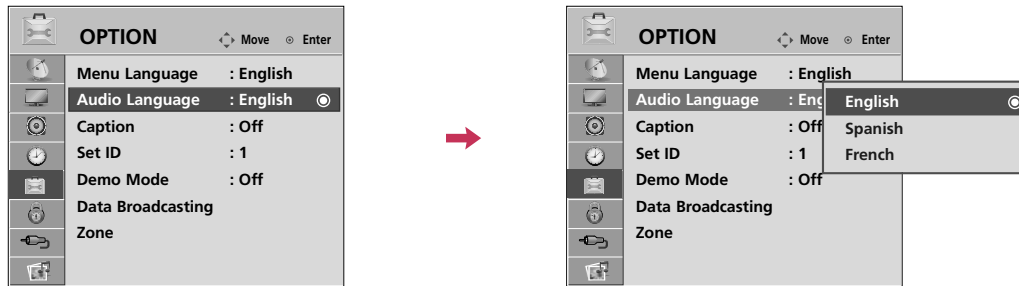

1   or   Select **OPTION**.

2   Select **Audio Language**.

3   Select your desired language.

4  Return to the previous menu.

 or  Return to TV viewing.

! NOTE

- ▶ **Data Broadcasting:** For 32/37/42LG710H, 32/37/42/47/55LD650H, 32/37/42LD655H
- ▶ **Zone:** For 32/37/42LD660H, 32/37/42LD665H, 32/37/42/47/55LV555H

ON-SCREEN MENUS LANGUAGE SELECTION

The menus can be shown on the screen in the selected language.



- 1   or   Select **OPTION**.
- 2   Select **Menu Language**.
- 3   Select your desired language.
From this point on, the on-screen menus will be shown in the selected language.
- 4  Return to the previous menu.
-  or  Return to TV viewing.

! NOTE

 
- ▶ **Data Broadcasting:** For 32/37/42LG710H, 32/37/42/47/55LD650H, 32/37/42LD655H
- ▶ **Zone:** For 32/37/42LD660H, 32/37/42LD665H, 32/37/42/47/55LV555H

SOUND & LANGUAGE CONTROL

CAPTION MODE

Analog Broadcasting System Captions

Captions are provided to help the hearing impaired watch TV. Select a caption mode for displaying captioning information if provided on a program. Analog caption displays information at any position on the screen and is usually the program's dialog. Caption/Text, if provided by the broadcaster, would be available for both digital and analog channels on the Antenna/Cable. This TV is programmed to memorize the caption/text mode which was last set when you turned the power off. This function is only available when **Caption Mode** is set **On**.

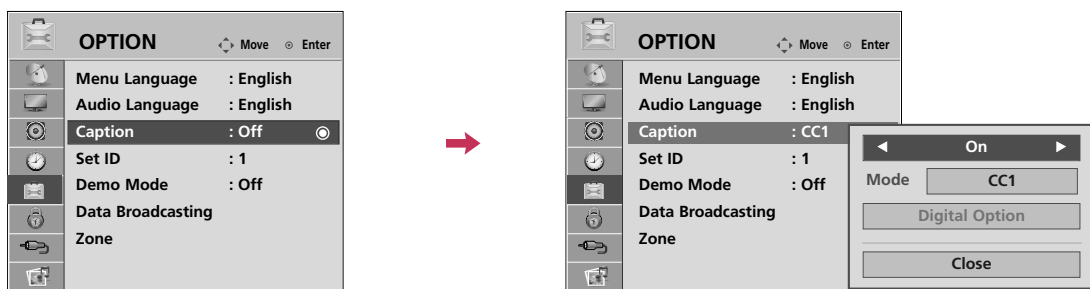

1 or Select **OPTION**.

2 Select **Caption**.

3 Select **On**.

4 Select **CC1-4** or **Text1-4**.

5 Return to the previous menu.

or Return to TV viewing.

- When selecting **Off**, Sub-menus for Analog, DTV, and Digital Option become disabled.

■ CAPTION

The term for the words that scroll across the bottom of the TV screen; usually the audio portion of the program provided for the hearing impaired.

■ TEXT

The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster.

! NOTE

 
- **Data Broadcasting:** For 32/37/42LG710H, 32/37/42/47/55LD650H, 32/37/42LD655H
- **Zone:** For 32/37/42LD660H, 32/37/42LD665H, 32/37/42/47/55LV555H

Digital Broadcasting System Captions

Choose the language you want the DTV/CADTV Captions to appear in.

Other Languages can be chosen for digital sources only if they are included on the program.

This function is only available when Caption Mode is set On.

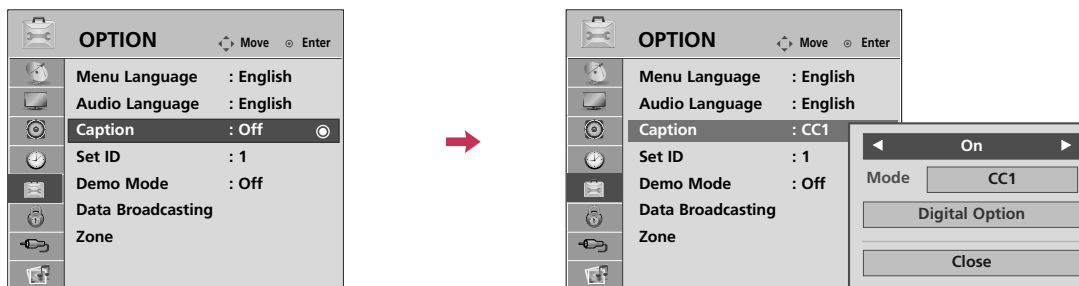

1   or   Select **OPTION**.

2   Select **Caption**.

3   Select **On**.

4   Select **CC1-4, Text1-4, or Service1 - 6**.

5  Return to the previous menu.

 or  Return to TV viewing.

 
! NOTE

- ▶ **Data Broadcasting:** For 32/37/42LG710H, 32/37/42/47/55LD650H, 32/37/42LD655H
- ▶ **Zone:** For 32/37/42LD660H, 32/37/42LD665H, 32/37/42/47/55LV555H

SOUND & LANGUAGE CONTROL

Caption Option

Customize the DTV captions that appear on your screen.
This function is only available when **Caption Mode** is set **On**.

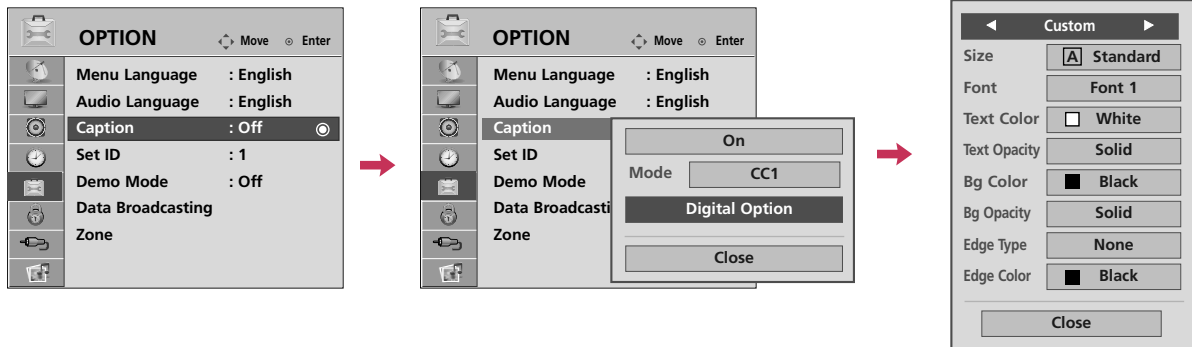

1 MENU or Home Select **OPTION**.

2 ENTER Select **Caption**.

3 ENTER Select **On**.

4 Select **Digital Option**.

5 ENTER Select **Custom**.

6 Customize the **Size**, **Font**, etc., to your preference. A preview icon is provided at the bottom of the screen, use it to see the caption language.

7 RETURN Return to the previous menu.

MENU or Home Return to TV viewing.

- **Size:** Set the word size.
- **Font:** Select a typeface for the text.
- **Text Color:** Choose a color for the text.
- **Text Opacity:** Specify the opacity for the text color.
- **Bg (Background) Color:** Select a background color.
- **Bg (Background) Opacity:** Select the opacity for the background color.
- **Edge Type:** Select an edge type.
- **Edge Color:** Select a color for the edges.

NOTE

- ▶ **Data Broadcasting:** For 32/37/42LG710H, 32/37/42/47/55LD650H, 32/37/42LD655H
- ▶ **Zone:** For 32/37/42LD660H, 32/37/42LD665H, 32/37/42/47/55LV555H

TIME SETTING

 
CLOCK SETTING

Auto Clock Setup

The time is set automatically from a digital channel signal.

The digital channel signal includes information for the current time provided by the broadcasting station.

Set the clock manually if the current time is set incorrectly by the auto clock function.

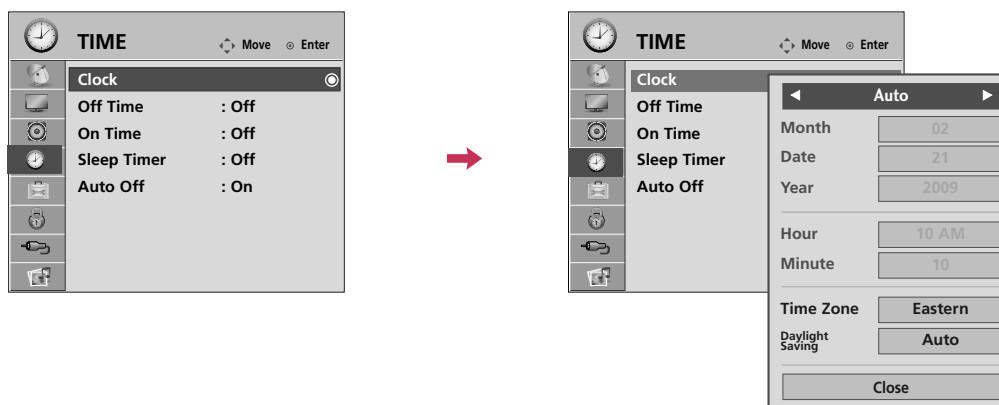


- 1   or   Select **TIME**.
 - 2   Select **Clock**.
 - 3   Select **Auto**.
 - 4   Select your viewing area time zone.
 - U.S.A: **Eastern, Central, Mountain, Pacific, Alaska, or Hawaii.**
 - Canada: **Eastern, Central, Mountain, Pacific, New F.land, or Atlantic.**
 - 5   Select **Auto, Off, or On** (depending on whether or not your viewing area observes Daylight Saving time).
 - 6  Return to the previous menu.
-  or  Return to TV viewing.

TIME SETTING

Manual Clock Setup

 If the current time setting is wrong, reset the clock manually.

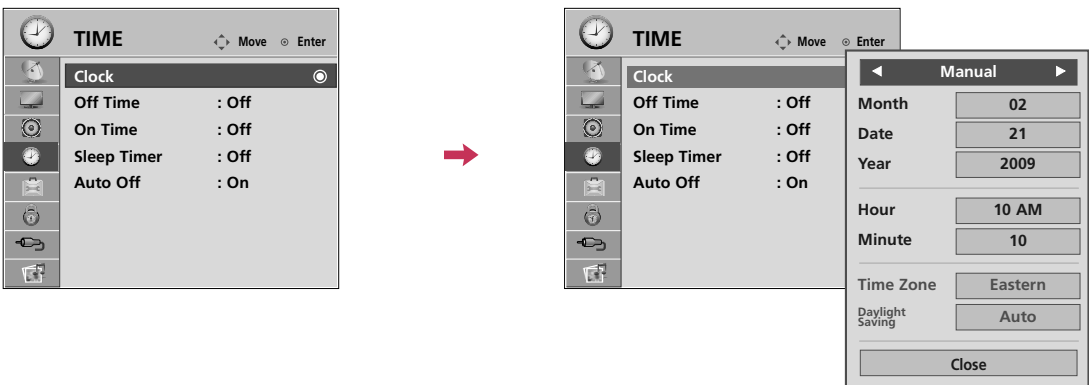

- 1   or   Select **TIME**.
 - 2   Select **Clock**.
 - 3   Select **Manual**.
 - 4  Select the Year, Month, Date, Hour, or Minutes option.
 - 5  Set the Year, Month, Date, Hour, or Minutes option.
 - 6  Return to the previous menu.
-  or  Return to TV viewing.