



Digital Photo Frame

User's Guide

F8010P



Make sure to read the **Important Precautions** before using the product.

Keep the User's Guide(CD) in an accessible place for future reference.

See the label attached on the product and give the information to your dealer when you ask for service.

Table of Contents

Preparation and Installation / Connection

Important Safety Precaution	1
Product Overview	4
Package Contents	4
Identifying the Parts	5
Remote Control Button Names and Functions	7
Remote Control Sensor / Replacing the Remote Control Battery	8
Product Installation and Connection	9
Using the Stand / Connecting the Power Adapter	9
Connecting USB / Connecting Memory Card	10

Menu and Functions

Getting Started	12
First-time Setup	12
Key-Help	13
Home Menu	14
Screen Display and Buttons	14
Using the Slide Show Menu	15
Slide Show Menu Function	15
Using the Music Menu	17
Playing Music	17
Playing Screen Composition and Buttons	18
Using the Video Menu	19
Playing Video	19
Playing Screen Composition and Buttons	20
File Management	21
Screen Composition and Buttons	21
File Management Menu	22
File Copy / Delete	23
Selecting All File / Unselecting All File	24
Network Setup	25
Setting up Wi-Fi Connection	25
Checking Connection Status	27
Using the Network Menu	28
Using Picasa/Flickr	28
Using YouTube	32
Using FrameIT	33
Using Internet Radio	34
Using Home Network	35
Windows Media Player 11 - Media Sharing	37
Using Bluetooth®	40
Connecting to a Bluetooth®-enabled Device	40
Sending Files to the Photo Frame	41
Setup	42
Power On Message Function	44

Appendix

Troubleshooting	45
Specifications	47
Service Information	48

Digital Photo Frame

Important Safety Precaution

This unit has been engineered and manufactured to ensure your personal safety, however improper use may result in potential electrical shock or fire hazards. In order to allow the proper operation of all safeguards incorporated in this display, observe the following basic rules for its installation, use, and service.

On Safety

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable national standards if not being provided by the supplier. If the power cable is faulty in any way, please contact the manufacturer or the nearest authorized repair service provider for a replacement.

Operate the display only from a power source indicated in the specifications of this manual or listed on the display. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if the unit is turned off.

Do not Open the Display:

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the display is not operating properly.

To Avoid Personal Injury:

- Do not place the display on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not drop an object on or apply impact to the product. Do not throw any toys or objects on the product screen. This can cause personal injury, and/or damage the product.

To Prevent Fire or Hazards:

- Always turn the display OFF if you leave the room for more than a short period of time. Never leave the display ON when leaving the house.
- Keep children from dropping or pushing objects into the display's cabinet openings. Some internal parts carry hazardous voltages.
- Do not add accessories that have not been designed for this display.
- When the display is to be left unattended for an extended period of time, unplug it from the wall outlet.
- Never touch the power cord during periods of thunder and lightning. This can be very dangerous and can cause electric shock.

On Installation

Do not allow anything to rest upon or roll over the power cord, and do not place the display where the power cord is subject to damage.

Do not use this display near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Displays are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard.

Therefore, NEVER:

- Place the display in a built-in enclosure unless proper ventilation is provided.
- Place the display near or over a radiator or heat source.

Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

Do not press the LCD screen with your finger for a long time as this may cause some afterimages.

Some dot defects may appear as Red, Green or Blue spots on the screen. However, this will have no impact or effect on the display performance.

 
Leaving a fixed image on the screen for a long time may cause damage to the screen and cause image burn-in. Make sure to use a screen saver on the product. Burn-in and related problems are not covered by the warranty on this product.

Make sure the panel faces forward and hold it with both hands to move. If you drop the product, the damaged product can cause electric shock or fire. Contact an authorized the service center for repair.

Avoid high temperatures and humidity.

On Cleaning

- Unplug the display before cleaning the face of the display screen.
- Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the display screen because over-spraying may cause electrical shock.
- When cleaning the product, unplug the power cord and scrub gently with a soft cloth to prevent scratching. Do not clean with a wet cloth or spray water or other liquids directly onto the product. An electric shock may occur. (Do not use chemicals such as benzene, paint thinners or alcohol)
- Spray water onto a soft cloth 2 to 4 times, and use it to clean the front frame; wipe in one direction only. Too much moisture may cause staining.

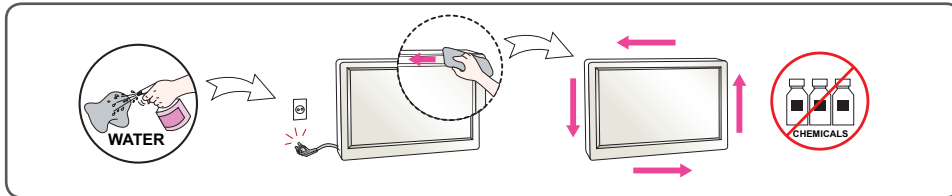

On Repacking

- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.

On Disposal

- The fluorescent lamp used in this product contains a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

Federal Communication Commission Interference Statement



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body. This Class [B] digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada

Digital Photo Frame

Product Overview

Package Contents

 
- Check the package contents.




Digital Photo Frame




Remote Control

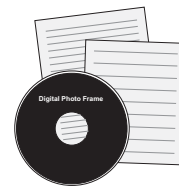

CD User's Guide / Cards

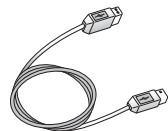 

USB Cable
(for PC connection)

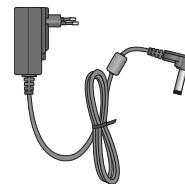 

Power Adapter

Note

- The Digital Photo Frame and its accessories may look different from those shown here.

Digital Photo Frame

Product Overview

Identifying the Parts









Front



1 Remote Control Sensor The remote control sensor is located at the center of the product. Point at the remote control sensor when using remote control.

2 LG Logo If connecting to the power, LG logo's light is on.

3 Touch Key Button

-  **MENU Button** Displays pop-up menu
-  **UP Button** Goes up
-  **DOWN Button** Goes down
-  **LEFT Button** Goes left
-  **RIGHT Button** Goes right
-  **OK Button** OK (The Play/Pause button is used to play Slide Show, Music, and Video files.)
-  **SELECT Button** Press once to select a file in the **List** mode; press again to cancel selection.
-  **BACK Button** Short press: Exit / Long press: Go to Home Menu

Digital Photo Frame

Product Overview

Back




1	POWER Button	You can turn the power on and off.
2	Connecting Part to External Device (— Page 10)	
3	Power Saving Button	If pressing once, the screen goes to Power Saving mode, and if pressing once again, it goes back to original screen.
4	DC 9V IN Terminal	You can connect the power adapter to the DC 9V IN Terminal, and then plug the adapter into a power outlet.
5	Kensington Security Slot (Separate purchase required)	Connected to a locking cable that can be purchased separately at most computer stores.
6	Stand	

Digital Photo Frame

Product Overview

 
Remote Control Button Names and Functions

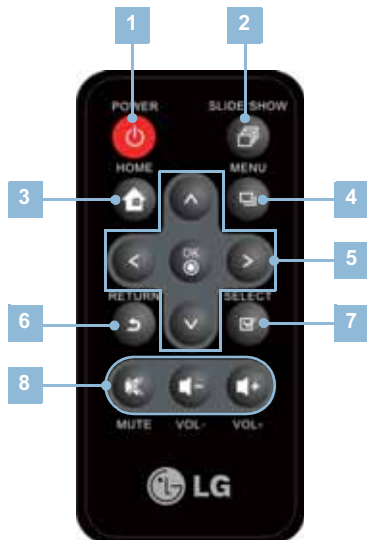

1		Turns the power ON/OFF
2		Goes to Slide Show
3		Goes to Home Menu
4		Displays pop-up menu
5		Goes up
		Goes down
		Goes left
		Goes right
		OK (The Play/Pause button is used to play Slide Show, Music, and Video files.)
6		Goes to previous screen
7		Press once to select a file in the List mode; press again to cancel selection.
8		Enables the Mute function
		Decreases the volume
		Increases the volume

Note

 - Before using the remote control, remove the plastic insulating sheet from the battery chamber as illustrated.




Digital Photo Frame

Product Overview


Remote Control Sensor

 The remote control sensor is located at the center of the product. Point at the remote control sensor when using remote control.

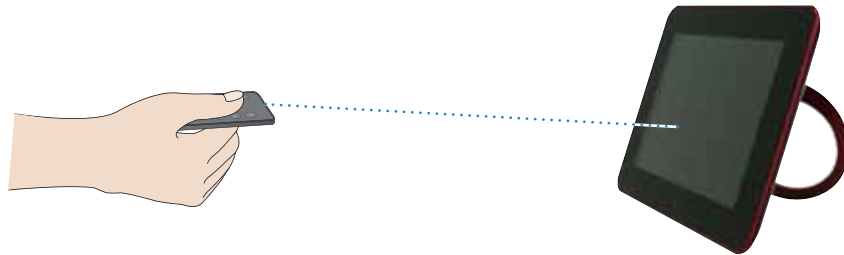


Replacing the Remote Control Battery

 
- 1 Push the tab of the battery holder on the rear bottom side of the remote control.

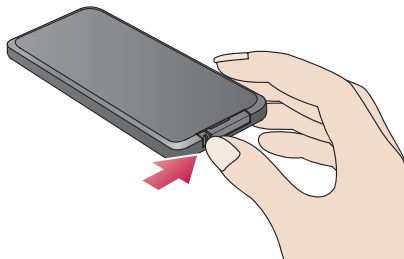

- 2 Pull the battery holder out.

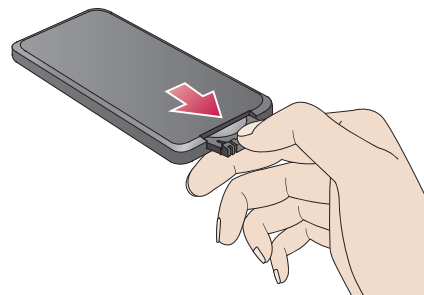 

 - 3 Replace the battery (Lithium Cell CR2025 3V) and push the holder in.

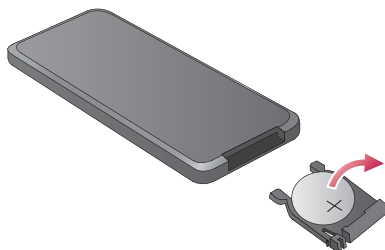

! Note

- Please use only the assigned battery. Otherwise, serious damage to health and property may occur. The battery could explode, for instance.
- Please be careful that the foreign substance goes into inside of remote control when changing battery.
- Use the battery correctly, or it could cause leakage or corrosion.

Digital Photo Frame

Product Installation and Connection

Using the Stand


- 1 Gently pull out the product stand until the product is firmly placed on a flat surface.
- 2 You can place the product horizontally or vertically.



Connecting the Power Adapter

- 1 Connect the power adapter to the DC 9V IN Terminal of the product as illustrated, and then plug the adapter into a power outlet.



- 2 Press the POWER button  on the back of the product or on the remote to turn the power on. When turning off the power, press the POWER button for 2~3 seconds until the screen goes off.



 
! Note

- After setting up the stand, please check if the product is stable. If the product is not placed properly, possible damage may occur from the product's knocking or falling down.
- If you select **Auto** in **Orientation** of the **Setup** menu, the image automatically rotates as well. However, menus and Key-Help do not rotate.
- The product and its accessories may look different from those shown here.

Digital Photo Frame

Product Installation and Connection

Connecting USB / Connecting Memory Card

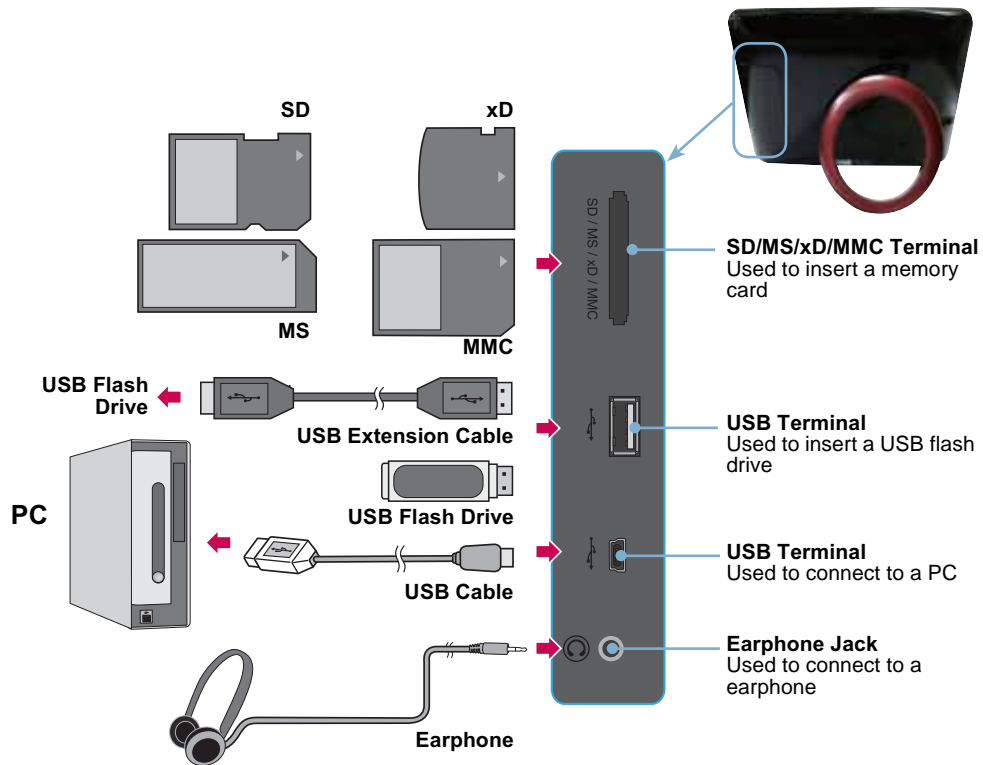

1 Storage device connection

1. Please connect to product's USB terminal.
2. Please connect to USB terminal of external storage device.
3. If external storage device is read, a window pops up as below. Please select an operation you want.



Digital Photo Frame

Product Installation and Connection

 
2 PC connection

1. Please connect to product's USB terminal using a provided USB cable.
2. Please connect to PC's USB terminal.
3. If PC is read, a window pops up as below. Please select the mode you want use from **Mass Storage** and **Mini Monitor**.



3 Memory card slot (SD/MS/xD/MMC)

1. Make sure the memory card is in the correct orientation.
2. Please push into the slot.
3. If external memory card is read, a window pops up as below. Please select an operation you want.

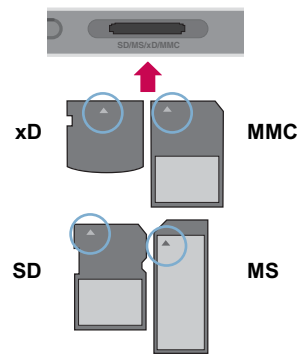



! Note

- The internal memory of the product is 2GB. If the memory is full, no more files are saved.
- Two or more external devices can be connected to the product at the same time.
- Do not turn the product off or remove external devices while moving, saving, playing or deleting files.
- Removing external devices during file playback may cause the product to malfunction. When this happens, turn the power off and on again.
- When connecting external storage devices to the product, use the cables included with the devices. (For more information on storage devices and cable purchase, contact the relevant service centers for help.)
- This product doesn't support any external hard drives and card readers.
- When connecting the product to a PC by the USB cable, the disk volume name (Ex: E:, F:, G:, and so on) of the removable disk may vary depending on computer circumstance.

Digital Photo Frame

Getting Started

First-time Setup

- When turning on the power for the first time, the Setup wizard appears, which will guide you through the **Language**, **Date and Time**, **Wi-Fi Configuration**, and **Power On Message** settings step by step. Once the setup is completed, it won't appear again. If you reset the product, the Setup wizard reappears.
- Please refer to **Setup**  for details about each menu. (→ Page 42)
- You can change setup again at **Setup** . (→ Page 42)



Step 1: Set Language



Step 2: Set Date and Time



Step 3: Set Wi-Fi Configuration (→ Page 25)



Step 4: Set Power On Message (→ Page 44)

Digital Photo Frame

Getting Started

Key-Help

- Key-Help is located at the bottom right corner of each menu to show tips about how to use the buttons. Please refer to it for how to operate the buttons of the product.

 








Digital Photo Frame

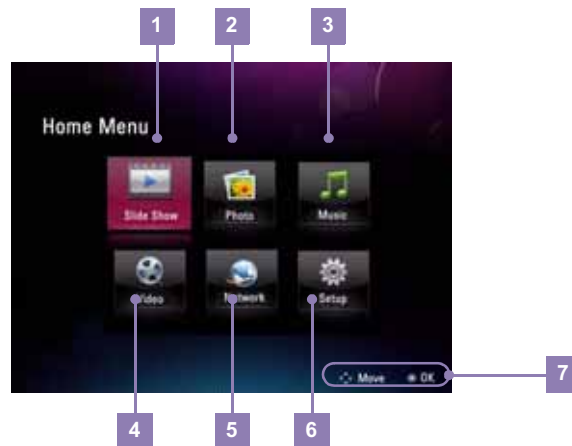Home Menu

Screen Display and Buttons







Please select a desired menu.




-
- | | | | |
|---|---|-------------------|---|
| 1 |  | Slide Show | You can display the photo. (→ Page 15) |
| 2 |  | Photo | You can select and manage the photo. (→ Page 21) |
| 3 |  | Music | You can play the music. (→ Page 17)
You can select and manage the music. (→ Page 21) |
| 4 |  | Video | You can play the video. (→ Page 19)
You can select and manage the video. (→ Page 21) |
| 5 |  | Network | You can use the provided applications in the Network menu.
(→ Page 28) |
| 6 |  | Setup | You can set up Wi-Fi connection. (→ Page 25)
You can enable/disable the <i>Bluetooth</i> [®] function. (→ Page 40)
You can set up other settings. (→ Page 42) |
| 7 | | Key-Help | |
-

 Digital Photo Frame







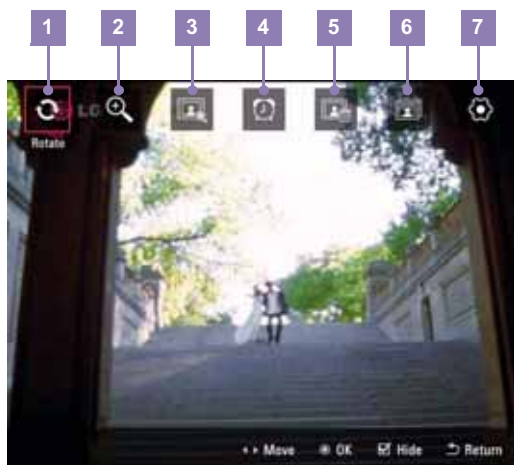

Using the Slide Show Menu

- You can play photo files in **Slide Show** .
- To start a slide show, press the  button on the remote control or select **Slide Show**  in **Home Menu**.
- If selecting **Slide Show**  in **Home Menu**, it basically plays photo. If you want to play music or video, please begin at **Music**  and **Video** .


 
Slide Show Menu Function



Operating key


Open/close menu	
Menu movement	 
Menu detailed adjustment	   
Selecting menu/setup	

- 1 Rotate** You can rotate the photo at regular angle.
0° - 90° - 180° - 270°

- 2 Zoom** You can extend the photo by  button. It extends the photo in order from 100% to 400%, and if pressing  button at 400%, it goes back to 100%.
100% - 150% - 200% - 300% - 400%

Extension rate indication



- 3 List** Moves to the **List** mode in **Photo** , in which you can manage the file.
(→ Page 21)

Digital Photo Frame

Using the Slide Show Menu

- 4 Clock/Calendar** You can set up clock and calendar.
- **Photo**
+ : Insert photo - : Delete photo
 - **Clock/Calendar**
1~4 : Select Theme - : Delete clock/calendar



- 5 Delete** It deletes the photo being currently played.

- 6 Copy** It copies the photo being currently played.

- 7 Slide show setting** Set up slide show's setting.
- **Duration:** Set up time duration between photos.
3s, 10s, 30s, 1m, 5m, 30m, 1h, 12h, 24h
 - **Effect:** Set up transition effects between photos. At random selection, all effect except multiple images is indicated randomly.
* Multi image effect is only supported for the horizontal display.
Random, Multi image, Cross Comb, Door Open, Door Close, Mosaic Random, Mosaic Bar, Snail, Transition, Shutter, Sliding, Corner Sliding, Dissolve, Stairs
 - **Sequence:** Set up photo playback order.
By Time, By Name, Random
 - **Brightness:** Set up brightness of the screen.
1~5









! Tip

- Press the ◀ button to go to the previous photo in Slide Show. Press the ▶ button to go to the next photo.
- Press the ⏸ button at slide show to make slide show pause (⏸ icon shown on the screen). If pressing once more, slide show starts again (▶ icon shown on the screen).
- If the size/capacity of the photo is large, photo switching time could be longer than the time that you originally set.
- If you want to play photo and music together, please set up **Music Auto Play** at **Setup** ⚙️.


Digital Photo Frame

Using the Music Menu


Playing Music

- 1 If you want to play the music, please press  /  /  /  to select **Music**  in **Home Menu**, and then press .



- 2 Please select the file you want by  button.



- 3 If pressing  button, it plays the music you selected.



Digital Photo Frame

Using the Music Menu

Playing Screen Composition and Buttons



Operating key	
Play Mode setup	
Playing previous song	
Playing next song	
Pause/play	
Volume adjustment	

- 1 File information indication** It indicates file name, musician, and album title.


- 2 Playing order** It indicates the total number of the file to be played and order of the file being currently played.

- 3 Play bar** It indicates playing state of the file being currently played.

- 4 Previous/next file indication** It indicates the previous and next file.

- 5 Key-Help**

Play Mode







- If pressing  button in the music playing screen, it moves to Play Mode.
- You can set up repetition configuration of selected music
- You can select among **Once**, **Repeat all**, **Repeat one**, and **Random**.




Digital Photo Frame

Using the Video Menu


Playing Video

- 1 If you want to play the video, please press  /  /  /  to select **Video**  in **Home Menu**, and then press .



- 2 Please select the file you want by  button.



 
- 3 If pressing  button, it plays the video you selected.








Digital Photo Frame

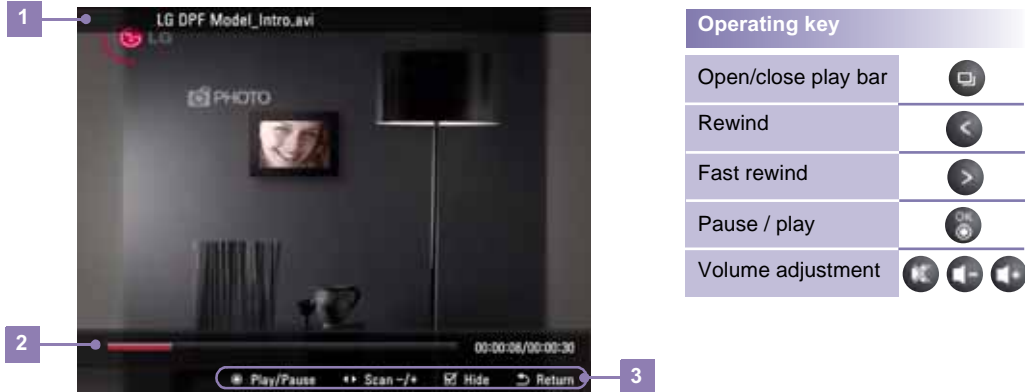Using the Video Menu

Playing Screen Composition and Buttons



Operating key	
Open/close play bar	
Rewind	
Fast rewind	
Pause / play	
Volume adjustment	

1 File information indication It indicates name of the file being currently played.

2 Play bar It indicates playing state of the file being currently played.

3 Key-Help









Digital Photo Frame

File Management

Screen Composition and Buttons

- You can separately manage each file at **Photo** 📷, **Music** 🎵, and **Video** 📹.
- Below is an explanation by giving you an example of the **Photo** 📷, and operation method of **Music** 🎵 and **Video** 📹 is also identical.



1	Device type selection	Indicates internal memory and connected external memory device. Please select desired type.
2	Folder	Indicates the folder at the device you selected. Please select a desired folder.
3	File information	Indicates file's name and capacity and so on.
4	List mode	Displays all the files in the selected folder in photo thumbnail. Corresponding file information is provided for music and video files.
5	Selection indication	<p>Selects any media file content.</p> <p>Press  to select a file; press  again to unselect the file.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <Enabled> </div> <div style="text-align: center;">  <Disabled> </div> </div>
6	Page indication	The number of current page and the whole page is indicated, and page movement is possible by using  /  key. If pressing  /  key long, each moves to the first and last page.
7	Number of selected files	Indicates the total number of currently selected files.
8	Key-Help	

! Tip

- It is recommended that you designate the file name as the same language as the product current setup language. Otherwise, some letters could be shown abnormally.

Digital Photo Frame

File Management

File Management Menu

- If pressing  button at **Photo** , **Music** , and **Video** , it moves to each menu.
- The usable menu could be different according to the format of the selected file.






 
1	Selected file indication	Indicates the number and capacity of selected file.
2	Function	<p>Please select the function you want.</p> <ul style="list-style-type: none"> ■ Slide show Start Slide Show. ■ Select all Select all files within currently located device. (→ Page 24) ■ Unselect all Unselect all selected files within currently located device. (→ Page 24) ■ Copy Copies file (→ Page 23). ■ Delete Deletes file (→ Page 23). ■ Rotate You can rotate the photo. ■ Sequence Set up photo play order.
3	Key-Help	

Digital Photo Frame

File Management

File Copy / Delete

1 Selecting Copy/Delete menu

Pressing the  button in **Photo** , **Music** , or **Video**  displays the menu. Select the **Copy** or **Delete** menu.




2 Designating copy location (Delete menu not included.)

Please assign the device to copy the file.




 
 






3 Copy/delete

It copies/deletes the file. If copy/deletion completes, please press  button.



! Note





- You can also use the Copy/Delete menu to copy/delete files after selecting either **Photo** , **Music** , or **Video** .
- You can't copy the file from internal memory to internal memory (between internal memories).
- You cannot copy/delete all **Photo** , **Music** , or **Video**  files at once. Use the Copy/Delete menu of **Photo** , **Music** , or **Video**  to copy or delete them individually.

Digital Photo Frame

File Management


Selecting All File / Unselecting All File

✦ Select all files/Unselect all files within the device

If pressing  button at **Photo** , **Music** , or **Video**  menu appears. Please select **Select all** or **Unselect all**.



✦ Select all files/Unselect all files within folder

If pressing  button at the location of corresponding folder, it performs select all. If pressing once more, it performs unselect all.



Digital Photo Frame


















Network Setup

Setting up Wi-Fi Connection

To use the provided applications in the **Network**  menu, you need to set up Wi-Fi connection first.






- Make sure a wireless access point (AP) is available nearby.
- Determine the type of wireless network you are connecting to, and use one of the appropriate connection methods below.

✦ Connecting to an AP Automatically by Scanning

- 1 Press  /  /  /  to select **Setup**  in **Home Menu**, and then press .
- 2 Press  /  to select **Network**  in **Setup**, and then press .
- 3 In **Wi-Fi Configuration**, press  to select **Scan**, and then press .
- 4 The screen below appears, showing a list of APs available nearby. Press  /  /  /  to select the AP you want to connect to, and then press .

The product will start to automatically scan for wireless APs available nearby.



- 5
 - To connect to a security-enabled AP, press  to move to the **Password** field, and then press . Use the on-screen keyboard to enter the password. Then, select **OK** and press  to connect to the wireless network.
 - To connect to a security-disabled AP, directly select **OK**, and then press  to connect to the wireless network.
- 6 Once the connection is established successfully, press  to exit.

On-screen keyboard usage

Moves forward/backward among input characters to insert a new character



Confirms your input and closes the keyboard

Deletes last input

Clears all input the keyboard

Cancels and closes the keyboard

Digital Photo Frame

Network Setup

Connecting to a WPS-enabled AP

- 1 Press **▲** / **▼** / **◀** / **▶** to select **Setup** in **Home Menu**, and then press **OK**.
- 2 Press **▲** / **▼** to select **Network** in **Setup**, and then press **OK**.
- 3 In **Wi-Fi Configuration**, press **▶** and **▼** to select **WPS**, and then press **OK**.
- 4 Depending on how the Wi-Fi Protected Setup (WPS) AP was enabled, you can use **Push Button Method** or **Pin Method**.



- 5
 - When using **Push Button Method**, the product will start to search for your AP. Push the button on your WPS AP within the time shown.
 - When using **Pin Method**, enter the PIN code displayed on the product in your AP. Select **OK**, and then press **OK** when finished.
- 7 Once the connection is established successfully, press **▶** to exit.
- 6 Follow the remaining on-screen instructions to successfully establish the connection.

Note

- For additional information about your network configuration, contact your network administrator or network service provider.

Digital Photo Frame

Network Setup

Connecting to an AP Manually

- 1 Press **▲** / **▼** / **◀** / **▶** to select **Setup** in **Home Menu**, and then press **OK**.
- 2 Press **▲** / **▼** to select **Network** in **Setup**, and then press **OK**.
- 3 In **Wi-Fi Configuration**, press **▶** and **▼** to select **Manual**, and then press **OK**.
- 4 Use the on-screen keyboard to enter the wireless network name in the **SSID** (Service set identifier) field, and then the security key of the AP in the **Key** field.



- 5 Follow the remaining on-screen instructions to successfully establish the connection.
 - 6 Once the connection is established successfully, press **▶** to exit.
- For details about how to use the on-screen keyboard: —> Page 25.

Connecting to an AP by Using IP Configuration

In addition to using the 3 connection methods provided in **Wi-Fi Configuration**, you can use the 2 methods in **IP Configuration** too as follows.

- **Go to Setup -> Network -> IP Configuration -> DHCP:**
DHCP works in the same way as the **Scan** function in **Wi-Fi Configuration**. (—> Page 25)
- **Go to Setup -> Network -> IP Configuration -> Static IP Address:**
In the **Static IP Address** page, use the on-screen keyboard to enter your IP address, subnet mask, gateway, and DNS server. Then, select **OK** and press **OK** to connect to the wireless network.

Checking Connection Status

You can check the network status in **Setup -> Network -> Current Network Information**.


- If the "Status" item shows "Enable" and the "Connecting" item shows "Yes", it indicates that the product has been connected to a wireless network.
- If the "Status" item shows "Disable" and the "Connecting" item shows "No", it indicates that the product has not been connected to any wireless network.

For additional information or troubleshooting about your network configuration, contact your network administrator or network service provider.

Digital Photo Frame

Using the Network Menu

Once you have connected to a wireless network, you can use the provided applications in the

Network  menu as follows.










- **Picasa**: allows you to access public Picasa photo albums. (→ Page 28)
- **Flickr**: allows you to access public Flickr photo albums. (→ Page 28)
- **YouTube**: allows you to watch public YouTube video clips. (→ Page 32)
- **FrameIT**: allows you to display your Windows Live ID collections on the product. (→ Page 33)
- **Internet Radio**: allows you to listen to radio channels on the web. (→ Page 34)
- **Home Network**: allows you to stream shared photos from your PC to the photo frame, when Media Sharing has been enabled in Windows Media Player 11. (→ Page 35)



Using Picasa/Flickr

- You can use **Picasa** in the **Network**  menu to view public Picasa photo albums. To sign up for a Picasa account on the Internet, visit www.picasa.google.com
- You can use **Flickr** in the **Network**  menu to view public Flickr photo albums. To sign up for a Flickr account on the Internet, visit www.flickr.com
- The screens shown in this section are examples of the Picasa application, and operation method of the Flickr application is also identical.

Searching Picasa/Flickr Photo Albums by Username

- 1 Press  /  /  /  to select **Network**  in **Home Menu**, and then press .
- 2 Select **Picasa/Flickr**, and then press .
- 3 Select **New Username** under the **Username Search** page, and then press .
- 4 In the on-screen keyboard that appears, enter a Picasa/Flickr account name, select **OK**, and then press . The Picasa/Flickr account you entered will be stored in the **Username Search** page.
 - For details about how to use the on-screen keyboard: → Page 25.

Digital Photo Frame

Using the Network Menu

- 5 Press / / / to select the account you entered, and then press .




- 7 Select the desired photos by pressing , and then press to display the pop-up menu.

- 6 The product will display photo albums from this Picasa/Flickr account. (→ Page 30)



 - 8 In the pop-up menu that appears, you can:
- Start a slide show of the selected photos by **Slide show**.
 - Select all the photos from the current account by **Select All**.
 - Unselect all the photos from the current account by **Unselect All**.
 - Copy the selected photos by **Copy**.

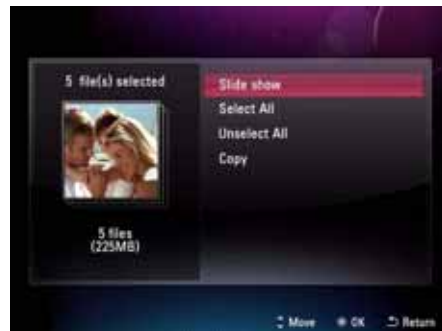


Tip



- When the slide show starts, you can press to use the **Rotate**, **Zoom**, **List**, **Clock/Calendar**, **Copy**, and **Slide show setting** functions (→ Page 15).

Digital Photo Frame

 Using the Network Menu

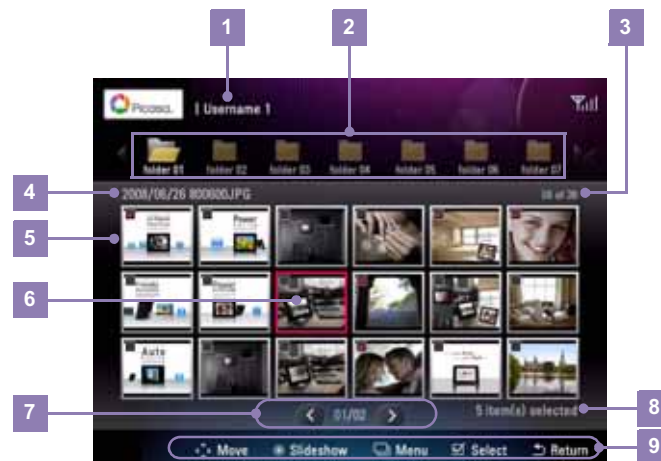Screen Composition of Picasa/Flickr Photo Albums



1	Account name	Indicates the Picasa/Flickr account you currently entered.
2	Photo albums	Indicates photo albums available from the Picasa/Flickr account. Press ◀ / ▶ to switch among Picasa/Flickr photo albums.
3	Current file number/ Total number of files	Indicates the currently selected file number/total number files in the current folder.
4	File information	Indicates the file name of the currently selected file.
5	List mode	Displays the photos from the currently selected Picasa/Flickr photo album in thumbnail.
6	Selection Indication	You can press ▲ / ▼ / ◀ / ▶ to move, and then press ⊞ to select a file, or press ⊞ again to unselect a file. <div style="display: inline-block; vertical-align: middle; margin-left: 20px;">  <Enabled>  <Disabled> </div>
7	Page indication	The number of current page and the whole page is indicated, and page movement is possible by using ◀ / ▶ key. If pressing ◀ / ▶ key long, each moves to the first and last page.
8	Number of selected files	Indicates the total number of currently selected files.
9	Key-Help	

Digital Photo Frame

Using the Network Menu

Searching Picasa/Flickr Photo Albums by Keyword

- 1 Press **▲** / **▼** / **◀** / **▶** to select **Network** in **Home Menu**, and then press **○**.
- 2 Select **Picasa/Flickr**, and then press **○**.
- 3 Press **▲** to highlight the **Username Search** page, and then press **▶** to move to the **Keyword Search** page.
- 4 Select **New Keyword** under the **Keyword Search** page, and then press **○**.
- 5 In the on-screen keyboard that appears, enter a keyword for your search, select **OK**, and then press **○**. The keyword you entered will be stored in the **Keyword Search** page.
 - For details about how to use the on-screen keyboard: **→** Page 25.
- 6 Press **▲** / **▼** / **◀** / **▶** to move to your keyword, and then press **○**.



- 7 The search results will be displayed on the screen.
- 8 Select the desired photos by pressing **☑**, and then press **☑** to display the pop-up menu.


























- 9 In the pop-up menu that appears, you can:
 - Start a slide show of the selected photos by **Slide show**.
 - Select all the photos from the keyword search result by **Select All**.
 - Unselect all the photos from the keyword search result by **Unselect All**.
 - Copy the selected photos by **Copy**.

Digital Photo Frame

Using the Network Menu

Using YouTube

You can use **YouTube** in the **Network**  menu to watch public YouTube video clips.


- 1 Press  /  /  /  to select **Network**  in **Home Menu**, and then press .
- 2 Select **YouTube**, and then press .
- 3 By default, the **Feature Videos** page shows a list of featured video clips on YouTube.
When **Featured Videos** is highlighted, you can press  /  to switch among **Featured Videos**, **Recent Videos**, **Top Rated**, or **Search** pages.
- 4
 - Under **Featured Videos**, **Recent Videos**, or **Top Rated** pages, press  /  /  /  to select a video clip, and then press  to start the playback.
 - Under the **Search** page, you can use the on-screen keyboard to enter the keyword for your search. Once the search results are displayed, press  /  /  /  to select a video clip, and then press  to start the playback.
- 5 When the playback starts, you can:
 - Press  to pause/resume the playback.
 - Press  to enable fast-forward playback.
 - Press  to enable fast-backward playback.
 - Press  to stop the playback and exit.



Digital Photo Frame

Using the Network Menu


Using FrameIT

- You can use **FrameIT** in the **Network**  menu to connect to FrameIT to display your Windows Live FrameIT collections.
- Before using FrameIT, a Windows Live ID is required. Sign up for a Windows Live ID on the Internet, if you do not have an existing one. Visit www.frameit.com

1 Press  /  /  /  to select **Network**  in **Home Menu**, and then press .


3 When **Register Frame** is highlighted, press .



2 Select **FrameIT**, and then press .

4 Follow the on-screen instructions, and then:






- **On the PC:** Go to the specified web site, input the registration token displayed on the screen, and then log into your Windows Live ID to complete the registration.

- **On the product:** Press  to connect the product to FrameIT.



5 Once connected, the product will display available collections.



6 Press  /  /  /  to select a collection, and then press  to play back the collection in full screen.

- To stop the playback and exit, press .

Tip















- You can create and manage collections on the Windows Live FrameIT web site. For details, refer to the online help.

Digital Photo Frame






Using the Network Menu

 
Using Internet Radio

You can use **Internet Radio** in the **Network**  menu to listen to the radio channels on the web.

- 1 Press  /  /  /  to select **Network**  in **Home Menu**, and then press .
- 2 Select **Internet Radio**, and then press .
- 3 By default, the **Country** page appears.
 - In the **Country** page, radio channels are sorted by countries.
 - In the **Genre** page, radio channels are sorted by genre.
 - When **Country** is highlighted, you can press  /  to switch among **Country**, **Genre**, or **Favorite** pages.
- 4 Under **Country** or **Genre** pages, press  /  /  /  to select a video clip, and then press  to start the playback.



- 5 When the playback starts, you can:
 - Press  to pause/resume the playback.
 - Press  to move to the next channel.
 - Press  to move to the previous channel.
 - Press  to add the current radio channel to the **Favorite** list.
 - Press  to stop the playback and exit.

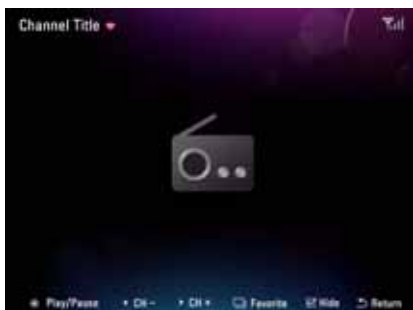

Digital Photo Frame

Using the Network Menu

Using Home Network

When the product and your PC have been both connected to the same wireless network, you can stream photos from your computer to the product by using Windows Media Player 11 media sharing.

- 1 Press / / / to select **Network** in **Home Menu**, and then press .
- 2 Select **Home Network**, and then press .
- 3 The **Server** list appears, showing a list of PCs that are connected to the same network.
- 4 Select your PC from the **Server** list, and then press .




- 5 On your PC, open Windows Media Player 11, and apply the configurations below:
 - a. Click the arrow below the **Library** tab, and then click **Media Sharing**.
 - b. In the **Media Sharing** dialog box, select the **Share my media to** check box.
 - c. In the list of devices below the **Share my media to** check box, select a device (the product).
 - d. To share your photos with the device you have selected, click **Allow**.
- 6 The product will display shared photos from the library of your Windows Media Player 11 in thumbnail (**List** mode).
- 7 In the **List** mode, select the desired files by pressing .
- 8 Once you have selected the desired photos, you can press to display the pop-up menu.

Note

- To use Home Network, you need to set the Media Sharing item in Windows Media Player 11 on the PC. Refer to Page 37 for more information.

Digital Photo Frame

Using the Network Menu

- 9** In the pop-up menu that appears, you can:
- Start a slide show of the selected photos by **Slide show**.
 - Return to the **Server** list page by **Change Server**.
 - Select all the files from the connected server by **Select All**.
 - Unselect all the files from the connected server by **Unselect All**.
 - Copy the selected photos by **Copy**.
 - Rotate the selected photos by **Rotate**.
- 10** If you have started a slide show, you can press  to use the **Rotate, Zoom, List, Clock/Calendar, Copy, and Slide show setting** functions. (→ Page 15)



Windows Media Player 11 - Media Sharing

 
 
Note

- For Windows Media Player 11 download, please refer to <http://www.microsoft.com/windows/windowsmedia/player/11/default.aspx>

- 1 In the [Library] menu, select [Add to Library].



- 2 On the [Add to Library] window, select [My folders and those of others that I can access]. Select a folder in the monitored folder list to share with the photo frame. If no searched folder is desired, click the [Add] button to add a folder and then press the [OK] button.

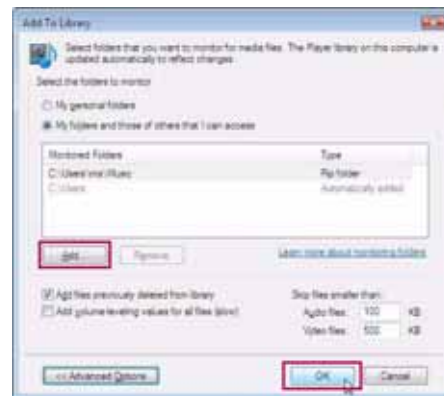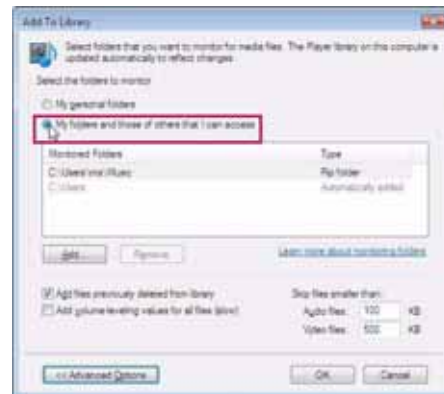



Windows Media Player 11 - Media Sharing

- 3 In the [Library] menu, select [Media Sharing].



 
- 4 On the [Media Sharing] window, select [Share my media]. If no [Available device] is displayed, proceed to step 5. If displayed, proceed to step 6.



- 5 Click the [Networking] button and check whether the current network is [Private Network]. If not, set to [Private Network].



- 6 If [Available device] is displayed, click the [Settings] button.

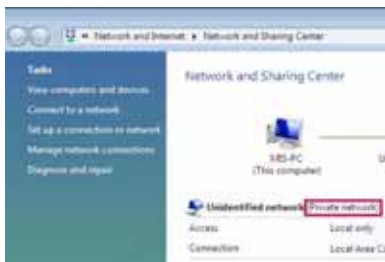



Windows Media Player 11 - Media Sharing

- 7 Click the [Setup] button to display the [Media Sharing - Default Setup] window. To add external devices or a PC to be connected automatically, select [Allow new device and computers automatically] (not recommended). Select Photo from Media types, select a rating, and click the [OK] button.



- 8 Select the device (your photo frame) to share, and then press the [OK] button.



Digital Photo Frame

Using Bluetooth®

Connecting to a Bluetooth®-enabled Device

Bluetooth®

Your photo frame comes with built-in *Bluetooth*® technology that lets you receive files from other *Bluetooth*®-enabled devices.

You need to activate the *Bluetooth*® function to establish a *Bluetooth*® connection between your photo frame and other *Bluetooth*®-enabled devices, such as a mobile phone.



- 1 Press / / / to select **Setup** in **Home Menu**, and then press .
- 2 Press / to select **Bluetooth** in **Setup**, and then press .
- 3 Make sure the photo frame is prepared:
 - **Bluetooth On/Off** must be set to **On**.
 - **Visibility** must be set to **On**.
- 4 Make sure you have turned on the *Bluetooth*® function on the *Bluetooth*®-enabled device you want to connect to.

Refer to the user's guide that came with the device for instructions if needed.
- 5 On the *Bluetooth*®-enabled device, search for available *Bluetooth*® devices.
- 6 On the *Bluetooth*®-enabled device, select "LG DPF" from the search results, and then enter the default passcode "0000".
- 7 When the *Bluetooth*® connection is established, you can send files from the *Bluetooth*®-enabled device to the photo frame.

! Note

- The maximum effective range of connection between your photo frame and the *Bluetooth*®-enabled device is 5 meters.
- When you are using applications in Network menu, *Bluetooth*® connection is not allowed.

! Tip

- "LG DPF" is the default name of the product. If you want to change the name, go to **Setup > Bluetooth > My DPF Name**, and select **Rename** to use the on-screen keyboard to change the name.


Digital Photo Frame

 
Using *Bluetooth*[®]

Sending Files to the Photo Frame

Once you have connected the photo frame to a *Bluetooth*[®]-enabled device, you can send files from the *Bluetooth*[®]-enabled device to the photo frame.

- 1 On the *Bluetooth*[®]-enabled device, select the file you want to send to the photo frame.
- 2 The photo frame will pop up a screen as follows.

To accept the file, select **Yes**, and then press  to proceed.

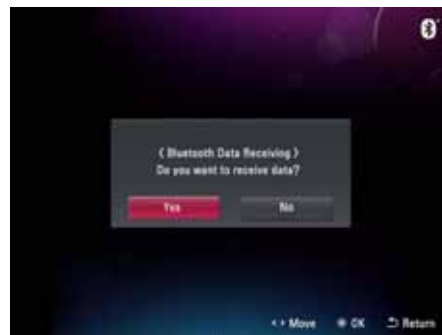

- 3 The photo frame starts to receive the file sent by the *Bluetooth*[®]-enabled device.
- 4 Once sending is completed, the product will display the received file in thumbnail (**List** mode).




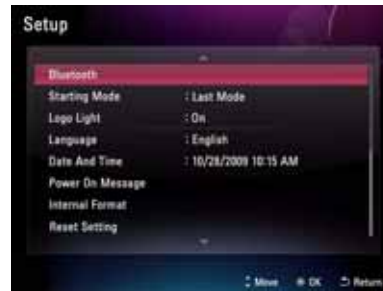 
Note

- Make sure the file format of the file you want to send is supported on the photo frame. Otherwise, even though the file can be sent, it still cannot be displayed on the photo frame.
- The received files will be stored in the "*Bluetooth*" folder in the internal memory.

Setup

Digital Photo Frame

The Setup menu allows you to configure the basic Properties of the product. Select **Setup**  in **Home Menu**.



-
- | | |
|---------------------|--|
| ■ Brightness | Set up the screen's brightness. The brightness level ranges from 1 to 5. |
|---------------------|--|
-
- | | |
|----------------------|--|
| ■ Orientation | Set the image display orientation of the product.
(* This product reads the photo information and the orientation value and rotates the photo accordingly.) <ul style="list-style-type: none">• Auto Sensor automatically shows in rotation by perceiving the product orientation.• Landscape Shows at breadth.• Portrait Shows at length. |
|----------------------|--|
-
- | | |
|-----------------------------|---|
| ■ Photo Aspect Ratio | Adjust the aspect ratio of the screen. <ul style="list-style-type: none">• Width Custom It expands the photo size horizontally to fill the screen.• Height Custom It expands the photo size vertically to fill the screen.• Original It shows the photo in its original size.• Full1 It shows the photo fit to the size of the screen regardless of the ratio of the photo.• Full2 It shows the photo fit to the size of the screen while still maintains the ratio of the photo. The outer edges may be cut off depending on the size of the photo. |
|-----------------------------|---|
-
- | | |
|-----------------------------|--|
| ■ Video Aspect Ratio | Adjust video aspect ratio. <ul style="list-style-type: none">• Original It shows by automatically adjusting the screen ratio.• 4:3 It shows as the ratio of 4:3.• 16:9 It shows as the ratio of 16:9. |
|-----------------------------|--|
-

■ Alarm	You can set up the alarm. Set up the time, repetition setup, sound, and so on.
■ Music Auto Play	If music file is detected at photo slide show, music playback automatically starts as background music for the slide show.
■ Power Saving	You can set up the time that power is turned on or off.
■ Network	You can use the Network setup page to connect to a wireless network and check the network status. (→ Page 25)
■ Bluetooth	You can use the <i>Bluetooth</i> [®] setup page to enable/disable the <i>Bluetooth</i> [®] function, set Visibility, or change DPF name. (→ Page 40)
■ Starting Mode	Set up the screen that initially shows up when turning on the power. <ul style="list-style-type: none"> • Home Menu Start in Home Menu. • Slide Show Start Slide Show. • Last Mode Start from the last state that the power is off.
■ Logo Light	Set up logo indication light located just below the front panel.
■ Language	Select a language used in the menu screen.
■ Date and Time	Set up date and time.
■ Power On Message	Set up present message. (→ Page 44) <ul style="list-style-type: none"> • On When giving present, you set up by selecting the photo and phrase proper to the objective. • Off No setup for present message
■ Internal Format	Delete all data stored in internal memory.
■ Reset	Initialize all setups.
■ Product information	View product information.

Note

- Language and Time are not initialized even when you execute **Reset**.

Power On Message Function

- Power On Message can show the message, photo, music, and video you have selected when turning on the power of the product.

1 Selecting 'On'

Select **On** on the **Power On Message** menu.



2 Selecting message

Select the message to display upon powering on the product.



3 Selecting Photo (Video)

Please select the **Photo (Video)**. Please select **Skip** button if you wish to continue without inserting any photo or video.

* If selecting video, you cannot insert the music.



4 Selecting music (available only when a photo is added).

Please select the music. If selecting **Next** button, you can select the music from the music list, and if selecting **Skip** button, you can continue to the next step without inserting any music files.



5 Completing setup

You can preview the **Power On Message** by selecting the **Preview** button after setup.



 


Note

- The texts used in Power On Message appears in horizontal orientation only, regardless of how the product is placed.


Digital Photo Frame

Troubleshooting

Problems	Solutions
<ul style="list-style-type: none"> ● The screen does not work. 	<ul style="list-style-type: none"> • Check if the product is connected to the power adapter properly. • Check if the power adapter is connected to the power outlet properly. • Press the POWER button to turn the product on.
<ul style="list-style-type: none"> ● The photo is not displayed on the screen. 	<ul style="list-style-type: none"> • There are some image file formats which are not supported. Please check the product specifications.
<ul style="list-style-type: none"> ● Video screen and sound doesn't operate. 	<ul style="list-style-type: none"> • The configuration of video file could not match. Please check product standard and then change the video configuration.
<ul style="list-style-type: none"> ● The music does not play back. 	<ul style="list-style-type: none"> • There are some music file formats that are not supported. Please check the product specifications. • Press the , ,  buttons to check if the volume is turned off.
<ul style="list-style-type: none"> ● The USB / memory card is not detected. 	<ul style="list-style-type: none"> • Check if the USB cable is connected to the product and the external device properly. • There are some memory card formats which are not supported. Please check the product specifications. • Check if the files stored in the external device are supported file formats.
<ul style="list-style-type: none"> ● The screen is black or none of the buttons work. 	<ul style="list-style-type: none"> • The product may not respond because of invalid file format, virus infection or unexpected situation. Turn DC Jack plug off and on to make it function normally.
<ul style="list-style-type: none"> ● I want to format the internal memory. 	<ul style="list-style-type: none"> • If you want to format internal memory, it is safe to use Setup -> Internal Format. Format will delete all media file. • Do not format internal memory using PC after connecting the product to PC because it may cause malfunctions.
<ul style="list-style-type: none"> ● It takes long for photo to come up. 	<ul style="list-style-type: none"> • When opening the file from external memory card, it could take time. • The time that photo comes up could be different depending on file format type and size.

Digital Photo Frame

Troubleshooting

Problems	Solutions
<ul style="list-style-type: none"> ● The screen ratio is not normal. 	<ul style="list-style-type: none"> • Please adjust the aspect ratio of the screen. You can adjust it in the Setup -> Photo Aspect Ratio or Setup -> Video Aspect Ratio.
<ul style="list-style-type: none"> ● The screen color is dim or dark. 	<ul style="list-style-type: none"> • Please adjust screen brightness. You can adjust at Setup -> Brightness or Slide show setting -> Brightness.
<ul style="list-style-type: none"> ● The photo frame cannot connect to Wi-Fi network. 	<ul style="list-style-type: none"> • Verify that the access point you are connecting to is active and working properly. • The product only supports 802.11b/g wireless network. • For technical support, contact your network administrator or network service provider.
<ul style="list-style-type: none"> ● I cannot connect the digital photo frame to Windows Media Player 11 on the PC. 	<ul style="list-style-type: none"> • Check if your computer and photo frame are connected to the same WAP (Wireless Access Point). • Select your photo frame from Library - Media Sharing in Windows Media Player 11, and check if [Allow new device and computers automatically] is selected.
<ul style="list-style-type: none"> ● I cannot access Picasa and Flickr. 	<ul style="list-style-type: none"> • Check if you have entered a correct Picasa or Flickr user ID. • Check if the Picasa and Flickr sites are currently online, and then see if they deny sharing media with your network.
<ul style="list-style-type: none"> ● I cannot receive a file using the <i>Bluetooth</i>[®] menu. 	<ul style="list-style-type: none"> • See if the <i>Bluetooth</i>[®] icon () is indicated on the upper right side of the Main Menu screen. • Keep the distance between your photo frame and device within 5 meters.
<ul style="list-style-type: none"> ● The new name of the digital photo frame is not recognized by other devices 	<ul style="list-style-type: none"> • Restart the photo frame, and then use the other device to search for the photo frame.

Digital Photo Frame

Specifications

F8010P

* Information in this document is subject to change without notice.

Model	F8010P
Size	8"
Dimension (Width x Height x Depth)	Fold Stand 221.8 x 178.3 x 29.5 mm
	Unfold Stand 221.8 x 166.7 x 126 mm
Weight (excl.packing)	558 g
Resolution	800 x 600
Power Input	DC 9V 2.0A
Power Consumption	On mode: 8W (Typ.)
	Off mode: under 1W
USB	Version 2.0 X 2 (up stream (host) X1, down stream (slave) X1)
Internal Memory	2 GB
Supported file format	JPEG, BMP, MP3, Motion JPEG, MPEG1, MPEG4 (SD), FLV
Supported Memory Cards	SD ≤ 2GB / SDHC ≤ 32GB / MMC ≤ 2GB / MS ≤ 128MB / MS-PRO ≤ 32GB
AC-DC Adapter	ADS-18C-12N 09018GPG(EU) ADS-18C-12N 09018GPB(UK) ADS-18C-12N 09018GPCU(USA) SHENZHEN HONOR ELECTRONIC CO., LTD
Network	Wi-Fi 802.11b/g
Bluetooth®	Bluetooth® 2.1 + EDR Bluetooth® Object Push Profile 1.1 (Picture Only)

Digital Photo Frame

Service Information

Service Center

- LG Electronics Service center web site: <http://www.lgservice.com>

Software Update

- For software update, please refer to www.lge.com

Product Registration

- Visit www.lge.com and register the Serial No. on the product package or the back of the product.
- The Serial No. is a combination of 12 digits with English letters and numbers.
- If you register the Serial No., you can enjoy free A/S service and various events.

