



user's guide

Model : LGX11

Config. Name: X110, XB110, XV110, XD110 Series



Some of the components may look different from the picture.

Chapter 1. Tips



1-1. Read this carefully before using the Notebook PC.

▶ Regulatory Notices

1-1 USA Notice

Federal Communications Commission

Notice

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular commercial installation, or if operated in a residential area.

If harmful interference with radio or television reception occurs when the device is turned on, the user must correct the situation at the user's own expense. The user is encouraged to try one or more of the following corrective measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that on which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications : The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by LG Company may void the authority to operate the equipment.

Cables : Connections to this device must be made with shielded cables with metallic RF/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

RF Radiation Exposure Statement : This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter.

Caution: Regulations of the FCC and FAA prohibit airborne operation of radio-frequency wireless devices because their signals could interfere with critical aircraft instruments.

Declaration of Conformity for products marked with the FCC logo

This device uses, generates and radiates radio frequency energy. The radio frequency energy produced by this device is well below the maximum exposure allowed by the Federal Communications Commission (FCC).

This device complies with Part of FCC Rules and Regulations. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Responsible Party :

LG ELECTRONICS U.S.A., INC.
1000 SYLVAN AVENUE
ENGLEWOOD CLIFFS, NJ
Telephone : 1-800-243-0000

**1-2.Canada Notice**

This Class B digital apparatus complies with Canadian ICES-003, Issue 4, and RSS-210, No. 4 (Dec. 2000) and No. 5(Nov. 2001).

"To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing."

Cet appareil numérique de la classe B est conforme à la norme NMB-003, No. 4, et CNR-210, No. 4 (Dec. 2000) et No. 5(Nov. 2001).

« Pour empêcher que cet appareil cause du brouillage au service faisant l'objet d'une licence, il doit être utilisé à l'intérieur et devrait être placé loin des fenêtres afin de fournir un écran de blindage maximal. Si le matériel (ou son antenne d'émission) est installé à l'extérieur, il doit faire l'objet d'une licence. »

Operation is subject to the following two conditions : (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

1-3. European Union

This notebook PC contains one or two of the following RF modules.

	for ERICSSON F3507 g
	for RTL8187SE(MS-6894)
	for MS-6837D

Translated Statements of Compliance

[English]

This product follows the provisions of the European Directive 1999/5/EC.

[Danish]

Dette produkt er i overensstemmelse med det europæiske direktiv 1999/5/EC

[Dutch]

Dit product is in navolging van de bepalingen van Europees Directief 1999/5/EC.

[Finnish] Tämä tuote noudattaa EU-direktiivin 1999/5/EC määräyksiä.

[French]

Ce produit est conforme aux exigences de la Directive Européenne 1999/5/EC

[German]

Dieses Produkt entspricht den Bestimmungen der Europäischen Richtlinie 1999/5/EC

[Greek]

Το προϊόν αυτό πληροί τις προβλέψεις της Ευρωπαϊκής Οδηγίας 1999/5/EC.

[Icelandic]

Þessi vara stenst reglugerð Eyrópska Efnahags Bandalagsins númer 1999/5/EC

[Italian]

Questo prodotto è conforme alla Direttiva Europea 1999/5/EC.

[Norwegian]

Dette produktet er i henhold til bestemmelsene i det europeiske direktivet 1999/5/EC.

[Portuguese]

Este produto cumpre com as normas da Diretiva Europeia 1999/5/EC.

[Spanish]

Este producto cumple con las normas del Directivo Europeo 1999/5/EC.

[Swedish]

Denna produkt har tillverkats i enlighet med EG-direktiv 1999/5/EC.

1-4. Brazil Notice

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

1-5. France Notice

Pour la France métropolitaine

2.400 - 2.4835 GHz (Canaux 1 à 13) autorisé en usage intérieur

2.400 - 2.454 GHz (canaux 1 à 7) autorisé en usage extérieur

Pour la Guyane et la Réunion

2.400 - 2.4835 GHz (Canaux 1 à 13) autorisé en usage intérieur

2.420 - 2.4835 GHz (canaux 5 à 13) autorisé en usage extérieur

1-6. Italy Notice

A general authorization is requested for outdoor use in Italy.

The use of these equipments is regulated by:

1. D.L.gs 1.8.2003, n. 259, article 104 (activity subject to general authorization) for outdoor use and article 105 (free use) for indoor use, in both cases for private use.

2. D.M. 28.5.03, for supply to public of RLAN access to networks and telecom services.

L'uso degli apparati è regolamentato da:

1. D.L.gs 1.8.2003, n. 259, articoli 104 (attività soggette ad autorizzazione generale) se utilizzati al di fuori del proprio fondo e 105 (libero uso) se

utilizzati

entro il proprio fondo, in entrambi i casi per uso private.

2. D.M. 28.5.03, per la fornitura al pubblico dell'accesso R-LAN alle reti e ai servizi

di telecomunicazioni.

1-7. Latvia Notice

A license is required for outdoor use for operation in 2.4 GHz band.

1-8. Russia



1-9. Contact Information

Country	Telephone	Email or website
Poland	801-545454	http://pl.lgservice.com
Hungary	06-40-54-5454	http://hu.lgservice.com
Spain	902-500-234	http://es.lgservice.com
Netherlands	31-24-3731375	LG@ICT-FIX.COM
France		
Germany		
Italy		
Sweden		
UK		
Portugal	808-78-54-54	http://pt.lgservice.com
Canada	888-542-2623	nbwarranty@lge.com
Australia	1300-788-184	http://au.lgservice.com
China	400-819-9999	http://cn.lge.com
India	1800-1809999	http://in.lgservice.com
Korea	82-2-219-7777 (Korean)	globalsvc@lge.com
	82-31-610-9657 (English)	
Singapore	65-6512-0550	lgesg@lge.com
USA	1-800-243-0000	usapcsvc@lge.com

*The contat numbers listed above are subject to change without prior notice

SAFETY REGULATION NOTICE

Battery

If the backup battery is incorrectly replaced, there is danger of explosion. The lithium battery contains lithium and can explode if it is not properly handled or disposed of. Replace only with a battery of the type recommended by LG.

Australia Notice

- The appliance is not intended for use by young children or infirm persons without supervision
- Young Children should be supervised to ensure that do not play with appliance
- If the appliance is supplied from a cord extension set or an electrical portable outlet device.
- The cord extension set on electrical portable outlet device must be positioned so that it is not
 - subject to splashing or ingress of moisture

European _ WEE

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Disconnect Device

- Plug and connector of the power supply cord
- Output jack of Power supply
- Main Battery Pack

DECLARATION OF CONFORMITY

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name / Model : LG / LGX11, X110

Responsible Party : LG Electronics, Inc. / Product Safety & Compliance

Address : 1000 Sylvan Avenue Englewood Cliffs, NJ 07632. U.S.A.

Contact Person : Mr. Daniel Kim, General Manager
Tel. No. 1-800-243-0000 For Technical Support
Tel. No. 1-201-268-2420 For FCC Inquiry

Equipment Classification : FCC Class B Peripheral Device (JBP)
Type of Product(EUT) : Notebook PC
Manufacturer : LG Electronics Inc.
Address : 19-1, Cheongho-ri, Jinwi-myeon, Pyeongtaek-si,
Attention : Gyeonggi-do, 451-713, Korea
Mr. H.S. Lee - General Manager
Digital Media Standards Group

We hereby declare that the equipment bearing the trade and model number specified above was tested conforming to the applicable FCC Rules under the most accurate measurement standards possible, and that all the necessary steps have been taken and are in force to assure that production units of the same equipment will continue to comply with the Commission's requirements.

LG Electronics Inc.



Daniel Kim

Signature

September/19/2008

Date

Declaration of Conformity

Suppliers Details

Name
 LG Electronics Inc

Address
 LG Electronics Inc.
 19-1, Cheongho-ri, Jinwi-myeon, Pyeongtaek-si, Gyeonggi-do, 451-713, Korea

Product Details

Product Name
 Notebook PC

Model Name
 LGX11, X110

Trade Name
 LG

Applicable Standards Details

- EMC Directives : 2004/108/EC
 EN 55022/2006 Class B, EN 55024 : 1998+A1:2001+A2:2003
 EN 61000-3-2/2006 and EN 61000-3-3/1995 +A1/2001 +A2/2005
- R&TTE Directives : 1995/5/EC
 ETSI EN 301 489-1 : V1.6.1(2005-09) , ETSI EN 301 489-17 : V1.2.1(2002-08)
 ETSI EN 300 328-1 : V1.7.1(2006-10)
 ETSI EN 301 511:V9.0.2(2003-03), ETSI EN 301 908-1 : V3.2.1(2007-07)
 EN50360 : 2001, EN50361 : 2001
- Low Voltage Directives : 2006/95/EC
 EN 60950-1:2001+A11:2004

Supplementary Information

The technical files are kept available at the below.
 Year to begin affixing CE Marking 2008.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Inc. Amsterdam Office
 Veluwezoom 15, 1327 AE Almere, The Netherlands
 Tel : +31 - 36- 547 - 8940, e-mail : jacob@lge.com

Name	Issued Date
S.H.Ji / Director	Sep. 22, 2008
_____ Signature of representative	



Country	Telephone	Email or website
Poland	801-545454	http://pl.lgservice.com
Hungary	06-40-54-5454	http://hu.lgservice.com
Spain	902-500-234	http://es.lgservice.com
Netherlands	31-24-3731375	LG@ICT-FIX.COM
France		
Germany		
Italy		
Sweden		
UK		
Portugal	808-78-54-54	http://pt.lgservice.com
Canada	888-542-2623	nbwarranty@lge.com
Australia	1300-788-184	http://au.lgservice.com
China	400-819-9999	http://cn.lge.com
India	1800-1809999	http://in.lgservice.com
Korea	82-2-219-7777 (Korean)	globalsvc@lge.com
	82-31-610-9657 (English)	
Singapore	65-6512-0550	lgesg@lge.com
USA	1-800-243-0000	usapcsvc@lge.com

*The contact numbers listed above are subject to change without prior notice

► ENERGY STAR



ENERGY STAR Compliance (Korea)

LG Electronics, Inc. is an ENERGY STAR-compliant company and has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

The ENERGY STAR program is a partnership with electronic equipment manufacturers to promote energy-efficient products.

Reducing energy consumption of products saves money and helps conserve valuable resources.

This computer is shipped with power management enabled with the computer set to sleep after 20 minutes of user inactivity.

To wake your computer, click the mouse or touchpad button or press any key on the keyboard.

▶ LG Intelligent Update CD

To install a driver or application, use **LG Intelligent Update** CD provided by **LG Electronics**.




1. Guides you to configure the optimal environment for the system.
2. Provides you with an overview before use.

▶ Using Ez User Guide/Ez Troubleshooting

For more convenient use of the machine, we provide you with **Ez User Guide/Ez Troubleshooting**.

Install them by selecting **LG Intelligent Update** CD > **Manual Installation** > **Application**.

Click **Help** button and refer to Tour to learn how to use **Ez User Guide/Ez Troubleshooting**.

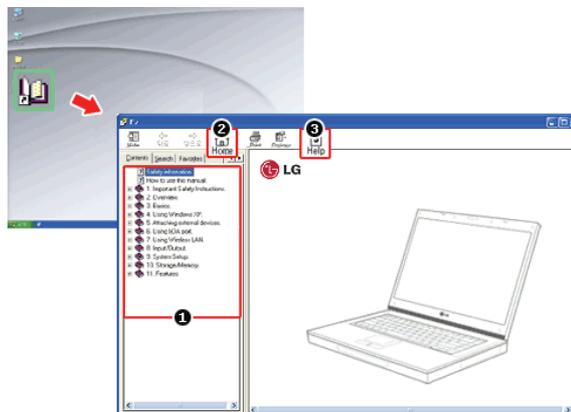

1. **Table of Contents**
2. **Start**
3. **Help:** Helps you to find the answers to your questions and solve problems.

► **Ez User's Guide**

Thank you for purchasing the **LG Electronics** product.

This machine is built on cutting-edge technology and has been tested reliably.

For the sake of convenient use, please read this manual in advance.

The below symbols are to inform you of dangers and safety concerns that you must be aware of. Read the symbol-indicated instructions with caution to avoid any possible mishap.



Warning

Appears in the case of noncompliance with the instruction that may cause serious physical damage or fatal injuries.



Caution

Appears in the case of noncompliance with the instruction that may cause minor damage to the body or the machine.

Microsoft, MS, Win PE, and WINDOWS are the registered trademarks of **Microsoft Corporation**.

IBM, IBM Personal Computer, PS/2, and PC AT are the registered trademarks of **International Business Machine Corporation**.



LG logo is a registered trademark of LG Corporation.



SONY logo and Memory Stick are the registered trademarks of SONY Corporation.



Transcend logo is a registered trademark of Transcend Corporation.



SD logo is a registered trademark of Secure Digital Corporation.



xD logo is a registered trademark of FUJIFILM Co., Ltd.

Copyright (C) 2008, **LG Electronics Inc.**, **DigitalMate Co.**, Ltd.

Please be understanding that this manual may contain incorrect parts despite our dedicated efforts to perfect it.

The exemplified figures in this manual may not exactly the same as the real products.

LG Electronics Inc. has rights to modify any part of this manual for the better without prior notice.


Unauthorized reproduction or duplication of any part of this manual is strictly prohibited.

This product has been designed for household use and passed the Electromagnetic Interference Test. Thus, this product may be used not only in residential areas but also in any other places.

Country of Origin: China

Manufacturer: LG Electronics (Kunshan) Computer Co.,Ltd.

► Ez User Guide Tour

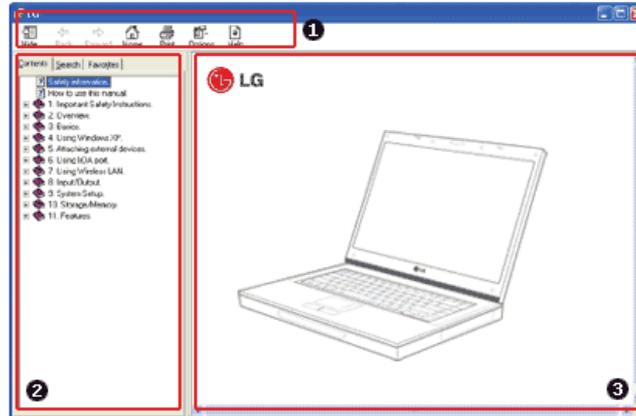

1. Toolbar

- Hide/Show:** Hide or show the navigation window.
- Back:** Displays the previous page in the navigation history.
- Forward:** Displays the next page in the navigation history.
- Home:** Displays the Home page.
- Print:** Prints the current page.
- Option:** Displays options.
- Help:** Mostly used for touring this guide.

2. Navigation Bar

- Index:** Displays a categorized list of subjects.
- Search:** Allows users to type key words and search manually.
- Favorites:** Registers frequently searched items for more convenient future reference.

3. Description Pane

- Displays the explanation of the selected item.

1-2. Important safety information

Please avoid any undesirable environmental factor that shortens the machine's life span. Use the machine in a safe and stable place.

The warranty does not cover any damage resulting from reckless use or use in undesirable environments.

► Installation

Warning



Do not use the machine in damp places like a laundry room or bathroom.

Moisture may cause a glitch or an electric shock.

The desirable temperature and humidity ranges are from 10 to 35°C and from 80% to 20%, respectively.



Dispose of the desiccating agent and wrapping plastic properly.

The desiccating agent and wrapping plastic may cause suffocation.



Use the product in a dust-free environment.

Otherwise, the system may not function properly.



Do not leave any object nearer than 15 cm from the computer.

Otherwise, lack of ventilation could overheat the machine from inside and you could get a burn from the heat.

Caution



Place the machine in a safe place so that it does not fall.

If dropped, the machine could be damaged and even cause an injury.



Do not leave or use the computer near a magnetic object.
 Otherwise, the H/D and the system may be damaged and fail to operate properly.
 Never place the computer on a bag with magnetic objects including magnetic buttons.
 Otherwise, the H/D and the system may be damaged and fail to operate properly.

 


Operate the product in a place without electromagnetic interference.
 Keep a proper distance between the computer and such electronic appliances as speakers that generate strong magnetic fields.
 Otherwise, data may be lost from the hard disk or the LCD may show impaired coloration.



Do not put any heavy object on the machine.
 If falling, the object could damage the machine and cause an injury.

► Using Battery



Warning



Charge the battery only with the provided instrument.
 Otherwise, the battery may be damaged presenting a risk of fire.



Do not throw or disassemble the battery.
 The resulting impairment may cause an injury, explosion, or fire.



Use batteries certified and acknowledged by **LG Electronic Inc.**
 Otherwise, an explosion or fire may occur.



Prevent the battery from being contact with any metallic object like a car ignition key or a paper clip.
 Otherwise, the battery may be overheated to be damaged resulting in a fire or an injury.



Keep the battery away from heat.
 Otherwise, an explosion or fire may occur.



Do not short-circuit the battery.
Otherwise, it may explode.




Do not dispose of a spent (backup) battery arbitrarily.
It may explode or cause a fire.
Disposal methods may differ by country and region. Dispose of the spent battery in accordance with the laws and safety rules of the country and region.



If you find leakage or smell bad odor from the battery, remove the battery and contact the local service center.
It may explode or cause a fire.



Avoid humidity and heat above 60 °C as do in cars or saunas.
It may explode or cause a fire.

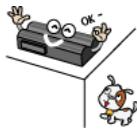

Keep the battery out of reach of children or pets.
If damaged, it could cause an injury.



Keep the battery from being pierced by a sharp object or a chew of your pet.
It may explode or cause a fire.



Do not sink the battery in water.
Otherwise, the battery may be damaged presenting a risk of explosion.



Ensure that the battery pack is locked to the machine after installation.
Otherwise, the battery pack may be damaged.



Do not use the laptop on top of carpet, blanket or bed.
The product may malfunction, cause a fire or burn the user due to temperature rise.



Read the directions printed on the battery pack carefully before use.
Keep the battery at room temperature. Refer to other Tips and directions in this guide to store the battery properly.

► Using AC Adapter



Warning



Do not use loose plugs or damaged power cords.
An electric shock or fire may occur.



Do not touch the power cord with your hands wet.
Otherwise, an electric shock may occur.



Pull the plug, not the cord, to disconnect the power.
Otherwise, a fire may occur or the product may get damaged.



Operate the product at the proper voltage.
Excessive voltage may result in damage on the product, electric shock or fire.



Use power outlets with an earth pin installed and proper supply of rated electricity.
An electric leakage may cause an electric shock or fire.



Plug the power cord tightly into the outlet.
Loose connection of the power cord could cause a fire.



In the case that a strange noise is heard from the cord or plug, disconnect the power cord from the outlet immediately and contact the service center.

A fire or electric shock may occur.



Never disassemble the power supply and adapter.

A damaged power cord may cause an electric shock or fire.



Use a socket with an earth pin equipped.

If not earthed, the product may cause an electric shock and get damaged.



Ensure that the power outlet is earthed before plugging in.

Otherwise, an electric shock from power leakage may occur.



Always keep the power cord and the outlet clean.

A fire may occur.



Do not impair the cord by bending or pressing it too hard. Keep children and pets from damaging the power cord.

An impaired cord could damage computer parts causing a fire or electric shock.



Disconnect the machine completely from others before cleaning it.

Otherwise, an electric shock or impairment may occur.



If the power circuit and machine are soaked, disconnect the battery, AC adapter, and all others before contacting the local service center.

Otherwise, an electric shock may occur.

► Using Notebook PC

 **Warning**



Clean the computer with a proper agent and dry it completely before using it again.
If the computer is wet while used, an electric shock or fire may occur.



When lightning flashes in your area, disconnect the power, modem, LAN and other connections.
An electric shock or fire may occur.



Do not leave a cup or other containers filled with watery substance near the computer.
If the machine is soaked, a fire or electric shock may occur.



Do not connect the modem to a key telephone system.
A fire may occur or the product may get damaged.



If you have dropped or damaged the computer, disconnect the power and contact the local service center for a safety check.
If a damaged computer is used continuously, an electric shock or fire may occur.



Do not put a lit candle or live cigarette on the computer.
A fire may occur.



The fluorescent lamps on the LCD panel contains mercury.
If you have contacted the liquid from the LCD panel, immediately wash the substance away with water. If you feel any slightest trouble, visit your doctor immediately.



If you smell or see smoke from the computer, stop using the computer and disconnect the power before contacting the local service center.
A fire may occur.



Do not play computer games too much.

Playing a computer game for an extensive time may cause a mental disorder. It could even inflict physical impairments on feeble people including children and the elderly.



You may hear noise while on 3D mode.



Caution



Do not leave any object such as a pen on the keypad.

You might break the LCD panel by unwittingly shutting it down with the object remaining on the pad.



Do not press or scratch the LCD panel with a sharp object.

It may cause an impairment.



Ensure the power is off before shutting the panel.

The machine may be deformed due to temperature rise.



The bottom of the computer gets hot when the system is working. Please avoid touching it and do not put it on your laps.



Do not impose excessive force on the LCD panel or drop it.

You could break the LCD glass panel.



Do not forcibly open the LCD panel with one hand.

The machine may be twisted.



To clean the LCD panel, use designated agents and soft cloth and rub the panel in one direction.
Too much force may damage the panel.



When handling computer parts, follow the instructions in the manual.
Otherwise, damage may be inflicted.



Do not put your finger or an object in the PC card slots.
An injury or electric shock may occur.



Install a vaccine program on your computer and do not download illegal programs nor access any corruptive web site such as those pushing pornographic contents.
The system may be infected and impaired.



Ask one of our engineers to run a safety check after your computer has been repaired.
Otherwise, an electric shock or fire may occur.



For minors, we recommend a program that blocks access to illegal or pornographic web sites.
Minors' exposure to adult-only contents may inflict psychological instability or even trauma on them. Take an extra precaution for your children if the whole family is using this machine.



Do not press Eject button while the CD-ROM drive is running.
The data may be lost or the disk may spin out unexpectedly to cause an injury.



Keep the machine away from heat-emitting devices such as a heater.
The product may get deformed or catch on fire.



Do not insert other devices than designated ones in the ports.
Otherwise, the product may get damaged.



Do not use a damaged CD-ROM disk or floppy disk.
It may cause product damage or physical injury.



Prevent children from thrusting their finger in the CD drive tray.
The finger may be stuck in the tray and injured.



To remove a CD, turn off the CD program and when the drive lamp is off press Eject button.
Otherwise, the fast spinning CD may spring out of the tray and hurt you.



Do not block the ventilation hole on the sides with any object.
Otherwise, an electric shock may occur.



Do not leave the machine in a car.
The battery may cause an explosion or fire.



Avoid using a wireless LAN connection within the 5m radius of a microwave or plasma lamp. If you have to use wireless LAN and a plasma bulb within the range, however, do it through a channel between 11 and 13.

The transmission rate may drop even if the connection is made.



Turn off the computer if you are not going to use it for an extended time period.
It may overheat the battery.

► Upgrading Notebook PC

Warning



To upgrade the machine, turn off the system and disconnect the power cord and the battery. Disconnect the telephone line linked to the modem, if any.

An electric shock or fire may occur.



When you disassemble and upgrade the machine, prevent children from swallowing any parts including bolts.

If a child swallowed a nut, they may get suffocated.
In that case, see the doctor immediately.

Caution



Please use parts certified by **LG Electronics Inc.**

Otherwise, a fire or product damage may occur.



Consult our service engineer before you use a peripheral device not manufactured by **LG Electronics Inc.**

The product may get damaged.



Do not disassemble or moderate the machine arbitrarily.

You could get an electric shock and would not be able to receive the warranty service for that.



Handle devices and parts of the machine with care.

The product may get damaged.



 
Ensure that everything including the case is reassembled completely before connecting the machine to the power.

Any exposed part may give you an electric shock.



Do not drop any part or device of the machine while disassembling it.
If dropped, it may be damaged and cause an injury.

► Carrying Notebook PC



To carry the machine, turn off the power and disconnect all the cables.
Otherwise, you may trip over the wire, damaging the computer and getting an injury.



During air traveling, follow the directions of flight attendants.
Using a laptop during flight may cause an aircraft accident.



Do not carry the machine with the LCD panel open.
Otherwise, the product may get damaged.



When leaving the machine in a car, keep it in shadow.
The product may be deformed or caught on fire due to temperature rise.



Protect the machine from any shock while carrying it.
System damage or an injury may result.



Carry the machine in a bag designed for it.
Carrying it in an other type of bag may result in product damage.



 
If the machine is not used for a long time, remove the battery pack and discharge electricity to store them.
That way, the battery can maintain the optimal state.



Do not leave the powered-on computer in a space without enough ventilation (i.e. bags) for an extended or repeated time.

The battery may overheat and cause a fire.

▶ Safety Notes to Prevent Data Loss (HDD Management)



Handle the computer with care to prevent a data loss.

Since the hard disk is sensitive to shocks, please make a back-up file of important data all the time. The manufacturer will not be responsible for any hard-disk data loss caused by your mistake.



Hard disk damage and data loss may occur when:

External shocks are inflicted on the machine while disassembling or installing it.

When the computer is abruptly reset (rebooted) due to power failure, the hard disk may get damaged.

The computer is infected with a virus, tainting the data irrecoverably.

Abrupt turning-off of the computer can damage the computer.

 
Moving, shaking or pounding the computer while the hard disk is running, and thus causing file damage or bad sectors.



It is recommended to back up the data to minimize damage caused by hard disk damage.

The manufacturer is not responsible for any data loss.

▶ Safety Precaution for **Windows Vista** Capable PC Use





Windows Vista Capable PC provides an environment where users can enjoy remarkable advancements in information structuring and searching, security, and stability. However, not all computers with the **Windows Vista** Capable PC logo can support the full range of **Windows Vista** features. More powerful hardware combination is required for some premium features of **Windows Vista** as in the case of **Windows Aero**.


Windows Vista Capable PC has to be equipped with the required or more powerful parts to work flawlessly.

Although the machine bears the **Vista Capable** logo, the cost of upgrading **Windows Vista** OS is charged to the owner.


Those other computers without the **Windows Vista** Capable logo

For more information, refer to <http://www.windowsvista.com/getready>.

- ▶ When using the computer, sit in the good posture as shown below.

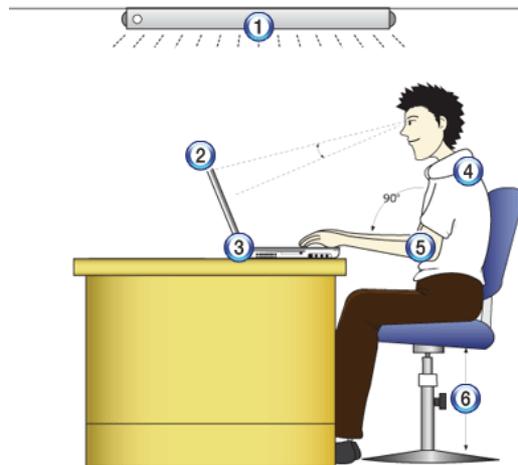

 1. Do not have light directly reflected on the monitor.
2. Set the upper part of the screen to be on the even level with or slightly lower level than your eyes.
3. Adjust the screen while avoiding illuminated reflection.
4. Stretch the neck and back straight.
5. Keep the hands, wrists, and arms horizontally.
6. Adjust the chair to set the hands and arms properly for the keyboard.

**Warning**

- Long time use of computer may cause physical fatigue.
- A 10 minutes break after 50 minute use is desirable. Avoid using the computer more than 2 hours a day.
- Take a rest regularly and stretch your body.

▶ Adjusting volume (headset and speakers)

Check the volume before listening to music



- Before using the headset, check if the volume is too high.
- Do not use the headset too long.

▶ System Protection Feature


When the internal temperature rises, the System Protection feature automatically hibernates or turns off the computer. The computer may not be turned on until its temperature falls to the normal degree.

Chapter 2. Notebook PC Tour



2-1. Opening/Closing Notebook PC

1. Raise the Notebook PC cover upward.
Adjust the angle for the best convenient position.
2. Be sure to close the computer after use.

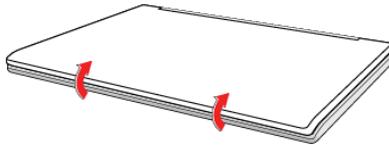

2-2. Operation Status Lamps



1. Power Lamp:

- Blinking: System Standby
- On: The system is running on the AC power or battery.
- Off: The system is turned off or in Hibernates.

2. AC Power and Battery Status Lamp

- Orange: The battery is being charged.
- Orange/Green Blinking: Charged more than 90%
- Off: The AC adapter is not connected and the battery is being discharged.
- Green: The AC adapter is connected and the battery is not in charging stage, or the battery is fully charged.
- Green Blinking: The battery is charged less than 10%
- Red Blinking: In faulty state
- If you try to turn on the system that has entered the Hibernates mode or been turned off after a low-battery alarm, the system will not be turned on but the lamp will blink three times.

3. Hard Disk Drive Lamp

- The lamp is turned on when the HDD is running.
- Do not turn off the power forcibly while the hard disk drive lamp is on. Otherwise, the data may get impaired.

4. Num Lock lamp

- When the **Num Lock** lamp is turned on, you can enter numbers (0~9) using the embedded numeric keys. If you press **[Fn] + [Num Lk]** again, the **Num Lock** lamp is turned off and you can enter text characters.

5. Caps Lock lamp

- Caps Lock** lamp is on when the it is active. When this lamp is on, you can type uppercase letters without holding **Shift** key.

6. Wireless LAN lamp

- Off: Wireless LAN is not in use.
- Blinking (short interval): Wireless LAN/Bluetooth is connected and data are being transmitted.

-Blinking (every 2 ~ 3 seconds): Wireless LAN/Bluetooth is not connected but Wireless Radio is on.

-Blinking (every 3 ~ 4 seconds): An access Point is being searched for to connect Wireless LAN/Bluetooth.

-On: An access point is being searched for or Wireless LAN is connected.

The Wireless LAN/Bluetooth lamp may operate differently depending on model type.

Optional The Wireless LAN card and the Bluetooth device are optional, and so it may not be supported in some models.

Chapter 3. Using the system



3-1. Running on Battery


Notebook PC runs on AC power or battery. This section describes the procedure that the user should take initially for a new system. The provided AC adapter can be used on voltage between 100V and 240V.

Charge the new battery with the AC adapter before use.

Refer to [Charging Battery with AC Adapter] in User's Guide.

1. Turn the machine over to see the battery pack chamber and equip the pack.

-Insert the battery pack into the chamber as shown in the following figure and push it in the direction of the arrow until you hear a clicking sound.

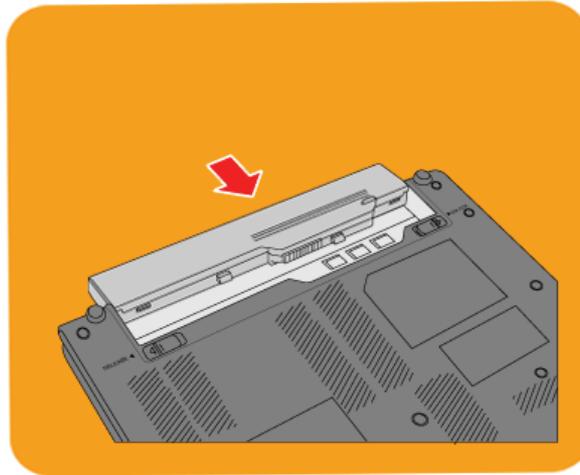


2. Open the machine and turn the power on.
3. Check the battery state.

–When the battery status lamp is blinking, charge it fully with the AC adapter before using it.



4. To remove the battery pack, push the Lock button to the direction of Unlock and lift the battery pack in the direction of the arrow.

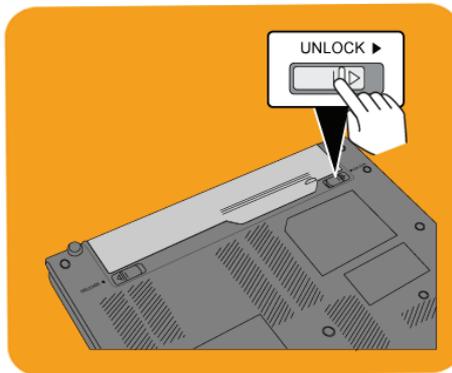

Caution

Use batteries certified and acknowledged by LG Electronic Inc.

- Uncertified batteries may explode.
- Ensure the power is off before changing the battery pack.

Keep the battery pack removed when the machine is not in use.

- Otherwise, a fire and product damage may result.



For more efficient use of the battery, read the following carefully.

- Natural discharge: The battery runs low naturally even if it is kept unused.
- Periodical full (dis)charge: Repeated recharge in midway shortens the running time gradually. To lengthen the span, charge and discharge the battery to the fullest once or twice. For optimal use, execute the full charge/discharge every 30 to 60 days. Still better, recharge the battery after it has run out.

For a safe and efficient use of battery, follow the below directions.

- Do not short-circuit the battery.
- Keep the battery away from heat.
- Keep the battery at room temperature (between 0°C ~ 60°C).
- Do not disassemble the battery pack nor throw it in water or fire.
- Keep the battery out of reach of children.

The battery capacity may change due to chemical reactions during charge and discharge.

- The system checks the charge status of LG batteries frequently, and then calculates and indicates the actual battery duration on the current system setup.
- The battery is wearable goods and thus the life span may be getting shorter as used. The battery running time may also become shorter accordingly.
- When the battery is fully charged the machine stops recharging, and it resumes recharging when the battery charge rate drops below 95%.
- The Battery Status lamp may be turned off even when the battery is not fully charged, and it may blink in orange or green even when the battery is fully charged. This happens because of measures to maintain the battery life and the time gap between charge state recognition and charge state update. You don't need to worry about this because it returns to normal in a while.


3-2. Charging Battery with AC Adapter

Notebook PC runs on AC power or battery.

This section describes the procedure that the user should take initially for a new system.

The provided AC adapter can be used on voltage between 100V and 240V.

1. Connect the AC adapter to a power outlet with the power cable.
2. Connect the AC adapter to the power port of the notebook PC.

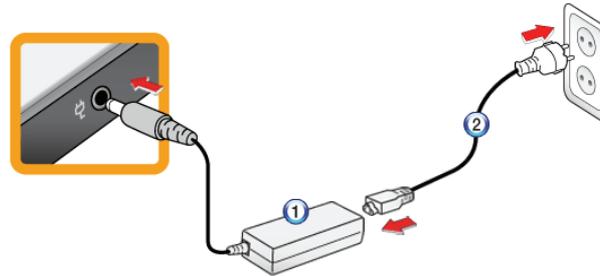

1. AC Adapter
2. Power cable
3. Adjust the LCD panel to the most comfortable angle.
4. Press the power button to turn on the machine.



- You need a different plug to use the AC adapter on 110V. (The extra plug for 110V is sold separately.)



Caution

Do not leave a liquid container on the computer.

- The system may be short-circuited and damaged.



Warning

Please use an AC adapter certified by LG Electronics.

- Otherwise, an explosion or fire may occur.
- It may cause a problem in battery charging or system operation.

3-3. Registering Windows

Ensure that the AC adapter is connected or the battery is charged before turning on the machine.

Refer to the below directions to turn on/off the machine.

▶ Turning On

1. Open the machine and adjust the panel.
2. Press Power button and self-diagnosis begins. After self-diagnosis, **Windows XP** home screen appears.
3. Registering the User with **Windows XP Home Edition/Professional**
–In the initial use, after turning on the system the user is required to register himself with **Windows XP**. For user registration process, refer to the following. (The process may differ by system model type, but that difference does not affect the system use.)

▶ Registering the User with **Windows XP Home Edition/Professional**

In the initial use, after turning on the system the user is required to register himself with **Windows XP**.

For user registration process, refer to the following. (The process may differ by system model type, but that difference does not affect the system use.)

1. When the [Welcome to Microsoft Windows] screen appears, click **Next**.



- When [End User License Agreement] appears, read it carefully, select **Yes, I accept. (Y)** and click **Next**.



- The [Please specify a computer name.] screen appears. Fill in **Computer Name (C)** and **Computer Description (O)** fields and click **Skip** button to continue.

To set up the Internet, click **Next** and continue.




4. When the [Register with Microsoft?] screen appears, select **No, not at this time. (N)** and click **Next**.




5. When the [Help protect your PC.] screen appears, select "Help protect my PC by turning on Automatic Update now" and click **Next**.



6. When the [Type the user name] screen appears, enter your **User Name (Y)** and click **Next**.

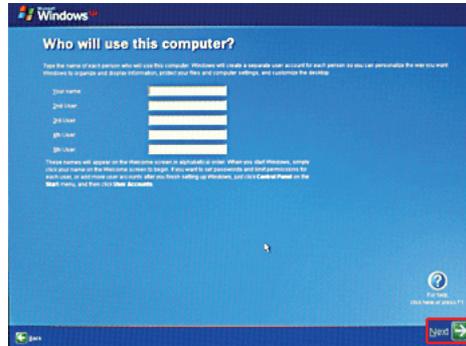

7. When the [Thank you] screen appears, click **Finish (F)**. Now, you have completed the installation process.

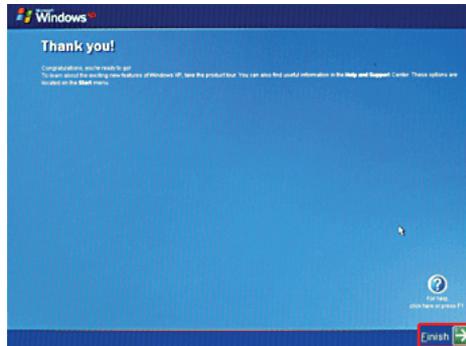

► System Termination

1. To turn off the computer, close all applications and on the **Windows XP** home screen click **Start** and **Turning Off Computer**.



2. When the **[Shutdown Computer]** screen appears, click **Shutdown**.



3. The computer turns off automatically
4. Close the computer.

 Caution	<p>Do not turn off the power forcibly while the hard disk drive lamp is on.</p> <ul style="list-style-type: none"> ■ The data may get damaged.
 Warning	<ul style="list-style-type: none"> ■ Occasionally the system on Windows may not be shut down automatically. When this happens, press Power button for five seconds or longer to forcibly shut down. However, this is an emergency measure and it may cause system errors. It is recommended to click the Start button and select [Turn off Computer] menu to shut down the computer. ■ Abnormal turning-off of the computer may damage data stored in the hard disk. When the program suddenly stops, press the Ctrl + Alt + Delete keys to terminate the program through Windows Task Manager or restart the system. If the some Windows program files have been damaged due to an abnormal shutdown, reinstall damaged programs. LG Electronics is not responsible for data loss caused by your mistakes and negligence.

3-4. Windows XP Overview

Windows XP is stylish, novel, and easy to use. The desktop and task bar images are simplified, and you can easily access applications through the Start menu.

There are more Desktop options for you to customize the environment.

► Windows XP Tour

Windows is an operation system based on which a computer runs. It is recommended to learn the basic functionality of **Windows** for better use of a computer.

1. Click **Start** button and click **Windows XP Tour**.
2. When the window appears, select a **Windows XP** feature item to view detailed description.



3. **Minimize** button
4. **Maximize** button
5. **Close** button


► Windows XP Desktop



1. **Start button**
 - Unfolds Start menu when clicked.
2. **Start menu**
 - Includes programs needed to start Windows.
 - Clicking All Programs displays the list of all programs installed on the system.
3. **Taskbar**
 - Shows all currently running programs.
4. **Toolbar**
 - Clicking the icon switches the language to another such as **Korean/English**.
 - The user can add or delete various toolbars.
5. **Taskbar icons and clock**
 - Allows you to set up resolution, **Power Management** and other basic configurations.
6. **Recycle Bin**
 - Keeps dropped files and folders. Empty **Recycle Bin** deletes files and folders in **Recycle Bin** from the computer. Deleted files and folders can not be restored.

► Start menu

Includes all programs needed to start **Windows**.

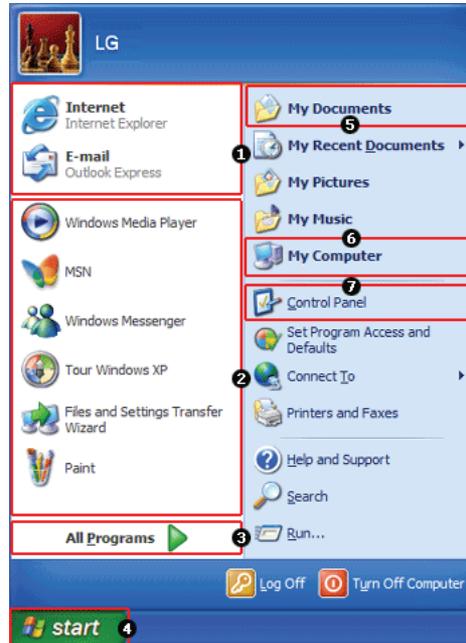


1. Fixed Items
2. Recently Used Programs
 - The order of the programs is subject to change.
3. All Programs
4. **Start**
 - Allows you to easily access most commonly used programs.
5. **My Documents**
 - Keeps your documents.
6. **My computer**
 - Displays information on drives and networks and allows you to retrieve or execute files and folders.
7. **Control Panel**
 - Allows you to customize computer settings.

► Help and Support

Allows you to learn about **Windows** use and get troubleshooting information and technical supports. Please read the menu before using the computer.

1. Click **Start** button and **Help and Support** on **Start** menu.

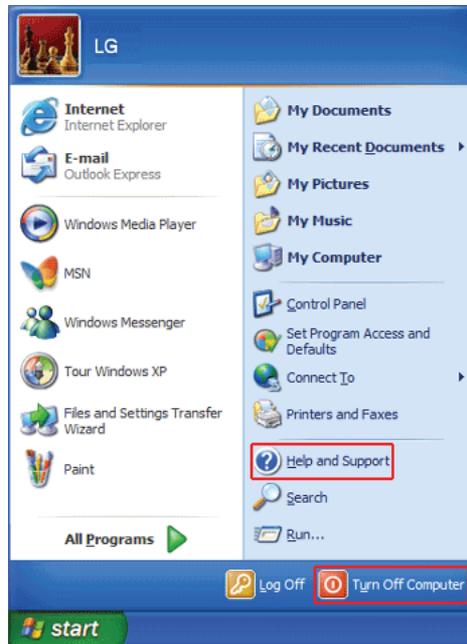

2. Then, the following screen will appear.



3. Allows you to search for wanted items through such methods as **Suggested Topics**, **Full-text Search Matches**, and **Microsoft Knowledge Base**. **Microsoft Knowledge Base** is supported only when the Internet is connected.
4. Helps you with many such troubles as learning about the features of **Windows XP** and getting troubleshooting information through appropriate items.
5. Through the Internet connection, you can ask others for a help and receive the telephone number of the technical support center.
6. You can configure the optimal environment for computers.


3–5. Windows XP Power Management

Windows XP has a self-power management feature.

With that, you can lower the power consumption of Notebook PC.

► Power Option Registration Information

1. On the home screen, click **Start** button and **Control Panel**.
2. Double-click **Control panels** | **Switch to Classic View** | **Power Options** icons.
3. When **Power Option Registration Information** window appears, on **Power Schemes** tab, customize the power management settings for the user environments.

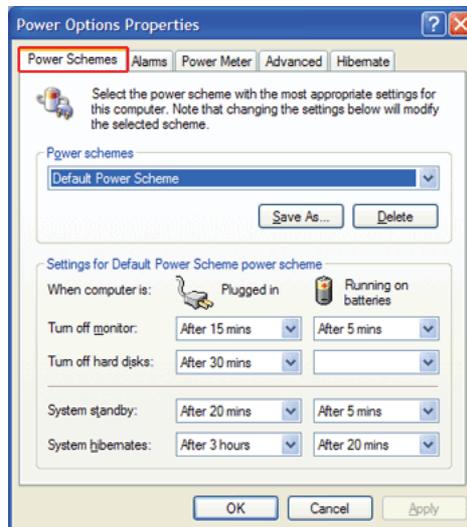

- To find appropriate power management settings for Notebook PC, just select **Mobile Phone/Laptop** in **Power Schemes** dropdown menu. Then decide detailed time frames for **Turn off monitor**, **Turn off hard disks**, **System standby**, and **System hibernates** in **Power Schemes** settings of **Minimal Power Management**.
- In **System Standby**, the monitor and hard disks are turned off to save power.
- In **System standby**, currently worked-on data is not stored on the hard disk and so save it before entering into the standby mode.
- In **System hibernates**, the computer is turned off after all the data on the memory has been saved on the hard disk.

**Caution**

- If you execute **System standby** or **System hibernates** while playing a computer game, a serious error may occur. Be sure to end the game before entering into **System standby** or **System hibernates**.

3-6. Scanning Computer Viruses

Computer viruses are programs that penetrate other programs and files. Computer viruses infect other files through replication, leaving the infected files and programs damaged and unusable. The Notebook PC comes with a vaccine program called **Norton AntiVirus**. You can use **Norton AntiVirus** and **LiveUpdate** free of charge for 90 days.

The displayed image can be modified without prior notice.

Norton AntiVirus can also be installed using **LG Intelligent Update CD**.

▶ Installing and Registering Norton AntiVirus

1. Complete **Windows XP User Registration** and turn on the machine.
2. Double-click the **[Install Norton AntiVirus]** icon on the desktop.

Norton AntiVirus can also be installed using **LG Intelligent Update CD**.




3. When the **Norton AntiVirus** license agreement screen appears, read the agreement and click **[I Agree]**.



4. When the **Norton AntiVirus** installation screen appears, select the destination folder to install the program and click **[Next]**.


When the **Microsoft Windows installer update** window appears, install the update. (You need to be connected to the Internet to install **Microsoft Windows installer**.)

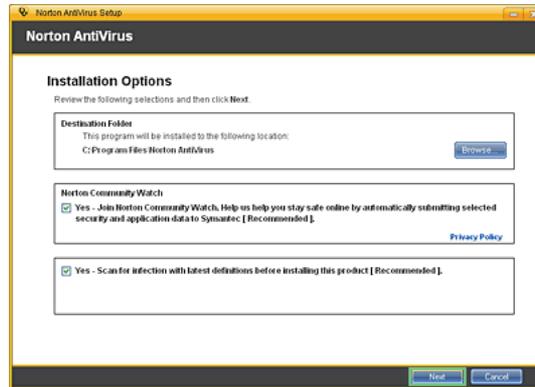


5. The installation program starts to install **Norton Antivirus**.



6. When the installation of **Norton AntiVirus** is finished as below, click **[Next]**.

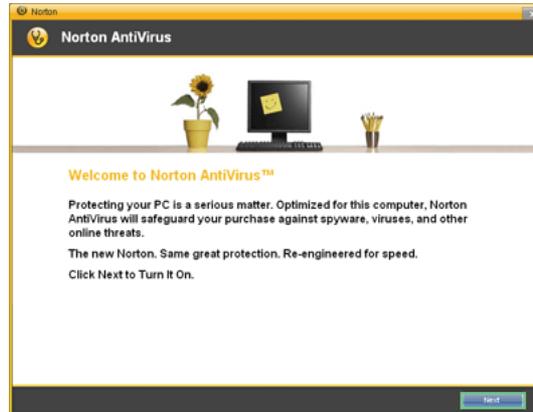


7. When the following screen appears, select **[Continue with my 90 day Subscription]** and click **[Next]**.

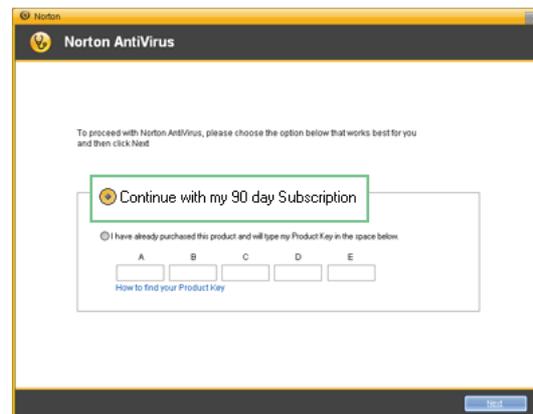

8. When the following screen appears, click **[Finish]** to complete the installation.

If the system is connected to the Internet, the user registration screen may appear. If you want to register the program, fill in the form as


instructed on the screen and click **[Next]**. If you don't want to register, click **[Skip]**.

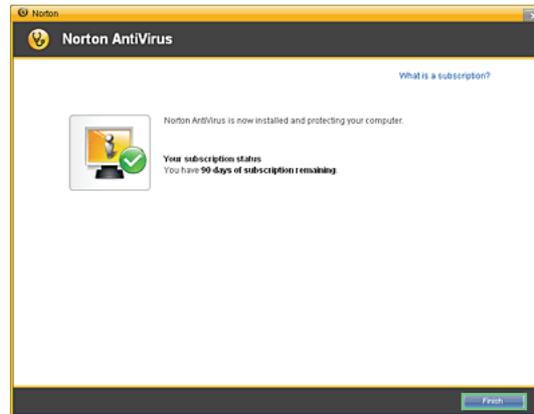


► Updating Norton AntiVirus

A modem or LAN card must be installed in the computer to update **Norton AntiVirus**. Update is available only through the Internet.

1. Click **Start** on the taskbar and select **All Programs** > **Norton AntiVirus** > **LiveUpdate**.
2. **LiveUpdate** downloads and installs the update automatically.

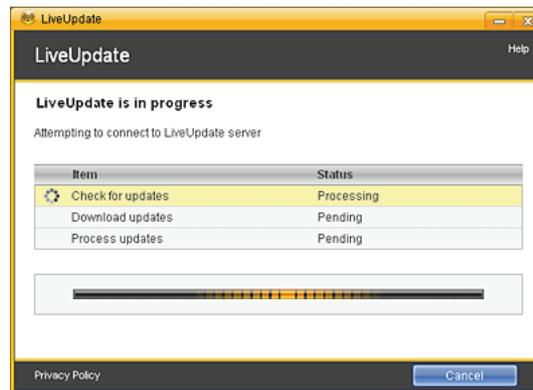

- When the update is complete, click **[Restart]** to reboot the system.

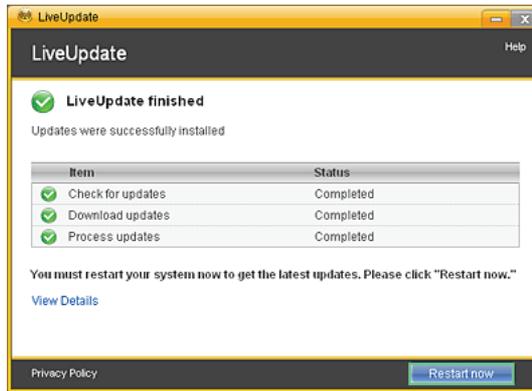


► Scanning Viruses with Norton AntiVirus

- Double-click the **Norton AntiVirus** icon on the desktop, or click [Start] > **All Programs** > **Norton AntiVirus** > **Norton AntiVirus**.
- In the **Norton AntiVirus** tab, click **[Task & Scans]** > **[Run a Scan]**, select the scan method, and start the scan.




- Scan is performed and the result is displayed.

If the system is infected with a virus, the Repair window is displayed. Follow the instructions on the screen to repair the infected files.

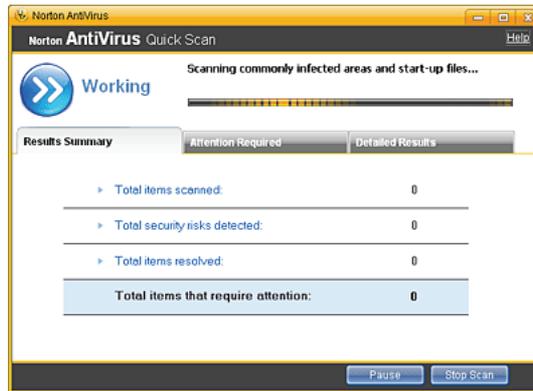

4. When the scan is complete, click **[Finish]** to exit the program.

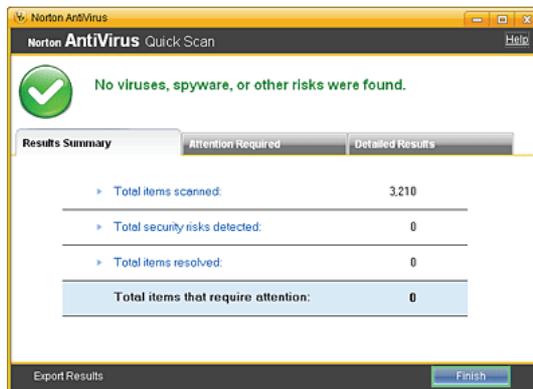

3-7. CyberLink YouCam

CyberLink YouCam is the program that can take picture or moving images through the **Web Camera**.

The figures herein are subject to change without prior notice.

Optional Web Camera is optional, and so it may not be installed in some models.

For more information about its operations, refer to the Help of **CyberLink Youcam**.

► Using Cyberlink YouCam

1. Double-click the **CyberLink YouCam** Icon  on the Desktop to run the program.
2. The main windows of **CyberLink YouCam** appears as follows..



3. **Viewer**: Displays the **Webcam** screen.
4. **Image Gallery**: Use to record pictures and moving images, play back or delete those images.
5. **Animation Effect menu** Can add a frame and animation effect on the screen.
6. **Frame / Animation Effect menu** Can add a frame and animation effect on the screen.

► Major Buttons

1.  **Open Emotion Pictures** Opens various emotion picture files.
2.  **YouCam Environment configuration** Configures the environment for **YouCam**.

3.  **Snapshot** : Takes pictures.
4.  **Burst** : Takes pictures continuously.
5.  **Capture** : Takes moving images.
6.  **YouTube** : Uploads the taken moving images to **YouTube**.
7.  **E-Mail** : Sends the taken pictures or moving images through E-mail.
8.  **Recycle Bin** : Deletes the taken pictures or moving images.
9.  **Help**: Displays the help windows for **YouCam**.

Chapter 4. Input/Output Device




4-1. Using the Keyboard

The keyboard allows the user to input data or give commands.

▶ Keyboard Overview

The keyboard consists of character and numeric keys as well as function keys.

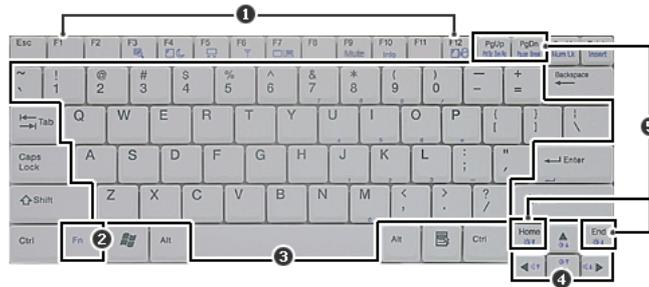

1. Function keys (F1 ~ F12)
 - The usage may differ by OS or applications types.
2. Fn key:
 - Works as part of hot keys if used with function keys.
3. Character and Numeric Keys:
 - Consists of keys, spacebar, numeric keys (0~9), and special symbol keys.
 - Spacebar**: Inserts a white space per hit while you type.
4. Arrow keys:
 - Moves the cursor and others in their respective directions.
5. Pg Up and Pg Dn keys:
 - Moves a screened page up or down.

▶ Using Special Keys



1. **Esc** key

–Terminates or stops a program.

2. **Caps Lock** key

–Used to turn on **Caps Lock** lamp. When this lamp is on, you can type uppercase letters without holding Shift key. To type lowercase letters, press this key again. This does not apply to Korean characters.

3. **Shift** key

–used to type uppercase letters or as part of hot keys.

4. **Windows** key

–Allows you to select **Windows** Start button and open Start menu .

5. **Shortcut Menu Key:**

–Allows you to open the **Windows** shortcut menus. (The shortcut menus are the same as those you can see when right-clicking a file or folder.)

6. **Enter** key

–Used to inform the computer of the completion of one command or to change the line.

7. **Prt Sc** key (**Print Screen**)

–Prints or temporarily saves the current screen display.



Caution

- Spilling a watery substance like coffee or juice on the keyboard may cause a fault, malfunction, or electric shock.
- The keys may not work properly when you use several keys at the same time while playing a PC game. (Please change the key combination settings according to the combinations necessary for the game play.)



- Toggle **Caps Lock** key to turn the **Caps Lock** lamp ON or OFF and to maintain the **uppercase/lowercase** mode. The on/off status is displayed through the lamp on the notebook PC body.
- By holding **Shift** key, you can type uppercase letters when **Caps Lock** is off or lowercase letters when Caps Lock is on.

For more convenient use of Windows XP, remember the following Windows key combinations:

- Displays **Windows XP Help**.



- Displays "Search Result - Computer" window.



- Displays "Search Result" window.



- Displays the execution screen.



- Selects the next window in order displayed on the taskbar.



- Minimizes the current window.



► Hot Keys:


By pressing the following key combinations at the same time, you can immediately start the designated features (such as adjusting the screen brightness).

Fn + F3	Magnifying hot keys.
Fn + F4	Executes the mode defined in the Windows Power Save Mode . (Example: Standby , Hibernate)
Fn + F5	When the user presses Fn + F5 keys, the touchpad mode alternates between Touchpad Disable and Touchpad Enable . (Initialization takes 1 ~ 2 seconds. It is recommended to use after the initialization.)
Fn + F6	Turns the wireless devices (incl. Wireless LAN and Bluetooth) on and off (Bluetooth is optional, and so it may not be installed in some models.)
Fn + F7	Monitor toggle. If you have an external monitor connected to the computer, press Fn + F7 keys to rotate the display mode between LCD only , Monitor only , and LCD + Monitor both in order.
Fn + F9	Mute (Sound ON / Sound OFF)
Fn + ▲	Increases LCD brightness, which can have eight different levels.
Fn + ▼	Decreases LCD brightness, which can have eight different levels.
Fn + ◀	Turns down the volume.
Fn + ▶	Turns up the volume.
Fn + F10	System Information . Displays summarized system information.
Fn + F12	Hibernates (When OSD is installed)
Fn + Num Lk	When the Num Lock lamp is turned on, you can enter numbers (0~9) using the embedded numeric keys. If you press [Fn] + [Num Lk] again, the Num Lock lamp is turned off and you can enter text characters.

4-2. Using the Touchpad (and Mouse)

The touch pad is equipped with the scroll feature and can function as a wheel mouse. The touchpad is compatible with the USB-type mouse in software. The touchpad functions same as the USB-type mouse and is very useful for a program supporting mouse use like the **Windows**.

The touchpad and a USB-type mouse can be used together on the same system.

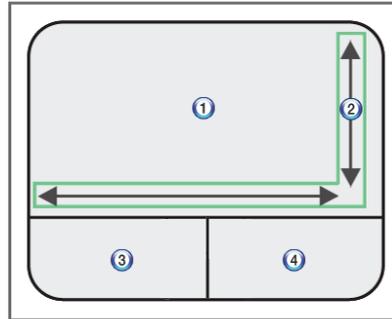

1. Touchpad
–Moves the cursor.
2. Scrolling area
3. Left button
–Used to select or execute programs.
4. Right button
–Functions as the right button of a mouse in most cases. However, the usage may differ depending on programs.

▶ Moving the Cursor (Pointer) on the Screen

Place a finger on the touchpad and glide the finger.



► Click (Select)

Press and release the left button swiftly. (Or tap the touchpad once.)

Do this, for example, to select a menu or icon and to place the cursor to type on a word processor file.

► Double-click (Execute)

Press and release the left button twice swiftly in a series. (Or tap the touchpad twice swiftly in a series.)

Do this, for example, to run a program after selecting its execution file (or icon).



Caution

Notes on Using the Touchpad

- Do not use a sharp object such as a pen on the pad nor peel the cover. It may cause an impairment.
- Do not place more than one finger on the pad nor use it with your hands wet or covered with gloves. The touchpad may not function normally. Oil or dirt at the finger tip can also cause an impairment.
- The touchpad is sensitive. Do not impose an excessive pressure on it. Use the touchpad in a comfortable posture not to do any harm to your finger or wrist.

► Drag/Drop

To drag, click and hold an icon, for example, and move it to another location.

To drop, leave a dragged icon to another location.


To move a file icon, for example, to another folder or to **Recycle Bin**, place the cursor (or the pointer) on the icon, press and hold the left button, and glide another finger on the touchpad until the icon reaches the aimed location. After reaching the destination, release the left button.

1. Drag

–Glide one finger on the pad with another finger pressing and holding the left button.

2. Drop

–Release the left button to drop. (By doing this, you could drop a file into **Recycle Bin**, if you want to.)

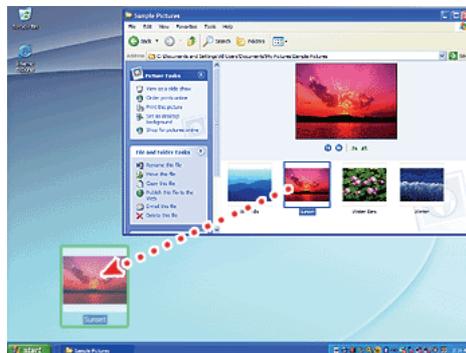

► Click-free Dragging


When activated, this feature allows you to drag an icon without pressing and holding the left button.

Do the following to activate the click-free dragging feature. If it has been done, pressing the left button for an extensive time replaces pressing and constant holding so that you can drag without holding the left button.

1. Click [Mouse Properties] icon in Notification Area.



2. Select Activate click-free dragging (T) and click [Setup] button to adjust the time span for which you should press the left button to execute the feature.


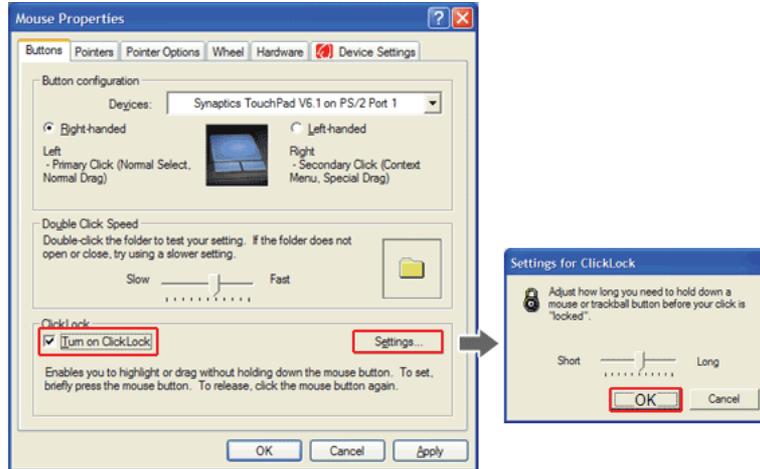


► Scrolling

The touch pad supports the scrolling feature.

To scroll vertically or horizontally, glide your finger along the right or bottom edge. Now the screen follows your finger movements if there is a scroll bar on either edge.

The width of scroll bar may differ by computer model type.

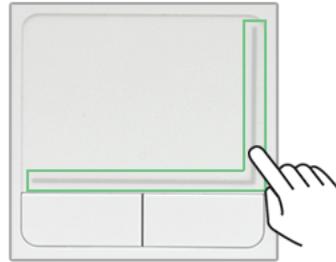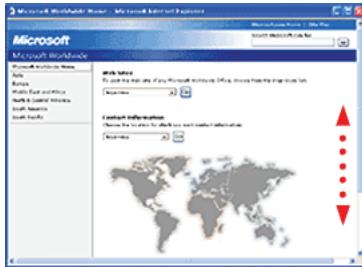


Chapter 5. Connecting Peripherals



5-1. Connecting USB 2.0

Following peripherals can be connected to the Notebook PC.

Those peripherals need to be purchased separately.

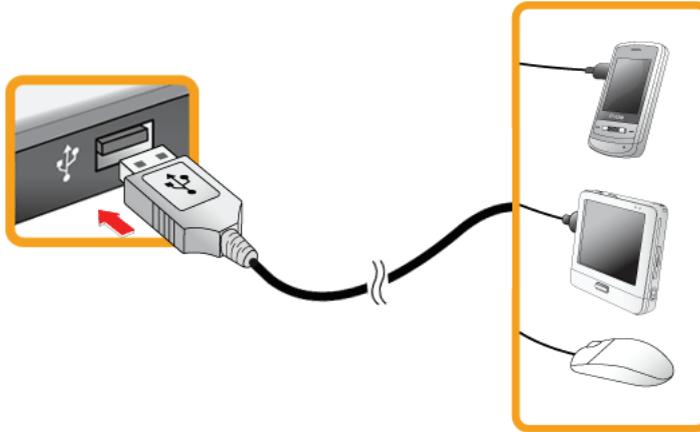

The notebook PC can be connected with other USB supporting devices such as USB keyboard, Hub, digital camera, etc.

5-2. Connecting Monitor



Monitor Toggle Features (Converting the Screen Using the Shortcut Key)

If you have an external monitor connected to the computer, press Fn + F7 keys to rotate the display mode between LCD only, Monitor only, and LCD + Monitor both in order.



- Ensure the monitor power is off before connect external monitor to the notebook pc.

5-3. Using Bluetooth

Bluetooth establishes wireless connection between the **MS Windows** user and the various **Bluetooth**-enabled digital devices such as camera, cell phone, headset, printer, GPS receiver, etc.

Optional **Bluetooth** is optional, and so it may not be installed in some models.

The images and contents of Using **Bluetooth** may differ depending on the **MS-Windows** version.

For more information, refer to the Help of the **Bluetooth** setup program.

▶ Searching for and Using **Bluetooth** Device

1. Double-click the "My **Bluetooth** neighborhood" icon in the desktop or the  icon on the right side of the task bar to run the Bluetooth Setup program.
2. When the following [Add New Connection wizard] appears, select [Fast Mode] and click [Next].



3. The following screen appears after searching for all **Bluetooth** devices. Select the device you want to use and click [Next].




- When the following **[Bluetooth Manager-Bluetooth Security]** window appears, enter the password for the **Bluetooth** device.

For a password, you can use the password provided by the **Bluetooth** device manufacturer or you can set it yourself.



- When you added and connected the **Bluetooth** device, the corresponding icon and device name is displayed in the **Bluetooth Setup** program as follows:

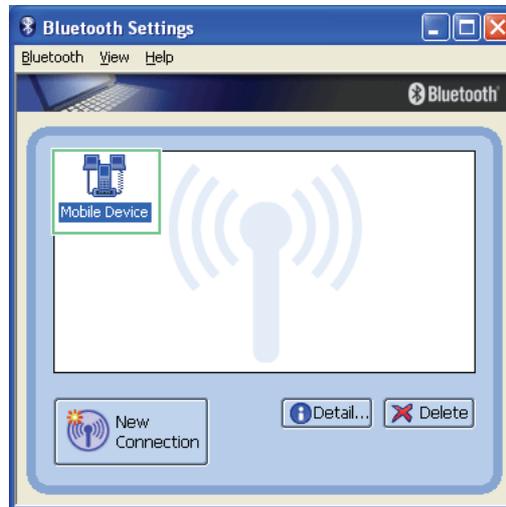

Chapter 6. System Setup



6-1. Starting System Setup

System setup means storing the hardware configuration information of the computer in the CMOS RAM. Through system setup, the computer retrieves various information including current date and time, memory capacity, and H/D capacity and type.

You setup the system when you set passwords, change the booting order, and add new peripheral devices to the machine.

Items displayed on the Setup screen may differ by model type and spec.

- Refer to [Setting the Password].
- Refer to [Changing or Deleting the Password].
- Refer to [Restore the Default Settings].



Caution

- A faulty system setup may cause an error during system operation. Therefore, be careful when changing the System Setup. Do not change the setup unless it is necessary.
- For performance improvement, the CMOS setup menu configuration and default settings may be changed and become different from the images in User Manual.

1. Turn on the notebook PC.
2. Press **F2** key while the "Press F2 for System Utilities" appears on the bottom of the LG logo screen.



3. A while later, the system setup home screen appears.



► Keys Used in System Setup

Keys	Descriptions
Enter	Selects the current item.
Esc	To deselect the current item or to move to the previous screen.
,, , (Arrow keys) ▲ ▼ ◀ ▶	Moves the cursor up, down, left, and right.
+ , -	Increases or decreases the item value.
F1	Displays the Setup Help.
F9	Loads the optimized default values.
F10	Stores new contents or ends the system setup.

**Cursor Keypad**

- These keys are used to move the cursors up, down, right, and left.

