


# LG-A165 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone. Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

## Getting to know your phone

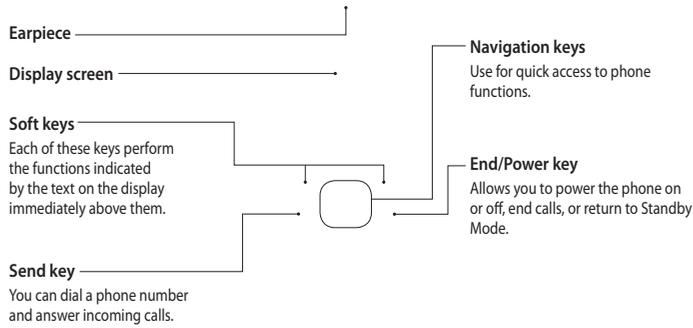

## Installing a memory card

Remove the battery cover and push the memory card slot and flip up the slot. Put the microSD card on the card tray. Make sure that the gold contact area is facing downwards. To remove the microSD card, pull it gently in the opposite direction. The LG-A165 will support a memory card of up to 2 GB.

## Turning Your Phone On and Off

- 1 Press and hold the End key until the power comes on.
- 2 Press and hold the End key until the power goes off.

### Making a call

- 1 Key in the number using the keypad. To delete a digit press Clear key.
- 2 Press to initiate the call.
- 3 To end the call, press .

**TIP!** To enter + when making an international call, press and hold 0.

### Making a call from your contacts

- 1 Press “Search” contacts to open the address book.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press 6 three times.
- 3 To scroll through the contacts and their different numbers use “Up and Down Navigation key”.
- 4 Press to initiate the call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press Menu, select Settings, choose Call. Select **Answer mode** and choose from **Any key** or **Send key only**.

- 3 Enter your message using either the T9 predictive mode or Abc manual mode. You can switch text input mode by pressing .
- 4 Press **Options** and choose **Insert** to add a **Symbol, Template, Phonebook, Business card**.
- 5 Press **Option** and choose **Send to**.
- 6 Enter the phone number or press **Options** and select **Phonebook** or **Recent list** to open your contacts list. You can add multiple contacts.
- 7 Press **Option** and choose **Send**.

## Phonebook Menu 2

### Searching for a contact

- You can search for a contact in your contacts.
- 1 Press **Phonebook** and choose **Search**.
  - 2 Using the keypad enter the first letter of the contact you want to call.
  - 3 To scroll through the contacts and their different numbers use Up and Down .

## Calls Menu 3

- **All calls:** You can view all lists of outgoing or incoming calls.
- **Missed calls:** You can view the unanswered calls.
- **Received calls:** You can view the Received calls.

## FM radio

When phone can't find FM channel or low channel clarity is happening, use ear-mic. Your LG-A165 has an FM radio feature so you can tune into your favourite stations to listen on the move.

**Note:** You will need to insert your headset in order to listen FM Radio more clear. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

### Listening to the radio

- 1 Press Center key and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

**Note:** You can listen to the radio via built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

LG-A165 supports wireless FM. User does not require to insert ear-mic to listen FM in normal condition. In weak FM radio signal area the sensitivity can degrade with wireless and antenna mode. So it is advisable to insert the ear-mic for better and enhanced FM quality.

## Tools Menu 7

**Using the calendar** ( Center key > Tools > Calendar )

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

## Installing the SIM Card and Charging the Battery

### Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

**Important!** > The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

> SIM card support: 2G

### Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Close the battery cover
- 5 Charge your battery

**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## Menu map

<b>1 Messages</b> 1 New message 2 Inbox 3 Drafts 4 Chat box 5 Outbox 6 Sent 7 Listen to voice mail 8 Info messages 9 Templates 0 Settings	<b>2 Phonebook</b> 1 Search 2 New contact 3 Speed dials 4 Copy all 5 Delete all 6 Memory status 7 Information	<b>3 Calls</b> 1 All calls 2 Missed calls 3 Received calls 4 Dialed calls 5 Call duration	<b>4 Games</b> 1 Space ball	<b>5 My stuff</b> 1 My Images 2 My Sounds 3 Others
<b>6 Multimedia</b> 1 Camera 2 Music 3 FM radio	<b>7 Tools</b> 1 Fake call 2 Calendar 3 Alarm 4 Memo 5 Calculator 6 Stopwatch 7 Unit converter 8 World clock	<b>8 Settings</b> 1 Profiles 2 Date & Time 3 Language 4 Display 5 Call 6 Auto keylock 7 Security 8 Power save 9 USB connection 0 Network selection * Reset settings # Memory status	<b>VIVO Chip</b>	

### T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognize the word once all the letters are entered.

### ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

### 123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

## Messages Menu 1

Your LG-A165 includes functions related to SMS (Short Message Service).

### Sending a message

- 1 Press **Center key**, select **Messages** and choose **New message**.
- 2 A new message editor will open. Message editor combines SMS into one intuitive. The default setting of the message editor is SMS mode.

- 2 Holding the phone vertically, point the lens towards the subject of the photo.
- 3 Press OK button to take a photo.

### Music

Your LG-A165 has a built-in MP3 player so you can play all your favorite music.

#### Playing a song

- 1 Press OK button and select **Multimedia** and then choose **Music**.
- 2 Choose All songs then select the song you want to play.
- 3 While music is playing, go to **Option > Pause** to pause the song.
- 4 Press right navigation key to skip to next song.
- 5 Press left navigation key to skip to previous song.
- 6 While music is playing, press **Back** to stop the music and return to the MP3 player menu.

You can view and play **Recent songs, All songs, Play List, Artist, Album, Genre** in the menu.

When you're playing a song,

- 1 Long press right navigation key to FF.
- 2 Long press left navigation key to RV.
- 3 If song is played for more than 3 seconds and if we press left navigation key then it will play the same song from the beginning else it will play the previous song.

- **Dialed calls:** You can view the outgoing calls (called or attempted).
- **Call duration:** Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

## Games Menu 4

Your LG-A165 comes with preloaded games to keep you amused when you have time to spare.

## My stuff Menu 5

You can store multimedia files into your phone's memory. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**.

Press OK button then select **My stuff** to open a list of folders. Your LG-A165 supports JPEG images, MP3 & MIDI sound files.

## Multimedia Menu 6

### Camera

#### Taking a quick photo

Using the camera module built in your phone, you can take pictures of people. Additionally, you can select photos as wallpaper.

- 1 Press OK button and select **Multimedia**, select **Camera** or go directly to camera through short cut key by pressing up navigation key.

**Adding a memo** ( Center key > Tools > Memo )

You can register your own memos here.

**Setting your alarm** ( Center key > Tools > Alarm )

You can set up to 3 alarm clocks to go off at a specified time.

**Using your calculator** ( Center key > Tools > Calculator )

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

**Using the stopwatch** ( Center key > Tools > Stopwatch )

This option allows you to use the function of a stopwatch.

**Converting a unit** ( Center key > Tools > Unit converter )

This converts many measurements into a unit you want.

**World clock** ( Center key > Tools > World clock )

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world.

**Fake call**

### Settings Menu 8

**Changing your profiles** (Center key > Settings > Profiles)

You can change your profile **General**, **Silent**, **Vibrate only**, **Outdoor**, **Flight mode** and **Headset**.

#### Using Flight mode

1 Press Center key > Settings > Profiles > Flight mode.

2 Use this function to switch the flight mode On or Off. You will not be able to make calls, send message when the Flight mode is On.

**Changing your date & time** ( Center key > Settings > Date & Time )

You can set functions relating to the date and time.

**Changing the language** ( Center key > Settings > Language )

You can change the language for the display texts in your phone. This change will also affect the language input mode.

**Changing your display settings** ( Center key > Settings > Display )

You can change the settings for the phone display.

**Call** - You can set the menu relevant to a call by pressing the left soft key [OK] in the Setting menu.

**Auto keylock** - You can make the key pad locked automatically after some time.

**Changing your security settings** ( Center key > Settings > Security )

Change your security settings to keep your LG-A165 and the important information it holds protected.

- **PIN code request:** Choose a PIN code to be requested when you turn your phone on.
- **Phone lock:** Choose a security code to lock your phone, **When power on**, **When SIM changed** or **Immediately**.
- **Call barring**
- **Fixed dial number**

• **Anti Theft Mobile Tracker:** When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is "0000". ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.

• **Change codes:** Changing your **security code** or **PIN2 code** or PIN code, enter the old code followed by the new code.

**Power save** ( Center key > Settings > Power save )

If you set **Always on**, you can save the battery power when you don't use the phone. Choose to switch the power save settings **Always on**, **Night only** or **Off**.

**Changing your USB connection**

1 Press Center key > Settings > USB connection.

2 Make your change to **Mass storage**, **PC suite** or **Always ask**. (Default Always ask will be selected)

**Network selection** - You can also select a network manually and set a network.

**Resetting your phone** ( Menu > Settings > Reset settings )

Use **Reset** to reset all the settings to their factory definitions. You need the security code to activate this function.

The default number is "0000".

**Memory status** - You can check free space and memory usage of phone, SIM card and external memory (if inserted).

This device is not intended for sale in the USA.

### Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

### Part 15 Class B Compliance

This device and its accessories comply with part15 of FCC rules. Operation is subject to the following two conditions:

(1) This device & its accessories may not cause harmful interference.

(2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

### Body-worn Operation

This device has been tested for typical body-worn operations with the distance of 0.79inches (2.0cm) from the user's body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79inches(2.0cm) must be maintained from the user's body. Additionally, Belt clips, holsters & other body-worn accessories may not contain

### Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digitaldevice, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmfulinterference to radio communications. However, there is no guarantee that interference willnot occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.