

### **Part 15.21 statement**

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

### **Part 15.105 statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Part 15 Class B Compliance**

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

## **Body-worn Operation**

This Device has been tested for typical body-worn operations with the distance of 0.79 inches (2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain metallic components.

**CE 0168** P/N: (1.0)

**LG-A175a User Guide** - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

**Disposal of your old appliance**

- When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

## Getting to know your phone

- Hand Strap Hole**
- Earpiece**
- Display screen**
- Soft keys**: Each of these keys performs the functions indicated by the text on the display immediately above them.
- Send key**: You can dial a phone number and answer incoming calls.
- Navigation keys**: Use to quick access to phone functions.
  - 1: Alarm
  - 2: Contacts
  - 3: Calendar
  - 4: Messaging
- End/Power key**: Allows you to power the phone on or off, end calls, or return to Standby Mode.
- Alphanumeric keys**: In most of the time, the numeric keys are used to input number or characters.
- Earphone jack/Charger port**

## Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

**Important!** The plain SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

only 2G/2.5G SIM supported

### Illustrations

- Open battery cover
- Remove the battery
- Insert your SIM
- Insert the battery
- Close the battery cover
- Charge your battery

**WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

## Getting to know your phone

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed via the left and right soft keys. The label on the bottom of the display screen immediately above the soft keys indicates their current function.

Press the left soft key to access the available Menu.

Press the right soft key to access the Contacts.

## On-Screen Icons

	Tells you the strength of the network signal.
	Indicates the battery charge level.
	Indicates new text message(s).
	Indicates new voice message(s).
	Indicates the alarm clock is set.
	Indicates your phone uses the outdoor settings.
	Indicates your phone uses the headset setting.
	Indicates all calls are diverted to another number.
	Indicates your phone is in flight mode.
	Indicates new schedule(s).

### Display Information

- Icon areas**
- Text and graphic area**
- Soft key indicators**

## Menu and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed via the left and right soft keys. The label on the bottom of the display screen immediately above the soft keys indicates their current function.

Press the left soft key to access the available Menu.

Press the right soft key to access the Contacts.

## Entering Text

You can enter alphanumeric characters by using the phone's keypad. To change modes, press the **ABC** key.

### T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

The input method is display at the upper right corner of your phone.

Indicator	Function (English Smart mode)
<b>T9 0-9</b>	T9 Smart abc
<b>T9 abc</b>	T9 Smart abc
<b>T9 0-9 ABC</b>	T9 Smart ABC
<b>123</b>	Numeric

### Making a call

- Key in the number using the keypad.
- Press **ABC** to initiate the call.
- To end the call press **END**.

**TIP:** To enter + when making an international call, press and hold 0.

## Turning Your Phone On and Off

You can power on and power off the phone by pressing or holding the power key.

### Making a call

- Key in the number using the keypad.
- Press **ABC** to initiate the call.
- To end the call press **END**.

**TIP:** To enter + when making an international call, press and hold 0.

## Menu map

- Calendar**
- Contacts**
- 5. Messaging**
  - 5.1 New message
  - 5.2 Inbox
  - 5.3 Outbox
  - 5.4 Drafts
  - 5.5 Sent
  - 5.6 Listen voice mail
  - 5.7 Info messages
  - 5.8 Templates
  - 5.9 Settings
- Profiles**
  - 6.1 General
  - 6.2 Silent
  - 6.3 Vibrate only
  - 6.4 Outdoor
  - 6.5 Flight mode
  - 6.6 Headset
  - 6.7 Tools
    - 7.1 Fake call
    - 7.2 Calculator
- 7. Tools**
  - 7.1 Fake call
  - 7.2 Calculator
- 8. Organizer**
- 9. Settings**
  - 9.1 Date & Time
  - 9.2 Language
  - 9.3 Display
  - 9.4 Call
  - 9.5 Auto keypad
  - 9.6 Security
  - 9.7 Power save
  - 9.8 Network selection
  - 9.9 Reset settings
  - 9.0 Memory status
- 7.3 Stopwatch**
- 7.4 Unit converter**
- 7.5 World clock**
- 7.6 SIM Services**
- 8.1 Alarm**
- 8.2 Memo**
- 9.1 Date & Time**
- 9.2 Language**
- 9.3 Display**
- 9.4 Call**
- 9.5 Auto keypad**
- 9.6 Security**
- 9.7 Power save**
- 9.8 Network selection**
- 9.9 Reset settings**
- 9.0 Memory status**

## Menu 5. Messaging

- Press **ABC** to open the address book.
- Using the keypad, enter the first letter of the contact you want to call.
- To scroll through the contacts use up and down navigation key and to scroll through their different numbers use left and right navigation keys.
- Press **ABC** or **END** to reject the incoming call.

**TIP:** You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Any key** or **Send key** only.

## Menu 2. Contacts

You can search for a contact in your contacts.

- Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen or press **ABC** from the standby screen.
- Using the keypad enter the first letter of the contact you want to call.
- To scroll through the contacts use up and down navigation key and to scroll through their different numbers use left and right navigation keys.

- New contact:** You can add phonebook entries by using this menu.
- Speed dial:** Assign contacts to any of keys between 2 and 8.
- SOS Message:** (Speed dial-> Ok->Key 9) An emergency message can be sent to the predefined number's (3 maximum) by long press of 9 key. On long press of 9 key, a popup comes, Set SOS message? Press Yes then type the required message and input 3 numbers to which you want to send the message in emergency mode and press Save/Done.
- Copy all:** You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory.

## Menu 1. Calendar

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

## Menu 5. Messaging

- Sending a message**
  - Press **Menu**, select **Messaging** and choose **New message**.
  - A new message editor will open. The default setting of the message editor is SMS mode.
  - Enter your message using either the T9 predictive mode or ABC manual mode. You can switch text input mode by pressing **ABC**.
  - Press **Options** and choose **Insert** to add an **Symbol**, **Template**, **Contact**, **Business card**.
  - Press **Send**.
  - Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list select the number and press **Insert** then option.
  - Press **Send**.
- Inbox:** You will be alerted when you have received a message. And it will be saved here.
- Drafts:** This menu allows you to view the messages which is about to be sent or has failed to be sent.
- Sent:** This menu allows you to view the messages which have already been sent, including time and content.
- Listen to voicemail:** This menu provides you with a quick way of accessing your voice mailbox.
- Info message:** Info service messages are text messages delivered by the network to your handset.
- Templates:** There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
- Settings:** This menu allows you to set features of your network service provider.

## Menu 2. Contacts

- Delete all:** You can delete all entries from SIM card memory or Phone memory.
- Information**
  - > **Service dial number:** Access the list of service numbers assigned by service provider safely.
  - > **Own number:** You can save and check your own numbers in SIM card.

### Menu 3. Call history

You can check the record of all missed, dialed, received calls and call duration. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

- All calls:** Displays all the lists of three types (Received/Dialed/Missed calls) by time.
- Missed calls:** This option lets you view the last 40 unanswered calls.
- Dialed calls:** This option lets you view the last 40 outgoing calls (called or attempted).
- Received calls:** This option lets you view the last 40 incoming calls.
- Call duration:** Allows you to view the duration of your incoming and outgoing calls.

### Menu 4. Game

Your LG-A175a comes with preloaded games to keep you amused when you have time to spare. Press **Menu** and select **Games**.

## Menu 5. Messaging

You can enter alphanumeric characters using the phone's keypad. For example, storing names in **Contacts**, writing a message and creating scheduling events in the **Calendar** all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and T23 mode.

**Note:** Some fields may allow only one text input mode (e.g. telephone number in address book fields).

### T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

### ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

### T23 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.




## Menu 2. Contacts

You can search for a contact in your contacts.

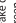 
- Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen or press **ABC** from the standby screen.
- Using the keypad enter the first letter of the contact you want to call.
- To scroll through the contacts use up and down navigation key and to scroll through their different numbers use left and right navigation keys.

- New contact:** You can add phonebook entries by using this menu.
- Speed dial:** Assign contacts to any of keys between 2 and 8.
- SOS Message:** (Speed dial-> Ok->Key 9) An emergency message can be sent to the predefined number's (3 maximum) by long press of 9 key. On long press of 9 key, a popup comes, Set SOS message? Press Yes then type the required message and input 3 numbers to which you want to send the message in emergency mode and press Save/Done.
- Copy all:** You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory.

## Menu 6. Profiles

- You change your profile, then choose from General, Silent, Vibrate only, Outdoor, Flight mode and Headset.
- General:** After setup this profile, the indicator  will be displayed on the standby screen.
- Silent:** Ring tone and vibrator is set to be off. After setup this profile, the indicator  will be displayed on the standby screen.
- Outdoor:** This is the default profile. Ring tone and key tone volume is set to maximum. After setup this profile, the indicator  will be displayed on the standby screen.
- Flight Mode:** Use this option to switch the flight mode On or Off. You will not be able to make calls. Connect to the Internet. Send messages when Flight mode is switched On.

## Menu 7. Tools

- Fake call:** You can set a fake incoming call which will come after specific time with name and number you set. To set Fake Call Go to Fake call settings. Set Fake call to On. Select the name and number for the calls when the set Fake call should involve. Give the Name and Number from whom the Fake call should come and finally Press save to save the settings. Now to invoke the fake call press  from idle screen.
- Calculator:** This contains the standard functions such as Addition, Subtraction, Multiplication and Division.
- Stopwatch:** This option allows you to use the function of a stopwatch.
- Unit converter:** This converts any measurement into a unit you want.
- World clocks:** allows you to determine the current time in another time zone or country.
- SIM services:** This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific services names stored on the SIM card.

## Menu 8. Organiser

- Alarm:** You can set up to 3 alarm clocks to go off at a specific time.
- Memo:** You can register your own memos here.

## Settings Menu 9

- Date & Time:** You can set functions relating to the date and time.
- Languages:** You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
- Display:** You can adjust settings for the phone display.
- Call:** You can set the menu relevant to a call.
- Security:** This menu allows you to set the phone safely.
  - > **Pin code request** - Choose a PIN code to be requested when you turn your phone on.
  - > **Auto lock** - You can set the time interval for which the phone will be locked or immediately.
  - > **Attached mobile number** - With this handset is attached to the handset is attached to the SIMS to the numbers configured by real owner. User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is '0000'. ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.
  - > **Change codes** - Changing your security code or PIN code or PIN2 code, ATMT code, enter the old code followed by the new code.

## Settings Menu 9

- Power save:** If you set Always on, you can save the battery power when you don't use the phone. Choose to switch the power save settings Always on, Night only or Off.
- Network selection:** You can select a network that will be registered either automatically or manually.
- Reset settings:** Use Reset to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is '0000'.
- Memory status:** You can check free space and memory usage of each repository.