

This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada. Operation is subject to the following two conditions:(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 2cm (0.79 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 2cm (0.79 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 2cm (0.79 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Conformité aux normes FCC Part 15 Class B

Cet appareil et ses accessoires sont conformes aux normes FCC Part 15 Class B de la Federal Communications Commission et aux exigences pour appareils numériques ICES-003 Class B d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes : (1) Cet appareil et ses accessoires ne doivent pas provoquer de brouillage préjudiciable, et (2) cet appareil et ses accessoires doivent accepter toutes les interférences reçues, y compris celles pouvant causer un fonctionnement indésirable.

Utilisation comme appareil portatif

Ce téléphone a été testé en vue d'une utilisation type comme appareil portatif, avec une distance de 2 cm (0,79 pouces) entre l'arrière de l'appareil et le corps de l'utilisateur. Pour satisfaire aux exigences de la FCC en matière d'exposition aux radiofréquences, une distance d'au moins 2 cm (0,79 pouces) doit être maintenue entre le corps de l'utilisateur et l'arrière du téléphone. Les pinces de ceinture, les étuis et autres accessoires semblables d'autres marques et contenant des composants métalliques ne doivent pas être utilisés. Les accessoires portatifs empêchant le maintien d'une distance de 2 cm (0,79 pouces) entre le corps de l'utilisateur et l'arrière du téléphone et qui n'ont pas été testés en vue d'une utilisation type comme accessoires portatifs peuvent ne pas satisfaire aux limites d'exposition aux radiofréquences stipulées par la FCC et, par conséquent, ne doivent pas être utilisés.

LG-A225 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone. Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.

P/N: MMBB0000000 (1.0)

Installing the SIM Card and Charging the Battery


Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open the back cover
 - 2 Remove the battery
 - 3 Insert your SIM
 - 4 Insert the battery
 - 5 Close the back cover
 - 6 Charge the battery
- > If the phone won't turn on, or if the display freezes or doesn't respond, follow the instructions for installing the battery again.

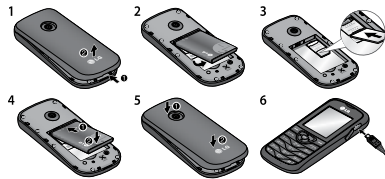

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Messaging

Your LG-A225 includes text messaging and multimedia messaging, and can also receive network service messages.

Sending a Message

- 1 Press **Menu**, select **Messaging** > **Create message**.
- 2 Enter a recipient number and scroll down.
- 3 Enter your message text.
For sending as a text message, skip to step 5.
For attaching multimedia, continue with step 4.
- 4 Scroll down and add the multimedia item (like **Image**, **Video clip** and so on) with Navigation keys (if necessary).
- 5 Press the **OK** key to send the message.

NOTE:

- To select the desired SIM, press **Option** > **Send via** > **SIM1**
- Info. Service is only used for SIM1.

- 1 Press **Menu** and select **Media**.
- 2 Choose **Music**, then select **Playlists**.
- 3 Select **Add**, then enter the playlist name and press **OK** button.
- 4 The **All songs folder** will be displayed. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting **Mark** using **OK** Button.
- 5 Select **Done** to store the playlist.

Camera

Taking a Quick Photo

- 1 In Menu mode, select **Media** > **Camera** to turn on the camera.
- 2 Holding the phone, point the lens toward the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press the **Shutter** key to take a photo.

Entering Text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available on the phone: **ABC** mode and **123** mode.

Note: Some fields may allow only one text input mode (e.g. telephone numbers in the address book fields).

ABC Mode

This mode allows you to enter letters by pressing the key labeled in Keypad.

123 Mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Message Folders

Press **Menu** and select **Messaging**. The folder structure used on your LG-A225 is fairly self-explanatory.

Video Camera

Shooting a Quick Video

- 1 In Menu mode, select **Media** > **Video** to turn on the video camera.
- 2 Point the camera lens toward the subject of the video.
- 3 Press **Shutter** to start recording.
- 4 "Rec" will appear on the viewfinder and a timer will show the length of your video.
- 5 Select **Shutter** to stop recording.

Voice Recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording a voice memo

- 1 In Menu mode, select **Media** > **Voice recorder**.
- 2 Press the **OK** key to start recording.
- 3 Speak your memo into the microphone.
- 4 When you are finished speaking, press **Stop**.

Getting to Know Your Phone

Earpiece

Main LCD

Send key

- Make call to a phone number and answers incoming calls.
- In standby mode: Shows the **Call log**.

Alpha numeric keys

* Long press on Special function keys allow you activate unique features while in Idle mode.

- Call** - Enter + symbol for making international call.
- Mail** - Connect voice mail centre
- Speed** - Speed dials
- SOS** - SOS Mode
- Lock** - Long press to Lock handset.
- Silent** - to go Silent mode in Idle screen

Soft keys

- (Left soft key / Right soft key)
- These keys perform the function Indicated in the bottom of the display.

Menu key / OK key

- Selects menu options and confirms actions.

4-way navigation key

- In Idle mode, access pre-defined menus. In Menu mode, scroll through menu options.

End key

- Switch on/off (hold down)
- End or reject a call.



Calls

Making a Call

- 1 Key in the number using the keypad. To delete a digit, press **Clear**.
- 2 Press **Call** to initiate the call.
- 3 To end the call, press **End**.

TIP! To enter + when making an international call, press and hold 0.

Making a Call from Your Contacts

- 1 Select **Names** from the Standby screen.
- 2 Using the keypad, enter the first letter of the contact you want to call.
- 3 From **Options** select **Call via(SIM)** or press **Call** to initiate the call.

Answering and Rejecting a Call

When your phone rings, press **Call** to answer the call. You can control the volume by pressing the **Up** and **Down** Navigation keys.

Press **Call** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls using **Answer Mode** from **Call Settings**.

Speed Dialing

(Menu > Contacts > Speed dials)

You can assign a speed dial number to a contact you call frequently.

Viewing your Call Log

You can check the log of missed, received and dialed calls if the network supports Calling Line Identification (CLI) within the service area.

• **Inbox** - All the messages you receive are placed in your Inbox.

• **Drafts** - If you don't have time to finish writing a message, you can save what you have done so far here.

• **Outbox** - This is a temporary storage folder while messages are being sent. It also stores any messages that have failed to send.

• **Sent items** - All the messages you send are placed in your Sent folder.

TIP: You can send SMS to many contacts at a time. User can mark/unmark all contacts for sending the message. Only 20 contacts can be marked and if user select **Mark all** only first 20 contacts will be marked. To send the SMS to a particular group of contacts select **Contact groups Option** and select particular group.

Instant Messenger

It provides MSN chat application. You can login with your MSN account.

To play a voice memo

- 1 From the voice recorder screen, press **Options** > **Go to voice recording**.
- 2 Select a file.

Gallery

You can store media file on your phone's memory to give you easy access to all of your images, sounds, videos and others. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in the **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

My memory card

If you have inserted a memory card, it will be displayed as a folder in the **Gallery**.

My images

The **Images folder** contains a folder of default images on your phone, images downloaded by you, and images taken on your phone's camera.

Contacts

Searching for a Contact

- 1 Select **Names** from the standby screen.
- 2 Using the keypad, enter the first letter of the contact you want to call.
- 3 To scroll through the contacts, use navigation keys.

Adding a New Contact

- 1 Press **Menu**, then select **Contacts** and choose **Names**. Then press **Options** - **Add new contact**.
- 2 Enter all the information you have in the fields provided and select **Options-Done**.

Adding a Contact to a Group

You can save your contacts in groups; for example, to keep your work colleagues and family separate. There are a number of groups including **Colleagues**, **Family**, **Friends**, **School** and **VIP** already set up on the phone.

My sounds

The **Sounds folder** contains default sounds, your voice recordings, radio recordings and sound files downloaded by you. From here you can manage and send sounds, or set them as ringtones.

My videos

The **Videos folder** shows the list of downloaded videos and videos you have recorded on your phone.

Others

In the **Others folder**, you can view files that are not saved in the **Images**, **Sounds** or **Videos** folders.


Organiser

Setting your Alarm

You can set up to five alarms to go on at a specified time.

Using the Calendar

When you enter this menu, a calendar appears. A square cursor is located on the current date.

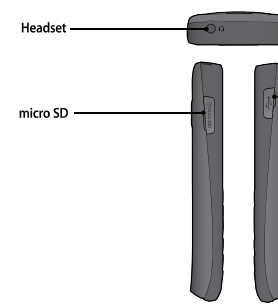

Charger/USB cable connector

TIP! Please ensure that phone is powered on and external memory card is inserted in phone while connecting USB cable for mass storage function.

Note: Depending on your service provider, pre-defined menus may differ.

TIP! Widget Applications: From Idle screen, by pressing **Up** Navigation key User can access widget applications like Weather, Facebook, Twitter, Orkut and Google Search. To scroll through different applications from widget press **right** and **left** navigation keys.

Changing the call settings

You can set call-specific functions. Press **Menu**, select **Settings** and choose **Call**.

<SIM >

• **Call divert** - Choose whether to divert your calls.

• **Call barring** - Select when you would like calls to be barred.

• **Fixed dial numbers** - Choose a list of numbers that can be called from your phone. You will need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

• **Pre-recording** - It can record the voice during the call before the set time. User can select off, 3 sec, 10 sec or 60 sec.

• **Call waiting** - Be alerted when you have a call waiting. This depends on your network provider.

• **Send my number** - Choose whether your number will be displayed when you call someone. This depends on your network provider.

• **Auto-redial** - Choose **On** or **Off**.

- **Free call timer** - Choose whether or not to display the call time.
- **Minute minder** - Set the Minute Minder to **30 Sec**, **1 minute**, **3 minutes** and **5 minutes**, **Set time Manually** to hear a tone during a call.
- **Save new number** - Choose **Yes** or **No**.

<Common setting>

- **Answer mode** - Choose whether to answer the phone using Any key, Send key only.
- **BT answer mode** - Set to **Hands-free** or **Handset**.
- **Call rejection list** - Set the rejected call list.
- **Self call** - You can set a fake incoming call which will come after specific time with name and number you set.

Note: Self call can be activated or deactivated from Idle screen using shortcut code *#*#.

E-mail

Setting up Your E-mail

You can stay in touch on the move using email on your LG-A225. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**, select **Email** > **E-mail provider**.
- 2 Get an account.

Sending an E-mail Using your New Account

To send/receive an email, you should set up an email account.

- 1 In Menu mode, select **Email** > **Inbox**.
- 2 Press **Options** > **Write e-mail** and a new email will open.
- 3 Enter an email address and scroll down.
- 4 Enter a subject and scroll down.
- 5 Enter your message text.
- 6 Press **Options** > **Attach** and add an item (if necessary).
- 7 Press the **OK** key to send the message.

You can move the cursor to another date using the navigation keys; also you can set scheduler for desired date and time.

TIP: User can schedule an SMS, so that it can be sent to the pre define number/contact on Set date and Set time from Left soft key option list > New scheduled SMS.

Adding an Item to Your To-do list

You can view, edit and add To-do list.

Adding Notes

You can register your own Notes here.

Note: To view the secret note, security code needs to be entered; also you can move notes to secret notes or vice versa.

Media

Music

Your LG-A225 has a built-in **Music player** so you can play all your favorite music.

Playing a Song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All songs** then select the song you want to play.
- 3 Select **Pause** to pause the song.
- 4 Select **Next** to skip to the next song.
- 5 Select **Double Play** to start a song from beginning or double press **Double Play** to go previous song.
- 6 Select **Back** to stop the music and return to the **All tracks**.

Creating a Playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

Using the Calculator

The calculator provides the basic arithmetic functions—addition, subtraction, multiplication and division—as well as scientific functions.

Using the Stopwatch

This option allows you to use stopwatch functions.

Date finder

It is a handy tool to help you calculate what the date will be once a certain number of days have passed.

Converting Units

This can convert many measurements into the unit you want.

Adding a City to Your World Time

You can add a required city to the list of world clocks. You can also check the time in major cities around the world.

Applications

My games & apps

Your LG-A225 comes with preloaded games to keep you amused in your spare time. If you choose to download any additional games or applications they will be saved in this folder.

News Hunt - News Hunt is a unique mobile application designed to enable viewing and reading newspapers in the regional languages on the go.

Opera Mini 5 - It is a Java browser application.

NOTE: Please ensure Auto Update is On before using these Applications.

Internet

Accessing the Internet

You can launch the WAP browser and access the homepage of the activated profiles on Internet profiles.

Using Flight Mode

(Menu > Settings > Profiles > Flight mode)

Use this function to switch the flight mode on. You will not be able to make calls, connect to the Internet, send messages when flight mode is switched on.

Changing Your Security Settings

Change your security settings to keep your LG-A225 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Handset lock** - Select on or off to lock the handset or not respectively.
- **Application lock** - To prevent unauthorized use of phone applications, you can enable application lock which requires user to enter a password when accessing applications. Password is the same as the security code (Default password is 0000).
- **Anti-theft mobile tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT(Anti-theft mobile

tracker) feature, enter the security code. And you will need to set ATMT on, and configure the ATMT settings with Sender name, primary number and secondary number. Default security code is "0000." ATMT SMS will contain information about the stolen phone

IMEI, current location (captured as per Cell Broadcast message) & number of the person who is using that handset.

• **Change codes** - Change your PIN code, PIN2 code and Security code.

SOS mode

This enables SOS Mode. After enabling if you press long key of 9 in idle screen, the SOS message is sent and the phone stays in SOS Mode.

Viewing memory status

(Menu > Settings > Memory info)

You can use the memory manager to determine how each memory is used and see how much space is available in the **Internal common memory**, **Internal reserved memory**, **SIM memory** or **Primary storage**

• **Change codes** - Change your PIN code, PIN2 code and Security code.

• **Change codes** - Change your PIN code, PIN2 code and Security code.

• **Change codes** - Change your PIN code, PIN2 code and Security code.

• **Change codes** - Change your PIN code, PIN2 code and Security code.

• **Change codes** - Change your PIN code, PIN2 code and Security code.

• **Change codes** - Change your PIN code, PIN2 code and Security code.

• **Change codes** - Change your PIN code, PIN2 code and Security code.

• **Change codes** - Change your PIN code, PIN2 code and Security code.

• **Change codes** - Change your PIN code, PIN2 code and Security code.

Connectivity

Changing your Connectivity Settings

USB connection mode

1 In Menu mode, select **Settings > Connectivity > USB connection mode**.

• **Mass storage:** Select Mass storage and connect the handset to your computer. You can then drag and drop files to the LG-A225 removable device folder.

• **PC Suite:** Select PC Suite and connect the handset to your computer in PCSync mode.

• **Always ask:** Selecting this option will allow you to choose which method to use every time you connect your handset to your computer.

Note: To use the USB mass storage function, you will need to select a memory location (Internal memory/ External memory) at first, if you want to select the External memory insert a memory card.

setting. You can also set the **External memory** when the memory card is inserted.

PC Suite

Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

Backing up and restoring your phone's information

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the PC suite from the popup menu in your phone and run PC Suite Program in your PC.
- 3 Click the "Phone Backup & Restore" in PC suite (Tools > Phone Backup & Restore), and select Backup or Restore.
- 4 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Now Select Back Up or Restore and Click Finish.

Changing Your Bluetooth Settings

1 In Menu mode, select **Settings > Connectivity > Bluetooth**.

2 Choose **Settings** for the following options:

• **My device visibility** - Choose whether to show or hide your device to others.

• **My device name** - Enter a name for your LG-A225.

• **Supported services** - Shows what services are supported.

• **My address** - View your Bluetooth address.

Pairing with Another Bluetooth Device

By pairing your LG-A225 and another device, your handset will create a password by default every time you connect to another handset via Bluetooth.

- 1 Check your Bluetooth is On and Visible. You can change your visibility in the Settings menu by selecting **My device visibility** and then **Visible**.
- 2 Select **Search new device** from the Bluetooth menu.

5 Your information will be Backed up or Restored.

Viewing your phone files on your PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Select the PC suite from the popup menu in your phone and run PC Suite Program in your PC.
- 3 Open LG PC Suite icon in your PC which is already installed, after searching the phone it will be connected automatically.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Note: Install PC Suite using CD provided and follow the Installation Guide.

3 Your LG-A225 will search for devices. When the search is complete, Add icon and **Refresh** will appear on the screen.

4 Choose the device you want to pair with, select Add icon, enter the passcode and then press the Center key.

5 Your phone will then connect to the other device. The same passcode will need to be entered on this device.

6 Your passcode-protected Bluetooth connection is now ready.