



LG LG-A310 User Guide

Congratulations on your purchase of the advanced and compact LG-A310 phone by LG, designed to operate with the latest digital mobile communication technology.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Part 15 Class B Compliance

This device and its accessories comply with part15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received,
including interference that may cause undesired operation.

Body-worn Operation



This device has been tested for typical body-worn operations with the distance of 0.79inches (2.0cm) from the user's body.

 
To comply with FCC RF exposure requirements, a minimum separation distance of 0.79inches(2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain metallic components.

Calls


Making a call or a video call


- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.
- 4 To end the call, touch the end key.

TIP! To enter + for making an international call, touch and hold .

TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.


Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the **Name** field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.






 
- 3 From the filtered list, touch the call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.


Answering and rejecting a call

When your phone rings, touch the send key to answer the call.

To mute the ringing, touch . This is useful if you forgot to change your profile to **Silent** for a meeting. Touch **Reject** to reject an incoming call.

In-call options


-  Touch this icon to put a call on hold.
-  Touch this icon to turn off the microphone so the person you are talking to cannot hear you.
-  Touch this icon to turn on the speaker phone.
-  Choose from a list of further in-call options, including go to messages, so you can check your messages, go to contacts to add or search contacts during a call. You can also end the call from here by touching end call.
-  Choose to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.
-  Choose to add another person to the call.

 Choose to search your contacts during a call.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.





Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen, touch  and select **Contacts** on the **COMMUNICATION** tab, then select **Speed dials**.
- 2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 3 Your contacts will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the **Name** field box and enter the first letter of the name of the contact required.

Calls

Making a second call

- 1 During your initial call, touch  and type the number you want to call.
- 2 Touch  to connect the call.
- 3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 4 To change between the calls, touch  or touch the number of the held call.
- 5 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

TIP! Touch any single call log entry to view the date, time and duration of the call.


NOTE: You will be charged for each call you make.

Viewing your call logs

From the home screen, touch  and select **Call history** on the **COMMUNICATION** tab.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Changing the call settings

You can set the menu relevant to a call. From the home screen, touch  and select **Call settings** on the **SETTINGS** tab.

Call divert - Choose whether to divert your calls.

Call waiting - Be alerted when you have a call waiting. (Depends on your network provider.)

Call barring - Select when you would like calls to be barred.

Fixed dial numbers - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Reject call with SMS - When you reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

Call costs - View the charges applied to your last call or all calls. (This service is network dependent, some operators are unable to support this.)


Call durations - View the charges applied to your dialled numbers and the call duration of all your calls; received and dialled. (This service is network dependent, some operators are unable to support this.)

Data volume - View the amount in kilobytes of all your received and sent data.

Common settings - Please see **Changing the common call setting**.

Video call settings - Change the settings of your video calling.

Changing the common call setting

- 1 From the home screen, touch  and select **Call settings** on the **SETTINGS** tab.
- 2 Scroll and touch **Common settings**. From here you can adjust the settings for:

Call reject - Slide the switch to **ON** to highlight the reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those

not in your contacts) or with no caller ID. Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.


BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to touch a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

Proximity sensor - Slide the switch left for **ON** or right for **OFF**.


Contacts

Searching for a contact

- 1 From the home screen, touch  and select **Contacts** on the **COMMUNICATION** tab.
- 2 Touch **Search**.
- 3 You see a list of contacts. Typing in the first letter of a contact's name in the **Name** field box will jump the menu to that alphabetical area of the list.



TIP! The alphabetical keypad is displayed once you tap the **Name** field box.

Adding a new contact

- 1 From the home screen, touch  and select **Contacts** on the **COMMUNICATION** tab, then touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager**, **Fax**, **VT** and **General**. When you have finished, touch **Close**.

- 5 Add an email address and IM address.
- 6 Assign the contact to one or more groups. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.
- 7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address**, **Memo**, and **Livecon**.
- 8 Touch **Save** to save the contact.


Creating a group

- 1 From the home screen, touch  and select **Contacts** on the **COMMUNICATION** tab, then touch **Groups**.
- 2 Touch **Add group** or touch  and select **Add group**.
- 3 Enter a name for your new group. You can also assign a ringtone to the group.
- 4 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

Changing your contact settings

You can adapt your contact settings so that your contacts suits your own preferences.

- 1 From the home screen, touch  and select **Contacts** on the **COMMUNICATION** tab, then touch **SETTINGS**.
- 2 From here, you can adjust the following settings:

Contact list settings - Adjust the **Contacts location**, **Name display**, and **Quick command key** settings.

Copy - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time, or all at once.

Move - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to.


Send all contacts via Bluetooth - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - Performs a backup your contacts on to the external memory. This option requires external memory.

Restore contacts - Restores your contacts from the external memory. This option requires external memory.

Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.

Viewing information

- 1 From the home screen, touch  and select **Contacts** on the **COMMUNICATION** tab, then touch **Information**.
- 2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (showing your memory usage) and **My business card**.

TIP! To add your own business card, select **My business card** and enter your details as you would for any contact. Touch **Save** to finish.

Messaging/E-mail

Messaging

Your phone combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 From the home screen, touch  and select **Messaging** on the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.

 



WARNING: If an image, video or sound is added to an SMS, it will be automatically converted to an MMS and you will be charged accordingly.

 
Entering text

There are five ways to enter text: **Keypad**, **Keyboard**, **Handwriting-Screen**, **Handwriting-Box**, and **Handwriting-Double Box**.

You can **choose** your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch  to choose the writing language.

Touch  to change from numbers, symbols and text input.

Use **Shift** to change between capital or lowercase input.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Abc mode

This mode allows you to enter letters by touching the key labeled with the required letter once, twice, three or four times until the letter is displayed.


123 Mode

This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Touch the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.


Handwriting recognition

In Handwriting mode you simply write on the screen and Your phone will convert your handwriting into your message. Select **Handwriting-Screen** or **Handwriting-Box** according to your preferred view.

Setting up your email

From the home screen, touch  and select **E-mail** on the **COMMUNICATION** tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

Microsoft Exchange email account

Email address - Enter the account email address.

Server address - Enter the email server address.

Domain - Enter the account domain (Optional).

Username - Enter the account's username.

Password - Enter the account's password.

Now your account is set up, it will appear in the list of accounts in your E-mail folder.

Retrieving your emails


You can automatically or manually check your account for new emails. To check manually:

- 1 From the home screen, touch  and select **E-mail** on the **COMMUNICATION** tab.


Messaging/E-mail

2 Touch the account you want to use.

Sending an email using your new account

- 1 From the home screen, touch  and select **E-mail** on the **COMMUNICATION** tab.
- 2 Touch **New e-mail** and a new email will open.
- 3 Complete the message.
- 4 Touch **Send** and your email will be sent.

Changing your email settings

- 1 From the home screen, touch  and select **E-mail** on the **COMMUNICATION** tab.
- 2 Touch  and select **E-mail settings** and then you can adapt the following settings:
 - E-mail accounts** - You can set up an email account.
 - Preferred e-mail**
 - Allow reply e-mail** - Choose to allow the sending of read confirmation messages.
 - Request reply e-mail** - Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your LG-A310 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd. & Reply - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in roaming - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.


Signature - Switch this feature **ON** and create an email signature.

Priority - Choose the priority level of your email messages.

Mail sending size - Set the maximum size of sending mail.


E-mail counter - Input the date you want. You can check emails you sent during that period.

Message folders

You'll recognise the folder structure used on your LG-A310, which is fairly self-explanatory. From the home screen, touch  and select **Messaging** on the **COMMUNICATION** tab. And choose from the list below:

Inbox - All the messages you receive are placed into your inbox.

TIP! When you receive the message, you can reply quickly by using **Quick reply** function. This is useful if you need to reply the message during a meeting.

TIP! While you see the message, touch  and select **Extract**. You can extract the information such as a number, e-mail address or web address from the selected message.

Drafts - If you do not finish writing a message, you can save what you have done in this folder.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you have sent are placed in this folder.


My folders - Create folders to store your messages.

Templates - A list of pre written useful messages, useful for a quick reply.

Emoticons - You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Settings - Your message settings are predefined so that you can send messages immediately. If you would like to change the settings, you can do this using the settings options.

Changing your text message settings

From the home screen, touch  and select **Messaging** on the **COMMUNICATION** tab. Then choose **SETTINGS** and **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to **ON** to receive confirmation that your messages have been delivered.

Messaging/E-mail


Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

From the home screen, touch  and select **Messaging** on the **COMMUNICATION** tab. Then choose **SETTINGS** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow delivery reports.

Read reply - Choose to request and/or allow read replies.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your messages are stored at the message centre.


Slide duration - Choose how long your slides appear on the screen by default.


Creation mode - Choose to create multimedia messages freely or restrictively.

Delivery time - Choose how long to wait before a message is delivered.

Multi msg centre - Choose or add a multimedia message centre.

Changing your other settings

From the home screen, touch  and select **Messaging** on the **COMMUNICATION** tab, then touch **SETTINGS**.

Voicemail - Touch  to add a new Voicemail service. Contact your network operator for more information about the service they provide.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

Message counter - Choose to set period for counting messages.

Info. service - Choose whether to turn cell broadcast on/off and select your channels and languages.

Social network services (SNS)

With your phone, you can enjoy the social network services and manage your micro-blog on SNS. You can update your own SNS place status and view your friends' SN updates. Touch **Social network** menu and select the site as below: Orkut, Facebook, Twitter, Picasa, Flickr, and Myspace.

TIP! Facebook is a native application preloaded onto your phone, and easy to access. Twitter is a java application based on Java technology. Other applications access to the WAP (Wireless Application Protocol) services.

NOTE: An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others. You can also write comments by selecting + icon.

Profile: You can select the Wall > Status updates and write the current status. See your info detail and upload the photo by touching Album > Upload Photo. Choose from Go to images or Take a picture, and then input some caption with images.

Messaging/E-mail

Friends: You can find many friends in SNS and view their status. Search your friends in facebook by selecting Search tap.

Message: You can see the Inbox/Sent folder, and write a SN message.

TIP! Using Facebook Feed Widget

You can add the facebook feed widget to your home screen. Drag the facebook feed widget from widget tray and touch OK. You can also access the facebook application directly by touching up the feed widget.

Camera




Taking a quick photo

- 1 Press the camera key on the right side of the phone.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Press the camera key lightly and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the photo subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the camera key fully to capture the shot.


TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen. The following options are available:

-  Touch to send the photo as a message, e-mail or via Bluetooth.
-  Set the image you have just taken as home screen, a contact image or in your start up/shut down screen.
-  Touch to edit the photo.
-  Touch to edit the name of the selected picture.
-  Touch to return to the previous menu.
-  Touch to delete the photo you have just taken and confirm by touching **Yes**. The “Deleted” message appears.
-  Touch to take another photo immediately. Your current photo will be saved.
-  Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch  to open all the advanced settings options.

Shot mode - Choose from **Normal shot**, **Continuous shot** and **Panorama shot**.

Colour Effect - Choose a colour tone to apply to the photo you're taking. There are four colour tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

NOTE: You can change a picture taken in colour to black and white or sepia, but you cannot change a picture taken in black and white or sepia to colour.

ISO - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can not use the flash. Select the ISO value from **Auto**, **100**, **200**, **400** and **800**.

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for the group photo you want to be part of.

Quality - Choose from **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

Focus - Choose from **Auto focus**, **Face tracking** and **Off**.

- **Auto focus** - Your camera can automatically adjust the focus for a clear, sharp image with a single press of the camera button.

Camera

- **Face tracking** - Your camera can automatically identify face and have another rectangular for better focus.
- **Off** - Focus mode is off.
- **Grid screen** - Choose from **Off**, **Simple cross** or **Trisection**.
- **Reset settings** - Reset all the camera settings.

View mode - Choose your view mode.

Swap cam - Switch between the inner camera and the outer camera.

More...





- **Memory** - Choose whether to save your photos to the **Handset memory** or to the **External memory**.
- **Hide icons** - Choose the camera settings icons to be hidden manually or automatically.
- **Image stabilization** - Select **On** to compensate for unsteady hands.
- **Show captured image** - Choose to view the picture with options after taking a photo.
- **Shutter sound** - Select one of the three shutter sounds.

Video camera

Making a quick video









- 1 Press the camera key on the right side of the phone for a few seconds.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 2 Holding the phone horizontally, point the lens towards the subject of the video.
- 3 Press the camera key on the phone once to start recording. Or touch .
- 4 **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 5 To pause the video, touch  and resume by selecting .
- 6 Touch  on screen or press the camera key a second time to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The following options are available:

-  Touch to play the video.
-  Touch to send the video as a message, e-mail or via Bluetooth.
-  Touch to edit the video.
-  Touch to edit the name of the selected picture.
-  Touch to return to the previous menu.
-  Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video straight away.
-  Touch to view a gallery of saved videos and images.

Video camera

Using the advanced settings

From the viewfinder, touch **SETTINGS** to open all the advanced settings options.

Colour effect - Choose a colour tone to use on your new video from **Off, Black & White, Negative,** and **Sepia.**

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent,** and **Cloudy.**

Quality - Choose from **Super fine, Fine** and **Normal.** The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Set time - Set a time limit for your video. Choose whether or not to send the video as an MMS.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

View mode - Choose your view mode.

Select storage - Choose whether to save your videos to the **Handset memory** or to the **External memory.**

Voice - Choose whether or not to record a video with sound.


Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Swap cam - Switch between the inner camera and the outer camera.

Reset settings - Reset all the video camera settings.

Your photos and videos

Viewing your photos and videos

- 1 From the home screen, touch  and select **Gallery** on the **ENTERTAINMENT** tab. Or, touch  on your camera preview screen. You can check your pictures and videos.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.
- 4 To play the video touch . To pause playback touch .

TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.






Using zoom when viewing a photo

To zoom in touch “+” repeatedly. To zoom out touch “-”. Use the thumbnail in the bottom right corner to move the focus area.


Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the screen bottom after touching the loudspeaker symbol. Alternatively, use the volume keys on the side of the phone.

Capturing an image from a video


- 1 Select the video you would like to capture an image from.
- 2 Touch  to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the  menu.
- 3 Touch  and then select .
- 4 The image will appear on the screen, with its image name.
- 5 Touch  to return to the video.
- 6 The image will be saved in your **My folder** and appear in the **Gallery**.

Your photos and videos

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.


Viewing your photos as a slide show

Slide show mode will show all the photos in your **Gallery** one at a time as a slide show. Videos can not be viewed as a slide show.


- 1 Touch  in the **Gallery**, then scroll and select **Slide show**.
- 2 The slide show will begin.


There are options within slide show:

Touch  to go back.




 Touch to pause the slide show on a particular photo.

 Touch again to resume playback.


 

 Touch to increase or decrease the speed of the slide show.


To show random, touch  and select **Random on**.

Setting a photo as a wallpaper


- 1 From the home screen, touch  and select **Gallery** on the **ENTERTAINMENT** tab.
- 2 Touch the photo you would like to set as wallpaper.
- 3 Touch .
- 4 You can change the size of the picture with .
- 5 When you are happy with the picture touch **Set**.
- 6 Choose from the options what you want to change: **All**, **Widget**, **Speed dial**.


Editing your photos


- 1 Open the photo you'd like to edit and touch  to bring up the options.
- 2 Touch the icons to alter your photo:
 -  Move your finger across the screen to select the area.
 -  Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.


 Add writing to the picture.


 Decorate your photo with stamps. Choose from the different stamps and colours and touch your photo where you want to place them.


 Erase whatever you draw. You can also select the eraser size.


 Touch to send the photo as a message, e-mail or via Bluetooth.


 Touch to return to the gallery.

 Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file**, enter a file name.


 Undo the last effect or edit you made to the photo.

 Touch to open further effect options. There are also more advanced editing options.



 Touch to open the Filter options.

 You can adjust the selected photo.

Adding text to a photo


- 1 From the editing screen, touch  .
- 2 Select **Signature** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the keypad and touch **Save**.
- 4 Move the text by touching it and sliding it to where you want it.

Cropping a photo



- 1 From the editing screen, touch  .
- 2 Choose the shape you want to use to crop the picture.
- 3 Drag the box over the area you want to crop.
- 4 When you are finished with your selection, touch  .

Your photos and videos

Changing your photo

- 1 From the editing screen, touch .
- 2 Choose to alter your photo:
 - Rotate** - Rotate or flip your photo for fun or better view.
 - Mirror** - Reverse the photo to a mirror image.
 - Resize** - Resize your photo.
 - Frame** - Add a frame to your photo.
 - Morphing** - Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect. If the face is detected, it will let you know the positions of the eyes and the ending points of the mouth on your photo. Select the morphing style you would like to use on the phone.
 - Colour Accent** - Add a colour accent to a photo.
 - Colour Swapping** - Swap the colours in a photo.
 - Add Images** - Add some clip art on the photo.
 - Red-eye reduction** - Reduce the red eye on your photo.

Adding an effect to a photo

- 1 From the editing screen, touch .
- 2 Choose to apply any of the options to the photo:
 - Face beautify** - Automatically detect a face in the image and brighten it up.
 - Tunnel effect** - Lomo camera effect.
 - Colour negative** - Give a colour negative effect.
 - Black and white** - Give a black and white colour effect.
 - Sepia** - Give a sepia effect.
 - Blur** - Give a blurred effect.
 - Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose  to cancel.
 - Mosaic blur** - Touch to apply a blurred mosaic effect to the photo.
 - Oil painting** - Give an oil painting effect.

Sketch - Apply an effect that makes the picture look like a sketch.

Emboss - Give an emboss effect.

Solarize - Change the effect of exposure to the light.

Vivid - Give an effect of clearness and brilliance.


Moonlight - Change the light to look like moonlight.

Antique - Give an old-looking effect.





Glow - Give a light beam effect.


Cartoon - Give a cartoon effect.

Water color - Give a watercolour effect.



- 3 To undo an effect simply touch **Undo** .

Trimming the length of the video

- 1 Open the video you want to edit, select  and touch .
- 2 Select **Edit** and choose **Trim**.
- 3 Touch  and set the new start and end points using .



- 4 Touch **Save** or, alternatively, touch  to return to the gallery and discard the changes.

Merging two videos together






- 1 Open the video you want to edit, select  and touch .
- 2 Select **Edit** and choose **Video merge**.
- 3 The **My stuff** folder will open, select either **My videos** or **My memory card** (if fitted). Choose the video you would like to merge and touch **Select**.
- 4 Touch and slide the photo to move it to the end or the beginning of the video.
- 5 Touch **Effect** to choose how the videos merge together: **None**, **Pan zoom**, **Oval**, **Uncover**, **Blind**, **Checker board**, **Dissolve**, **Split** or **Shape diamond**.
- 6 Touch **Save** followed by **Yes** to save the new merged video. Select whether to replace the original file or save as a new file.
- 7 Repeat these steps to merge more videos.

Your photos and videos



Merging a photo with a video



- 1 Open the video you want to edit, select  and touch .
- 2 Select **Edit** and choose **Image merge**.
- 3 The **My stuff** folder will open select either **My Images** or **My memory card** (if fitted). Choose the photo you would like to merge into your video, and touch **Select**.
- 4 Touch and slide the photo to move it to the end or the beginning of the video.
- 5 Touch **Effect** to choose how the photo and video merge together: **None**, **Pan zoom**, **Oval**, **Uncover**, **Blind**, **Checker board**, **Dissolve**, **Split** or **Shape diamond**.
- 6 Touch **Save** followed by **Yes**. Select whether to replace the original file or save as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video



- 1 Open the video you want to edit, select  and touch .
- 2 Select **Edit** and choose **Text overlay**.
- 3 Enter your text using the keypad and select **Save**.
- 4 Touch  and indicate when you want the text to appear using .
- 5 Touch the area of the screen where you want the text to appear and touch **OK**.
- 6 Touch  to indicate when you want the text to disappear.
- 7 Touch **Preview** to ensure you are happy with the text overlay.
- 8 Touch **Save** and choose to save over the original file or as a new file.
- 9 Repeat these steps to add more text.

Overlaying a photo



- 1 Open the video you want to edit, select  and touch .
- 2 Select **Edit** and choose **Image overlay**.

- 3 The **My stuff** folder will open select either **My images** or **My memory card** (if fitted). Choose the photo you would like to overlay your video and touch **Select**.
- 4 Touch and indicate when you want the photo to appear using .
- 5 Touch the area of the screen where you want the photo to appear and touch **OK**. If the photo is too big it will overlay the whole screen, not just the selected area.
- 6 Touch  to mark when you want the photo to disappear.
- 7 Touch **Preview** to ensure you are happy with the photo overlay.
- 8 Touch **Save** and choose to save over the original file or as a new file.
- 9 Repeat these steps to add more photos.

Adding a soundtrack to your video

- 1 Open the video you want to edit, select  and touch .
- 2 Select **Edit** and choose **Audio dubbing**.
- 3 The **My stuff** folder will open select either **My sounds** or **My memory card** (if fitted). Choose the track you would like to add to your video and touch **Select**.
- 4 The original audio track on your video will be erased. Touch **Yes** to continue.
- 5 If the audio is shorter than the video, choose whether to play it **Once** or to **Repeat** it.
- 6 Select whether to replace the original file or save as a new file.



Adding a voice recording

- 1 Open the video you want to edit, select  and touch .
- 2 Select **Edit** and choose **Voice recording**.

Your photos and videos

- 3 The quality of the original audio will be affected by adding a voice recording. Touch **Yes** to continue.
- 4 Touch  to view your video. When you get to the part you want to record your voice over, touch .
- 5 Touch  or  to stop recording and playback.
- 6 Touch **Preview** to ensure you are happy with the voice recording.
- 7 Touch **Save** followed by **Yes** to save. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more voice recordings to the video.






Changing the speed of your video

- 1 Open the video you want to edit, select  and touch .
- 2 Select **Edit** and choose **Time scaling**.
- 3 Select one of the four speed options: **x4**, **x2**, **x1/4**, **x1/2**.

- 4 Choose to save over the original file or as a new file.

NOTE: Only 3gp Video files can be edited.

Creating a movie

- 1 From the home screen, touch  and select **Muvee studio** on the **ENTERTAINMENT** tab.
- 2 Touch  to add an image. Tap the check box for the images you want to include, then select **Insert**.
- 3 Touch the style tab to choose a **Muvee style**. The default style is **Classic Sepia**.
- 4 Touch **Default sound** to change the sound.
- 5 Touch  to see what you've created.
- 6 Touch  then **Play order** to create an order. You can make it random or sequential.
- 7 Touch  then **Save location** to choose where to save the movie.

Entertainment

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. To access the **My stuff**, touch  and select **My stuff** on the **ENTERTAINMENT** tab. You can open a list of the folders that store all your multimedia files.

TIP! To delete any files in **My stuff**, touch  then **Delete**.

Images


Images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

My images options menu

The options available to you in **Images** depend on the type of image you have selected. All options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Slide show** and



File info. options are available for default images.

Sending a photo

- 1 From the home screen, touch  and select **My stuff** on the **ENTERTAINMENT** tab, then select **Images**. Select the picture you want.
- 2 Touch **Send** and choose from **Multimedia message**, **E-mail** and **Bluetooth**.

Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

- 1 From the home screen, touch  and select **My stuff** on the **ENTERTAINMENT** tab, then select **Images**. Select the picture you want and touch .
- 2 Touch **Use as** and choose from:
 - Homescreen image** - Set a wallpaper for the home screen.
 - Lock screen image** - Set a wallpaper for the lock screen.



Entertainment

Contacts image - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.

Start up image - Set an image to appear when you switch the phone on.


Shut down image - Set an image to appear when you switch the phone off.

Printing an image

- 1 From the home screen, touch  and select **My stuff** on the **ENTERTAINMENT** tab, then select **Images**. Select the picture you want and touch .
- 2 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

Moving or copying an image



You can move or copy an image between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.

- 1 From the home screen, touch  and select **My stuff** on the **ENTERTAINMENT** tab, then select **Images**. Select the picture you want and touch .
- 2 Select **Move** or **Copy**.
- 3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

Sounds

The **Sounds** contains a list of sounds including the downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

Using a sound


- 1 From the home screen, touch  and select **My stuff** on the **ENTERTAINMENT** tab, then select **Sounds**.
- 2 Select a sound you want and a confirmation message appears.
- 3 Touch **Yes**. It will begin to play.
- 4 Touch  and select **Use as**.

- 5 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up** and **Shut down**.

Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.


Watching a video

- 1 From the home screen, touch  and select **My stuff** on the **ENTERTAINMENT** tab, then select **Videos**.
- 2 Select a video to play.

Sending a video clip


- 1 Select a video you want to send.
- 2 Touch  then **Send** and choose from **Message**, **E-mail** and **Bluetooth**.
- 3 If you choose **Message** or **E-mail**, your video clip will be attached to the message, which you can write and send as normal. If you choose **Bluetooth**, your phone will search for a device to send the video to.

Games & Apps

You can install new games and applications on your phone to keep you amused when you have spare time. From the home screen, touch  and select **My stuff** on the **ENTERTAINMENT** tab, then select **Games & Apps**.

You can also access **Pocket apps** on the **ENTERTAINMENT** tab, then select a game and applications you want to launch.

Installing a Java game and application

- 1 From the home screen, touch  and select **My stuff** on the **ENTERTAINMENT** tab.
- 2 If you insert a new memory card, touch the external memory tap.
- 3 Select the file (*.jad or *.jar) you want to download and install the file.

NOTE: The Java program files are in .jad or .jar format. The .jad file should contain its own .jar file.

Entertainment

- 4 Once installed, the Java program can be viewed in the **Games** or **Applications** menu where you can select, execute, or delete.

TIP! You can also download Java MIDlet in your phone by using the WAP (Wireless Application Protocol) services. Please note that additional costs may be incurred when using online services.

Documents

From the **Documents** folder in **My stuff**, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC suite via USB cable.


To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.

Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder. If this happens, you can move them.

Music

Your phone has a built-in music player so you can play all your favourite tracks. To access the music player, from the home screen, touch  and select **Music** on the **ENTERTAINMENT** tab.

NOTE: LG-A310 is one of few mobile phones to apply Dolby Mobile™ for music, providing Dolby™ sound quality to your mobile phone.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Recently played - Plays the songs you have played recently.

All tracks - Contains all the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Ringtone creator - You can edit the song and save it if you want to set ringtone. It can be found in profile menu of settings. Please see **Creating your ringtone**.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone






The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.


You can also use LG PC suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and can see each other.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music** > **All tracks**.

Entertainment


Playing a song

- 1 From the home screen, touch  and select **Music** on the **ENTERTAINMENT** tab.
- 2 Select one of the folders and the song you want to play.
- 3 Touch  to pause the song.
- 4 Touch  to skip to the next song.
- 5 Touch  to go back to the previous song.
- 6 Touch  to return to the **Music** menu. You may touch more than once to return to the menu.

TIP! To change the volume while listening to music, touch .


Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

- 1 From the home screen, touch  and select **Music** on the **ENTERTAINMENT** tab.

- 2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.
- 3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 4 Touch **Done**.

Creating your ringtone

- 1 From the home screen, touch  and select **Music** on the **ENTERTAINMENT** tab.
- 2 Select one of the folders and the song you want to play.
- 3 Select the music what you would like to use in music lists, and then select **OK**.
- 4 Select **Cut** when you want to start recoding music to use as a **Ringtone** while playing music.
- 5 Select **Stop** to stop.
- 6 Select **Save** and choose from **Original file** or **New file**. Then select **Save**.

NOTE: The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

FM radio

Your phone has an FM radio feature so you can tune into your favourite stations to listen on the move.

NOTE: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector in order to listen to the radio and keep the good radio reception.

 



Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the

headset to the phone as this acts as the aerial.


To auto tune:

- 1 From the home screen, touch  and select **FM radio** on the **ENTERTAINMENT** tab, then choose .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using  and  displayed in the centre of the screen. If you press and hold  and , the stations will be automatically found.

Using the FM transmitter to play music

Your phone allows you with its builtin FM transmitter to listen to your music via any FM tuner in range of the phone, e.g. at home or in your car.

- 1 From the home screen, touch  and scroll then select **Tools** and choose **FM Transmitter** on the **UTILITIES** tab.

Entertainment

- 2 Select a frequency that you want to transmit an FM signal on, and then touch **Transmit**.
- 3 Then set your tuner to the same frequency.



NOTE: The operating distance of the FM transmitter is up to a maximum of 2 metres (6.5 feet). The transmission may be subject to interference due to obstructions, such as walls, other electronic devices, or from public radio stations. To avoid interference, always search for a free FM frequency on the receiver before using the FM transmitter.

The FM transmitter cannot be used at the same time as the FM radio of your device.

WARNING: FM transmitter is not available on the countries who have different standards.

Utilities

Setting your alarm

- 1 From the home screen, touch  and select **Alarm** on the **UTILITIES** tab. **Widget alarm** should appear in the list as default and you can not delete it.
- 2 Touch **New alarm**.
- 3 Set the time you would like the alarm to sound in the **Time** field box.
- 4 Choose how you would like your alarm to repeat in the **Repeat** box: **Not repeated**, **Daily**, **Mon ~ Fri**, **Mon ~ Sat**, **Sat ~ Sun**, **Except holiday** or **Choose weekday**. The icons then indicate the weekday you select.
- 5 Select **Alarm type** to select the type of alarm you want.
- 6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds, touch the sound, followed by .
- 7 Add a memo for the alarm in the **Memo** box.

- 8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

NOTE: You can set up to 5 alarms including **Widget alarm**.

TIP! Slide the switch **ON/OFF** to the alarm to set it.

Adding an event to your calendar

- 1 From the home screen, touch  and select **Organiser** on the **UTILITIES** tab, then select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
- 5 Enter **Subject**.

Utilities


- 6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.
- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to your tasks list


- 1 From the home screen, touch  and select **Organiser** on the **UTILITIES** tab.
- 2 Select **Tasks** and touch **Add to do**.
- 3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your task by selecting **Save**.

Using date finder



Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.2010 will be 09.12.2010.

- 1 From the home screen, touch  and select **Organiser** on the **UTILITIES** tab.
- 2 Select **Date finder**.
- 3 Set the required date in the **From** tab.
- 4 Set the number of days in the **After** tab.
- 5 The **Target date** will be shown below.

Adding a memo

- 1 From the home screen, touch  and select **Memo** on the **UTILITIES** tab.
- 2 Touch **Add memo**.
- 3 Type your memo, then touch **Save**.
- 4 Your memo will then appear on the screen in the **Memo** application.

Voice recorder


Use your voice recorder to record voice memos or other audio files. From the home screen, touch  and scroll then select **More** on the **UTILITIES** tab and select **Voice recorder**, then choose , then **SETTINGS** to change settings:

Duration - Set the recording duration. Choose from **No limit**, **MMS** or **1 minute**.



Quality - Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

Memory in use - Select where to save the audio files. Choose between **External memory** and **Handset memory**.


Recording a sound or voice

- 1 Touch  to begin recording.
- 2 Touch  to pause recording.
- 3 Touch  to end recording.
- 4 Touch  to listen to your recording.

Using your calculator

- 1 From the home screen, touch  and scroll then select **More** on the **UTILITIES** tab, then select **Calculator**.
- 2 Touch the numeric keys using the keypad to input numbers.
- 3 For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
- 4 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.




Converting a unit

- 1 From the home screen, touch  and scroll then select **More** on the **UTILITIES** tab, then select **Unit converter**.
- 2 Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 3 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.


Utilities

- 4 The corresponding value will appear on the screen.

Adding a city to your world clock

- 1 From the home screen, touch  and scroll then select **More** on the **UTILITIES** tab, then select **World clock**.
- 2 Touch the , followed by **New city**.
- 3 Scroll the globe, touch the area you want and choose the city on the map. Or touch the  and type the name of the city you require in the search field box.

Using the stopwatch

- 1 From the home screen, touch  and scroll then select **More** on the **UTILITIES** tab, then select **Stopwatch**.
- 2 Touch **Start** on the bottom of the screen to begin the timer.
- 3 Touch **Lap** if you want to record a lap time.

- 4 Touch **Stop** to end the timer.


- 5 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

Sweet draw

When using your phone, you can press the camera key twice to capture the current image, then adding a memo on the captured image by using **Sweet draw** feature. Please note, the capture function is available on the following screens: WAP, SNS (Native/JAVA), Message & E-mail (Native email/Push email) composer, Received messages (SMS/MMS), E-mail view screen, JAVA game & application, Native flash game, and Pocket apps.



If you set the **Auto save** to **On**, the captured screen image will be saved in **My stuff** folder.

When **Auto save** is **Off**, you can edit the image with **Sweet draw** after capturing an image.

To change the setting of the **Sweet draw** feature, from the home screen, touch  and scroll then select **Sweet draw** on the **UTILITIES** tab.

NOTE: This feature may not be used for infringement upon the copyright of any third party like the image of the gallery, wallpaper, speed dial etc.

Adding a memo with the sweet draw


- 1 From the home screen, touch  and scroll then select **Sweet draw** on the **UTILITIES** tab.
- 2 Touch **Add drawing**.
- 3 Draw your memo on the touch screen LCD followed by .
- 4 Touch **Yes**, then your memo will appear on the screen in the **Sweet draw** application.

PC sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.


TIP! You will need to install the application PC suite from <http://www.lgmobile.com>. (Path: www.lgmobile.com - select country - PRODUCTS > Manual & Software)

Installing LG PC suite on your computer

- 1 From the home screen, touch  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode** and touch **PC suite**.
- 3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC suite Installer wizard.

- 5 Once installation is complete, the LG PC suite icon will appear on your PC screen.

Connecting your phone and PC

- 1 From the home screen, touch  and select **Connectivity** on the **SETTINGS** tab.
- 2 Select **USB connection mode**.
- 3 Touch **PC suite**.
- 4 Connect your phone and PC via USB cable and wait for a while. PC suite runs automatically.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC by using the USB cable.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose whether to back up Contents Data and/or Phonebook/ Schedule/ToDo/ Memo Data. Select the location you want to back up the information to, or restore it from. Click **OK**.

4 Your information will be backed up.

Viewing phone files on your PC

- 1 Connect your phone to your PC by using the USB cable.
- 2 Click on the **Manage Files** icon.
- 3 Images and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to manage files you no longer need.

Synchronising your contacts

- 1 Connect your phone to your PC by using the USB cable.
- 2 Click on the **Contacts** icon.
- 3 Click **Sync Contacts** button your PC will now import and display all the contacts saved on your phone.

4 Click on **Menu** and select **Export**. You can now select where you want to save your contacts to.

Synchronising your messages

- 1 Connect your phone to your PC by using the USB cable.
- 2 Click on the **Messages** icon.
- 3 All your phone messages will be displayed in folders on the PC screen.
- 4 Use the toolbar at the top of the screen to edit and rearrange messages.


WARNING: Do not disconnect your phone during the transfer.

Using your phone as a mass storage device

Your phone can be used as a mass storage device.


- 1 Disconnect your phone from your PC.

PC sync


- 2 From the home screen, touch  and select **Connectivity** on the **SETTINGS** tab.
- 3 Select **USB connection mode**.
- 4 Touch **Mass storage**. This mode will be saved.
- 5 Connect the phone to your PC by using the USB cable. Your phone will display **Connected**.
- 6 Drag and drop your images, videos, music or documents into the correct folders.
- 7 Safely remove your phone by clicking on the safely remove hardware icon in your PC toolbar.

Browser

Accessing the web

- 1 From the home screen, touch  and select **Browser** on the **UTILITIES** tab.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

Google

You can access Google mobile internet service. To access Google services, from the home screen, touch  and select **Google** on the **UTILITIES** tab.

NOTE: You may be unable to access Google in some countries. This is dependent on network services.

Access to Google Service

Search: Google Mobile Web Search allows you to search for websites that are specifically designed for mobile phones and devices.


Mail: The Google Mail for mobile application is a downloadable Java application, offering the best possible Google Mail experience for supported mobile devices.

Blogger: You can manage your account and share your blog. It is available to upload a picture and video.

YouTube: You can watch videos on YouTube Mobile from your mobile device. You may want to contact your carrier for more information about the availability of data streaming on your mobile device.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the home screen, touch  and select **Browser** on the **UTILITIES** tab.
- 2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.

Browser


- 3 To add a new bookmark, touch **Add bookmark**. Enter a name for your bookmark followed by the URL in the corresponding field box.
- 4 Touch **Save**. Your bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the Connect icon next to the bookmark or touch the bookmark title and then touch **Connect**. You will be connected to your bookmark.

Using RSS reader


RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually.

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.


Saving a page

- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

Accessing a saved page


From the home screen, touch  and select **Browser** on the **UTILITIES** tab, then select **Saved pages**. Select the page you want to view and it will open.

Viewing your browser history

From the home screen, touch  and select **Browser** on the **UTILITIES** tab, then select **History**.

The web pages you have accessed recently will be displayed. To access any of these pages, simply select it.

Changing the web browser settings

From the home screen, touch  and select **Browser** on the **UTILITIES** tab, then select **SETTINGS**. You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies** or **Security** settings. You can simply set these on or off by touching the switch icon.

Using your phone as a modem

Your phone can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC suite installed on your PC.
- 2 Connect your phone and your PC by using the USB cable and launch the LG PC suite software.

- 3 Click **COMMUNICATION** on your PC. Then click **SETTINGS** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on the screen.
- 5 Click **Connect** and your PC will connect via your phone.


Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and your phone.
- 2 Pair your PC and your phone. so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC suite to create an active Bluetooth connection.
- 4 Click **COMMUNICATION** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem** over Bluetooth link and click **OK**. It will now appear on the screen.
- 7 Click **Connect** and your PC will connect via your phone.


Settings

Personalising your profiles

You can quickly change your profile on the home screen. You can also personalise each profile setting using the settings menu.

- 1 From the home screen, touch  and select **Profiles** on the **SETTINGS** tab.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your ringtone, volume, message tone settings and more.

Changing your screen settings

From the home screen, touch  and select **Screen settings** on **SETTINGS** tab, then choose from the list below.

Wallpaper - Choose the theme for your home screen (Widget/Speed dial) or lock screen.

Livesquare - Touch **Livesquare guide** to check its functions.

Handset theme - Choose the theme for menus. If you select **Black**, you can adjust the point colour. If you select **White**, the cartoon styled UI will be set on your phone.

Top menu - Choose the style of the top menu, choose from **Zigzag**, **Scrolling** and **Screen by screen**.

Lock screen - Adjust the type of the lock screen when the screen automatically turns off.

Dialling - Adjust the number colour.

Font - You can adjust the font size and style.

Brightness - Adjust the screen brightness.


Greeting message - Select **ON** and enter the greeting message in the text field. When the phone is switched on, the greeting message will be shown.

Network name - Choose to show or hide the network name.

Start-up/Shut down - Choose the theme for your start-up/shut down screen.

Changing your phone settings

Enjoy the freedom of adapting how your phone works for your own style.

From the home screen, touch  and select **Phone settings** on the **SETTINGS** tab, then choose from the list below.

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Change the factory-set power saving settings: **Off**, **Night only** or **Always on**.

Languages - Change the language of your phone's display.

Motion silent - Make your phone go into the mute or snooze settings by flipping it over when it is ringing.

Auto key lock - Allows you to set the time of **Auto key lock**.

Security - Adjust your security settings, including PIN codes request and handset lock. You can select change codes to change your **PIN code**, **PIN2 code** and your **Security code**.

NOTE: Security code

The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. The security code default setting can be modified from the **Security > Change codes**.


Memory info - You can use memory manager to see how each memory is been used and see how much space is available.

Reset settings - Restores all settings to their factory defaults.

Handset information - View the technical information for your phone. And you can upgrade software via web.

Settings


Change your touch settings

From the home screen, touch  and select **Touch settings** on the **SETTINGS** tab, then choose from the list below.

Touchpad calibration - Reset your screen for ease of use.

Touchscreen effect - Change the touchscreen settings.

Using memory manager

From the home screen, touch  and select **Phone settings** on the **SETTINGS** tab, then choose **Memory info**.

Handset common memory - View the memory available on your phone for pictures, sounds, videos, MMS, email, Java applications and others.



Handset reserved memory - View the memory available on your handset for SMS, contacts, calendar, tasks list, memo, alarm, call history, bookmarks and miscellaneous items.

SIM memory - View the memory available on your SIM card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - Choose the location you prefer items to be saved to between **Handset memory** and **External memory**.

Changing your Bluetooth settings

From the home screen, touch  and select **Bluetooth** on the **SETTINGS** tab, then select  and choose **SETTINGS**. Make your changes to:

My device visibility - Set **Visible** or **Visible for 1 min** so other devices can detect your phone when searching for Bluetooth devices. If you select **Hidden**, other devices will not be able to detect your phone when searching for Bluetooth devices.

My device name - You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when My device visibility is set to visible.

Supported services - You can view the list of devices, such as headsets and handsfree devices, supported by your Bluetooth-enabled phone.

Remote SIM Mode - For connecting the hands-free kit with your phone, you can activate remote SIM mode related with the SAP (SIM Access Profile).

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your phone and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **SETTINGS** menu.
- 2 Touch **Search**.
- 3 your phone will search for devices. When the search is completed, **Refresh** will appear on screen.

- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you will need to enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

NOTE: Read the user guide of each Bluetooth accessory you are trying to pair with because the instructions may vary.

TIP! The connection may be improved if there are no solid objects in between your phone and the other Bluetooth device.

Using a Bluetooth headset

- 1 Check your Bluetooth is **ON** and **Visible**.
- 2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.

Settings

- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to connect now. your phone will automatically switch to headset profile. If you select **Always connect**, the handset will prompt you every time the Bluetooth connection is available.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your phone will not automatically search for other **Bluetooth** devices. If not, your phone will search for other **Bluetooth** enabled devices within range.
- 4 Choose the device you want to send the file to.
- 5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sent.


To receive a file:

- 1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.

NOTE: The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc, and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu.

From the home screen, touch  and select **Connectivity** on the **SETTINGS** tab, then choose from the list below.

Network settings

- **Select network** - If you select **Automatic**, your phone automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.
If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.
- **Network mode** - You can set a type of network to search for when networks are searched in the **Select network** menu. Choose from **Automatic** or **GSM only**.
- **Preferred lists** - You can add a preferred network to connect to. If the network is searching automatically, simply choose one from the network list and if not, add a new network manually.

Internet profiles - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose a data service from the options and synchronise your phone using the LG PC suite software to copy files from your phone. See **PC sync** for more information on synchronisation.

Java settings - Allows you to set profiles for connections made by Java programs and to view certificates.

Streaming settings - Your network operator has already saved this information. You can edit it if you want to make changes.

Settings

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit LG Mobile.com website. (Path: www.lgmobile.com - select country - PRODUCTS > Manual & Software)

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. As the mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, please be sure to check any instructions and notes that appear at each step before proceeding.

Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. As the manufacturer takes no responsibility for loss of data during the upgrade process, you are advised to note down any important information in advance for safekeeping.