

This device is not intended for sale in the USA.

### **Part 15.21 statement**

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

### **Part 15.105 statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **FCC Part 15 Class B Compliance**

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada. Operation is subject to the following two conditions:(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

### **Body-worn Operation**

This device was tested for typical body-worn operations with the back of the phone kept 2cm (0.79 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 2cm (0.79 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 2cm (0.79 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

## **Conformité aux normes FCC Part 15 Class B**

Cet appareil et ses accessoires sont conformes aux normes FCC Part 15 Class B de la Federal Communications Commission et aux exigences pour appareils numériques ICES-003 Class B d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes : (1) Cet appareil et ses accessoires ne doivent pas provoquer de brouillage préjudiciable, et (2) cet appareil et ses accessoires doivent accepter toutes les interférences reçues, y compris celles pouvant causer un fonctionnement indésirable.

### **Utilisation comme appareil portatif**

Ce téléphone a été testé en vue d'une utilisation type comme appareil portatif, avec une distance de 2 cm (0,79 pouces) entre l'arrière de l'appareil et le corps de l'utilisateur. Pour satisfaire aux exigences de la FCC en matière d'exposition aux radiofréquences, une distance d'au moins 2 cm (0,79 pouces) doit être maintenue entre le corps de l'utilisateur et l'arrière du téléphone. Les pinces de ceinture, les étuis et autres accessoires semblables d'autres marques et contenant des composantes métalliques ne doivent pas être utilisés. Les accessoires portatifs empêchant le maintien d'une distance de 2 cm (0,79 pouces) entre le corps de l'utilisateur et l'arrière du téléphone et qui n'ont pas été testés en vue d'une utilisation type comme accessoires portatifs peuvent ne pas satisfaire aux limites d'exposition aux radiofréquences stipulées par la FCC et, par conséquent, ne doivent pas être utilisés.

## LG-A360k User Guide — English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone. Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.

P/N: MMBB0000000 (1.0)

## Calls

### Making a call

- Key in the number using the keypad. To delete a digit, press **☒**.
- Press **☒** to initiate the call.
- To end the call, press **☒**.

**TIP!** To enter + when making an international call, press and hold **☒**.

### Making a call from your contacts

- Select **Contacts** from the Standby screen.
- Using the keypad, enter the first letter of the contact you want to call.
- Press **☒** or select **Call** to make a voice call.

- Enter your message.
- Select **Options** and choose **Insert** to add an **Image**, **Video**, **Sound**, **Symbol**, **Template**, **Emoticon**, **Name & number**, **New slide**, **Subject** or **More (Business card/Schedule/Memo/Tasks/My business card)**.
- Press **Send to**.

### Setting up your email

You can stay in touch on the move using email on your LG-A360k. It's quick and simple to set up a POP3 or IMAP4 email account.

- Press **Menu**, select **Messaging**.
- Select **E-mail** and choose **New e-mail account**.
- Follow the pop up instruction and enter the information required.

- Press **☒** to start recording. Rec will appear at the bottom of the viewfinder. Press **☒** again to stop recording.

### After you've shot your video

A still image representing your captured video will appear on screen.

After recording a video clip, you can check the menu as follow:

- Videos** - View the videos you have taken in your Album.
- Play** - Play the file.
- New** - Press to shoot another video straight away.
- Send** - Send the video as Message, as an E-mail or via Bluetooth.
- Delete** - Delete the video you have just made. The viewfinder will reappear.

### Music

Your LG-A360k has a built-in Music player so you can play all your favorite music.

### Answering and rejecting a call

When your phone rings, press **Accept** or press **☒** to answer the call.

While your phone is ringing, press **Silent** to mute the ringing. This is great if you've forgotten to change your profile to **Silent** for a meeting!

Press **☒** or select **Reject** to reject the incoming call.

**TIP!** You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Press **Common settings**, select **Answer mode** and choose from **Press send key**, **Slide up** and **Press any key**.

### Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available on the phone: T9 predictive mode, ABC manual mode and 123 mode.

**Note:** Some fields may allow only one text input mode (e.g., telephone numbers in the address book fields).

### T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognize the words you are writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognize the word once all the letters are entered.

### Playing a song

- Press **Menu**, select **Music**.
- Select **MP3 player** and choose **All songs**.
- Choose the song you want to play.
- Select **||** to pause the song.
- Select **▶** (right navigation key) to skip to the next song.
- Select **◀** (left navigation key) to skip to the previous song.
- Select **Back** to stop the music and return to the music player menu.

**TIP!** To change the volume while listening to music, use the up/down navigation key.

**TIP!** Select **Back** to return the music player menu while you are listen the music.

## Installing the SIM card and the handset battery

### Installing the SIM Card


When you subscribe to a cellular network, you are provided with a **plug-in SIM card** loaded with your subscription details, such as your **PIN**, any optional services available and many others.

**Important !**

› The plug-in SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

### Illustrations

- Open the battery cover
- Remove the battery
- Insert your SIM
- Insert your battery
- Close the battery cover
- Charge your battery

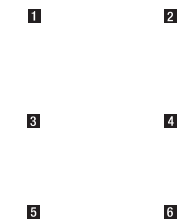

### Speed dialing

You can assign a frequently-called contact to a speed dial number.

- Press **Menu** and select **Phonebook**.
- Select **Options** and choose **Speed dials**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will begin automatically and there is no need to press **☒**.

### Changing the call settings

You can set call-specific functions. Press **Menu**, select **Settings** and choose **Call**.

- Call divert** - Choose whether to divert your calls.
- Call barring** - Select when you would like calls to be barred.
- Fixed dial number** - Choose a list of numbers that can be called from your phone. You will need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

### ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

### 123 Mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

### Message folders

Press **Menu** and select **Messaging**. The folder structure used on your LG-A360k is fairly self-explanatory.

**Write message** - Allows you to create new messages.

**Inbox** - All the messages you receive are placed in your inbox.

**Drafts** - If you don't have time to finish writing a message, you can save what you have done so far here.

### Images

The **Images folder** contains a folder of default images on your phone, images downloaded by you, and images taken on your phone's camera.

### Videos

The **Videos folder** shows the list of downloaded videos and videos you have recorded on your phone.

### Sounds

The **Sounds folder** contains default sounds, your voice recordings, radio recordings and sound files downloaded by you. From here you can manage and send sounds, or set them as ringtones.

### Games

Your LG-A360k comes with preloaded games to keep you amused in your spare time. If you choose to download any additional games they will be saved in this folder.

- Call waiting** - Be alerted when you have a call waiting. This depends on your network provider.
- Excuse messages** - Set the rejected call list.
- Common settings :**
  - Answer mode** - Choose whether to answer the phone using **Press send key**, **Slide up** or **Press any key**.
  - Send my number** - Choose whether your number will be displayed when you call someone. This depends on your network provider.
  - Minute minder** - Select **On** to hear a tone every minute during a call.
  - Auto redial** - Choose **On** or **Off**.
  - Send DTMF tones** - Choose **DTMF on** or **DTMF off**.
  - Save new number** - Choose **Yes** or **No**.
  - Bluetooth answer mode** - Set to **Hands-free** or **Handset**.
  - Hang up mode** - Choose **Close phone** or **Press end key**.
  - Call reject** - Choose **On** or **OFF**

**Outbox** - This is a temporary storage folder while messages are being sent. It also stores any messages that have failed to send.

**E-mail** - Contains all your e-mail messages. Select the account you want to use then select **Retrieve**. Your LG-A360k will connect to your e-mail account and retrieve your new messages.

**Sent items** - All the messages you send are placed in your **Sent folder**.

**My folders** - You can access your saved messages, text templates and multimedia templates here.

**Templates** - A list of useful pre-written templates that can be used for a quick reply.

### Applications

You can use the Opera Mini5 or Social Networking.

### SVG contents

The SVG contents folder shows the list of svg files.

### Others


In the **Others folder**, you can view files that are not saved in the **Images**, **Videos**, **Sounds** or **SVG contents** folders

### Organiser & Tools

#### Tasks

This helps you go to the menu you are searching for. You can set an item as Tasks.

## Getting to Know Your Phone

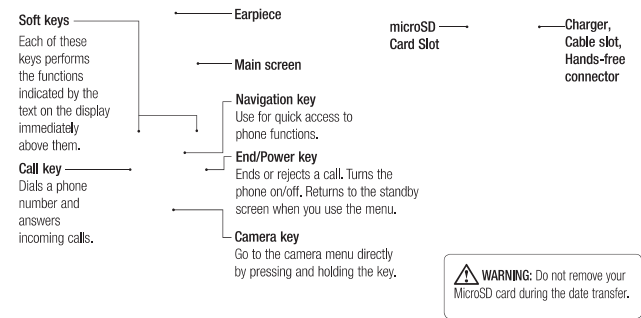

**WARNING:** Do not remove your MicroSD card during the data transfer.

## Contacts

### Searching for a contact

- Press **Menu**, select **Phonebook**.
- Using the keypad, enter the first letter of the contact you want to call.
- To scroll through the contacts, use the up and down arrows.

### Adding a new contact

- Press **Menu**, select **Phonebook** and choose **Create new contact**.
- Enter all the information you have in the fields provided and select **Done**.

## Media

### Camera

#### Taking a quick photo

- Press the **☒** key on the Keypad.
- When the camera has focused on your subject, select the **☒** on the Keypad. You can also press the **☒** key on the phone firmly.

#### After taking a photo

Your captured photo will appear on the screen. The image name is shown on the bottom of the screen with five icons.

**Images** - View the pictures and videos you have taken in your Album.

**Send** - Send the video as MMS, as an Email or via Bluetooth.

**New** - Take another photo straight away.

### Using the calendar

When you enter this menu, a calendar appears. A square cursor is located on the current date.

You can move the cursor to another date using the navigation keys.

### Voice recorder

Use your Voice recorder to record voice memos or other sounds.

### Web

#### Accessing the web

You can launch the WAP browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated WAP page.

- Press **Menu** and select **Browser**.
- To go straight to the browser home page, select **Home**.

### Adding a contact to a group

You can save your contacts in groups; for example, to keep your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleagues**, **School**, **VIP** and **No group** already set up on the phone.

### Messaging

Your LG-A360k includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), and email, as well as the network's service messages.

#### Sending a message

- Press **Menu**, select **Messaging** and choose **Write message**.
- A new message editor will open. Message editor combines SMS and MMS in one intuitive mode that is easy to switch between. The default setting of the message editor is SMS mode.

**Set as** - Use the image as Wallpaper, as a Picture ID, Start up or Shut down.

**Delete** - Delete the photo you have just taken and confirm by selecting **Yes**. The viewfinder will reappear.

**TIP!** When using the camera, power consumption increases. If **☒** icon appears indicating low battery, recharge the battery before use.

### Using the advanced settings

From the viewfinder, select **Setting** to open all advanced settings options. You can change the camera setting. After selecting the option, choose the **Close**.

### Video Camera

#### Shooting a quick video

- Move the camera mode switch to and press **video**. The video camera's viewfinder will appear on screen.
- Focus the camera on what to record.

Alternately, select **Enter address** and type in the URL, followed by **Connect**.

**NOTE:** You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

### Social network services (SNS)

Your LG-A360k has SNS that lets you enjoy and manage your social network.

### Facebook

Facebook is a social networking website

- Press **Menu** and select **Social network**.
  - Select **Facebook**.
- Home** - Log in and you will see your friend's updated status. Input your comment about new status or check others. Press **Options** to choose **Go to Top**, **Refresh**, **Upload**, **Logout** or **Exit**.

**Profile** - You can select the **Wall** and write the current status. See your info detail in **Info** and upload or take a picture in **Photos**.

**Friends** - You can find many friends in SNS and view their status. Search your friends in facebook by selecting **Search** tap.

**Inbox** - It will show all your SN messages. You can see the **Inbox/Sent** folder.

### Twitter

Twitter is a free social networking and micro-blogging service.

1. Press **Menu** and select **Social network**.
2. Select **Twitter**.

**NOTE:** An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

### Using flight mode

When **Flight mode** is activated, you will not be able to make calls, connect to the Internet or send messages.

### Changing your date & time

You can set functions relating to the date and time.

### Changing your display settings

You can change the settings for the phone display.

## Connectivity

### Changing your connectivity settings

1. Press **Menu** and select **Settings**.
2. Select **Connectivity** and choose **USB Connection**.
  - **Mass storage:** Select **Mass storage** and connect the handset to your computer. You can then drag and drop files to the LG-A360k removable device folder.
  - **PC Suite:** Select **PC Suite** and connect the handset to your computer in PC Sync mode.
  - **Music sync:** Music Sync can be carried out using Windows Media Player 10/11 and supports both Handset Memory and an External Memory Card.
  - **Ask always:** Selecting this option will allow you to choose which method to use every time you connect your handset to your computer.

### Changing Your Bluetooth Settings

1. Press **Menu** and select **Settings**.
2. Select **Connectivity** and choose **Bluetooth**.
3. Select **Settings** for the following options:
  - **My device visibility** - Choose whether to show or hide your device to others.
  - **My device name** - Enter a name for your LG-A360k.
  - **Supported services** - Shows what services are supported.
  - **My address** - View your Bluetooth address.
2. Select **Search new device** from the Bluetooth menu.
3. Your LG-A360k will search for devices. When the search is complete, **Add** and **Refresh** will appear on the screen.
4. Choose the device you want to pair with, select **Add**. When you have chosen a device you want to pair with, the handset will then create a password by default every time you connect.
5. Your phone will then connect to the other device. The same passcode will need to be entered on this device. When you have chosen a device you want to pair with, the handset will then create a password by default every time you connect.
6. Your passcode-protected Bluetooth connection is now ready.

### Pairing with Another Bluetooth Device

By pairing your LG-A360k and another device, your handset will create a password by default every time you connect to another handset via Bluetooth.

1. Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu by selecting **My device visibility** and then **Visible**.

## PC Suite

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

### Installing LG PC Suite on Your Computer

1. Press **Menu** and select **Setting** and choose **Connectivity**.
2. Select **USB connection** and click **PC Suite**.
3. Connect the handset and PC via USB cable and wait for a while. **Installation guide** message will be displayed.
4. Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
5. Once installation is complete, the LG PC Suite icon will appear on your desktop.

## Connecting your phone and PC

1. Select **PC Suite mode** in **Connectivity** menu and then connect the USB cable to your phone and your PC.
2. LG PC Suite will be automatically activated on your PC.
3. Your phone and PC are now connected.

## Settings

### Changing your profiles

You can personalise each profile setting using the settings menu.

- 1 Press **Menu** and select **Settings**.
- 2 Choose the Profiles you want and select **Personalise** from Options
- 3 You can then change all the sounds and alert options available in the list, including your Voice call tone, Ring Volume, Message tone or more.