

LG-C660h User Guide



- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Google Mail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.

This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada. Operation is subject to the following two conditions:(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.0cm (0.39 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 1.0cm (0.39 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 1.0cm (0.39 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Conformité aux normes FCC Part 15 Class B

Cet appareil et ses accessoires sont conformes aux normes FCC Part 15 Class B de la Federal Communications Commission et aux exigences pour appareils numériques ICES-003 Class B d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes : (1) Cet appareil et ses accessoires ne doivent pas provoquer de brouillage préjudiciable, et (2) cet appareil et ses accessoires doivent accepter toutes les interférences reçues, y compris celles pouvant causer un fonctionnement indésirable.

Utilisation comme appareil portatif

Ce téléphone a été testé en vue d'une utilisation type comme appareil portatif, avec une distance de 1.0cm (0,39 pouces) entre l'arrière de l'appareil et le corps de l'utilisateur. Pour satisfaire aux exigences de la FCC en matière d'exposition aux radiofréquences, une distance d'au moins 1.0cm (0,39 pouces) doit être maintenue entre le corps de l'utilisateur et l'arrière du téléphone. Les pinces de ceinture, les étuis et autres accessoires semblables d'autres marques et contenant des composantes métalliques ne doivent pas être utilisés. Les accessoires portatifs empêchant le maintien d'une distance de 1.0 cm (0,39 pouces) entre le corps de l'utilisateur et l'arrière du téléphone et qui n'ont pas été testés en vue d'une utilisation type comme accessoires portatifs peuvent ne pas satisfaire aux limites d'exposition aux radiofréquences stipulées par la FCC et, par conséquent, ne doivent pas être utilisés.

Getting to know your phone

To turn the phone on, press and hold the Power key for 3 seconds.

To turn the phone off, press the Power key for 3 seconds and touch Power Off.

TIP! When screen is locked

1. Drag your finger from left to right to unlock the screen.
2. To turn the phone off, press the Power key for 3 seconds and touch Power Off.

Earpiece

Home key 

- Returns to the home screen from any screen.

Menu key 

- Check what options are available.

Send key 

Back key 

- Returns to the previous screen.

Search key 

- Search the web and contents in your phone.

Power/Lock key 

- Powers your phone on/off by pressing and holding the key.
- Turns the screen off and locks the phone.



WARNING: Placing a heavy object on the phone or sitting on it can damage its LCD and touch-screen functionalities.

Tip! Press Menu key whenever you tap an application to check what options are available.

Tip! LG-C660h does not support video call.

Tip! If LG-C660h has errors when you use it or you cannot turn it on, remove battery, install it again and turn it on after 5 seconds.

Getting to know your phone

Stereo earphone connector —————

Charger, micro USB cable connector —————

Camera lens —————

SIM card slot —————

micro SD memory card slot —————

Volume keys

- On the home screen: controls ringer volume.
- During a call: controls your earpiece volume.
- When playing a track: controls volume continuously.

————— **Microphone**

————— **Back cover**

————— **Battery**

Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1** To remove the back cover, hold the phone firmly in your hand. With your other hand, firmly press your thumb on the back cover. Lift off the battery cover with your forefinger.
 - 2** Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.
-

Getting to know your phone

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery.

- 4 Replace the back cover of the phone.

Charging your phone

Slide back the cover of the charger connector on the side of your LG-C660h. Insert the charger, and plug it into an electrical outlet. Your LG-C660h must be charged until you can see .

Tip! To remove the battery, first remove the back cover and hold the phone firmly in your hand. With your other hand, firmly press down the top of the battery using your thumb and lift off the battery.

NOTE: The battery must be initially fully charged to improve battery lifetime.

Getting to know your phone

- 1 On the home screen, touch the **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Unmount SD card.
- 5 Touch **Format SD card**, then confirm your choice.
- 6 If you set the pattern lock, input the pattern lock and select **Erase everything**. The card will then be formatted and ready to use.

WARNING!

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on the card are deleted when you format the card.

NOTE: If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

Tip!

If your memory card is already Unmounted, you can use the following step to format it. Touch **Applications > Settings > SD card & phone storage > Format SD card**.

Your Home screen

Touch-screen tips

Here are some tips on how to navigate around your phone.

Touch - To choose a menu/option or open an application, touch it.

Touch and hold - To open an options menu or grab an object you want to move, touch and hold it.

Drag - To scroll through a list or move slowly, drag across the touch-screen.

Flick - To scroll through a list or move quickly, flick across the touch-screen (drag quickly and release).

Note

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch-screen is sensitive enough to pick up a light, firm touch.

- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Lock your phone

When you are not using LG-C660h, press the Power/Lock key to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the home screen or other screen you are viewing is replaced with the lock screen to conserve the battery.

Note: If there are any programs running when you set the pattern, they may be still running in lock mode. It is recommended to exit all programs before entering the lock mode to avoid unnecessary charges. (e.g. phone call, web access and data communications).

Your Home screen

Tip! Setting unlock pattern:

You can draw your own unlock pattern by connecting four or more dots.

 
If you set a pattern, the phone's screen is locked. To unlock the phone, draw the pattern you set on the screen.

Tip! When you set an unlock pattern, you need to create your Gmail account first.




Caution: The phone will be locked for 30 seconds after 5 incorrect attempts at drawing the unlock pattern.


Unlock screen

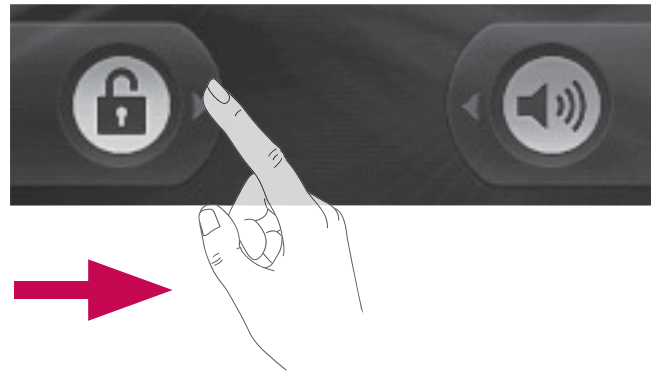Whenever your LG-C660h is not in use, it will return to the lock screen. Drag your finger from left to right to unlock the screen.



Silent Mode

 From Notification drawer, touch  to be  or if you don't use an unlock pattern, simply drag  to the right.

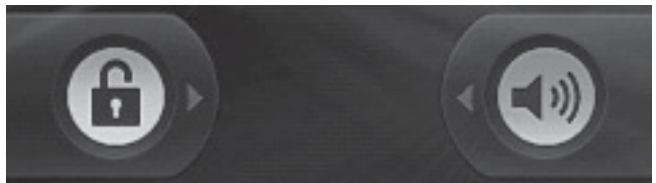

To wake up your phone, press **Send** or **Power/Lock** key. The lock screen will appear. Touch the lock icon and drag your finger to the right to unlock your home screen. The last screen

you were working on opens.

Home

Simply swipe your finger to the left or right to view them.

You can also customise each panel with widgets, shortcuts, which are shortcuts to your favourite applications, folders and wallpapers.

NOTE: Some screen images may be different depending on your phone provider.

In your LG home screen, you can view quick keys at the bottom of the screen. The quick keys provide easy, one-touch access to the functions you use the most.



Touch the **Phone** icon to bring up the touch-dialling pad to make a call.



Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications.



Touch the **Message** icon to access the messaging menu. Here, you can create a new message.

Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets, or folders to it. For more convenience using your phone, add your favourite widgets on the home screen.


- 1 On the home screen, touch **Menu** key then touch **Add** button or long touch the empty part of the home screen.
- 2 On the **Add to Home screen** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it then touch on New folder.
- 4 You will see a new folder's icon on the home screen. Drag it to the desired location _____

Your Home screen

on the desired panel and release your finger from the screen.

Tip! To add an application icon to the home screen, touch and hold the application you want to add to the home screen.

Tip!

- Touch and hold that icon. The **Applications** icon will change as the **Trash** icon .
- Drag and drop an application icon to the **Trash** icon .

Tip! You cannot delete the preloaded applications. (Only their icons can be deleted from the screen.)

 
 
Getting back to a recently used application

- 1 Touch and hold the **Home** key. The screen will show you a pop-up with icons of applications that you've used recently.
- 2 Touch an icon to open its application. Or, touch the

Back key to return to the current application.

Notification drawer

The notification drawer runs across the top of your screen.

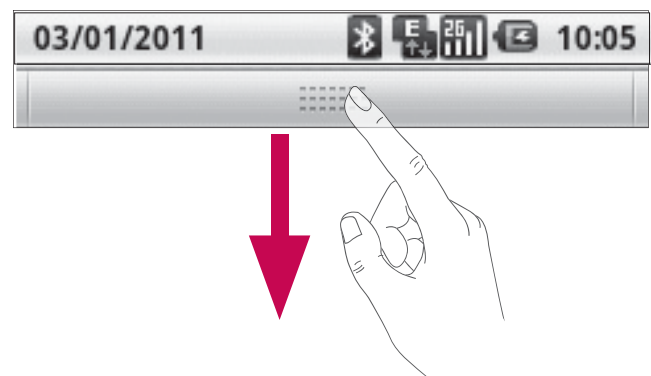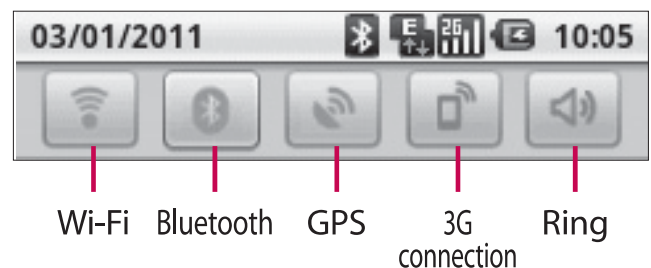

Touch and slide the notification drawer down with your finger. Or, on the home screen, touch **Menu** key and select **Notifications**. Here, you can check and manage Wi-Fi, Bluetooth, GPS status as well as other notifications.

Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.






[Status bar]

Icon	Description
	No SIM card
	No signal
	Wi-Fi is on and connected
	Wired headset
	Call forwarding
	Call holding
	Speakerphone
	Call mute

Icon	Description
	Missed call
	Bluetooth on
	Bluetooth connected
	System warning
	Alarm
	New voicemail
	Airplane mode
	Silent
	Vibrate
	No SD card
	Battery fully charged
	Battery is charging
	Data in
	Data out
	Data in and out
	USB to PC
	Download

Your Home screen

Icon	Description
	Upload
	GPS is acquiring
	GPS is on


Onscreen Keyboard


You can also enter text using the onscreen keyboard. The onscreen keyboard automatically displays on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Phone Keypad (Qwerty Keypad)


 **Shift Key** - Touch once to capitalise the next letter you type. Double tap for all caps.

 **XT9 Key** - Turn XT9 Mode on or off.


 **Setting key**- Tap to view the settings menu. Choose from Editor settings, Keyboard layout, Writing language, User dictionary and Other input method.

 **Number and Symbols Key** - Touch to change input to number and symbol entry.

 **Enter Key** - Tap to create a new line in the message field.

 **Language Key** - Tap to change the On-screen Keyboard language.


 **Delete Key**

 Go forward or backward between letters.

Entering text

Keypad





 Tap to change between the number, symbol, and text keypads.

 
Use  to swap between lowercase and uppercase. The coloured arrow mark on the button tells you if uppercase is locked on (blue) or if it is just on for one character (orange).

To enter a space, touch .


Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Enter the number on the keypad. To delete a digit, touch the **Clear** icon  .
- 3 Touch the icon  to make a call.
- 4 To end a call, touch **End** icon .



TIP! To enter “+” to make international calls, touch and hold down  .

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

When screen is locked / When screen is unlocked .





When your phone rings, drag the **Answer** icon  to the right. Drag **Decline** icon  to the left to reject an incoming call. Drag Excuse msg bar from the bottom if you want to send one.

Or else When your phone rings press the Answer button(Send key). Press Decline button(Power/Lock key) to reject the incoming call.Touch the Excuse msg bar from the bottom.

Adjusting call volume

To adjust the In-call volume during a call, use the volume up & down key on the right side of the phone.

Making a second call

- 1 During your initial call, touch . Then, select the number you want to call.
- 2 Dial the number, or search your contacts.
- 3 Touch the **Call** icon  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch  to toggle between calls. Or touch  to make a conference call.
- 6 To end active calls, touch **End call**. If there is no active call, it will end the **Hold call**. To end all calls at the same time, press the **Menu** key and select **End all calls**.

NOTE: You will be charged for each call you make.

Viewing your call logs

On the home screen, touch  and choose **Call log** tab.


View a complete list of all dialed, received, and missed voice calls.

TIP! Touch any single call log entry to view the date, time, and duration of the call.

TIP! Press the **Menu** key, then touch **Clear call log** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.

- 1 On the home screen, touch **Applications** tab  to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings**, and choose options that you want to adjust.


Contacts

You can add contacts on your phone and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact


There are two ways to search for a contact:

On the Home screen

- 1 On the home screen, touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keypad.

Adding a new contact


- 1 On the home screen, touch , and enter the new contact's number, then press the **Menu key**, touch **Add to contact** and then **Create new contact**.
- 2 If you want to add a picture to the new contact, touch . Choose from **Take a picture** or **Pick from gallery**.

- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Done**.


Favourite Contacts

You can classify frequently called contacts as favourites.

To add a contact to your favourites

- 1 On the home screen, touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star turns gold.

To remove a contact from your favourites list

- 1 On the home screen, touch  to open your contacts.
- 2 Touch the **Favourites** tab and choose a contact to view its details.

3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.


NOTE: Default contacts and Contacts saved in SIM card are not be able to add as Favourite Contact.

Messaging/E-mail

Messaging


Your LG-C660h combines SMS and MMS into one intuitive, easy-to-use menu.


Sending a message

- 1 Touch  icon on the home screen, and touch **New message** to open a blank message.
- 2 Enter a contact name or contact number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.
NOTE: You will be charged for a text message for every person you send the message to.
- 3 Touch type to compose below to start entering your message.
- 4 Press the **Menu** key to open the options menu. Choose from **Add subject**, **Attach**,

Send, **Insert smiley** and **More**.

- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after your name. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded and in what language.

 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.