

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

The Wanderer™
Cordless Key Telephone Unit User Guide

LG ELECTRONICS

**2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT
MODEL : CKTU-24**

USA VERSION

LIFE SUPPORT APPLICATIONS POLICYV

VODAVI Communications Systems Product are not authorized for and should not be used within life Support applications. Life Support systems are equipment intended to support or sustain life and whose failure to perform when properly used in accordance with instructions provided can be reasonably expected to result in significant personal injury or death

VODAVI Communications Systems warranty is limited to replacement of defective components and does not cover injury to persons or property or other consequential damage

Copyright © 1999 VODAVI Communications System, Inc. ALL Right Reserved

This material is copyrighted by VODAVI Communications system. any unauthorized reproductions, use or disclosure of this material, or any part thereof, is Strictly prohibited and is a violation of the Copyright Laws of the United States (17 U.S.C. Section 101 et. Seq.).

VODAVI reserves the right to make changes in specifications at any time and without notice. The information furnished by VODAVI in this material is believed to be accurate and reliable, but is not warranted to be true in all cases.

The Wanderer™ is a registered trademark of VODAVI Communications Systems, Inc.

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Important Safety Instructions



This symbol is to alert you to important operating or servicing instructions that may appear in the user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire or electrical shock.

When using your telephone equipment, basis safety precautions should always be followed to reduce the risk of life electric shock, and injury to persons, including the following :

- 1. Read and understand all instructions.*
- 2. Follow all warnings and instructions marked on the product.*
- 3. Use only with class 2 power source DC9V 500mA.*
- 4. Unplug this product from the outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.*
- 5. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, or Laundry tub in a wet Basement or near a swimming pool.*
- 6. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.*
- 7. Slots and openings in the cabinet and the back or bottom are provide for ventilation, to protect it from overheating. These openings should never be blocked or covered. the opening should never should never be placed near or over a radiator or heat register. This product should not be placed in a built in installation unless proper ventilation is provided.*
- 8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by animals or persons walking on it.*
- 9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock*
- 10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a of fire or electric shock. Never spill liquid of any kind on the product.*
- 11. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service contractor when some service or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.*

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

12. *Unplug all cords and refer servicing to qualified service personnel under the following conditions :*
 - A. *When the power supply cord or plug is damaged or frayed.*
 - B. *If liquid has been spilled into the product.*
 - C. *If the product has been exposed to rain or water.*
 - D. *If the product does not operate normally by following the operating instruction. Adjust only those control that are covered by the operating instructions. Improper adjustments of other controls may result in damage and require work by a qualified technician to restore the product to normal operation.*
13. *Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.*
14. *Do not use the telephone to report a gas leak in the vicinity of the leak.*

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Battery Cautionary Instructions

To reduce the risk of fire or injury to persons, read and follow these instructions :

- 1. For the cordless handset, use only the type and size of batteries specified in the users manual - 3.6V 600mAh Nickel Metal Hydride (NI-MH)*
- 2. Do not dispose of the batteries in a fire. The cells may explode. Check with local codes for possible special disposal instruction.*
- 3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.*
- 4. Exercise care in handling batteries in order not to short the battery with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.*
- 5. Do not attempt to recharge the batteries provided with or identified for use with this product. The batteries may leak corrosive electrolyte or explode.*
- 6. Do not attempt to rejuvenate the batteries provided with or identified for use this product by heating them. Sudden release of the battery electrolyte may occur, causing burns or irritation to eyes or skin.*
- 7. When replacing batteries, all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged batteries.*
- 8. When inserting the batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, which may result in leakage or explosion.*
- 9. Remove the batteries from this product if the product will not be used for a long period of time(several months or more) since during this time the batteries could leak, damaging the product.*
- 10. Discard "dead" batteries as soon as possible since they are more likely to leak in a product.*
- 11. Do not store this product, or the batteries provided with or identified for use with this product, in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting.*
- 12. If your product uses a rechargeable battery, charge the battery(ies) only in accordance with the instructions and limitations specified in the User's Manual.*

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

FCC (Federal Communications commission) Regulations

Modifying or tampering with the telephone's internal components can cause a malfunction and might invalidate the telephone's warranty and void your FCC authorization to operate it. If the trouble is harming the telephone lines, the telephone company might ask you to disconnect the telephone until you have resolved the problem.

As it complies with Part 68 of the FCC rules, your unit has been registered with the FCC. The FCC requires us to provide you with following information :

1. Connection and use with the nationwide telephone network - the FCC requires that you connect to a nationwide telephone network through a modular telephone outlet which is part68 compliant. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Check with your local telephone company.
2. Notification to the telephone company - FCC rules require that upon request you provide the following information to the phone company :
 - A. The line (telephone number) to which you will connect the telephone equipment, and
 - B. The FCC registration number and ringer equivalence (REN). These numbers are found on the back or bottom of your telephone equipment. The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of all RENs should be five or less. To determine the number of devices permitted in your area, contact your local telephone company.
3. Repair instructions - If it is determined that your telephone equipment is malfunctioning, the FCC requires that it not be used and be unplugged from the modular outlet until the problem has been corrected. Repairs to this telephone equipment can be made only by the manufacturer or its authorized agents, or by others who may be authorized by FCC. Unauthorized repairs void registration and warranty.
4. Rights of the telephone company - If your product is causing harm to the telephone network, the telephone company may temporarily discontinue your service. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem, and you will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your telephone Equipment. If such changes are planned, you will be notified in advance.
5. This product is compatible with inductively coupled hearing aids.
NOTE : This applies only if this product is equipped with a corded or cordless handset.

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

6. Programming/testing emergency numbers :

When programming emergency numbers and/or making test calls to emergency numbers :

- A. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.*
- B. Perform such activities in the off-peak hours, such as early morning or late evening*

INTERFERENCE INFORMATION : PART 15 OF FCC RULES

Some telephone equipment generates and uses radio frequency energy that, if not properly installed, may cause interference to radio and television reception.

This unit has been tested and found to comply with the limits for a class B computing device in Accordance with the specifications in subpart J of part 15 of the FCC rules.

These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television reception when it's in use, the user Is encouraged to try to correct the interference by one or more of the following measures :

- A. Where it can be done safely, reorient the radio or TV receiving antenna*
- B. To the extent possible, relocate the television, radio or other receiver with respect to The telephone equipment.*
- C. If your telephone product runs on AC power, plug your product into an AC outlet that's not on the same circuit as the one used by the radio or television.*

OPERATING INSTRUCTION FOR SATISFYING RF EXPOSURE COMPLIANCE

Your cordless telephone contains a low power transmitter. When the Push-to Talk button is pushed it sends out radio frequency (RF) signals. This device is authorized to operate at a duty factor not to exceed 50% in August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with Safety levels for hand-held wireless devices.

CAUTION : *To maintain compliance with the FCC's RF exposure guidelines, hold the transmitter and antenna at least 0.5 inches (1.25 centimeters) from your face, with the antenna pointed up and away from the face. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter. Use only the supplied antenna Unauthorized antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.*

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT
MODEL : CKTU-24 **USA VERSION**

TABLE OF CONTENTS

The Wanderer description	2
Unpacking You New Wanderer	3
Physical Description	4
Hardware Installations	5
- Desktop Installation	5
- Locating the Charging base	5
- How to install the NI-MH battery	5
For Activate the Wanderer	6
Using Your New Wanderer	7
- Answering Incoming Calls	7
- Placing Outgoing Calls	7
Intercom calls	7
Outside Calls	7
- Low battery indication	7
Button Feature	8
- On/Off Button	8
- Conference Button	8
- Flash Button	8
- Flex Button	9
- Mute Button	9
- Volume Button	9
- Hold Button	10
- Speed Button.....	11
- Transfer Button	12

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Other Feature	13
- Ringing	13
- Redial	13
- Pager Call	13
- LCD display	13
- LED Indicator.....	14
Questions & Trouble Shooting	15

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

The **Wanderer™** is a light weight, 2.4GHz, 40 channel, Digital cordless handset for use with your digital key telephone. With a range of 100 to 200 feet and a talk time of 4 hours, It provides mobility not available with a wired telephone. Talk the Wanderer to a nearby office, meeting, a conference room or to check inventory...you will still be available through your extension!

DIGITAL SPREAD SPECTRUM TECHNOLOGY

The Wanderer features digital Spread Spectrum Technology (DSST) which virtually eliminates Noise and other interference while greatly increasing operating range. DSST uniformly spreads the Signal over one of 40 independent frequency ranges, or channels, for maximum range and clarity. The charging base and Handset share a pre-assigned digital code which interfering signals do not have, so any Noise gets filtered out and the user enjoys reliable, crystal-clear sound quality.

SPREAD SPECTRUM TECHNOLOGY ADVANTAGES

Smart Channel Hopping - During operation, the Wanderer constantly monitors the transmission for interference. If interference is detected, the phone automatically scans for and hops to the next clear channel. This hopping is instant and does not interrupt normal conversation.

3 Level Power Output - The Wanderer constantly monitors the strength of the signal from the Handset to the Charging base, selecting one of three transmission power levels for maximum range and extended battery life.

2²⁴ Million Combination Digital Security Coding

The Wanderer uses a digital coding security system to prevent unauthorized use of your telephone line by other cordless phones nearby. The Wanderer has 2²⁴ million possible security code combinations, which is randomly generated every eight times the TALK button is pressed or Handset is picked up from the Charging base.

40 Independent Channel

Unlike other cordless phones reputed to have hundreds of channels(which is deceiving due to channel overlapping),the Wanderer features true 40 independent channels. Overlapping channels may increase the number of channel, but interference also occurs in multiple channels because of channel overlapping. On the contrary, the Wanderer's 40 independent channels exclusively keep their own space, allowing the auto scan feature to find the clearest channel before it goes to TALK mode.

LG ELECTRONICS

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT
MODEL : CKTU-24 **USA VERSION**


Unpacking Your New Wanderer

Open the box and remove all the contents. The contents consist of the following items :


- 1. Handset*
- 2. desktop charging base*
- 3. power adaptor (AC 120V/ DC 9V)*
- 4. Modular cable*
- 5. NI-MH Battery (3.6V 600mAh)*
- 6. User Guide*

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT
MODEL : CKTU-24 **USA VERSION**

Physical Description

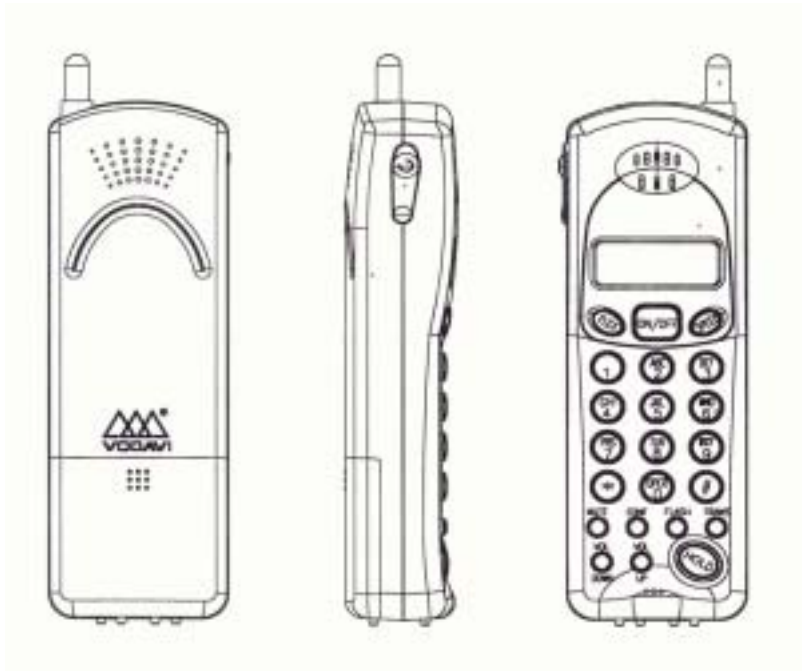

CKTU-24 HAND

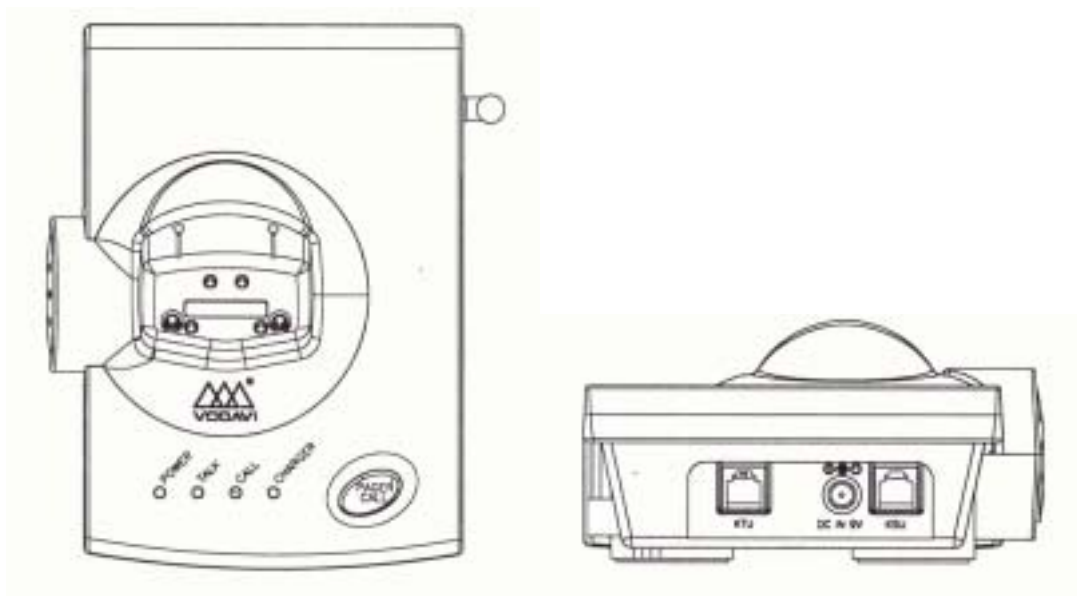

CKTU-24 BASE

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24 **USA VERSION**

Hardware Installations

1. Desktop installation

- Unplug the cable from your existing wired telephone. Plug this cable into the charging base jack labeled KSU
 - Plug the modular cable supplied with your new wanderer into the charging base jack labeled KTU. Plug the other end of this cable into your existing wired telephone
- NOTE :** use only the modular cable supplied with your wanderer to connect the charging Base to the existing wired telephone
- plug the power adaptor into a nearby wall outlet standard 230volt main power socket). Plug the other end into the charging base where it is labeled DC IN 12V

2. Locating the Charging Base

It is essential to the overall range and performance that the charging base and Handset can receive and transmit good radio signals.

Place the charging base close to : A telephone network socket

A main power socket

The best location is in an upstairs room and central to the area to be covered. If you experience poor range, try re-sitting the charging base.

- Do not locate in : direct sunlight, damp or high humidity locations.
- Do not locate close to : electrical equipment such as TV's, Computers, fridges, etc ., or close to Radiators, metal pipes or windows frames.

3. How to install the Ni-MH Battery

- Remove the battery compartment cover of the Handset by sliding it down.
- Connect the battery plug along slot into the Handset's battery connector
- Insert the Ni-MH battery pack into the battery compartment.
- Replace the battery compartment cover by sliding it up towards the Handset.
- Turn the switch on the bottom of the wanderer to the ON position and place the handset in The charging base

NOTE : The Ni-MH battery must be fully charged at least 12 hours before initial use.

TALK Time : If the battery is full charged, the length of time you may talk on your wanderer before it is Necessary to recharge it is approximately 4 hours.

STANDBY Time : The length of time your wanderer may be idle and out of its base before it is necessary to recharge it is approximately 7days

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24 **USA VERSION**

For Activate The Wanderer

Initialize the handset to the base (ID setting)

To initialize the handset to the charging base, perform the following :

simultaneously push and hold the **PAGE CALL** key on the charging base and the **FLASH** key on the handset for ten seconds, or until "**RESISTER**" appears on the display. the unit will beep once to indicate registration is complete (ID data is transmitted to Handset by RF part of charger base. The Handset is received ID data by RF part of Handset and transmitted ACK signal to RF part).

To register a station number to the handset, perform the following steps :

1. press the **HOLD**
2. using the wanderer dial pad, enter a station or intercom number(you may enter up to 4 random digits, but it is recommended that you use the same number as your intercom or extension)
3. press **HOLD**

Your telephone must now be assigned to the CKTU-24 mode . from your telephone, perform the following step :

Display Telephone

1. Dial **6 + 4 + 8** on the dial pad.
2. Press ***** repeatedly until **CKTU-24** appears on the display
3. Press **HOLD** to save

Non-display telephone : See you system administrator

Database information for the System Administrator

to assign the feature button, perform the following steps.

1. enter the program mode.
2. go to **FLASH 50, Hold, Page B, Button 17**.
3. Enter a 2-digit number **00-24** (**00**=disable, **01-24**=flexible button **1-24**)

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Using Your New Wanderer

Answering Incoming Calls

When your wanderer rings, the LCD indicates **Ringin**g.

1. if the handset is in the charging base and ringing, simply remove it to answer the call. You do not need press **ON/OFF** or If you are carrying the handset, press **ON/OFF** to answer the incoming call.
2. Press **ON/OFF** to end the call

NOTE : the wired telephone may ring 1-2 times before the wanderer rings. This in normal operation.

Placing outgoing calls

Intercom calls :

1. remove the wanderer from the charging base and press **ON/OFF** to access intercom dial tone.
2. dial the intercom number
3. Press **ON/OFF** to end call.

Outside call :

1. Remove the wanderer from the charging base and press **ON/OFF** to access a dial tone.
2. Dial **9** to access an outside line dial tone.
3. dial desired phone number.
4. press **ON/OFF** to end call.

Conditions :

- If multiple lines are ringing, the oldest ringing line is answered first.
- Outside line calls have priority over intercom calls.
- If **ON/OFF** is pressed during a call, that call is terminated.
- The wanderer does NOT make an audible ring if it is in the charging base, or if it is out of the charging base and turned OFF.
- Both the telephone and the wanderer make audible rings if the cordless handset is not in the charging base and turned ON .
- only one call may be placed on hold at a time on the wanderer.
- Calls may not be placed from your cordless handset while the telephone is active. **BASE BUSY** appears on the LCD.

Low Battery indication

The LCD on the Wanderer indicates a low battery condition when the battery charge falls below 25%

The Wanderer speaker emits an audible tone at 30-second intervals until it is return to the charging

Base. When a low battery condition occurs, as indicated by the LCD, the handset should be charged for **at least 8 hours**.

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Button Features

The function of each of the wanderer's 10 feature buttons : CONFERENCE, FLASH, MUTE, FLEX (programmable), HOLD, ON/OFF, SPEED, TRANSFER, VOLUME DOWN Up is described As follows :

On/Off Button

Use the **ON/OFF** button on your Wanderer to answer calls and place calls. The handset must be turned ON and removed from the charging base. To activate the handset, press **ON/OFF**. The LCD display indicates **TALK**. If your Wanderer is unable to locate the base, 3 short beeps are heard.

Conference Button

A conference call supporting up to 8 parties can be initiated from the Wanderer :

1. While on a call, press **CONF** to place the party on hold listen for dial tone.
2. to add outside parties to a conference call, dial **9 + telephone number**.
Or
To add internal parties to a conference call, dial the **extension number**.
3. when the party answers, press **CONF** to place the party on hold.
4. to add additional parties to the conference call, repeat steps 1 through 3 until all appropriate parties are on hold.
5. Press **CONF + CONF** to connect all parties together.

Condition :

- The wanderer is limited by the number of line appearance on the telephone.
- Parties may be dropped from the conference call through the telephone only. Parties may not be dropped from your wanderer.

Flash Button

The Flash button can be used to :

- Terminate a call and place a new call
- Activate certain feature provided by your telephone company.

Condition :

- The Flash feature may be stored as part of a Speed Dial Number.
- Pressing **FLASH** while connected to intercom dial tone reinitiate s the intercom dial tone.
- Pressing **FLASH** while on an outside call terminates the call and restores dial tone.
- Pressing **FLASH** during an intercom call or page announcement will not terminate the

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

intercom call or page announcement.

Flex Button

The flex button (**FLEX**) on the wanderer may be assigned to function as any one of the 24 flexible buttons on your telephone. To program the **FLEX** button on the wanderer :

1. Press **ON/OFF**
2. Press **SPEED + SPEED**
3. Press **FLEX**
4. Press the desired flexible button on the telephone.
5. Press **FLEX** Listen for confirmation tone.
6. Press **ON/OFF**

NOTE : Desired feature must be programmed as a button on the telephone prior to activating the **FLEX** button on the wanderer.

Condition :

- The default assignment is **NONE**.
- Not all feature may be assigned to the **FLEX** button on the wanderer (Answering Machine Emulation, Call Screening, Supervisor Monitor Barge-In, etc.).

Mute Button

The Mute button may be press during a conversation to disable the wanderer microphone. This feature is useful in noisy environments, or when a brief period of private side conversation is desired.

While on an intercom or outside line call :

1. Press **MUTE** to disable the microphone.
2. Press **MUTE** again to enable the microphone.

The LCD indicates **Mute** while the mute function is active.

Volume Button

Voice receive volume : To adjust the voice receive volume while on an intercom or outside call :

1. Press **VOL UP** to increase volume.
2. Press **VOL DOWN** to decrease volume.

NOTE : A total of 3 volume levels are available.

Ring Volume : To adjust the ring volume while in idle mode (ring volume have 2 positions : High and Low)

1. Press **VOL UP** to increase volume.
2. Press **VOL DOWN** to decrease volume.

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Hold Button

This feature enables you to place a call on hold while on your wanderer.

To place or retrieve a call on hold

1. While on an outside call, press **HOLD** to place the call on hold.
2. Press **HOLD** again to retrieve the call.

To place an outside call while on hold

1. Press **HOLD**.
2. Press **ON/OFF** to enter idle mode.
3. Press **ON/OFF** again, listen for dial tone. Place the outside call
4. Press **ON/OFF** to end the call and enter idle mode.
5. Press **ON/OFF** again
6. Press **HOLD** to retrieve the call on hold.

To switch calls from the wanderer to the telephone

1. Press **HOLD** to place the call on hold
2. Press **ON/OFF**.
3. Pick up the call by pressing the flashing, outside line, loop or intercom button on the telephone.

To switch calls from the telephone to the wanderer

1. Place the call on hold at the telephone.
2. Press **HOLD** on the telephone.
3. Make sure the **ON/OFF** button is not lighted and the handset is in the cradle.
4. Press **ON/OFF** on the wanderer.
5. Press **HOLD** to pick up the call on the Wanderer.

To process multiple calls from your wanderer

1. Press **HOLD** to place your call on hold. An intercom dial tone is heard.
2. Dial an intercom number or a trunk group access number to be connected to a second call.
3. If **HOLD** is pressed while on the second call, the **HOLD** button is ignored.

Condition :

- Only one call at a time may be placed on hold.
- If multiple calls are on hold at the telephone. The wanderer retrieves the last call put on hold.
- Intercom calls may be placed on hold or retrieved provided there are intercom flexible buttons Assigned on the telephone.

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Speed Button

You may assign up to shares (same as telephone) speed dial numbers on your wanderer to provide speedy access to frequently- used telephone numbers.

To program a speed dial number

1. Press **ON/OFF**
2. Press **SPEED + SPEED**
3. Enter the bin number **(00-19)**
4. Dial the telephone number to be stored.
5. Press **SPEED** then **ON/OFF**.

To dial a speed dial number

1. Press **ON/OFF**.
2. Press **SPEED**.
3. Enter the two-digit bin number **(00-19)**

To clear a speed dial number

1. Press **ON/OFF**
2. Press **SPEED + SPEED**.
3. Enter bin number **(00-19)**.
4. Press **SPEED**.
5. Press **ON/OFF**.

Condition :

- A speed dial number bin can contain 24 digits including :
 - Pause** – Press **HOLD**
 - Pulse to DTMF switchover** – Press **TRANS**
 - FLASH commands** – Press **FLASH**
 - Display Security** (conceals dialed number on LCD) – Press **TRANS** as the first digit in the bin
- If all outside lines are busy when you dial a speed dial number, a busy tone is heard.
- Speed dial numbers are protected by battery backup memory.
- Speed dial bins access outside lines only and cannot be programmed to access internal numbers.

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Transfer Button

External and internal calls may be quickly transferred to idle or busy stations by performing the following steps :

Screen transfer - while on a call :

1. Press **TRANS** + station number.
2. When call is answered, announce the transfer.
3. Press **ON/OFF** to complete the transfer.

Unscreened transfer - While on a call :

1. Press **TRANS** + station number
2. Press **ON/OFF** to complete the transfer.

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Other Features

Ringling

The audible ring signal on the Wanderer can identify the type of incoming call as internal or external

Internal Ring Signal	External Ring Signal
Single ring - repeated	Double ring - repeated

Condition :

- The telephone associated with the wanderer may ring 1 or 2 times before the wanderer rings. This is considered normal operation.
- A screened transfer call rings as an internal call until the supervising party hangs up, at which time it changes to an external signal.

Redial

To redial an outside call, perform the following step :

1. Press **SPEED** + #.

NOTE : for added security, only # is displayed on the **LCD**

Pager Call

The pager call button is located on the charging base and is used to locate the wanderer handset.

1. Press **PAGER CALL** on the charging base. The base sends a stuttered tone burst to the handset for 30 seconds, and the LCD on the handset indicates **Paging Call**.
2. Press **ON/OFF** on the handset to stop the ringing.

Condition :

- when the pager call button is activated, the Call LED pulses.

LCD display

Each mode or status description is following by the appropriate LCD display :

- Internal call ring : **Ringling**
- External call Ring : **Ringling**
- Talking : **Talk**
- Call Muted : **Mute**
- Telephone in use : **Base Busy**
- Conference call : **Conference**
- Call on hold : **Holding**
- Flex button : **Flex**

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

- Transfer call ring : **Ring**

LED indicator

The LED indicators on the charging base function as follows :

- Power : light when the base is properly plugged in
- Talk : light during an active call
- Call : pulses when the pager call button is activated
- Charger : light when the handset is resting properly in the base.

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

Frequently Asked Questions

Questions& symptom	Answers
No dial-ring	<p>Check for the telephone line connectors that they are pushed in firmly until they click.</p> <p>Check the Ni-MH battery pack connection inside the battery compartment on the Handset.</p> <p>If you had a power failure or had unplugged the charging base, replace the Handset on the charging base for two to five seconds to reset the system. Make sure the handset and charger base are registered to each other. When they are not registered together, the handset cannot connect to the phone line to dial out. See the instruction on page 5, "Initialize the handset to the charger base".</p>
No power on the Handset	<p>Check the Ni-MH battery pack connection inside the battery compartment on the Handset.</p> <p>The Handset rechargeable Ni- MH battery pack may need to be charged.</p>
Does not charge	<p>Make sure the charging on both the charging base and the Handset are in contact during charging.</p> <p>The charging contacts may need to be cleaned with an alcohol-moistened cloth.</p> <p>The Ni-MH battery pack may need to be discharged first before a full charge.</p>
Range is limited	<p>Raise or reposition the antenna on the charging base or Handset.</p> <p>Move the charging base so that it is centrally located in your residence or office and make sure that the charging base is not located near appliances.</p>
While on a call, you hear Another call on the line or Experience radio frequency Interference. (chattering or hum)	<p>The Handset rechargeable Ni- MH battery pack may need to be charged.</p> <p>You may be out of normal operating range. Move closer to the charging base.</p> <p>Switch channel to a clear channel.</p> <p>Do not use this phone within 20 feet of a working microwave. Microwaves produce frequencies in this range which may cause interference. This interference is normal for all 2.4GHz phone and should not be considered a product defect.</p>
PAGE does not operate	<p>Check the Ni-MH battery pack connection inside the battery compartment on the Handset.</p> <p>Check the power plug of charging base.</p>
Why can't I initiate a Conference call ?	<p>Contact your system administrators to confirm the conference feature is enabled.</p>
My handset no longer Rings when it is out of the Charging base	<p>There are several reasons why the handset may have stopped ringing.</p> <p>The handset may be out of range or turned OFF</p> <p>Check the H-T-P setting on the wired telephone for hands-free mode. The telephone must be in tone mode for the handset to ring.</p> <p>If distinctive ringing on the wired telephone is set to Type 36(no ring), Handset LCD displays ringing, but no tone is heard</p>

2.4GHz DIGITAL CORDLESS KEY TELEPHONE UNIT

MODEL : CKTU-24

USA VERSION

<p><i>When I try assign my Display telephone to the CKTU-24 mode, CKTU-24 does Not appear in the Wanderer display.</i></p>	<p><i>Confirm software version. Version 1.34 or later must be installed to enable CKTU-24 mode and use the Wanderer.</i></p>
--	--