

Your photos and videos

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the side volume keys.

Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
 - 2 Touch the screen to open the options menu.
 - 3 Touch **Set as** , then touch **Set Wallpaper**.
-

Multimedia

You can store multimedia files to a memory card to have easy access to all your image and video files.

Touch **Gallery**. You can open a list of catalogue bars that store all your multimedia files.


NOTE: Make sure you install a memory card into the phone to save photos and access all your pictures. Without a memory card, the phone will not display any photos or videos without Picasa images which are in your Picasa album.

View modes

Touch **Gallery** and you will see Folder view.

Touch any folder and it will turn to Grid view mode. If you tap any photo, it will turn to Full view mode.

Timeline view

LG-E510f **Gallery** provides a timeline view of your photos and videos. From Grid view mode, drag  to the right. The date you took your photos will be displayed starting with the most recent. If you select a specific date, all the photos you took on that day will be grouped over a white background.

My Images options menu

Select a photo, then press **Menu** key twice to see the available options.

Sending a photo

- 1 To send a photo, touch and hold the photo you want.
 - 2 Select **Share**. Choose from **Bluetooth, Email, Gmail, Messaging, Facebook, Twitter** or **Picasa**.
 - 3 When you choose **Email, Gmail** or **Messaging**, your photo will be attached to a message, then you can
-

Multimedia

write and send the message normally.

TIP! If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.

NOTE: Share option may vary by area, phone, carrier, plan and version of Android Phone Software.

Sending a video

- 1 To send a video, touch and hold the video you want.
- 2 Select **Share**. Choose from **Bluetooth, Email, Gmail, Messaging, or YouTube™**.
- 3 When you choose **Email, Gmail or Messaging**, your video will be attached to a message, then you can write and send the message normally.

Using an image

Choose images to use as wallpaper or to identify callers.

- 1 Touch and hold a photo, then select **More > Set as**.
- 2 Choose from **Contact icon, or Wallpaper**.

Creating a slide show

From Full view mode, you can create a slide show so you don't have to open and close each image.

- 1 Touch photo, then select **Slideshow**.

Checking your photo

You can view a photo's detailed information, such as **Name, Date, Time, Size** and **Type**.

- 1 Touch **Menu > More > Details**.

Transferring files using USB mass storage devices

To transfer files using USB devices:

- 1 Connect the LG-E510f to a PC using a USB cable.
- 2 If you didn't install LG Android Platform Driver on your PC, you need to change settings manually. Choose **Settings > SD card & phone storage > Activate Mass storage only.**
- 3 Touch **Turn on USB storage**, then touch OK to conform.
- 4 You can view the mass storage contents on your PC and transfer the files.

NOTE: You need to install an SD card first. Without an SD card, you cannot use USB mass storage.

NOTE: If you installed LG Android Platform Driver, you will see a pop up with 'Turn on USB storage' immediately.

Music

Your LG-E510f has a built-in music player that lets you play all your favourite tracks. To access the music player, touch Music.

Playing a song

- 1 On the home screen, touch **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to go back to the first part of the song. Touch  two times to go back to the previous song.

To change the volume while listening to music, press the up and down volume keys on the right side of the phone.

Touch and hold any song in the

Multimedia

list. It will display **Play, Add To Playlist, Use As Phone Ringtone, Delete, Details,** and **Search** as options.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Using the radio

Your LG-E510f has a built-in FM radio so you can tune into your favourite stations and listen on the go.

NOTE: You must attach your headphones to listen to the radio. Insert them into the headphone

— jack.

Searching for stations

You can tune into radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep tuning in.

You can store up to 48 channels on your phone.

To tune in automatically



- 1 On the home screen, touch the **Applications** tab and select **FM radio**.
- 2 Press the **Menu** key and touch **Auto scan**.
- 3 If there are pre-set channels, you will see a pop-up with **'Reset all channels and start Auto scan?'** If you choose OK, all the pre-set channels will be deleted and Auto scan will start.
- 4 During Auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels before you stop scanning will be saved.

NOTE: You can also manually tune into a station using the displayed wheel.

Resetting channels

- 1 Touch the scanned channel list  > **Menu** key > **Reset**.

Listening to the radio

- 1 Touch **Listen Via** icon   and you can set Speaker or Wired headset to listen to the radio.



TIP! To improve radio reception, extend the headset cord, which functions as the radio antenna.

WARNING:

If you connect a headset not specifically made for radio reception, radio reception may be poor.

Utilities

Setting your alarm

- 1 On the home screen, touch the **Applications** tab and select **Clock**.
- 2 If you want to add a new alarm, touch  then touch on Add Alarm.
- 3 Set the time and touch  to turn on the alarm. After you set the time, the LG-E510f will let you know how much time is left before the alarm sounds.
- 4 Set Repeat, Ringtone or Vibrate and add Label to name the alarm. Touch **Done**.
- 5 Press the **Menu** key to add alarm or adjust Snooze duration or alarm volume from settings.

Using your calculator

- 1 On the home screen, touch the **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.

- 3 For simple calculations, touch the function you want (+, -, x, or ÷), followed by =.
- 4 For more complex calculations, press the **Menu** key, touch the **Advanced panel**, then choose **sin, cos, tan, log**, and so on.

Adding an event to your calendar

- 1 On the home screen, touch the **Applications** tab and select **Calendar**.
 - 2 First, you must create a Google account to use Calendar.
 - 3 To check the event, touch the date. Touch and hold if you want to add a New event. Then touch **New event**.
 - 4 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin and finish.
 - 5 Also, touch **Where**, then enter the location.
-

Utilities

- 6 If you would like to add a note to your event, touch **Description** and enter the details.
- 7 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 8 Touch **Done** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

Changing your calendar view

- 1 On the home screen, touch the **Applications** tab and select **Calendar**. Press the **Menu** key.
- 2 Select the calendar view for a particular day, week, or month.

ThinkFree Office

ThinkFree Office allows you to read documents, and provides limited editing functions for Microsoft Word, Excel and PowerPoint. However, you cannot edit a PDF file.

- 1 Touch and hold a file, then Open, Upload, Rename, Move, Copy, Delete, Send and Properties options are available. This is depending on the file type.



Press Menu key

-  **New** – Add Document, Spreadsheet, Presentation or Folder.
-  **Refresh** – Refresh datas.
-  **Sort** – Sort by Name, Date or Size.
-  **Preferences** – Adjust ThinkFree Office settings.
-  **Updates** – Update ThinkFree Office.
-  **About** – More information about ThinkFree Office.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 On the home screen, touch the **Applications** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end recording.
- 4 Press the **Menu** key and select **Use as ringtone** to set as the **Phone** ringtone.

NOTE: Touch **Go to list** to access your **Voice recordings**. You can listen to the saved recording.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching the **Menu** key and **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** and **Messaging**, the voice recording will be added to the message that you write and send it normally.

The Web

Browser

Browser gives you a fast, full-colour world of games, music, news, sports, entertainment, and much more, right on your mobile phone. Wherever you are and whatever you're into.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using options

Press the **Menu** key to view options.

 **New window** – Open a new window.

 **Bookmark** – Add/Show Bookmark, show Most Visited Site and History.

 **Windows** – Show all your open windows.

 **Refresh** – Touch to refresh the web page.

 **Forward** – Goes to the page you connected to after the

current page. This is different from the Back key, which goes to the previous page.

More

- **Add bookmark** – Add the current web page as bookmark.
- **Find on page** – If you enter a letter or any word, it will mark all the letters you entered from the web page.
- **Select Text** – Touch and select the lines you want to copy. Long touch any input box, then you can paste it.
- **Page info** – Show the web page information.
- **Share Page** – Send the web page.
- **Downloads** – Show downloaded history.
- **Settings** – Set browser settings.

Tip! To return to the previous web page, press the **Back** key.

Adding and accessing bookmarks

- 1 Press the **Menu** key then select **Bookmarks**.
- 2 Touch a bookmark > tap on add and enter a name for the bookmark followed by its URL.
- 3 To access the bookmark, simply touch the bookmark. You will be connected to the bookmarked page.

Changing Web browser settings

Press the **Menu** key then select **More > Settings**. By using this settings you can customise your browser settings.

Settings

Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. Also, you can set mobile networks, airplane mode.

Airplane mode – After setting Airplane mode, all wireless connections will be disabled.

Sound

Adjust sound, notification, default settings, vibrate mode. You can manage audible and Haptic feedback also.

Display

Brightness – Adjust the brightness of the screen.

Auto-rotate screen – Set to switch orientation automatically when you rotate the phone.

Animation – Set to display an animation

Screen timeout – Set the time for screen timeout.

 
Location & Security

Use wireless networks – If you tick Use wireless networks, your phone will determine your approximate location by using Wi-Fi and mobile networks. When you tick this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Use GPS Satellites – If you tick Enable GPS satellites, your phone will determine your location to street-level accuracy.

Set up screen lock – Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a PIN or Password instead of a Pattern or leave it as None.

When you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.



Set up Sim card lock – Set up SIM card lock or change SIM PIN.

Visible passwords – Select to show passwords as you type them or deselect to hide passwords as you type them.

Select device administrators – Add more administrations.

Use secure credentials – Allows you to access secure certificates.

Install from SD card – Choose to install encrypted certificates from your SD card.

Set password – Set or change the credential storage password.

Clear storage - Clear credential storage of all contents and reset its password.

Applications

You can manage applications and set up quick launch shortcuts.

Unknown Sources – Default setting to install non-Market applications.

Manage Applications – Manage and remove installed applications.

Running services - Check services that are currently running

Development – Set options for application development.

Accounts & sync

Activate Background data synchronisation or Auto-sync. Check or add accounts.

Privacy

You can do Factory data reset. Be careful as this will erase all your data.

Settings

SD card & phone storage

Check total available SD card space. Touch **Unmount SD card** for safe removal. **Format the SD card**, if you want to delete all data from the SD card.

Search

Touch Google search and you can adjust Google search settings.

Adjust Searched items so you can get necessary information effectively. Choose from **Web, Apps, Contacts, Messaging, Music, Twitter** and **Voice Search**.

Date and time

Set date, time, time zone, and formats.

Language & keyboard

Set local language and region, Input method and user dictionary options.

Accessibility

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

Note: Requires additional plug-ins to become selectable.

Voice input & output

You use the Text-to-Speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

About phone

View legal information, and check phone status and software version.

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP).


You can enjoy wireless Internet with Wi-Fi, without extra charges.

Turn on Wi-Fi


From Home Screen , open Notification drawer and touch



on.

From Menu, choose Settings > Wireless & network settings > Wi-Fi .

To connect to Wi-Fi

Choose the Wi-Fi network you want to connect with. If you see  , you need to enter a password to connect.

TIP!

If you are out of the Wi-Fi area and choose 3G connection, additional charges may be applied.

USB tethering

You can share your phone's internet connection with your computer.

You can tether your phone to your computer with a USB cable.

Settings > Wireless & network settings > Tethering & portable hotspot > USB tethering.

For more information regarding USB tethering, click Help.

TIP!

To use USB Tethering, you need to install PC Suite onto your PC first.

Wi-Fi Tethering

Use your LG-E510f as a portable Wi-Fi hotspot.

Settings > Wireless & network settings > Tethering & portable hotspot > Portable Wi-Fi hotspot.