



LG-E720k User Guide

- Some of the contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset has a touch screen keypad and is not recommended for people with impaired vision.
- Copyright ©2010 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Google Mail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

Body-worn Operation

This device has been tested for typical body-worn operations with the distance of 0.79 inches (2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain metallic components.

Contents


Guidelines for safe and efficient use	7
Product care and maintenance	8
Important notice	15
1. Phone memory	15
2. Optimising Battery Life	15
3. Installing an Open Source OS	16
4. Using Unlock pattern	17
5. Using Safe Mode and Hard Reset	17
6. Connecting to Wi-Fi networks	18
7. Using a microSD card.....	19
8. Opening and Switching Applications.....	19
9. Connecting your phone to a computer via USB	20
Getting to know your phone .	22
Installing the SIM card and battery	24
Charging your phone	25
Installing the memory card ...	26
Formatting the memory card.	27
Your Home screen	28
Touch-screen tips	28
Note	28
Touch calibration.....	28
Lock and unlock screen.....	29
Using your home screen	30
Select your default home screen	30
LG Home	31
Android Home	33
Adding widgets to your home screen.....	34
Getting back to a recently used application.....	34
Google Account Set-up	37
Creating your Google account.....	37
Signing in your Google account.....	37
Calls	39
Making a call	39
Calling your contacts	39
Answering and rejecting a call.....	39
Adjusting call volume	39
Making a second call	39
Viewing your call logs.....	40
Call settings.....	40

Contents

 
Contacts	42	Viewing and updating your status	50
Searching for a contact	42	Removing accounts on your phone	50
Adding a new contact.....	42	Camera	51
Favorite Contacts	43	Getting to know the viewfinder.....	51
Creating a group	43	Using the focus mode.....	52
Messaging/E-mail	44	Taking a quick photo	52
Messaging.....	44	Once you've taken the photo	53
Sending a message.....	44	Using the advanced settings	53
Entering text	45	Viewing your saved photos ...	55
T9 mode	45	Video camera	56
Abc mode.....	45	Getting to know the viewfinder.....	56
123 Mode	46	Shooting a quick video	57
Entering accented letters	46	After shooting a video.....	57
Example	46	Using the advanced settings	57
Setting up your email	46	Watching your saved videos..	58
Sending an email using your new account.....	46	Your photos and videos	59
Retrieving your email.....	47	Viewing your photos and videos	59
Changing your email account's settings	47	Adjusting the volume when viewing a video	59
Threaded box	47	Setting a photo as wallpaper.	59
Using smilies	48	Editing your photos	59
Changing your messaging settings	48		
Social Networking	49		
Adding your account to your phone	49		

Rotating your photo	60	Video editor	67
Adding text to a photo	60	Storyboard.....	67
Adding an effect to a photo...60		Music Movie	68
Cropping a photo	61	Auto cut	68
Tuning your photo	61	Playing a game	68
Adding frames	61	Transferring files using USB	
Adding clipart	61	mass storage devices.....	69
Using the drawpad	62	Music.....	69
Adding stamps.....	62	Playing a song	69
Resizing	62	Using the radio	70
Editing your videos	62	Searching for stations	70
Trimming the length of the		Resetting channels.....	71
video	62	Listening to the radio.....	71
Selecting transition style	62	Google applications	72
Adding subtitles	63	Google Maps	72
Adding edit effects	63	Android Market.....	72
Grabbing a frame	63	Google Mail	73
Adding dubbing to your video	64	Google Talk.....	73
Multimedia.....	65	Utilities.....	74
Timeline view.....	65	Setting your alarm.....	74
My Images options menu.....	66	Using your calculator.....	74
Sending a photo.....	66	Adding an event to your	
Sending a video	66	calendar	75
Using an image.....	66	Changing your calendar view	75
Creating a slideshow	66	Quickoffice	75
Checking your photo	66	Voice recorder	76
Media Player	67	Recording a sound or voice...76	

Contents

The Web	77	Wi-Fi	83
Browser.....	77	1. How to set up Wi-Fi	83
Accessing the Web.....	77	2. Wi-Fi network profile support	83
Using the Web tool bar	77	3. How to obtain the MAC address	84
Using options.....	77	Software update	85
Adding and accessing bookmarks	78	Phone Software update	85
Changing Web browser settings	78	DivX Mobile 	85
Settings	79	Accessories	86
Wireless controls	79	Technical data	87
Sound & display	79	Troubleshooting	88
Data synchronization	80		
Security & location	80		
To lock your screen by using the Pattern Lock	81		
Applications.....	81		
SD card & phone storage.....	81		
Date and time	82		
Locale and text	82		
Search	82		
Accessibility.....	82		
Speech synthesis	82		
About phone	82		

Getting to know your phone

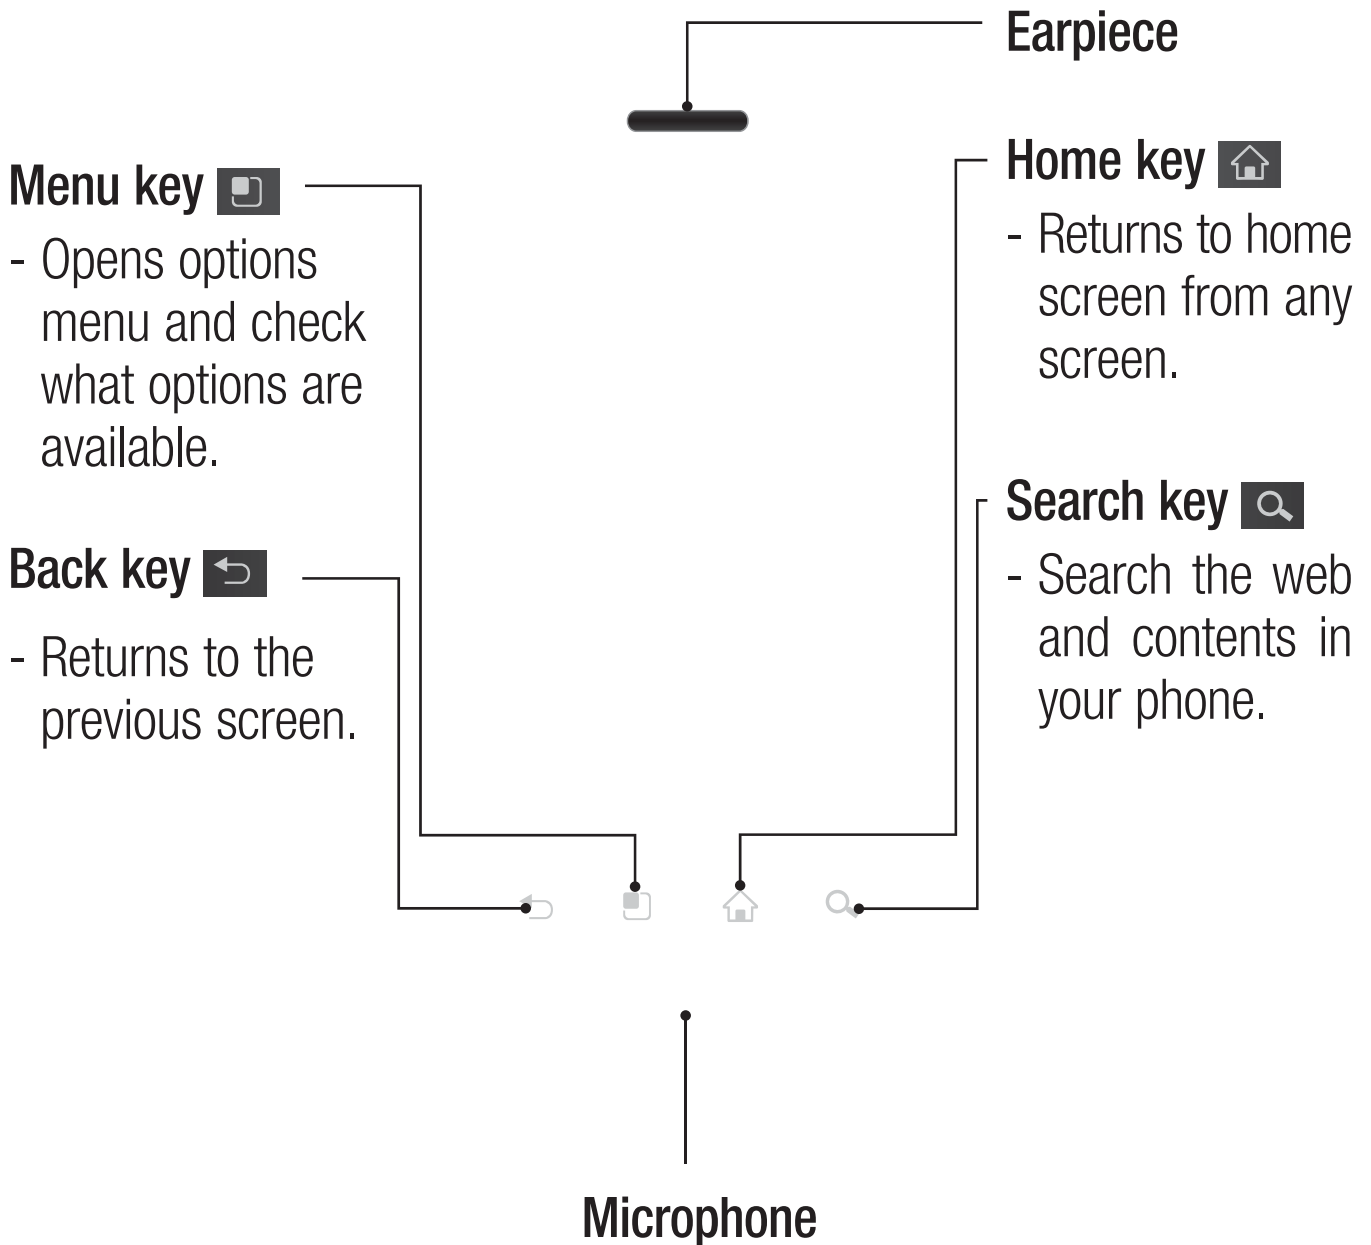

**Charger, micro USB
cable connector**



 
Volume keys

- On the home screen:
controls ringer volume.
- During a call: controls
your earpiece volume.
- When playing a track:
controls volume.

**Stereo
earphone
connector**

Camera lens

**microSD
memory
card slot**

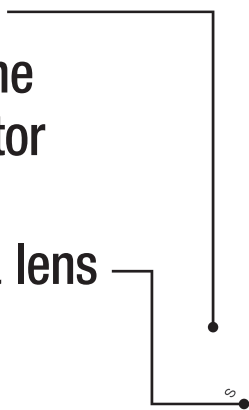

Back cover

Battery

 
 
**SIM card
slot**

Getting to know your phone

Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

1 With the back of the phone facing you, remove the back cover. To remove the back cover, firmly press your thumbs on either side of the back cover, and slide the cover below the camera lens.

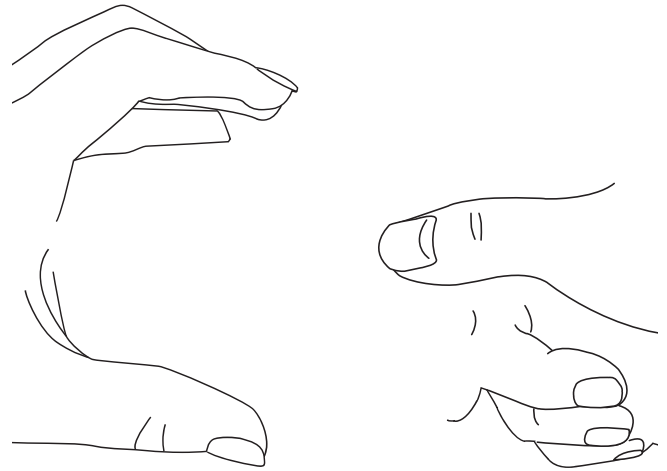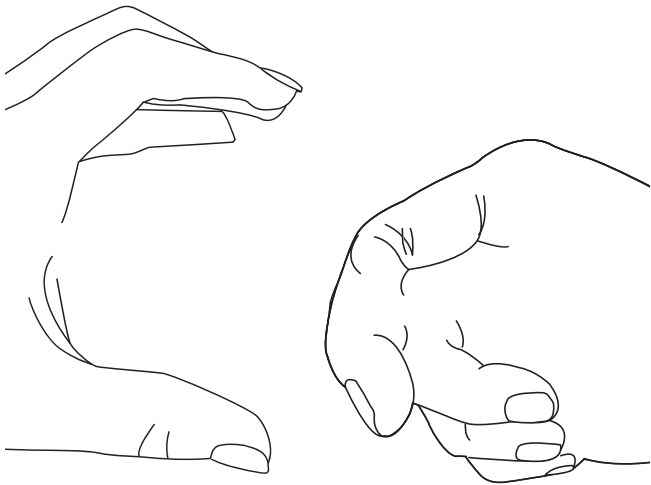


2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.

3 Insert the battery into place by aligning the gold contacts on the phone and the battery, then gently press the battery until it snaps into space.

4 Replace the back cover of the phone and slide it down into place until the latch clicks.

Charging your phone

Slide back the cover of the charger connector on the side of your LG-E720k. Insert the charger, and plug it into an electrical outlet. Your LG-E720k must be charged until you can see .

NOTE: The battery must be fully charged initially to improve battery lifetime.

Getting to know your phone

NOTE: The LG-E720k has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.

- 2 Open the slot protection and insert the memory card into the slot. Make sure the gold contact area is facing downwards.

Installing the memory card

To store multimedia files such as captured images by using a built-in camera, you must insert a memory card to your phone.

To insert a memory card:

NOTE: The LG-E720k supports upto a 32GB memory card.

- 1 Turn the phone off before inserting or removing the memory card. Remove the back cover.

3 Close the slot protection.

 **WARNING!**

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: All files on the card are deleted when you format the card.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Scroll to and touch **SD card & phone storage**.
- 4 Unmount SD Card.
- 5 Touch **Format SD card**, then confirm your choice.
- 6 If you set the pattern lock, input the pattern lock and select **Erase Everything**. The card will then be formatted and ready to use.

NOTE: If there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

Tip!

If your memory card is already Unmount, you can use the following step to format it.

Touch **Applications > Settings > SD card & phone storage > Format SD Card**.

Your Home screen

Touch-screen tips

Here are some tips on how to navigate around your phone.

Touch - To choose a menu/option or open an application, touch it.

Touch and hold - To open an options menu or grab an object you want to move, touch and hold it.

Drag - To scroll through a list or move slowly, drag across the touch screen.

Flick - To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

Note

- To select an item, touch the centre of the icon.
- Do not to press too hard; the touch screen is sensitive enough to pick up a light, firm touch.

- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Touch calibration

Calibrating the device screen involves tapping the centre of a cross as it moves around the screen. This process ensures that when you tap the screen, the tapped item is activated.

If your phone does not accurately respond to screen taps, follow these steps to re-calibrate.

1. Tap **Application > Settings > Sound & display**, and scroll to the **Touch settings**.
2. Touch **Touch calibration**, and follow the instructions on the screen.
3. After calibration is completed, choose between **Check calibration** and **Save without check**, then complete Calibration.

Lock and unlock screen

Whenever your LG-E720k is not in use, it will return to the lock screen.

If you do not use the phone for a while, the home screen or other screen you are viewing, is replaced with the lock screen when the screen blacks out, to conserve the battery. To wake up your phone, press **Send, Home,** or **Power** key. The lock screen will appear. Touch the lock icon and drag your finger to the right to unlock your home screen. The last screen you were working on opens.

Your Home screen

Using your home screen

Touch the **Applications** tab at the bottom of the screen.
You can then view all your installed applications.



NOTE: Some screen images may be different depending on your phone provider.

Select your default home screen

 
The user interface is based on two types of home screens: **LG Home** and **Android Home**.

You can set your favorite home screen as the default.

If you want to change the default home settings, choose **Home selector** from the applications menu.

LG Home

Simply swipe your finger to the left or right to view the panels. You can also customise each panel with widgets, shortcuts which are shortcuts to your favourite applications, folders and wallpapers.

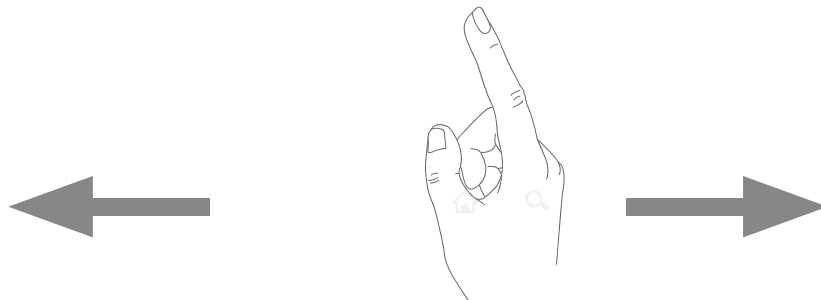


Tip!

Small dots at the application tab on the bottom of the screen indicate which panel you're viewing.

Your Home screen

In your LG home screen, you can view quick keys on the bottom of the screen. The quick keys provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch-dialling pad to make a call.

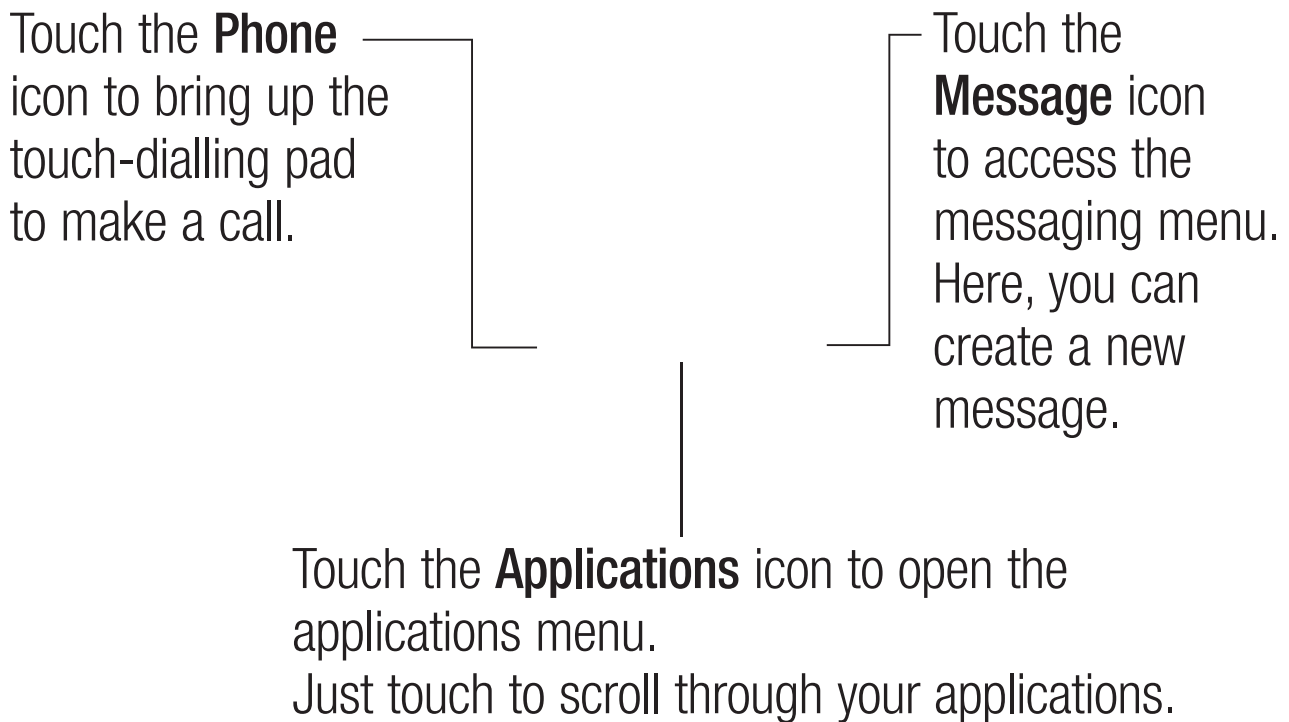


Touch the **Message** icon to access the messaging menu. Here, you can create a new message.

Touch the **Applications** icon to open the applications menu.
Just touch to scroll through your applications.

Android Home

 Simply swipe your finger to the left or right to view the panels. You can also customise each panel with widgets, shortcuts which are shortcuts to your favourite applications, folders and wallpapers.

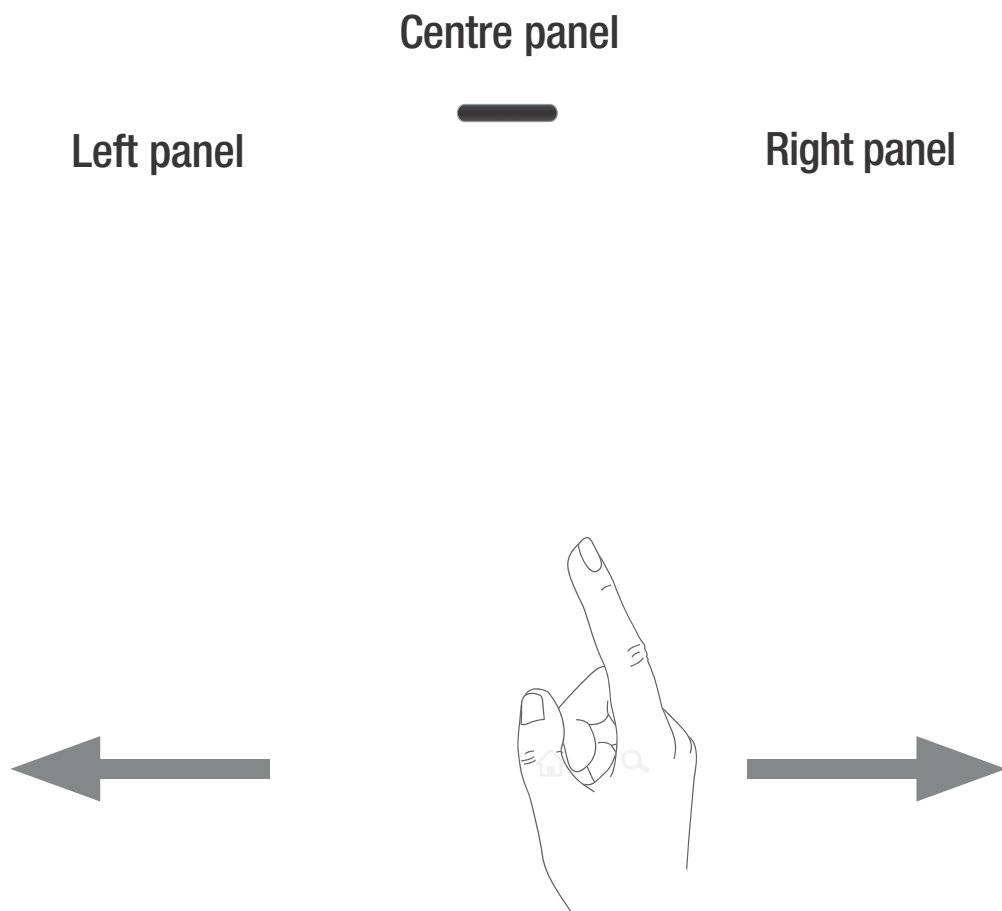

Touch the **Applications** icon to open the applications menu.

Just touch and slide up or down the screen to scroll through your applications.

|
Applications

Your Home screen

Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets, or folders to it. For more convenience using your phone, add your favorite widgets on the home screen.

NOTE: LG Home and **Android Home** provide this function. To add an desired icon to your home screen:

- 1 On the home screen, touch **Menu** key and select **Add**.
- 2 On the **Add to Home screen** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it.
- 4 Select **Contacts with phone numbers** from the list and tap it.

- 5 You will see a new folder's icon on the home screen. Drag it to the desired location on the desired panel and release your finger from the screen.

To remove an application icon from the home screen:

- 1 Touch and hold that icon. The **Applications** icon will be changed to the **Trash** icon.
- 2 Drag and drop an application icon to the Trash icon.

Getting back to a recently used application

- 1 Touch and hold the **Home** key. The screen will show you a pop up with icons of applications that you've used recently.
- 2 Touch an icon to open its application. Or, touch **Back** key to return to the current application.

 
Notification drawer

The notification drawer runs across the top of your screen. Touch and slide the notification drawer down with your finger. Or, on the home screen, touch **Menu** key and select **Notifications**. Here, you can check Wi-Fi, Bluetooth, GPS status as well as other notifications.







Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.













Below is a table explaining the meaning of icons you're likely to see in the status bar.















[Status bar]

Icon	Description
	No SIM card
	No signal
	Wi-Fi is on and connected
	Wired headset
	Call forward
	Call hold

Your Home screen


Icon	Description
	Speakerphone
	Call mute
	Missed call
	Bluetooth on
	Bluetooth connected
	System warning
	Alarm
	New voicemail
	Flight mode
	Silent
	Vibrate
	No SD card

Icon	Description
	Battery fully charged
	Battery is charging
	Data in
	Data out
	Data in and out
	USB to PC
	Download
	Upload
	GPS is acquiring
	GPS is on
	Service message
	Setting message

Google Account Set-up

The first time you open the Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you're prompted to create one.

Creating your Google account

- 1 On the home screen, touch **Applications** tab  to open the applications menu.
- 2 Tap **Google Mail**, and tap **Next** > **Create** to start the Google Mail set up wizard.
- 3 Touch a text field to open the touch keyboard, and enter your name and username for your Google account. When you enter the text, you can move to the next text field by touching **Next** on the keyboard.

- 4 When you're finished to input name and username, tap **Next**. Your phone is communicating with Google servers and checking username availability.
- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing in your Google account

- 1 Enter your e-mail address and password, then tap **Sign in**. Wait for signing in.
- 2 After sign in, you can use Google Mail and take advantages of Google services on your phone.




Google Account Set-up

 
3 Once you have set up your Google account on your phone, your phone will be automatically synchronised with your Google account on the web. (It depends on your synchronization settings.)

After sign in, you can use Google Mail, Google Calendar, Android Market and Google Map; download applications from Android Market; back up your settings to Google servers; and take advantage of other Google services on your phone.


Calls

Making a call


- 1 Touch  to open the keypad.
- 2 Enter the number on the keypad. To delete a digit, touch the **Clear** icon  .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch **End**.

TIP! To enter “+” to make international calls, touch and hold down  .


Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call, then select the number to use if there is more than one for that contact.

Answering and rejecting a call

When your phone rings, press the **Send** key to answer. You can also drag the **Call** icon  to the right.


Press the **End** key to reject an incoming call.

TIP! When the phone rings, touch and slide the silent icon  to the left if you want to switch to silent mode.




Adjusting call volume

To adjust the volume during a call, use volume up & down key on the left side of the phone.

Making a second call

- 1 During your initial call, Touch the **Menu** key then touch  . Then, select the number you want to call.

Calls

- 2 Dial the number, or search your contacts.
- 3 Touch the **Call** icon  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch  to toggle between calls. Or touch  to make a conference call.
- 6 To end active calls, touch **End call**. If there is no active call, it will end the **Hold call**. To end all calls at the same time, touch the **Menu** key and select **End call**.

NOTE: You will be charged for each call you make.

Viewing your call logs

On the home screen, press the **Send** key to view **Call log**.

View a complete list of all dialed, received, and missed voice calls.

TIP! Touch any single call log entry to view the date, time, and duration of the call.

TIP! Touch the **Menu** key, then touch **Clear call log** to delete all the recorded items.

Call settings

You can configure phone call settings, such as call forwarding, call waiting, and other special features offered by your carrier.

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **Settings**.
- 3 Tap **Call settings**, and choose options that you want to adjust.

Fixed Dialing Numbers – Select Fixed Dialing Numbers to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

Voicemail – Set up your voicemail number.

Call forwarding – You can configure how your calls are forwarded when you're on the phone, when you don't answer, and so on. Choose from **Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when unreachable**.

Then enter the number to forward to.

NOTE: Diverting calls will incur charges. Please contact your network operator for details.

Call barring – Select when you would like calls to be barred. Enter the call barring password. Please check with your network operator about this service.

Call costs – View the charges applied to your calls. This service is network dependent; some operators do not support this function.

Call duration – View the duration of all calls including all, dialed, received calls and the last call.

Additional call settings – This lets you change the following settings:

Caller ID : Choose whether to display your number on an outgoing call.

Call Waiting : If call waiting is activated, the handset will notify you of an incoming call while you are on a call.

Select line : Allows to select line.


Contacts

You can add contacts on your phone and synchronise them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact



There are two ways to search for a contact:

On the Home screen

- 1 On the home screen, touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keypad.

TIP! To search by group, touch the **Contacts** tab at the top of the screen and select **Groups**. This will display a list of all your groups.


Adding a new contact

- 1 On the home screen, touch , and enter the new contact's number, then touch the **Menu** key, touch **Save number** and then **New contact**.
- 2 If you want to add a picture to the new contact, touch . You can use a saved picture or take a new one.
- 3 Touch a text field to open the touch keyboard, and enter a new contact's name.
- 4 Select the contact type by tapping **Phone** tab and choose from **Phone**, **SIM** and **Google**.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch **Done** to save the contact.


Favorite Contacts

You can classify frequently called contacts as favourites.


To add a contact to your favourites

- 1 On the home screen, touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star turns gold.

To remove a contact from your favourites list

- 1 On the home screen, touch  to open your contacts.
- 2 Touch the **Favorites** tab and choose a contact to view its details.
- 3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

Creating a group

- 1 On the home screen, touch  to open your contacts.
- 2 Touch **New Group** and then enter a name for the new group.
- 3 You can set a ringtone for the newly created group.
- 4 Touch **Done** to save the group.

NOTE: If you delete a group, the contacts assigned to that group will not be lost. They will remain in your contacts.

Messaging/E-mail


Messaging


Your LG-E720k combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch **Messaging** icon on the home screen, and touch **New message** to open a blank message.
- 2 Enter a contact name in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient or continue entering the contact name. You can add multiple contacts.
NOTE: You will be charged for a text message for every person you send the message to.
- 3 Touch type to compose below to start entering your message.

- 4 Touch the **Menu** key to open the options menu. Choose from **Add Subject, Attach, Send, Insert Smiley, Discard, All threads,** and **Add to Contacts.**
- 5 Touch **Send** to send your message.
- 6 The message screen opens, with your message after your name. Responses appear on the screen. As you view and send additional messages, a message thread is created.

 
 **WARNING:** The 160-character limit may vary from country to country depending on how the SMS is coded.


 **WARNING:** If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message, and you will be charged accordingly.


NOTE: When you get an SMS message during a call, there is no alert, but you will see it on the indicator bar.

Entering text

Keypad

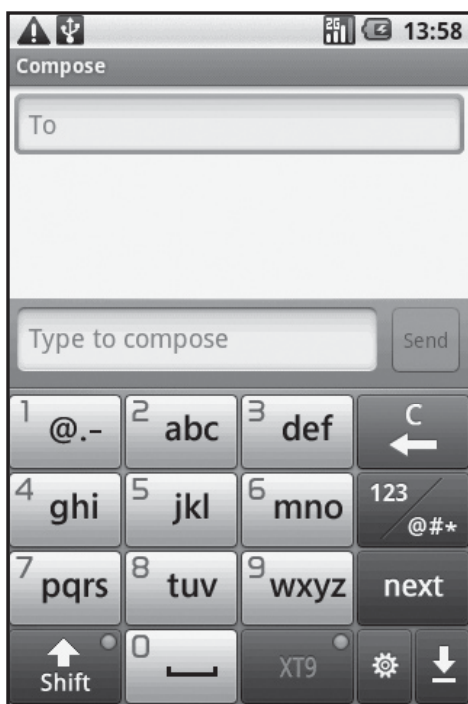


 Touch to turn on T9 predictive text.

 Tap to change between the number, symbol, and text keypads.

Touch  to view the **Editor settings, Keyboard Layouts,**

Handwriting settings, Writing language, User dictionary and Input method.

Use  to swap between lowercase and uppercase. The coloured circle on the button tells you if uppercase is locked on (green) or if it is just on for one character (orange).

To enter a space, touch .

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Abc mode

This mode allows you to enter letters by touching the key labelled with the required letter once, twice, three or four times until the letter is displayed.

Messaging/E-mail

123 Mode

This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Touch the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g., “à”).

After the corresponding letter character disappears, press the same key repeatedly until you see the special character you want.

Example

To input, press and hold the “a” key.

After the letter “a...” disappears, keep your finger pressed on the screen and slide left or right to select the desired character.

Setting up your email

Keep in touch while on the move by using your LG-E720k to send emails. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 On the home screen, touch **Applications** tab and tap **Email** to view the mail boxes for each email account. Or, you can also touch **Email** on the home screen to access directly.
- 2 If the email account is not set up, start the email setup wizard.

TIP! If an email account is already set up, the wizard is not activated automatically.

Sending an email using your new account

- 1 Touch **Email** icon on the home screen, and then touch **Compose icon** to open a new blank message.

- 2 Enter the recipient's address, then write your message. You can also attach images, videos, audio files, and various document file formats.
- 3 Touch **Send icon** to send your email.

TIP! During an active Wi-Fi connection, emails are sent and received using Wi-Fi.

Retrieving your email

You can automatically or manually check your account for new email.

To check manually:

- 1 Touch **Email** icon on the home screen.
- 2 Then touch the account you want to use.
- 3 Choose **Refresh** and your LG-E720k will then connect to your email account and retrieve your new messages.


Changing your email account's settings

You can change your email settings based on your own preferences.

- 1 Touch **Email** icon on the home screen, and tap the desired account.
- 2 Touch the **Menu** key to open the options menu, and tap **Settings**.
- 3 You can adjust the following options: **Account Setup**, **General Settings**, **Download Options**, and **Spam message**.

Threaded box

Messages (SMS, MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

NOTE: When you send an MMS message, there will be no delivery report, but you will see the  icon.

Messaging/E-mail

Using smilies

Liven up your messages using smilies.

When writing a new message, touch the **Menu** key, then choose **Insert Smiley**.

Changing your messaging settings

Your LG-E720k message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences. Touch Messaging icon on the home screen, then touch the Menu key. Tap Settings.

< SMS settings >

Delivery reports – Activate to receive confirmation that your messages have been delivered.

Manage SIM Card Messages – Manage the messages stored on your SIM card.

Validity period – Choose how long your messages are stored in the message centre.

Text message centre – Enter the details of your message centre.

< MMS settings >

Delivery report – Choose to request a delivery report.

Read report – Choose to request a read report for each message you send.

Auto-retrieve – Activate to retrieve messages automatically.

Roaming auto-retrieve – Activate to retrieve messages while roaming.

Set priority – Choose the priority level of your MMS.

Validity period – Choose how long your message is stored in the message centre.

Creation mode

Restricted: In this mode, the MMS Client device only creates and sends messages with content belonging to the Core MM Content Domain.

Warning: In this mode, the MMS Client device guides the user in creating and sending messages with content belonging to the Core MM Content Domain. This guidance is provided through warning dialogs.

Free: In this mode, the MMS Client allows the user to add any content to the message.

Receive advertisement -
Allows receiving advertisement messages.

< **Other settings** >

Service message – Choose whether to receive or block service messages.

Notification settings – Activate to display message notifications in the status bar. Also select a ringtone and activate vibrate to alert you of new messages.

Info. Service settings – Choose whether to receive, block, or view or edit channels to receive information service messages (cell broadcast messages).

Also choose the languages of information service messages.

Social Networking

With your phone, you can enjoy the social networking and manage your micro-blog in on-line communities. You can update your current status and view your friends' status updates real-time.

You can add your Facebook, Twitter or Bebo accounts to your phone. If you don't have an account, you can visit their sites to set it up.

NOTE! An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Adding your account to your phone

- 1 On the home screen, touch **Applications** tab to open the applications menu.
- 2 Scroll and touch **SNS**.

Messaging/E-mail

- 3 Touch **Add account** to add a social networking account.
- 4 Select the kind of account to add.
- 5 Enter your e-mail address and password that you set up on your community, then tap **Log in**.
- 6 Wait while your details are checked with your community.
- 7 Check your community is turned **ON**. If you tap your community, you can see the current status of your social community.

TIP! If you add a social networking widget on your home screen, the widget will show your status when your phone updates from the network.

You can also access the social community directly by touching up the widget.

Viewing and updating your status

- 1 Choose a community you want to access.
- 2 The community home will be appear. You can see the current status of your social community.
- 3 If you want to update your status, tap Status and write the current status, then touch Share.

NOTE: This is dependent on network services.

Removing accounts on your phone

 
- 1 In the list of SN (Social Networking) manager, touch **Menu** key and touch **Remove account**.
- 2 Choose and check a community you want to delete your account, then tap **Remove account**.
- 3 Tap **OK** to confirm.

Camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys.

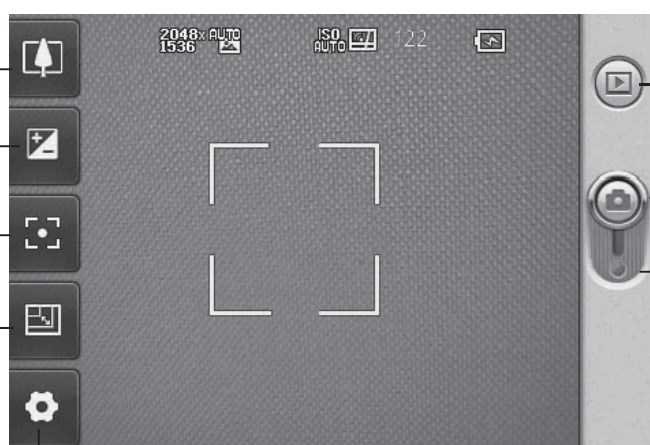

Gallery – This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Taking a photo

Video mode – Slide down this icon to switch to video mode.

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Image size – Touch to set the size (in pixels) of the picture you take. Select a pixel value from the numerical options: 3M (2048x1536), 2M (1600x1200), 1M (1280x960), VGA (640x480), QVGA (320x240).

Focus – Touch this icon to select the options menu. See **Using the focus mode**.

NOTE: You need to insert a memory card first to take a picture. Without inserting a memory card, you will not be able to save the picture you had taken.

Camera

TIP! You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

Using the focus mode

You can select the focus mode as following options;

Auto Focus – Set the camera to focus automatically.

Macro – Macro mode allows you to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the macro mode on.

Face tracking – If you set Face tracking and take a photo, your camera detects and focuses on human faces automatically.

After saving a photo in your Gallery, you can give a new nickname to someone in the photo by touching and holding the face. It will be placed on the People bar in your Gallery. You can also connect to Contacts to match the photo with the contact.

NOTE: Zoom is not supported in Face tracking mode.

Manual Focus – Set the camera to focus manually.

Taking a quick photo

- 1 Press and hold the camera key on the right side of the phone.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Press the capture button lightly, and a focus box will appear in the centre of the viewfinder screen.
- 4 Position the phone so you can see the subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Press the capture button and hold it down.

Once you've taken the photo

Your captured photo will appear on the screen.





Share Touch to share your photo as **Bluetooth**, **Email**, **Google Mail**, **MMS**, or **SNS**.

NOTE: Additional charges may apply when MMS messages are downloaded while roaming.

Set as Touch to use the image as **Contact icon**, **Lock screen** or **Wallpaper**.

Rename Touch to edit the name of the selected picture.

Edit Touch to edit the image using various tools.

-  Touch to view a gallery of your saved photos.
-  Touch to delete the image.
-  Touch to take another photo immediately. Your current photo will be saved.
-  Touch to return to the previous menu.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.

You can change the camera setting by scrolling the wheel. After selecting the option, touch the Back key.

Image quality – Choose from **Super Fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

White balance – Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Shot mode – Choose from **Normal**, **Continuous shot**, **Beauty shot**, **Frame shot**, **Panorama shot**, **Art shot**, and **Smile shot**.

Camera

Timer – The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

ISO – The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful under darker conditions when you cannot use the flash. Select from ISO values of **Auto**, **100**, **200**, and **400**.

Scene mode – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night**, and **Sunset**.

Color effect – Choose a colour tone for your new photo.

Once you've made your selection, use the Back key to close the colour tone menu. You are then ready to take a picture.

NOTE: You can change a colour picture to black and white or sepia, but you cannot change a black-and-white or sepia picture to colour.

Captured image – Choose from **On**, **Hold**, and **Off**. If you select On, after taken picture screen is shown for 1 second, and it goes to the preview right away.

Grid screen – Choose from **Off**, **2x2**, or **3x3**.

Shutter sound – Select one of the four shutter sounds.

GEO-Tagging – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: This function is only available when GPS is active.

Hide icons – Choose the camera setting icons to hide manually or automatically.


Blink detection – Turn this on to display a red box around the face that was blinking in the preview image screen.

Reset – Restore all camera default settings.

TIP! When you exit the camera, all settings will return to their defaults, except image size and image quality. Any nondefault settings must be reset, such as colour tone and ISO. Check these before you take your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

Viewing your saved photos

- 1 You can access your saved photos from within the camera mode. Just touch  and your gallery will appear on the screen.

Video camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the Video. Slide the brightness indicator along the bar, towards “-” for a lower brightness Video, or towards “+” for a higher brightness Video.

Zoom – Zoom in or zoom out. Alternatively you can use the side volume keys. Before starting record a video, you can use the zoom function. You can not control the zoom function during recording.



Gallery – This enables you to access your saved photos & Videos from within the video camera mode. Simply touch, and your gallery will appear on the screen.

Camera mode – Slide up this icon to switch to camera mode.



Start recording

Settings – Touch this icon to open the settings menu. See **Using the advanced settings**.

Video size – Touch to set the size (in pixels) of the video you record. Choose your video image size from VGA (640x480), QVGA (320x240) or QCIF (176x144).

Scene mode – Set the camera to adjust to the environment. Choose from **Auto, Portrait, Landscape, Sports, Sunset** and **Night**.

Shooting a quick video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Then slide the capture button down position, the icon will change to .
- 3 The video camera's viewfinder will appear on the screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 7 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen.

Share Touch to share your video as **Bluetooth**, **Email**, **Google Mail**, or **MMS** or **YouTube**.


NOTE: Additional charges may apply when MMS messages are downloaded while roaming.


Play Touch to play the video.

Rename Touch to edit the name of the selected video.

Edit Touch to enter editing mode on this video.


 Touch to access the media player and view the saved videos.

 Touch to delete the video you just made, and confirm by touching Yes. The viewfinder will reappear.

 Touch to shoot another video right away. Your current video will be saved.

 Touch to return to the previous menu.

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options. Adjust the video camera setting by scrolling the wheel. After selecting the option, touch the **Back** key.

Video camera

Color effect – Choose a colour tone to use for your new view.

White balance – The white balance ensures any white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Duration – Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

TIP! When choosing MMS duration, the Video quality will be set as QCIF and you can shoot longer videos.

Audio recording – Choose **Mute** to record a video without sound.


Hide icons – Select whether to hide the icons in the video camera menu automatically or manually.

Recorded video – Choose from **On**, **Hold**, and **Off**. If you select **On**, after recorded video screen is shown for 1 second, and it goes to the preview right away.

Reset – Reset all the video camera settings.


TIP! You can change a video shot in colour to black and white or sepia, but you cannot change a black-and-white or sepia video to colour.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery will appear on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts to play automatically.

Your photos and videos

Viewing your photos and videos

- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

TIP! Flick left or right to view other photos or videos.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left side of the phone.

Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch **Set as**, then touch **Set Wallpaper**.

Editing your photos

You can do lots of great things to your photos to change them, add to them, or liven them up.

- 1 Open the photo you want to edit, then touch the **Menu** key.
- 2 Touch **Edit** to change your photo:



Rotate & Flip – Rotate or flip your photo for fun or a better view.



Crop – Crop your photo. Choose a square or circular crop area, then move your finger across the screen to select the area.



Tuning – This helps you adjust a picture using automatic colour, brightness, and so on.



Effect – Touch to apply the effect options to a photo.



Frame – Add frames to the photo.

Your photos and videos



Text – Add text to a picture.



Clipart – Add clipart to a photo.



Drawpad – Draw on your photo, freehand. Select the line thickness from the four options, then choose the colour you want.



Stamp – Decorate your photo with stamps. Choose from the different stamps, then touch your photo where you want to place them.



Resize – Resize your photo.



Save the changes you made to the photos.



Delete your photo edits.

Rotating your photo



1 Rotate 90° counterclockwise



2 Rotate 90° clockwise



3 Flip vertically



4 Flip horizontally

Adding text to a photo

1 On the editing screen, touch



2 Select the colour of the text, then choose one of the bubble shapes.

3 Enter your text using the keypad, then touch **Done**.

4 Move the text by touching it and sliding it to where you want it.

Adding an effect to a photo

1 On the editing screen, touch




2 You can apply any of the various options to the photo.






3 To undo an effect, simply touch







Cropping a photo





- 1 On the editing screen, touch  .
- 2 Choose the shape you want to use to crop the picture.
- 3 Drag the box over the area you want to crop. Move the selected area by dragging.
- 4 When you are finished with your selection, touch **Done**.

Tuning your photo





- 1 On the editing screen, touch  . Use the tuning toolbar to adjust your photo's tuning as you like.
- 2  Choose to adjust the tuning settings automatically.
- 3  Choose to compare before and after tuning.
- 4  Adjust the brightness and contrast of the photo.
- 5  Adjust highlights and shadows.

- 6  Balance your photo's colour.
- 7  Adjust the saturation of your photo.
- 8  Adjust your photo's sharpness.
- 9  Denoise.

Adding frames




- 1 On the editing screen, touch  .
- 2 Touch  or  to choose a frame.
- 3 Touch  to check the whole frame.

Adding clipart




- 1 Touch  on the editing screen.
- 2 Touch  , then select clipart.
- 3 Adjust the size of the clipart.
- 4 Rotate clipart using  and  .

Your photos and videos


Using the drawpad

- 1 Touch  on the editing screen.
- 2 Touch  to select the shape.
- 3 Also, set the colour and thickness.
- 4 You can delete the drawing you added using .

Adding stamps

- 1 Touch  on the editing screen.
- 2 Touch  to see which stamps are available.
- 3 Touch the screen where you want to add the stamp to the photo.
- 4 Adjust the colour using .




Resizing

- 1 Touch  on the editing screen.
- 2 Scroll the bar to resize the photo.



Editing your videos

The video editing features are available for the MPEG-4 format.



Trimming the length of the video

- 1 Select **Edit**, then choose .
- 2 Touch . Then set the new start and end points. Touch **OK** and select **Next Icon**.
- 3 Touch  to return to the gallery and discard the changes.


Selecting transition style

- 1 Select a transition style, then touch  to preview it.
- 2 Touch , then drag the bar to adjust the duration time.
- 3 Touch **OK** to save the transition. Touch **Apply** to apply the currently selected transition. Choose **Apply To All** to apply the currently selected transition to all video files in the storyboard.

Adding subtitles



- 1 Open the video you want to edit.
- 2 Select **Edit** , then select  to add subtitles to the video.
- 3 Touch  , then pause playback to set the start point for text appearance.
- 4 Touch **Start**, then choose the text style. Enter your text using the keypad, then select **Done**.
- 5 Touch the area of the screen where you want the text to appear, then touch **OK**.
- 6 Replace the existing file, or save as a new file.
- 7 Repeat these steps to add more text.

Adding edit effects

- 1 Open the video you want to edit.
- 2 Select **Edit** , then select  .
- 3 Select an effect to add to the photo.


Grabbing a frame

Capture a picture from the video.

- 1 Open the video you want to edit.
- 2 Select **Edit** , then and select  .
- 3 Play the video, then touch  to capture the screen you want while the video is playing.
- 4 The frame is saved to the phone as a still image file.

Your photos and videos

Adding dubbing to your video

- 1 Open the video you want to edit.
- 2 Select **Edit** , then choose  .
- 3 Touch  . The **My Sounds** folder will open. Choose the track you want to add to your video.
- 4 The original audio track on your video will be deleted.
- 5 If the audio is shorter than the video, choose whether to play it **Once** or to **Repeat** it.
- 6 Replace the existing file, or save as a new file.
- 7 Or you can record a new file and insert live dubbing by touching  .
- 8 Touch **OK** to save the current dubbing.


Multimedia

You can store multimedia files to a memory card to have easy access to all your image and video files.

Touch **Applications** tab, then select **Gallery**. You can open a list of catalogue bars that store all your multimedia files.

NOTE: Make sure you install a memory card into the phone to save photos and access all your pictures. Without a memory card, the phone will not display any photos or videos.

There are seven catalogue bars as shown below.

All  : Displays all your pictures and videos.

Favorite  : If you touch and hold a photo or video, the option screen will appear allowing you to tag the photo as a favourite. This **Favorite** bar will show your favourite photos and videos.



Camera  : Displays all your photos.

Image  : Displays all your images.

Video  : Displays all your videos.

Tag  : Like the **Favorite** bar, you can tag photos. This bar displays your tagged photos and videos.

People  : From camera, if you set **Focus > Face tracking** and take a photo, it will be placed on the **People** bar. You can give a new nickname to someone in the photo. Or connect to **Contacts** to match the photo with the contact.

Timeline view

LG-E720k **Gallery** provides a timeline view of your photos and videos. On the left side of the screen, the date you took your photos will be displayed, from oldest to newest. If you select a specific date, all the photos you took on that day will be grouped over a white background.

Multimedia

My Images options menu

Select a photo, then touch and hold to see the available options.

Sending a photo

- 1 To send a photo, touch and hold the photo you want.
- 2 Select **Share**. Choose from **Bluetooth, Email, Google Mail, Messaging, SNS** or **Picasa**.
- 3 When you choose **Email, Google Mail** or **Messaging**, your photo will be attached to a message, then you write and send the message normally.

TIP! If you have a SNS account and set it up on your phone, you can share your photo to SNS community.

Sending a video

- 1 To send a video, touch and hold the video you want.
- 2 Select **Share**. Choose from **Bluetooth, Email, Google Mail, Messaging**, or **YouTube**.

- 3 When you choose **Email, Google Mail** or **Messaging**, your video will be attached to a message, then you write and send the message normally.

Using an image

Choose images to use as wallpaper or identify callers.

- 1 Touch and hold a photo, then select **Set As**.
- 2 Choose from **Contact icon, Lock screen** or **Wallpaper**.

Creating a slideshow

If you want to view all the images on your phone, you can create a slideshow so you don't have to open and close each image.

- 1 Touch and hold a photo, then select **Slideshow**.

Checking your photo

You can view a photo's detailed information, such as **Name, Date, Time, Resolution, Size, Type**, and **Tag**.

- 1 Touch and hold a photo, then select **Detail**.

Media Player

The **Media Player** folder displays a list of videos you downloaded to or recorded on your phone.

Watching a video

- 1 Select **Media Player** on the Applications tab.
- 2 Touch **Video** and select a video to play.







TIP! The LG-E720k supports DivX video playback to ensure greater content availability.

Touch **Music** and select a music to play. You can play songs, categorise songs by **Album** and **Artist**, or create a **Playlist**.


Video editor

- 1 On the home screen, touch **Applications** tab and select **Video editor** .

Storyboard

- 1  **Set BGM** – Add background music to the storyboard, or change the sound.
- 2  **Import Files** – Add media files to the storyboard. You can add up to 32 media files.
- 3  **Clip Manager** – Manage the added media files. If no media files were added, the button is disabled.
- 4  **Preview** – Preview the video file you created.
- 5  **Save** – Save the video file you created.
- 6  **Add Text** – Add a text frame into storyboard.

You must touch  first to edit the video.

-  – Touch to select all the files, but the maximum is 32 files.

Multimedia

 – Touch to deselect all the files.

25/32 – This shows the selected file number.

 Touch to go to the next step.

Music Movie


1 Flip left and right to check the various styles. For **Music Movie**, you can select only photos.

 – Return to the **Video editor** screen.

 – Display the style name and description.

 – Preview the style.

 – Touch to select photos.

2 After you select photos, touch  to proceed to the next step.

3 Touch  to select all the photos, then touch .

4 Select the music, then set it as the background music.

5 Add movie title using the keypad, then save it.


6 Touch  to play the complete video file.

7 Touch  to save the video file you created.

Auto cut

There are three style templates: **Portrait**, **Landscape**, and **Motion objects**.

1 Touch , then select a video. Go to the next step.

2 Touch  to preview the video file.

3 Touch  to save the file.

Playing a game

1 You can download a range of games from the Google market.

2 To Launch tap on the a game or an application.

NOTE: Additional charges may apply when using this service to download games or applications that are not free.

NOTE: Java game and application installation are only possible through the Web.

Transferring files using USB mass storage devices

To transfer files using USB devices:

- 1 Connect the LG-E720k to a PC using a USB cable.
- 2 Choose **Settings > SD Card & Phone Storage > Mass Storage Only**.
- 3 In the status bar, drag the USB icon.
- 4 Choose **USB Connected and Mount**.
- 5 You can view the mass storage contents on your PC and transfer the files.

NOTE: You need to install an SD card first. Without an SD card, you cannot use USB mass storage.

Music

Your LG-E720k has a built-in music player that lets you play all your favorite tracks. To access the music player, touch **Music**. From here, you can access a number of folders:



Artists – Browse your music collection by artist.

Albums – Browse your music collection by album.



Songs – Contains all the songs you have on your phone.

Playlists – Contains the playlists you created.

Playing a song

- 1 On the home screen, touch **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.

Multimedia

6 Touch  to go back to the first part of the song. Touch  two times to go back to the previous song.

To change the volume while listening to music, press the up and down volume keys on the left side of the phone.

Touch and hold any song in the list. It will display **Play, Add To Playlist, Use As Phone Ringtone, Delete,** and **Search** as options.

NOTE: Music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Using the radio

Your LG-E720k has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

NOTE: You must attach your headphones to listen to the radio. Insert them into the headphone jack.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning in.

You can store up to 48 channels on your phone.

To tune in automatically

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the **Menu** key.

- 3 Touch **Auto Scan**, then touch **Ok**. Assign the stations found to channel numbers by selecting **Set**, **Skip**, or **Stop**.

NOTE: You can also manually tune in to a station using the wheel displayed next to the radio frequency.

Resetting channels

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Choose **Reset Channel** to reset the current channel, or choose **Reset All Channels** to reset all the channels.

Listening to the radio

- 1 On the home screen, touch **Applications** tab and select **FM radio**.
- 2 Touch the channel number of the station you want to listen to.

TIP! To improve radio reception, extend the headset cord, which functions as the radio antenna.

WARNING

If you connect a headset not specifically made for radio reception, radio reception may be poor.

Google applications

- 1 First, set up a Google account. Enter your user name and password.
- 2 After signing in, your contacts, email, and calendar in your Google account will automatically synchronise with your LG-E720k.

Tip! If you change your Google account after signing in, or you want to log out, please use the below step: **Applications > Settings > Applications > Manage applications > Google Apps > Clear data.**

Google Maps

Check your current location and traffic and receive directions to your destination. The LG-E720k must be connected to Wi-Fi or 3G/GPRS.

NOTE: Google Maps does not cover all cities and countries.

NOTE: While viewing **Street View** for a location, Touch the **Menu** key then touch **Compass Mode** to turn compass mode on.

Android Market

Android Market lets you download useful applications and games. If you install applications and games from Android Market, they appear in the LG-E720k menu.

You can post comments about an application or flag it if you find it is incompatible with the LG-E720k.

- 1 Select a category to browse its contents.
- 2 Choose an application to install.

NOTE: When you want to finish the game, use the **Home** or **Back** key. You will return to the home screen. Or use the **Menu** key of the game.

Google Mail



Google Mail is configured when you first set up your phone. Depending on your synchronization settings, Google Mail on your phone is automatically synchronised with your Google Mail account on the web. The inbox conversations list is your default Google Mail view. Touch the **Menu** key, then touch **Refresh** to send or receive new emails and to synchronise your emails with your Google Mail account on the web.

Google Talk

Google Talk is Google's instant messaging program. It lets you communicate with other people who also use Google Talk.

Utilities

Setting your alarm

- 1 On the home screen, touch **Applications** tab and select **Alarm Clock**.
- 2 If you want to add a new alarm, touch **New Alarm**. There are preset alarms you can activate.
- 3 Touch  to turn on the alarm, and set the time you want the alarm to sound. After you set the time, the LG-E720k will let you know how much time is left before the alarm sounds.
- 4 Choose a ringtone, and turn on **Vibrate**, if you want. Set the repeat.
- 5 Choose **Label** to name the alarm.
- 6 Set the Snooze interval. Select from Snooze off, 5 min, 10 min, 20 min, 30 min or 1 hour.
- 7 Touch , then return to the first Alarm Clock screen.

- 8 Touch and hold the clock on the screen, when you lift your finger different types of clocks will be displayed. Choose one to change your clock face.
- 9 You can delete all the alarms by touching the **Menu** key and choose **Delete alarm**.

Using your calculator

- 1 On the home screen, touch **Applications** tab and select **Calculator**.
- 2 Touch the number keys to enter numbers.
- 3 For simple calculations, touch the function you want (+, −, ×, or ÷), followed by =.
- 4 For more complex calculations, touch the **Menu** key, touch the **Advanced panel**, then choose **sin**, **cos**, **tan**, **log**, and so on.

Adding an event to your calendar

- 1 On the home screen, touch **Applications** tab and select **Calendar**.
- 2 First, you must create a Google account to use Calendar.
- 3 Select the date you want to add an event to.
- 4 Touch the **Menu** key, then touch **New event**.
- 5 Touch **What**, then enter the event name. Check the date and enter the time you want your event to begin. Enter the time and date the event finishes in the lower date and time boxes.
- 6 Also, touch **Where**, then enter the location.
- 7 If you would like to add a note to your event, touch **Description** and enter the details.

- 8 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 9 Touch **Done** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time to help you stay organised.

Changing your calendar view

- 1 On the home screen, touch **Applications** tab and select **Calendar**. Touch the **Menu** key.
- 2 Select the calendar view for a particular day, week, or month.

Quickoffice

You can manage and view document files. The supported file types are PDF, DOC, TXT, XLS, and ZIP.



Utilities

- 1 Choose **Memory Card**. You can see the files and folder list.
- 2 If you choose **Recent Documents**, files you recently viewed will be displayed.
- 3 Touch and hold any file, and the options **Rename**, **Properties**, and **Delete** will appear.
- 4 Choose a file, then touch the **Menu** key to view the Open, Register, Update, Properties, and About options. There are additional options, depending on the file type.
PDF: Go To Page, Fit Page, Fit Width
DOC/TXT: Search
XLS: Worksheet – Choose Summary View or Full View.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 On the home screen, touch **Applications** tab and select **Voice Recorder**.
- 2 Touch  to begin recording.
- 3 Touch  to end recording.
- 4 Touch the **Menu** key and select **Set as** to set as the **Phone** ringtone.

NOTE: Touch **Go to list** to access your album. You can listen to the saved recording.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching the **Menu** key and **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Google Mail**, and **Messaging**. When you select **Email**, **Google Mail**, and **Messaging**, the voice recording will be added to the message that you write and send it normally.

The Web

Browser

Browser gives you a fast, full-colour world of games, music, news, sports, entertainment, and much more, right on your mobile phone. Wherever you are and whatever you're into.




Accessing the Web



- 1 On the home screen, touch **Applications** tab and select **Browser**.
- 2 You will move to the website.

NOTE: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using the Web tool bar







Touch  to open the toolbar.

- 1 Touch  to refresh the web page.
- 2 Touch  to go forward one page.
- 3 Touch  to go backward one page.

- 4 Touch  to add bookmark.
- 5 Touch  to open another website in a new window.
- 6 Touch  to change the browser settings.

Using options

Touch the **Menu** key to view options.


-  **Go** – Enter a web address and go to that page.
-  **Exit** – Close browser.
-  **Bookmarks** – Add/Show Bookmark, show Most Visited Site and History.
-  **Window** – Show all your open windows.
-  **Find on page** – Marks all the letters you enter.
-  **More**
 - **Select Text** – Touch and select the lines you want to copy. You can paste it to any input box.
 - **Page Info** – Show page information.

The Web

- **Share Page** – Send page by Email or Messaging.
- **Downloads** – Show download history.
- **Setting** – Set browser settings.

Adding and accessing bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save Web pages.

- 1 On the home screen, touch **Applications** tab and select **Browser**.
- 2 Touch the **Menu** key then select **Bookmarks**. Or press . A list of your bookmarks will appear on the screen.
- 3 Select **Add Bookmarks**, then enter a name for the bookmark followed by its URL.
- 4 Touch **Done**. Your bookmark will now appear in the bookmark list.

- 5 To access the bookmark, simply touch the bookmark. You will be connected to the bookmarked page.

Changing Web browser settings

Touch the **Menu** key then select **More > Settings**.

You can change the page layout (e.g., text size, text encoding), change the home page, manage cache, cookie, and security settings, and so on.

Settings

On the home screen, touch **Applications** tab then scroll and touch **Settings**.

Wireless controls

Here, you can manage Wi-Fi and Bluetooth. Also, you can set mobile networks, airplane mode.

Wi-Fi – Touch to checkmark: Turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Set network notification, or add a Wi-Fi network.

Bluetooth – Touch to checkmark: Turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – Set device name & discoverable, scan for other devices.

Mobile network – Turn on mobile network.

Mobile network settings – Set options for roaming, network, and APNs.

Airplane mode – After setting Airplane mode, all wireless connections will be disabled.

Sound & display

Silent mode – All sounds are turned off, except media and alarms.

Ringer volume – Set volume for incoming calls and other notifications.

Media volume – Set volume for music and videos.

Phone ringtone – Set default ringtone.

Phone vibrate – Set to vibrate for incoming calls.

Notification ringtone – Set default notification ringtone.

Audible touch tones – Set to sound when you use the keypad.

Audible selection – Set to sound when you make a screen selection.

Vibration feedback – Set to use vibration feedback.

Settings

SD Card notifications – Disable SD card notification sounds.

Orientation – Set to switch orientation automatically when you rotate the phone.

Animation – Set to display an animation when you open or close windows.

Brightness – Adjust the brightness of the screen.

Screen timeout – Set the time for screen timeout.

Touch calibration – Reset your screen for ease of use.

Data synchronization

Select which applications are synchronised.

Security & location

Use wireless networks – If you check Use wireless networks, your phone will be determine your approximate location by using Wi-Fi and mobile networks.

Enable GPS Satellites – If you check Enable GPS satellites, your phone will be determine your location to street-level accuracy.

Share with Google – If you check Share with Google, your phone will check your current location when you use Google search.

When you check this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Set unlock pattern – Set unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern.

Set up Sim card lock – Set up SIM card lock or change SIM PIN.

Visible passwords – Select to show passwords as you type them or deselect to hide passwords as you type them.

Install from SD card – choose to install encrypted certificates from your SD card.

Set password – set or change the credential storage password.

To lock your screen by using the Pattern Lock

- 1 On the home screen, touch **Applications** tab and select **Settings**.
- 2 Touch **Security & location**, and select **Set unlock pattern**.
- 3 The first time you do this, a short tutorial about creating an unlock pattern appears.
- 4 You're prompted to draw and redraw your own pattern. The next time you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.

Applications

You can manage applications and set up quick launch shortcuts.

Unknown Sources – Default setting to install non-Market applications.

Manage Applications –

Manage and remove installed applications.

Development – Set options for application development, such as **USB Debugging**, **Stay Awake**, and **Allow Mock Locations**.

SD card & phone storage

SD Card – Check total space and available space. Touch **Unmount SD card** for safe removal. **Format the SD card**, if you want to delete all data from the SD card.

Internal phone storage – Check the **Available space**. Choose **Factory Data Reset** if you want to delete all data from the phone.

Settings

Date and time

Set date, time, time zone, and formats.

Locale and text

Set local language and region, text input, and autocorrect options.

Search

You use the Search settings to configure Google search, Quick Search Box, and the data on the phone that you want to include in searches.

Accessibility

You use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

Note: Requires additional plug-ins to become selectable.

Speech synthesis

You use the Text-to-Speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

About phone

View legal information, and check phone status and software version.

Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

NOTE: The LG-E720k supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

1. How to set up Wi-Fi

- 1 Touch the **Settings** tab, then Wireless controls, then turn **Wi-Fi** on.
- 2 AP (Access Point) Search
 - Searches for which AP it can connect to.
- 3 AP Connect
 - Connects to the desired AP from the AP search list.
 - If the AP is security type WEP or WPA/WPA2-PSK, enter the security key.

2. Wi-Fi network profile support

- 1 Wi-Fi profile support (how to connect to a frequently used AP or hidden AP)
 - 1) If the AP does not appear in the search list, you can connect to it by saving it as a profile.

Wi-Fi

- 2) Saving a frequently used AP as a profile makes it easier to enter the security key when connecting to an AP with that security type.
 - 3) If the AP does not support DHCP, you can connect to the AP using a static IP address.
- 2** Description of each field in the Wi-Fi profile.
- 1) Network Name: SSID (ID)
 - 2) Security Type: WEP and WPA/WPA2-PSK support.
 - 3) Security Key: Saves the security key.
 - 4) IP/DNS Setting: This allows you to set to Automatic or Static, depending on whether the AP supports DHCP.
For Static, enter the field value of the IP address and DNS server to use with the static IP address when connecting.

- 3** How to save the Wi-Fi profile
- 1) Select the Add Wi-Fi Network menu at the bottom of Wi-Fi Networks, then enter the SSID and Security Type.
 - 2) After connecting to an AP with this security type, the profile will be saved automatically.

3. How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-E720k into the router.

You can find the MAC address in the following user interface:

Settings > Wireless controls > Wi-Fi settings > Menu > Advanced > MAC Address

Software update

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

DivX Mobile

ABOUT DIVX VIDEO: DivX[®] is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit **www.divx.com** for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified[®] device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to **vod.divx.com** with this code to complete the registration process and learn more about DivX VOD.

DivX Certified to play DivX[®] video up to 320 x 240