

LG-E906 User Guide - English



Congratulations on your purchase of the advanced and compact LG-E906 phone by LG, designed to operate with the latest digital mobile communications technology.

- **This guide helps you to start using your phone. If you need more information, please visit www.lg.com.**
- Some of the contents of this manual may not apply to your phone, depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.

This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada. Operation is subject to the following two conditions:(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.0cm (0.39 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 1.0cm (0.39 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 1.0cm (0.39 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Conformité aux normes FCC Part 15 Class B

Cet appareil et ses accessoires sont conformes aux normes FCC Part 15 Class B de la Federal Communications Commission et aux exigences pour appareils numériques ICES-003 Class B d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes : (1) Cet appareil et ses accessoires ne doivent pas provoquer de brouillage préjudiciable, et (2) cet appareil et ses accessoires doivent accepter toutes les interférences reçues, y compris celles pouvant causer un fonctionnement indésirable.

Utilisation comme appareil portatif

Ce téléphone a été testé en vue d'une utilisation type comme appareil portatif, avec une distance de 1.0cm (0,39 pouces) entre l'arrière de l'appareil et le corps de l'utilisateur. Pour satisfaire aux exigences de la FCC en matière d'exposition aux radiofréquences, une distance d'au moins 1.0cm (0,39 pouces) doit être maintenue entre le corps de l'utilisateur et l'arrière du téléphone. Les pinces de ceinture, les étuis et autres accessoires semblables d'autres marques et contenant des composantes métalliques ne doivent pas être utilisés. Les accessoires portatifs empêchant le maintien d'une distance de 1.0 cm (0,39 pouces) entre le corps de l'utilisateur et l'arrière du téléphone et qui n'ont pas été testés en vue d'une utilisation type comme accessoires portatifs peuvent ne pas satisfaire aux limites d'exposition aux radiofréquences stipulées par la FCC et, par conséquent, ne doivent pas être utilisés.

Assembling

Getting to know your phone

Headset jack

Power/Lock key

- Long press (three seconds) to the power on/off.
- Short press to turn the screen off.

Earpiece

Proximity sensor

ALS(Ambient Light Sensor)

Search button

Open Quick Search

Start button

Return to the Start screen;
Start the Voice Recognition
function (press and hold).

Back button

Return to the previous screen.

Mouthpiece



WARNING:

Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality. Do not cover the protective film on the proximity sensor of the LCD, as this can cause the sensor to malfunction.

Volume keys

- **When the screen is idle:** volume of system tone & ring tone.
- **During a call:** earpiece volume.
- **When playing a track:** controls track volume.

Charger, data cable (USB cable port)

TIP! Before connecting a USB cable, wait until the phone has powered up and been registered on the network.

Camera key

- Go directly to camera preview by pressing the camera key.

Open view

External camera lens

Camera flash

Battery cover

Battery

USIM card tray

Installing the USIM and battery

1 Remove the battery cover

Press the battery cover release button as shown in the image below (1). Lift the cover away from the phone (2).

2 Remove the battery

Using the cut-out at the bottom, lift the battery out of its compartment.



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the USIM card

Put the USIM card into the USIM card holder. Make sure the gold-coloured contact area on the card is facing into the phone. Push the USIM card holder back.

4 Install the battery

First, insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.

5 Charging your phone

Open the charger port cover on the side of your LG-E906. Insert the charger connector into the port and plug the charger into a mains electricity outlet.

You cannot switch on the phone if the battery is fully discharged. It takes approximately four to five minutes to reach a charge state sufficient for booting by TA charger.

It takes approximately 14-15 minutes longer to charge using a USB connection.

If the battery is critically low, the image for the critically low battery will appear to notify you to charge it longer.

NOTE: The battery must be fully charged initially to improve battery life.

Navigating your Windows Phone

Using the touch screen

Touch screen tips

Your phone's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.

NOTE:

- To avoid scratching the touch screen, do not use sharp objects.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or if exposed to water.
- For optimal use of the touch screen, remove the screen protection film before using your phone.
- Your touch screen has a layer that detects small electrical charges emitted by the human body.

- For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches by sharp objects, such as a stylus or pen.

NOTE:

- Your phone turns off the touch screen when you do not use it for a specified period. To turn on the screen, press the [Power] button.
- You can also adjust the backlight time or change the wallpaper. On the Start screen, go to the application list and select **Settings > lock + wallpaper**.

Universal gestures on your touch screen

For most applications, natural gestures can be used to move about and give commands. To type text, use the onscreen or the hardware keyboard.

The following gestures are used to move around for your Windows Phone 7:

Tap

To choose a menu/option or open an application, touch it.

Double tap

Double-tap to zoom a webpage or a map. For example, quickly double-tap a section of a webpage to zoom that section to fit the width of the screen.

Touch and hold

 
Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs..

Drag

To scroll through a list or move slowly, drag across the touch screen.

Flick

To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can drag slide the screen up or down to scroll a list, or browse through the different Homescreens by swiping from left to right (and vice versa).



Pinch and stretch


Pinch fingers together or spread fingers apart on the screen when you are viewing images, web pages or on maps to zoom in and out.

Getting to know your Start screen

From this screen you can access menu options, make a call, view the status of your phone and much more.



Knowing and navigating the screen

Start screen is the beginning of the Windows Phone 7 experience for you after you power on your phone. The Start screen displays application tiles that you have pinned and placed in a position of your choice for quick launch. Pressing the [Start] Button  on the phone always returns you to the Start screen, no matter what application is running.

1 Simply swipe your finger to the left, right, up or down to view them.

You can also customise tiles on the Start screen, which are shortcuts to your favourite menus and applications.


 


NOTES: When you are in a standby display after unlocking the phone, swipe your finger upwards to see the Start screen displaying application tiles.

Tiles on the Start screen

A tile is an easily recognisable visual shortcut for an application or its content. You can place tiles anywhere on the phone Start experience.

Tiles that use the tile notification feature can update the tile graphic or title text, or increment a counter, enabling you to create a personalised, “at a glance” Start experience. Examples include displaying if it is your turn in a game, the weather, or how many email messages you have received.

The Start screen is always presented in portrait view.

Icon	Description
	Make calls, with quick access to recent callers, favourites, and all your contacts. Dial manually using the numeric keypad. Just tap the voicemail icon to listen to voice message you want, in any order you like.
	Touch to access People hub, the integrated communication application for emails, messages, contacts and other information.
	Send and receive text messages. Conversations are saved in an instant chat style, so you can see a history of messages you’ve sent and received. Send MMS messages with a picture you’ve taken.
	Your Windows Phone works with Microsoft Exchange, Microsoft Outlook Web App and many of the most popular email systems, including Hotmail, Yahoo! Mail, Google and others. Save attached photos and graphics to your Saved Pictures.

Icon	Description
	Touch Play To to stream videos, music, and pictures from your phone to Digital Living Network Alliance (DLNA) compatible playback devices.
	With ScanSearch, you can search product and local information for streets, cities, or countries. ScanSearch allows you to view local business information, including locations and contact information.
	Enter events on your new Windows Phone. Subscribe to calendars. Set alerts to remind you of events, appointments and deadlines. Plus, they get synced back to the calendar on your Windows Live and vice versa.
	Touch to access the Internet Explorer.
	Access to Xbox LIVE to play a game and invite a friend to play it with you. Download new games onto your phone.
	View photos and videos you've taken with your new Windows Phone, received in Email or MMS messages, or synced from your computer's Zune Software. (Windows OS only) View them in portrait or landscape format. Zoom in on photos for a closer look. Send an email or MMS messages with attached photos.
	Play music, videos and podcasts stored in the device by connecting to your PC to synchronise your stuff. Listen to FM radio. Go to marketplace.

Icon	Description
------	-------------



Search the Application Store for your Windows Phone applications and music you can purchase or download, using your Wi-Fi or cellular data network connection. Read reviews or write your own reviews for your favourite apps. Download and install the applications on your Start screen.

NOTES: The arranged location, name, or design of tiles may vary by your setting status, area, service provider, plan, and version of Windows Phone software. Application functionality and availability may vary depending on the country or region where you purchase and use your Windows Phone. Contact your service provider for more information.








Viewing the status bar






 
The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.



[Status bar]

Icon	Description
	Signal strength
	HSPA
	3G
	2G-GPRS
	2G-EDGE
	Call forwarding
	Roaming


Icon	Description
	Wireless network signal strength
	Bluetooth status
	Ringer mode
	Input status
	Battery power level
	System clock

Customising the Start screen

You can customise the layout of Tiles on the Start screen.

You can pin all sorts of things to the screen, including apps, websites, map locations, and even contacts. If you pin a contact to the Start screen, you'll get all of that person's feed updates-right from the tile.




To pin most things to the screen, touch and hold the item until the menu appears, or open the app list, then tap **pin**.

- If you'd like to move a tile somewhere else on the Start screen, tap and hold the tile, and then move it wherever you want.
- To remove a tile, touch and hold it, and tap unpin .

Navigating and setting applications

Accessing applications

To access your Windows Phone's applications:

- 1 On the Start screen, tap the arrow  to access the application list.
- 2 Scroll down to the tile if it isn't already visible.
- 3 Select an application.
- 4 Press the **Back** button  to return to the previous screen; Press the **Start**  button to return to the Start screen.



NOTES:

 
- You can add a shortcut to an application by tapping and holding the application icon from the application list. You can move the application to the location you want on the Start screen.
- Your Windows Phone has a built-in motion sensor that detects its orientation. If you rotate the phone while using some features, the interface will automatically switch to landscape view.

Getting to know the application bar

To set an application, you can use the below application bar and application bar menu at the bottom of the screen.

For example, to set the Alarms

- 1 On the Start screen, tap the arrow  to access the application list.
- 2 Tap **Alarms** .
- 3 Tap the application bar to see the application menu or to display icon buttons with the text hints.
- 4 Select the icon button or menu that you want to set.

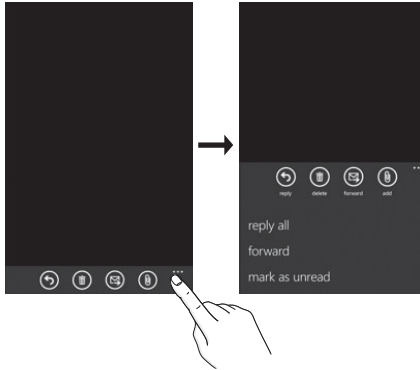

Application bar

The Application bar provides a view that displays icon buttons with text hints and an optional context menu if you tap the visual row of dots or flicks up the Application bar. This view can be hidden again by tapping outside of the menu area or on the dots, using the back button, or selecting a menu item or Application bar icon.

Application bar menu

The Application bar menu is an optional way to access specific tasks from the Application bar. The Application bar menu can be accessed by tapping the visual row of dots in the Application bar or by flicking the Application bar up. This view can be hidden again by tapping outside of the menu area or on the dots, using the back button, or selecting a menu item or Application bar Icon.

NOTES:

- A maximum of five menu items can be displayed.
- If no menu items are displayed, only the icon text hints are displayed.
- The Application bar menu will remain on the screen until you perform an action.

Application bar icons

The following are some of the application setting icons that are frequently used.



new



add



minus



check



close



cancel



sync



refresh



question mark



exclamation



back



next



search



delete



save



folder



video



camera



e-mail



settings



favourites



add to favourites



download



upload



share



edit



overflow dots



play



pause



previous/rewind




next/fast forward

Customising your Windows Phone


Get more from your phone by customising it to match your preferences.

Setting the current time and date

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > date + time**.
- 3 Flick the **Set automatically** bar and change the date and time and other options.

Turning on or off the ringtone and sounds

You can adjust the Ringtone and sound like New text message, New voicemail, New email, and so on.

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > ringtones + sounds**.


Switching to silent mode

You can switch the silent mode on or off by flicking the **Ringer** status bar left or right.

Adjusting the volume of ringtones

Press the Volume key up or down to adjust the ringtone volume.

Selecting a wallpaper for the Start screen

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > lock + wallpaper > change wallpaper**.
- 3 Select an image and save.
You can also change the Screen time-out and password.


NOTE:

- LG is not responsible for any use of default images or wallpapers provided on your phone.

Adjusting the brightness of the display

You can quickly adjust the display brightness by scrolling left or right on the indicator line of the screen.

To adjust the brightness in the setting menu,

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings > System > brightness**.
- 3 Drag the slider for **Automatically adjust** to Off and tap the desired brightness level.

NOTE: The brightness level of the display will affect how quickly the phone consumes battery power.

Locking your SIM card

You can lock your phone by activating the PIN supplied with your SIM card.

- 1 On the Start screen, tap the arrow  to go to your App list.
- 2 Tap **Settings** and drag to select **application > phone**.
- 3 Drag the **SIM security** Slider to **On**.
- 4 Enter your PIN and select **enter**.

NOTE:

- Once the PIN lock is enabled, you must enter the PIN each time you turn on the phone.
- If you enter an incorrect PIN too many times, your SIM card will be blocked. You must then enter a PIN unlock key (PUK) to unblock the SIM card.

Entering text

You can enter text by selecting characters on the virtual keypad.

You cannot enter text in some languages. To enter text, please check out and select from the supported languages for writing. (**Settings > System > keyboard**)



Entering text with the Phonepad

- 1 Tap the input panel icon.
- 2 Tap characters to enter your text.


NOTES:

- The phone features several typing aids, such as text suggestions that appear above the keyboard, auto-correction, and context-specific keyboard layouts. (**Settings > System > keyboard**)
- Windows Phone 7 supports only full alphabet layouts, such as QWERTY, AZERTY, and QWERTZ.
- The shift key allows you to type capital letters. There are three shift modes: On, Off and Caps Lock (tap and hold).
- The emoticon key brings up the emoticons picker.
- Tapping and holding a, i, e, u, o on the screen displays an accent picker.

Downloading applications from Marketplace


Marketplace lets you easily find, acquire music and applications (including games) to enhance your Windows phone.

Individual category pages have been added to the site for apps, games and music.

 
- On the Start screen, tap  to go to your App list and tap **Marketplace**



Or, tap the **Marketplace** tile from the Start screen.

- Press the  button to search for apps and tap the search string again to edit and search.
- Type in the desired string and tap and the results are displayed below on the same page.
- Tap a **list item** to go to the correct Marketplace page.

- While browsing or searching for an app, you can tap on an application or game and the Details page for the app will appear.
- Select the item you want to buy and tap **download**.

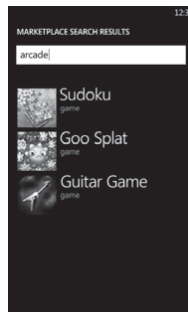

NOTE:

- Pictures and videos are not available on Marketplace.
- This feature may not be available depending on your region.

Getting Started

When you turn on your phone for the first time, you will be guided through essential settings. Please follow the instructions on the screen to activate your phone.

The following are the recommended steps.

SELECT LANGUAGE > WINDOWS PHONE SETTINGS > TIME ZONE and sign in with your Windows Live ID

Signing in with a Windows Live ID

To get applications, play Xbox LIVE games, use a Zune Pass, automatically synchronise Windows Live information to the web and more, you need to sign in with a Windows LIVE ID.

Your Windows Live ID is the email address you use to sign in to services like Xbox LIVE®, Zune®, Hotmail®, and so on. If you can't remember the email address you use:

For Xbox LIVE: On your Xbox 360® console, sign in with your gamer tag, then press the Guide button on your controller (the one in the middle that looks like the Xbox logo). In Settings, click **Account Management > Windows Live ID**.

For Zune: Sign in to the Zune software on your PC. Right-click your profile picture and click Switch user to see your Windows Live ID. To reset your password or get a reminder,

go to <http://account.live.com/ResetPassword.aspx>.

If you haven't yet signed in with a Windows Live ID, there are a few things you won't be able to do on your phone at first (such as, get applications or play Xbox LIVE games).

Importing your contacts

 
When you set up your email or Facebook account, your contacts are imported automatically into your People hub. And when you add Facebook, your friends' feeds appear in your People hub, their photos show up in your Pictures hub, and your own feeds pop up in your Me tile.

To set up a Facebook (or any kind of email) account:

- 1 Tap the arrow on the Start screen to go to your App list.
- 2 Tap Settings > email + accounts.

Getting your contacts from your old phone is also easy. Put your old SIM card into your new phone, and then go to Settings. Flick to applications, tap people, and then tap import SIM contacts.

Staying in Sync

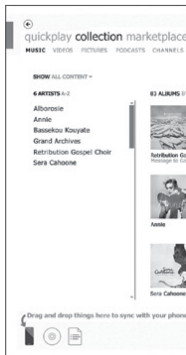






To sync your music, videos, pictures, and updates from your computer to your phone (or vice versa), you'll need the Zune software.

- 1 Go to **windowsphone.com** to install the Zune software.
- 2 Connect your phone to your computer using the USB cable.
- 3 Open the Zune software, and then follow the instructions to get your music, videos, pictures, and so on into your collection.
- 4 Click collection, and then drag everything you want to sync to the phone icon in the lower left.

Communicating

Phone


Making phone calls

- 1 Touch .
- 2 Tap .
- 3 Enter the number on the keypad.
To delete a digit, touch .
- 4 Touch  **call** to make a call.
- 5 To end a call, touch  **end call**.

You can also place calls using the Phone tile on the Start screen. You can dial calls.

TIP! To enter “+” to make international calls, touch and hold down [0+].

Calling your contacts

- 1 Touch People to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching .
- 3 In the list, touch the contact you want to call, and then select the number to use if there is more than one for that contact.

Answering and rejecting a call

When your phone rings, tap the answer tab to answer.

Tap the **ignore** tab to reject an incoming call.

TIP! When the phone rings, Turn down the volume button on the left if you want to switch to silent ringer mode.

Flight mode (disable wireless communications)





Some locations may require you to turn off your phone’s wireless connections by placing your phone in Flight mode.

Tap **SETTINGS > flight mode**. This features toggles your phone’s mobile, Wi-Fi, and Bluetooth communications simultaneously.

Adjusting call volume


To adjust the volume during a call, use the volume up & down button on the left side of the phone.

Making a second call

- 1 During your initial call, touch the  then tap .
- 2 Call the number, or search your contacts using the  or .
- 3 Touch the call icon to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch PRESS TO SWAP on the top of the screen to toggle between calls.
- 6 To end active calls, touch **end call**. If there is no active call, it will end the Hold call.

NOTE: You will be charged for each call you make.

Viewing your call history

On the Start screen, press the  to view the Call log.


View a complete list of all dialed, received, and missed voice calls.

TIP! Touch any single call log entry to view the date, and time of the call.

TIP! Tap the Application bar tab, then touch **delete all** to delete all the recorded items.

Call settings

You can configure phone call settings, such as call forwarding, and other special features offered by your service provider.

- 1 On the Start screen, touch .
- 2 Tap the Applications bar at the bottom of the call history screen and open the **Call Settings** menu.
- 3 Scroll and tap call settings and choose options that you want to adjust.

Vicemail number - Edits the voicemail number


Show my caller ID to - Choose whether to display your number on an outgoing call.

international assist- Helps to automatically correct some common mistakes while dialling internationally or dialling while abroad.

Searching for a contact


There are two ways to search for a contact:

On the Start screen

- 1 On the Start screen, touch the **People** hub tile to open your contacts (People hub).
- 2 Touch  and enter the contact name using the keypad.


TIP! To search for the initial of a name, touch the Contacts tab at the top of the screen and select Groups. This will display a list of all your groups.

From the application menu

- 1 On the Start screen, touch  to go to the applications menu.
- 2 Touch the People application and select the desired profile.

Adding a new contact

- 1 On the Start screen, touch the People application.

- 2 If you want to add a picture to the new contact, touch .
You can use a saved picture or take a new one.
- 3 Touch the desired item and tap a text field to open the touch keyboard.
- 4 Touch the **Done** icon to save the current added information.
- 5 Touch a category of contact information and enter the details about your contact.
- 6 Touch the save icon to save the Contact

TIP!

- Tap the Application bar tab, and then touch “delete” to delete the contact you just saved.
- When you long tap a contact in a people list, a short menu that you can choose to pin to start, edit and delete appears.

Favourite Contacts



You can classify frequently called contacts as favourites.



Adding a contact to your Favourites (Pin to the Start screen)


- 1 On the Start screen, touch  to open your profile contacts.
- 2 Touch a contact to view the details.
- 3 Touch **Pin to start** on the application menu, and then your favourite contact pins to Start screen.

Messaging



Sending a text message

- 1 On the Start screen, tap **Messaging**  > **New** .
- 2 Do one of the following:
 - Begin typing a person's name in the To: box, and then tap a matching contact name in the list. Repeat to add more recipients, and their names will be added automatically in the To: box.



- Enter the person's mobile phone number or their email address in the To: box. To enter additional recipients, tap Enter after each one.
- Tap **Add** , flick to a contact, and then tap it. Repeat to add more recipients, and their names will be added automatically in the To: box.
- 3 Tap the message box, type your message, and then tap **Send** .

NOTES: If you want to attach data on your messaging, touch  at the bottom of the screen and choose the desired file. Remember that you are able to attach pictures only.

Replying to a text message

- 1 On the Start screen, tap **Messaging** , and then tap the conversation that has the text message you received.
- 2 Tap the message box, type your response, and then tap **Send** .

Forwarding a text message


- 1 On the Start screen, tap **Messaging** , and then tap the conversation that has the text message you want to forward.
- 2 Tap and hold a message, and then tap **Forward**.
- 3 Type the person's name, mobile phone number, or email address in the To: box.
- 4 Tap the message box, type a message if you'd like, and then tap **Send** .

NOTES:

- Your mobile operator might charge you extra for text messaging, and this service must be available with your current phone plan.
- Text messages are also called SMS (Short Message Service) messages and can be up to 160 characters long.
- If your text message is longer than 160 characters, it will be sent in one or more additional messages.
- Sometimes mobile operators will send a text message that you can't reply to

or forward, and the message box says Read-only message.

Saving a picture from a text message

- 1 On the Start screen, tap **Messaging** .
- 2 Tap a conversation that has a picture, and then tap the picture.
- 3 Tap and hold the opened picture, and then tap Save to phone. The picture is saved in the Saved Pictures album on your phone.

NOTES:

- Your mobile operator might charge you extra for text messaging, and this service must be available with your current phone plan.
- Text messages that have a picture attached are also called MMS (Multimedia Message Service) messages.
- Some pictures you receive might be protected using digital rights management and can't be saved to your phone. However, the picture can still be set as the wallpaper on your phone.

Email

Setting up an email account

Whether it's personal or work-related email, you can use it on your Windows Phone by setting up different types of email accounts. Depending on the email account you set up on your phone, other items from your account (such as contacts, calendar, and more) can be retrieved as well.

NOTE: To set up an email account on your phone, you must have a working cellular data or Wi-Fi connection. For more information about connecting to a Wi-Fi network, see [Connect to a Wi-Fi network](#).

Setting up a Windows Live account

When you're first setting up your phone, you're asked to sign in with your Windows Live ID. If you didn't sign in with it at that time or if you have more than one Windows Live ID, you can use the steps below to set up your primary Windows Live ID or additional Windows Live IDs.

On the Start screen, flick left to the Apps list, tap  **Settings**, and then tap **Email + accounts**.

1 Tap **Add an account > Windows Live** and follow the instruction on the screen.

NOTES:

- The first Windows Live account that you set up can't be deleted from your phone.
- If you set up additional Windows Live IDs on your phone, photos in those additional accounts won't be synced to your phone.
- You can create a Hotmail account here and retrieve new email messages from Hotmail to your Inbox. When you access this Hotmail application, the number of new emails is displayed on the email tile.


Setting up a Microsoft Exchange email account

You can use the following steps to set up an email account that is on a Microsoft Exchange Server. (For example, your email account at work might be on a Microsoft Exchange Server.) You can also use the steps in the following procedure to set up other email accounts that use Exchange ActiveSync—including a hosted Microsoft Exchange email account or an Outlook Web App account.

- 1 On the Start screen, flick left to the Apps list, tap  **Settings**, and then tap **Email + accounts**.
- 2 Tap **Add an account > Outlook**.

Setting up an email account from an Internet Service Provider (ISP)

When you set up an email account, your phone will try to automatically find correct settings for your email account. The email account might be one that's through your Internet Service Provider (ISP), or it might be another IMAP or POP email account from another provider.

- 1 On the Start screen, flick left to the Apps list, tap  **Settings**, and then tap **Email + accounts**.
- 2 Tap **Add an account > Other account**.



The following is a list of settings that you'll need to know beforehand when the correct email account settings can't be found automatically. Generally, you can find this information on the provider's website.


- The email account type (POP or IMAP)


- The incoming email server address
- The outgoing (SMTP) email server address
- Server authentication settings
- SSL requirements for incoming email
- SSL requirements for outgoing email

Sending an email message

After you set up an email account on your phone, you can send or receive emails on that account.

- 1 On the Start screen, tap the email account that you want to access (for example, Outlook, Google, or Windows Live).
- 2 Tap New .
- 3 Do one of the following:
 - In the To: text box, tap Add , and then choose a contact.
 - Tap in the To: text box, and then start typing an email address. Your phone will offer suggestions as you type.



- To remove a recipient, tap their name or email address, and then tap Remove.
- 4 Tap in the Subject: text box and type a subject.
 - 5 Tap below the Subject: text box, type your email, and then tap **Send** .

NOTE: You can attach pictures by tapping  before sending it.

Viewing email messages

- 1 On the Start screen, tap the email account that you want to access (for example, Outlook, Google, or Windows Live).
- 2 Select an email message.

From the message view, use the following options:


- To reply to or forward an email, tap **Respond** , and do one of the following:
 - To delete one email, tap on the email to open it, and then tap **Delete** .

- To delete multiple emails, tap on the far left of an email you want to delete. A check box will appear. Tap the check box next to each email you want to delete, and then tap **Delete**.

Retrieving your email

You can automatically or manually check your account for new email.

To check manually:

- 1 Tap  on the Start screen to go to your App list and tap Email application.
Or, you can also tap the Email tile on Start screen, and which is the account you want to use, like Hotmail, gmail, and so on.
- 2 Choose synchronise and your Windows phone will then connect to your email account and retrieve your new messages.


To check automatically :

- 1 Windows phone retrieves emails automatically as the setting of the account.
- 2 You can change the period of

retrieving(syncing) by changing "download email from" setting. (Please refer to the next category "Changing your email account's setting" for details.)

Changing your email account's settings

You can set up additional accounts based on your own preferences.

- 1 Tap  on the Start screen to go to your App list and tap Email application. Or, you can also tap the Email tile on Start screen.
- 2 Touch the Application bar at the bottom of the screen to open the options menu, and tap add email account.
- 3 Choose the email you want to add. There are options such as Windows Live, Outlook, Yahoo! Mail, Google and other account.
- 4 Enter your email address and password, then it will automatically synchronise with your new email account.


You can change settings based on your own preferences.

- 1 Touch the Application bar at the bottom of the screen to open the options menu, and tap settings.
- 2 You can change detail sync options by tapping "sync settings" or checking/discheking "Always bcc myself" and "Use an email signature".

NOTES:

- In "sync settings" you can change the settings below
download new content : the period of retrieving contents
download email from content to sync (email, contacts, calendar) : enable/disable the contents and other detailed account information.

Deleting your email account

- 1 Tap  on the Start screen to go to your App list.
- 2 Tap Settings and go to email + accounts.
- 3 Touch and hold the account you want to delete and tap delete.

Facebook

Setting up a Facebook account

When you set up your Facebook account on your phone, Facebook info is available throughout your phone. You can then access Facebook info in the People hub, Pictures hub, and the Me card.

- 1 On the Start screen, flick left to the Apps list, tap **Settings > Email + accounts**.
- 2 Tap **Add an account > Facebook**.

NOTES:




- To set up your Facebook account on your phone, you must have a working cellular data or Wi-Fi connection.
- You can **only** have one Facebook account set up on your phone at a time. If you want to add a different account, you'll need to delete the existing one on your phone first.


Entertainment

Camera

Before using the camera, you will be asked whether you want to allow it to use your location. Allowing this option will add location info to your pictures, so you can see where they were taken.

Taking a picture

- 1 On the Start screen, flick left to the Apps list.
- 2 Tap  **Camera**.
Or press and hold the Camera key to start the camera.
- 3  Hold the phone steady, either vertically or horizontally. You can zoom in or out  to get closer or further away from your subject.

TIP! Want to play with camera settings? Tap  to adjust various settings, including flash.

- 4 Press the Camera key or touch the preview screen to take a picture.

- 5 The picture is automatically saved in the Camera Roll album on your phone.

You can also choose to upload pictures to the Web, including automatically sharing your pictures to SkyDrive or Facebook.


Once you've taken the photo

- 1 After you take a picture, flick right to see it in the picture viewer.

TIP! Want to see your pictures and videos in filmstrip view? Go to the camera, tap a picture or video, pinch it as if to shrink it and then flick left or right to see the filmstrip. The filmstrip works best when you turn your phone sideways and use a in landscape view.

- 2 Tap and hold the picture or press bottom of the screen to view picture options, such as sharing it, adding it to favorites, deleting it, using it as wallpaper, or automatically fixing the image.

Recording a video

- 1 On the Start screen, flick left to the Apps list.
- 2 Tap  **Camera**.
Or press and hold the Camera key to start the camera.
- 3 Make sure the video mode  is selected. Hold the phone steady, either vertically or horizontally.
- 4 Press the Camera key to start or stop recording.
The video is automatically saved in the Camera Roll album on your phone.

After shooting a video

- 1 After you record a video, flick right, and then tap it to play it in the video viewer.

A still image representing your video will appear on the screen and the duration will be shown on the bottom of the screen.

NOTE: You can record and play HD video (1280x720 high-def resolution). If you connect your phone to your computer and copy the video to it, you can play HD video in its full 1280x720 resolution.

TIPS!

- If you want to watch videos downloaded from a website on your phone, connect your phone to your PC and sync them to your phone. You can't automatically download videos to your phone.
- To find a video you took on your phone that you synced to your computer, open the Zune software, then click **Collection > Videos**.
- If you have a lot of pictures or videos that you want to delete, or if you want to save them to your computer, you can save time by connecting your phone to your computer and using the Zune software to do the work for you.

Adding location info to my pictures

If you include location (GPS) information in the pictures you take, the information can be seen by others after you upload and share them. Once you do, you and your friends can have fun viewing these pictures on a map

using Bing and Windows Live Photo Gallery, and even searching the Web for other pictures just like it because the location is embedded in your picture behind the scenes.


- 1 On the Start screen, flick left to the Apps list, and tap Settings > Applications > Pictures + Camera.
- 2 Turn on Include location (GPS) info in pictures you take.


NOTE: If you want this information to stay with your pictures when you upload them to Facebook or SkyDrive, turn on Keep location info on upload pictures.

Getting to know the Camera mode

Camera  / **Video Record mode** 

- Tap this icon to switch between Camera/Video Record modes

Zoom  - Zoom in or zoom out.

Settings  - Touch this icon to open the settings menu. See Using advanced settings on next page.