

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Part 15 Class B Compliance

This device and its accessories comply with part15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received,
including interference that may cause undesired operation.

Body-worn Operation

This Device has been tested for typical body-worn operations with the distance of 0.79inches(2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79inches(2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain metallic components.



GS-170 | Quick Start Guide

Installing the Battery

To install the battery, insert the battery into the opening on the back of the phone. Put the battery cover on the phone and slide it downwards until it locks into place.

Removing the Battery

1. With your phone turned off, push forward from the bottom of the battery cover (1) on the back of your phone, slide the battery cover up and lift off (2).

2. Lift the battery up (1) and away (2) from the phone, as shown.

Replacing the Battery

1. To reinstall the battery, align the battery contacts (1) with those in the battery compartment. Press the battery down until it clicks into place (2).
2. With the battery in position in the phone, replace the battery cover on the back of your phone.

* battery type : Lithium-ion battery, 3.7V, 900mA

- Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- Depending on your country, your phone and accessories may appear different from the picture in this guide.

Charging the Battery

Your phone is powered by a rechargeable Li-ion battery. Use the wall charger to charge the battery, and use only LG approved batteries and chargers.

Note: You must fully charge te battery before using your phone for the first time. A fully discharged battery requires up to 4 hours of charge time.


Note: For connection to an electrical supply not located in the U.S., you must use an adapter of the proper configuration for the power outlet. Using the wrong adaptor can damage your phone and void your warranty.

1. Open the cover on the accessory port on the right side of the phone and plug the wall charger connector into the jack. Be sure to orient the connector as shown to avoid damaging your phone.
2. Plug the charger into a standard AC wall outlet.
3. When the phone is completely charged (), unplug the charger from the wall outlet.
4. Remove the charger from the phone by gently pulling out the connector. Replace the plastic cover over the open jack.

Important: The battery charging function may stop when you are on a call, to avoid damage to the battery. Do not remove the battery from the phone while charging and make sure the wall charger is disconnected from the phone before removing the battery.

Please make sure that the 'B' side of the connector is facing up.

Phone layout and key functions

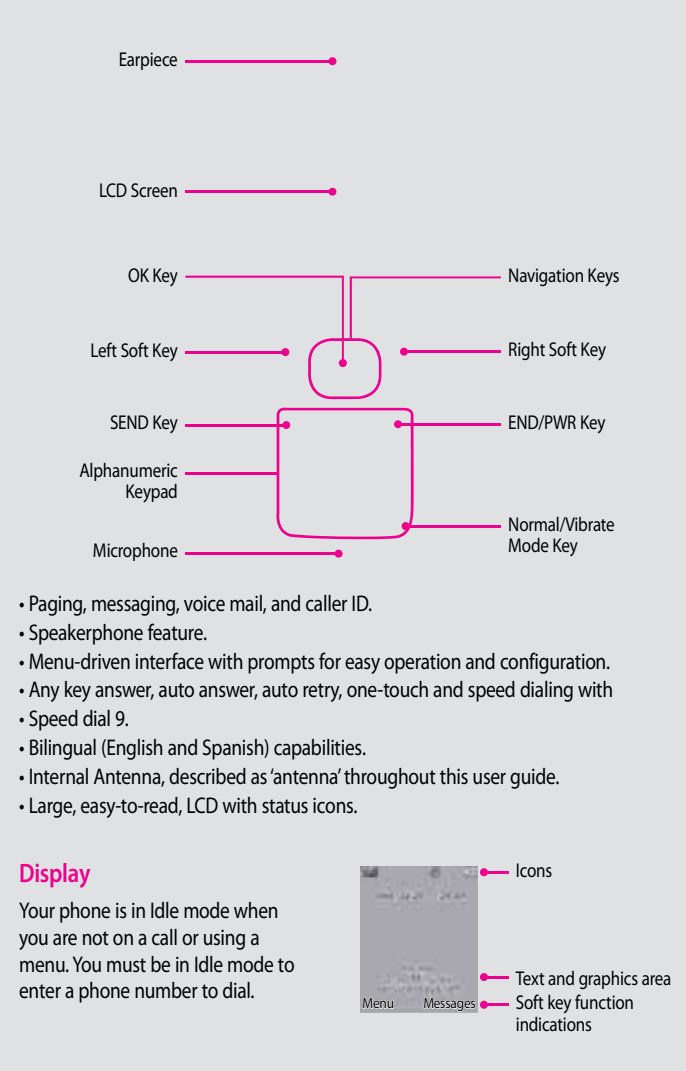

Your phone displays the following status indicators on the top of the screen:

Icon Description			
	Signal Strength		Calendar
	Airplane Mode		Roaming
	Battery Strength		TTY
	In Call State		Bluetooth On
	No Service		New Voicemails
	New Message		Msg & Voicemail
			Speaker mode
			Normal mode
			Silent mode
			Alarm

Turning the Phone On or Off

1. To turn on, install a charged battery.
2. Then press **Power** until the LCD screen lights up.
3. To turn off, press and hold **Power** until the display turns off.

Changing the display language

Allows you to use the bilingual feature according to your preference. Choose between English and Spanish.

1. In Idle mode, press the Left soft key **Menu** to access Main menu.
2. Select **Language** → **English** → **English**.
3. Use **Left Soft Key** to select **English** or **Spanish**, then press **Power**.

Making Calls

1. Make sure the phone is turned on.
2. Enter the phone number (include the area code if needed).
3. Press **Call** to dial.
4. Press **End Call** to end the call.

Recent Calls

The Recent Calls Menu is a list of the last phone numbers or Contacts entries for calls missed, received, or dialed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Note: To view a quick list of all your recent calls, press **Call Log** Key while in standby mode.

1. **Missed Calls** : Allows you to view the list of missed calls.
Press Left Soft Key **Call Log**, **Missed** → Use **Left Soft Key** to highlight an entry.
2. **Received Calls** : Allows you to view the list of received calls.
Press Left Soft Key **Call Log**, **Received** → Use **Left Soft Key** to highlight an entry.
3. **Dialed Calls** : Allows you to view the list of dialed calls.
Press Left Soft Key **Call Log**, **Dialed** → Use **Left Soft Key** to highlight an entry.
4. **All Calls** : Allows you to view the list of the most recent missed, received and dialed calls; up to 100 entries Press Left Soft Key **Call Log**, **All**.
5. **Call Duration** : Allows you to view the duration of the different types of calls.
Press Left Soft Key **Call Log**, **Duration** → Use **Left Soft Key** to highlight one of the call types (below).
All Calls/Dialed calls/Received calls/Last call.

Sound

Options to customize your phone's sounds:

Ringers

1. Press Menu and select **My Folder**, then choose **Sounds**
2. Select Voice recordings, Ringtone or Default sounds.
3. Select a sound and press Play to listen to it.
4. Select Options and choose Use as.
5. Choose from Voice ringtone, Message tone, Start-up or Shut down.

Volume

1. Press Menu and select **Settings**.
2. Select Sound Profiles and then choose the profile you want to edit.
3. Select Options and choose Edit.
4. You can change all of the tones, its volumes and alert options from here.

Using the menus

Selecting or Modifying a Menu or Feature :

1. Press the Left soft key **Menu** to access Main menu.
2. Use the Navigation keys **Up/Down** to reach a desired menu and then press **Power**.
3. If the menu contains any submenus, locate the one you want by using the Navigation keys **Up/Down**. Press **Power** to enter the submenu.
If the selected menu contains additional submenus, repeat this step.

Using the menus

1. Prepaid 1.1 Add Airtime 1.2 Buy Airtime 1.3 My Phone Number 1.4 Airtime Info 1.5 Airtime Display 1.6 Serial Number 1.7 SIM Number 1.8 Code Entry Mode	2. Contacts 2.1 Contact List 2.2 New Contact 2.3 Speed Dials 2.4 Groups 2.5 Own Number 2.6 My Business Card 2.7 Settings	3. Recent Calls 3.1 Missed Calls 3.2 Dialed Calls 3.3 Received Calls 3.4 All Calls 3.5 Call Duration 3.6 Data Counter
4. Messages 4.1 Create Message 4.2 Inbox 4.3 Sent Items 4.4 Saved Items 4.5 Voicemail 4.6 Drafts 4.7 Outbox 4.8 Emoticons 4.9 Message Settings	5. Browser 5.1 Home 5.2 Bookmarks 5.3 Enter URL 5.4 Saved Pages 5.5 Recent Pages 5.6 Browser Settings	6. Media 6.1 Camera 6.2 Voice Recorder
7. My Folder 7.1 Picture 7.2 Sounds 7.3 Games & Apps 7.4 Other Files	8. Tools 8.1 Alarm Clock 8.2 Calendar 8.3 Notepad 8.4 Secret Notes 8.5 Calculator 8.6 World Clock 8.7 Tasks 8.8 Stopwatch 8.9 Unit Converter 8.0 Date Finder 8* Settings	9. Settings 9.1 Sound Profiles 9.2 Phone Settings 9.3 Display 9.4 Connection 9.5 Call 9.6 Memory 9.7 Phone Information



Entering text

In a text input field, press the **↵** key to toggle between capitalization modes. To switch between **T9Word** mode, **123** and **ABC** mode, press and hold the **↵** key. To access Symbols, press the Left Soft Key **☰** and select Symbols.

Using T9Word mode

1. Press 2 to 9 to start entering a word. Press each key once for one letter. The word you are entering appears on the display. Options may change with each keypress.
For example: To enter "Hello" in **T9Word** mode, press 4, 3, 5, 5, and 6.

Using ABC mode

Press the keys labeled with the letter you want once for the first letter, twice for the second letter, and so on.

For example, press 2 three times to enter "C" and 5 two times to enter "K".

Using 123 mode

Press the keys that correspond with the digits you want to enter.

Using Symbols mode

Press the keys that correspond with the symbol you want and press the **☰**.

You can press **☰** to display more symbols.

Tips for entering text

To move the cursor, press the **⬅**.

• To delete characters one by one, press **⌫**. To delete all of the characters, press and hold **⌫**.

• To insert a space between characters, press **␣**.

• To enter punctuation in **T9Word** mode or **ABC** mode, press **☰**.

Sending an SMS message

Allows you to send text messages, pages.

1. Press **☰** Menu, **☰** and **☰** Create Message.
2. Enter the Message then recipient's address.
3. Press **☰** to access the Text Entry screen.
4. Type your message.
5. Press **☰** Send.

A confirmation message is displayed.

Quick feature reference

This section provides instructions on how to access the different features on your phone.

Menu	Description
☰ , ☰ , ☰	Add Airtime allows you to start an over-the-air request for additional airtime.
☰ , ☰ , ☰	Buy Airtime allows you to start an over-the-air request to purchase additional airtime.
☰ , ☰ , ☰	My Phone Number displays the phone's phone number.
☰ , ☰ , ☰	Airtime Info displays the airtime balance and due date information.
☰ , ☰ , ☰	Airtime Display allows you to disable/enable the display of Balance and Due Date info on the lock screen.
☰ , ☰ , ☰	Serial Number simply displays the phone's serial number.
☰ , ☰ , ☰	Refer Code Entry Mode.
☰ , ☰ , ☰	Code Entry Mode will allow the phone to accept Tracfone-related codes in order to add units, modify specific data and troubleshoot the phone. In using the Code Entry Mode, you can't receive incoming calls or use events alert.
☰ , ☰ , ☰	Contact List you to view your saved contacts.
☰ , ☰ , ☰	New Contact allows you to add a new contact to your Contact List.
☰ , ☰ , ☰	Speed Dials allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.
☰ , ☰ , ☰	Groups allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.
☰ , ☰ , ☰	Shows your own phone number.
☰ , ☰ , ☰	My business card allows you to create your own business card.
☰ , ☰ , ☰	Settings allows you to configure settings for Contacts.
☰ , ☰ , ☰	Missed Calls allows you to view the list of missed calls.
☰ , ☰ , ☰	Dialed Calls allows you to view the list of dialed calls.
☰ , ☰ , ☰	Received Calls allows you to view the list of received calls.
☰ , ☰ , ☰	All Calls allows you to view the list of missed, received and dialed calls; up to 100 entries.
☰ , ☰ , ☰	Call Duration allows you to view the duration of calls by call type.
☰ , ☰ , ☰	Data Counter
☰ , ☰ , ☰	New Message allows you to send text messages.
☰ , ☰ , ☰	Inbox allows you to view your received messages.

Menu	Description
☰ , ☰ , ☰	Sent allows you to view your sent messages. Access to view contents of sent messages and verify whether the transmission was successful or not.
☰ , ☰ , ☰	Saved Items.
☰ , ☰ , ☰	It is connected to the voice mail center.
☰ , ☰ , ☰	Drafts allows you to view the saved (message) Drafts.
☰ , ☰ , ☰	Outbox is a temporary storage folder while messages are being sent or stores the messages that are failed to sent.
☰ , ☰ , ☰	Emotions allows you to add, edit and delete emoticons. You can insert the emotion which you preferred on writing a message.
☰ , ☰ , ☰	Settings allows you to configure settings for Messaging.
☰ , ☰ , ☰	Home allows you to access the web.
☰ , ☰ , ☰	Bookmarks allows you to add and access your bookmarks for easy and fast access to your favorite websites.
☰ , ☰ , ☰	Enter URL allows you to type in your desired URL, followed by Open.
☰ , ☰ , ☰	Saved Pages allows you to connect to the saved page.
☰ , ☰ , ☰	Recent Pages allows you to view the list of web page titles you have accessed recently. To access one of these pages, simply select the required page and press Open.
☰ , ☰ , ☰	Settings allows you to configure settings for Browser.
☰ , ☰ , ☰	Camera allows you to take a photo. Point the lens towards the subject of the photo. Then press OK key.
☰ , ☰ , ☰	Voice recorder allows you to record voice memos or other sounds.
☰ , ☰ , ☰	Pictures allows you to view a list of images including default images preloaded onto your phone, images downloaded by you and images taken on your phone's camera.
☰ , ☰ , ☰	Sounds allows you to view the Voice recordings, Ringtone or Default sounds.
☰ , ☰ , ☰	Games & Apps allows you to play the downloaded games and view any applications you have.
☰ , ☰ , ☰	Others allows you to view the list of files which are not Picture, sounds, games or applications.

Menu	Description
☰ , ☰ , ☰	Alarms Clock allows you to set alarms. At the alarm time, any set alarm will sound (depending on your volume settings) the tone of your choice, and an alarm message will be displayed on the LCD screen.
☰ , ☰ , ☰	This function helps to remind you of the schedule.
☰ , ☰ , ☰	Notepad allows you to add, read, edit, and erase note.
☰ , ☰ , ☰	Secret Notes allows you to write the private note to protect your privacy. You enter the security code to use this menu.
☰ , ☰ , ☰	Calculator allows you to perform simple mathematical calculations.
☰ , ☰ , ☰	World Clock allows you to determine the current time in another time zone or city.
☰ , ☰ , ☰	Tasks allows you to add an item to your task list.
☰ , ☰ , ☰	Stopwatch allows you to use your phone as a stopwatch.
☰ , ☰ , ☰	Unit Converter allows you to convert units of Currency, Area, Length, Weight, Temperature, Volume and Velocity.
☰ , ☰ , ☰	Date finder allows you to help you calculate what the date will be once a certain number of days have passed.
☰ , ☰ , ☰	Settings allows you to configure settings for Organizer.
☰ , ☰ , ☰	Options to customize your phone's Sound Profiles.
☰ , ☰ , ☰	Options to customize your phone's Settings.
☰ , ☰ , ☰	Options to customize your phone's Display.
☰ , ☰ , ☰	Connection menu allows you to configure and use the Bluetooth setting on your phone.
☰ , ☰ , ☰	Options to customize your phone's Call.
☰ , ☰ , ☰	Memory allows you to check out the memory status of your phone.
☰ , ☰ , ☰	Phone Information provides you with specific information pertaining to your phone model.

*Many of the features and services described are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas.

Other conditions and restrictions may apply. See carrier for more information.

© 2009 LG Electronics, Inc.