

This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Part 15 Class B Compliance

This device and its accessories comply with part15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received,
including interference that may cause undesired operation.

Body-worn Operation

This device has been tested for typical body-worn operations
with the distance of 0.79inches (2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance
of 0.79inches(2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain
metallic components.



CE 0168 P/N: MMBBSAMPLE (1.0)

GU200a User Guide - English


This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Getting to know your phone

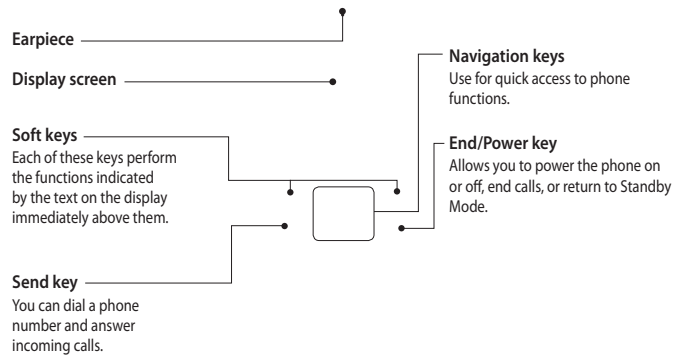

Menu map

| | | | | |
|--|---|---|--|---|
| 1 Messaging 1 New message 2 Inbox 3 Drafts 4 Chat box 5 Outbox 6 Sent 7 Listen to voice mail 8 Info messages 9 Templates 0 Settings | 2 Contacts 1 Search 2 New contact 3 Speed dials 4 Copy all 5 Delete all 6 Memory status 7 Information | 3 Call history 1 All calls 2 Missed calls 3 Dialed calls 4 Received calls 5 Call duration | 4 Games 1 Space ball | 5 My stuff 1 My images 2 My sounds 3 Others |
| 6 Media 1 Camera 2 MP3 player 3 FM radio | 7 Tools 1 Torch 2 Fake call 3 Calculator 4 Stopwatch 5 Unit converter 6 World clock 7 SIM services | 8 Organiser 1 Alarm 2 Calendar 3 Memo | 9 Settings 1 Profiles 2 Date & Time 3 Languages 4 Display 5 Call 6 Auto keylock 7 Security 8 Power save 9 USB connection 0 Network selection # Reset settings # Memory status | |

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Messaging Menu 1

Your GU200a includes functions related to SMS (Short Message Service).

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 Choose **Message** to send an SMS.
- 3 A new message editor will open. Message editor combines SMS into one intuitive. The default setting of the message editor is SMS mode.

- 2 Holding the phone vertically, point the lens towards the subject of the photo.
- 3 Press the Capture key to take a photo.

MP3 Player

Your LG GU200a has a built-in MP3 player so you can play all your favourite music.

Playing a song

- 1 Press menu and select Media and then choose MP3 Player.
- 2 Choose all songs then select the song you want to play, Go To Options and then Press Play.
- 3 While music is playing, go to Options->Pause to pause the song.
- 4 Press right navigation key to skip to next song.
- 5 Press left navigation key to skip to previous song.
- 6 While music is playing, press "Back" key to stop the music and return to the MP3 player menu.

You can view and play Recent songs, Play list, Album, Artist and Genre in **menu**.

When you're playing a song,

- 1 Long press right navigation key to FF
- 2 Long press left navigation key to REV.
- 3 If song is played for more than 3 seconds and if we press left navigation key then it will play the same song from the beginning else it will play the previous song.

Installing a memory card

Remove the battery cover and push the memory card slot and flip up the slot. Put the microSD card on the card tray. Make sure that the gold contact area is facing downwards. To remove the microSD card, pull it gently in the opposite direction. The GU200a will support a memory card of up to 2 GB.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

• SIM card support: 2G [1.8v / 3V]

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Close the battery cover
- 5 Charge your battery

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Answering and rejecting a call

When your phone rings, press **Accept** or press **Reject** to answer the call. While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting. Press **Accept** or **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Any key** or **Send key only**.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Security**.

- **Call barring** – Select when you would like calls to be barred.
- **Fixed dial number** – Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

- **Received calls:** You can view the Received calls.
- **Call duration:** Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

Games Menu 4

Your GU200a comes with preloaded games to keep you amused when you have time to spare.

My stuff Menu 5

You can store multimedia files into your phone's memory. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**. Press **Menu** then select **My stuff** to open a list of folders.

Your GU200a supports JPEG images, MP3 & MIDI sound files.

Media Menu 6

Camera

Taking a quick photo

Using the camera module built in your phone, you can take pictures of people. Additionally, you can select photos as wallpaper.

- 1 Press **Menu** and select **Media**, select **Camera** or go directly to camera through short cut key by pressing down navigation key.

Turning Your Phone On and Off

- 1 Press and hold the End key until the power comes on.
- 2 Press and hold the End key until the power goes off.

Making a call

- 1 Key in the number using the keypad. To delete a digit press Clear key.
- 2 Press **Call** to initiate the call.
- 3 To end the call, press **End**.

TIP! To enter + when making an international call, press and hold 0.

Making a call from your contacts

- 1 Press "Search" contacts to open the address book.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press 6 three times.
- 3 To scroll through the contacts and their different numbers use "Up and Down Navigation key".
- 4 Press **Call** to initiate the call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings**, choose **Call**. Select **Answer mode** and choose from **Any key** or **Send key only**.

- 4 Enter your message using either the T9 predictive mode or Abc manual mode. You can switch text input mode by pressing **#+**.
- 5 Press **Options** and choose **Insert** to add an **Symbol**, **Text template**, **Name&Number**.
- 6 Press **Send to**.
- 7 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 8 Press **Send**.

Contacts Menu 2

Searching for a contact

You can search for a contact in your contacts.

- 1 Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press 6 three times.
- 3 To scroll through the contacts and their different numbers use Up and Down .

Call history Menu 3

- **All calls:** You can view all lists of outgoing or incoming calls.
- **Missed calls:** You can view the unanswered calls.
- **Dialed calls:** You can view the outgoing calls (called or attempted).

FM radio

When phone can't find FM channel or low channel clarity is happening, use ear-mic .

Your LG GU200a has an FM radio feature so you can tune into your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen FM Radio more clear. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Note: You can listen to the radio via built-in speaker. Press **Options**, select **Listen via** and choose **Speaker**.

GU200a supports wireless FM. User does not require to insert ear-mic to listen FM in normal condition. In weak FM radio signal area the sensitivity can degrade with wireless and antenna mode. So it is advisable to insert the ear-mic for better and enhanced FM quality.

Tools / Organiser Menu 7,8

Using the calendar (**Menu** > **Organiser** > **Calendar**)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding a memo (**Menu** > **Organiser** > **Memo**)

You can register your own memos here.