

* This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Part 15 Class B Compliance

This device and its accessories comply with part15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received,
including interference that may cause undesired operation.

Body-worn Operation

This Device has been tested for typical body-worn operations with the distance of 0.79inches(2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79inches(2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain metallic components.

GX200 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Disposal of your old appliance

- When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Display Information

Icon	Description
	The alarm clock is set.
	Roaming service is used
	Indicates new text message(s).
	Vibrate only
	The normal profile is activated.
	The silent profile is activated.
	The outdoor profile is activated.
	The flight mode profile is activated.
	The headset setting is used.
	Indicates the battery charge level.

On-Screen Icons

Icon	Description
	Tells you the strength of the network signal.
	Bluetooth connectivity is powered on.
	Your phone is locked.

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. The input method is display at the upper right corner of your phone.

Indicator	Function (English Smart mode)	Indicator	Function (English Smart mode)
	T9 Smart abc		Multitap abc
	T9 Smart abc		Multitap abc
	T9 Smart ABC		Multitap ABC
	Numeric		

FM Radio (This function may be different in different regions.)

- Select [Multimedia] from the main menu, and then select [FM radio].
- Use the navigation key to search for radio channels. You can also press [Options] and select [Preset auto search] to automatically search for available radio channels.
- Press [Options] to edit the channel list. Your phone provides the following options for FM radio:

How to set the tone (Continued)

- Alert type:** Select an alert type (Ring, Vibrate, Vibrate & Ring, Ring after vibrate, Silent) for ring tone.
- Ring tones:** Select desired ring tone.
- Ring Volume:** Adjust the volume of ring tone by pressing the up/down navigation keys.
- Message alert type:** Select an alert type (Ring Once, Ring Periodically, Vibrate & Ring, Vibrate, Silent) for message alert tone.
- Message tones:** Select desired message alert tone.
- Message volume:** Adjust the volume of message alert tone by pressing the up/down navigation keys.
- Keypad tones:** Select desired keypad tone.
- Keypad volume:** Adjust the volume of keypad by pressing the up/down navigation keys.
- Effect sound volume:** Adjust the volume of effect sound by pressing the up/down navigation keys.
- Power on/off tones:** Select different types of ring tone for power on/off.
- Power on/off volume:** Adjust the volume of power on/off ring tone by pressing the up/down navigation keys.

Installing the SIM Card and Charging the Battery

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

- USIM is not supported in this phone.
- If the battery is removed for about 1 minute, the clock returns to its default setting. You will then need to reset the time.

1

2

3

4

Illustrations

- Open the battery cover
- Insert your SIM card
- Close the battery cover
- Charge your battery

Fully Charge the battery before using it for the first time

Turning Your Phone On and Off

- Hold down the [End] key until the phone switches on.
- To switch the phone off, hold down the [End] key until the power-off image displays.

Making a call

- In the standby mode, enter the area code and the phone number.
- Press the [Talk] key to call the number.

Answering a call

- Press the [Talk] key to answer the call when the phone rings.
- If the Any Key menu option has been set, any key press will answer a call except for the [End] key or the right soft key.

Making an international call

- In the standby mode, long press the 0 key until a + (international prefix character) sign is displayed.
- Enter the country code, the area code, and the phone number.
- Press the [Talk] key to call.

FM Radio (This function may be different in different regions.) (Continued)

- Channel list:** Bookmark up to 9 radio channels by entering the channel name and frequency.
- Manual input:** Key in the radio channel frequency manually.
- Preset auto search:** Automatically search for available radio channels and store them to the channel list.
- Settings:** Change the background play, the skin of FM radio, the switch of loud speaker, the record format as AMR or WAV, the audio quality, and the record storage.
- Record:** Record your favorite radio programs.
- Append:** Resume the previous recorded file and continue to record at the same file.
- File list:** Manage the previous recorded files.

 
Lost Mobile Track (LMT)

- The LMT function provides you with the ability to have a tracking system in place for your phone in case you lose or misplace it.
- When an unauthorized person uses your phone, a SMS is triggered from your phone and the message is sent to your pre-defined phone number.
- You can set the LMT function by the following steps:
 - Select [Settings] from the main menu, and then select [Security].

Menu Tree

1. Messaging	3.4 Memo	5.7 Info message	8.5 Copy all
1.1 SIM1	3.5 To do	5.8 Templates	8.6 Delete all
1.2 SIM2	3.6 Unit converter	5.9 Settings	8.7 Settings
• Home	3.7 World clock	6. My stuff	8.8 Information
• Yahoo!	3.8 SIM services	6.1 Images	9. Settings
• Bookmarks	3.9 Torch	6.2 Sounds	9.1 Dual SIM
• Enter address	4. Multimedia	6.3 Videos	9.2 Date & Time
• History	4.1 MP3 player	6.4 Others	9.3 Languages
• Settings	4.2 Camera	6.5 External memory	9.4 Display
2. Call history	4.3 Video camera	6.6 Games & Apps	9.5 Shortcut
2.1 All calls	4.4 FM radio	7. Profiles	9.6 Fake call
2.2 Missed calls	4.5 Schedule FM record	7.1 Normal	9.7 Call
2.3 Dialed calls	4.6 Voice recorder	7.2 Silent	9.8 Security
2.4 Received calls	4.7 Melody composer	7.3 Outdoor	9.9 Connectivity
2.5 Call duration	5. Messaging	7.4 Flight Mode	9.10 Power save
2.6 Call costs	5.1 New message	8. Contacts	9.11 Reset
2.7 Data information	5.2 Inbox	8.1 Search	9.12 Memory status
3. Tools	5.3 Drafts	8.2 New contact	
3.1 Alarm clock	5.4 Outbox	8.3 Speed dials	
3.2 Calendar	5.5 Sent	8.4 Groups	
3.3 Calculator	5.6 Listen to voicemail		

Phone Components

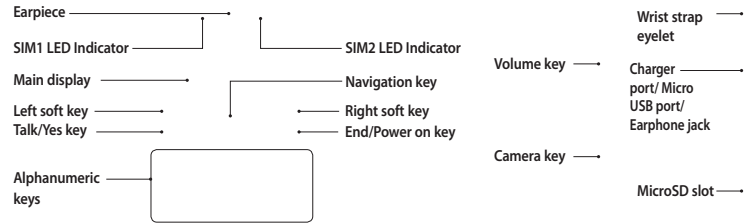

Left soft key and Right soft key: Each of these keys performs the functions indicated by the text on the display immediately above them.

Talk/ Yes key: You can dial a phone number and answer incoming calls.

End/ Power on key: Allow you to power the phone on or off, end calls, or return to Standby Mode.

Navigation key: Use for quick access to phone functions.

Alphanumeric keys: Dial a number in standby mode and input numbers or characters in edit mode.

Activating and switching SIM cards

Your phone supports the Dual SIM cards mode, enabling you to use two SIM cards at the same time without changing them. When there are two SIM cards installed, you can activate one of two or both SIM cards. The SIM Switching function allows you to select the default SIM card for call or message in Contact, Call logs and Message box.

- Select [Settings] from the main menu, and then select [Dual SIM].
- Select [SIM Switching] to set the switching mode.
 - Auto: SIM card is switched automatically.
 - User setting: Use the up and down navigation key to set Default calling by and Default messaging by. Use the left and right navigation key to switch the SIM card you want to assign and press [Options] to save your desired setting.

Note:
If there is only one SIM card installed, this SIM card would be activated as default.

Entering Text

You can enter alphanumeric characters by using the keypad. To change modes, press the key.

Lost Mobile Track (LMT) (Continued)

- Select [Lost Mobile Track]
 - Set LMT and select ON
 - Enter default LMT code
- Note:**
- In case you want to use your phone with some other SIM card, make sure to set the LMT OFF.
 - It is recommended to enter the Number for LMT with the country code (e.g. for INDIA +91 followed by phone number)
 - Default LMT code is "0000".

How to set the tone

- Your phone provides 4 different profiles to adapt to different environmental conditions. In each profile, you can set the desired ring tones and alert types.
- Select [Profiles] from the main menu.
 - Select a profile and press [Options - Personalise] to set the ring tone.
 - Press [OK] and then you can set the desired ring tone respectively for two SIM cards. Your phone provides the following options to customize ring tones and alert types:

Quick feature reference

- Browser Menu 1**
- Home:** Select this to load browser start page (the content depends on the service provider).
 - Yahoo!:** Through Yahoo! you can access your Yahoo! Messenger and email accounts from any major provider. You can visit Yahoo!® Mobile for more information.
 - Bookmarks:** Use this menu to save URL addresses.
 - Enter address:** Key in the URL address directly.
 - History:** View the recent pages you have visited.
 - Settings:** Set the phone to automatically register a GPRS network when you switch the phone on.
- Call history Menu 2**
- You can check the record of missed, received, and dialed calls only if the network supports the Calling Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call durations.
- All calls:** Display all the lists of three types (Received/Dialed/Missed calls) by time.
 - Missed calls:** Allow you to view the last 50 unanswered calls.
 - Dialed calls:** Allow you to view the last 50 outgoing calls (called or attempted).
 - Received calls:** Allow you to view the last 50 incoming calls.
 - Call duration:** Allow you to view the duration of your incoming and outgoing calls.
 - Call costs:** Check the cost of your last call, all calls, and reset the cost.
 - Data information:** Check the total of data transferred over the web through GPRS information option.

Tools Menu 3

- Alarm clock:** Allow you to set one of five alarms. The current time is displayed at the upper right corner of the screen when you select an alarm to set. At the alarm time, the Alarm icon will be displayed on the screen and the alarm will sound.
- Calendar:** You can check track of daily or monthly schedules.
- Calculator:** This contains the standard functions such as Addition, Subtraction, Multiplication and Division.
- Memo:** You can create a list of tasks.
- To do:** You can check all of the tasks you’ve added from the calendar option.
- Unit converter:** This converts any measurement into a unit you want.
- World clock:** Allow you to determine the current time in another time zone or country.
- SIM services:** Display additional functions or applications provided by your network service provider.
- Torch:** You can let the screen be your torch in the dark.

Multimedia Menu 4

- MP3 player:** Listen to MP3 music files on your phone.
- Camera:** Take pictures through built-in camera and adjust its setting.
- Video Camera:** Allows you to record video clip through built-in camera and adjust its setting.
- FM radio:** Listen to FM radio channel.
- Schedule FM record:** Allow you to pre-schedule FM radio recording.
- Voice recorder:** Allow you to record voice memo.
- Melody composer:** Allow you to compose a ring signal or melody.

Contacts Menu 8 (Continued)

- Delete all:** You can delete all entries from SIM card memory or Phone memory.
- Settings:** You can set the view options in Name & Number or With Picture.
- Information:**
 - › **Service dial number:** Access the list of service numbers assigned by your service provider safely.
 - › **Own number:** You can save and check your own numbers in SIM card.
 - › **My business card:** Allow you to create your own business card featuring your name, mobile phone number, e-mail address and so on.

Settings Menu 9

- Dual SIM:** You can set the properties respectively for two SIM cards.
- Date & Time:** You can set the functions relating to the date and time.
- Languages:** You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
- Display:** Allow you to personalize display setting, including Wallpaper, Clocks, Backlight Timer and so on.
- Shortcut:** Allow you to customize your shortcuts on the navigation keys.
- Fake call:** You can set the functions to receive a fake call at a specified time.
- Call:** You can set the menu relating to a call.
- Security:** You can have the phone more safely by setting PIN code, Auto key lock, Phone lock, Lost mobile track and so on. .
- Connectivity:** You can use Bluetooth connectivity to connect your phone with other electronics devices.




 
Applications Menu 5

- Applications:** You can view the applications installed on your phone.
- App Store:** You can view the applications available for purchase.
- App Manager:** You can view the applications installed on your phone.
- App Lock:** You can lock applications on your phone.
- App Backup:** You can backup applications on your phone.
- App Restore:** You can restore applications on your phone.
- App Uninstall:** You can uninstall applications on your phone.
- App Update:** You can update applications on your phone.
- App Search:** You can search applications on your phone.
- App Share:** You can share applications on your phone.
- App Transfer:** You can transfer applications on your phone.
- App Backup & Restore:** You can backup and restore applications on your phone.
- App Lock & Share:** You can lock and share applications on your phone.
- App Transfer & Share:** You can transfer and share applications on your phone.
- App Update & Share:** You can update and share applications on your phone.

Messages Menu 2

- Messages:** You can view the messages on your phone.
- Compose:** You can compose a new message on your phone.
- Compose Drafts:** You can view the messages that have not been sent.
- Compose Outbox:** You can view the messages which are about to be sent or have failed to be sent.
- Compose Sent:** You can view the messages which have already been sent, including time and content.
- Compose Listen voice mail:** Provide you with a quick way of accessing your voice mailbox (if provided by your service provider).
- Compose Info message:** Info service messages are text messages delivered by the network to your phone.
- Compose Templates:** There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
- Compose Settings:** Allow you to set features of your service provider.

Profiles Menu 7

- Normal:** Standard profile as default setting. After activating this profile, the  indicator will be displayed on the standby screen.
- Silent:** Ring tone and vibrator is set to be off. After activating this profile, the  indicator will be displayed on the standby screen.
- Outdoor:** Ring tone and key tone volume is set to maximum. After activating this profile, the  indicator will be displayed on the standby screen.
- Flight mode:** Wireless radio of your phone is disabled, so you can safely use the non-wireless functions of your phone (such as multimedia, tools, or games...ext.). After activating this profile, the  indicator will be displayed on the standby screen.

Contacts Menu 8

- Search:** You can search for contacts in your phonebook.
- Note:** Instant searching is available by inputting the initial letter of the name you want to search.
- New contact:** You can add entries into your phonebook.
- Speed dials:** Assign the contact number to one of the keys between 2 and 9. You can call the phone number by long pressing the assigned key in standby mode.
- Groups:** There are seven default groups on the phone. With Groups function, you can send a message to all members of a group at the same time.
- Copy all:** You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory.

Applications Menu 5

- Applications:** You can view the applications installed on your phone.
- App Store:** You can view the applications available for purchase.
- App Manager:** You can view the applications installed on your phone.
- App Lock:** You can lock applications on your phone.
- App Backup:** You can backup applications on your phone.
- App Restore:** You can restore applications on your phone.
- App Uninstall:** You can uninstall applications on your phone.
- App Update:** You can update applications on your phone.
- App Search:** You can search applications on your phone.
- App Share:** You can share applications on your phone.
- App Transfer:** You can transfer applications on your phone.
- App Backup & Restore:** You can backup and restore applications on your phone.
- App Lock & Share:** You can lock and share applications on your phone.
- App Transfer & Share:** You can transfer and share applications on your phone.
- App Update & Share:** You can update and share applications on your phone.





Messaging Menu 5

- New message:** Allow you to write a new SMS or MMS message.
- Inbox:** Allow you to view the messages that have been saved.
- Drafts:** Allow you to view the messages that have not been sent.
- Outbox:** Allow you to view the messages which are about to be sent or have failed to be sent.
- Sent:** Allow you to view the messages which have already been sent, including time and content.
- Listen voice mail:** Provide you with a quick way of accessing your voice mailbox (if provided by your service provider).
- Info message:** Info service messages are text messages delivered by the network to your phone.
- Templates:** There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
- Settings:** Allow you to set features of your service provider.

My Stuff Menu 6

- Images:** This folder saves all of your image files.
- Sounds:** This folder saves all of your audio files.
- Videos:** This folder saves all of your video clip files.
- Others:** This folder is mainly used for transporting files from PC to your phone.
- External memory:** Allows you to view Images, Sounds, Videos, Documents and Others in memory card
- Games & Apps:** Display the list of default games and applications available in the phone.

Profiles Menu 7

- Normal:** Standard profile as default setting. After activating this profile, the  indicator will be displayed on the standby screen.
- Silent:** Ring tone and vibrator is set to be off. After activating this profile, the  indicator will be displayed on the standby screen.
- Outdoor:** Ring tone and key tone volume is set to maximum. After activating this profile, the  indicator will be displayed on the standby screen.
- Flight mode:** Wireless radio of your phone is disabled, so you can safely use the non-wireless functions of your phone (such as multimedia, tools, or games...ext.). After activating this profile, the  indicator will be displayed on the standby screen.

Settings Menu 9 (Continued)

- Power save:** If you set this to On, you can save the power when you are not using the phone.
- Reset:** Allow you to reset the entire phone to its factory defaults or delete all the files saved on your phone.
- Memory status:** You can check free space and memory usage of each repository.

Profiles Menu 7

- Normal:** Standard profile as default setting. After activating this profile, the  indicator will be displayed on the standby screen.
- Silent:** Ring tone and vibrator is set to be off. After activating this profile, the  indicator will be displayed on the standby screen.
- Outdoor:** Ring tone and key tone volume is set to maximum. After activating this profile, the  indicator will be displayed on the standby screen.
- Flight mode:** Wireless radio of your phone is disabled, so you can safely use the non-wireless functions of your phone (such as multimedia, tools, or games...ext.). After activating this profile, the  indicator will be displayed on the standby screen.




 
Contacts Menu 8

- Search:** You can search for contacts in your phonebook.
- Note:** Instant searching is available by inputting the initial letter of the name you want to search.
- New contact:** You can add entries into your phonebook.
- Speed dials:** Assign the contact number to one of the keys between 2 and 9. You can call the phone number by long pressing the assigned key in standby mode.
- Groups:** There are seven default groups on the phone. With Groups function, you can send a message to all members of a group at the same time.
- Copy all:** You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory.

Applications Menu 5

- Applications:** You can view the applications installed on your phone.
- App Store:** You can view the applications available for purchase.
- App Manager:** You can view the applications installed on your phone.
- App Lock:** You can lock applications on your phone.
- App Backup:** You can backup applications on your phone.
- App Restore:** You can restore applications on your phone.
- App Uninstall:** You can uninstall applications on your phone.
- App Update:** You can update applications on your phone.
- App Search:** You can search applications on your phone.
- App Share:** You can share applications on your phone.
- App Transfer:** You can transfer applications on your phone.
- App Backup & Restore:** You can backup and restore applications on your phone.
- App Lock & Share:** You can lock and share applications on your phone.
- App Transfer & Share:** You can transfer and share applications on your phone.
- App Update & Share:** You can update and share applications on your phone.

Profiles Menu 7

- Normal:** Standard profile as default setting. After activating this profile, the  indicator will be displayed on the standby screen.
- Silent:** Ring tone and vibrator is set to be off. After activating this profile, the  indicator will be displayed on the standby screen.
- Outdoor:** Ring tone and key tone volume is set to maximum. After activating this profile, the  indicator will be displayed on the standby screen.
- Flight mode:** Wireless radio of your phone is disabled, so you can safely use the non-wireless functions of your phone (such as multimedia, tools, or games...ext.). After activating this profile, the  indicator will be displayed on the standby screen.

Contacts Menu 8

- Search:** You can search for contacts in your phonebook.
- Note:** Instant searching is available by inputting the initial letter of the name you want to search.
- New contact:** You can add entries into your phonebook.
- Speed dials:** Assign the contact number to one of the keys between 2 and 9. You can call the phone number by long pressing the assigned key in standby mode.
- Groups:** There are seven default groups on the phone. With Groups function, you can send a message to all members of a group at the same time.
- Copy all:** You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory.

Applications Menu 5

- Applications:** You can view the applications installed on your phone.
- App Store:** You can view the applications available for purchase.
- App Manager:** You can view the applications installed on your phone.
- App Lock:** You can lock applications on your phone.
- App Backup:** You can backup applications on your phone.
- App Restore:** You can restore applications on your phone.
- App Uninstall:** You can uninstall applications on your phone.
- App Update:** You can update applications on your phone.
- App Search:** You can search applications on your phone.
- App Share:** You can share applications on your phone.
- App Transfer:** You can transfer applications on your phone.
- App Backup & Restore:** You can backup and restore applications on your phone.
- App Lock & Share:** You can lock and share applications on your phone.
- App Transfer & Share:** You can transfer and share applications on your phone.
- App Update & Share:** You can update and share applications on your phone.

Troubleshooting

Problem	Possible Solution
Telephone cannot be switched on	Please take out battery and insert again. Then press End/ Power on key to power on the phone.
Battery empty	Charge battery. Check charging indicator on display.
The battery doesn't charge properly or the phone sometimes turns itself off	Wipe the charging contacts, both on the phone and on the battery, with a clear soft cloth.
Usage time of battery becomes shorter	If the battery time is short, it may be due to the user environment, a large volume of calls, or weak signals.
Charging error—Temperature out of range	Make sure the ambient temperature is right, wait for a while, and the then charge again.
Charging error—Wrong charger	Only use original LG accessories.
Charging error—Battery defective	Replace battery.
Charging error—No battery icon appears when charging	The battery is empty or has been not used for a long time. It may take a while before the battery icon appears on the screen.
Forgot the phone code or password	The default phone code is "0000".
Enter PUK	The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.
Loss of Network	You may be in a weak signal area. Move and try again. You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

Troubleshooting (Continued)

Problem	Possible Solution
You have entered a number but it was not dialed	Be sure that you have pressed Talk/ Yes key. Be sure that you have accessed the right network service. Be sure that you have not set an outgoing call barring option. Be sure that you have entered the area code.
Your correspondent cannot reach you	Be sure that your phone is switched on. Press Talk/ Yes key for more than one second. Be sure that you are accessing the network service. Be sure that you have not set an incoming call barring option.
Your correspondent cannot hear you speaking	Be sure that you have switched off the loudspeaker. Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.
The voice quality of the call is poor	Check the signal strength indicator on the display. The number of bars indicates the signal strength. Try moving the phone slightly or moving closer to a window if you are in a building.
No number is dialed when you recall a contact	Use the Phonebook Search feature to ensure the number has been stored correctly. Resave the number, if necessary.
Cannot use the Browser	Your subscription does not include data capability. You will need to contact your service provider to enable the service.
If the above guidelines do not help you to solve the problem	Take note of the model number of your mobile phone and a clear description of the problem. Contact your phone dealer or LG Service Center for help.