



USER MANUAL

LG TONE Flex L7

Bluetooth® Wireless Stereo Headset

Please read the Important Safety Information for the proper use of this product. After reading, store this User Manual in an easily accessible place for all users.

Rev 1.0 US

NOTE: Please read all information carefully prior to using the headset in order to enjoy the best performance and prevent damage to the product.

HBS-XL7



www.lg.com

Copyright © 2019 LG Electronics Inc. All rights reserved.

Contents

Safety Cautions.....	1
Precautions When Using the Product.....	2
HD Speaker.....	2
Product Components.....	3
Product Description.....	4
Power On/Off.....	4
Pairing and Connecting.....	5
Indicator Lamp.....	6
Mobile Calling Functions.....	7
Playing Music.....	8
The Google Assistant.....	9
Battery Charging and Alerts.....	13
Vibration Alert Settings.....	13
Out of Range.....	13
LG Tone & Talk™.....	14
Troubleshooting.....	15
Specifications and Features.....	16
Declaration of Confirmation.....	17
Additional Information.....	18
Limited Warranty.....	20
Important Safety Information.....	21

The LG TONE Flex L7 (HBS-XL7) is a lightweight wireless headset that uses *Bluetooth* technology.

This product can be used as an audio accessory for devices supporting either the A2DP or Hands-Free *Bluetooth* Profile.

Safety Cautions

CAUTION





- Do not disassemble, adjust, or repair the product arbitrarily.
- Do not place the product near excessive heat or flammable material.
- Do not arbitrarily replace the battery, as it may explode.
- The product may be damaged if an incompatible charger is used.
- Make sure that an infant or child does not swallow a magnet or a small component of the product.
- Make sure that foreign objects do not enter the charger's connectors (charging port and power plug). Failure to do so may result in fire or electric shock.
- If you have a medical device implanted, contact your doctor before using this device.
- For your safety, do not remove the battery incorporated in the product.
- The lithium-ion polymer battery is a hazardous component that can cause injury.
- Battery replacement by an unqualified professional can cause damage to your device.
- In order to prevent unnecessary energy consumption, disconnect the device when fully charged. Always use an easily accessible power outlet for charging your device.

WARNING

- Do not drop the product from a high place.
- Make sure there is no water, alcohol, or benzene in contact with the product.
- Do not store the product in a wet or dusty place.
- Do not place heavy objects on the product.
- This product is not waterproof. Avoid humidity and water.

Precautions When Using the Product

Refer to the following to use the product for its normal life span.

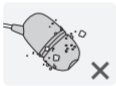	<p>Do not pull the earphone cable with excessive force.</p>
	<p>If the product is exposed to excessive sweat, clean the product.</p>
	<p>Keep the earbuds clean.</p>
	<p>For your safety, do not wear the product while it is being charged.</p>

HD Speaker

If the communication network of the device you are connecting to supports HD Voice Calling, you can enjoy making voice calls and listening to music in high definition.

Product Components



LG TONE Flex L7 HBS-XL7
(medium ear gels installed)



Extra Ear Gels
(small & large)



USB Type C™ Charging Cable
(Optional)



User Manual



Warranty Card



Pouch

NOTE: Actual product design may differ from images shown in manual.
The optional items are not available in some products.

⚠ CAUTION

Make sure authentic LG Electronics components are used. Using a non-authentic component may damage the product and thus void the warranty.


Use the USB Type C™ cable provided with the product.

ℹ NOTE

The complete manual is available for download from the LG Electronics website.

📄 www.lg.com > Support > Manuals & Documents > Browse by Product > Mobile Devices > LG Bluetooth Devices

Product Description

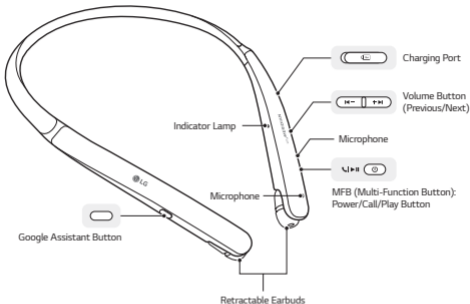

*The appearance and specifications of the actual product may differ depending on the model.

NOTE: To prevent hearing loss, a control sound is played twice or at length when controlling the volume at high volumes.

Power On/Off

Functions	Description
Power On	Press and hold the MFB for two seconds.
Power Off	Press and hold the MFB for four seconds.

*The blue LED blinks and an alert sounds when you turn the product on or off.

Pairing and Connecting

Put in your earbuds to easily pair and connect by following the voice prompts.



NOTE: If you are prompted for the authorization code (PIN code), type **0000**.

If you hear that the battery is insufficient, recharge the battery before proceeding with pairing.

If pairing is not completed within three minutes, the power automatically turns off. If this happens, press and hold the **MFB** for two seconds to turn on the power.



Connecting Quickly

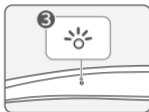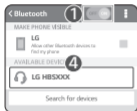

- 1 From the mobile phone's **Settings** menu, turn on *Bluetooth*.
- 2 On the headset, press and hold the **MFB** for two seconds to turn on the power.
- 3 The blue **Indicator Lamp** turns on, and the headset enters Search mode.
- 4 From the mobile phone or device, select [LG HBSXXX] to connect.

NOTE: In the above, HBSXXX is a model number unique to the product and may differ depending on the model (For example, in the case of a HBS-XL7 model, LG HBSXL7 is displayed).

- 5 A voice message will indicate that the connection is completed.


Fast Pair

- 1 From the mobile phone's **Settings** menu, turn on *Bluetooth*.
- 2 On the headset, press and hold the **MFB** for two seconds to turn on the power.
- 3 The blue **Indicator Lamp** turns on, and the headset enters Search mode.
- 4 Place the mobile phone whose screen is unlocked or a device to be connected nearby and connect it to the headset according to the instructions on the screen.
- 5 A voice message will indicate that the connection is completed.

NOTE: It only supports Android™ 6.0 or above.

Before connecting the headset, configure the mobile device or the device to be connected to use the location information.

Connecting Manually (pairing with another phone or re-pairing)

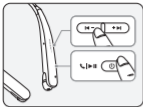

- 1 While the headset is turned off, press the **MFB** and the **Volume Button (Previous ◀ —)** simultaneously for two seconds or more.
- 2 The blue **Indicator Lamp** turns on and the headset switches to Search mode.
- 3 From the mobile phone or device, select [LG HBSXXX] to connect.

NOTE: In the above, HBSXXX is a model number unique to the product and may differ depending on the model (For example, in the case of a HBS-XL7 model, LG HBSXL7 is displayed).

Multiple Connections

The headset can be connected to two devices, such as a mobile phone and a PC, simultaneously.

NOTE: If the headset is simultaneously connected to two devices, the main functions work based on the "Main Connected Device."

- 1 To connect multiple devices, turn off the headset while the product is connected to one device.
- 2 Perform 1 to 3 under "Connecting Manually." This device becomes the "Main Connected Device."
- 3 Try to connect to headset using a previously connected device. This device becomes the "Sub Connected Device."

Automatic Reconnection


If you turn on the headset, it will automatically connect to the most recent device (Main or Sub Connected Device) it was connected to. (If a device cannot be found, Search mode will be activated.)

If the product does not automatically connect to the device you want, search for your product in the device you want to connect to and connect it manually.

Indicator Lamp

Status	Description
Power On/Power Off	The blue Indicator Lamp flashes.
Search Mode	The blue Indicator Lamp is on.
Headset/Hands-Free Profile Connected/ Call Connected	The blue Indicator Lamp flashes every five seconds.

Mobile Calling Functions

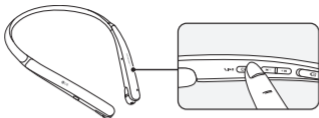


Function	Status	Description
Answering a Call	Ringing	Briefly press the MFB . NOTE: The headset will not vibrate if the Vibration function has been turned off.
Making a Call	Idle	If you make a call using a mobile phone, the call is automatically connected to the headset.
Switching Calls	Talking	Press and hold the Volume Button (Next + ►) for one second and release to switch the call between the headset and the mobile phone.
Redial	Idle/ Music on	Press and hold MFB for one second and release to place a call to the last number dialed.
Voice Dial	Idle/ Music on	Briefly press the MFB twice to activate your headset's voice. NOTE: Select a Voice Dial in LG Tone & Talk before using this feature.
Receiving a Call while on the Phone	Talking	You can receive another call while on the phone by pressing and holding MFB for one second and release. The existing call switches to a call waiting status. Press and hold the MFB again for one second to switch back to the previous call. Briefly press the MFB to end the existing call; briefly press it again to end the second call. (Performance may differ depending on the mobile phone settings.)
Rejecting a Call	Ringing	Press and hold MFB for two seconds and release.
Enabling/ Disabling Mute	Talking	Press and hold the Volume Button (Previous ◀ -) for one second.
Volume up/ Volume down	Talking	Briefly press the Volume Button (Next + ►) or Volume Button (Previous ◀ -) .

CAUTION: Do not disable/enable the mute function while driving, as you need to use both hands.

NOTE: The Voice Dial and Redial functions work on the Main Connected Device or on the device on which you made the last call. (The Voice Dial and Redial functions may work differently depending on the mobile phone being used.)

Playing Music

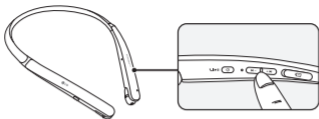

Function	Status	Description
Play	Idle	Briefly press the MFB .
Pause	Music on	Briefly press the MFB .
Play Previous/ Next Song	Music on	Press and hold the Volume Button (Next + ►) for one second to play next song. Press and hold the Volume Button (Previous ◀ -) for one second to play previous song.
Volume up/ Volume down	Music on	Briefly press the Volume Button (Next + ►) or Volume Button (Previous ◀ -) .
Equalizer Mode Change	Music on	Press and hold Volume Button (Next + ►) and Volume Button (Previous ◀ -) simultaneously for one second to move to the next step. Bass Boost (default) > Normal > Treble Boost

Switching Music Players

If you stop in the middle of playback and then play music on either of the two connected devices, the headset's music playback and control change to that device.

The Google Assistant

You can use the feature you want right away by pressing the **Google Assistant Button** dedicated for the Google Assistant even without looking at the screen of your mobile device or the connected mobile device.

The Google Assistant can perform various commands as follows:



Play some jazz

Text mom see you in 5 minutes

Tell me about my day

Set a 13 minute timer for pizza

How far away is the moon?

Do I need an umbrella today?

Installation and Usage Requirements of the Google Assistant

To use this feature, your device must be connected to the Internet and logged into your Google account.

The Google Assistant feature may not be supported for some countries and languages. Make sure you are in a country where the Google Assistant is available.

The language that is set to your mobile device is set and used as the default language of the Google Assistant.

NOTE: To learn more about the Google Assistant, visit: g.co/headphones/help

If you change the language that is used to speak to the Google Assistant, the language of your mobile phone is also changed accordingly.

Android™	iOS
<ul style="list-style-type: none"> • Android™ 6.0 or higher • On tablets, you need Android™ 6.0-7.0 • Google app 6.13 or higher • Google Play services (The latest version of the Google app) • A Google account • 1.4 GB of memory and 720p screen resolution 	<ul style="list-style-type: none"> • iPhone with iOS 10 or higher • Google Assistant app • A Google account • The latest version of the Google app

Set up the Google Assistant

- 1 Connect the headset to the mobile device or the device to connect to by referring to the Pairing and Connecting section.
- 2 Configure the Google Assistant using the mobile device or the device that is connected to.
 - In the case of an Android™ device, the Google Assistant notification pop-up appears after the connection is established for configuring the Google Assistant of the mobile device. Select the pop-up and configure the Google Assistant according to the guideline on the screen.
 - In the case of an iOS device, download and execute the latest version of the Google Assistant, and then configure the headset according to the guideline on the screen.