

| KE260 User Guide |

- ENGLISH



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Table of Contents

Introduction	5	Barring password	22	Call costs	38
Guidelines for safe and efficient use	6	General functions	23	Data information	
KE260 features	11	Address book	28	Data time	
Parts of the phone		In-call menu		Data volume	
Display information	15	Multiparty or conference calls	30	Address book	39
On-Screen Icons		Menu Tree	32	Inbox	
Homescreen	16	Selecting functions and options	35	Contact	
Getting started	17	Call history	36	Add a contact	
Installing the SIM card and the handset battery		All calls		Caller groups	40
Charging the battery	18	Missed calls		Speed dialling	
Disconnecting the adapter	19	Dialled calls		Own number	41
Turning your phone on and off	20	Inbox	37	My bussiness card	
Access codes		Call length		Settings	
				Default memory	
				View options	
				Copy all/Move all	
				Clear contacts	42
				Service dial number	

Settings	43	Calling	48	Camera	53
Date & Time		Call divert		Camera	
Set date		Answer mode		Video camera	54
Date format		Send my number	49		
Set time		Call waiting		Messaging	55
Time format		Minute minder		Create new message	
Display		Auto redial		Text	
Wallpaper		Send DTMF		Picture	56
Standby text		Security	50	Email	57
Backlight time	44	PIN code request		Inbox	58
Brightness		Handset lock		Drafts	59
Network name		Auto key lock time		Mailbox	60
Language		Call barring		Outbox	
Connectivity		Fixed dial number (FDN)	51	Sent	61
Bluetooth		Change codes	52	Voice mail	
Sync service	46	Memory status	52	Info message	
Network selection	47	Reset default		Read	62
GPRS attach				Topics	
Network profile					
USB connection mode					

Table of Contents

Templates	62
Text	
Picture	63
Settings	
Text message	
Picture message	64
Email	66
Voicemail number	
Service message	
Info message	
Orange World	67
One click to your new Orange World	
How to create your own Orange World	
How to find your way using Orange World	68

Orange music	69
Music player	
MP3 player	70
Music composer	71
Compose melody	
My melody	
Settings	72
Media album	73
Videos	
Images	
Sounds	74
Others	
External memory	
Calendar	75
Calendar	
Memo	76

Games & apps	77
Games & apps	
Profiles	79
Changing the profile	
Customising profiles - Personalise	
Customising profiles - Rename	80
More	81
Alarm clock	
Calculator	
Tip calculator	82
Stop watch	
Unit converter	83
Voice recorder	
World time	84
Q&A	85
Accessories	88
Technical Data	89

Introduction

Congratulations on your purchase of the advanced and compact KE260 mobile phone, designed to operate with the latest digital mobile communication technology.

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

FCC RF Exposure Information

Warning! Read this information before operating the phone.

In August 1996 the Federal Communications (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

SAR limit recommended by IEEE, which is 1.6W/kg Ear SAR(0.275W/kg), Body SAR (0.178W/kg)

CAUTION!

Use only the supplied or and approved antenna. Use of unauthorized antennas, modifications could impair call quality, damage the phone or result in violation of FCC regulations. Do not use the phone with the damaged antenna. If the damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement of the antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5Cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5Cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components should not be used.

Body-worn accessories that cannot maintain 0.6 inches (1.5Cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may

not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna (optional, if available.)

A minimum separation distance of 7.9 inches (20) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that cause undesired operation.

Product care and maintenance

Warning! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as a TV's, radios or personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Never place your phone in a microwave oven as it will cause battery to explode.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.

Guidelines for safe and efficient use

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- Please remove the data cable before powering on the handset.

Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality, it may also cause the phone to operate at a higher power level than needed and shorten talk and standby times.

Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

- RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

- Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

Guidelines for safe and efficient use

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

Parts of the phone

Front view

Earpiece

Navigation keys

Use to scroll through menus and move the cursor.




Alphanumeric keys

Enter numbers, letters and some special characters.

Main screen

Displays phone status icons, menu items, Web information, pictures and more in full colour.

Special function keys

- : A long press of this key activates/deactivates the manner mode.
- : A long press of this key enters the international call character "+".
- : While keying in a phone number, a long press of this key enters a pause.

Left soft key/ Right soft key

Performs the function indicated by the text on the screen immediately above it.

Confirm key

Selects menu options and confirms actions.

End/Power key

Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.

Clear key

Deletes a character by each press. Hold the key down to clear all input. Also use this key to go back to the previous screen.

Send key

Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.

KE260 features

Up/down side keys

- ▶ Controls the volume of keypad tone in standby mode with the clamshell open.
- ▶ Controls the earpiece volume during a phone call.

Headset jack

- ▶ Connect a headset here.

Camera key

- ▶ Press this key to use the camera feature. Directly goes to the camera menu.

Rear view

Holes for a carrying strap

Battery latch

Slide the button upwards to release the battery.

Flash

Camera lens

Note

- ▶ Dirt on the camera lens can affect the image quality.

SIM card socket

SIM card terminals

Battery









Battery terminals











Charger connector/ Cable connector

Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

On-Screen Icons

Icon	Description
	Indicates the strength of the network signal.
	Indicates a call is in progress.
	Indicates that you are roaming on another network.
	Indicates that GPRS service is available.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a text/picture message.
	You have received a voice message.

Icon	Description
	Indicates that the vibration ringer has been set.
	Indicates the Loud profile is activated.
	Indicates the Silent profile is activated.
	Indicates the Headset profile is activated.
	You can divert a call.
	Indicates the Normal profile is activated.
	Indicates that you can use the push message service.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Indicates that you entered the security page.

Homescreen

Orange has added the Home screen to your phone so that you can quickly link to the features you use the most as well as see at a glance any missed calls or new messages.

Quick access

The Home screen lets you launch key features of your phone and great services from Orange in as little as two key presses. Whether you want to send a text message, start exploring Orange World, you can now do it faster than ever.

All the options

Each time you select one of the icons in the left of your screen, you're presented with a list of options that give you even more choice. So, for example, when you want to browse Orange World, you can choose to go direct to Info, Fun, Tools or Your Page.

Installing the SIM card and the handset battery

Make sure the power is off before you remove the battery.

1. Remove the battery.

Slide the battery release latch upwards and lift out the top of the battery.

Note

- ▶ Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Install the SIM card

Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

CAUTION!

The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

3. Install the battery.

Insert the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it snaps into space.

Charging the battery

To connect the mains adapter to the phone, you must have installed the battery.

1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.
2. Connect the other end of the mains adapter to the mains socket. Only use the charger included in the box.

Getting started

3. The moving bars of battery icon will stop after charging is complete.

CAUTION!

- *Do not force the connector as this may damage the phone and/or the travel adapter.*
- *If you use the battery pack charger out of your own country, use an attachment plug adapter for the proper configuration.*
- *Do not remove your battery or the SIM card while charging.*

WARNING!

- *Unplug the power cord and charger during lightning storms to avoid electric shock or fire.*
- *Make sure that no sharp-edged items such as animal teeth or nails come into contact with the battery. There is a risk of this causing a fire.*
- *Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.*

Disconnecting the adapter


1. When charging is finished, the moving bars of the battery icon stop and 'Full' is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.

Note


- ▶ Ensure the battery is fully charged before using the phone for the first time.
- ▶ Do not remove the battery or SIM card while charging.
- ▶ In the case the battery is not properly charged, please turn the phone off and on using the power key. Then detach and reattach the battery, and recharge the phone.

Turning your phone on and off

Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press and hold  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

Turning your phone OFF

1. Press and hold  for a few seconds until the LCD screen is turned off.

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature (Menu 3.6.6). See page 52.

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **Enable**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Disable**, your phone connects to the network directly without the PIN code.

Getting started

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network operator for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to unlock a PIN blocked phone. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, please contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, please contact your network operator.

Security code (4 to 8 digits)




The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.

Barring password



The barring password is required when you use the **Call barring** (Menu 3.4.3) function. You can obtain the password from your network operator when you subscribe to this function. See page 50 for further details.

Making and answering calls



Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code.
 - ▶ Press and hold the clear key () to erase the entire number.
3. Press the send key () to call the number.
4. To end the call, press the end key () or the right soft key.


Making a call from the call history list

1. In standby mode, press the send key (), and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation keys.
3. Press  to call the number.


Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  to call the number.

Ending a call


When you have finished your call, press the end () key.

Making a call from the address book

You can save the names and phone numbers dialed regularly in the SIM card and/or phone memory. You can dial a number by simply looking up the desired name in the address book and pressing the () key.

General functions

Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys () . Press the up side key to increase and down side key to decrease the volume.

Note


- ▶ In standby mode with the phone open, pressing the side keys adjusts the key tone volume.


Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/photo if saved in the phonebook) is displayed.


1. To answer an incoming call, open the phone.

Note


- ▶ If Press any key has been set as the answer mode (see page 49), any key press will answer a call except for the  or the right soft key.

- ▶ To reject an incoming call, press and hold one of the side keys on the left side of the phone without opening the phone.
 - ▶ You can answer a call while using the address book or other menu features.
2. To end the call, close the phone or press the  key.

Manner mode (Quick)

You can activate the manner mode by pressing and holding down the  key after opening the phone.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

The following text input methods are available in the phone.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


ABC mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.



Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the top right corner of the LCD screen.
2. Change the text input mode by pressing  . You can check the current text input mode in the top right corner of the LCD screen.

General functions

► Using the T9 mode



The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
 - If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.


Example:

Press     to type **Good**

Press     [Down navigation key] to type **Home**




- If the desired word is missing from the word choice list, add it using the ABC mode.
 - You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.
2. Enter the whole word before editing or deleting any keystrokes.
 3. Complete each word with a space by pressing the  key. To delete letters, press .

Note

- To exit from the text input mode without saving your input, press . The phone goes back to standby mode.







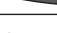



► **Using the ABC mode**

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.

Note

- Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper Case	Lower Case
	.,/?!-:'" 1	.,/?!-:'" 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Z Y 9	w x y z 9
	Space 0	Space 0

General functions

► Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Address book

You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 500 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Address book** menu.

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].


During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.


Making a second call

You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.


Switching between two calls

To switch between two calls, press the left soft key then select **Swap** or by pressing  key.




Answering an incoming call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** (Menu 3.3.4) on page 45.

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting the left soft key[Answer].

Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key. During a call, you can reject an incoming call by pressing the right soft key [End] key or by pressing the  (When use ear jack, you can reject by pressing )

Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.


Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.

Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference/Join all**.

Putting a conference call on hold

Press the left soft key, then select the **Conference/Hold all**.

Activate the conference call on hold

Press the left soft key, then select the **Conference/Join all**.

Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference/Join all**.


Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference/Private** to put all the other callers on hold.

Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference/End multiparty**. After pressing the left soft key, selecting **Conference/End all** will end all the active and on-hold calls.

Menu Tree

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

You can go to the desired menu using the left soft key [Menu], navigation keys and the [OK] key. And you can also take a shortcut by pressing the corresponding number key of desired menu after pressing the left soft key [Menu].

1. Call history
1.1 All calls
1.2 Missed calls
1.3 Dialed calls
1.4 Received calls
1.5 Call length
1.6 Call costs
1.7 Data information

2. Address book
2.1 Contact
2.2 Add a contact
2.3 Caller groups
2.4 Speed dialling
2.5 Own number
2.6 My bussiness card
2.7 Settings

3. Settings
3.1 Date & Time
3.2 Display
3.3 Language
3.4 Connectivity
3.5 Calling
3.6 Security
3.7 Memory status
3.8 Reset default

4. Camera
4.1 Camera
4.2 Video camera
5. Messaging
5.1 Create new message
5.2 Inbox
5.3 Drafts
5.4 Mailbox
5.5 Outbox
5.6 Sent
5.7 Voice mail
5.8 Info message
5.9 Templates
5.0 Settings

6. Orange World
7. Orange music
7.1 Music player
7.2 Music composer

8. Media album
8.1 Videos
8.2 Images
8.3 Sounds
8.4 Others
8.5 External memory
9. Calendar
9.1 Calendar
9.2 Memo

Menu Tree





Menu Tree

10. Games & apps
10.1 Games & apps
11. Profiles
11.1 Normal
11.2 Silent
11.3 Vibrate only
11.4 Outdoor
11.5 Headset
11.6 Offline

12. More
12.1 Alarm clock
12.2 Calculator
12.3 Tip calculator
12.4 Stop watch
12.5 Unit converter
12.6 Voice recorder
12.7 World time

Selecting functions and options


Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked () and (). Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context or the label on the bottom line of the screen just above each key indicates its current role.

Call history

You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times and costs.

Press the Menu key () and select **Call history** using navigation keys.

All calls

Menu 1.1

This option lets you view all lists of outgoing or incoming calls.

Missed calls

Menu 1.2

This option lets you view the last 10 unanswered calls. After selecting a phone number, you can make a call to the number by pressing the send key. After pressing the left soft key [Options], you can also:

- ▶ View the number if available and call it or save it in the address book.
- ▶ Enter a new name for the number and save in the address book.
- ▶ Send a message to this number.
- ▶ Delete the call from the list.

Dialled calls

Menu 1.3

This option lets you view the last 20 outgoing calls (called or attempted). After selecting a phone number, you can make a call to the number by pressing the send key. Using the [Options] key, you can also:

- ▶ View the number if available and call it or save it in the address book.
- ▶ Enter a new name for the number and save in the address book.
- ▶ Send a message to this number.
- ▶ Delete the call from the list.

Note

- ▶ You can delete all the call records from the list using the **Delete all** menu (Menu 1.1.6).

Received calls

Menu 1.4

This option lets you view the last 10 incoming calls. After selecting a phone number, you can make a call to the number by pressing the send key. After pressing the left soft key [Options], you can also:

- ▶ View the number if available and call it or save it in the address book.
- ▶ Enter a new name for the number and save in the address book.
- ▶ Send a message to this number.
- ▶ Delete the call from the list.

Call length

Menu 1.5

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. You can reset the call timer by selecting **Reset all**.

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made or received calls since the timer was last reset.
- ▶ **Received calls:** Length of the incoming calls.
- ▶ **Dialled calls:** Length of the outgoing calls.

Notice

- ▶ The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, etc.

Call history

Call costs

Menu 1.6

This network service allows you to check the last call cost and the total call cost. To reset the call, press left soft key [Reset].

Note

- ▶ The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, etc.

Data information

Menu 1.7

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online. (GPRS stands for General Packet Radio Service.)

Data time (Menu 1.7.1)

You can check the duration of **Last session** and **All session**. You can also reset the call timers by selecting **Reset**.

Data volume (Menu 1.7.2)

You can check the **Sent**, **Received** or **All** data volumes. You can also reset the counter by selecting **Reset**.

Address book

You can save phone numbers and their corresponding names in the memory of your phone or SIM card.


Contact

Menu 2.1

1. Select **Contact**. You are asked to enter a name.
2. Enter the start of the name that you wish to find press left soft key.

Note

- ▶ You can also scroll through the address book from the beginning, by pressing the left soft key directly.

3. After finding the desired name, you can make a call to the number by pressing the .
Or press the left key [Options] to use the following options.
- ▶ **Edit:** Edits the name, number, and the listing group.

- ▶ **New message:** Use this to write messages.
- ▶ **Copy SIM:** Use this to copy the address book entry from SIM to the phone memory or vice versa.
- ▶ **Delete:** Deletes the entry.

Add a contact

Menu 2.2

You can add an entry using this function.

There are 2 memories: Phone memory and SIM memory. The phone memory capacity is 500 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. Scroll to highlight **Add a contact**, and press [OK].
2. You can add new phonebook entries to SIM memory or the phone memory. To select the memory, go to **Default memory** (menu 2.7.1).

Address book

▶ Adding new entries into SIM memory

You can enter a name and number, and select the required group. (Depends on the SIM)

▶ Adding new entries into the phone memory

You can enter a name, various numbers, E-mail address, memo, and select the required group, ring tone, photo.

Caller groups

Menu 2.3

You can classify the address book entries with 7 groups. Use this feature to assign a ring tone and/or a graphic icon to each group. This enables you to identify callers from each group.

1. Select **Caller groups**. Every group list will be displayed: **Family, Friend, Colleagues, VIP, Group1, Group2, Group3**.
2. Select the group name that you want to manage by pressing the left soft key [Options]. The following submenus will be displayed.

▶ **Member list:** Displays the member list in the group.

▶ **Group ringtone:** Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.

▶ **Group icon:** Use this to select the graphic icon to be displayed when you receive a call from a person in the group.

▶ **Add member:** Add a member to the group.

▶ **Remove member:** Delete a member from the group.

▶ **Rename:** Assigns a new name to the group.

Speed dialling

Menu 2.4

Assign contacts to any of the keys 2 to 9. You can then call that contact by pressing the corresponding number key.

1. Scroll to **Speed dialling**, then press [OK].

2. To add a number to **Speed dialling**, press the left soft key [Add]. Search the name through the address book.
3. You can change or delete a speed dial number, make a call or send a message by pressing the left soft key [Options].

Own number (SIM dependent)

Menu 2.5

You can check and save your own number in the SIM card.

My bussiness card

Menu 2.6

This option helps you to make your own name card. Key in the name, mobile phone number, home number, office number, Fax number, and E-mail address.

Settings

Menu 2.7

Default memory (Menu 2.7.1)

You can select the memory for the Address book feature between the SIM and the Handset. If you select **Always ask**, when adding entry, the phone will ask where to save the number.

View options (Menu 2.7.2)

Scroll to highlight **View options**. Then press  [OK].

- **Name only:** Set the address book list by displaying the name only.
- **With photo:** Set the address book list with the information of character and picture.

Copy all/Move all (Menu 2.7.3/2.7.4)


You can copy/move entries from the SIM card memory to the phone memory and vice versa.

- ▶ **SIM to handset:** Use this to copy/move the entries from the SIM Card to Phone memory.

Address book


- ▶ **Handset to SIM:** Use this to copy/move the entries from the Phone memory to the SIM Card.


Clear contacts (Menu 2.7.5)

You can delete all entries in the SIM or phone memory. This function requires the security code. Press  to return to standby mode.

Service dial number (Menu 2.7.6) (SIM dependent)

Use this to view the list of Service Dialling Numbers (SDN) assigned by your network operator. Such numbers include the customer services, directory enquiries and voice mail numbers.

1. Select the Service dial number option.
2. The names of the available services will be shown.
3. Use the up/down navigation keys to select a service. Press .

Press the Menu key  and select **Settings** by using navigation keys.

Date & Time

Menu 3.1

This option lets you change the current time and date displayed.

The following options are available.

Set date (Menu 3.1.1)

Use this to enter the day, month and year. You can change the date format via the **Date format** menu option.

Date format (Menu 3.1.2)

DD/MM/YYYY (day/month/year)

MM/DD/YYYY (month/day/year)

YYYY/MM/DD (year/month/day)

Set time (Menu 3.1.3)

Use this to enter the current time. You can choose the time format via the **Time format** menu option.

Time format (Menu 3.1.4)

24 hours

12 hours

Display

Menu 3.2

Wallpaper (Menu 3.2.1)

Select the wallpaper which will be displayed on the LCD screen in standby mode.

Standby text (Menu 3.2.2)

If you select **On**, you can edit the text which will be displayed in standby mode.

Settings

Backlight time (Menu 3.2.3)

Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.

Brightness (Menu 3.2.4)

You can set the brightness of LCD: 100%, 80%, 60%, 40%

Network name (Menu 3.2.5)

If this function is activated, the network name will be displayed on main LCD.

Language

Menu 3.3

You can select the display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used. English will be set if the language on the SIM card is not supported by the phone.

Connectivity

Menu 3.4

Bluetooth (Menu 3.4.1)

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires.

This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

Note

- ▶ If you use LG PC Sync via Bluetooth, you can exchange data only within the phonebook.
- ▶ When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.
- ▶ Depending on the file type, it will be stored in the following folders:
 - **MP3 (.mp3, mp4, aac, m4a, wma):** Music folder.
 - **Video (.3GP, MP4):** video folder.
 - **Phonebook contacts (.VCF):** Phonebook.
 - **Text (.txt):** Text folder.
 - **Other files (*.*):** File storage folder.
- ▶ The handset normally operates with WIDCOMM driver(version 1.4.3.4) or WIDCOMM driver(version 1.4.2.10). And it does not support the LG Contents Bank with Bluetooth.

Set Bluetooth

You can activate or cancel the Bluetooth function.

Paired devices

You can view all devices which your KE260 is already paired to.

If you have entered Paired devices, you will see the following options in both those menus.

- ▶ **Add new:** Allows you to search for new Bluetooth devices and add them to your phone's list of paired devices. When you select **Add new** your handset will start to search for Bluetooth devices within range. Once the device you wish to pair appears on the list press the right soft key [Stop].

Scroll to the desired device and press the left soft key [Pair]. You will then be asked to enter a passcode.

The passcode can be any code you wish to use (the same passcode must be used by both devices) or is one that is pre-determined by the manufacturer of the device you are trying to pair with.

Please check the User Manual of the device you are initiating the pair with to see if it already has a predetermined passcode in place.

Settings

- ▶ **Assign name:** Allows you to change the name of the paired Bluetooth device and how it is displayed on the handset.
- ▶ **Set as authorised/Set as unauthorised:** Allows you to set an authorised connection between each Bluetooth device. For example if you regularly use a Bluetooth headset with your phone then setting the connection as authorised will mean the headset will automatically connect to the handset each time the headset is powered on.
- ▶ **All services:** Allows you to view all services which are supported by a Bluetooth device.
- ▶ **Delete:** Allows you to delete a paired Bluetooth device.
- ▶ **Delete all:** Allows you to delete all paired Bluetooth devices.

Settings

- ▶ **My handset's visibility**

This indicates whether or not your handset will be visible to other Bluetooth devices.

▶ My handset's name

You can set the name of your Bluetooth device. The default name is KE260.

Supported services

Displays a list of Bluetooth services the handset supports.

- ▶ **Headset**
- ▶ **Handsfree**
- ▶ **File transfer**
- ▶ **Image printing**
- ▶ **Dial-up networking**
- ▶ **Business card transfer**
- ▶ **Browsing other services**
- ▶ **PC sync**

Sync service (Menu 3.4.2)

You can access the network services through the Modem. If you want to use the LG PC Sync, Contents bank or Internet Cube, you should access the menu and activate the modem and then plug in the USB cable.

Network selection (Menu 3.4.3)

You can select a network which will be registered either automatically or manually. Usually, the network selection is set to **Automatic**.

- ▶ **Automatic:** If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected “Automatic”, the phone will be set to “Automatic” even though the power is off and on.
- ▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.
- ▶ **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone’s predefined list of known networks.

GPRS attach (Menu 3.4.4)

You can set GPRS service depending on various situations.

Switch on

If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

When needed

If you select this menu, the GPRS connection is established when you connect a WAP service and closed when you end the WAP connection.

Network profile (Menu 3.4.5)

USB connection mode (Menu 3.4.6)

Calling

Menu 3.5

To change the settings for call diverting.

Call divert (Menu 3.5.1)

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your network operator. Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available.

All voice calls: Diverts all voice calls unconditionally.

If busy: Diverts voice calls when the phone is in use.

If no reply: Diverts voice calls which you do not answer.

If out of reach: Diverts voice calls when the phone is switched off or out of coverage.

All data calls: Diverts to a number with a PC connection unconditionally.

All fax calls: Diverts to a number with a fax connection unconditionally.

Each option has the following menu:

▶ **Activate:** Activates the corresponding service.

To voice mail centre: Forwards to message centre.

To other number: Input the number for call diverting.



▶ **Cancel:** Cancels the selected call divert.



▶ **View status:** You can check the status of the service.

Cancel all: Cancels all call divert settings.

Answer mode (Menu 3.5.2)

Select the desired mode to answer a call.

▶ **Any key:** When the phone rings, you can answer a call by pressing any key except the  key and the right soft key ().

▶ **Send key only:** You can answer a call only by pressing the  and .

Send my number (Menu 3.5.3)

This network service lets you decide whether your phone number is displayed (On) or hidden (Off) from the person you are calling. Select **Set by network** to reset the phone to the setting that you have agreed upon with your service provider.

Call waiting (Menu 3.5.4) (Network Service)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.

Minute minder (Menu 3.5.5)

When set to **On**, the phone will beep every minute during a call to keep you informed of the length of the call.

Auto redial (Menu 3.5.6)

Select **On**, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

Send DTMF (Menu 3.5.7)

You can send touch tones during an active call to control your voice mailbox or other automated phone services.

Information!

DTMF tone: Dual Tones Multiple Frequency

Security

Menu 3.6

Various passwords are used to protect certain features of your phone. Refer to page 23 for the various passwords.

PIN code request (Menu 3.6.1)

When the **PIN code request** feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note

- ▶ Before disabling the PIN code request feature, you must enter your PIN.

The following options are available:

- ▶ **Enable:** You must enter the PIN each time the phone is switched on.
- ▶ **Disable:** The phone connects directly to the network when you switch it on.

Handset lock (Menu 3.6.2)

When the **Handset lock** feature is enabled, the phone is locked and you must enter the phone password each time the phone is switched on. The password is factory set to **0000**. To change the phone password, refer to the **Change codes - Security code** menu option (Menu 3.6.6). Once the correct password has been entered, you can use the phone until you switch it off.

Auto key lock time (Menu 3.6.3)

If you set this menu, the keypad is locked automatically depending the time you set.

Call barring (Menu 3.6.4)

Call barring lets you restrict the making and receiving of calls with your phone. For this function, you need the barring password, which you can obtain from your service provider.

The following options are available:

- ▶ **All outgoing calls:** No call can be made.
- ▶ **Outgoing international:** International calls cannot be made.

- ▶ **Outgoing international when roaming:** When abroad, calls can be made only to numbers within the current country and to your home country, the country where your home network provider is located.
- ▶ **All incoming:** No call can be received.
- ▶ **Incoming when roaming:** Calls cannot be received when you are using your phone outside your home service area.
- ▶ **Cancel all:** All call barring settings are deactivated; calls can be made and received normally.
- ▶ **Change password:** Use this to set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.

Note

- ▶ To use **Call barring**, you must input the network password. When calls are barred, calls may be possible to certain emergency numbers on some networks.

Fixed dial number (FDN) (Menu 3.6.5) (SIM dependent)

Use this to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM card. The PIN2 code is required.

The following options are available:

- ▶ **On:** Use this to only call phone numbers saved in the phonebook. You must enter your PIN2 code.
- ▶ **Off:** Allows you to call any number.
- ▶ **Number list:** Use this to view the numbers saved as fixed dial numbers.

Settings

Note

- ▶ Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

Change codes (Menu 3.6.6)

The **Change codes** feature lets you change your current password to a new one. You must enter the current password before you can specify a new one.

Use this to change the access codes: **PIN code**, **PIN2 code**, **Security code**.

Note

- ▶ PIN: Personal Identification Number.

Memory status

Menu 3.7

You can check the size of free memory and available memory of text messages.

Reset default

Menu 3.8

You can reset your phone to its default configuration.

To do so, proceed, as follows.

1. Select the **Reset default** menu option.
2. Enter the 4-digit security code.

Note

- ▶ The security code is preset to 0000.




You can enjoy your multimedia functions such as camera, video camera for your fun and convenience.

Note






- ▶ When a battery level is low, the Camera or Multimedia function may not operate.
- ▶ The battery level indication may appear lower when using the Multimedia functions, due to high current consumption.

Camera




Menu 4.1

1. Press the Menu key  and then navigate and select Camera. Select Camera and the screen will now become the viewfinder.
2. Focus on the subject to capture the image, and then press the  key.
3. If you want to save it, press the  key.







Note

- ▶ You can control the image size, brightness, colour and zooming by going into the camera Options. Then use the , ,  to navigate and change the various settings. ( or ).
- ▶ If you set Auto save, you can save the picture automatically without displaying pop-up message.

▶ Mode

- **Video:** 128x96, 176x144
- **Single shot:** 176x220, 320x240, 640x480, 1280x1024
- **Multishot:** 320x240
- ▶ **Night mode** []: Allows you to take a picture by using this menu at night.
- ▶ **Image effect** []: 4 settings are available: Color, Sephia, Mono, Negation.
- ▶ **Shutter tone** []: You can set the sound when taking a picture.

Camera

- ▶ **Zoom** []: Allows you to set the zooming value depending on the resolution. You cannot adjust zoom to 1280x1024 size.
- ▶ **Brightness** []: 5 lighting levels are available: -2, -1, 0, 1, 2.
- ▶ **Size** []: Allows you to set the image size to one of 1280x1024, 640x480, 320x240.
- ▶ **Delay timer** []: Allows you to select the time delay (Off, 3 Seconds, 5 Seconds or 10 seconds). Then the phone takes a photo after the specified time.
- ▶ **Quality** []: Allows you to set the image quality from Normal, Fine and Superfine.
- ▶ **White Balance** []: Allows you to change the settings according to the environment.

When you are in Photo Camera capture mode, you may adjust the zoom by pressing the Up/Down navigation keys.

- ▶ To take a picture with a short key

1. Press and hold [] for a few seconds.
2. A list will be displayed on the sub LCD.

Video camera

Menu 4.2

Select Video camera menu.


- ▶ **Record time:** You may select recording time from the list: 1 min, 5 min, 30 min, 90 min and unlimited.

Note

- ▶ The recording time of "Unlimited" can be dependent upon the recording duration, the data size and the available capacity of memory.

Video camera settings menu is the same with camera settings, except following items: **Shutter tone, Size, Metering, Delay timer.**

To start recording press  . As soon as it starts to record a timer will be displayed.





Press the Menu key () and select Messaging using navigation keys.


Create new message

Menu 5.1

Text (Menu 5.1.1)

Your phone receives voice mail notification messages and Short Message Service(SMS) messages. Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received voice mail. When the  icon appears, you have received a new text message. If the message memory is full, a message is displayed, the  icon change with  and you cannot receive any new messages. Use the **Delete** option in the **Inbox** menu to delete obsolete messages. Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

1. Key in your message. For details on how to enter text, refer to page 25 through 28 (Entering Text).
2. After you complete the message, to select the required option, press the left soft key  [Options].

The following options are available.

- ▶ **Send to:** Enter the number or select the number from the phonebook or the recent number. You can send a message up to 6 phone numbers at a time. Press the left soft key [Options]. The following options will be displayed.
 - ① Contacts
 - ② Recent messages
- ▶ **Insert:** Allows you to insert symbol, image, sound, Text template, contacts, and business card.
- ▶ **Save to Drafts:** Allows you to save the message so that it can be sent later.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'.

Messaging

- ▶ **Exit:** If you select this whilst writing a message, you will be taken back to the message menu. Also the written message will not have been saved.

Picture (Menu 5.1.2)

A picture message can contain text, images, and/or sound clips. This feature can be used only if it is supported by your network operator or service provider.

Only devices that offer picture message can receive and send picture message.

1. Add an image and/or sound. You can move to the other feature using the up/down navigation.
2. You can add a slide using the left soft key [Options].
3. Press the left soft key [Options]. The following options are available.

- ▶ **Send to:** You can send picture messages to multiple recipients, prioritise your message, and you make the validity period as well.
- ▶ **Insert:** Allows you to insert symbol, image, sound, New sound, New slide, text template, contacts and business card.
- ▶ **Preview:** Displays the picture message you wish to send.
- ▶ **Save:** Saves the picture message in draft or as a template.
- ▶ **Edit subject:** You can edit the subject of message.
- ▶ **Move to:** Moves the next or previous slide.
- ▶ **Delete slide:** Deletes the selected slide.
- ▶ **Remove media:** You can remove picture or sound in the slide.


- ▶ **Slide duration:** You can set the duration of each slide.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
- ▶ **Exit:** If you select this whilst writing a message, you will be taken back to the message menu. Also the written message will not have been saved.

Email (Menu 5.1.3)

To send/receive an email, you should set up the email account.

1. You can input up to 12 email addresses in the To and Cc field.

Tip: To input “ @”, press the  and select “ @”.

2. Key in the subject of the mail and press OK.
3. After writing an email message, press the left soft key  [Options]. You can access the following option menus.

- ▶ **Send:** Sends the email message.
- ▶ **Edit recipients:** You can edit recipients.
- ▶ **Edit subject:** You can edit the subject.
- ▶ **Save to drafts:** Select this to save the message in Drafts.
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate the T9 input mode by selecting 'T9 off'.
- ▶ **Exit:** If you select Exit whilst writing a message, you will be taken back to the message menu. Also the written message will not have been saved.

Messaging





Inbox

Menu 5.2

Received text messages and page messages can be searched and the contents can be viewed. Received messages are displayed in date order.

You will be alerted when you have received messages. They will be saved in the Inbox. You can identify each message by icons. For details, see the icon description below.

If the phone has 'No space for messages', you can make space by deleting messages, media and applications.




Icon	Icon directive
	Read SIM message
	Unread SIM message
	Read message
	Unread message

Note

- ▶ SIM message refers the message saved in the SIM memory. And the network distinguishes an incoming message into the SIM message or just message.

Each received message has the following options available. Press the left soft key [Options].

- ▶ **View:** You can view the received messages.
- ▶ **Delete:** Deletes the selected message from the Inbox.
- ▶ **Reply:** Replies to the received message.
- ▶ **Forward:** Forwards a received message to other recipients.
- ▶ **Return call:** Calls the sender's phone.
- ▶ **Information:** Displays information about the received message.
- ▶ **Multi delete:**
- ▶ **Delete all read:**
- ▶ **Delete all:** Deletes all messages in the folder.

Icon	Icon directive
	Read picture message
	Unread picture message
	Notification for MMS

- ▶ **Reply:** Replies to the sender.
- ▶ **Reply all:** Replies to the all of the sender on picture message.
- ▶ **Forward:** Forwards the selected message to other recipients.
- ▶ **Return call:** Call back to the sender.
- ▶ **Delete:** Deletes the current message.
- ▶ **Get:** Extracts a number, image, sound, email and Url from the message. These will be saved in My folder, Phonebook, or bookmarks on [Options].
- ▶ **Information:** Displays information about received messages; Sender's address, Subject (only for picture message), Message date & time, Message type, Message size.

Drafts

Menu 5.3

In this menu, you can see the message list saved as draft. Scroll through the list using the up/down navigation keys. Each draft has the following options.

- ▶ **View:** Views the message saved as a draft.
- ▶ **Edit:** Edits the message before sending.
- ▶ **Delete:** Deletes the current message.
- ▶ **Information:** Check the date, time, type, and file size of the message.
- ▶ **Multi delete:**
- ▶ **Delete all:** Deletes all message in draft.

Messaging

Mailbox

Menu 5.4

When you access this menu, you can either connect to your remote mailbox to retrieve your new email messages, or you can view the previously retrieved email messages without logging in to the email server.



You can check the saved emails, drafts, outbox, and sent emails. In the Inbox, up to 30 emails are stored.

Outbox

Menu 5.5







You can view the list and contents of sent messages in this menu and can also verify if the transmission was successful.

The following options are available.

Icon	Icon directive
	Sent SIM message
	Sent message

- ▶ **View:** Shows the selected message.
- ▶ **Delete:** Deletes the selected message from the Outbox.
- ▶ **Resend:**
- ▶ **Edit:**
- ▶ **Information:** Displays information about the sent messages.
- ▶ **Multi delete:**
- ▶ **Delete all:** Deletes all messages in the Sent folder.

Use this to see sent messages. For each sent message, you can see the delivery status.

Icon	Icon directive
	Sent
	Unsent message
	Confirmed Sent message
	MMS Sent
	Unsent MMS
	Confirmed Sent MMS

- ▶ **Delete:** Deletes the current message.
- ▶ **Forward:** Forwards the current message to other recipients.
- ▶ **Infomation:** Displays information about the outbox messages: Subject (only for picture message), Message date & time, Message type, Message size Priority, to, Delivery report.

Sent


Menu 5.6

This menu allows you to view the message which are already sent. You can check the time and the contents of message.

Voicemail

Menu 5.7

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

When a new voice message is received, the  symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.

Info message

Menu 5.8

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information is associated with a number, which can be obtained from the network operator. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. In standby mode, the following options are available when viewing info service messages.

▶ Receive

- **Yes:** If you select this menu, your phone will receive Info service messages.
- **No:** If you select this menu, your phone will not receive Info service messages any more.

Messaging

▶ Alert

- **Yes:** Your phone will beep when you have received Info service message numbers.
- **No:** Your phone will not beep even though you have received info service messages.

- ▶ **Languages:** You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.

Read (Menu 5.8.1)

When you have received broadcast messages and select **Read** to view the message, it will be displayed on the screen.

Topics (Menu 5.8.2)

To create new topics, select **new**. If you already have topics, you can deactivate, edit, or delete them by using the left soft key [Options].

Templates

Menu 5.9

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Two types of templates are available: Text and Multimedia.

Text (Menu 5.9.1)

- **Please call me back.**
- **I'm late. I will be there at...**
- **Where are you now?**
- **I'm on the way.**
- **Urgent! Please contact.**
- **I love you.**

The following options are available.

- ▶ **Edit:** Use this to write a new message or edit the selected template message from the text template list.

- ▶ **Send via**
 - **Sms:** Use this to send the selected template message by SMS.
 - **Mms:** Use this to send the selected template message by MMS.
- ▶ **Email:**
- ▶ **New template:** Use this to create new template.
- ▶ **Delete:** Deletes the template.

Picture (Menu 5.9.2)

- ▶ **Save:** Saves picture message in draft form or as templates.
- ▶ **Insert:** You can insert symbol, image, video, sound, and multimedia contents.
- ▶ **Preview:** Displays the draft picture message.
- ▶ **Edit subject:**
- ▶ **Remove media:** Deletes the highlighted slide.

- ▶ **Slide duration:** Sets the timer for slide, text, or to align the message contents right, left, top and bottom.
- ▶ **T9 languages:** Selects T9 input mode.
- ▶ **Exit:** Exits the menu.

Settings

Menu 5.0

Text message (Menu 5.0.1)

- ▶ **Message centre number:** If you want to send the text message, you can receive the address of SMS centre through this menu.
- ▶ **Delivery report:** If you set to **Yes**, you can check whether your message is sent successfully.
- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

Messaging

▶ **Message type:**

Text, Telex, Telefax, Pager, Teletex, X400, Gsm-Umts, Manual

Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

Picture message (Menu 5.0.2)

▶ **Subject:**

▶ **Slide duration:**

▶ **Priority:** You can send the message after setting the level of priority: High, Normal and Low.

▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.

▶ **Delivery report:** If it is set to Yes in this menu, you can check whether your message is sent successfully.

▶ **Rear report:** If you set On, you can check the status of that your message was read or not.

▶ **Auto download**

On: The messages are downloaded automatically on receipt.

Off: Requires to confirm the message which you want to download.

Home network only: In home network, you can activate Auto download “On” menu, Otherwise, you can activate Auto download in roaming network when you set Off.

▶ **Network profile:** In order to download MMS from the server, you need to set up a CSD or GPRS data connection. If you select picture message server, you can set URL for picture message server. You can set over 10 profiles to connect service.

- **Homepage:** This menu allows to connect MMS centre (MMSC).

- **Bearer**
 - **Data**
 - **GPRS**
- **Data settings:** Appears only if you select Data settings as a Bearer\service.
 - IP address**
 - Dial number:** Enter the telephone number to dial to access your WAP gateway.
 - User ID**
 - Password**
 - Call type:** Select the type of data call, Analogue or Digital (ISDN).
 - Call speed:** The speed of your data connection 9600.
 - Linger time:** You need to enter timeout period. After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.


- **GPRS settings:** The service settings are only available when GPRS is chosen as a bearer service.
 - IP address**
 - APN:** Insert APN (Access Point Name) of GPRS.
 - User ID**
 - Password**
- **Proxy settings**
 - Proxy:** On/Off
 - IP address:** Input the IP address of the Proxy server you access.
 - Port:** Input port number of the proxy.
- **DNS settings:** Insert the primary and secondary DNS if it is required by the network operator.
- ▶ **Permitted message type**
 - Personal:** Personal message.
 - Advertisement:** Commercial message.
 - Information:** Necessary information.

Messaging

Email (Menu 5.0.3)

Voicemail number (Menu 5.0.4)

You can receive the voicemail if this feature is supported by your network service provider. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.
 - ▶ **Home:** You can listen to voice mails by selecting **Home**.
 - ▶ **Roaming:** Even when you are in abroad, you can listen to voice mails if roaming service is supported.

Service message (Menu 5.0.5)

You can set the option whether you will receive the service message or not.

Info message (Menu 5.0.6)

▶ Receive

Yes: If you select this menu, your phone will receive Info service messages.

No: If you select this menu, your phone will not receive Info service messages any more.

▶ Alert

Yes: Your phone will beep when you have received Info service message numbers.

No: Your phone will not beep even though you have received info service messages.

▶ Languages

You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.

One click to your new Orange World

Just one click on your new KE260 transports you to the latest games, ringtones and sports news from around the world.

Find your nearest cashpoint then pick out a bar to blow your wages in, or simply curl up on the sofa and read about your favourite celebrities. Or, if you're feeling lucky, why not enter one of our great competitions. Whatever your mood, you're bound to find something of interest in your Orange World, so take the leap and get exploring now!

To enter Orange World, press Orange. Orange World will open. Scroll down the page and press Select when you come to a link you want to visit. Channels enable Orange to suggest links that you'll enjoy, the suggestions we make are based on your phone and the day of the week. For example, on a Saturday we may suggest sport to give you quick access to football results.

Use Channels to personalise your phone by downloading new ring tones, wallpapers, or the latest games, including some of the biggest games around such as Fifa Football and Tiger Woods Golf. You can even send Purple Ronnie greeting cards to send a surprise message to your friends. You can also access services from other providers such as the BBC and RAC.

How to create your own Orange World

The great thing about using Orange World is that you can constantly update it to suit your interests. When you first enter Orange World, spend a minute or two completing the Orange World wizard, which will ask you about your interests in order to provide the most relevant services to you. To set up your Orange World wizard, click the link under Your Page. Once you have finished personalising, use the Your Page link to quickly go to services which are of interest to you.

Orange World

You can add or delete links to Your Page using the simple options provided. A suggestion for a link that might be useful will also appear at the top of the Orange homepage each time that you begin browsing.

How to find your way using Orange World

There's nothing more annoying than being lost or not having the right number to hand. You can now put these frustrations behind you with a dedicated Find feature which will show you where you are or take you to a list of sites, such as Time Out, to help you find the information you need to keep working or partying.

For example, use Orange World to find the nearest cash point to the pub you arranged to meet your friends in. Once you're there, use the Find feature to find the local cinema, and grab a cab number to organise a lift there. It's simple, quick, and above all convenient. Try it now to see what you could be doing tonight.

Music player

Menu 7.1

The KE260 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on your phone memory using a compatible headset or via the internal loudspeaker.

Note

- ▶ Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- MPEG-1 Layer III, MPEG-2 Layer III, MPEG-2.5 Layer III Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.
- **AAC:** ADIF, ADTS formats (Sampling frequency from 8KHz to 48KHz)

- **AAC+ V1:** (Bit rate 16-128Kbps, Sampling frequency from 8KHz to 48KHz)
- **AAC+ V2:** (Bit rate 16-48Kbps, Sampling frequency from 8KHz to 48KHz)
- **MP4, M4A:** Sampling frequency up from 8KHz to 48KHz, Bit rate up to 320Kbps, stereo.
- **WMA:** Sampling frequency up from 8KHz to 48KHz, Bit rate up to 320Kbps, stereo.

Note

- ▶ KE260 doesn't support the variable rate of MP3 and AAC file. Therefore, you can't change the file from VBR MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mass Storage. When you connect the phone to a PC using the USB cable (supplied in the same package), this will be displayed as a removable disk through Windows Explorer. If you are using Win98 SE, you will have to install the Mass storage driver for Windows 98 on CD-ROM.

Orange music

Note

- ▶ You should copy MP3 to my media\Music folder. If you copy to another folder, you will not be able to view the MP3 files.
- ▶ The PC should run Windows 98 SE, Windows ME, Windows 2000, Windows XP operating system.

MP3 player (Menu 7.1.1)

1. **Play:** Move to MP3 player.

Press the left soft key  [Options] to access the following menus.

- ▶ **View play list:** You can view the play list while listening to the music.
- ▶ **Area repeat:** Using the right soft key, the special area part of the current music is repeated when you select ON of the menu.

- ▶ **Set as ring tone:** This menu allows to set the MP3 file as a ring tone. You can also set it as a ring tone in Profile.

- ▶ **Setting**

- **Equalizer**

- This menu helps you to adjust to a variety of environments when listening to music. This phone supports ten preset menus. When you enter this menu, you can view current value of equalizer.

- **Playmode**

- This menu allows to set the play mode.

- **Set shuffle**

- You can listen to your MP3 music randomly.

- **Visual effect**

- You can select the visual effect menus between Real spectrum and Fake spectrum:

2. **Delete:** Deletes the file selected.
3. **Delete all:** Deletes all of the files.
4. **Send via Bluetooth:**
5. **View details:** To view the information of the file you selected.

Note

- ▶ Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

Music composer

Menu 7.2

You can compose a ring tone melody which you want.

Compose melody (Menu 7.2.1)

You can set the various mode to compose the melody: Humming mode, Keyboard mode, Score mode.

- **Humming mode:** You can record humming voice with matching a rhythm of metronome.
- **Keyboard mode:** You can compose the melody with a keyboard tone by pressing numeric keys.
- **Score mode:** You can compose the melody with entering the desired notes.

My melody (Menu 7.2.2)

After saving your own melody, you can view the sub menus as follow:

- **Play:** You can play the melody.
- **Set as ringtone:** You can set the melody as a ringtone.

Orange music

- **Edit:** You can edit the melody.
- **Rename:** You can change the name of melody.
- **Delete:** You can delete the melody.
- **Delete all:** You can delete all melodies you saved.
- **Information:** You can view information of melody such as style, instrument, rhythm, tempo.

Settings (Menu 7.2.3)

- **Arrange:** You can set the mode of melody such as style, instrument, rhythm, tempo.
- **Metronome:** You can set the tempo to adjust the melody with activating this function.

Media album

You can connect to game downloads on the mobile Internet by using your WAP browser or Java, if this service is available from your service provider. Check with your service provider for availability and details for use.

Videos

Menu 8.1

You can view and send a video clip. In addition, you can set the window as a background.

- ▶ **Multi view:** You can view the maximum of 6 thumbnails in a screen.
- ▶ **Write picture message:** You can send a picture thru MMS. Maximum file size is 100 kb.
- ▶ **Set as wallpaper:** You can set a picture as a wallpaper.
- ▶ **Slide show:** This menu allows you to view as a slide show automatically.
- ▶ **Rename:** You can edit the title of picture.
- ▶ **Delete:** You can delete a picture.

- ▶ **Information:** You can view the information about Title, Size, Date and Time you've taken.
- ▶ **Protection:** You can lock the picture for deleting in mistakes in this menu.

Images

Menu 8.2

You can send the message with a image, and set it as a wallpaper.

- ▶ **Set as wallpaper:** Currently selected image can be set as a wallpaper.
- ▶ **Send via:** The images downloaded from the network can be sent by Multimedia message or bluetooth. Maximum MMS size is 100 kb.

Media album

Sounds

Menu 8.3

You can send the message with a sound, and set it as a ring tone.

- ▶ **Set as ringtone:** Currently selected sound can be set as a ringtone.
- ▶ **Send via:** The sound downloaded from the network, composed melody and recorded voice can be sent by Multimedia or Email service. Maximum message size is 100 kb for MMS message and 300 kb for E-mail message.
- ▶ **Send via Bluetooth:** The sound downloaded from network can be sent by Bluetooth.

Others

Menu 8.4

Any type of file can be stored here. This folder is mainly used for transporting files from one PC to another.

- ▶ **View:** You can view a file if it is one of the following types; JPG, GIF, WBMP, PNG and TXT. The handset can preview JPG (Max 460K), GIF (Max 100K).
- ▶ **Send via Bluetooth:** Send the selected file to another device via Bluetooth

External memory

Menu 8.5





Calendar


Menu 9.1


When you enter this menu a Calendar will be displayed. The month and year are shown at the top of the screen. Whenever you change the date under the Settings menu, the calendar will update automatically.

The current date will be highlighted in grey color and any schedule will be indicated with a red triangle at the upper left corner of the date. An audible alarm can be set for reminders.

To change the day, month, and year.

Key	Description
	Yearly
	Monthly
	Weekly
	Daily




In the scheduler mode, press left soft key  [Options] as follows;

- ▶ **New schedule:** Allows you to add a new schedule for the chosen day. Input the subject and then press the left soft key  [OK].
- ▶ **View:** You can refer to a detailed schedule, that is the whole contents of the schedule configured by you.
- ▶ **View all schedules:** You can refer all of the schedule.
- ▶ **Delete past:** You can delete the past schedule that is no longer required.
- ▶ **Delete all:** You can delete all notes.


Calendar

Memo

Menu 9.2

1. Select the Memo by pressing the left soft key  [OK].
2. If the entry is empty, add new by pressing the left soft key  [Write].
3. Input the memo and then press the left soft key  [OK].

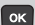
Note

- ▶ If you want to change the text input mode, press  the in order.

Games & apps

You can access a great selection of games on your phone. These games are different to the downloadable games as you require you to be connected while you are playing.

Note

- ▶ After downloading any Java game, press “Ok” Key () to save it in the root folder.

Games & apps

Menu 10.1

- **Default Games:** In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option. The downloaded applications are organised in folders.

Press the left soft key  [OK] to open the selected folder or launch the selected midlet.

After selecting a folder, press [Options] and then sub menus available to several options are displayed.

- ▶ **Open:** You can see the stored games.
- ▶ **New folder:** Create a new folder.

Java™ is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed in the **Games & apps** menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD or .JAR format.

Games & apps

Note

The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

Caution

Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

Option

Some Java applications may require a data connection to be made. Select this to set the connecting options.

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups. There are six preset profiles: **Normal**, **Silent**, **Vibrate only**, **Outdoor**, **Headset and Offline**. Each profile can be personalised. (Except Vibrate, Silent menu)

Press the Menu key () and select **Profiles** using navigation keys.

Changing the profile (Menu 11.x.1)

1. A list of profiles is displayed.
2. In the **Profiles** list, scroll to the profile you want to activate and press the left soft key [OK] or OK key.
3. Then, select **Activate**.


Customising profiles - Personalise (Menu 11.x.2)

Scroll to the desired profile in the Profile list. After pressing the OK key or the left soft key, select **Personalise**. The profile setting option opens. Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tone:** Select the desired ring tone from the list. Scroll through the list using up/down navigation keys. You can hear the desired tone prior to making a selection.
- ▶ **Ring volume:** Set the volume of the ringing tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tone:** Select the alert tone for messages.
- ▶ **Keypad tone:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.

Profiles

- ▶ **Auto answer:** This function will be activated only when your phone is connected to the handsfree kit.
 - **Off:** The phone will not answer automatically.
 - **After 5 secs:** After 5 seconds, the phone will answer automatically.
 - **After 10 secs:** After 10 seconds, the phone will answer automatically.





Press the Menu key () and select More using navigation keys.


Alarm clock

Menu 12.1

Set the alarm to ring at a specific time.

After selecting an alarm clock using the left soft key [OK].

1.  **Alarm on/off:** Select On using the left/right navigation key. To deactivate the alarm function, select Off.
2.  **Alarm time:** Enter the alarm time using the numeric keys.
3.  **Repeat:** Select the desired one from Once, Mon ~ Fri, Mon ~ Sat, and Everyday using the left/right navigation key.
4.  **Alarm melody:** Select the desired alarm melody using the left/right navigation key.
5. Press the left soft key [OK].

When an alarm function is activated, “  ” is shown in standby mode.

When the alarm time is reached, it sounds the alarm melody.



- ▶ To turn off the alarm, press the right soft key [Quit].


Calculator

Menu 12.2


This contains the standard functions such as +, -, x, ÷: **Addition, Subtraction, Multiplication, and Division.**

Furthermore, you can use the various function of calculator such as +/-, **sin, cos, tan, log, ln, exp, sqrt, deg, rad.**

1. Input the numbers by pressing numeric keys.
2. Use a navigation key to select a sign for calculation.
3. Then input the numbers.
4. Press OK key to view the result.
5. To input the decimal number, press  key. If you press  key, you can enter ().

6. To end Calculator, press the right soft key  [Back].

Note

- ▶ To erase any mistakes and clear the display, press the  key.
- ▶ To return to the initial state, press the left soft key [clear].

Tip calculator

Menu 12.3




You can calculate tip for the service when you go restaurant, hotel and so on.

1. Enter the total price in Bill.
2. Set the percentage of tip.
3. If you want to divide the price, you can use "Split".

Stop watch

Menu 12.4

A Stop watch function is provided.

1. Select Stop watch menu.
2. Press the left soft key  to start the stopwatch.
3. Press the left soft key  [Stop] to stop the stopwatch and view the measured duration of time.
4. Press the left soft key  [Continue] to resume the stopwatch.
5. Press the right soft key [Lap] during operation to record the duration of time at the moment, and continue the stopwatch.
6. You can save up to 5 time records by pressing the right soft key [Lap]. If the number of recorded time exceeds 6, the oldest one is deleted. Press the right soft key [Reset] to reset the stopwatch.

Unit converter

Menu 12.5

This converts any measurement from one unit to another.

There are 4 types that can be converted into units: Area, Length, Weight and Volume.

1. Select one of four unit types by pressing the left soft key [OK].
2. Move to the current unit section by pressing the up navigation key.
3. Select the unit you want to convert using the left/right navigation keys.
4. Move down and input numbers using the numeric keys.
5. Move to the Convert unit section by pressing the down navigation key.
6. Select the unit you want to convert to, using the left/right navigation keys.
7. Input numbers using the numeric keys. Conversion is calculated automatically.

Voice recorder

Menu 12.6

You can record voice memo.

The following [Options] menus are available.

- ▶ **Storage:** You can choose Phone or External memory.
- ▶ **Recording mode:** You can choose General mode of unlimited recording or MMS mode of recording up to 30 seconds.

Record

1. Once recording is started, the message REC and the remaining time is displayed.
2. If you want to pause or resume recording, press left soft key or OK key.
3. If you want to finish recording, press right soft key.

Note

- ▶ If all memo locations are full, you must delete an old memo before recording a new one.

More

More

Album

You can display Sounds which have been saved in the memory.





Sound files are stored Voice record folder.

Note

- ▶ The time zone setting of each city in World time menu may be affected by network condition.

World time

Menu 12.7

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world, using the  ,  ,  ,  navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:







1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key [Select].

Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.


Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press .


Q How do I clear all call history?

A Press the left soft key and then  , left soft key [Options], and    .

Q How do I view all numbers saved in the memory?

A Press the left soft key and then  .

Q  does not disappear from the screen.

A Check whether you are in a service area. If you continue to see , turn off the power and wait for approximately 2 minutes before turning it back on. If there is no change, relocate to another area and check again.

Q Connection is poor or is not audible in certain areas.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q Connection is poor even when established.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q LCD does not turn on.

A Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.

Q&A



Q&A

Q An echo can be heard during connection with a certain telephone in a certain area.

A It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

Q The phone gets warm.

A During long calls, or if games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.

Q The bell does not ring, or lamp or LCD blinks only.

A The phone is set to 'Vibrate' or 'Silent' in the Profiles menu. Please select 'Normal' or 'Loud'.

Q Standby duration of the phone gradually becomes shorter.

A Batteries have a limited life. When the battery lasts for half its original time, it requires replacement.
Only use authorised replacement parts.

Q Usage time of battery becomes shorter.


A If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.

Q No number is dialled when you recall a phonebook entry.

A Check that the numbers have been saved correctly, by using the phonebook Search feature. Resave them, if necessary.



Q You cannot be contacted.

A Is your phone switched on () pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?

Q I cannot find the lock, PIN, or PUK code, or password?

A The default lock code is **'0000'**. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

Accessories

There are a variety of accessories available for your mobile phone. You can select these according to your personal communication requirements. Consult your local dealer for availability.

Battery

Standard battery is available.

Headset

Allows hands-free operation. Includes earpiece and microphone.

Supplied adapter

This adapter lets you charge the while at home or in the office.

Note

- ▶ Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

General

Product name: KE260

System: GSM 900 / DCS 1800 /PCS 1900

Ambient temperatures

Max: +55°C

Min: -10°C