

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. if this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product.
- (2) The limited warranty extends on to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping blown fuses spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) The limited warranty is in lieu of all other warranties, express or implied either in fact or by operations law, statutory or otherwise, including, but limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
3
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT. Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following web address:

www.lgeservice.com

For Your Safety

Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment.

Before You Start

Safety Instructions

WARNING! To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Always store your phone away from heat. Never store your phone in settings that may expose it to temperatures less than 32°F or greater than 104°F, such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby in adequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone.

Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the battery to explode.

IMPORTANT! Please read the TIA SAFETY INFORMATION on page 78 before using your phone.

Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- ▶ Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not dispose of your battery by fire or with hazardous or flammable materials.
- ▶ Make sure that no sharp-edged items come into contact with the battery. There is a risk of this causing a fire.
- ▶ Store the battery in a place out of reach of children.
- ▶ Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.

- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- ▶ Do not use a hand-held phone while driving.
- ▶ Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- ▶ Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- ▶ Never store your phone in temperatures less than -4°F or greater than 122°F.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- ▶ Do not use your phone in high explosive areas as the phone may generate sparks.
- ▶ Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- ▶ Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- ▶ Do not disassemble the phone.
- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- ▶ Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- ▶ Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ▶ Do not hold or let the antenna come in contact with your body during a call.
- ▶ An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

FCC RF Exposure Information

WARNING! Read this information before operating the phone. In August 1996, the Federal Communications (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna (optional, if available)

A minimum separation distance of 8 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Cautions for Battery

- ▶ Do not disassemble.
- ▶ Do not short-circuit.
- ▶ Do not expose to high temperature: 60°C (140°F).]
- ▶ Do not incinerate.

Battery Disposal

- ▶ Please dispose of your battery properly or bring to your local wireless carrier for recycling.
- ▶ Do not dispose in fire or with hazardous or flammable materials.

Adapter (Charger) Cautions

- ▶ Using the wrong battery charger could damage your phone and void your warranty.
- ▶ The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

Getting to know your phone



End/Power key

Ends or rejects a call.

Turns the phone on/off.

Press once to return to the standby screen.

Multitasking key

Call key

Dials a phone number and answers incoming calls.

 **WARNING:** Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

Charger, Cable, Handsfree connector

TIP: To connect the USB cable, wait until the phone has powered up and has registered to the network.

Side keys

- **When the screen is idle:** volume of key tone.
- **During a call:** volume of the earpiece.
- **When playing a BGM track**
 - **Short press:** controls the volume.
 - **Long press:** move to the next or previous music file.

Micro SD memory card socket

Lock/ Unlock key

Capture button

Stylus

01

02

03

04

05

06

07

08

Installing the USIM and battery

1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.

2 Remove the battery

Hold the top edge of the battery and lift it from the battery compartment using the battery cover.

 **WARNING:** Do not use your fingernail when removing the battery.

 **WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

01

02

03

04

05

06

07

08

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.

5 Charging your phone

Slide back the cover of the charger socket on the side of your KP500. Insert the charger and plug into a mains electricity socket. Your KP500 will need to be charged until a message reading "Battery full" appears on screen.

01

02

03

04

05

06

07

08

Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.

- 1 From the standby screen select , then touch **Settings** and choose **Phone settings**.
- 2 Touch **Memory manager** then chose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will be formatted and ready to use.

TIP! To change your default storage destination, open Memory manager from the Phone settings menu and select Primary storage settings.

- 3 Replace the battery cover.

NOTE: If your memory card has existing content on, it will automatically be filed in the correct folder, for example, videos will be stored in the My Videos folder.

Transferring your contacts

To transfer your contacts from your USIM to your phone:

- 1 From the Communicate tab, select **Address book** and choose **Contact settings**.
- 2 Touch **Copy**.
- 3 Choose **Handset to USIM** and touch **Done**.
- 4 Choose **Select all** or choose names one by one and touch **OK**.

01

02

03

04

05

06

07

08

 in the standby screen to open a **Top menu**. From here you can access further menus: **Communicate**, **Entertainment**, **Utilities** and **Settings**.



Communicate

- Dialling
- Speed dials
- Contacts
- Call history
- New message
- Create new Email
- Messaging



Entertainment

- Gallery
- My stuff
- Camera
- Video camera
- Movie maker
- Music
- FM radio
- Games & apps

Touch  in the standby screen to open a **Top menu**. From here you can access further menus: **Communicate, Entertainment, Utilities** and **Settings**.



Utilities

- Browser
- Yahoo Go
- Organiser
- Alarms
- Voice recorder
- Drawing Panel
- Tools
- Sim Tool Kit



Settings

- Profiles
- Date & Time
- Screen
- Phone settings
- Call settings
- Touchpad
- Bluetooth
- Connectivity

01

02

03

04

05

06

07

08

The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Calls** or press the  hard key.

To initiate a video call with the number, press  after inputting the number and choose **Make Video call**. See page XX for details.



Touch to access the Messaging options menu. From here you can create a new SMS or email, or view your message folder. See page XX for details.



Touch to open your address book. To search for the number you want to call, touch **Search** and then **Name** and enter the name of the contact using the touchpad. You can also create new contacts and edit existing ones. See page XX for details.



Touch to open the full Top menu which is separated into four sub-menus. Touch each sub-menu's vertical tab to view further options.

01

02

03

04

05

06

07

08

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full

Icon	Description
	Message sending failed
	An alarm is set
	Vibrate profile in use
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active

Changing your Status from the status bar

Touch the current status icon that represents your current setting in the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3, Bluetooth and Wifi status. You can set Profile type, play/pause MP3 and activate/deactivate Bluetooth and Wifi.

Using the Multitasking function

Press the multitasking key  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

From any application, press the Multitasking key  and select Home screen to return to the standby screen without exiting or closing the application.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

01

02

03

04

05

06

07

08

Calls

 to open the keypad.

- 2 Key in the number using the keypad. To delete a digit touch the clear key.
- 3 Press the  hard key to initiate the call.
- 4 To end the call press the  hard key.

TIP! To enter + for making an international call, press and hold .

TIP! Press the lock/unlock button to lock the touchscreen to prevent calls being made by mistake.

TIP! To bring up the keypad during a call, press the  hard key.

TIP! You can **Make video call**, **Send message**, **Save number** or **Search contacts** by tapping .

Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 Enter.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Touch **Call**.

TIP! You can search your contacts from the call screen. Touch  and choose **Search contacts**. Scroll through your contacts or enter the first few digits of a number to filter the list.

Answering and rejecting a call

When your phone rings press the  hard key to answer the call.

Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

Press the  hard key to reject an incoming call.

01

02

03


04

05

06

07

08

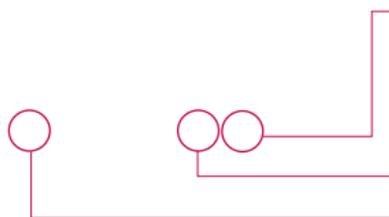

Speaker - Touch  to turn on the speaker phone.

Mute - Touch  to turn off the microphone so the person you are talking to cannot hear you.

Options - Choose from a list of further in-call options, including Create new memo and Go to messages, so you can check your messages and add contacts during a call. You can also end the call from here by touching End call.



 - Choose to search your contacts during a call.

 - Choose to add another person to the call.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

 - Touch  to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.

Adjusting the call volume

To adjust the volume during a call, use the up and down button on the right side of the phone.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the standby screen touch  to open the address book.
- 2 Touch  and select **Speed dials**.
- 3 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.
- 4 Your address book will open. Select the contact you'd like to assign to that number by touching the phone number once.

To call a speed dial number, touch  from the standby screen then press and hold the assigned number until the contact appears on screen. The call will initiate automatically, there's no need to touch **Call** .

Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Dial the number or search your contacts (see **Making a call** on page XX for details).
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**

01

02

03

04

05

06

07

08

TIP! You can combine your calls by selecting **Accept** then **Join**. Check that your network provider supports conference calling.

NOTE: You will be charged for each call you make.

Turning off DTMF

DTMF allows you to use numerical commands to navigate menus within automated calls. DTMF is switched on as default.

To turn it off during a call (to make a note of a number for example) touch  and select DTMF off.

Viewing your call logs

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  and select **Communicate** and tap **Call history**.

Choose to view:

All calls - View a complete list of all your dialled, received and missed calls.

Dialled calls - View a list of all the numbers you have called.

Received calls - View a list of all the numbers that have called you.

Missed calls - View a list of all the calls you have missed.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Using call divert

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Diverts** and choose **Video calls** and/or **Voice calls**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Deactivate all** from the **Diverts** menu.

Using call barring

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Call barring** and choose **Video calls** and/or **Voice calls**.
- 3 Choose any or all of the six options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international calls except home country**
 - All incoming**
 - Incoming when abroad**
- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Calls



, select **Settings** and choose **Call settings**.

- 2 Touch **Common setting**. From here you can amend the settings for:

Call reject - Slide the switch to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts). Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **On** or right for **Off**.

Answer mode - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to **On** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Changing your video call settings

- 1 Touch , select **Settings** and choose **Call settings**.
- 2 Touch **Video call**.
- 3 Choose the settings for your video calling. Determine whether to Use private picture and select one, and/or switch on the Mirror (so you can see yourself on screen).

01

02

03

04

05

06

07

08

Contacts



to open the address book. Or, key in the number using the keypad.

- 2 Touch **Calls** or the  hard key to initiate the call.

From the main menu

- 1 Touch , select **Communicate**.
- 2 Touch **Contacts**.
- 3 Your address book will bring up a list of the contacts corresponding to the letters you've entered.

TIP! The alphabetical keypad is displayed once you tap the blank square.

TIP! To scroll through your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Adding a new contact

- 1 From the standby screen touch  and touch **Add contact**.
- 2 Choose whether to save the contact to your **Handset** or **USIM**.
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.

TIP! Once you have typed in a name, press  to edit the rest of the information for your contact.

- 4 Enter up to five different numbers and assign a type for each. Choose from **Mobile, Home, Office, Pager, Fax, VT** and **General**. Touch **Close**.
- 5 Add an email and/or IM addresses.
- 6 Assign the contact to one or more groups. Choose from **No group, Family, Friends, Colleagues, School** or **VIP**.

- 7 You can also add a **Ringtone, Birthday, Anniversary, Homepage, Home address, Company name, Job title, Company address** and a **Memo**.
- 8 Touch **Save** to save the contact.

TIP! You can create customised groups for your contacts, see **Creating a group** on page XX.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use. See **Searching for a contact** on page XX.
- 2 You can call or send a message directly from here.
- 3 Press  to open the list of options. From here you can:
 - Make a video call** - Video call the contact.

Creating a group

- 1 Touch  and select **Communicate**.
- 2 Touch **Contacts** and **Groups**.
- 3 Touch  .
- 4 Select **Add group**.
- 5 Enter a name for your new group.
- 6 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

TIP! Send message - Send a message to the contact. If the contact has an email address, select whether you'd like to send an email or SMS/MMS. See page XX for details on how to send messages.

TIP! You can edit an existing group by highlighting it and touching  . Choose to Add members to the group from your contacts, assign a Group ringtone, Rename the group or Delete a group.

Changing your contact settings

You can adapt your contact settings so that your address book suits your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

1 From the standby screen touch  and select **Settings**.

2 From here you can adjust the following settings:

Contact list settings - Choose whether to view contacts saved to both your **Handset & USIM**, **Handset** only or **USIM** only

You can also choose to show the first name or last name of a contact first.

Synchronise contacts - Connect to your server to synchronise your contacts. See **Synchronising your contacts** on page XX.

Copy - Copy your contacts from your USIM to your handset or from your handset to your USIM. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

Move - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So, if you move a contact from the USIM to the handset it will be deleted from the USIM memory.

Send all contacts via Bluetooth - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

01

02

03

04

05

06

07

08

 and **Information**.

- 2** From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

Messaging

Messaging

Your KP500 combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways to enter the messaging centre:

- 1 Touch  from the standby screen.
- 2 Touch  from the standby screen, then select **Communicate** and choose **New message**.

Sending a message

- 1 Touch  to open a blank message.
- 2 From here you can send an SMS or MMS. To send an email, choose **New Email**. See page XX for details.
- 3 Touch **Insert**, or  then **Insert**, to add an image, video, sound or template.

- 5 Touch **To1** at the top of the screen to enter the recipient's number, or touch the search icon to open your address book. You can add multiple contacts. Touch **Send**.

 **WARNING:** You will be charged per 160 character text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

TIP! Quick reply - Send a reply promptly to the selected message using a template.

01

02

03

04

05

06

07

08

 Touch to turn on T9 predictive text.

 You can choose writing languages.

 Tap to change numbers, symbols and texts keypad.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).

To enter a space touch .

TIP! Simply touch each letter to write your message and press:

 to switch to upper case

 to add a space

T9 predictive

In T9 mode you will see .

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

If the word you want doesn't appear, touch  or **Spell**. If you touch **Spell** you can then enter the word using Abc manual mode and your word or name will be added to the dictionary.

Abc manual

In Abc mode you will see  .

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen.

Simply touch each letter to write your message and press:

 to switch to upper case

 to add a space

TIP! If you turn the phone to landscape in messaging mode, the phone will automatically bring up the keypad.

TIP! Keyboard mode predicts and shows what you will type in next. These words are predicted based on the sentences you have typed in so far. If you do not wish to use the suggested words, keep typing in new words. If you wish to use the suggested words, press the space bar to confirm them.

01

02

03

04

05

06

07

08

Messaging

 **WARNING:** You may find it easier to use a stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other character, and displays these characters as text. Handwriting recognition is only active where text can be entered.

Note: Most letters can be written using different stroke styles. See the tables below. The position on the screen decides case, not the style.

Alphabet

If you select capital letter mode (ABC), letters you type will be inserted as capital letters even if you write in small letters, and vice versa.

Letter	Strokes
A	A A' a a'
B	B B' b b'
C	C C'
D	D D' d d'
E	E E' e e'
F	F F' f f'
G	G G' g g'
H	H H' h h'
I	I I' i i'
J	J J' j j'
K	K K' k k'
L	L L' l l'
M	M M' m m'
N	N N' n n'
O	O O' o o'
P	P P' p p'

Letter	Strokes
Q	Q Q Q Q
R	R R R
S	S S
T	T T T T
U	U U U
V	V V
W	W W W
X	X X
Y	Y Y Y Y
Z	Z Z
ß	ß

Accented characters

Accent	Strokes
Space	
Backspace	
Enter	
Switching the text mode	

Punctuation marks

Mark	Strokes
Full stop .	
At @	

Note: Start each stroke at the dot.

Numbers

Numbers are written above the arrow.

Number	Strokes
0	0 0
1	1 1 1 1 1
2	2 2 2
3	3 3
4	4 4 4 4
5	5 5 5 5
6	6
7	7 7 7 7
8	8 8 8 8
9	9 9 9 9

01

02

03

04

05

06

07

08

grave		
acute		
circumflex		
tilde		
ring		
dieresis		
cedilla		

Setting up your email

You can stay in touch on the move using email on your KP500. It's quick and simple to set up a POP3 or IMAP4 email account.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  and tap **Communicate**.
- 2 Select **Messaging settings**.
- 3 Touch **Email** then **Email accounts**.
- 4 Touch  **New Account**.
- 5 You can now choose how your account works:
 - Title** - Enter a name for this account.
 - My name** - Enter your name.

Username - Enter the account's username.

Password - Enter the account's password.

Email address - Enter the account email address.

Reply email address - Enter the 'reply to' email address.

Outgoing mail server - Enter the outgoing email server address

Incoming mail server - Enter the incoming email server address

Maximum receive size - Choose the size limit of your emails, the maximum is 1MB.

Mailbox type - Enter the mailbox type, POP3 or IMAP4.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

Save sent mail into - Select whether to save sent emails (when the mailbox type is set to IMAP4). When the mailbox type is POP3, sent mails are always saved into handset.

Keep UIDL - Switch this feature Off or On.

Access point - Choose your Internet access point.

Email to retrieve - Choose the way to download emails. Choose from Header only or All including body for POP3, header only, header + body, or all for IMAP4.

Auto retrieve - Choose whether to retrieve your new emails automatically.

01

02

03

04

05

06

07

08



then select

Communicate and **Messaging**.

- 2 Touch **Mailbox**.
- 3 Touch the account you want to use then .
- 4 Choose **Retrieve** and your KP500 will connect to your email account and retrieve your new messages.

Sending an email using your new account

- 1 Touch **Create new Email** in the Communicate menu and a new email will open.
- 2 You can enter the recipient's address and write your message. You can also attach images, videos, sounds or other file types.
- 3 Touch **Send** and your email will be sent.

TIP! You can upload Word, Excel, PowerPoint and PDF documents to your KP500 so you can review them on the move.

Changing your email settings

You can change your email settings according to your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then open **Messaging settings**.
- 2 Touch **Email** and then you can adapt the following settings:
Allow reply Email - Choose to allow the sending of read confirmation' messages.
Request reply Email - Choose whether to request read confirmation messages.

01

02

03

04

05

06

07

08



Sent items - All the messages you have sent are placed in this folder.

Managing your messages

You can use your Inbox to manage your messages.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then **Inbox**.
- 2 Touch  and then choose to:
 - Delete** - Delete marked messages.
 - Create new message** - Open a new blank message or email.
 - Move to My folders** - Move the marked messages to My folders.
 - Search** - Search the messages using a date and /or a phone number.

Filter - View your message by type. This will group SMS separately from MMS.

Delete all - Delete all of the messages.

If you see the message **No space for USIM messages** you should delete some messages from your inbox. If you see the message **No space for messages** you can delete either messages or saved files to create space.

01

02

03

04

05

06

07

08

Messaging

Using templates

Create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch  then choose **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch  to **Add new, Edit, Delete** or **Delete all** templates.

Using emoticons

Liven up your messages using emoticons. You'll find some commonly used emoticons already on your phone.

- 1 Touch  then choose **Emoticons**.
- 2 Touch  to **Add new, Delete** or **Delete all** emoticons.

Changing your text message settings

Your KP500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Messaging settings** and **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Voice, Fax, X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as Multiple SMS or as MMS.

Changing your multimedia message settings

Your KP500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch  then choose **Messaging settings** and **MMS**. You can make changes to:

Retrieval mode - Choose **Home** or **Roaming network**. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to allow and/or request a delivery report.

Read reply - Choose to allow and/or send a read reply.

01

02

03

04

05

06

07

08

Messaging

 , choose **Messaging settings** then:

Videomail - Touch  to add a new Videomail service. Contact your network operator for more information on the service they provide.

Voicemail - Touch  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info service - Choose your reception status, language and other settings.

Camera

Taking a quick photo

- 1 Press the  key on the right side of the phone.
- 2 The viewfinder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Slightly press the capture button, a focus box will appear in the centre of the viewfinder screen.
- 5 Position the phone so you can see the subject of your photo in the focus box.
- 6 When the focus box turns green, the camera has focused on your subject.
- 7 Press the capture button fully.

After you've taken your photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen together with five icons down the right side.



Touch to take another photo straightaway. Your current photo will be saved.



Touch to send the photo as a message, e-mail or Bluetooth. See page XX for Sending a message, and page XX for Sending and receiving your files using Bluetooth.



Touch to set the picture you have taken as Wallpaper.



Touch to delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

01

02

03

04

05

06

07

08

Camera



Settings - Touch this icon to open the settings menu. See Using the advanced settings on page XX for details.

Camera mode - Camera mode is selected.

Size

Flash status

Scene mode

 **Back** - Touch here to return to the standby screen.

 **Gallery**

 **Flash** - See Using the flash on page XX.

 **Shot type** - See Choosing a shot type on page XX.

 **Brightness** - See Adjusting the Exposure on page XX.

Image stabilization

Zoom - Touch  to zoom in or  to zoom out. Alternatively you can use the jog wheel around the lens.

TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

Choosing a shot type

- 1 Touch  to open the available shot types.
- 2 Choose from eight options:

Normal shot -This is the default shot type, the photo will be taken in the normal way, as outlined in taking a quick photo.

Adjusting the exposure

Exposure defines the difference between light and dark in an image. A low contrast image will appear foggy, whereas a high contrast image will appear much sharper.

- 1 Touch .
- 2 Slide the contrast indicator along the bar, towards  for a lower exposure, hazier image or towards  for a higher exposure, sharper image.

Using continuous shot mode

Continuous shot mode is great for taking photos of moving objects or at sporting events.

- 1 Touch  to open the available shot types and select **Continuous shot**.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take seven pictures in quick sequence.
- 4 You can browse and select the picture you want to keep by touching the thumbnails on the left of the screen.
- 5 Once you have highlighted the image you want to keep, touch  to exit. You will be given a chance to save more than one of the images.

01

02

03

04

05

06

07

08



to open all the advanced settings options.

Preview settings

Size - Change the size of the photo to save on memory space or take a picture preset to the correct size for contact. See **Changing the image size** on page XX.

Colour Effect - Choose a colour tone to apply to the photo you're taking. See Choosing a colour tone on page XX.

White balance - Choose from Auto, Incandescent, Sunny, Fluorescent or Cloudy.

Self-timer - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

Other settings

Memory - Choose whether to save your photos to the Handset memory or to the External memory.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from Off, Simple cross or Trisection

Reset settings - Reset all the camera settings.

TIP! When you exit the camera all your settings will return to default, except image size and image quality. Any non-default settings you require will need to be reset, for example colour tone. Check them before you shoot your next photo.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu.

Changing the image size

The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Size** from the Preview menu.

01

02

03

04

05

06

07

08

the top left corner.



- 2 Select **Colour Effect** from the Preview menu.
- 3 There are five colour tone options: **Off, Black & White, Negative** or, **Sepia**.
- 4 When you've made your selection the colour tone menu will automatically close, ready for you to take your picture.

TIP! You can change a photo taken in colour to black and white or sepia after it's taken, but you cannot change a picture taken in black and white or sepia back to colour.

Viewing your saved photos

- 1 You can access your saved photo's from within the camera mode. Simply touch and your gallery will appear on screen.

Video camera

Shooting a quick video

- 1 Press the camera key on the right side of the phone.
- 2 Touch the camera icon  in the view finder to switch to video mode.

TIP! Quickly open the video camera by pressing and holding the camera key.

- 3 Press the capture button. The video camera's viewfinder will appear on screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 **Rec** will appear at the top of the viewfinder and a timer at the bottom showing the length of your video.
- 7 To pause the video touch  and resume by selecting .
- 8 Touch  on screen or press the capture button a second time to stop recording.

01

02

03

04

05

06

07

08

 Touch to send the video as an **Email** or by **Bluetooth**. See page XX for **Sending messages**, or page XX for **Sending and receiving your files using Bluetooth**.

 Touch to view a gallery of saved videos .

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video straight away. Your current video will be saved.

 Touch to play the video.

Getting to know the viewfinder

Settings - Touch this icon to open the settings menu. See **Using the advanced settings** on page XX for details.

Video mode - Video mode is selected.

Image size



Back - Touch here to return to the standby screen.



Gallery



Brightness - See Adjusting the Exposure on page XX.



Recording speed



Recording stop



Recording start



Saving to handset memory/external memory

TIP! You can close all the shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options touch the screen again.

Zoom - Touch  to zoom in or  to zoom out. Alternatively you can use the jog wheel around the lens.

01

02

03

04

05

06

07

08



- 2 Slide the exposure indicator along the bar, towards  for a lower exposure, hazier image, or towards  for a higher contrast, sharper image.

Using the advanced settings

From the viewfinder touch **Settings** to open all the advanced settings options.

Preview settings

Video size - Change the size of the video to save on memory space. See **Changing the video image size** on page XX.

Colour Effect - Choose a colour tone to apply to the video you're taking. See **Choosing a colour tone** on page XX.

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto, Incandescent, Sunny, Fluorescent** or **Cloudy**.

Quality - Choose between **Super fine, Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose from **No limit**, or **MMS** to limit the size to be able to send the video as an MMS.

TIP! If you choose MMS duration, try choosing a lower image quality to enable you to shoot a longer video.

Other settings

Memory - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

Voice - Choose Mute to record a video without sound.

Reset settings - Reset all the video camera settings.

Changing the video image size

The more pixels, the larger the file size, which in turn means they take up more memory. If you want to fit more videos on to your phone you can alter the pixel number to make the file size smaller.

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Video** from the Preview menu.
- 3 Select a pixel value from the five options:



400x240(W) - This is also widescreen, but of a lower resolution.



320x240 - Smaller image size, therefore smaller file size. Great for saving on memory space.



176x144 - Smallest image size and therefore smallest file size.

01

02

03

04

05

06

07

08

TIP! For video format conversion software, see the CD you received with your KP500.

Choosing a colour tone

- 1 From the viewfinder touch  in the top left corner.
- 2 Select **Colour Effect** from the settings menu.
- 3 There are five colour tone options, **Off** (Normal), **Black & White**, **Negative**, **Sepia**.
- 4 Touch the colour tone you'd like to use.

TIP! You can change a video shot in colour to black and white or sepia after it's taken, but you cannot change a video shot in black and white or sepia back to colour.

Watching your saved videos

- 1 In the viewfinder touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch the video a second time to open it fully.

Watching your videos on your TV

Connect your KP500 to your TV using the TV output cable. Open the video you'd like to watch on TV, press  and select .

NOTE: The TV output cable is available for purchase separately.

 **WARNING:** All formats except 320x240 and 176x144 are compatible with watching on TV.

Your photos and videos

Viewing your photos and videos

- 1 Touch  on your camera preview screen.
- 2 Your gallery will appear on screen.
- 3 Touch the video or photo twice to open it fully.
- 4 Videos will begin to play automatically. To pause playback touch the screen to bring up the options and select .

TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.

Using zoom when viewing a video or photo

To zoom in press  repeatedly. To zoom out press . Use the thumbnail in the bottom right corner to move the focus area.

01

02

03

04

05

06

07

08

|| to pause the video on the frame you'd like to convert to an image and touch the right side of the screen to open the options menu.

- 3 From the options menu select



- 4 Select **Save**.

- 5 The image will appear on screen, with its assigned image name.
- 6 Touch the image then  to return to the gallery.
- 7 The image will be saved in your Media Album folder and appear in the gallery. You need to exit the gallery and then re-open it for this to appear.

 **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show

Slideshow mode will show all the photos in your gallery one at a time as a slideshow. Videos can not be viewed as a slideshow.

- 1 Touch the photo you would like to begin the slideshow twice to open it.
- 2 Select .
- 3 The slideshow will begin.

There are options within slideshows:

Touch to skip to the next photo.



Touch to return to the last photo shown.



Touch to pause the slideshow on a particular photo.



Touch again to resume playback.



Touch to increase or decrease the speed of the slideshow.

01

02

03

04

05

06

07

08



- 4 The screen will switch to portrait mode. You can change the size of the picture.
- 5 When you are happy with the picture touch **Set**.

Editing your photos

There are loads of great things you can do to your photos to change them, add to them or liven them up a little.

- 1 Open the photo you'd like to edit and touch to bring up the options.
- 2 Touch the icons to adapt your photo:
 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.



Draw something on your photo freehand. Select the thickness of the line from the four options and the colour you would like use.



Put writing on the picture. See **Adding text to a photo** on page XX.



Decorate your photo with stamps. Choose from the different stamps available and touch your photo wherever you'd like them to be.



Change the colour of a stamp, line or some text. You must select the colour before you draw, write or stamp the photo.



Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file** enter a file name.



Undo the last **Effect** or edit you made to the photo.



See **Adding an effect to a photo** on page XX.



Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Morphing a photo**, **Adding a colour accent** and **Swapping the colours in a photo** on page XX.



Touch to return to the gallery.

01

02

03

04

05

06

07

08

Adding text to a photo

- 1 From the editing screen, touch **T**.
- 2 Select **Signature** to add unframed text or choose one of the speech bubble shapes.
- 3 Enter your text using the keypad and touch **Done**.
- 4 Move the text by touching it and sliding it to the place you'd like it to be.

Adding an effect to a photo

- 1 From the editing screen, touch .
- 2 Choose to apply any of the six options to the photo:
 - Soften** - Move the marker along the bar to soften the focus of the photo. Select **Done** to save the changes or choose **Cancel**.
 - Face Beautify** - Automatically detect a face in the image and brighten it up.
 - Lomo** - Lomo camera effect.
 - Colour negative** - Colour negative effect.
 - Black and white** - Black and white colour effect.
 - Sepia** - Sepia effect.
 - Blur** - Apply a blurred effect.
 - Sharpen** - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose  to cancel.

Mosaic blur - Touch to apply a blurred mosaic effect to the photo.

Oil painting - Oil painting effect.

Sketch - Apply an effect to make the picture look like a sketch.

Emboss - Emboss effect.

Solarize - Change the effect of exposure to the light

Vivid - An effect of clearness and brilliance.

Moonlight - Change the light to look like moonlight.

Antique - An old image effect.

Glow - A light beam effect.

Cartoon - A cartoon effect.

Resize - Touch here for size options. Touch your desired size to change the size of the photo.

3 To undo an effect simply touch **Undo**.

TIP! You can add more than one effect to a photo, except for a colour effect.

01

02

03

04

05

06

07

08



- 2 Choose **Morphing** and four crosses will appear on the photo.
- 3 Move the crosses around the photo so they are on the part you'd like to morph. For example, if you are morphing a face, place a cross on the outside corner of each eye and one each side of the lips.

- 4 Select a face to represent how you'd like to morph the photo.
- 5 Select **Save** to save the changes.

Adding a colour accent to a photo

- 1 From the editing screen, touch .
- 2 Choose **Colour accent**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or the colour of their jumper.

- 4 Touch **Done**.
- 5 All colour will be removed from the photo, apart from the section marked for colour accenting.
- 6 Alter the intensity of the accenting by sliding the marker up or down the intensity bar.
- 7 Select **Save** to save the changes.

Swapping the colours in a photo

- 1 From the editing screen, touch  .
- 2 Choose **Colour swapping**.
- 3 Select part of the photo. A traced line will appear around everything in that area which is of the same or similar colour. For example, someone's hair or the colour of their jumper.
- 4 Touch  and select a colour.

- 5 Press **Done**.
- 6 The part of the photo selected for colour accenting will change to the selected colour.
- 7 Select **Save** to save the changes.

Trimming the length of your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Trim**.
- 3 Touch  and mark the new start and end points using  .

01

02

03

04

05

06

07

08

 to return to the gallery and discard the changes.

Merging two videos together

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Video merge**.
- 3 The My videos folder will open. Choose the video you would like to merge and touch **Select**.
- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch **Effect** to choose how the videos merge together: **None**, **Fade out**, **Pan zoom**, **Oval**, **Uncover**, **Blind**, **Checker board**, **Dissolve**, **Split** or **Shape diamon**.
- 6 Press **Save** followed by **Yes** to save the new merged video. Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more videos.

Merging a photo with a video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Image merge**.
- 3 The My images folder will open. Choose the photo you would like to merge into your video and touch **Select**.
- 4 Touch and slide the photo to merge it to the end or the beginning of the video.
- 5 Touch **Effect** to choose how the photo and video merge together: **None, Fade out, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split** or **Shape diamon**.
- 6 Press **Save** followed by **Yes**. Choose to save over the original file or as a new file.
- 7 Repeat these steps to merge more photos.

Adding text to a video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Text overlay**.
- 3 Enter your text using the keypad and select **Done**.
- 4 Touch  and mark when you'd like the text to appear using .
- 5 Touch the area of the screen you'd like the text to appear in.
- 6 Touch  to mark when you'd like the text to disappear.
- 7 Touch **Preview** to ensure you are happy with the text overlay.

01

02

03

04

05

06

07

08

|| and touch the screen to bring up the options.

- 2 Select  and choose **Image overlay**.
- 3 The My images folder will open. Choose the photo you would like to overlay your video and touch **Select**.
- 4 Touch  and mark when you'd like the photo to appear using .
- 5 Touch the area of the screen you'd like the photo to appear in. If the photo is too big it will overlay the whole screen, not just the area selected.

- 6 Touch  to mark when you'd like the photo to disappear.
- 7 Touch **Preview** to ensure you are happy with the photo overlay.
- 8 Touch **Save** followed by **Yes**. Choose to save over the original file or as a new file.
- 9 Repeat these steps to add more photos.

Adding a voice recording

- 1 Open the video you'd like to edit, select || and touch the screen to bring up the options.
- 2 Select  and choose **Voice recording**.
- 3 The quality of the original audio will be affected by adding a voice recording. Touch **Yes** to continue.

- 4 Touch  to view your video. When you get to the part you'd like to record your voice over, press .
- 5 Press  or  to stop recording and playback.
- 6 Touch **Preview** to ensure you are happy with the voice recording.
- 7 Touch **Save** followed by **Yes** to save. Choose to save over the original file or as a new file.
- 8 Repeat these steps to add more voice recordings to the video.

Adding a soundtrack to your video

- 1 Open the video you'd like to edit, select  and touch the screen to bring up the options.
- 2 Select  and choose **Audio dubbing**.
- 3 The My sounds folder will open. Choose the track you would like to add to your video and touch **Select**.
- 4 The original audio of your video will be erased. Touch **Yes** to continue.
- 5 If the audio is shorter than the video choose whether to play **Once** or to **Repeat** it.
- 6 Choose to save over the original file or as a new file.

01

02

03

04

05

06

07

08

|| and touch the screen to bring up the options.

- 2 Select  and choose **Time scaling**.
- 3 Select one of the four speed options: **x4, x2, x1/4, x1/2**.
- 4 Choose to save over the original file or as a new file.

Adding a dimming effect

- 1 Open the video you'd like to edit, select || and touch the screen to bring up the options.
- 2 Select  and choose **Dimming effect**.
- 3 Choose to save over the original file or as a new file.
- 4 Your video will now fade in at the start and fade out at the end.

Divx VOD registration

Generate a DivX VOD registration code.

Please visit <http://vod.divx.com/> for registration and technical support.

Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

To access the Multimedia menu, touch  then **Entertainment**. Touch **My stuff** to open a list of folders storing all of your multimedia files.

Pictures

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Touch  to change the view from thumbnail image to list.

My images option menus

The options which are available to you in **My images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **Use as, Print, Sort by** and **Memory manager** options are available for default images.

TIP! When looking at a picture, turn the phone to landscape to bring up further options on the right side of the screen. Choose from send, slideshow, gallery, edit and delete.

Send - Send the image to a friend.

Move - Move an image from the phone memory to a memory card or vice versa.

Copy - Copy an image from the phone memory to a memory card or vice versa.

01

02

03

04

05

06

07

08

-  then **Entertainment**.
- 2 Touch **Media Album** then choose **My images** .
- 3 Touch **Send** and choose from **Message, Email** or **Bluetooth**.

- 4 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Using an image

You can choose images to use as wallpapers and screensavers or even to identify a caller.

- 1 Touch  then **Entertainment**.
- 2 Touch **Media Album** then **My images**.
- 3 Select an image and touch  .
- 4 Touch **Use as** and choose from:
 - Wallpaper** - Set a wallpaper for the standby screen.
 - Contacts image** - Allocate an image to a particular person in your contacts list so that the picture shows when they call you.

Incoming call - Set an image to appear during incoming call.

Outgoing call - Set an image to appear during outgoing calls.

Start-up - Set an image to appear when you switch the phone on.

Shut down - Set an image to appear when you switch the phone off.

Printing an image

- 1 Touch  then **Entertainment**.
- 2 Touch **Media Album** then **My images**.
- 3 Select an image and touch .
- 4 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

TIP! You can to print via bluetooth or by connecting to a PictBridge compatible printer.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch  then **Entertainment**.
- 2 Touch **Media Album** then **My images**.
- 3 Select an image and touch .
- 4 Select **Move** or **Copy**.

Creating a slide show

If you want to look at all of the images on your phone, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then **Entertainment**.
- 2 Touch **Media Album** then **My images**.
- 3 Touch  then **Slide show**.

 and  to skip through the images.

Checking your memory status

You can check to see how much of your memory space you have used and how much you have left to use.

- 1 Touch  then **Entertainment**.
- 2 Touch **Media Album** then **My images**.
- 3 Touch  then **Memory manager**.
- 4 Choose **Handset memory** or **External memory**.

NOTE: If you do not have a memory card inserted, you will not be able to select External memory.

Sounds

The **My sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**.

From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Touch  then **Entertainment**.
- 2 Touch **Media Album** then **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Select a sound and it will begin to play.
- 5 Touch  and select **Use as**.
- 6 Choose from **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up** or **Shut down**.

Videos

The **My videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch  then **Entertainment**.
- 2 Touch **Media Album** then **My videos**.
- 3 Select a video to play.

TIP! To quickly delete any file in Media Album, touch it once so it is highlighted by the cursor and touch  and **Delete**.

Using options while video is paused

Touch  while in pause mode and choose from:

Capture - Capture the frozen frame as a picture.

File info. - View the Name, Size, Date, Time, Type, Duration, Dimension, Protection and Copyright details.

Send - Send the video in a message or via Bluetooth.

Delete - Delete the video.

TV out - Enables to watch the video on the TV with cable.

NOTE: The TV output cable is available for purchase separately.

01

02

03

04

05

06

07

08

|| then .

- 3 Touch **Video editor** and choose from:
 - Trim** - Cut the video down to only the part you want.
 - Video merge** - Merge the video with another video clip.
 - Image merge** - Merge the video with an image from your Images folder.
 - Text overlay** - Add text to the video.
 - Image overlay** - Add an image to the video.

Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message, Email** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

Using the video options menu

From the **My videos** folder, you can choose from the following options:

Send - Send a video to a friend.

Move - Move a video clip from the phone memory to a memory card or vice versa.

Copy - Copy a video clip from the phone memory to a memory card or vice versa.

Delete - Delete a video.

Rename - Rename a video.

Mark/Unmark - Select multiple files.

Create new folder - Create a new folder within the My videos folder.

Sort by - Sort videos into order by Date, Type or Name.

Memory manager - View the memory status.

Delete all - Delete all videos.

Games and Applications

You can download new games and applications to your phone to keep you amused when you have time to spare.

01

02

03

04

05

06

07

08

 then **Entertainment**.

- 2 Touch **Game & apps and My games & apps**.
- 3 Select **Download games** and touch **icon**.
- 4 You will connect to the web portal from where you can find a game to download.

TIP! To delete any file in Media Album, touch  then **Delete**.

Playing a game

- 1 Touch  then **Entertainment**.
- 2 Touch **Game & apps and My games & apps**.
- 3 Choose and touch a game to launch.

Using the games options menu

From the My games & apps folder, the following options are available:

Create new folder – Create a folder within **My games & apps**.

Sort by - Sort the games and applications by **Date**, **Size** or **Name**.

Memory manager - View the memory status.

Flash contents

The Flash contents folder contains all of your default and downloaded SWF files.

Viewing an SWF file

- 1 Touch  then **Entertainment**.
- 2 Touch **Media Album** then **Flash contents**.
- 3 Select the file to view.

Using options viewing the SWF file

Touch  and choose from:

Mute - Switch the sound off.

Send - Send the file as a **Message**, **Email** or via **Bluetooth**.

Wallpaper - Set the file as your wallpaper.

File info. - View the Name, Size, Date, Time, Type and Protection of the file.

Documents

From the Documents menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and pdf files.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable, see page XX for details.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others** folder.

01

02

03

04

05

06

07

08

 then **Entertainment**.

- 2 Touch **Media Album** then **Documents**.
- 3 Select a document and touch **View**.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To Move a file from Others to Documents:

- 1 Touch  then **Entertainment**.
- 2 Touch **Media Album** then **Others**.
- 3 Select a file and touch  .

- 4 Touch **Move**, then touch **Move** again.

Creating a movie

- 1 Touch  then **Entertainment**.
- 2 Touch **Movie maker**.
- 3 Touch  to add an image. Touch the images you want to include then select **Insert** .
- 4 Touch style tab to choose a Muvee style.
- 5 Touch the icon to change the sound like voice recordings saved.
- 6 Touch **Play** button to see what you've created.
- 6 Touch  then **Play Order** to make an order.

- 7 Touch  then **Save Location** to choose where to save the movie, and touch **Duration** to choose between long and short.

Music

Your LG KP500 has a built-in music player so you can play all your favourite tracks. To access the music player, touch  then **Entertainment** then **Music**. From here you can access a number of folders:

Recently played - View all of the songs you have played recently.

Music store - Connect to the online music store.

All tracks - Contains all of the songs you have on your phone.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains any playlists you have created.

01

02

03

04

05

06

07

08

 then **Entertainment**.

- 2 Touch **Music**, then **All tracks**.
- 3 Select the song you want to play and touch **Play**.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

Using options while playing music

Touch  and choose from:

Minimise - Make the music player screen disappear so that you can continue using your phone as normal.

Visualisation - Select a visual effect.

Add to playlist - Add the track to one of your playlists.

File info. - View information including the Name, Size, Date, Time, Type, Duration, Protection and Copyright of the song.

Send - Send the song as a message or via Bluetooth.

Delete - Delete the song.

Use as - Use the song as one of Voice ringtone, Video ringtone, Message tone, Start-up or Shut down.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch  then **Entertainment**.
- 2 Touch **Music**, then **Playlists**.
- 3 Touch **New playlist**, enter the playlist name and touch **Save**.
- 4 The All tracks folder will show. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.
- 5 Touch **Done**.

To play a playlist, select it and touch Play.

NOTE: To add a second playlist, touch  then Add new playlist.

01

02

03

04

05

06

07

08

Multimedia

 then **Entertainment**.

2 Touch **Music**, then **Playlists**.

3 Select the playlist.

4 Touch  and select:

Add new songs – To add more songs to the playlist. Mark the ones you want and touch **Done**.

Move down – Move the song down the list to change the playing order.

Change list order - Change the playing order of the playlist.

Send – Send a song as a message or via Bluetooth.

Remove from list – Remove a song from the playlist. Touch **Yes** to confirm.

Memory manager - View the memory status.

Remove all - Remove all tracks from the playlist.

Deleting a playlist

1 Touch  then **Entertainment**.

2 Touch **Music**, then **Playlists**.

3 Touch  then **Delete** or **Delete all** to delete all of the playlists.

Using the radio

Your LG KP500 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

NOTE: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 50 channels in your phone.

To auto tune:

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then .
- 3 Touch **Auto scan** then **Yes**. The stations found will automatically be allocated to channel numbers in your phone.

NOTE: You can also manually tune into a station by using  and  displayed next to the radio frequency.

Resetting channels

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then .
- 3 Choose **Reset channels** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Touch  then **Entertainment**.
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

01

02

03

04

05

06

07

08

Organiser

Adding an event to your calendar

- 1 From the standby screen select , then touch **Utilities** and choose **Organiser**. Select **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch  then **Add new event**.
- 4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.
Check the date and enter the time you would like your event to begin.
- 5 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 6 If you would like to add a subject or a note to your event, touch **Note** and type in your note, followed by **Save**.

- 7 Set **Alarm** and **Repeat**.
- 8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

TIP! You can set a holiday in your calendar. Touch each day you are on holiday one at a time, then touch  and select **Set holiday**. Each day will be shaded red.

Changing your default calendar view

- 1 From the standby screen select , then touch **Utilities** and choose **Organiser**. Select **Settings**.
- 2 Touch **Calendar** and choose either **Month view** or **Week view**.
- 3 Set **week starts on**.
- 4 Press **Save** to confirm your choice.

Adding an item to your to do list

- 1 From the standby screen select , then touch **Utilities** and choose **Organiser**.
- 2 Select **To do** and touch **New to do**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.
- 4 Save your to do list item by selecting **Save**.

TIP! You can edit a item by selecting it, and touch the tab and input. Confirm your amends by selecting **Save**.

Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.07 will be 09.12.2007.

This is great for keeping tabs on deadlines.

- 1 From the standby screen select , then touch **Utilities** and choose **Organiser**.
- 2 Select **Date finder**.
- 3 In the **From** tab set your required date.
- 4 In the **After** tab set the number of days.
- 5 The **Target date** will be shown below.

01

02

03

04

05

06

07

08



, then touch **Utilities** and choose **Alarms**.

- 2 Touch **Add new**.
- 3 Set the time you would like the alarm to sound and touch **Save**.
- 4 Choose whether you would like your alarm to repeat Daily, Mon - Fri, Mon - Sat, Sat - Sun, Except holiday or Choose weekday. The icons indicate the weekday you select.
- 5 Select **Set alarm type** to select a type for your alarm.
- 6 Touch **Set alarm bell** then select bell. To listen to sounds touch the sound, followed by .
- 7 Add a memo for the alarm. Touch **Save** when you have finished typing the memo.

- 8 Finally you can set the snooze interval at 5, 10, 20, 30 minutes, 1 hour or off.
- 9 Once you have set your alarm, touch **Save**.

NOTE: You can set up to 5 alarms.

TIP! Touch on/off icon on the right hand side of the alarm.

Adding a memo

- 1 From the standby screen select , then touch **Utilities** and choose **Drawing Panel**.
- 2 Touch  and **Add new**.
- 3 Type your memo, followed by **Save**.
- 4 Your memo will appear on screen next time you open the **Drawing Panel** application.

TIP! You can edit an existing memo. Select the one you want to edit and type your changes.

Voice recorder

Use your voice recorder to record voice memos or other sounds.

- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder** then  and choose from:

Duration – Set the recording duration. Choose from **MMS message size, 30 secs 1 minute** or **No limit**.

Quality – Select the sound quality. Choose from Super Fine, Fine or Normal.

Go to my sounds – Open the Voice recordings folder in **My sounds**.

Recording a sound or voice

- 1 Touch  then **Utilities**.
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

01

02

03

04

05

06

07

08



- 2 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

NOTE: After you have finished recording, touch  and choose **Send**, **Rename**, **Delete**, **Use as** (to use the recording as your ringtone) or **Go to my sounds**.

Using your calculator

- 1 From the standby screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, -, *, /), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc..

Converting a unit

- 1 From the standby screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Converter**.
- 3 Choose whether you would like to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.
- 5 The corresponding value will appear on the screen.

Using the stopwatch

- 1 From the standby screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.

- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

Adding a city to your world time

- 1 From the standby screen select , then touch **Utilities** and choose **Tools**.
- 2 Select **World time**.
- 3 Touch the  icon, followed by **Add city**. Start typing the name of the city you require and it will show at the top of the screen.

01

02

03

04

05

06

07

08



, then **Settings**.

- 2 Select **Connectivity**, then **USB connection** mode.
- 3 Select **Data Service** and touch **OK**.
- 4 Connect the USB cable to your phone and your PC. **LG PC Suite installer** will then appear. (Windows XP, Windows Media Player and more).
- 5 Select the language you would like the installer to run in and click **OK**.

- 6 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 7 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Connecting your phone and PC

- 1 Connect the USB cable to your phone and your PC.
- 2 Double click on the **LG PC Suite** icon on your desktop.
- 3 Click on **Connection Wizard**, then **USB**.
- 4 Click on **Next**, then **Next** again, then **Finish**.
Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or restore information from. Click **OK**.
- 4 Your information will be backed up.

Viewing your phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Contents** icon.
- 3 All of the documents, flash contents, images, sounds and videos you have saved onto your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

01

02

03

04

05

06

07

08

 , then touch **Settings** .

3 Select **Connectivity**, then **USB connection** mode.

4 Touch **Mass storage**.

- 5 Connect your phone to your PC. Your phone will read: **Connecting as Mass Storage**... followed by **Connected as Mass Storage Mode**. Do not disconnect during transfer.
- 6 All of your phone files will automatically be stored onto your PC hard drive.

NOTE: Your phone must be unplugged from your PC to initiate Mass Storage.

NOTE: Mass storage backs up content saved on your memory card only, not your handset memory. To transfer the content of your handset memory (e.g. contacts) you'll need to synchronise using PC Sync.

DivX Converter

Install the DivX converter which is supplied on the same CD as the PC Sync software.

Once installed select DivX from the Program Files on your PC, then DivX converter followed by Converter.

This will open the Converter application. Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select Preferences, you can change the location of where the converted files are saved.

Once you are ready to convert your files, simply drag and drop the files into the application, for initial analysis. Following this, you will need to select Convert for the process to begin. When the process is finished a Conversion complete pop up will be displayed.

The converted file can now be transferred to your phone, using the Mass Storage functionality (see page XX for details) or Upload contents using the PC Sync software (see page XX for details).

01

02

03

04

05

06

07

08

The web

Browser

Browser gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 From the standby screen select , then touch **Utilities** and choose **Browser**.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen select , then touch **Utilities** and choose **Browser**.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **Add new**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch **Connect**. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually. The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Saving a page

- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

Accessing a saved page

- 1 From the standby screen select , then touch **Utilities** and choose **Browser**.
- 2 Select **Saved pages**.
- 3 Select the required page and it will open.

01

02

03

04

05

06

07

08



, then touch **Utilities** and choose **Browser**.

Select **History**.

- 2 A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page and touch Connect.

Changing the web browser settings

- 1 From the standby screen select , then touch **Utilities** and choose **Browser**. Select **Settings**.
- 2 You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies**, **security**, or to reset all settings, select **Reset Settings**.
- 3 You can simply set these to on or off by touching the icon.

Using your phone as a modem

Your KP500 can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your KP500 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Communication** on your PC. Then click **Settings** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Click Connect and your PC will connect through your KP500.
NOTE: For more information on synchronising using the LG PC Suite see page XX.

Using Bluetooth:

- 1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and KP500.
- 2 Pair your PC and KP500 so that a passcode is required for connection.
- 3 Use the **Connection wizard** on your LG PC Suite to create an active Bluetooth connection.
- 4 Click **Communication** on your PC. Then click **Setting**.
- 5 Click **Modem**.
- 6 Choose **Standard Modem over Bluetooth link** and click **OK**. It will now appear on screen.
- 7 Click **Connect** and your PC will connect through your KP500.

NOTE: For more information on Bluetooth see page XX.

01

02

03

04

05

06

07

08

Settings

Within this folder you can adapt your settings to make your KP500 personal to you.

NOTE: For information on call settings see page XX.

Changing your screen settings

1 Touch  then choose **Settings**.

2 Touch **Screen** and then choose from:

Wallpaper - Choose the theme for your standby screen.

Dialling - Adjust the number size and colour.

Backlight - Choose how long the backlight remains on for.

NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Font - Adjust the font style and size.

Brightness - Adjust the screen brightness.

Handset theme - Quickly change the whole look of your screen.

Greeting message - Choose on or off and fill in the greeting message.

Start-up/Shut down - Choose the theme for your start-up/shut down screen.

TopMenu style - Choose the style of the top menu.

2 Touch **Save** to save your settings.

Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the status summary bar on the top and touch the profile tab.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then choose **Settings**.
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available in the list, including your **Voice/ Video Ring tone** and **Volume, Message alerts, Screen sound** settings and more.

Changing your phone settings

Enjoy the freedom of adapting how your KP500 works to your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- 1 Touch  then choose **Settings**.
- 2 Touch **Phone settings** then choose from the list below.
 - Date and time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.
 - Power save** - Choose to switch the factory set power saving settings **On** or **Off**.

01

02

03

04

05

06

07

08

 then **Settings**.

Select **Connectivity**.

Network settings - Your KP500 connects automatically to your preferred network.

To change these settings use this menu.

Access point - Your network operator has already saved this information. You can add new access points using this menu.

GPS type - Choose either **Assited GPS** or **Stand alone**.

GPS

- GPS technology uses information from earth-orbiting satellites to find locations.
- A receiver estimates the distance to GPS satellites based on the time it takes for signals to reach it, then uses that information to identify its location.
- It may take from a couple of seconds to several minutes.
- Assisted GPS(A-GPS) on this mobile is used to retrieve location assistance data over packet data connection.
- The assistance data is retrieved from the Service server only when you needed.
- Take pictures of where you are and have the pictures tagged with information about your location.

USB connection mode - Choose Data service and synchronise your KP500 using the LG PC Suite software to copy files from your phone. See page XX for more information on synchronisation. If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is available for only music contents. If you want to synchronize with external memory, you can use 'External memory' as Primary storage. If you want to synchronise with internal memory, you can use 'Internal memory' as Primary storage.

Synch service - The Server sync function synchronises the data in a phone and the data on a server such as contact address information, schedule items, to do items and memo items via a wireless network.

01

02

03

04

05

06

07

08



followed by **Settings**.

Select **Phone settings** then
Memory Manager.

Handset common memory - View the memory available on your KP500 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

USIM memory - View the memory available on your USIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage settings - Choose the location you prefer items to be saved to.

TIP! See page XX for information on **inserting a memory card**.

Using flight mode

Turn on flight mode by selecting  then **Settings**. Touch **Profiles** and choose **Flight mode**.

Flight mode will not allow you to make calls, connect to the Internet, send messages or use Bluetooth.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send**. Choose **Bluetooth**.
- 3 Touch **Yes** to turn Bluetooth on.
- 4 If you have already paired the Bluetooth device, your KP500 will not automatically search for other Bluetooth devices. If not, your KP500 will search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and touch **Select**.
- 6 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

01

02

03

04

05

06

07

08



and choose **Settings**.

- 2 Choose **Bluetooth** then touch



and choose **Settings**.

Make your changes to:

My device visibility - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your KP500.

Supported services - Choose how to use Bluetooth in association with different services.

See **Using your phone as a modem** on page XX or **Using a Bluetooth headset** on page XX.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your KP500 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your KP500 will search for devices. When the search is completed **Refresh** will appear on screen.
- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 You passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your KP500 will automatically switch to Headset profile.

TIP! See page XX for details on **BT answer mode** so that you can control how you answer calls when your Bluetooth headset is connected.

01

02

03

04

05

06

07

08

Accessories



Data cable and CD

Connect and synchronise your KP500 and PC.



Stylus and carry strap

User Guide

Learn more about your KP500.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.