



# Camera

## Taking a quick photo

- 1 Press the  key on the right-hand side of the handset and the camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the desired subject of the photo.
- 3 Press the centre key or the  key to take a photo.

The file name of captured picture indicates the current date and time.

e.g. PDD-MM-YY\_hh.mm  
(P : Prefix / D : Day / M : Month /  
Y : Year / h : Hour / m : Minute)

## After you've taken your photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen and you'll see options displayed at the right of the screen. Select **Options** to rename or edit the image.

Go back to previous menu.

View the pictures you have taken in your Album.

Sent the photo as an MMS, Email, via Bluetooth.  
See page 24 for **Sending a message**, and page 54 about sending and receiving your files using **Bluetooth**.

Take another photo straight away. Your current photo will be saved.

Use the image as **Wallpaper**, as a Contact image, or in your Start-up or Shut down screen.

Delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

**TIP!** In camera mode select Play icon to open the photo album. See page 33, **Viewing your saved photos**, for details.

01

02

03

04

05

06

07

08

09

# Camera

## Using the toolbar

Before taking a photo, select **Settings** to configure various options.

**Colour effect** - Choose from four colour tone options: **Off**, **Black & White**, **Negative** and **Sepia**.

**White balance** - The white balance ensures that any white in your photos appears realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Sunny**, **Incandescent**, **Cloudy** or **Fluorescent**.

**Night mode** - **On** or **Off**

**Timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 secs.**, **5 secs.** or **10 secs.**. Great for that group photo you want to be a part of.

**Shot mode** - **Normal**, **Burst shot** and **Frame shot**

**Image quality** - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality, the sharper the photo will be but the file size will increase as a result, which means you'll be able to store fewer photos in your phone's memory.

**Memory in use** - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

**Hide icons** - Set whether to automatically hide the icons on the side of the viewfinder.

**Sound** - Select one of the three different shutter sounds.

## Changing the image size

The larger the image size, the larger the file. Storing larger sized images will take up more of your phone's memory. If you want to fit more pictures on to your phone you can alter the image size to make the file size smaller.

- 1 Select **Size** from the right toolbar.
- 2 Select an option from those presented ( , **2M**, **1M**, **640X480**, **320X240**, **Wallpaper**, **Contacts**).

## Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply select **Album** from the right toolbar. From the main menu, select and then **My images**.
- 2 Your gallery will appear on screen.
- 3 Use the arrows to select the photo you want to view and choose **View** to enlarge it.

## Choosing a shot mode

- 1 Select **Settings** to open the available shot modes.

- 2 Choose from the four options:

**Normal shot** - This is the default shot type, the photo will be taken in the normal way, as outlined in **Taking a quick photo** on page 31.

**Burst shot** - This enables you to take nine shots automatically in very quick succession. See **Using burst shot mode** on page 34 for details.

**Frame shot** - Choose from one of the fun frames to transform your friend into a pirate or just decorate their surroundings.

# Camera

## Using burst shot mode

Burst shot mode is great for taking photos of moving objects or at sporting events.

- 1 Select **Burst shot**.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take nine shots in quick succession and display the first with eight thumbnails on the left side of the screen.
- 4 Select the shot you want to view by selecting the thumbnail once.

## Using a frame shot mode

Frame shot can be used to transform your friend into a pirate, or just to decorate their surroundings with a frame.

- 1 Select **Frame shot** menu.
- 2 Position the subject in the fun frame and press the capture button.
- 3 Save the image by selecting **Save**.

# Video camera

## Shooting a quick video

- 1 Press the **Camera** key on the right hand side of the handset and the camera's viewfinder will appear on screen.
- 2 Select **Video** from the right toolbar and the video camera's viewfinder will appear on screen.
- 3 Point the camera lens towards the desired subject of the video.
- 4 Press the centre key or the **REC** key to start recording.
- 5 **REC** will appear in the bottom of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.

**Note:** You can also access the video camera from the main menu by selecting **Video camera**, scrolling down and selecting **Video camera** to open the viewfinder.

## After you've shot your video

A still image representing your captured video will appear on screen. The name of the video runs along the bottom of the screen. You can access the **Use as** and **Rename** options by pressing **Settings**.

## Using the toolbar

Before shooting a video, select **Settings** to configure various options.

**Colour effect** - Choose from four colour tone options: **Off**, **Black & White**, **Negative** and **Sepia**.

**White balance** - The white balance ensures that any white in your videos appears realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Sunny**, **Incandescent**, **Cloudy** or **Fluorescent**.

01

02

03

04

05

06

07

08

09

# Video camera

## Night mode - On or Off

**Video quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

## Duration - Normal or MMS.

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu.

Use the arrow keys to navigate the options in **Others**.

**Memory in use** - Choose whether to save your videos to the Handset memory or to the External memory.

**Hide icons** - Set the camera to automatically hide the icons to the side of the viewfinder.

**Voice** - Choose Mute to record a video without sound.

## Watching your saved videos

- 1 Select the album icon. Your album will appear on screen.
- 2 Highlight the video you want to view to bring it to the front of the album.
- 3 Select the video to open it fully.

## Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the keys on the side of the handset.

# My stuff

You can store multimedia files in your phone's memory in **My stuff** so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

## My images

**My images** contains a folder of default images pre-loaded onto your phone, images downloaded by you and images taken with your phone's camera.

## Option menus

The options available to you depend on what type of image you have selected. All of the options listed below will be available for pictures you have taken on the phone's Camera.

In the images folder, select Options to display your list of options.

**Send** - Send the selected image to a friend via message, email or Bluetooth.

**Note:** The image may need to be resized before it can be sent by MMS.

**Use as** - Select as Wallpaper, Contacts image, Start up image or Shut down image.

**Move** - Move an image from the phone memory to a memory card or vice versa.

**Copy** - Copy an image from the phone memory to a memory card or vice versa.

**Delete** - Delete the selected image.

**Mark/Unmark** - Select multiple files.

**Print via** - Print an image file via Bluetooth®.

**File** - Edit, Rename or view the File info. (Name, Size, Date, Resolution, Type, Copyright and Protect) of the selected image.

**Create new folder** - Create a new folder within the Pictures folder.

**Slide show** - See **Creating a slide show** on page 38.

01

02

03

04

05

06

07

08

09

## My stuff

**Sort by** - Arrange your images by date, type or name.

**List view/Grid view** - Change the way you view your photos.

**Memory manger** - View the memory status.

### Sending a photo

- 1 From the main menu, select .
- 2 Select **My images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 5 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and if you choose **Yes**, your phone will search for a device to send the picture to.

### Organising your images

- 1 From the main menu, select .
- 2 Select **My images**.
- 3 Select **Options** and then **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

### Deleting an image

- 1 From the main menu, select .
- 2 Select **My images**.
- 3 Select an image and choose **Options**.
- 4 Select **Delete**.

### Creating a slide show

If you want to look at the images on your phone, you can create a slide show to save you from having to open and close each individual image.



- 1 From the main menu, select .
- 2 Select **My images**.
- 3 Select the photo with which you would like to begin the slideshow and choose **Options**.
- 4 Select **Slide show** and it will begin.
- 5 Select **Stop** to pause the slide show or **Back** to end the slide show and return to the **My images** folder.

Selecting **Options** during the slide show allows you to change to full or landscape view.

## My sounds

The **My sounds** folder contains **Default sounds** as well as your **Voice recordings**. From here you can set sounds as ringtones or send them to other people.

## Using a sound

- 1 From the main menu, select .
- 2 Select **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Find a sound and choose **Play** to listen to it.
- 5 Select **Options** and choose **Use as** to set the sounds as your **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up sound** or **Shut down sound**.

## My videos

The **My videos** folder contains downloaded videos and videos that you have recorded with your phone.

01

02

03

04

05

06

07

08

09

# My stuff

## Watching a video

- 1 From the main menu, select .
- 2 Select **My videos**.
- 3 Select a video and choose **Play**.

## Using options while video is paused

Select **Options** while in pause mode and choose from:

**Landscape view** - View the video file in full shot.

**Mute/Unmute** - Switch the sound on/off.

**Capture** - Capture the frozen frame as a picture.

**Repeat** - Repeat the video file.

**File info.** - View the name, size, date, time, type, duration, dimension, protection and copyright details.

**Send** - Send the video in a message, Email, via Bluetooth.

**Delete** - Delete the video.

**Use as** - Use as a video ringtone.

## Sending a video clip

- 1 Select a video and select **Options**.
- 2 Select **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

## Using a video clip as a ringtone

- 1 Select a video and choose **Options**.
- 2 Select **Use as** and choose **Voice ringtone** or **Video ringtone**.

## Using the video options menu

From the **Videos** folder, you can choose from the following options:

**Send** - Send a video to a friend.

**Move** - Move a video clip from the phone memory to a memory card or vice versa.

**Copy** - Copy a video clip from the phone memory to a memory card or vice versa.

**Delete** - Delete a video.

**Mark/Unmark** - Select multiple files.

**File** - Edit the file name and view its information.

**Create new folder** - Create a new folder within the My videos folder.

**Sort by** - Sort videos into a specific order.

**Grid view/List view** - View the options menu by Grid or List type.

**Memory manager** - View the memory status.

## Games and applications

Your **KS500Q** comes with pre-loaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they should be saved in this folder.

### Playing a game

- 1 From the main menu, select .
- 2 Select **My games & apps**.
- 3 Select the game of your choice and choose **Launch**.

### SVG contents

The SVG contents folder contains all of your default and downloaded flash contents.

### Viewing an SVG file

- 1 Select **My stuff** then **SVG contents**.
- 2 Select the file and press **Play**.

# My stuff

## Using options viewing the SVG file

Select **Options** while in pause mode and choose from:

**Play/Pause** - Pause or resume playback.

**Full screen/Landscape view** - View your SVG in full screen or landscape view mode. (this only appears if you select **Options** without pausing).

**Mute/Unmute** - Switch the sound on/off.

**Use as wallpaper** - Set the SVG file as a wallpaper.

**File info.** - View the details about the file.

## Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications.

## My memory card

If you've inserted a memory card it will be displayed as a folder within **My stuff**. That folder will be divided into four further folders: **Images**, **Sounds**, **Videos** and **Others**.

## Using your phone as a mass storage device

Your **KS500Q** can be used as a mass storage device, just like a USB stick. This is a great way of moving files from your computer to your phone. If you've inserted a memory card and are connecting as mass storage, two drives will appear on your computer.

- 1 From the main menu, select **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and choose **Select**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the **KS500Q**. Plug the larger end into the USB port of your computer.

- 5 A removable disk folder will open automatically (two if you have a memory card inserted) showing all the folders on your phone.
- 6 Drag and drop your images, videos, music or documents into the desired folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.

01

02

03

04

05

06

07

08

09

# Multimedia

## Music

Your LG KS500Q has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, choose from the main menu and then select **Music**. From here you have access to:

**Recently played** - This option shows the last played track.

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - You can view and play music sorted by artist.

**Albums** - You can view and play music sorted by album.

**Genres** - You can view and play music sorted by genre.

**Playlists** - Contains any playlists you have created.

**Shuffle tracks** - If you want to play a continuous random selection, choose this option.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the device and choose to send it via Bluetooth.
- 3 Choose **Yes** on your phone to accept the file.
- 4 The file should appear in **Music > All tracks**.

## Playing a song

- 1 From the main menu, select .
- 2 Choose **Music**.
- 3 Select **All tracks** and then the song you want to play. Select **Play** to begin.
- 4 From the **Options** menu, choose **Minimize** to hide the music player screen so that you can continue using your phone as normal while music is playing.
- 5 Select **Back** to return to the music menu.

**TIP!** To change the volume while listening to music, use the volume keys on the side of your phone.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 From the main menu, select .
- 2 Choose **Music**, then **Playlist**.
- 3 Select **Add**, enter the playlist name and choose **Save**.
- 4 The **All tracks** folder will be shown. Select the songs that you would like to include by moving to them and pressing **Mark** ; a tick will show next to their name.
- 5 Select **Done** to store the playlist.

## Playing a playlist

- 1 From the main menu, select .
- 2 Choose **Music**, then **Playlists**.
- 3 Move to the playlist you would like to play and choose **Select** and then **Play**.

## Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. You may also want to organise your playlists.

- 1 From the main menu, select .
- 2 Choose **Music**, then **Playlists**.
- 3 Scroll to the playlist you want to edit and choose **Select**, then **Options**.  
Choose from:

**Add new songs** - You can add or delete songs from the playlist using this option.

**Remove from list** - Remove a song from the playlist. Touch **Yes** to confirm.

**Move up/Move down** - Move the song up or down the list to change the playing order.

## Deleting a playlist

- 1 From the main menu, select .
- 2 Choose **Music**, then **Playlists**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete** and choose **Yes** to confirm.

01

02

03

04

05

06

07

08

09

# Multimedia

## Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

- 1 From the main menu, select .
- 2 Choose **Voice recorder**.
- 3 Select **Rec.** to begin recording.
- 4 Select **Pause** to pause the recording.
- 5 Select **Stop** to end the recording.
- 6 From the Options menu, select **Play** to listen to the recording or select **Delete** to delete it.

**Note:** You can listen to all of the voice recordings you have saved by selecting **Options**, then **Go to Voice recordings**.

## Sending the voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send** and choose from **Message**, **Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal.

## Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and that they are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 Accept the file by choosing **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. So, for example, a photo will be saved in the **My images** folder and music in the **My sounds** folder. If your phone cannot identify the file type, it will be saved in the **Others** folder.

**Note:** Files sent using Bluetooth can be saved to the phone's memory.



# Organiser

## Adding an event to your calendar

- 1 From the main menu, select **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the arrow keys or by selecting **Options**, then **Add new event** and manually entering the date.
- 3 Select **Add new event** and enter the time you would like your event to begin. Scroll down using the arrow keys and enter the end time of your event.
- 4 Scroll down and enter a **Subject** for the event.
- 5 Choose whether or not you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can select for the alarm to go off at the starting time of the event or at a set period of time before the event starts.
- 6 Choose whether or not the event is a one-off or if it is to be repeated. You can choose from **Daily**, **Weekly**, **Monthly**, **Annually** or **User setting** options. If the event is repeated, you can also enter an **Expiration date** for when the events will stop repeating.
- 7 Select **Done** and your event will be saved in the calendar. An icon will mark the days that contain events.

## Editing a calendar event

- 1 From the main menu, select **Calendar**.
- 2 Choose **Options** and select **Weekly** to see a list of all your events. Scroll to the event you would like to edit and select **View**. Alternatively select the day of the event in the calendar and select **View**.
- 3 Select **Options**, then **Edit** and scroll to the event detail you want to change. Make your modifications and choose **Done** to store the edited event.

**Note:** You can delete an event from your calendar by viewing the event and choosing **Delete**.

01

02

03

04

05

06

07

08

09

# Organiser

## Sharing a calendar event

- 1 From the main menu, select , then **Calendar**.
- 2 Choose **View** to select the event you would like to share and choose **Options**.
- 3 Choose **Send** and select from **Text message**, **Multimedia message**, **Email** or **Bluetooth**.

## Adding a memo

- 1 From the main menu select , then **Memo**.
- 2 Select **Add** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on screen the next time you open the **Memo** application.

**TIP!** You can edit an existing memo. Select the one you want to edit, choose **Options** and select **Edit**.

# Tools

## Setting an alarm

- 1 From the main menu, select **Alarms**.
- 2 Select **Add new**, from the **Options** menu.
- 3 Enter the time you would like the alarm to sound at.
- 4 Choose whether you would like your alarm to sound **Once**, **Daily**, **Mon - Fri**, **Mon - Sat**, **Sat - Sun** or **Except holiday**.
- 5 Scroll down to choose the alarm sound. Select **Edit** to select a new sound.
- 6 Scroll down and enter a name for the alarm or keep the suggested name.
- 7 Select **Done**.

**Note:** You can set up to 5 alarms. The alarm will go on even when the phone is switched off.

## Using the calculator

- 1 From the main menu, select **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 Use the arrow keys to add, subtract, multiply and divide.
- 4 More complex calculations can be accessed in the **Options** menu.
- 5 Press **C** to clear the screen and start a new calculation.

## World time

- 1 From the main menu, select **World time**.
- 2 To add a new city to the list, choose **Options**, **Add city**, then select a city from the list.
- 3 To set your current time-zone, select **Options**, then **Change current city**.

01

02

03

04

05

06

07

08

09

# Tools

## Converter

- 1 From the main menu, select , then **Converter**.
- 2 You can choose to convert **Currency, Surface, Length, Weight, Temperature, Volume** or **Speed**.
- 3 Select the units of measurement you would like to convert from and to.
- 4 The result of the conversion will appear below.

## Using the stopwatch

- 1 From the main menu, select , then **Stopwatch**.
- 2 Press **Start** to begin the timer.
- 3 Press **Lap** if you'd like to record a lap time.
- 4 Press **Stop** to end the timer.
- 5 Press **Resume** to continue timing, or choose **Reset** to start again.

# Browser

Browser brings you up-to date news, sport, weather and traffic reports, and much more. You can also use it to download the latest ringtones, music, wallpapers and games.

## Accessing the web

- 1 From the main menu, select .
- 2 To access the browser homepage directly, select **Home** to access the internet homepage, or **Enter address** to type in the URL of the web-page you'd like to visit.

**Note:** An additional cost is incurred when connecting to this service and downloading content. Check data charges with your network provider.

## Adding and accessing bookmarks

For quick and easy access to your favourite websites, you can add bookmarks and save web-pages.

- 1 When viewing a page that you'd like to bookmark, select **Options**, then **Bookmarks**.
- 2 Select **Add to bookmarks**.
- 3 Confirm title and press **Done**.
- 4 Select a folder to store the bookmark in.

**TIP!** After opening the page in browser, you can save the current page by selecting **Save page**.

## Accessing a saved page

- 1 From the main menu, select .
- 2 Select **Saved pages**.
- 3 Choose a page and select **Open**.

## Viewing your browser history

- 1 From the main menu, select.
- 2 Select **History**.
- 3 A list of web-pages you have accessed recently will be displayed. If you'd like to open one of them, you can.

## Changing the web browser settings

- 1 From the main menu, select . Then choose **Settings**.
- 2 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can modify a variety of settings by selecting **Options**, then **Settings**.

01

02

03

04

05

06

07

08

09

# Settings

Within this folder you can change the phone's settings to personalise your KS5000.

## Changing your screen settings

- 1 From the main menu, select .
  - 2 Select **Screen** and choose from:
    - Screen theme** - Modify your phone's display, including wallpaper.
    - Menu style** - Choose the style used to display menus.
    - Dialling** - Adjust the font style used when entering a phone number.
    - Font** - Adjust the font type.
    - Backlight** - Choose how long the backlight remains on for.
    - Handset theme** - Change the look of your screen.
    - Greeting message** - Choose to add a message to your standby screen.
- Note:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

## Activating your profiles

From the main menu, choose **Settings**, then **Profiles**. Select the profile you would like to activate.

Choose from:

- Normal
- Silent
- Outdoor
- Flight mode
- Customised 1
- Customised 2
- Customised 3

## Personalising your profiles

- 1 Choose the profile setting you want to edit and select **Options**, then **Edit**.
- 2 For the **Silent** profile, you can switch vibration on or off. For the other profiles, you can change sounds and alerts.

01

02

03

04

05

06

07

08

09

# Settings

## Other phone settings

From the main menu, choose **Settings**. You can then adjust the settings for the following areas.

**Phone** - Change the phone settings for the key lock, Optical sensor settings, languages and power saving. You can also view handset information.

**Screen** - Change your screen settings.

**Date & Time** - Adjust the date and time settings or choose to automatically update the time when you travel.

**Network** - Your **KS500Q** automatically connects to your preferred network. To change these settings use this menu. You can also add new access points using this menu.

**Access points** - Your network operator has already saved this information.

**Packet data conn.** - Set the packet data connection.

**Reset settings** - Reset all the settings to their factory definitions.

## Changing security settings

**PIN code request** - Set the phone to ask for the PIN code of your SIM card when switching on the phone.

**Handset lock** - Set the phone lock to avoid unauthorised use. You will need a security code.

**Change codes** - Change the codes: PIN / PIN2 / Security code

## Using Memory manager

Your **KS500Q** has three memories available: the phone; the SIM card; and an external memory card (you may need to purchase the memory card separately).

You can use **Memory manager** to determine how each memory is used and see how much space is available.

From the main menu, choose **Settings**, then **Memory manager**. Your options are:

**Handset common memory** - View the memory available on your **KS500Q** for images, sounds, videos, multimedia messages, email, java and others.

**Handset reserved memory** - View the memory available on your handset for a variety of items.

**USIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - Choose between **Handset memory** and **External memory** as the primary storage.

## Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect a Bluetooth headset to make and receive calls.

Before you can start sharing files with Bluetooth, you will need to pair your device with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device on the next page**.

### To switch Bluetooth on:

- 1 From the main menu, choose **Connectivity**, then **Bluetooth**.
- 2 Select **Turn on**.

### To send a file:

- 1 Open the file you want to send.
- 2 Select **Options** and choose **Send**, then **Bluetooth**.
- 3 Your KS500Q will automatically search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to and select **Send**.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

### To receive a file:

- 1 To receive files, your Bluetooth must be both on and visible. See **Changing your Bluetooth settings** on the next page for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.



# Settings

## Changing your Bluetooth settings

- 1 From the main menu, choose **Connectivity**, then **Bluetooth**.
- 2 Choose **Settings**.  
You can make changes to the following:  
**My device visibility** - Choose from **Visible**, **Hidden** or **Visible for 1 min..**  
**My device name** - Enter a personalised name to identify your KS500Q.  
**Supported services** - Search for the profile supported by KS500Q.  
**My address** - View your Bluetooth address.

## Pairing with another Bluetooth device

By pairing your KS500Q and another device, you can set up a passcode protected connection. This means your communications are more secure.

- 1 Check your Bluetooth is on and visible.
- 2 Select **Search for new device** from the Bluetooth menu.

- 3 Your KS500Q will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Add**, enter the passcode and choose **Select**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

## Changing your security settings

Change your security settings to keep your KS500Q and the important information it holds protected.

From the main menu, choose **Settings**, then **Security**.

**PIN code request** - A PIN code can be requested when you turn your phone on.

**Handset lock** - Choose when your security code will be requested.

**Change codes** - Change your **Security code**, **PIN code** or **PIN2 code**.

# Accessories

These accessories are supplied with your KS500Q.

## Charger

## Battery

## Stereo headset and handsfree connector

## Data cable and CD

Connect and synchronise your KS500Q with your PC.

## User guide

Learn more about your KS500Q.

### Note:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

01

02

03

04

05

06

07

08

09

## Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS 1900 and W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

Product name : KS500Q

System : GSM 900 / DCS 1800 / PCS 1900  
/ W-CDMA

### Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C