

i-αppli

What is an i-αppli?	222
Downloading i-αppli from a Site	222
Starting an i-αppli	223
Start an i-αppli from a Site or Mail i-αppli To Function	233
Automatically Starting i-αppli Auto start set	233
Viewing Various Information	234
Deleting i-αppli	235
Using Various i-αppli Functions	235

What is an i-αppli?

"i-αppli" is software for i-mode compatible mobile phones. Downloading various software from i-mode sites allows updating stock price or weather information automatically, playing games without connecting to a network, or using the FOMA terminal more conveniently.



- Packet communication charges apply.
- When using overseas, packet communication charges differ from domestic charges. →P322
- For details about i-αppli, refer to the "Mobile Phone User's Guide [i-mode] FOMA version".

Downloading i-αppli from a Site

You can download an i-αppli from a site and save it to the FOMA terminal.

- Up to 500KB of an application can be downloaded.
- Up to 100 downloaded applications can be saved. This number may be reduced by the software data size.



1 From the currently accessed site ▶ Select a program

-  [Cancel] : Cancel downloading.
- When "Display SW info" is set to "Display"
Software information is displayed.  [OK] ▶ "Yes" to download the program.

2 After the download is completed ▶ "Yes"

- The downloaded software starts.
- Depending on the software, after the software is downloaded, a screen where you set operating condition may be displayed. The settings can be changed from "Software set" later. → P226

Note

- At the start of downloading, a confirmation screen may appear notifying you that the application will use "the phone information data (stored data and serial number of your mobile phone/UID)". Press "Yes" to start downloading. Select  [Detail] to check the details of the phone information to be used. In this case, the "serial number of your mobile phone/UID" is sent to the IP (Information Provider) over the Internet, and it could be intercepted by a third party. However, this action does not reveal your phone number, postal address, age, or gender to the IP or others.
- If you attempt to re-download software that has already been downloaded with a different UID, a confirmation asking whether to overwrite appears. Select "Yes" to overwrite.
- If the maximum number of software programs which can be saved is exceeded or if there is not enough memory space, a confirmation for deletion of another i-αppli appears. If there is not enough free memory space, you can select i-αppli to delete, checking the required memory space to store the new application. Select "Yes" to delete ▶ Place check marks next to i-αppli to delete ▶  [Delete]. ▶ Select "Yes" to delete the marked software and to start the download.
- If the download of software fails due to weak signal reception, the software cannot be saved.
- Even if the download of software fails due to weak signal reception after old software was deleted to increase the available space on the terminal, the old software cannot be restored.
- Some software that starts immediately after being downloaded cannot be saved.

Note the followings if you download a mail-connected i-αppli.

- If you download a mail-connected i-αppli, a folder specific to the mail-connected i-αppli is created in Inbox and Outbox. A related folder takes the downloaded mail-connected i-αppli name and it is unchangeable.
- Up to 17 (100 including all other i-αpplis) mail-connected i-αpplis can be saved.
- If you attempt to download a mail-connected i-αppli, which will use an existing folder for a mail-connected i-αppli saved in the FOMA terminal, the attempt will be denied.
- If there is only a folder for a mail-connected i-αppli left in the FOMA terminal, you can download a mail-connected i-αppli which uses that folder. If the folder is not used, you can delete it and create a new folder. A mail-connected i-αppli will not be downloaded if you do not create a folder for it.
- You cannot delete a folder if a mail-connected i-αppli that uses that folder still exists in the FOMA terminal. If you delete folders that no mail-connected i-αppli uses, folders created in both Inbox and Outbox are deleted at once.
- If you delete folders that no mail-connected i-αppli uses, you can choose whether to delete all folders automatically created at once.
You cannot delete folders, however, if they have any protected messages in them.


Display Software info

View i-αppli Information at download time

Set whether to display software information before downloading the software.

- 1  [Menu] ▶ "i-αppli" ▶ "i-αppli settings" ▶ "Display SW info" ▶ "Display"/"Not display"





Starting an i-αppli

- 1 The Stand-by display ▶  (for 1+ seconds)



Software list screen

■ Icons on the Software List screen

Icon	Description
	Standard i-αppli
	i-αppli DX
	Auto-start set i-αppli
	i-αppli downloaded from an SSL site

2 Select software

- If "Network set" of "Software set" is set to "Confirm every session", a confirmation whether to allow the communication appears. Select "Yes"/"No"

■ To exit an i-αppli

-  ► Select "Yes".

To start software from other software

Some software can start a specified i-αppli without returning to the Software list screen.

- If the software to be started is not saved in the FOMA terminal, you need to download it.
- If the software to be started is not specified, select a software following the instruction on the screen.

If a security error occurs

If you attempt to perform operations that are not permitted for the software, a security error is indicated and the error is recorded in "Security error history".

→ P234





If a problem occurs with the software

If a problem occurs with the software, you can check the contents using the Trace info. → P234

To i-αppli creators

If software does not behave as expected while being created, you may want to refer to the Trace info.

Note

- Some software performs communication while running. You can change the settings in "Network set" of "Software set" to not automatically perform communication. → P225
- If there is an incoming voice or video call when the software is running, you can answer the call pausing the software. After the call is terminated, the previous screen returns.
- Even when the software is running, you can receive mail or Message R/F. The software keeps running, and , ,  appears at the top of the screen. To view the received mail or Message R/F, terminate the software.
- Images used by an i-αppli* or data you enter may be automatically sent to a server via the Internet.
- * Images used by the i-αppli include: images captured with Camera that is started from a Camera-linked (linkage) application, images obtained using infrared communication function of the i-αppli, images downloaded from a site or web site, and images obtained from the Data box by the i-αppli.
- You cannot start software downloaded using a different UIM.
- Depending on i-αppli, the tone may not sound.
- Depending on the software, an IP (Information Provider) can access programs saved on your terminal and directly disable their use. In this case, the software cannot be run or updated, however, it can still be deleted, or the software information can still be shown. To use the software again, signals to enable the software must be sent. Contact your IP.
- Depending on the software, the IP may send data to a program saved on your terminal.
- In the event that the IP disables/re-enables the software or sends data, your terminal performs communication and  blinks. Packet communication charges do not apply in this case.

1 Software list screen (P217) ► Move the cursor to software ►  [Menu] ► Perform the following operations:

[Set i-αppli TO]

Set conditions to start the selected software.→ P233

[Auto start time]

Set whether to start the selected software automatically, and set the date and time to start if the auto start is specified.

→ P233

[Software set]

Set the selected software.→P225

[Software info]

Display the selected software information such as a name and version of the i-αppli . The displayed items differ depending on the software.

[Upgrade]


Upgrade the selected software.

[Delete]

Delete software.→ P235

Note


<Upgrade>

· During an update, a confirmation may appear notifying you of the use of terminal data (stored data or serial number of the terminal/UiM)*. Select "Yes" to start downloading. Select  [Detail] to check the details of the terminal data to be used. In this case, the "serial number of your mobile phone/UiM" is sent to the IP (Information Provider) over the Internet, and it could be intercepted by a third party. However, this action does not reveal your phone number, postal address, age, or gender to the IP or others.

Setting i-αppli Operating Conditions

Set operating conditions for each software program. You can set an application to perform communications automatically while it is running or decide separately whether to allow it to browse icon information, Phonebook, etc.

· Some items may not be changed depending on the software.

1 Software list screen(P223) ► Move cursor to the program ►  [Menu] ► [Software set] ► Perform the following operations:

[Network set]

Set whether to allow communications while software is running.

[Icon info]

Set whether to permit the use of icons for i-mode mail, Message R/F, in/out of service area, battery level, or Manner Mode when the software starts.

[View P.book/call records]

Set whether to allow software to browse the Phonebook and call history when the software is started.

[Change ring tone/image]

Set whether to allow software to automatically change an image or melody set for a ring tone or the Stand-by display when the software is started

Note

- Depending on the settings, the software may not connect to the network or icon information (unread messages or battery level, etc. will not be sent).

<Network Set>

- When this is set to "No", the software may not start, or realtime information may not be provided.
- When this is set to "Yes", the software automatically connects to the network. While connected, packet communication charges apply.

<Icon info>


- When set to "Yes", information about the status of the terminal as indicated by the presence of icons for unread mail, messages, battery level, Manner Mode, inside the service area, and outside the service area may be sent to Information Providers (IP) via the Internet in the same manner as the "serial number of your mobile phone/UIIM" is sent. The icon information may be intercepted by a third party. Software that needs Icon data may not function if this is set to "No".

Pre-installed i-αppli

The software you deleted after purchasing is available to download from "WOW LG" of i Menu site. →P128

脳オン

Various games to train the brain are available. You can play game by selecting either right brain or left brain or measure the abilities.







- 1 Software list screen (P223) ▶ "脳オン" ▶ 
The menu screen opens.

- 2 Perform the following operations:
 - Push  [終了(Exit)] to exit.

[ゲームスタート (Start the game)]

Start the game.

- For each game, use  to select an item.

- 左脳(Left brain)** : You can select out of 4 games to buff up the left brain ▶ Move the cursor to the game to play ▶  ▶ Move the cursor to the level with which you want to play ▶ 
- 右脳(Right brain)** : You can select out of 4 games to buff up the right brain..▶ Move the cursor to the game to play ▶  ▶ Move the cursor to the level with which you want to play ▶ 
- 試験 (Test)** : Measure the left-brain/right-brain skills.
▶ Move the cursor to the game to play ▶ 
▶ Move the cursor to the level with which you want to play ▶ 

[環境設定 (Environment settings)]

Adjust sound in 8 levels or reset the history and score of game.

· Push  [戻る(Back)] to back to menu screen.


[ヘルプ (Help)]

Display the description of the game and how to play it.

· Push  [戻る(Back)] to back to menu screen.

[ゲーム成績 (Game result)]

Shows recorded game results by graphs or numeric values.

· Push  [戻る(Back)] to back to menu screen.


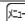


[終了 (Exit)]

Exit the game.

■ Operations during the game



Move the cursor to select an item.

Key	Description
	Select an answer.
 [OK] / [確認 (Check)]	Select an item.
 [ポーズ (Pause)]	Suspend the game. You can select from "ゲームを続ける (Resume)"/"終了 (Exit)".
 [戻る (Back)]	Close the paused screen.

Sudoku Puzzle

Enter a number from 1 - 9 in an empty cell. However, the same number cannot be entered more than once for each vertical or horizontal row, or for a block of 3x3 cells framed with a thick line.

- 1 Software list screen (P223) ▶ "Sudoku Puzzle"
The menu screen opens after the game title screen.

2 Perform the following operations:

[ゲームスタート (Start the game)]

Start the game. Select a level.

[ランキング (Ranking)]

Open the list of high scores.

[オプション (Options)]

Set whether to sound the tone or display hints.

· Selecting "リセット (Reset)" restores the settings and the high score entries to their defaults.

[ヘルプ (Help)]

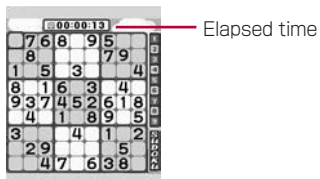
Display the description and rules for the game.

[終了 (Exit)]

Terminate the i-αpli.

* Press  [メニュー (Menu)] to return to the menu screen.

■ Operations during the game



Key	Description
	Move the cursor
[消す (Erase)]	Delete the entered number
[ポーズ (Pause)]	Pause the game. You can select from "セーブ (Save)", "ニューゲーム (Start a new game)", "リスタート (Restart)", and "終了 (Exit)" Only one session can be saved.
[1] [9]	Enter a number

Halloween Fever

This is a puzzle in which you try to erase 3 or more adjacent same type of monsters at once. The game ends when all the monsters are erased. Think carefully about the order of the monsters to delete. If there are any remaining monsters at the end, you will lose.

1 Software list screen (P223) ▶ "Halloween Fever"
The menu screen opens.

2 Perform the following operations:
· Press [終了 (Exit)] to exit.

[スタート (Start)]

Start the game.

[ステージ (Stage)]

Press to select the finished stage.

[ヘルプ (Help)]

Display the description and how to play the game.

[サウンドオン (Sound on)/サウンドオフ (Sound off)]

toggles the sound effects on or off.

■ Operations during the game



Key	Description
	Move the cursor
	Select
[メニュー (Menu)]	Selecting "はい (Yes)" ends the game, and the menu screen opens.
	Restart the game.
	Return to the previous screen.

This is a chess game in which you try to surround the playmate's chess pieces on every side with your pieces, and the playmate's chess pieces will become to yours. The one who has more chess pieces at the end of game will be the winner.


1 Software list screen (P223) ▶ "Battle Reversi"

The game title list screen appears.

2 Press any button

The menu screen appears.


3 Perform the following operations

Press  [終了(Exit)] to exit.

[シングルモード(Single mode)]

A mode to play with a pretend playmate.


The game starts after you selected your character, your chess pieces color (white or black) and playmate's character.

· Press  [もどる(back)] to go back to menu screen before game starts.

[バトルモード(Battle mode)]


A mode to play with your friend with your cellphone.


The game starts after you selected your character, your chess pieces color (white or black) and playmate's character.

· Press  [もどる(back)] to go back to menu screen before game starts.

[データボックス(Data box)]


Display every game's result (scores in win, draw or loss games, etc.).

Press  [キャラクター(Character)] to show your signed up character.

· Press  [もどる(back)] to go back to menu screen.


[環境設定(Environment settings)]

Set or reset time limit or sound.

· Press  [もどる(back)] to go back to menu screen.


[キーマップ(Key map)]

Display buttons description that using in this game.

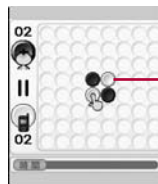
· Press  [もどる(back)] to go back to menu screen.

[ヘルプ(Help)]

Display game content and operations.

· Press  [もどる(back)] to go back to menu screen.

■ Operations during the game



Select where to put your chess piece with cursor

Key	Description
⬅/ [2] / [8] / [4] /[6]	Move the cursor
●/[5]	Select items
[Enter] [ポーズ(pause)]	Selecting "はい(Yes)" ends the game and show result screen. Selecting [Enter] [終了(end)] to end the game.

超富豪

Try to throw a higher card than the previous player. Players are ranked in the order of ascending priorities who finished cards earlier.

1 Soft List Display (P223)▶" 超富豪 "
Menu is displayed.

2 Next
· Press [Enter] [終了(end)] to end this game.

[PRACTICE GAME]

One game COM competition mode.

[RANKING GAME]

5 games COM competition mode.

[CONTINUE]

Restart the game was paused. Choose the game if game data was saved.

[RANKING GAME]

More detail rules, and sound ON/OFF can be set.

■ Game Operation



Use cursor to choose the thrown card

Key	Description
⬅/ [4] / [6]	Move cursor
○/[2]	Choose a card
⏏/[8]	Cancel the card chosen
●/[5]	Throw the card chosen
[Enter] [タイトル(Title)]	Press "Yes" to end the game and show title screen. Press "End" to end the game.
[Enter] [開始(Start)]	Start a game
[Enter] [パス(Pass)]	Pass
[*]	Switch between sound ON and sound OFF

Enjoy mahjong with the pretend playmates.

1 Soft List Display (P223)▶ "GravityArrow"
Menu is displayed.

2 Next
· Press [☒][終了(End)] to end this game

[GAME START]

Start the game.

[SOUND ON/SOUND OFF]

Press [●] to switch the Sound ON/OFF

■ Game Operation

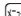


The scores now

Key	Description
[☒]/[2]/[8]/ [4]/[6]	Move the ball
[●]/[5]	Switch the ball
[☒][中断(Pause)]/ [再開(Restart)]	Pause/Restart
[☒][タイトル(Title)]	Press "Yes" to end the game and show title screen. Press "End" to end the game.
[*]	Switch between sound ON and sound OFF

Enjoy mahjong with the pretend playmates.


1 Soft List Display (P223) ▶ "麻雀"
Menu is displayed.

2 Next
· Press  [終了(End)] to end this game

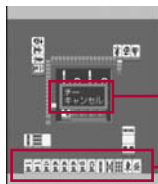 
[GAME START]

Start the game.

[SOUND ON/SOUND OFF]


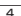
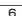

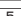


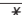
Press  to switch the Sound ON/OFF

■ Game Operation



Only displayed at
[ポン]/[チー]

Choose the tile with
cursor

Key	Description
 /  / 	Move cursor
 / 	Decide the tile will be thrown
 [得点(Score)]	Show score
 [タイトル(Title)]	Press "Yes" to end the game and show title screen. Press "End" to end the game.
 *	Switch between sound ON and sound OFF

FOMA環境通信確認アプリ(FOMA Communication Environment Check Application)

· The screen image only provides an example. It may differ from actual one.




FOMA環境通信確認アプリ(FOMA Communication Environment Check Application) is an application to confirm if the FOMA terminal is in a FOMA HIGH-SPEED Area.

- When using FOMA環境通信確認アプリ (FOMA Communication Environment Check Application), please agree with the "Usage and Warning" section.
- When confirming the Communication Environment, the diagnostic result may differ, depending on the Communication Environment (weather, radio wave, network, etc.), even if you use the FOMA terminal at same place, same time (sometimes "Out of service area" may be displayed).
- Using other functions while using this application may cause an application error.

Start an i-αppli from a Site or Mail

Set whether to start software from a site, mail, or via infrared communication.

- Software list screen (P223) ▶ Move the cursor to software ▶  [Menu] ▶ "Set i-αppli to" ▶ Place check marks next to software to be started
 Site i-αppli to : Start the software from a site.
 Mail i-αppli to : Start the software from mail.
 Ir i-αppli to : Start the software via infrared communication.

-  [Done]

Auto start set

Automatically Starting i-αppli

· Date and Time need to be set in advance to start an i-αppli automatically. → P48

Auto Start

Setting to Automatically Start i-αppli

You can set whether to start i-αppli automatically.

-  [Menu] ▶ "i-αppli" ▶ "i-αppli settings" ▶ "Auto start set" ▶ "ON"/"OFF"

Auto Start Time

Setting Start Date/Time

Set the date and time when the software starts automatically. This option can be set for up to 3 software programs.

- Software list screen(P223) ▶ Move the cursor to the software ▶  [Menu] ▶ "Auto start time" ▶ Perform the following operations:

[Time interval set]



Applications will be started automatically with set intervals.


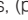

[Start time set]

Place check marks when you want to set the time when the i-αppli automatically start.

[Time]*

Set the time and date for auto-start.

To set the date, use  to move the cursor to the place to change the date and enter the date with the dial keys (to set the date on the calendar screen, press  [Select] in the date entry field). Operations on the calendar screen → P271

To set the time, use  to move the cursor to the value to change, enter the time with dial keys. (pressing  [Select] in the time entry field opens the time settings screen on which you can enter a time using dial keys and ).

· Depending on the settings in "Date&Time format" (P52), the display format or order of the date and time may differ.

[Repeat]*

Select a repeating pattern for auto-start.

1 Time : The software starts automatically only once at the set date and time.



Daily : The software starts automatically at the set time every day.

Weekly : The software starts automatically at the set time on the specified days of the week every week. → Place check marks next to the days to auto-start every week

* Can be set by marking "Start time set"

2  [Done]

Note


- The software will not automatically start when:
 - The FOMA terminal power is turned off
 - A call or communication is in progress
 - Another function is running
 - "Lock all" is set (even from the security code entry screen)
 - An "i-αppli" in "Data access lock" currently is "ON" (even from the security code entry screen)
 - The Auto-start time is the same as the scheduled time for software update, an alarm, Schedule event, or To Do alarm
 - The i-αppli was downloaded using another UIM
 - The i-αppli has "Network set" to "Confirm every session"
 - The same i-αppli has a set intervals to start within 10 minutes
- Software will not start at the set time if other software is running at that time. Also, the software may not start while other functions are running.
- If auto starts fails,  appears on the Stand-by display. Selecting the icon displays the Auto start info (P234).  disappears after the Auto start info is viewed.

Viewing Various Information

1  [Menu] ▶ [i-αppli] ▶ [i-αppli info] ▶ Perform the following operations:

[Security error history]

Display a log of errors of software that was terminated due to a security errors.

-  [Delete]: Delete the selected error history entry.

[Auto start info]

You can check whether software automatically started. You can view the information and the latest date and time when software started for up to 3 software programs set to start automatically.

Start ○: The software automatically started successfully

Start ×: The software failed to start automatically

Start —: The software has not started because the set time has not arrived

[Trace info]

Display trace information for the software.

-  [Delete]: Delete trace information for the software.

Note

- History or information which is not traced will not be shown.

Deleting i-αppli

- 1 Software list screen(P223) ▶ Move the cursor to software ▶  [Menu] ▶  [Delete] ▶ Perform the following operations:

This item : You can delete the selected software.

Selected items : Select and delete items.

- ▶ Place check marks next to the software to be deleted ▶  [Delete] ▶ "Yes"

All items : Delete all software.

- ▶ Enter the security code ▶ "Yes"

Note

- When "Auto start time" is set, a confirmation for disabling the option appears. Select "Yes" to disable.

Using Various i-αppli Functions

Some i-αppli use terminal functions and connect to sites.

- You need to download i-αppli that support the function in advance.
- For some i-αppli, operations may be different, or functions may not be available.

Using the Camera from an i-αppli

- When the camera is started by an i-αppli, captured images will not be saved in "My picture" in the "Data box", however, they are saved and used as a component of the i-αppli.

- 1 Capture an image with the camera using an i-αppli

Using Infrared Communication from an i-αppli

- 1 Perform infrared communication using an i-αppli

Note

- You may not be able to exchange data with some devices even if they have the infrared capability.
- You can also start an i-αppli by receiving i-αppli activation data via infrared communication.
- When infrared communication is in progress, any connection with sites or reception of Mail will be cancelled.

Data Management

Data box.....	238
Making Full Use of Still Images	
Displaying Images	Picture viewer 239
Editing Still Images	Edit Still Images 244
Creating Animations	Animation 247
Making Full Use of Videos	
Playing Videos/i-motion Movies	Video/i-motion Player 249
Editing Videos/i-motion Movies	Edit Videos/i-motion Movies 253
Making Full Use of Melodies	
Playing Melodies	Melody player 254
Exchanging Data via Infrared Communication	
Using Infrared Communication	IrDA 257
Exchanging Data One Piece at a Time	Send IrDA/Receive Ir Data 259
Receiving or Sending All Data	Send All via IrDA/Receive All IrDA 259

Data box

The Data box contains the items and folders shown in the following tables. Data obtained from sites or i-mode mail are saved in folders according to their categories.

- Up to 20 folders can be added to My picture, Music, i-motion, or Melody.
- Files saved in My picture, Music, i-motion, or Melody can be moved to other folders within the category.

My picture	
i-mode	Still images, etc. obtained from sites or mail
Camera	Still images captured by the Camera
Decomail picture	Pictures for Deco-mail provided by default
Decomail pictograph*	Deco-mail pictographs pre-installed or downloaded from web sites or mail
Preinstalled	Still images provided by default
Data transfer	Still images, etc. obtained via infrared communication
Item	Still images that can be used for frames or stamps
Animation	User defined animations, etc.
Music	
i-mode	Chaku-Uta-Full® downloaded from a site
Playlists	Playlists created with the Music player
i-motion	
i-mode	Videos/i-motion movies downloaded from sites or mail
Camera	Videos captured by the Video Camera
Preinstalled	Videos provided by default
Data transfer	Videos, etc. obtained via infrared communication

Melody	
i-mode	Melodies, etc. downloaded from sites or mail
Preinstalled	Melodies provided by default
Data transfer	Melodies, etc. obtained via infrared communication

- * Pictographs (E-Moji) will be saved directly into the "Pictographs (E-Moji)" folder. Except for Pictographs (E-Moji), others will not be saved in "Pictographs (E-Moji)" folder.




Descriptions of Displayed Name, File Name, and Title









Still images, Flash movies, videos/i-motion movies, and melodies saved in the FOMA terminal have more than one name.

Displayed Name	Names that appear on list screens in the Data box, or on Display/playback screens
File Name	Names that appear on a PC or other terminals
Title*	Names for management of the L-06A (they cannot be edited)

- * Still images and Flash movie files do not have titles.

Icons displayed on the file list screen

Icon	Description
	Display the list screen of the next higher folder
	Files that can be sent/cannot be sent
	File restricted

Icon	Description
	File with UIM restriction activated
	A file prohibited to be redistributed
*2  /  /  /  /  / 	File type (JPEG/GIF/MP4 (file extension: mp4) /MP4 (file extension: 3gp)/SMF/MFi/Others (unsupported files))

*1 Appears in a list view.

*2 Icons that appear on the screen vary depending on the type of the list screen.

Picture viewer




Displaying Images

You can display still images you have captured, or obtained from sites or i-mode mail.

■ Available File Formats



File Format*	JPEG, GIF
Pixels	JPEG: Up to 1200 x 1600 pixels Progressive JPEG, GIF: Up to 800x600 pixels
File Size	Up to 2MB
File Extension	jpg, gif

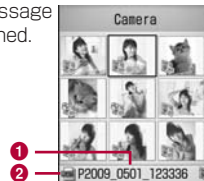 
* Even if a file is in a compatible file format, it may not be displayed depending on the file.

- 1  [Menu] ►  (Data box) ► "My picture"
 -  [Switch]: Switch between list and picture display.



My Picture Screen

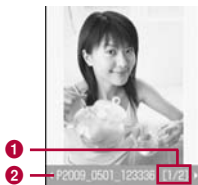 
- 2 Move the cursor to a folder ►  [Open]
 -  [Mail]: Display the Compose message screen with the selected file attached.
 - Icons displayed on the list screen
→ P238



Still image file list screen

- 1 Display name of the selected file
- 2 Type of the selected file

3 Move the cursor to a file ▶ [View]






Still image file list screen

1 Sequential number/number of saved files


Display the sequential number of the current file and the total number of saved files in the folder.

2 Display name of the file

■ Available File Formats

Key	Description
	Display the previous/next file
 [Full]	Display a full image, hiding the Soft keys/return to the original display size
 [Mail]	Send the displayed image by mail → P131

Note

- An i-mode mail with the selected image attached can be created by pressing  [Mail] on the still image file list screen.
- Some images not captured with L-O6A may not be displayed on the Still image file list screen.

Sub Menu on the My Pictures Screen

1 My Picture screen (P239) ▶ Move the cursor to a folder ▶ [Menu] ▶ Perform the following operations:

[Rename]

Change the name of the selected folder. Up to 30 full-pitch or half-pitch characters can be entered.

[New folder]

Create a folder.

- You cannot create a sub folder in a user-defined folder.

[Delete]

Delete the selected folder.

[List view/Grid view]

Switch how to display folders.

[Sort]

You can sort folders by setting a condition.

[Memory Info.]

Display the status of storage space of the "Data box".

[Folder property]

Display the name of the selected folder and the number of files in the folder.

Sub Menu on the Still Image File List Screen

1 Still image file screen (P239) ▶ Move the cursor to a file ▶  [Menu] ▶ Perform the following operations:

[Files]

View : Display the selected file.

Edit : Edit the selected file.→ P244

Move : Move the selected file to another folder.

▶ Select a destination folder ▶  [Move]

Copy : Copy the selected file to another folder.

▶ Select a destination folder ▶  [Copy]

Delete : Delete the selected file.


Delete all : Delete all files in the folder.

▶ "Yes" ▶ Enter the security code

Rename : Change the display name of the selected file.

[Multiple choice]

Select and delete files.

 
▶ Place check marks next to files to delete ▶  [Delete] ▶ "Yes"

· You can move/copy multiple files by performing the following steps:

▶ Place check marks next to files to move/copy

▶  [Menu] ▶ "Move"/"Copy" ▶ Select the destination folder

▶  [Copy]/[Move]

· You can also select "Delete", "Mark", "Mark all", "Unmark", or "Unmark all" by pressing  [Menu].

[File property]

Display the file name, size and type, etc. of the selected file.
→ P243

[Send via]*

Mail : Create i-mode mail with the selected file attached.

Go to Step 2 in "Creating and Sending i-mode Mail" (P131).

IrDA : Send a file using Infrared communication.

[Set as]

Set the selected file as the Stand-by display or Call display

Stand-by display : Set as the Stand-by display.

Voice call display : Set as a Voice call display.

Video call display : Set as a Video call display.

Wake-up display : Set as the Wake-up display.

[List view]

Switch the display format of files.

[Sort]

Sort files by specifying a condition.

[Memory info.]


Display the status of storage space of the "Data box".

[New folder]

This item is not available.

* This is not available for Flash files.

Sub Menu on the Still Image Display Screen

1 Still image display screen (P240)
▶  [Menu] ▶ Perform the following operations:

[Edit image]*

Edit the displayed file.→ P244

[Delete]

Delete the displayed file.

[Edit title]

Edit the name of the displayed file.

[File property]

Display the file name, size and type, etc. of the displayed file.
→ P243

[Send via]*

Mail : Create i-mode mail with the selected file attached. Go to Step 2 in "Creating and Sending i-mode Mail" (P131).
IrDA : Send a file using Infrared communication.

[Full screen]

View the image in Full screen. (In Full screen view, the following operations are available.)

- : Restore the full image to the original display.
- : Display the next/previous image.

[Zoom]

Display an enlarged image.

- [+]: Enlarge the image
- [-]: Restore the previous zoom ratio
- : Move the display position
- The entire image and the displayed area appear at the lower right of the screen.

[Set as]

Set the displayed file as the Stand-by display or Call display.

- Stand-by display** : Set as the Stand-by display.
- Voice call display** : Set as a Voice call display.
- Video call display** : Set as a Video call display.
- Wake-up display** : Set as the Wake-up display.

[View settings]

Set the display method of an image, a zoom ratio, or interval between animation frames. → P243

* This is not available for Flash files.

Viewing Flash Movies

You can view Flash movies downloaded from a site, etc.

■ Available File Formats

File Format*	Flash
File Size	Up to 100KB
File Extension	swf

* Even a file in a compatible file format may not save/play depending on the file.






- 1 [Menu] ▶ (Data box) ▶ "My picture"
- 2 Move the cursor to a folder ▶ [Open]
- 3 Move the cursor to a file ▶ [View]




Flash movie playback screen

- 1 **Sequential number/number of saved files**
Display the sequential number of the current file and the total number of saved files in the folder.
- 2 **Display name of the file**

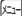

■ Key operations on the Flash movie playback screen

Key	Description
	Display the previous/next file
 [Full]	Display a full image, hiding the Soft keys/ return to the original display size
 [Retry]	Play the Flash movie from the beginning
	Enlarge the image/return to the previous ratio
	Move the display position when the image is enlarged · The entire image and the displayed area appear at the edge of the screen.

Sub Menu on the Flash Playback Screen

- 1 **Flash playback screen (P242)** ▶  [Menu]
 - The sub menu on the Flash playback screen is the same as the "Sub Menu on the Still Image Display Screen" (P241). However, "Edit image" and "Send via" are not available.

Viewing Image Information

- 1 **Still image list screen (P239)/Still image display screen (P240)/Flash playback screen (P242)** ▶  [Menu] ▶ "File property"
 -  [Edit]: Edit properties.


■ Information displayed on the File property screen

Item	Description
File name	Display the file name
File size	Display the file size
File type*	Display the file format
Date & Time (Saved)	Display the saved date and time
Display size*	Display the resolution
File restriction	Display whether the file is restricted
Source	Display the source

* This is not displayed for a Flash file.

Setting the View of a Still Image

Set the display method of an image, a zoom ratio, or interval between animation frames.

- 1 **Still image display screen (P240)/Flash playback screen (P242)/Animation list screen (P247)** ▶  [Menu] ▶ "View settings" ▶ Perform the following operations:

[View type]

Normal : Display the image in its original size.

Fit to screen : Display the image enlarged to fit the screen.

[Zoom type]

Normal : Zoom in on an image enlarged to fit the screen.

Same magnification : Zoom in on an image displayed in its original size.

[Animation interval]

Set the interval between animation frames.

- 2  [Done]

Restricting Files

You can restrict files. The recipient cannot send or forward a restricted file received by mail.

- 1 Select a file to restrict ▶  [Menu] ▶ "File property"
The File property screen opens.
- 2 Move the cursor to the "File restriction" field ▶  [Edit] ▶ "File Restricted"

Note

- This option cannot be changed for a file downloaded from a site.

Edit Still Images

Editing Still Images

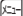
You can edit still images. The edited still image is saved in the same folder as the source file.

- Only JPEG files can be edited. However, it may not be possible to edit some files.
- Editing a still image repeatedly may reduce the image quality or increase the file size.

- 1 Still image display screen (P240)
▶  [Menu] ▶ "Edit image"



Still image edit screen

- 2  [Menu] ▶ Perform the following operations:

[Save]

Save the edited still image. Go to Step 5.

[Rotate]

Left : Rotate the image 90 degrees counterclockwise.

Right : Rotate the image 90 degrees clockwise.

180 : Rotate the image 180 degrees.

[Mirror]

Left/Right : Flip the image horizontally.

Up/Down : Flip the image vertically.

[Resize]

You can change the image size.→ P245

[Crop]


You can cut out a part of an image.→ P246

[Insert]

You can add a frame, stamp, or text.

Frame : Add a frame to an image.

- ▶ Select a folder ▶ Select a frame






- After selecting a frame, you can select "Change frame" or "Rotate" by pressing  [Menu].

Stamp : Add a stamp to an image.→ P246

Text : You can add text to an image.→ P246






[Retouch]

Change the brightness, contrast, or color tone of an image.

- ▶ Use  to switch to the item to retouch
- ▶  [Select]
 - Adjust the item with .
 - If selecting "Auto level" or "Auto enhance", the image is adjusted automatically.
 - If selecting "Color adjust" or "Level adjust", adjust each color with .
 - Pressing  [List] also enables you to select the item to retouch.

[Effect]

Set special effects to an image.

- ▶ Use  to switch to the item to set ▶  [Select]
 - Depending on items, adjust with .
 - If selecting "Rotation" or "Spotlight", adjust each item with .
 - Pressing  [List] also enables you to select the item to set.

[Send via mail]

Create i-mode mail with the edited image attached.


[Undo]

Cancel the performed operation and restore the previous state.

3 [OK]

- To cancel editing
Press  [Cancel].

4 [Save]

- To restore to the previous state
Press  [Undo].

5 "New file"

- To overwrite the original file
Select "Original file".

Note

<Frames>

- Frames are in four sizes: CIF (352x288), QVGA (240x320), QCIF (176x144), and Sub-QCIF (128x96).
- You can only select a frame of the same size as the source image.



<Retouch>

- A source image larger than 640 x 480 pixels cannot be retouched.

<Effect>

- An effect cannot be added to a source image larger than 640 x 480 pixels or with either side smaller than 8 pixels.




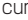




Changing the Image Size

- 1 Still image edit screen (P244) ▶  [Menu] ▶ "Resize"
- 2 Select an image size
- 3  [OK]
 - Go to Step 4 (P244) in "Editing Still Images".

Note

- An image cannot be resized when the vertical or horizontal size of the source image is smaller than 8 pixels.
- If a size with different proportions than the source is selected, the original proportions will be retained for the resized image.




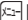


Cropping an Image

- 1 Still image edit screen (P244) ▶  [Menu] ▶ "Crop"
- 2 Select a cropping size ▶ Use  to move the frame to the area to be cropped ▶  [Select]
 - When "User define" is selected
Use  to move the cursor to a start point ▶  [Select]
▶  to move the cursor to an end point ▶  [Select] to set the area to crop.
- 3  [OK]
 - Go to Step 4 (P244) in "Editing Still Images".


Note

- An image cannot be resized when the vertical or horizontal size of the source image is smaller than 8 pixels.

Adding a Stamp

- 1 Still image edit screen (P244) ▶  [Menu] ▶ "Insert" ▶ "Stamp"
- 2 Select a folder ▶ Select a stamp ▶  to move the stamp to the position ▶  [OK]
 - To add another stamp
Press  [Menu] ▶ "Change stamp" ▶ select a folder ▶ select a stamp ▶  to move the stamp to the position ▶  [OK].

■ To rotate the stamp

 [Menu] ▶ Select from "Rotate" ▶ "Left"/"Right" and "180".

3

 [Done]


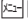
- Go to Step 4 (P244) in "Editing Still Images".

Note

- A Stamp cannot be added to a source image larger than 640 x 480 pixels or with either side smaller than 24 pixels.

Pasting Characters

You can add text to an image. You can also change the font color or size, rotate the text, or paste speech bubbles.

- 1 Still image edit screen (P244) ▶  [Menu] ▶ "Insert" ▶ "Text"
- 2 Enter the text to paste
- 3  [Menu] ▶ Modify text

[Edit text]

Change the pasted text.

[Font size]

Specify the font size.

[Font color]

Change the pasted text color.

[Rotate]

Rotate the text.

[Comic]

Add a speech bubble.

4 Use  to specify the location

5  [Done]

· Go to Step 4 (P244) in "Editing Still Images".

Note



· Text cannot be added to an image when the vertical or horizontal size of the source image is smaller than 24 pixels or when the source image size is larger than 640x480.

Animation

Creating Animations


You can create an animation with up to 20 frames using saved still images.

- Up to 30 animations can be created.
- Up to 640 x 480 pixels of still images can be used for creating the animation.

1  [Menu] ▶  (Data box) ▶ "My picture" ▶ "Animation"




Animation list screen


2  [New] ▶ Enter a display name of the file

3  [Add] ▶ Move the cursor to a folder ▶  [Open] ▶ Select an image

Selecting an image displays the registered image file name.

■ To delete an added image

Move the cursor to an image to delete and Press  [Delete].

4 Repeat Step 3 to save images ▶  [Done]

Viewing Animation

- 1 Animation list screen (P247) ▶ Move the cursor to an animation ▶  [View]



Animation display screen

■ Key operations while viewing animation



Key	Description
	Play the previous/next animation
 [Full]	Display a fit-to-screen animation, hiding the Soft keys/return to the original display size

Image File Selection Screen Sub Menu

You can perform the following operations from the selection screen to save images:

-  [View] : The selected image is displayed.

- 1 From a screen where an image is selected (P247) ▶  [Menu] ▶ perform the following operations:

[Select]

Add the selected image file to the animation.

[View]

Display the selected file.

[File property]

Display the file name, size and type, etc. of the selected file.

→ P243

[List view/Grid view]

Switch the display format of files.

[Sort]

Sort files by specifying a condition.

[Memory info.]

Display the status of storage space of the "Data box".

[New folder]

The item not available to use.

Sub Menu on the Animation List Screen

- 1 Animation list screen (P247) ▶ Move the cursor to an animation ▶  [Menu] ▶ Perform the following operations:

[Add images]

Add images to the selected animation.

[Delete]

Delete the selected animation.

[Edit title]

Edit the display name of the selected animation. Up to 30 full-pitch or half-pitch characters can be entered.


[Set as stand-by]

Set the selected animation as the Stand-by display.

[View settings]

Set the display method of an image, a zoom ratio, or interval between animation frames.→ P243

Animation Display Screen Sub Menu

1 Animation display screen (P248) ▶  [Menu] ▶ Perform the following operations:

[Delete]

Delete the selected animation.

[Edit title]

Change the display name of the displayed animation. Up to 30 full-pitch or half-pitch characters can be entered.

[Full screen]

View the animation in Full screen. (In Full screen view, the following operations are available.)

-  /  : Restore the full image to the original display.
-  : Display the next/previous animation.

[Set as stand-by]

Set the selected animation as the Stand-by display.

[View settings]

Set the display method of an image, a zoom ratio, or interval between animation frames.→ P243

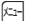


Playing Videos/i-motion Movies

You can play video clips you have captured, or i-motion movies obtained from sites or i-mode mail.

■ Available File Formats

File Format*	MP4 (Mobile MP4)
Encoding Method	MP4 file Graphics: MPEG-4 and H.263 Audio: AMR and AAC
File Extension	mp4 and 3gp

* Even a file in a compatible file format may not play depending on the file.

- 1**  [Menu] ▶  (Data box) ▶ "i-motion"
·  [Switch]: Switch between list and picture display.



i-motion movie

2 Move the cursor to a folder ► [Open]

- [Mail]: Display the Compose message screen with the selected file attached.
- Icons displayed on the list screen
→P238



i-motion File list screen

3 Move the cursor to a file ► [Play]



i-motion movie playback screen

- 1 Display the name of a file
- 2 Playback progress bar
Shows the playback elapsed time.
- 3 Volume
- 4 Control Keys
Indicates available navigation keys.
- 5 Elapsed time/total time

■ Key operations on the i-motion playback screen

Key	Description
	Pause/Play
	Stop
	Play the previous/next file
	While being pressed, rewinds the movie/sound
	While being pressed, fast forwards the movie/sound
	Adjust the volume

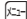
When Link is Set in The Ticker

After i-motion playback ends, a confirmation screen opens asking whether to use Phone To/AV Phone To/Web To/Mail To. To use the function, select an item.


Note

- Some files may not be played and rewound during playback.
- When you fast forward or rewind an i-motion movie during playback, the i-motion movie is paused.

Sub Menu on the i-motion Screen

- 1** i-motion screen (P249) ▶ Move the cursor to a folder ▶  [Menu]
- The sub menu of the i-motion screen is the same as the "sub menu on the My Picture Screen" (P240).

Sub Menu on the i-motion File List Screen

- 1** i-motion file list screen (P250) ▶ Move the cursor to a file ▶  [Menu] ▶ Perform the following operations:

[Files]

Play : Play the selected file.

Move : Move the selected file to another folder.

- ▶ Select the destination folder ▶  [Move]

Copy : Copy the selected file to another folder.

- Select the destination folder  [Copy]

Delete : Delete the selected files.

Delete all : Delete all files in the folder.


- ▶ "Yes" ▶ Enter the security code

Rename : Change the display name of the selected file.



Reset name : Reset the display name of the selected file to its default name.

 
[Multiple choice]

Select and delete files.

- ▶ Place check marks next to files to delete ▶  [Delete] ▶ "Yes"

- You can move/copy multiple files by performing the following steps:

- ▶ Place check marks next to files to move/copy ▶  [Menu]
- ▶ "Move"/"Copy" ▶ Select the destination folder
- ▶  [Copy]/[Move]

- You can also select "Delete", "Mark", "Mark all", "Unmark", or "Unmark all" by pressing  [Menu].

[File property]

Display the file name, size and type, etc. of the selected file.
→ P253

[Send via]

Mail : Create i-mode mail with the selected file attached. Go to Step 2 in "Creating and Sending i-mode Mail" (P131).
IrDA : Send a file using Infrared communication.

[Set as tone]

Set the selected file as a ring tone, etc.

Voice ringtone : Set as a ring tone for a voice call.

Video ringtone : Set as a ring tone for a video call.

Mail tone : Set as a ring tone for mail.

Message R tone : Set as a ring tone for Message R.

Message F tone : Set as a ring tone for Message F.

SMS : Set as a ring tone for SMS.

Alarm tone : Set as an alarm tone.

[Set as display]

Set the selected file as the Stand-by display or Call display

Stand-by display : Set as the Stand-by display.

Voice call display : Set as a Voice call display.

Video call display : Set as a Video call display.

Wake-up display : Set as the Wake-up display.

[List view/Grid view]

Switch the display format of files.

[Sort]


Sort files by specifying a condition.

[Memory info.]

Display the status of storage space of the "Data box".

[New folder]

This item is not available.

1 i-motion playback screen(P250) ►  [Menu] ► Perform the following operations:

[Play]

Play an i-motion movie.

[Send via mail]

Create i-mode mail with the selected file attached. Go to Step 2 in "Creating and Sending i-mode Mail" (P131).

[Set as tone]

Set the file in playback as a ring tone.

Voice ringtone : Set as a ring tone for a voice call.

Video ringtone : Set as a ring tone for a video call.

Mail tone : Set as a ring tone for mail.

Message R tone : Set as a ring tone for Message R.

Message F tone : Set as a ring tone for Message F.

SMS : Set as a ring tone for SMS.

Alarm tone : Set as an alarm tone.

[Set as display]

Set the selected file as the Stand-by display or Call display

Stand-by display : Set as the Stand-by display.

Voice call display : Set as a Voice call display.

Video call display : Set as a Video call display.

Wake-up display : Set as the Wake-up display.

[Expand]

Display a fit-to-screen video/i-motion movie, hiding Soft keys, etc.

· Press  to restore its original display size.

[Mute/Unlock mute]

Mute or un-mute the sound.

[Edit]

Edit the video/i-motion in playback.→ P253

[File property]

Display the file name, size and type, etc. of the file in playback.
→P253

Note

· While the sub menu is accessed, the video/i-motion movie in playback is paused.

<Set as/Set as display>

· Videos/i-motion movies, that were sent to a PC or another FOMA terminal via Infrared communication or DOCOMO Keitai datalink and sent back to the FOMA terminal, cannot be set as Chaku-motion or an incoming call screen.

Viewing Video/i-motion Movie Information

- 1 i-motion file list screen (P250)/i-motion playback screen (P250) ►  [Menu] ► "File property"
 -  [Edit]: Edit properties.

■ Information displayed on the File detail screen

Item	Description
File name	Display the file name
File size	Display the file size
File type	Display the file format
Date & Time (Saved)	Display the saved date and time
Play time	Display the file playback duration
Display size	Display the resolution
Audio	Display the sound format
File restriction	Display whether the file is restricted →P244
Ringtone	Display whether the file can be set as a ring tone
Receive display	Display whether the file can be set as the Stand-by display or Call display
Title	Display the default title of the file
Creator	Display creator information
Copyright	Display copyright information
Description	Display the file description
Source	Display the source

Editing Videos/i-motion Movies

You can edit videos/i-motion movies. The edited video/imotion movie will be saved in the same folder as the source file.

- The preinstalled files cannot be edited.
- Some files may not be edited.
- The Ticker displayed on i-motion movies cannot be edited.

Extracting a Frame of a Video as a Still (Capture)

You can extract a still image from a video/i-motion movie. The extracted image is saved under the "Camera" folder in "My picture" in "Data box".

- 1 i-motion playback screen (P250) ► Display the image to be extracted as a still image
 - Operations during i-motion playback ► P250

- 2  [Menu] ► "Edit" ► "Capture"

Extracting a Video (Trimming)

You can extract a part of a video/i-motion movie. The trimmed movie/i-motion will be saved in the folder saving the file of original edition.

1 i-motion playback screen (P250) ▶ [Menu] ▶ "Edit" ▶ "Clipping" ▶ Perform the following operations:

[500KB]

Extract the video beyond the starting point to 500KB or smaller and save it.

[2MB]

Extract the video beyond the start point to 2MB or smaller and save it.

[Bound]

Crop and save the video from the selected starting point to a selected ending point.

▶ Press [Play] to play a video/i-motion ▶ At the start point to clip [Start] ▶ At the end point to clip [End]

Melody player

Playing Melodies

You can play pre-installed melodies or melodies downloaded from sites.

■ Available File Formats

File Format*	SMF and MFi
File Extension	mid and mld

* Even a file in a compatible file format may not play depending on the file.

1 [Menu] ▶ (Data box) ▶ "Melody"



Melody screen

2 Move the cursor to a folder ▶ [Open]

· Icons displayed on the list screen
→P238



Melody file list screen

3 Move the cursor to a file ▶ [Play]

· [Mail]: Display the Compose message screen with the selected file attached.



Melody playback Screen

- 1 Display the name of a file
- 2 Playback progress bar
Shows the playback elapsed time
- 3 Volume
- 4 Control Keys
Available navigation keys are shown.
- 5 Elapsed time/total time

■ Key operations on the Melody playback screen

Key	Description
	Pause/Play
	Play the previous/next file
	Adjust the volume

Sub Menu on the Melody Screen

- 1 Melody screen (P254) ▶ Move the cursor to a folder ▶ [Menu]
- The sub menu of the Melody screen is the same as the "Sub Menu on the My Picture Screen" (P240). However, "List display·picture display" is not displayed.

Sub Menu on the Melody File List Screen

- 1 Melody file list screen (P254) ▶ Move the cursor to a file ▶ [Menu] ▶ Perform the following operations:

[Files]

Play : Play the selected file.

Move : Move the selected file to another folder.

- ▶ Select the destination folder ▶ [Move]

Copy : Copy the selected file to another folder.

- ▶ Select the destination folder [Copy]

Delete the selected file.

Delete : Delete the selected files.

Delete all : Delete all files in the folder.

- ▶ Yes ▶ Enter the security code

Rename : Change the display name of the selected file.

Reset name : Reset the display name of the selected file to its default name.

[Multiple choice]

Select and delete files.

- ▶ Place check marks next to files to delete ▶ [Delete] ▶ "Yes"

- You can move/copy multiple files by performing the following steps:

- ▶ Place check marks next to files to move/copy ▶ [Menu]
- ▶ "Move"/"Copy" ▶ Select the destination folder
- ▶ [Copy]/[Move]

- You can also select "Delete", "Mark", "Mark all", "Unmark", or "Unmark all" by pressing [Menu].

[File property]

Display the name, size and type, etc. of the selected melody.

→ P257

[Send via]

Mail : Create i-mode mail with the selected melody attached.

Go to Step 2 in "Creating and Sending i-mode Mail" (P131).

IrDA : Send a file using Infrared communication.

[Set as]

Set the selected file as a ring tone, etc.

Voice ringtone : Set as a ring tone for a voice call.

Video ringtone : Set as a ring tone for a video call.

Mail tone : Set as a ring tone for mail.

Message R tone : Set as a ring tone for Message R.

Message F tone : Set as a ring tone for Message F.

SMS : Set as a ring tone for SMS.

Alarm tone : Set as an alarm tone.

[Sort]

Sort files by specifying a condition.

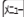
[Memory info.]

Display the status of storage space of the "Data box".

[New folder]

This option is not available.

Sub Menu on the Melody Playback Screen

1 Melody playback screen (P254) ▶  [Menu] ▶ Perform the following operations:

[Send via mail]

Create i-mode mail with the melody in playback attached. Go to Step 2 in "Creating and Sending i-mode Mail" (P131).

[Set as]

Set the file in playback as a ring tone.

Voice ringtone : Set as a ring tone for a voice call.

Video ringtone : Set as a ring tone for a video call.

Mail tone : Set as a ring tone for mail.

Message R tone : Set as a ring tone for Message R.

Message F tone : Set as a ring tone for Message F.

SMS : Set as a ring tone for SMS.

Alarm tone : Set as an alarm tone.

[Mute]

Mute or un-mute the sound.

[File property]

Display the file name, size and type, etc. of the melody in playback.→ P257

Note

- While the sub menu is accessed, the melody playback is paused.

Viewing Melody Information

- 1 Melody file list screen (P254)/Melody playback screen (P254) ►  [Menu] ► "File property"
·  [Edit]: Edit properties.

■ Available File Formats

Item	Description
File name	Display the file name
File size	Display the file size
File type	Display the file format
Date & Time (Saved)	Display the saved date and time
Play time	Display the file playback duration
Display size	Display the resolution
Audio	Display the sound format
File restriction	Display whether the file is restricted → P244
Ringtone	Display whether the file can be set as a ring tone
Title	Display the default title of the file
Source	Display the source

Using Infrared Communication

You can exchange Phonebook entries, Schedule events or Bookmarks with a device equipped with infrared communication capabilities.

■ Available Data for Transfer

Data type	Receiving capability		Sending capability		Number of pieces to be stored
	One item	All items	One item	All items	
Phonebook entries (Personal info)	○	○	○	○	See P80
Schedule events	○	○	○	○	Up to 200
To Do*1	○	○	○	○	Up to 50
Received mail	○	○	○	○	Up to 1000
Sent mail	○	○	○	○	Up to 500
Unsent mail	○	○	○	○	
Image files*2	○	×	○	×	Up to 1000
Videos*2	○	×	○	×	Up to 1000
Melodies*3	○	×	○	×	Up to 1000
Bookmarks*4	○	○	○	○	Up to 100
Memo	○	○	○	○	Up to 50

*1 Received To Do tasks with the alarm set prior to the set time may not be correctly saved.

*2 Up to 2 MB of data per file can be sent or received.

*3 Up to 100 KB of data per file can be sent or received.

*4 Received Bookmarks may not be filtered depending on the other party's terminal model.

■ Saving destination of data received via Infrared

Data type	Storage Location
Phonebook entries	Phonebook entries
Schedule events	Schedule events
To Do	To do list
Received mail	Inbox
Sent mail	Outbox
Unsent mail	Unsent message
Still images	The "Data transfer" folder in "My picture" in the "Data box"
Movies	The "Data transfer" folder in "i-motion" in the "Data box"
Melodies	The "Data transfer" folder in "Melody" in the "Data box"
Bookmarks	The "Bookmark" folder
Memo	Memo

Performing Infrared Communication

- Use infrared devices within a distance of approximately 20 cm.
- Do not move the FOMA terminal until the data exchange completes.
- If you hold the FOMA terminal in your hand, be sure to hold it securely, so that it does not shake.

Cautions on Data Transfer

- Calls, i-mode, and data transfer are not available during infrared communication because the terminal is in the same status as out of service area.
- Data may not be transferred depending on the other party's FOMA terminal conditions. Depending on the other party's terminal model, the filter setting of received mail or Bookmarks, or category setting of Phonebook entries may not be reflected, or the content of Deco-mail may not be saved correctly.
- Infrared communication between the L-06A terminal and a non-FOMA device may result in data not being received or displayed correctly.
- Communication may take a while depending on the amount of data to be transferred. Also, the data may not be received.
- Communications may not be performed successfully under direct sunlight, directly under a fluorescent light, or near another infrared device, due to possible interference.
- Attachments to i-mode mail are also forwarded. However, some types of attachments may not be forwarded.

- When a message text contains pictographs (E-Moji) or symbols, they may not be displayed correctly on a recipient terminal or PC that is not capable of displaying them.
- Depending the type of the receiving device, all subjects of mail may not be received.
- Infrared communication is not available when Lock all, Data access lock is set, or when Self mode is activated.
- Large size mail may not be sent correctly.
- Only downloaded attachments are forwarded when mail is forwarded.



Send IrDA/Receive Ir Data

Exchanging Data One Piece at a Time

Sending Data One Piece at a Time

- Set the receiving device to infrared receiving mode before sending data.

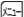

Example: Sending one Phonebook entry

- 1 Stand-by display ►  Move the cursor to a Phonebook & Logs entry ►  [Menu] ► "Send Ir data" ► "Focused data" ► "Yes"

Note

- A warning appears if the destination cannot be found. Verify the distance and angle with the other party.

Receiving Data One Piece at a Time

- 1  [Menu] ►  (LifeKit) ► "Receive Ir data" ► "Receive" ► "Yes"
- 2 Perform infrared transmission operations on the sending device
Start infrared communication.
- 3 "Yes"

Send All via IrDA/Receive All IrDA

Receiving or Sending All Data

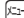
You can exchange all data in a batch with a PC or another FOMA terminal.

- To exchange all data, a session code is used to identify the sender and receiver correctly. The session code is any 4- digit number and should be entered both in the sending and receiving devices before sending/receiving data.

Sending All Data

- Set the receiving device to the infrared receiving mode before sending data.

Example: Sending all Phonebook entries on the FOMA terminal

- 1 Stand-by display ►  ►  [Menu] ► "Send Ir data" ► "all in phone"

- If a Phonebook entry has an image set, a warning indicating that it may take a while to send is displayed. Select "Yes" to send.

2 Enter the security code ► Enter the session code ► "Yes"
Start infrared communication.

Note

- A warning appears if the destination cannot be found. Verify the distance and angle with the other party.
- Files in "My picture", "i-motion" and "Melody" cannot be sent as a batch (one file can be sent at a time).

Receiving All Data

- Receiving all data overwrites the data on the FOMA terminal and deletes all saved data including protected mail. Verify that important data has been saved elsewhere before sending or receiving all data.

1  [Menu] ►  (LifeKit) ► "Receive Ir data" ► "Receive all"
► "Yes"

2 Enter the Security code ► Enter the session code

3 Perform infrared transmission operations on the sending device
Start infrared communication.

4 "Yes"

Convenient Functions

Multi-access	Multi-Access	262
Multitasking	Multitasking	263
Using One Touch Keys	One touch key	265
Sounding an Alarm at Set Times	Alarm	267
Managing Schedule Events	Schedule events	269
Managing To Do Tasks	To Do list	273
Managing Anniversaries	Remembering dates	276
Quick Access to Frequently Used Functions	Custom Menu	278
Registering Your Name and Image ..	Own number	279
Checking Call Duration/Call Cost		280
Setting a Call Cost Limit	Set call cost limit	281
Using the World Time	World time	282
Using the Stopwatch	Stopwatch	283
Using the Unit Converter	Unit converter	283
Using the Calculator	Calculator	286
Using Memos	Memo	287
Talking Using the Flat-plug Earphone/microphone with Switch		288
Automatically Answering a Call Connecting the Flat-plug Earphone/microphone with Switch	Auto Answer	290
Chiming the Hour	Hour indication	290
Checking Memory Usage	Memory status	291

Multi-access

Multi-access is a function that allows the use of three lines (voice call, packet communication, and SMS) concurrently.

Communication Type	Available Lines
Voice call	1 line
Packet communication including i-mode, i-αppli, i-mode mail, and PC connections	1 line
SMS	1 line

Note

- Combinations of Lines.
- During Multi-access, communication charges apply for each connected line.
- During a video call, Multi-access is disabled except for incoming SMS.

Making a Voice Call during Packet Communication

By invoking the New task (P263) screen, a voice call can be made during packet communication such as i-mode.

Example: Making a voice call during i-mode operation

- 1 i-mode screen(P175)▶  (1+seconds)▶ "Dialing"
Main menu appears.

- 2 Enter a phone number ▶ 

Note

- To return to the i-mode screen from the Voice call screen press N and select "i-mode".

Receiving a Voice Call during Packet Communication


A voice call can be received during packet communication such as i-mode.

Example: Receiving a voice call during i-mode operation

- 1 A call arrives
The Incoming call screen opens.

- 2 

Note

- To return to the i-mode screen from the Voice call screen press  and select "i-mode".

Using Other Communications during a Voice Call

During a voice call, you can perform operations such as sending/receiving mail or connecting to i-mode.

Sending Mail

1 Voice call screen ► (1+ seconds) ► "Mail"

2 Create and send mail

Note

· Creating and sending mail →P131、P168

Receiving Mail

An icon (P35) to notify of incoming mail appears at the top of the screen.



Voice call screen

Connecting to i-mode

1 Voice call screen ► (1+ seconds) ► "i-mode" ► "iMenu"

Note

· To return to the Voice call screen, press ► Select "Yes"

Multitasking

Multitasking

This FOMA terminal provides multitasking that allows you to start and operate multiple applications concurrently.

Task manager

Launching a New Function

To launch a new function while another function is running, open the New task screen (Task manager).

1 While using an application ► (for 1+ seconds)
· Unavailable functions are grayed out.



New task Screen

2 Select an application to start
· Available applications vary depending on the currently running application and its operating status.

[Dialing]

The Phone number entry screen opens. →P52

[Mail]

The Mail menu screen opens. →P130

[i-mode]

The i-mode menu screen opens. →P174

[Appli]

The Software list screen opens.→P223

[Search phonebook]

The Search phonebook screen opens.→P87

[Photo-mode]

The Still image capture screen opens.→P200

[Schedule]

The Month view calendar screen opens.→P269

[To do list]

The To do list screen opens.→P273

[Memo]

The Memo list screen opens.→P287

[Calculator]

The Calculator screen opens.→P286

[Own number]


The Own number screen opens.→P50

Note

· Combinations of Applications →P359

Switching/Viewing Applications


To switch or view applications, open the Task list screen.

- 1 While using an application  Select New task on the Task list screen to open the New task screen that allows you to launch another application.



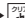

The running applications
are listed

Task list
Screen

- 2 Use  to select an application
The screen for the selected application will be displayed.

Terminating an Application

Close the currently displayed application and open the previously displayed application.


- 1 While using an application   To close an application, make it current application first.
· Repeat these steps to close other applications.

Using One Touch Key



A phone number and a mail address can be assigned to **I** / **II** / **III** One Touch Keys. You can view the phone number and the mail address with a single keystroke.

A frequently used function can be assigned to **My** a One touch hot key. You can access the function with a single keystroke.

Registering a Phone Number and Mail Address to a One Touch Key

- 1  [Menu] ►  (LifeKit) ► "One Touch Key"
 ·  [Delete]: Delete the content of the selected key.



- 2 Move the cursor to the number of a One Touch Key (1-3) ►  [Register] ► Perform the following operations
 · If you select an already used number, press  [Change].


[Search phonebook]

Set up a number using a Phonebook entry.

- When selecting a Phonebook entry with multiple mail addresses saved, you need to further specify which addresses are to be registered to the key.

[Direct input]

Enter a name, phone number, and mail address.

- Select a field ► Enter the Name/Phone number/Mail address
 ►  [Done]

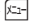
[Cancel]

Cancel registering.

Note

<Register direct>

- A phone number and a mail address assigned to One touch hot keys is not saved in the Phonebook.

- 1** One Touch Key list screen (P265) ▶  [Menu] ▶
Perform the following operations

[Copy from Phonebook]

Set up a number using a Phonebook entry.

Selected slot : Register the Phonebook entry of the Memory number from 000 to 002 based on the selected One Touch Key number (1-3).

All (1-3) : Register the Phonebook entries of the Memory numbers from 000 to 002 to One Touch Key  /  / .

[Register direct input]

Enter a name, phone number, and mail address for the selected One Touch Key.

▶ **Select a field** ▶ **Enter the Name/Phone number/Mail address**
▶  [Done]

[Delete]

Delete the content of the selected One Touch Key.

Note

<Register direct>

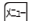
- A phone number and a mail address assigned to One touch keys is not saved in the Phonebook.

Making a Call/Composing Mail Using One Touch Key

- 1** Stand-by screen  /  / 
The content of the One Touch Key appears.

- 2** **To make a call**
 or  [Call]

- To compose mail**
 or  [Mail]

- Using sub menu**
 [Menu] ▶ Perform the following operations:

- [Video call]**
Make a video call.

- [Compose mail]**
Compose i-mode mail.→P131

- [Compose SMS]**
Compose an SMS message.→P168

- [Change]**
Change the contents of the One Touch Key.

- [Int. call (Japan)]**
When you make a call from overseas to a phone number in Japan saved in the Phonebook, the Country code for Japan "+81" is added automatically at the beginning of the phone number.
· If the phone number has a leading "0", it is automatically deleted.

Note

- You can also make a call by pressing **I** / **II** / **III** for 1+ seconds in Stand-by. During International roaming, a message appears and you can select "International call", "Normal call", or "Cancel".

Assigning a Frequently Used Function to One Touch

- 1 **[Menu]** ▶ **[LifeKit]** ▶ "One Touch Key" ▶ Move the cursor to "My One Touch Key" ▶ **[Register]**
A list of functions that can be assigned to One Touch Key appears.
- 2 Select an item ▶ Select a function

Accessing a Function Using a One Touch Key

- 1 Stand-by display ▶ **My**

Note

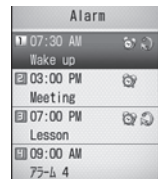 
- You can also select a function to access from My One Touch key menu that appears when **My** is pressed for 1+ seconds in Stand-by (items in My menu cannot be changed).

Alarm

Sounding an Alarm at Set Times



The FOMA terminal can be used as an alarm clock. Up to 10 alarms can be registered.

- 1 **[Menu]** ▶ **[Stationery]** ▶ "Alarm"
· Press **[OK]** to set the selected alarm "On"/ "Off".



Alarm list screen

- Icons displayed on the Alarm list screen

Icon	Description
	Alarm set to "ON".
	Alarm with "Set repeat" set.

2 Move the cursor to an alarm to be edited ▶ [Edit]

3 Perform the following operations:

- [List]: List of the options for the selected item is displayed.

[(ON/OFF list)]

Set whether to enable the alarm.

[(Set time)]

Set the time for the alarm to sound.

[(Set repeat)]

Select a repetition type.

- If you select "Daily except holiday", the alarm does not sound on Sundays and holidays set in "Set holiday" (P272).

If "Weekdays" is selected, perform the following steps to specify the days of the week for the alarm to start:

▶ ▶ [List] on "Su Mo Tu We Th Fr Sa" field ▶ Place check marks next to days of the week ▶ [Done]

[(Alarm tone)]

Select an alarm tone.

Music : Select from Chaku-Uta-Full® songs saved in "Music" in the "Data box".→P217

Go to Step 3 (P214) in "Setting a Chaku-Uta-Full® Song as a Ring Tone".

i-motion : Select from videos/i-motion movies saved in "i-motion" in the "Data box".→P249

Melody : Select from melodies saved in "Melody" in the "Data box".→P254

[(Memo)]

Up to 7 full-pitch or 15 half-pitch characters can be entered. The entered text is displayed on the Alarm screen after the alarm starts.

[(Turbo alarm)]

Set whether to enable the Turbo Alarm that increases its volume levels up to the maximum volume and vibrates the terminal.

[(Snooze)]

Select an interval between snooze tones. To deactivate Snooze, select "OFF".

4 [Done]

Sub Menu on the Alarm List Screen

1 Alarm list screen (P267) ▶ [Menu] ▶ Perform the following operations

[Edit]

Edit the selected alarm.→P267

[Turn On/Turn Off]

Set the selected alarm "ON"/"OFF".

[Multiple choice]

Select alarms and set whether to enable the alarms.

▶ Place check marks next to the alarms ▶ [Menu] ▶ "On"/"Off"

- You can also select "Mark/Unmark" ▶ "Mark all", "Mark" *, "Unmark" *, or "Unmark all" by pressing [Menu].

* : Either one appears depending on the alarm status.

When the alarms for "Alarm" and "Schedule"/"To Do" reach the specified time

The following actions are performed by function.

Alarm

The alarm screen appears, the alarm tone sounds and the illumination lights.

- To stop the alarm, press [OFF]. Unless you stop the alarm, the alarm tone repetitively rings 12 times at 5 minute intervals, then stops.
- You can press [Snooze] to temporarily stop the alarm with its (Snooze) activated. When the snooze interval time is up, the alarm starts ringing again.
- While the alarm tone is ringing with (snooze setting) activated, the alarm counter will be reset right after you press [Snooze], then the alarm will starts ringing over from scratch.

Schedule events

The schedule alarm screen appears, the alarm tone sounds and the illumination lights.

- To stop the alarm, press [OK] and then [OFF] on the Schedule detail screen.
- To sound the alarm tone again, select [Snooze] ▶ Select a snooze interval.
- If the alarm for Schedule is not stopped, the alarm tone sounds again in about 5 minutes regardless of the setting of the snooze interval time.

To Do

The To Do alarm screen appears, the alarm tone sounds and the illumination lights.

- To stop the alarm, press [OK] and then [OFF] on the To Do detail screen.

When the alarm for Alarm, Schedule and To Do are set to the same time

The priority order for the alarm is Alarm → Schedule alarm → To Do alarm.

When Public mode (Drive mode) is set

Alarm will not sound.

- Alarm will be notified at the set time after the following day.
- Alarm for a Schedule event/To do task will not be notified afterward and remains on the Stand-by display. To delete the icon, delete the relevant Schedule event/To do task or change alarm setting to "No alarm".

Schedule events

Managing Schedule Events

Registering Schedule Events

You can save a schedule event such as a meeting or appointment. Up to 200 Schedule events and up to 100 holidays can be saved.

- 1 [Menu] ▶ (Stationery) ▶ "Schedule" ▶ Move the cursor to the day to be saved in Schedule ▶ [New] ▶ Perform the following operations
 - [List]: List of the options for the selected item is displayed.
 - When the cursor is in the time setting field, you can stop creating a schedule event by selecting [Cancel] ▶ "Yes".

[📅 (Start Date)]

Specify the date to start the Schedule event. To enter a date, use to move the cursor to the position and enter a number with dial keys. Press [List] to select the day from a calendar.

[📅 (End Date)]

Specify the date to complete the Schedule event. To enter a date, use to move the cursor to the position and enter a number with dial keys. Press [List] to select the day from a calendar.

· The end date cannot be set earlier than the start date.

[⌚ (Set time)]

Specify the times to start/end the Schedule event.

All day : Save the schedule event for a whole day without specifying time.

Set time : After setting, use to move the cursor and enter the start and end time of the schedule event. Use to move the cursor to the position and enter the time with dial keys and switch between "AM" and "PM" with (pressing in the time field opens the Time settings screen that allows you to enter time with dial keys and).

· The end time cannot be set earlier than the start time.

· Depending on the settings in "Date&Time format" (P111), the display format or order of the date and time may differ.

[🏷️ (Category)]

Select a category for the Schedule event. Icons vary depending on the selected category.

[📄 (Subject)]

Up to 200 full-pitch or 400 half-pitch characters can be entered. Up to 2 subjects are displayed at the bottom of the Monthly view screen.

A subject is required to register a Schedule event. The summary is displayed on the Alarm screen that opens when alarm starts.

[📄 (Summary)]

Up to 20 full-pitch or 40 half-pitch characters can be entered.

[🔔 (Set alarm)]

Set whether to be notified with an alarm tone of the set starting date and time.

If you select other than "No alarm", perform the following steps to select the alarm tone.

▶ ▶ [Select] on field ▶ Select a type of the alarm tone

Music : Select from Chaku-Uta-Full® songs saved in "Music" in the "Data box".→P217
Go to Step 3 (P214) in "Setting Chaku-Uta-Full® as a Ring tone".

i-motion : Select from videos/i-motion movies saved in "i-motion" in the "Data box".→P249

Melody : Select from melodies saved in "Melody" in the "Data box".→P254

[🔄 (Set repeat)]

You can set a schedule event to recur periodically. Select "Once" not to repeat. If "Weekdays" is selected, perform the following steps to specify the day of the week:

▶ ▶ [List] on "Su Mo Tu We Th Fr Sa" field ▶ Place check marks next to days of the week ▶ [Done]

[🔒 (Secret)]

This option appears when Secret mode (P121) is set to "ON". Set this option to "ON" if you save the created schedule event as secret data.

2 [Done]

Note

<Secret>

- When the "Secret mode" (P123) is set to "Secret only mode", the Schedule entry is saved as secret data.
- The secret Schedule is displayed when the "Secret mode" is set to "On" or "Secret only mode".
- At the set time of a secret Schedule event while the "Secret mode" is set to "OFF", the alarm tone sounds, however, the description of the event will not appear, and "Secret" appears on the notification screen.

Viewing Schedule Events

You can view settings of a schedule event from the Calendar screen.

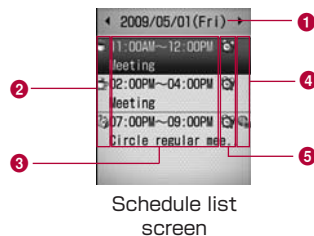 
- 1 [Menu] ▶ [Stationery] ▶ "Schedule"



- 1 The day when a schedule event is set
 - 2 A schedule event saved for the highlighted day
Up to 2 events will be displayed. Schedule events that have passed their start times will not be displayed.
- [1] / [3]: Switch the view to yearly.
 - [7] / [9] / [1] / [2]: Switch the view to monthly.
 - [5]: Return to the current date.
 - On the Monthly view, blue indicates Saturdays, and red indicates Sundays and holidays.
 - You can switch between the Monthly and Weekly view of the Calendar screen.→P272

2 Select a day to view

- [Left/Right Arrow]: Switch to the previous/next day.



- 1 Date
- 2 Icon indicating a "Category"
- 3 Start time-End time, Subject
- 4 Icon indicating a schedule event set for other than Japan time
Appears if the schedule event's "Local time zone" (P48) is set to other than "GMT+9:00" (outside of Japan).
- 5 Alarm icon
Appears when the alarm is set to sound.

3 Select the event to view

The Schedule detail screen opens.


Note

· National Holidays are based on "国民の祝日に関する法律及び老人福祉法の一部を改正する法律（平成17年法律第43号までのもの（law relating to national holidays and old-age persons' welfare, as amended (Law No. 43, 2005))". Spring Equinox Day and Autumnal Equinox Day are released in an official gazette on February 1 and may not be exact (as of March, 2009).



Switching the Calendar View

The Calendar screen can be viewed on monthly basis or weekly basis.

Perform the following steps to switch views temporarily.

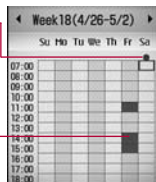 
▶ On the Calendar screen  [Menu] ▶ "Weekly view" / "Monthly view"

Perform the following steps to switch default.

▶ In calendar screen  [Menu] ▶ "Settings" ▶ default view field  [List] ▶ "Monthly view"/"Weekly view"

An "All day" schedule event is set for the day


Set time for the schedule event



Weekly view

· Use  to scroll the screen to view the hidden hours

Sub Menu on the Calendar View

1 Month view screen (P271)/Week view screen (P272)
▶  [Menu] ▶ Perform the following operations:

[Add new]

Register a new Schedule event.→P269

[Set holiday]

Set or release a selected day as a holiday.

To set a day as a holiday, select "Set holiday" ▶ select an option from the following ▶ enter a "Holiday name" ▶  [Done].

On the day : Set the highlighted day as a holiday.

Weekly : Set the day of the week of the highlighted day as a weekly holiday.

Monthly : Set the date of the highlighted day as a monthly holiday.

Annually : Set the date of the highlighted day as an annual holiday.


Duration(2-31) : Set a period from 2 to 31 days as holidays from the highlighted day. Enter the number of days in the "Duration (2-31)" field.

· To cancel holidays, select "Clear holiday" ▶ "Yes". Select "Yes" on the Confirmation of deletion of repeat screen for a holiday set as "Weekly", "Monthly", "Annually", or "Duration (2-31)".

[Week view/Month view]

Switch the view by week or by month.→P271

[Go to date]

The Calendar for the specified day appears. Use  to move the cursor to the position in the "Go to date" field, and enter the date and time with dial keys.

[Delete]

Register a new Schedule event.→P269

Previous entries : Delete all events scheduled prior to today.

All entries : Delete all Schedule events.

[Send all via IrDA]

Send all Schedule events via IrDA.→P259

[Memory info.]

Schedule events and holidays status will be displayed.

- If "Secret mode" is set to "ON" or "Secret data only mode", the number of pieces of secret data is shown in "Secret".

[Reset holiday]

Restores the default holiday set in "Set holiday".

[Settings]


Configure how the Calendar screen will be displayed.

Default view : Configure the display format of the Calendar screen when launching Schedule.

Monthly view type : Select a starting day of the week from Sunday or Monday.

Weekly start time : Configure the starting time displayed in the Week view.

Sub Menu on the Schedule List Screen/Detail Screen

- 1 Schedule list screen (P271)/Detail screen ▶ 
[Menu] ▶ Perform the following operations:

[Add new]

Register a new Schedule event.→P269

[Send via]¹

Send the selected schedule events as an i-mode mail attachment or via Infrared communication.

[Edit]¹


Edit the selected Schedule event.→P269

[Multiple choice]²


You can select and delete scheduled events set to the selected day.

▶ Place check marks next to the schedule events to delete

▶  [Delete] ▶ "Yes"

- You can select "Mark all" or "Unmark all" from "Delete" or "Mark/Unmark" by pressing  [Menu].

[Go to date]²

The Calendar for the specified day appears. Use  to move the cursor to the position in the "Enter date you want to go to" field, and enter the date and time with dial keys.

[Delete]

Delete the selected schedule event and holiday.

*1 Not available when you are using the default or "Set holiday" configuration.

*2 Not displayed on the Schedule detail screen.

To Do list

Managing To Do Tasks

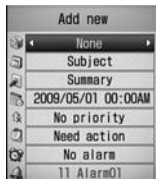 
Registering To Do Tasks

Up to 50 To Do tasks can be entered.

1 [Menu] ▶ (Stationery) ▶ "To do list" ▶ [New]

▶ Perform the following operations:

- [List]: List of the options for the selected item is displayed.
- When the cursor is in the due date setting field, you can stop creating a To Do task by selecting [Cancel] ▶ "Yes".



New Memo
Creation Screen

[Category]

Select the category of the To Do task. Icons vary depending on the selected category.

[Subject]

Up to 200 full-pitch or 400 half-pitch characters can be entered. The subject is displayed on the To Do list screen. A Subject is required to register a To Do task. The summary is displayed on the Alarm screen that opens when the alarm starts.

[Summary]

Up to 20 full-pitch or 40 half-pitch characters can be entered.

[Due date]

Set the due date of the To Do task. To set the date, use [] to move the cursor to the place to change the date and enter the date with the dial keys (to set the date on the calendar screen, press [Select] in the date entry field). Operations on the calendar screen → P271

To set the time, use [] to move the cursor to the value to change, enter the time with dial keys, and switch between "AM" and "PM" with [] (pressing [] in the time entry field opens the time settings screen on which you can enter a time using dial keys and []).

• Depending on the settings in "Date&Time format", the display order or format for the date and time may differ. → P111

[Priority]

Select a priority of the To Do task. Icons vary depending on the selected priority.

[Status]

Select a status of the To Do task. Icons vary depending on the selected status.

• When "Completed" is selected, the due date and the subject will be crossed out, and the task appears after To Do tasks with status other than "Completed" on the To Do list screen.

[Set alarm]

Set whether to be notified with an alarm tone at the set due date and time.

If you select other than "No alarm", perform the following steps to select the alarm tone.

[] ▶ [Select] on [field] ▶ Select a type of the alarm tone

Music : Select from Chaku-Uta-Full® songs saved in "Music" in the "Data box". → P217
Go to Step 3 (P214) in "Setting a Chaku-Uta-Full® Song as a Ring Tone".

i-motion : Select from videos/i-motion movies saved in "imotion" in the "Data box". → P249

Melody : Select from melodies saved in "Melody" in the "Data box". → P254

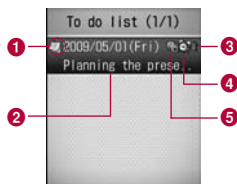 
2 [Done]

Viewing To Do Tasks

You can list and view registered To Do tasks.

1 [Menu]▶ [Stationery]▶ "To Do list"

- Saved To Do tasks are listed in the order of HighlowNo Priority. When two or more To Do tasks have the same level of Priority, the task with earlier due date is listed first. When To Do tasks have same due date, the one with earliest registered date is listed first.
- For To Do tasks with "Status" set to "Completed", the due date and the subject are crossed out and the task appears after To Do tasks with status other than "Completed".



To Do List Screen

- 1 Icon indicating a "Status"
- 2 Due date and subject
- 3 Priority
↑ / ↓ / × "High"/"Low"/"No priority"
- 4 To Do task with the alarm set
- 5 Icon indicating a To Do task set for other than Japan time
Appears if this To Do task was registered while the terminal "Local time zone" (P49) is set to other than "GMT+9:00".

- 2 Select a To Do task to view
The To Do detail screen opens.

Sub Menu on the To Do List/Detail Screen

- 1 To do list screen (P275) or To Do detail screen ▶ [Menu] ▶ Perform the following operations:

[Add new]

Create a new To Do entry.→P274

[Send via]

Send the selected To Do tasks as i-mode mail attachment or via Infrared communication.

[Edit]

Edit the selected To Do task.→P274

[Change status]

Change the "Status" of the selected To Do task.→P274

[Multiple choice]*

You can select and delete To do tasks.

- ▶ Place check marks next to To do tasks to delete ▶ [delete] ▶ "Yes"

- You can also select "Mark all" or "Unmark all" from "Mark/Unmark" by pressing [Menu].

[Delete]

Delete the selected To Do task.

[View calendar]

Display the current date of the calendar.

* This does not appear on the To Do detail screen.

Managing Anniversaries

You can display the number of days until an important event on the Stand-by screen or find the number of days quickly by using the Date counter and Date search.

Date counter

Registering in Date Counter

Up to 30 important events can be tracked for remaining days.

- 1 [Menu] ► [Stationery] ► "Remembering dates" ► "Date counter" ► [Add] ► Performs the following operations:



Date Counter
Registration
Screen

[Date]

Specify the date of an event. To enter a date, use [] to move the cursor to the position and enter a number with dial keys.

[Memo]

Up to 40 full-pitch or 80 half-pitch characters can be entered. The memo is displayed on the Date counter list screen. You cannot save events to the Date Counter without a memo.

[Category]

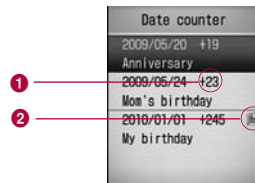 
Select the event category. Icons vary depending on the selected category. Press [List] to select a category and icon from the icon list screen.

- 2 [Done]

Checking the Number of Days Remaining Using the Date Counter

You can find the number of days remaining until the saved event.

- 1 [Menu] ► [Stationery] ► "Remembering dates" ► "Date counter"



Date Counter
List Screen

- 1 Counter display
Display with - : Show the elapsed days from the set date to today.
Display with + : Show the remaining days from today to the set date.
- 2 Icon to display on the Stand-by display
An event that is to be displayed on the Stand-by screen.

- 2** Select an event to find the days
The Event detail screen opens.

To display the remaining days on the Stand-by display

You can select one of the registered events and show the days remaining until that event on the Stand-by display. Perform the following steps from the "Date counter" screen to display the remaining days:

- ▶ Move the cursor to the event ▶
[Menu] ▶ "Display on stand-by screen"



Category and remaining days for an event

Sub Menu on the Date Counter List/Detail Screen

- 1** Date counter list (P276)/detail screen ▶ [Menu] ▶
Perform the following operations:

[Add new]

Save a new event.→P276

[Edit]

Edit the selected event.→P276

[Display day on stand-by screen/Cancel displaying]*

Specify whether to show the Date counter for the selected event on the Stand-by display.

[Multiple Choice]*

You can select and delete events.

- ▶ Place check marks next to events to delete▶ [delete]
▶ "Yes"

· You can also select "Mark*", "Mark all*", "Unmark*", "Unmark all*" from "Delete" or "Mark/Unmark" by pressing [Menu].

* Items displayed vary depending on the status of an event.

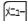


[Delete]

Delete the selected event.


* This does not appear the Detail screen.

Using Date Search

You can find the date when the designated days passed after the starting date. For example, you can easily find the date 100 days after today. You can check out the date up to 9999 days after today.

- 1  [Menu] ►  (Stationary) ► "Remembering dates" ► "Date search" ► Perform the following operations:
 -  [Reset]: Reset the set value.

[From]

Specify the date to start searching. Use  and dial keys to enter the date.

[After]

Enter the number of days after the starting date using dial key. For example, to find the date 100 days after "From", enter "100".

[Result]

Show the date when the designated days passed.

Custom Menu

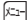

Quick Access to Frequently Used Functions

You can quickly access frequently used functions by saving them to the Custom menu.

Creating the Custom Menu

You can save up to 10 frequently used functions to the Custom menu. You can also change the default functions.

Example: To register a function to an unused custom menu number [Menu 8]

- 1  [Menu] (for 1+ seconds) ► Move the cursor to "Menu 8" ►  [Add]

The "Add new" screen opens.

■ To change the assigned function




Select the function ► Press  [Edit]

- 2 Select a function

The selected function will be registered to the Custom menu number.

· A currently registered function cannot be registered again.

Using the Custom Menu

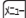
- 1 The Stand-by screen ►  [Menu] (for 1+ seconds)
 - You can also perform the following steps:
 -  [Menu] ►  [Custom]



Custom menu screen

- 2 Select a function to access

Sub Menu on the Custom Menu Screen

- 1 Custom menu screen (P278) ►  [Menu] ► Perform the following operations:

[Add new]¹

Select and register a function selected from the list.→P278

[Open]²

Start the selected function.

[Edit]²

Change the registered function.

[Delete]²

Delete the selected function.

[Delete all]

Delete all registered functions.




*1 This appears when an unused menu number is selected.

*2 This appears when a registered function is selected.

Own number

Registering Your Name and Image

You can store your personal information in the FOMA terminal.

- 1  [Menu] ►  (Own number) ►  [Detail] ► Enter the security code

The Own number detail screen opens.

- 2  [Menu] ► "Edit"

The Edit own number screen opens.

- 3 Enter the information ►  [Done]

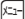
For steps to register, see Step 2 in "Saving FOMA Terminal Phonebook (Phone) Contacts" (P80). You cannot set secret data.

- The pre-installed own number cannot be changed or deleted.

Note

- If you change a mail address using i-mode, the address saved to this function will not be updated automatically.

Sub Menu on the Own Number Detail Screen

- 1 Own number detail screen ►  [Menu] ► Perform the following operations:

[Mail/URL]

Create mail using the saved mail address, or connect to a site to the saved URL.

- Compose mail** : Create i-mode mail addressed to other than own number or own mail address.
- Attach to mail** : Create i-mode mail with Own number information attached.
- Compose SMS** : Create an SMS message addressed to other than own number.
- Connect to URL** : Connect to the saved URL.

[Edit]

You can edit items on the Own number detail screen.→P279

[Send Ir data]

Send the information on the Own number detail screen via infrared communication.→P260

[Copy item]

You can copy the contents of saved items on the Own number detail screen.

[Customize call]

Change the saved number other than own number, and make a call to the new number. Use C [Save] to save the phone number to the Phonebook.

[Reset]

Delete all registered personal information.

Checking Call Duration/Call Cost

You can check the last and accumulated call duration and costs of voice and video calls.

- Voice call duration and digital communication duration (video call duration) are displayed for Call duration. Call duration includes both incoming and outgoing calls.
- Call cost includes only outgoing calls. However, calls made to toll free numbers or the information number (104) have "0 YEN" or "** YEN" displayed.

- Call costs are stored in the UIM. When a different UIM is used, the stored call costs appear (storing started in December, 2004).
- The displayed call duration and call cost can be reset.
- The displayed call duration and cost are approximate values and may be different from actual ones. Note that call cost does not include the consumption tax.

Note

- The call duration/cost for i-mode communication and packet communication is not included. For checking i-mode usage charges, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Call duration

Checking Call Duration

You can check the duration of the previous and accumulated duration of voice and video calls.

1  [Menu] ►  (Phonebook & Logs) ► "Call duration"

[Last voice Call]

Display the duration of the latest voice call.

[Last video Call]

Display the duration of the latest video call.

[Total voice Call]

Display the total duration of voice calls from the last reset until now.


[Total video Call]

Display the total duration of video calls from the last reset until now.

Note

- The displayed Call duration returns to 0 (zero) seconds and starts counting when the duration exceeds 99hours, 59minutes and 59seconds.
- The ringing and dialing durations are not counted.

To reset individual items for "Call duration" settings

Move the cursor to the item to reset ►  [Reset] ► Enter the security code ► Select "Yes".

To reset all items for "Call duration" settings



You can reset all items at one time.

►  [Menu] ► "Reset all" ► Enter the security code ► "Yes"

Call costs

Checking Call Costs

Call cost includes only outgoing calls.

- 1  [Menu] ►  (Phonebook & Logs) ► "Call costs" ► Check call costs

[Last voice call cost]

Display the previous voice call cost.

[Last video call cost]

Display the previous video call cost.

[Total calls cost]

Display the total cost of calls from the last reset until now.

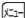


[Reset date & time]

Display the last reset date and time.

Note

- International call costs of WORLD CALL are counted. Call costs to use other international telephone services are not counted.

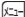
Resetting Total Call Costs

- 1  [Menu] ►  (Phonebook & Logs) ► "Call costs" ► Check call costs
- 2  [Reset] ► Enter the PIN2 code ► "Yes"

Set call cost limit

Setting a Call Cost Limit

Set the limit of total call cost as threshold so that you will be notified when the cost reached the limit.

- 1  [Menu] ► (Phonebook & Logs) ► "Call costs" ► "Set call cost limit"
- 2 Enter the security code ► Perform the following operations:

[Set limit]

Set whether to limit total call costs.

[Call cost limit]

Set the limit of the total call cost.

[Notification]


Select how to indicate that the total call cost has reached its limit.

OFF : You will not be notified.

Sound+Icon : You will be notified with the call cost icon + the call cost tone.

Icon : You will be notified with the call cost icon.

If the limit is exceeded

The call cost icon  appears on the Stand-by display. When you set "Set call cost limit" to "Sound+Icon", the call cost tone sounds after the call that reached the limit.



To hide the Call cost icon

▶  [Menu] ▶  (Phonebook & Logs) ▶ "Call costs" ▶ "Delete call cost icon"

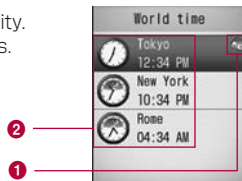
World time

Using the World Time

You can view the date and time in major cities around the world stored in the FOMA terminal.

1  [Menu] ▶  (Stationery) ▶ "World time"

-  [Change]: Change the selected city. The World time setting screen opens.



World time list screen




1 Home icon

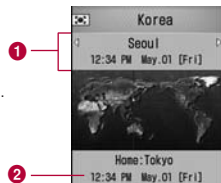
Indicates the city set as Home.

* The home city set in the World time is linked with the city set in "Local time zone" in "Set Date&Time"(P48). Changing the city in one setting changes the other city automatically. Therefore, you cannot change the Home city if "Auto time set" in "Set Date&Time" is set to "ON".

2 The currently specified city and time


2 [Add]

-  [List]: Open the list of cities and select a city. Press  [Prev.] or  [Next.] to switch the city name list by page.

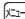


World time setting screen

- 1** The currently selected city name, date, and time
- 2** Date and time of Home (own country)

- 3** Press  to select a city to add
The selected city is added to the World time list screen.

Sub Menu of the World Time List Screen

- 1** World time list screen (P282) ►  [Menu] ► Perform the following operations:

[Change home City]^{*1}

Change the city set as Home.

[Change City]^{*2}

Change the selected city.

[Daylight Saving]^{*1}

Set whether to use Daylight savings time.

[Analog Clock On/Analog Clock Off]

Set whether to display the analog clock on the World time list screen.

[Delete]^{*2}

Delete the selected city.

[Delete all]^{*2}

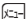




Delete all cities except the Home city.

- *1 This option is not available when "Auto time set" is set to "ON".
*2 This option is not displayed when the home city is selected.

Stopwatch

Using the Stopwatch

You can use the FOMA terminal as a stopwatch.

- 1**  [Menu] ►  (LifeKit) ► "Stopwatch"
-  [Start]/[Stop] : Start or stop counting.
 -  [Reset]: Reset the counted result.
 -  [Lap]: Displayed during the counting Each press of this key displays the lap time at that moment at the bottom of the screen.

Unit converter

Using the Unit Converter



You can convert the units for measuring currency, area, length, weight, temperature, volume, or speed.

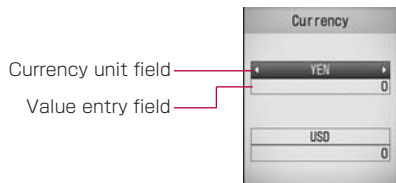
Converting Currency Units

This option is useful in occasions such as exchanging from yen to dollars.

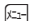
Setting the Exchange Rate

Before converting, set the exchange rate.


- 1  [Menu] ►  (Stationery) ► "Unit converter" ► "Currency"



Currency exchange screen

- 2 Select the currency unit field ►  [Rate]
 - "YEN", "USD", "Euro", and "Currency 1-3" are registered by default.
- 3 Perform the following operations:



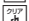
[(Currency name field)]

Press  [Select] to change the currency. Up to 10 full-pitch or 20 half-pitch characters can be entered.

- "YEN" in the top row cannot be changed.

[(Exchange rate field)]


Set the exchange rate. Up to 10 digits (including the decimal point) can be entered. Up to 2 digits can be entered after the decimal point. For example, to exchange between US dollars and yen (example: one US dollar is 120 yen), set 120 to "YEN" and 1 to "USD".

-  [.] /  [#]: Enter the decimal point.
-  [DEL]: Delete from the last entered digit.

- 4  [Done]

Convert Currencies

Convert the one currency to another based on the rates set for those 2 currencies.

- 1 Select two currencies from the Currency unit field in the Currency exchange screen (P284)
 -  [List]: The Currency list screen opens.
- 2 Enter the amount in the value entry field of the source currency

The converted amount will be displayed in the other value entry field. You can enter/convert in either value entry field.

 - Up to 10 digits (including the decimal point) can be entered. However, if the converted value exceeds 14 digits (including the decimal point) or 2,147,483.647, no more digits can be entered.
 - If the currency in the Currency unit field is changed after the amount was entered, the new amount will be displayed in the lower value entry field using the amount in the upper value entry field as the source.

- #: Enter the decimal point.
- $\frac{\Delta}{\text{del}}$: Delete from the last entered digit.
- [Reset]: Delete all entered numbers.

Converting Area Units

Convert one defined area unit to another type of defined area unit.

- 1 [Menu] ► (Stationery) ► "Unit converter" ► "Surface"
- 2 Select a unit in the Surface unit field (two places)
 - [Unit]: The unit list screen opens.
- 3 Enter the value in the value entry field of the source surface

The converted value will be displayed in the other value entry field. You can enter/convert in either value entry field.

 - The description of the values is the same as for the Currency conversion screen. → P284

Converting Temperature Units

You can convert temperature between Fahrenheit (°F) and centigrade (°C).

- 1 [Menu] ► (Stationery) ► "Unit converter" ► "Temperature" ► Enter the temperature either in "Celsius" or "Fahrenheit"

The converted temperature will be displayed in the other value entry field. You can enter/convert in either value entry field.

 - From -40 to 309, or up to 10 digits (including-minus) and the decimal point) can be entered.
 - [-]: Enter - (minus) before the value.
 - #: Enter the decimal point.
 - $\frac{\Delta}{\text{del}}$: Delete from the last entered digit.
 - [Reset]: Delete all entered numbers.

Converting Length, Weight, Volume, and Speed

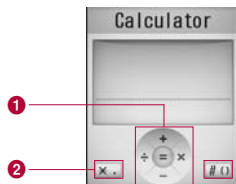
- 1 [Menu] ► (Stationery) ► "Unit converter" ► "Length"/"Weight"/ "Temperature"/"Volume"/"Velocity"

Perform the same subsequent steps as in "Converting Area Units" (P285).




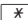

Using the Calculator

You can use the Calculator to perform arithmetic operations, and calculations with functions.

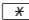
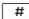
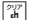

1  [Menu] ►  (Stationery) ► "Calculator"



Calculator

- 1 **Arithmetic operation** (+, −, ×, ÷ (/), =):
Use   .
- 2 **Keyboard**
Use  *, or  #.

2 Calculating

-  . : Enter the decimal point.
-  # : Enter () parentheses.
-  $\frac{\square}{\square}$: Delete from the last entered digit.
-  [AC]: Clear all entered numbers and calculated results.

Sub Menu on the Calculator Screen

1 Calculator screen (P286) ►  [Func.] ► Perform the following operations:

[+ / -]

Switch the sign (+/-) of the entered number.

[sin]

Perform the trigonometric function.

[cos]

Perform the trigonometric function.

[tan]

Perform the trigonometric function.

[log]

Calculate the logarithm of a number.

[ln]

Calculate the natural logarithm of a number.

Calculate the natural logarithm of the specified positive value (logarithm with the base of e).

[exp]

Calculate the value of a number raised to an exponential level.

[sqrt]

Calculate the square root of a number.

[deg]

Set the unit of angle to "degree".

[rad]

Set the unit of angle to "radian".

Radian expresses an angle using the constant number π (180 degrees equal π radians).

One radian (360 degrees/ 2π is approximately 57.29578 degrees; One degree ($2\pi/360$ degrees) is approximately 0.01745 radian (where $\pi=3.141592653$).

Memo

Using Memos

Creating Memos

Create and save a memo. Up to 50 memos can be saved.

- 1 [Menu] ▶ (Stationery) ▶ "Memo" ▶ [New] ▶
Perform the following operations:
 - [List]: List of items opens.

[(Category)]

Select a type (category) of Memo. Icons vary depending on the selected category.

[(Subject)]

Enter a memo. Up to 50 full-pitch or 100 half-pitch characters can be entered. A blank memo cannot be saved.

2 [Done]

Viewing Modifying a Memo

You can list and view saved memos.

1 [Menu] ▶ (Stationery) ▶ "Memo"




Memo List screen

2 Select a memo to view

The Memo detail screen opens.

- [Edit]: The new memo creation screen opens.
- [Mail]: The Compose message screen with the contents of "Category" and "Memo" already inserted in the message text opens.

- 1** Memo list screen (P287)/Detail screen ►  [Menu]
► Perform the following operations:

[Add new]

Save a new memo. → P287

[Send via]

Send the selected memo as an i-mode mail attachment or via Infrared communication. You can also send all memos via Infrared communication.

[Edit]


Edit the selected memo. → P287


[Delete]

Delete the selected memo.

[Multiple choice]*

Select and delete memos.

► Place check marks next to memos to delete ►  [delete] ► "Yes"

· You can also select "Mark all" or "Release all" from "Mark/Unmark" by pressing  [Menu].

* This is not displayed on the Detail screen.



Talking Using the Flat-plug Earphone/microphone with Switch

You can connect a flat-plug earphone/microphone with switch (optional) to the FOMA terminal to make and receive calls.

Configuring Switch Actions

Specify the phone number to call using a memory number of the Phonebook in the FOMA terminal while connecting the flat-plug earphone/microphone with switch.

- The phone number saved as "Phone number 1" in the terminal Phonebook will be specified.


1  [Menu] ►  (Settings) ► "Call/VT/ Dialing" ► "Earphone" ► Perform the following operations:

[Switch call]

Selecting "ON" allows you to make calls by pressing the switch of the flat-plug earphone/microphone with switch.

[Memory number]*

Enter the memory number of the Phonebook.

This option can be selected from the Phonebook search screen by pressing  [Search].

* Set "Switch call" to "ON" to make this setting available.

2 [Done]

Making a Call Using the Switch

Press the switch of the flat-plug earphone/microphone with switch to make a voice call to the number assigned to the memory number of the Phonebook set under the Earphone setting (P288).

- 1 Press the switch of the Flat-plug Earphone/ Microphone with Switch once
- 2 To end the call, press the switch of the flatplug earphone/microphone with switch for 1+ seconds.


Receiving a Call Using the Switch

- 1 A call arrives ► Press the switch of the flatplug earphone/microphone with switch
Answer the call.
 - When a video call arrives, the camera image is sent to the other party.
 - **To reject incoming calls without answering**
Press the switch of the flat-plug earphone/ microphone with switch for 2+ seconds.

- 2 To end the call, press the switch of the flatplug earphone/microphone with switch for 1+ seconds.

Answering a Call during a Call

If you subscribe to the Call waiting service and activated the service, when a voice call arrives during another voice call, you can answer the second call by pressing the switch of the flat-plug earphone/microphone with switch.

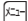

- 1 A call arrives ► Press the switch of the flat-plug earphone/microphone with switch
The active voice call is placed on hold and you can answer the incoming call. The connecting 3-way screen opens.
 - **To reject incoming calls without answering**
Press the switch of the flat-plug earphone/ microphone with switch for 2+ seconds.
 - **To activate the held call during the 3-way connection**
Press the switch of the flat-plug earphone/ microphone with switch for 2+ seconds.
- 2 To end the call, press 
 - While the Connecting 3-way screen is displayed, you cannot terminate the call by pressing the switch of the flat-plug earphone/microphone with switch.

Note

- When using the flat-plug earphone/microphone with switch, a call will not be terminated or placed on hold if the terminal is closed during the call regardless of "Close setting" (P70).

Automatically Answering a Call Connecting the Flat-plug Earphone/microphone with Switch

You can set to answer a call automatically when the flatplug earphone/microphone option with switch is connected after the set ring time has elapsed.

- 1  [Menu] ►  (Settings) ► "Call/VT/Dialing" ► "Incoming call" ► "Auto answer" ► Perform the following operations:

[Auto answering]

Selecting "ON" allows you to answer calls automatically using the flat-plug earphone/microphone with switch.

[Delayed time]*

Enter the time until the call is automatically received.

* Set "Auto answering" to "ON" to make this setting available.



- 2  [Done]

Note

- If you set Auto Answer ring time (duration) to earlier time than the start of the Voice mail or Call forwarding service, or Record message, this function takes precedence.





Chiming the Hour

Set whether to sound a tone each hour, on the hour.

- 1  [Menu] ►  (Settings) ► "Date&Time" ► "Hour indication" ► Perform the following operations:




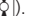
[Set sound]

Specify the tone.

- Press  [List] to open the Set sound list screen.
- Press  to sound the selected tone. From the list screen, press  [Play] ►  to sound the tone. However, if [Popup display] in [Volume Setting] is set to [mute], Set sound will not be confirmed.

[Time]

Set the time to sound the tone.

Use  to move the cursor to the position and enter the time with dial keys, and switch between "AM" and "PM" with  (pressing  in the time field opens the Time settings screen that allows you to enter time with dial keys and .

- Depending on the settings in "Date&Time format", the display order or format for the date and time may differ.→P111

- 2  [Done]



Note

- The indication volume sounded when confirming settings and notifying every hour follows "Alarm/Schedule".→P99

Checking Memory Usage

You can check used and free space of the FOMA terminal memory.

- The space used in the FOMA terminal includes the files/data for the following functions
 - Data box (My Picture, i-motion, Melody, and Music)
 - Phonebook - Schedule - Holiday
 - Memo - To Do - Date counter

1  [Menu] ▶  (Settings) ▶ "Others" ▶ "Memory status"

2 Select a memory to view

Databox memory : Display the amount of data saved in the "Data box".

Personal info. : Display the amount of data saved in the Phonebook, Schedule, Holiday, Memo, To do, and Date counter.

UIM memory : Display the amount of data saved on the UIM.

Character Entry

Character Input	294
Entering Characters	295
Configuring Character Input Settings	Input Setting 298
Modifying/Registering Common Phrases	Edit 299
Copying/Cutting and Pasting Characters	301
Using the Kuten Code to Enter Characters	Kuten Code Input 301
Registering Frequently Used Words	Edit dictionary 302
Initializing Learned Data	Reset learnt info 303
Using Downloaded Dictionaries	Download Dictionaries 303

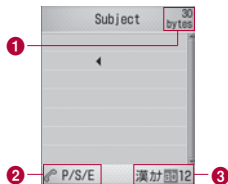 
For details about Kuten code list, see "Kuten Code List" (PDF format) contained in the bundled CD-ROM or available at the DOCOMO website. Adobe® Reader® is required to open "Kuten Code List" in PDF format. If the program is not installed on your PC, install Adobe® Reader® contained in the bundled CD-ROM first. For details about using the program, see "Adobe Reader Help".

Character Input

Various operations require entering characters, such as registering to the Phonebook or creating mail. Learn how to enter characters to fully use the FOMA terminal.

Character input screen

The Character input screen shows the current input mode and operation guide.



Character Input screen

1 Available number of characters

Indicates number of bytes or number of characters that can be input further.

2 Operation guide field

Shows switching among pictographs, symbols, and emoticons, and switching between full- and half-pitch characters.

3 Input mode field

Shows the input mode.

Switching Input Modes

Switch input modes for entering various types of characters. In some input modes, you can switch between full and half-pitch characters.

- Depending on the input screen, it may not be possible to switch input modes.

1 Character input screen (P294) ▶ [Mode]



Switching input modes

2 [Change]/ [Select]

Each press of [Change] or [Select] switches the input mode. Pressing [Change] before [Select] switches between full and half-pitch (excluding Hiragana or Kanji input mode).
· After switching the input mode, you can enter characters in the selected input mode without pressing [Select].

漢 (kanji) : Hiragana or Kanji character input mode

力 (katakana) : Katakana character input mode

a/A*(ab/AB*) : Alphabetic character input mode

1 (12) : Numeric input mode

*: Press [Upper] to change to upper case.

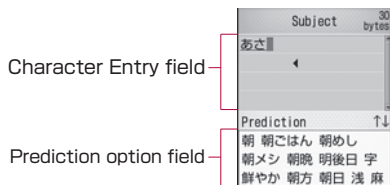
Entering Characters

In the Hiragana and Kanji input mode, you can enter characters using the Prediction function that predicts conversion options from the characters being entered, and the Next phrase prediction function that predicts the next phrase.

- You can turn the Prediction function on or off in "Prediction" in "Input setting".
- For characters that can be entered with the keys, see "Dial Key Assignments to Characters" (P357).

Example: Entering characters in the Hiragana and Kanji input mode

- 1 Enter characters on the Character input screen (P294)



Conversion options predicted by the Prediction function are displayed.

- If the Prediction is set to "OFF", conversion options will not appear.
- When entering Kana kanji, Katakana, Kanji entry mode, approximately 1.5 seconds after characters are entered, the cursor moves to right automatically (Auto cursor function). However, this does not work in the Numeric input mode. The Auto cursor function can be disabled, or


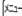

the the time before the cursor moves can be changed.
→P298

- The cursor also moves when pressing (the cursor moves when pressing in other than the Hiragana and Kanji input mode).

■ Keys and functions other than character entry

Key	Description
	Toggle between upper and lower case. * The key is not available for characters that cannot be toggled or in the Numeric input mode. Characters that can take a voiced symbol will be toggled after the voiced symbol is added.
/	Insert line feeds after characters are converted/fixed. Only is available in the Numeric input mode.
(1+ seconds)	Restore the previous state of characters converted or fixed.
	Erase the character in front of the cursor.
(for 1+ seconds)	Erase all characters converted or fixed after the cursor. When the cursor is at the end of text, all characters will be erased.
	Display the characters assigned to a key in the reverse order by pressing this key before characters are fixed.

2 Use to move the cursor to the conversion option field

-  [Set]: Fix the entered characters. In the Hiragana and Kanji input mode, press this key to fix the characters without converting them.
-  [KanaA1]: Display conversion options combined with Katakana and alphanumeric characters.
-  [Conv.]: Display conversion options without using the Prediction function. Press when there is no conversion option you want to enter at the prediction option field.

3 Move the cursor to the characters to convert [Select]


The entered characters are fixed. Conversion options predicted by the Next phrase prediction function appear in the display area. If desired characters are displayed, perform Step 2 to 3 to select and enter the characters.

- Press  to cancel conversion and to resume entering characters.

Converting Characters without the Prediction Function


Perform the following steps if desired characters are not shown as conversion options or if Prediction is set to "OFF":

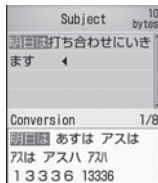 
① Enter characters on the Character input screen (P294)


- After entering characters, if the cursor is in the Predicted conversion option area, press  to move the cursor to the character input area.



② [Conv.]

Conversion options for the highlighted area will be displayed.

- To change the highlighted area, use  to move the cursor.



- ③ Use  to move the cursor to the conversion option display area

- ④ Move the cursor to the characters to convert   [Select]
The entered characters are fixed. As each phrase is converted, the next phrase will be highlighted.

Sub Menu on the Character Input Screen

- Displayed items vary depending on the options or entered characters on the Character input screen.

1 Character input screen (P294) [Menu] Perform the following operations:

[Common phrases]

Select and enter a saved common phrase.

Input : Select and enter a saved common phrase.

Edit : You can create and save a common phrase, or edit a saved common phrase.→P299

[Edit character]

Copy or cut characters specifying a range and paste.→P301

[Edit dictionary]

Register a word.→P302

[Quote]

Phonebook : Quote an entry to the Phonebook.

Own number : Quote your phone number. The security code is required to quote.

[Input setting]

Full/Half : Switch between full-/half-pitch input mode.

Upper/Lower : Switch between upper/lower case input mode in the Alphabetic mode

- Prediction : Activate or deactivate the prediction function.
→ P298
- Auto cursor : Set whether to automatically fix the entered characters and move the cursor.→P299

[Special input]

- Space : Enter a space before the cursor.
- Changing line : Enter a linefeed before the cursor.
- Kuten Code : Enter a character using its Kuten code.
→P301
- Pictograph : Select and enter a pictograph from a list.*
- Full symbol : Select and enter a full-pitch symbol from a list.*
- Half symbol : Select and enter a half-pitch symbol from a list.*
- Emoticon : Select and enter an emoticon from a list.*

[Cancel]


Erase all entered characters.

* : Use  to switch the input screen.→P297

Entering Common Phrases

You can enter text using common phrases saved in the FOMA terminal.


· By default, "Original-1" and "Original-2" are empty.

- 1 Character input screen (P294)▶[Menu]▶"Common phrases"▶"Input"
The list of Common phrase category screen opens.
- 2 Select a type ▶ Select a common phrase
The common phrase is entered.

Note

· Common phrases can be edited/registered.→P299

Entering Pictographs/Symbols/Emoticons

You can switch the input modes of pictographs/symbols/emoticons using .

· Depending on the current input screen, these characters may not be entered or modes may not be switched.

1 Character input screen (P294)▶

Each press of  switches the input mode, and the list screen opens.

- 絵 : Pictograph input mode
記 : Full-pitch symbol input mode
半記 : Half-pitch symbol input mode
顔 : Emoticon input mode



Pictograph list Screen

2 Move the cursor to the pictograph/symbol/emoticon ▶[Select]

The selected character will be entered.

■ Available Keys on the List Screen and Their Functions

Key	Description
	Display list screens in the order of the screen numbers.
	Display list screens in the reverse order of the screen numbers.
	Move the cursor to the left/center/right of the top row on the Pictograph/symbol list screen.
	Move the cursor to the left/center/right of the middle row on the Pictograph/symbol list screen.
	Move the cursor to the left/center/right of the bottom row on the Pictograph/symbol list screen.
	Switch between "Pictograph1" and "Pictograph2" "Pictograph D (Decomail Pictures)" on the Pictograph list screen.

Note

· Depending on the current input screen, these characters may not be entered or modes may not be switched.

■ Entering Pictographs/Symbols/Emoticons Consecutively

Characters of each input mode can be consecutively entered.

▶ Each input mode screen [Cont.] ▶ Select characters consecutively ▶ [Set]

Editing Emoticons

- [Menu] ▶ (Settings) ▶ "Others" ▶ "Character input" ▶ "Edit emoticon"
The Edit emoticon screen opens.
- Select a category ▶ Select an emoticon to edit ▶ [Edit]
The Character input screen opens with the selected emoticon entered.
- Change the Emoticon ▶ [Set]
The new emoticon is saved overwriting the existing one.

Input Setting

Configuring Character Input Settings

Configure various settings related to character input.

Set Prediction

Set whether to enable the Prediction function that displays conversion options matching with the beginning of the characters being entered, or the Next phrase prediction function that displays the predicted next phrase, in the Hiragana and Kanji input mode.

- Character input screen (P294) ▶ [Menu] ▶ "Input setting" ▶ "Prediction" ▶ "ON"/"OFF"

Note

You can also set the Prediction input by performing the following steps:

[Menu] ▶ (Settings) ▶ "Others" ▶ "Character input" ▶ "Prediction input" ▶ "On"/"Off"

Fixing Entered Characters Automatically

You can configure the input method so that cursor moves to a new position for the next input automatically after a set time so that another character can be entered with the same key.

- 1 Character input screen (P294) ▶ [Menu] ▶ "Input setting" ▶ "Auto cursor" ▶ Select the speed
 - OFF : Characters are not automatically fixed.
 - Slow : Characters are fixed approximately two seconds after being entered.
 - Normal : Characters are fixed approximately 1.5 seconds after being entered.
 - Fast : Characters are fixed approximately 1 seconds after being entered.

Edit

Modifying / Registering Common Phrases

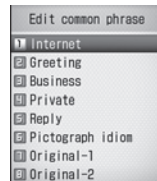 
Register frequently used greetings or phrases as common phrases to enter them quickly.

Registering Common Phrases

Newly defined common phrases can be saved in "Original-1" or "Original-2". Up to 10 common phrases can be saved.

- 1 Character input screen (P294) ▶ [Menu] ▶ "Common phrases" ▶ "Edit"

The common phrase types are listed.




Edit common phrase List screen

- 2 "Original-1"/"Original-2" ▶ Move the cursor to a phrase type for adding a phrase ▶ [Edit]

Up to 64 full-pitch or 128 half-pitch characters can be entered.




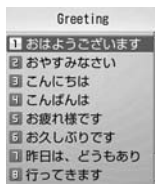 
Edit common Phrase screen

- 3** Enter text to register ▶  [Set]
The common phrase is registered.




Editing Pre-installed Common Phrases

You can edit a pre-installed common phrase.



- 1** Character input screen (P294)▶  [Menu] ▶ "Common phrases"▶ "Edit"▶ Select a common phrase type



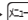
"Greeting"
Common Phrase
List Screen

- 2** Move the cursor to a phrase ▶  [Edit]
The Common phrase edit screen opens with the selected common phrase entered.
· Press  [Select] to open the full screen with the common phrase entered.
- 3** Edit the common phrase ▶  [Set]
The common phrase is registered.

Note

- You can also edit common phrases saved in a user-defined folder.
- You can also perform the following steps to save or edit a common phrase.
 [Menu] ▶  (Settings) ▶ "Others" ▶ "Character input" ▶ "Edit common phrase"

Common Phrase Edit Screen Sub Menu

- 1** The Edit common phrase screen (P299) ▶  [Menu] ▶ Perform the following operations:

[Reset all]

Restore all common phrases to their defaults.

[Cancel]

Terminate editing a common phrase.

Sub Menu on the Common Phrase List/Display

- 1** Common phrase list screen (P300) /Display all screen (P299)▶  [Menu] ▶ Perform the following operations:

[Delete 1 item]

Delete the selected common phrase.

[Reset 1 item] ¹⁾

Restore the selected common phrase to its default.

[Category reset] ²⁾

Restore all common phrases in the category to their defaults.









[Cancel]

Terminate editing a common phrase.

- *1 A common phrase whose type is "Original-1" or "Original-2" cannot be selected.
- *2 Not displayed in the sub menu for "Display all" screen.

Copying/Cutting and Pasting Characters

You can copy/cut characters and paste them to other locations or on other screens. Copied/cut characters can be pasted any number of times until the FOMA terminal is turned off or another copy/cut is performed.

- 1** Character input screen (P294) ▶  [Menu] ▶ "Edit character" ▶ "Copy"/"Cut"
- 2** Use  to move the cursor to the starting point ▶  [Select]
- 3** Use  to move the cursor to the ending point ▶  [Select]
- 4** Open the character input destination screen ▶ Use  to move the cursor to the position to paste
- 5**  [Menu] ▶ "Edit character" ▶ "Paste" ▶ "Yes"
 - To undo a cut or paste operation, select  [Menu] ▶ "Edit character" ▶ "Undo"

Note

- If copied or cut text contains more characters than the allowable number of characters, the excess characters are truncated when pasted.
- Characters can be pasted only if copied or cut text can be entered in the destination text. For example, Hiragana or Kanji characters cannot be pasted in the mail address field (half-pitch alphanumeric characters).
- Line feeds in a copied text string are replaced with halfpitch spaces if the text is pasted to an input screen that does not allow linefeeds.
- When pasting in the Deco-mail message after copying or cutting, the decoration information will also be pasted (except for some decoration information).

Kuten Code Input

Using the Kuten Code to Enter Characters

You can enter a 4-digit Kuten Code to enter a letter, numeric character, or symbol, etc.

- For the "Kuten Code List", refer to the "Kuten Code List" on the contained in the bundled CD-ROM in PDF format.

- 1 Character input screen (P294) ▶ [Menu] ▶ "Special input" ▶ "Kuten code"



Kuten Code
input screen

- 2 Enter the Kuten code (4-digit number) for the character ▶ [Select]

The associated character is entered.

- If you proceed to press [Cont.], you can enter consecutive characters using Kuten codes.
- You can also select characters by moving the cursor with .

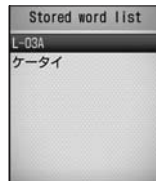
Edit dictionary

Registering Frequently Used Words

You can register up to 100 words not listed as conversion options, or words with difficult readings, along with the readings. Registered words will be displayed as conversion options when the readings are entered.

- 1 Character input screen (P294) ▶ [Menu] ▶ "Edit dictionary"

- To view registered words, select a dictionary and press .



- 2 [Add] ▶ Select or save the following item

[Reading]

Enter the reading that is used to find the registered word. Up to 14 full-pitch Hiragana characters only can be entered.

- Spare cannot be entered.

[Word]

Enter the word to register. Up to 14 full-pitch or 28 half-pitch characters can be entered. On the Character input screen, after the characters of a "Reading" are entered, the registered word appears as a conversion option.

- Linefeed cannot be entered.

- 3 [Store]

The word is registered to the dictionary.

Note



- You can also perform the following steps to register a word.

[Menu] ▶ (Settings) ▶ "Others" ▶ "Character input" ▶ "Edit dictionary"

Deleting Words

You can delete one word or all words registered using "Edit dictionary".

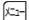

Example: Deleting one word

- 1 Move the cursor to the word to delete on the Stored word list screen (P302)
- 2  [Menu] ▶ "Delete 1 item" ▶ "Yes"
The selected word will be deleted.
 - To delete all words
Select  [Menu] ▶ "Delete all" ▶ "Yes" on the Stored word list screen.


Reset learnt info

Initializing Learned Data

Restore the learned data concerning character entry saved in the FOMA terminal to its default.

- 1  [Menu] ▶  (Settings) ▶ "Others" ▶ "Character input" ▶ "Reset learnt info" ▶ "Yes"/"No"

Learned Data

converted by selecting from conversion options, or characters fixed by pressing  without conversion. The next time you enter the same first character, the learned word appears as the first conversion option.

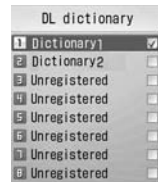 
Download Dictionaries

Using Downloaded Dictionaries


You can enable dictionaries downloaded from i-mode sites, etc. and use them for character conversion. Up to five dictionaries can be enabled.

- Up to 10 dictionaries can be stored in the FOMA terminal.

- 1  [Menu] ▶  (Settings) ▶ "Others" ▶ "Character input" ▶ "Download dictionary"



Downloaded Dictionary screen

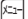

- 2 Place check marks next to dictionaries to enable ▶  [Enable]

Each checked dictionary is enabled.

- To disable a dictionary

Select an enabled dictionary and press  [Disable].

Sub Menu on the Downloaded Dictionary Screen

- 1 Downloaded dictionary screen (P303) ▶  [Menu] ▶ Perform the following operations:
 -  [View]: Display details of the dictionary.

[Delete]

Delete the selected dictionary.

[Delete all]

Delete all listed dictionaries.

Network Services

Network Services Available

The following DOCOMO network services are available for the FOMA terminal.

Service name	Subscription	Monthly charge	Service name	Subscription	Monthly charge
Voice Mail Service	Required	Charged	Dual Network Service	Required	Charged
Call Waiting Service	Required	Charged	English Announcement Service	Not required	Free
Call Forwarding Service	Required	Free	Multi Number	Required	Charged
Nuisance call Blocking Service	Not required	Free	OFFICEED	Required	Charged
Caller ID Notification Service	Not required	Free	Public mode (Drive mode)*	Not required	Free
Caller ID Display Request Service	Not required	Free	Public mode (Power off)*	Not required	Free




*Public Mode P71, P72

- You cannot use network services while you are out of service area or where there is no signal reception.
- For subscription or inquiries, contact the "docomo Information Center" listed on the back of this manual.
- "OFFICEED" is a fee-based service requiring a separate subscription. For details, see the web page "NTT DOCOMO Business Online" (<http://www.docomo.biz/d/212/>). (Japanese only)
- This manual contains an overview of network services available through operation of FOMA terminal menus. For details, see "Mobil Phone User's Guide [Network Services]."

Voice Mail Service	Voice mail	306
Call Waiting	Call waiting	307
Call Forwarding Service	Call forwarding	309
Nuisance Call Blocking Service	Nuisance Call Blocking	311
Caller ID Notification Service	Caller ID notification	312
Caller ID Request	Caller ID request	312
Set In-call Arrival Act	Set in-call arrival act	312
Selecting Actions to an Incoming Call during a Call	Arrival call act	313
Dual Network Service	Dual Network	313
English Guidance	English guidance	314
Service Numbers Available	Service numbers	314
Setting Remote Control	Remote Control	315
Multi Number	Multi number	315
OFFICEED		317
Registering and Using a New Service	Additional Services (USSD Registration)	317
Registering Additional Guidance	Additional guide	318

Voice Mail Service

When your terminal is out of the service area or turned off, or you cannot answer a call, this service automatically responds to incoming voice/video calls and records messages.

- Up to 3 minutes can be recorded per voice message, and messages can be recorded for up to 20 voice calls and 20 video calls. Messages are retained at the center for up to 72 hours.
- When a message is recorded,  (with the number of received messages) appears on the Stand-by display. However, if a video message is recorded,  does not appear on the Standby display but an Incoming mail information(SMS) notifies you of the messages.
- When Record Message (P73) is activated concurrently, to use the Voice mail service first, set the ringing time of the Voice mail service shorter than the Response Time of Record Message.
- If you do not answer an incoming voice or video call when the Voice mail service is activated, the call is recorded as a "Missed Call" in Received Calls and  appears (with the number of the missed calls).

Basic Flow of Voice Mail Service

Step 1 : Activate the Voice Mail Service

Step 2 : A call arrives*

Step 3 : Caller records a message

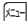

Step 4 : Play the message

* When you are in a hurry, you may want to record a message without listening to the Response Greeting of the Voice mail service. In this case, you can immediately start recording a message by pressing "#".

Note

- In Step 2, if you are in service area and the FOMA terminal is turned on, a ring tone sounds until the set ring time elapses. When an incoming call is not answered while a ring tone is sounding, the call is connected to the Voice mail service center. The ring time can be changed.
- In Step 3, when a message is recorded, appears (the number is the number of recorded messages) on the Stand-by display, and calls are recorded in Received calls as missed calls. However, if you set "Set ring time" to 0, missed calls will not be recorded in Received calls.
- Even when the Voice mail service is deactivated, you can forward an incoming voice call to the Voice mail center manually using the sub menu.→P69
- To change the settings to connect video calls to the Voice mail center, make a voice call to "1412".

Using the Voice Mail Service

- 1  [Menu] ►  (Service) ► "Voice mail" ► Perform the following operations:

[Activate]

Activate the Voice mail service.

[Set ring time]


Set time before connecting to the Voice mail service center after a call arrives.

- "Yes" ► Enter a ring time

[Deactivate]

Deactivate the Voice mail service.

[Check setting]

Check the current settings of the Voice mail service.
Press  [Menu] to activate/deactivate the Voice mail service, or set a ring time.

[Play messages]

Make a call to the Voice mail service center and play the recorded voice mail message.

[Voice mail setting]

Make a call to the Voice mail service center, and change the settings according to the voice guidance.

[Check messages]

Check whether there are new messages.

[Notify missed call]

An SMS will be sent to notify you of missed calls when calls arrived while the terminal is turned off or out of service area, after the terminal is turned on or in service area.

Activate : Activate the Notify missed call service.
call notification

Deactivate : Deactivate the Notify missed call service.

Check setting : Check the status of the Notify missed call setting.

[Del. Voicemail icon]

Hide  displayed in the icon display area.

[Tone/Vibration message notification]

Set whether to notify you of a new recorded message with illumination and a ring tone.

Note

- Even when you activate "SMS—括拒否 (Reject All SMS)", the notification will be received.



Call waiting

Call Waiting

When a call arrives during another call, a call termination during a call tone sounds. You can place the active call on hold and answer the other call. You can also place the active call on hold to make another call.

- To use the "Call waiting" service, set "In-call arrival act" (P312) to "Answer" in advance. If this option is set otherwise, an incoming voice call during another voice call cannot be answered even if the "Call waiting" service is activated.
- The Call waiting service is not available when:
 - Dialing a number or ringing the other party
 - A voice call arrives during a video call
 - A video call arrives during a voice call

Using Call Waiting

- 1  [Menu] ►  (Service) ► "Call waiting" ► Perform the following operations:

[Activate]

Activate the "Call waiting" service.

[Deactivate]

Deactivate the "Call waiting" service.

[Check setting]




Check whether the Call waiting service is activated or deactivated.

Answering a Call Placing the Active Call on Hold

When a call arrives during a voice call, the call termination tone during a call sounds from the earpiece, and the Incoming call screen opens.

1 A call arrives

The active voice call is placed on hold, and you can answer the incoming voice call. A message "Connecting 3-way" appears on the 3-way connection screen.










-  [Switch]: Each press this key toggles between the active call and the held call.
-  [Spk on/Spk off]: Toggle Hands-free between On and Off.
- : End the active call.

Note

- If you deactivate Call waiting, you cannot answer a call even when you hear in-call arrival tone during a call with "Set in-call arrival act" activated.








Making a Call Placing the Active Call on Hold

You can make a new voice call placing the active voice call on hold.

- 1 Voice call screen (P53)  OK  [Menu]  "New call"  Enter a phone number 
The new call becomes active, the previous call is placed on hold, and the connecting 3-way screen opens.
 - To switch to a held call, press  OK  [Menu]  [Switch].
 - To end the held call, switch to the call by performing the above steps and press .


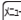

Answering an Incoming Call Terminating the Active

Answer an incoming voice call after terminating the active voice call. You can answer the call even when the Call waiting service is activated.

- 1 A call arrives  OK  [Menu]  "End active call"
The Voice call termination screen opens, and the Incoming voice call screen for the incoming call opens.
 - to answer the call after terminating the held call  OK  [Menu]  "End the call"  "End held call"
 - When connecting 3-way, The held call is terminated, and you answer the incoming call.

2

Sub Menu of the Incoming Call Screen during a Call Screen

1 When a call arrives during a call, press  OK  [Menu]  perform the following operations:

[Voice mail]¹

Connect the incoming call to the Voice mail service center.

[Call rejection]

Reject an incoming call and hang up.

[Call forwarding]²

Forward an incoming call to the specified number.

[End active call]

Terminate the active call. A call is arriving.


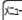

[Mute]

Mute or un-mute the active call.

*1 This is not available unless you subscribe to the Voice mail service.

*2 This is not available unless you subscribe to the Call forwarding service and you have specified a forwarding number.

Sub Menu on the 3-way Connecting Screen

1 The 3-way connecting screen  OK  [Menu]  Perform the following operations:

[Switch]

Switch between the active call and held call.

[End call]

Select and terminate a call.

End active call : Terminate the active call. The held call automatically becomes active.

End held call : Terminate all calls.

End all calls

[Mute]

Mute or un-mute the active call.

[Send my info.]

Create i-mode mail with own number entered in the message text. →P131

[Search phonebook]^{*}


Search for a Phonebook entry.→P87

^{*}This cannot be used when the Phonebook is accessed. To use this function, terminate applicable functions from the task list screen. → P264

Call forwarding

Call Forwarding Service

When your terminal is out of service area or switched off, or a call was not answered within the set ring time, this service forwards the voice/video call.

- Video calls are forwarded only to a video call capable destination complying with 3G-324M.
- The subscriber to the Call forwarding service is changed for forwarding a call to a destination.
- This service is not available with some billing plans.
- When Record message (P73) is activated concurrently, to use the Call forwarding service first, set the ring time of the Call forwarding service shorter than the Ring time of Record message.
- If an incoming voice or video call is not answered when the Call forwarding service is activated, the call is recorded as a Missed call in Received calls and ¹ appears (the number is the number of missed calls).



Basic Flow of the "Call forwarding" Service

- Step 1 : Register the phone number of the forwarding destination
- Step 2 : Activate the "Call forwarding" Service
- Step 3 : A call arrives
- Step 4 : Forward the call to the destination

Note


- In Step 3, when you are in a service area and the terminal is turned on, a ring tone sounds until the set Ring time elapses. If an incoming call is not answered while a ring tone is sounding, it is forwarded to the forwarding destination. The ring time can be changed.
- In Step 4, when the call is forwarded, the call is recorded as a Missed call in Received calls. However, if you set the ring time to zero, missed calls will not be recorded in Received calls.
- Even when the "Call forwarding" service is deactivated, an incoming call can be forwarded to a forwarding destination manually from the sub menu. → P76
- You cannot answer a call if you do not subscribe to the Call waiting service even if you hear a call termination tone during a call.

Using the Call Forwarding Service

- 1  [Menu] ►  (Service) ► "Call forwarding" ► Perform the following operations:

[Activate]

Activate the "Call forwarding" service.

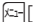
Register the forwarding number : Register the phone number of the forwarding destination. Press  [Search] to find the number from the Phonebook.


Set ring time : Set the duration from when a call arrives until the call is forwarded.

[Deactivate]

Deactivate the Call forwarding service.

[Register the forwarding number]

Register the phone number of the forwarding destination. Press  [Search] to find the number from the Phonebook.

- Press  [Done], a confirmation appears. Selecting "Yes" changes the forwarding destination number and activates the Call forwarding service.

[Setting if forwarding number busy]


Set whether to connect to the Voice mail service center when the forwarding destination is busy.

[Check setting]

Check the current setting of the Call forwarding service.

Enable or Disable Forwarding Guidance

- This cannot be operated from a menu.
- For details, refer to "Mobile Phone User's Guide [Network services]".

- 1 Enter "1429" ► 
Follow the voice guidance.

Nuisance Call Blocking Service

This service rejects incoming nuisance calls. After a phone number is registered to be rejected, all incoming calls from that number will be automatically rejected, and the voice guidance is played to the caller.

- Up to 30 phone numbers can be registered.
- Even when a call arrives from the phone number to be rejected, the ring tone does not sound. Also, the call is not recorded in Received calls.

- 1  [Menu] ►  (Service) ► "Nuisance call blocking" ►
Perform the following operations:

[Register nuisance caller]

Register the phone number of the last incoming call you answered to set to reject calls from the number.

[Register selected number]

Set to reject the phone number you selected.

[Delete all entries]

Delete all phone numbers registered as nuisance callers.

[Delete last entry]

The last registered phone number is deleted. Repeat the same steps to delete a phone number from the last saved number, one at a time.



[Check the number of entries]

Check the number of the rejected callers.

Caller ID Notification Service

You can notify the other party of your caller ID (phone number) when you call. Your Caller ID will be displayed on the other party's phone if the phone is a digital phone and capable of displaying Caller ID.

- Your Caller ID is valuable information. Be cautious about sending your Caller ID.

1  [Menu] ►  (Service) ► "Caller ID notification" ► Perform the following operations:

[Activate/Deactivate]

Set whether to send or hide your Caller ID to the other party. The network security code is required to configure the setting.

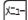

[Check setting]

Check the current status of the Caller ID notification service.

Caller ID Request

This service responds a voice/video call without Caller ID, plays a voice guidance requesting the caller send Caller ID, and terminates the call automatically.

- Calls that did not arrive due to the Caller ID request service are not recorded in Received calls, and the Missed Call notification screen does not appear.

1  [Menu] ►  (Service) ► "Caller ID request" ► Perform the following operations:

[Activate]

Activate the caller ID request.

[Deactivate]

Deactivate the caller ID request.

[Check setting]

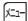

Check the current status of Caller ID request.

Note

- This service is applicable only to calls with "User unset" set as a reason for hiding Caller ID.

Set In-call Arrival Act

Activate or deactivate incoming call actions set in "Arrival call act" Also, you can check the current settings.

1  [Menu] ►  (Service) ► "Set in-call arrival act" ► Perform the following operations:

[Activate]

Activate the actions set in "Arrival call act"

[Deactivate]

Deactivate the actions set in "Arrival call act"



[Check setting]

Check the current setting of "in-call arrival act".

Selecting Actions to an Incoming Call during a Call

You can set how to respond to an incoming voice/video call during a call when you subscribe to the Voice mail, Call waiting, and Call forwarding services.

- You cannot respond to an incoming call during a call if you do not subscribe to the Voice mail, Call waiting, and Call forwarding services.
- Activate "Set in-call arrival act." to use Arrival call act.

1  [Menu] ►  (Service) ► "Arrival call act" ► Perform the following operations:

Answer	Calls are received. Incoming call action will follow the settings of the Voice mail, Call waiting, and Call forwarding services when they are activated.
Voice mail	The Voice mail service answers a call. Calls are connected to the Voice mail service even when Call waiting is activated.
Call forwarding	Forward a call to the registered phone number. Calls are forwarded even when the Voice mail or Call waiting is activated.
Call rejection	Calls are rejected..



Note

- Incoming voice or videophone calls are recorded in Received calls regardless of the arrival all act setting.

Dual Network Service

This service allows you to use the mova service with your FOMA terminal phone number. You can switch between FOMA and mova depending on the service area.

- You cannot use the FOMA service and mova service concurrently.
- Switch the services using the Dual Network service when the terminal is not accessing a network.

1  [Menu] ►  (Service) ► "Others" ► "Dual network" ► Perform the following operations:

[Dual network switching]

Switch mova to FOMA to make the FOMA terminal available.

[Check setting]

Check the current status of the setting.

Note

- When switching from FOMA to mova, operate from a mova terminal.
- <Dual network switching>
- Switching the network during communication forcibly terminates the connection.

English Guidance

The voice guidance played when a network service such as the Voice mail service is activated or when the terminal is out of service area can be played in English.



■ Incoming calls (Guidance to the caller)

Language	Description
Japanese	The Japanese guidance is played.
English	The English guidance is played.

■ Outgoing calls (Guidance to you)

Language	Description
Japanese	The Japanese guidance is played.
Japanese+English	The English guidance will follow the Japanese guidance.
English+Japanese	The Japanese guidance will follow the English guidance.

· When the caller is using this service at the same time, the caller's settings for making calls have precedence over the receiver's settings for receiving calls. Therefore, match the caller's settings for making calls and the receiver's settings for receiving calls. For example, if receiver's language is set to Japanese+English, English guidance is not played unless caller's language is set to English.

1  [Menu] ▶  (Service) ▶ "Others" ▶ "English guidance" ▶ Perform the following operations:

[Guidance setting]

Configure the guidance settings.

Outgoing+

Incoming call : Set guidance languages for incoming and outgoing calls. Select the language after you select "Yes".

Outgoing call : Set a guidance language for outgoing calls. Select the language after you select "Yes".

Incoming call : Set a guidance language for incoming calls. Select the language after you select "Yes".

[Check guidance setting]

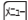

Check the current setting of Guidance Setting.

Service numbers

Service Numbers Available

You can make a call to a docomo Information Center or Contacts for Repairs.

· Depending on your UIM, the items displayed may differ or some items may not be displayed.

1  [Menu] ▶  (Service) ▶ "Others" ▶ "Service numbers" ▶ Perform the following operations:

[ドコモ故障問合せ]

Call inquiries when malfunction happens.



[ドコモ総合案内・受付]

Call for overall instruction or information.

Setting Remote Control

You can set so that a landline phone or pay phone with the touch tone system or a DOCOMO terminal can be used to operate the Voice mail or Call forwarding service.

- To use the Voice mail or Call forwarding service overseas, Remote control must be activated before leaving Japan.

- 1  [Menu] ►  (Service) ► "Others" ► "Remote control" ► Perform the following operations:

[Activate]

Activate Remote control.

[Deactivate]

Deactivate Remote control.

[Check setting]

Check the status of the remote control setting.

Multi Number

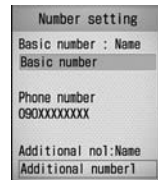
This service allows you to use up to 2 extra phone numbers, Additional number 1 and Additional number 2, as your FOMA terminal phone number in addition to the basic subscription phone number.

- On the Dialing/Incoming screen, names corresponding to Multi number (Basic number/Additional number1/Additional number2) appear.
- When you dial from Dialed calls or Received calls, the Multi number dialed from/received to is displayed, and this number is used to dial.

Registering Additional Number(s)

You can register or set a name, a number, and a ring tone for additional numbers.

- 1  [Menu] ►  (Service) ► "Others" ► "Multi number" ► "Number setting" ► Perform the following operations:



Number setting screen

[Basic number: Name]

Enter a name for the Basic number.

[Phone number]

Display your phone number (Basic number).

[Additional no1: Name]

Enter a name of additional number 1.

[Phone number]

Enter a phone number of additional number 1.

[Additional no2: Name]

Enter a name of additional number 2.

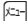

[Phone number]

Enter a phone number of additional number 2.

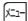

2  [Done]

Setting the Primary Number

You can set a registered additional number as the default number used for making calls.

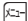
1  [Menu] ►  (Service) ► "Others" ► "Multi number" ► "Set multi number" ► "Basic number"/"Additional number1"/"Additional number2" ► "Yes"

Checking the Primary Number Settings

1  [Menu] ►  (Service) ► "Others" ► "Multi number" ► "Check setting" ► "Yes"

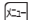

Selecting Caller ID for Each Call


1 Enter a phone number

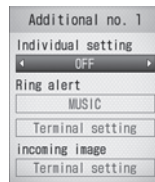 
2  [Menu] ► "Multi number" ► Select a name of the additional number

3 

Setting Ring Tone and Image

1  [Menu] ►  (Service) ► "Others" ► "Multi number" ► "Ring tone & image setting" ► Select an additional number ► Perform the following operations:

-  [List]: List of items opens.




Additional

[Individual setting]


Select whether to set the ring tone or image.


[Ring alert]

Set the ring tone.

Music : Press  to move the cursor to the field below, and select from Chaku-Uta-Full® songs saved in "Melody" in the "Data box".→P217

Go to Step 3 (P214) in "Setting a Chaku-Uta-Full® Song as a Ring tone".

i-motion : Press  to move the cursor to the field below, and select from videos/i-mode movies saved in "imotion" in the "Data box".→P249

Melody : Press  to move the cursor to the field below, and select from melodies saved in "Melody" in the "Data box".→P254

OFF : No ring tone is set.

[incoming image]

Set an image to be shown on the incoming call screen.

Image : Select from images saved in "My picture" in the "Data box".→P239

i-motion : Select from videos/i-motion movies saved in "imotion" in the "Data box".→P249

2  [Done]

Note

- If you specify a video/i-motion with video/audio for "Select ring tone" (P98) or "Call display"(P105), and you select "Terminal setting" for either "Ring alert" or "Incoming image", this option will be overridden and the movie/imotion will be played when an applicable voice/video call arrives.

OFFICEED

"OFFICEED" is an internal voice call service with fixed charges offered for an in-building mobile communication system IMCS. It requires a separate subscription. For details, see the web page "docomo Business Online" (http://www.docomo.biz/html/product/officeed/?DCMB_AREA=03&path=212) (Japanese only).

Additional Services (USSD Registration)

Registering and Using a New Service

When DOCOMO offers a new network service, you can add the service into the menu. Up to 10 new network services can be registered.

Adding Services

Register a service name and "Special number"/"Service number (USSD)" given by DOCOMO.

- Service number (USSD) is a code to be sent to Service Center.

- 1 [Menu] ▶ (Service) ▶ "Others" ▶ "Additional service" ▶ Move the cursor to "Not recorded" ▶ [Edit] ▶ Perform the following operations:



Additional services Edit screen

[USSD code]

Register the Service number (USSD).

[Service name]

Enter a service name.

- 2 [OK]

Sub Menu on Additional Service List Screen

- 1 [Menu] ▶ (Service) ▶ "Others" ▶ "Additional service" ▶ [Menu] ▶ Perform the following operations:

[Edit]

Modify the selected service.

[Select]^{*1}

Perform the selected service.

[Delete]^{*1}

Delete the selected service.

[Delete all]^{*2}

Delete all added services.

*1 This appears only when the recorded item is selected.

*2 This option appears only when more than one item is registered.

Performing Added Services

- 1 [Menu] ▶ (Service) ▶ "Others" ▶ "Additional service" ▶ Select a service
Connect to Service Center.

Additional guide

Registering Additional Guidance

Up to 10 response messages, that correspond to a service code (USSD) returned from the service center when additional services connect to the center using the USSD, can be saved.

- 1 [Menu] ▶ (Service) ▶ "Others" ▶ "Additional guide" ▶ Move the cursor to "Not recorded" ▶ [Edit] ▶ Perform the following operations:



Additional guidance Edit screen

[USSD code]

Register Service number (USSD).

[Reply message]

Register an Additional guidance name.

2  [OK]

Sub Menu on the Additional Guidance List Screen

1  [Menu] ►  (Service) ► "Others" ► "Additional guide" ►  [Menu] ► Perform the following operations:

[Edit]

Modify the selected guidance.

[Delete]¹

Delete the selected/displayed guidance.

[Delete all]²

Delete all guidance.

*1 This appears only when the recorded item is selected.

*2 This option appears only when more than one item is registered.

Overseas Use

Overview of International Roaming (WORLD WING)	322
Services Available Overseas	322
Differences in Communication Services	323
Checking before Using Overseas.....	324
Making Calls Overseas	328
Receiving Calls Overseas	331
Setting Telecommunication Carrier Search Mode Network Search Mode/Network Mode	332
Setting Preferred Telecommunication Carrier Preferred NW lists	333
Displaying the Network Name while Roaming Operator name display	333
Activating the Roaming Guidance Roaming guidance setting	334
Setting to Accept No Incoming Calls during Roaming Call barring	334
Using Network Services during Roaming.....	335

Overview of International Roaming (WORLD WING)

International roaming (WORLD WING) is a service that allows to talk or make communications over an affiliated overseas carrier's network using the same phone number as that used domestically.

For details of the services available during international roaming, refer to the "Mobile Phone User's Guide [International Services]". Also, in DOCOMO "International service website", you can see the latest information on international services and download the latest issue of the "Mobile Phone User's Guide [International Services]".

Subscribing to WORLD WING

If you subscribed to the FOMA service after September 1, 2005, a separate subscription is not required.

- If you subscribed to the FOMA service after September 1, 2005, a separate subscription is not required. However, if you unsubscribed to the FOMA service subscription or canceled the service, a separate subscription is required.
- If you initially subscribed to the FOMA service before August 31, 2005 and have not subscribed to "WORLD WING", a separate subscription is required.

Before use the FOMA terminal overseas, please view the followings for reference.

- "Mobile Phone User's Guide [International Services]"
- "Mobile Phone User's Guide [Network Services]"

Services Available Overseas

Communication services available vary depending on the overseas carrier and/or network used. For details of communication services available in international roaming, refer to the "Mobile Phone User's Guide [International Services]" or DOCOMO website.

Communication Services Available




Service	Description
Voice call	Using the same phone number as that used in Japan, you can make/receive calls in another country and make international calls to a third country.
Video Calls	You can make or receive an international video call with a user using the terminal supporting video calls of an overseas specific 3G carrier or a FOMA terminal user in Japan.
i-mode ¹⁾	You can use i-mode to acquire information from Japan and the country you where you are.
i-mode mail	Using the same mail address as that used in Japan, you can send/receive i-mode mail.
i-Channel ²⁾	You can download information periodically as in Japan. ³⁾ You can also press the i-Channel assigned key to open a channel list and download detailed information. ⁴⁾

Service	Description
SMS	You can send or receive SMS to/from a FOMA user in Japan and a user of an overseas telecommunication carrier other than DOCOMO.
Data Communication	You can connect a PC or other devices to use data communication (packet data communication).

- *1 To set overseas use in i-mode is required.
- *2 This may not be available depending on the carrier or area. To set overseas use in i-mode is required.
- *3 Auto Update is suspended automatically if the terminal is connected to an overseas carrier. To resume automatic update of i-Channel overseas, you need to perform i-Channel settings again. However, packet communication charges apply in addition to the monthly charge.
- *4 Packet communication charges apply for i-Channel communication (including Basic Channels).

Differences in Communication Services

You need to specify the network search mode and the preferred network to which the connection is established first, to use the terminal overseas.→P332

Service	3G	GSM	GPRS
			
Voice calls	○	○	○
Video Calls	○	×	×
i-mode	○	×	○
i-mode mail	○	×	○
SMS	○	○	○
i-Channel	○	×	○
Data Communication	○	×	○

- : Available
- ×: Not available

■ Overseas Networks

Network	Description
W-CDMA (3G)	W-CDMA is a third generation mobile communication network complying with 3GPP ¹ global standards.
GSM ²	GSM is the second generation mobile communication network in a digital communication system that is most widely used around the world.
GPRS ³	GPRS is the 2.5 generation mobile communication system that enables highspeed packet communication using GSM.

- *1 Abbreviation of 3rd Generation Partnership Project. This is a regional standards organization for developing common technical specifications for the third generation mobile communications system (IMT-2000).

- *2 Abbreviation of Global System for Mobile Communications. This is the second generation mobile communication network in a digital communication system that is most widely used around the world.
- *3 Abbreviation of General Packet Radio Service. This service offers enhanced data communication such as packet communication by increasing the speed of GSM.

Checking before Using Overseas

- STEP1 : Preparation before departure
 STEP2 : Using overseas
 STEP3 : Setting after returning to Japan

Preparation before Departure

■ Subscription

If you have not subscribed to WORLD WING (P322), subscribe to the service.

- Install a UIM supporting WORLD WING. (Green/White).

■ Communication services, etc. in countries and regions

For information such as countries, areas, or telecommunication carriers available, visit DOCOMO "International service website".→P332

■ Charging

- Cautions When Handling the AC Adapter →P21
- Charging Using the AC Adapter →P43, P45

■ Using i-mode

You have to configure "International Settings" in advance. Select "i Menu" ► select "English" ► "Options" ► "International Settings" ► "i-mode Settings" to open the setup screen. i-mode setting can be done in this screen.

For detailed information refer to "Mobile Phone User's Guide [i-mode] FOMA version"

■ Setting network services

You can activate or deactivate the subscribed network services overseas. The following network services can be accessed:

- Caller ID notification service^{*1}^{*2}
- Voice mail service^{*1}^{*3}
- Call forwarding service^{*1}^{*3}
- Caller ID request service^{*1}
- Call waiting service^{*1}
- English guidance^{*1}
- Nuisance call blocking service^{*1}
- Roaming guidance^{*1}
- Call barring

*1 This may not be activated in some service areas.

*2 Caller ID may not be sent correctly or not be sent at all.

*3 To operate overseas, you need to activate the "Remote control" (P315, P336) before leaving Japan.

■ Convenient functions and services available overseas

Functions and services	Description
Roaming guidance [international]	The other party is notified with a voice guidance that the terminal is in international roaming.
Call barring	Reject reception during international roaming.
Dual clock display	You can view the date and time in two countries or regions, and cities simultaneously.
Unit converter	You can convert currencies by setting an exchange rate.

■ Recommended Guide Books in addition to This Manual

Title	Description
Mobile Phone User's Guide [i-mode] FOMA version	This book describes how to use i-mode and i-mode mail overseas and their fees, etc.
Mobile Phone User's Guide [International Services]	This book describes details about the international roaming service including contents of the service, usage fees, and precautions.
Mobile Phone User's Guide [Network Services]	This book describes contents, settings, precautions and such of network services.

■ Billing of charges

Overseas charges are billed with your monthly charge. Note that they may appear on a billing invoice of the next month or later due to the situation of the operator of your country of stay. Also note that the billing invoice for charges in the same charging period may be sent to you in a different month.

Note

- This manual contains a quick manual for "Overseas Use" that can be used conveniently for referencing operations. Use the quick manual as a reference when using the FOMA terminal overseas.

Overseas Use

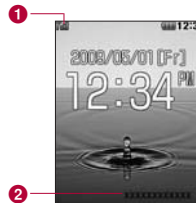
■ Network switching

"Network search mode" is set to "Auto" by default. When you use the FOMA terminal in Japan or during connecting to 3G network, it is recommended to switch "Network mode" to "WCDMA only" to reduce the consumption of the battery pack.
→P332

- To switch networks manually P332

■ Main Display

The network name does not appear when the terminal is connected to the FOMA network in Japan.
· To display network name when roaming →P333



① Icons indicating the connected network

- Connected to a FOMA network in Japan
- Connected to a 3G network overseas
- Connected to a GSM network overseas
- Connected to a GPRS network overseas

② Connected network name

Note

- If Auto time adjust is set to "ON", when receiving the information related to time difference from network telecommunication carrier overseas, FOMA terminal will adjust the time automatically. The time adjusted will be different depending on telecommunication carriers.
- Time may not be adjusted automatically. For this situation, adjust time manually. →P49

Inquiries from abroad

If a UIM (Green/White) is lost or stolen overseas, contact DOCOMO quickly to have the disconnection procedure done. For loss or theft of the terminal, settlement of accumulated charges, or terminal failure while overseas, refer to "For loss or theft of the terminal or charges while overseas" or "For a terminal failure while overseas" on the back of this manual. Call and communication fees are charged to you even after the terminal was lost or stolen.

· Add "International Access Code (Table 1)", or "International Prefix Number for the Universal Number (Table 2)" that is assigned to the country you stay, to the head of your number for inquiries.

· For the latest information on the International access code or the International prefix number for universal numbers, visit the DOCOMO International website.

Country Codes for Major Countries

Area	Code
Australia	61
Austria	43
Belgium	32
Brazil	55
Canada	1
China	86
Czech	420
Egypt	20
Fiji	679
Finland	358
France	33
Germany	49
Greece	30
Hong Kong	852
Hungary	36
India	91
Indonesia	62
Italy	39
Japan	81
Korea	82

Area	Code
Macau	853
Malaysia	60
Maldives	960
Netherlands	31
New Caledonia	687
New Zealand	64
Norway	47
Peru	51
Philippines	63
Russia	7
Singapore	65
Spain	34
Sweden	46
Switzerland	41
Tahiti	689
Taiwan	886
Thailand	66
Turkey	90
U.K.	44
U.S.A.	1
Vietnam	84

* The codes may be changed.

* For the codes of the other countries and details, visit the DOCOMO International service website.

* From a fixed line phone, International phone call charges to Japan apply.

International Access Codes of the country (Table 1)

International access codes for major countries are as follows:

Area	Code
Australia	0011
Belgium	00
Brazil	0021/ 0014
Canada	011
China	00
Czecho	00
Denmark	00
Finland	00
France	00
Germany	00
Greece	00
Hong Kong	00
Hungary	00
India	00
Indonesia	001
Ireland	00
Italy	00
Korea	001
Luxembourg	00
Macau	00

Area	Code
Malaysia	00
Monaco	00
Netherlands	00
New Zealand	00
Norway	00
Philippines	00
Poland	00
Portugal	00
Russia	00
Singapore	00
Spain	00
Sweden	00
Switzerland	00
Taiwan	00
Thailand	00
Turkey	00
U.A.E.	00
U.K.	00
U.S.A.	00
Vietnam	00

International Access Code for your Current Location (Table2)

International access numbers for major countries are as follows.


Area	Code
Argentina	00
Australia	0011
Austria	00
Belgium	00
Brazil	0021
Bulgaria	00
Canada	011
China	00
Colombia	009
Denmark	00
Finland	990
France	00
Germany	00
Hong Kong	001
Hungary	00
Ireland	00
Israel	014
Italy	00

Area	Code
Korea	001
Luxembourg	00
Malaysia	00
Netherlands	00
New Zealand	00
Norway	00
Peru	00
Philippines	00
Portugal	00
Singapore	001
South Africa	09
Spain	00
Sweden	00
Switzerland	00
Taiwan	00
Thailand	001
U.K.	00
U.S.A.	011

- The codes may be changed.
- For the codes of the other countries and details, visit the DOCOMO International service website.

- Domestic call charges for your overseas stay may apply to calls.
 - If you make a call from a hotel, you may be charged for the telephone usage from the hotel. In that case, you are responsible for the charge.
 - If you make a call from a mobile phone, the domestic call charge for your overseas stay applies to that call.
 - The universal numbers are only available in the countries listed in "International Prefix Number for the Universal Number".
-

Setting after Returning to Japan

When you return to Japan, the FOMA terminal connects to the FOMA network and  appears at the top of the screen.

- If the FOMA network is not connected, check whether "Network mode" and "Network search mode" are both set to "Auto".

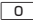
Making Calls Overseas

When you and the other party are using a telecommunication carrier capable of handling FOMA video calls, international video calls are also available.

- For information about the countries or areas, and telecommunication carriers that support FOMA video calls, visit DOCOMO "International service website."→P332
- Depending on the terminal of the other party of an international video call, the video streaming may fail, or the connection may not be established.
- Even if the Caller ID notification is set, the Caller ID may not be notified or phone number is not displayed correctly, depending on the telecommunication carrier. In this case, you cannot make a call using the Received calls.

Making an International Call (Including to Japan)


Make a call prefixing "+" and a country code to the other party's phone number.

- Press  for 1+ seconds to enter "+".
- To call an overseas WORLD-WING user, dial "81" as the country code of Japan.

1 (for 1+ seconds) ▶Enter "Country Code - Area Code (City Code) - Phone Number"

- When making a call to a fixed phone in Japan from abroad, enter "81" as the country code.
- If the Area Code (City Code) starts with "0" remove "0". (In a few countries, like Italy, "0" must be removed.)
- When making a call to a mobile phone or PHS in Japan, omit the leading "0" as well.
- Country code →P326, 327, 328

2

- To make a video call
 [Menu] ▶Select "Video phone call"

Making a Call Easily to Japan

If a call is made using an entry in Redial or Received calls or the Phonebook in which a phone number with a leading "0" is recorded/registered, the leading "0" is automatically replaced with "+ Country code (+81)".

- Your terminal is configured to enter "+81" (country code of Japan) automatically by default.→P64

1 Display an entry in history/Phonebook

■ Using Redial logs

Open the Redial screen (P57) or the Dialed calls detail screen (P57).


■ Using Received call log



Open the Received call log screen (P59) or the Received call detail screen (P59).

■ Using Phonebook

Open the Phonebook list screen (P88) or the Phonebook detail screen (P89).

2 Select an entry in the history or Phonebook ▶


■ When two or more phone numbers are saved in the Phonebook entry on the Phonebook list screen
Press  to select the number to dial.

■ When two or more phone numbers are saved in the Phonebook entry on the Phonebook detail screen
Press  to display the phone number to call, and press  [Send].

3

· The Dialing confirmation screen shows a phone number prefixed with "+ Country code".

■ To make a video call

 [Menu] ▶ Select "Video phone call"

4 "International call"

Original number without changing : The leading "0" will not be replaced with "+Country code".

Cancel : Dialing will be canceled.


Note

· This function is available only out of the FOMA network service area (during international roaming).

Making an International Call (Including to Japan) Selecting Registered Country Code

Register frequently used country names and country codes in the "Country code list" in "International call" to make a call quickly.

1 Enter "Area code - other party's phone number"

2  [Menu] ▶ "Int. call"

The Select country screen opens.


3 Select a country code

The "+ Country code" is added at the beginning of the phone number.

· When the entered phone number starts with "0", it is replaced with "+ Country code".

4

■ To make a video call

 [Menu] ▶ Select "Video phone call"

Note

· By default, 22 country codes are stored in the Select country screen. Country codes can be added. → P65


· Available operations on the Country code selection screen (P65) are the same as on the Country code list screen.

Making a Domestic Call

Make a call by dialing the other party's phone number from the area code (city code).

· If you make a call to an overseas WORLD WING user, make an international call using the same steps in "Making an International Call (Including to Japan)" (P329) even if you and the other party are in the same country or region.

· When "Auto international dial" is set to "ON", the Dialing confirmation screen opens if a call is made to a phone number whose area code (city code) starts with "0" from an entry in the Phonebook or Dialed/Redialed calls list. In this case, select "Original No" to make a call.

When you and the other party are using a telecommunication carrier that handles FOMA video calls, international video calls are available by pressing  [Menu] ▶ Select "Video phone call" after the international call dialing procedure.



· For information such as countries or telecommunication carriers available, visit the DOCOMO International service website.

· Depending on the terminal of the other party of an international video call, the video streaming may fail, or the connection may not be established.

Receiving Calls Overseas



1 A call arrives

The ring tone sounds.

-  [Silent] : Stop the ring tone
-  : Place the call on response hold.→P70

2

Answer the call.

- Receiving video calls by still image
Press 
- Receiving video calls by image
Press  [image]

3 To end the call

Note

- When a call arrived during international roaming, the call will be forwarded from Japan to other countries. For caller communication fee to Japan will be charged, while for receiver fee will be charged including the international forward fee.

Making calls to your FOMA terminal from Japan

You can receive calls to your phone number in Japan.

Receiving a call to your FOMA terminal from an overseas caller

You can receive a call via Japan regardless of where you are. Similarly to making an international call to Japan, you can be called using the following steps.

Make a call by entering "International Access Code*1-81*2 - your phone number excluding leading the "0"*3"

*1 When dialing to a mobile phone, you may be able to dial by entering "+" instead of the International Access Code.



*2 Enter the country code of Japan.

*3 Enter "90-XXXX-XXXX" when the number starts with "090" or "80-XXXX-XXXX" when it starts with "080".

Setting Telecommunication Carrier Search Mode

Select a search mode to find available networks when the network is switched overseas.

- "Network search mode" is set to "Auto" by default. When you use the FOMA terminal in Japan or during connecting to 3G network, it is recommended to switch "Network mode" to "WCDMA only" to reduce the consumption of the battery pack.

1  [Menu] ▶  (Settings) ▶ "International roaming" ▶ "Network" ▶ Perform the following operations:

[Network search mode]

Auto : Automatically search and set the network.

Manual : The Network search screen appears. Select and set a network from the list.

▶ "Yes" ▶ Select a network

- Available networks are followed by the circular mark.

Network re-search : Search for networks using the same method (Auto/ Manual) as the previous search.

[Network mode]

Specify the network to search for.

- Check available communication systems in the country of use before specifying a network.→P324

Auto : Search for all available networks regardless of their communication systems.

WCDMA only : Search only for WCDMA networks.

GSM only : Search only for GSM networks.

[Preferred NW lists]

You can prioritize networks to be searched or set.→P333

[Operator name display]

Set whether to show the network name that is currently connected on the Stand-by display. →P333

[Host selection]

Specify a host other than i-mode.→P191

[SMS center]

Set the SMS center address.→P172

Note

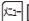


- After coming back to Japan, if the icon indicating the network status remains out of the service area, set "Network mode" to "Auto" or "WCDMA only" and "Network search mode" to "Auto".

<Network search mode>


- Searching for networks may take a long time.
- When this option is set to "Auto", networks will be searched automatically when the terminal power is turned on or the terminal moves out of the service area.

Setting Preferred Telecommunication Carrier

You can register up to 20 networks to be searched or set by priority.

- 1  [Menu] ►  (Settings) ► "International roaming" ► "Network" ► "Preferred NW lists"
The preferred network list screen opens.
 - If networks have been already registered, the network names appear in order of priority.
 -  [Change]: Replace the selected network with another network.



- 2  [Add] ► Perform the following operations:

[UPLMN manual select]


Add a network to the Preferred list by entering MCC (country code) and MNC (network code).

► Enter an MCC and MNC ►  [Done] ► "Yes"

[UPLMN select by list]

Select and add a network from the default network list.

► Select a network ► "Yes"

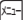
-  [Country]: Select a country name to specify an available network in the country from the list.

[Set VPLMN to UPLMN]

Add the network currently connected.

Note

- Depending on the signal strength, a network that is not registered may be connected.
- The settings of this function are saved on the UIM.

- 1 Preferred NW lists screen (P333) ►  [Menu] ► Perform the following operations:

[Add new]

Search and add a newly found network to the selected network. Go to Step 2 in "Setting Preferred Networks" (P333).

[Change]

Replace the selected network with another network. Go to Step 2 in "Setting Preferred Networks" (P333).

[Delete]

Delete the selected network.

[Move up]*

Move the selected network up one in the list.

[Move down]*



Move the selected network down one in the list.

* This may not appear depending on the current position in the list.

Operator name display

Displaying the Network Name while Roaming

Specify whether to show the network name currently connected on the Stand-by display.

- 1  [Menu] ►  (Settings) ► "International roaming" ► "Network" ► "Operator name display" ► "ON"/"OFF" ► "Yes"

Activating the Roaming Guidance

Before leaving Japan, you can set to play a voice prompt indicating that you are overseas.

- Setting must be done while in Japan.
- The service may not be operable when "圏外" is displayed.

1  [Menu] ▶  (Service) ▶ "Others" ▶ "Roaming guidance setting" ▶ Perform the following operations:

[Activate]

Activate the roaming guidance.

[Deactivate]

Deactivate the roaming guidance.

[Check setting]

Activate the roaming guidance.

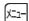

2 "Yes"

Note

- When deactivating the guidance, a call tone set by the overseas carrier sounds.
- Even if you activated this option, a voice guidance in a foreign language may be played due to the overseas carrier's services.

Setting to Accept No Incoming Calls during Roaming

You can set so that all incoming calls, mail, etc. are all restricted during roaming. You can also set to restrict only incoming video calls.

1  [Menu] ▶  (Settings) ▶ "International roaming" ▶ "Call barring" ▶ Perform the following operations:

[Activate -roam]

Start call barring.

▶Select from the following options ▶ Enter the Network security code ▶ "Yes"

Barring all incoming calls : Restrict all incoming calls.

Data calls barring : Restrict only incoming video calls.
(Only inside the 3G network service area).

[Deactivate - roam]

▶Enter the Network security code ▶ "Yes"

[Check setting - roam]

Check the current status of the setting.

Note

- This may not be set depending on international carriers.

Using Network Services during Roaming

You can use network services of the Voice mail service, Call Forwarding service, and Roaming guidance overseas.

- To use Voice mail (int.) or Call forwarding service (Int.), subscription to Voice mail or Call forwarding service is required.
- To use the network service overseas, activate Remote Control beforehand. → P315
- International call charges to Japan apply.
- The services may not be operable in some countries.
- Some overseas carriers may not offer this option.

Voice Mail (International)

Operating the Voice Mail Service Overseas

You can activate/deactivate the Voice mail service overseas. You can also play recorded messages or change the settings following a voice guidance.

- The service may not be operable when "圏外" is displayed.

1  [Menu] ▶  (Settings) ▶ "International roaming" ▶ "Voice mail (Int.)" ▶ Perform the following operations:

[Activate]

Activate the Voice mail service.

[Deactivate]

Deactivate the Voice mail service.

[Play messages]

Play a Voice mail message.

[Voice mail setting]

Change the settings following a voice guidance.

[Set ring time]

Set time before connecting to the Voice mail service center after a call arrives.

2 "Yes"

3 Operate according to the voice guidance

Note

- To use the Voice mail service outside the service area at your overseas location, you need to turn off the terminal where signals can be received in advance.

Operating the Call Forwarding Service Overseas

You can activate/deactivate the Call forwarding service overseas.

· The service may not be operable when "圏外" is displayed.

- 1  [Menu] ▶  (Settings) ▶ "International roaming" ▶ "Call forwarding (Int.)" ▶ Perform the following operations:

[Activate]

Activate the Call forwarding service.

[Deactivate]

Deactivate the Call forwarding service.

[Call forwarding settings]

Check the current status of the setting.

- 2 "Yes"
- 3 Operate according to the voice guidance

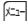

Note

· To use this service outside the service area at your overseas location, you need to turn off the terminal where signals can be received in advance.

Operating the Roaming Guidance Overseas

You can activate/deactivate the Roaming guidance overseas.

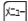

· The service may not be operable when "圏外" is displayed.

- 1  [Menu] ▶  (Settings) ▶ "International roaming" ▶ "Roaming guide (Int.)"
- 2 "Yes"
- 3 Operate according to the voice guidance

Setting the Remote Access Overseas

You can activate/deactivate the Remote access overseas.



· The service may not be operable when "圏外" is displayed.

- 1  [Menu] ▶  (Settings) ▶ "International roaming" ▶ "Remote access setting(Int.)"
- 2 "Yes"
- 3 Operate according to the voice guidance

Operating the Caller ID Request Service Overseas

You can activate/deactivate the Caller ID request service overseas.

- The service may not be operable when "圏外" is displayed.
Even if "Caller ID request service" is activated, an incoming call may be displayed as "Not Support" overseas.

- 1  [Menu] ▶  (Settings) ▶ "International roaming" ▶ "Caller ID request (Int.)"
- 2 "Yes"
- 3 Operate according to the voice guidance

PC Connection

Data Communications Available from the FOMA Terminal	340
Precautions before Use	341
Before Using.....	342
Preparing for Data Transfer (OBEX™ Communication)	343
Preparing for Data Communications.....	343
AT Commands.....	344
Using the bundled CD-ROM.....	344
Introduction to DOCOMO Keitai datalink	344

For details about data communication, refer to the "PC Connection Manual" (PDF format) contained in the bundled CD or available at the DOCOMO website.

Adobe® Reader® is required to open the "PC Connection Manual" in the PDF format. If the program is not installed on your PC, install Adobe® Reader® contained in the bundled CD.

For details about using the program, see "Adobe Reader" Help.

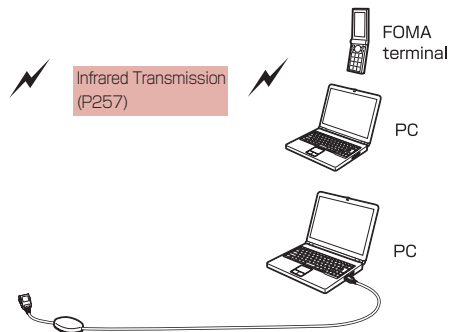
Data Communications Available from the FOMA Terminal

When the FOMA terminal is connected to a PC, data communication is available with packet communication and OBEX™ Communication(data transfer).

- This FOMA terminal does not support 64K data communication.
- This FOMA terminal does not support Remote Wakeup.
- This FOMA terminal does not support FAX communication.
- This FOMA terminal is not compatible with the DOCOMO PDA "musea" or "sigmarion III"

Data Transfer (OBEX™ Communication)

Sends or receives images, songs, contacts, or mails to exchange them between, for example, the FOMA terminal and a PC.



- FOMA USB Cable with Charge Function 01/02 (optional)
- DOCOMO Keitai datalink (P344)

* This FOMA terminal can not send images to a PC.

Packet communication

Communication charges are based on the amount of data exchanged^{*1}. Packet communication is a suitable way of using the terminal to send and receive data when the terminal needs stay connected to the network.

Communication speed depends on communication environment and network congestion.

Using an access point of DOCOMO internet connection service such as "mopera U" allows you to use high-speed communication at the maximum rate of 3.6Mbps for receiving and 384kbps for sending (based on best-effort connection)^{*2}.

^{*1} Communication charges become high when you exchange a large amount of data.

- ^{*2}
- The maximum speed of 3.6Mbps for receiving and 384kbps for sending are theoretical values and they do not show the actual performance. The actual performance depends on your communication environment and network congestion.
 - If you connect to an area which is out of the FOMA HIGHSPEED Area or an access point that does not support HIGH-SPEED, the connection for both sending and receiving will be limited to 384kbps at maximum rate.

The FOMA L-06A can use an access point even overseas that supports W-CDMA or GPRS packet communication to perform data communication.

Precautions before Use

Internet Service Provider Fees

Fees to an Internet service provider (ISP) are required to connect to the Internet. These connection fees, paid to the ISP, are separate from the FOMA service fees. For detailed

information on connection fees, contact your ISP. You can use "mopera U", DOCOMO Internet connection service. A separate subscription (fee-based) is required to use "mopera U".

Setting the Internet Connection Internet service providers, etc.

For packet communication, use an access point compatible with packet communication.

- DoPa access points cannot be connected.
- For service contents of "mopera" and its connection settings, visit "mopera" web site.
<http://www.mopera.net/mopera/index.html>

Conditions for Packet Communication

The following conditions^{*} must be met to connect between the FOMA terminal and a PC to perform communication. However, even if the conditions are met, communication may still not be possible depending on the amount of traffic at the base station or the signal strength.

- FOMAUSB Cable with Charge Function 01/02 (optional) must be available on the PC.
 - The FOMA terminal must be in a FOMA service area.
 - The access point must support FOMA packet communication.
- ^{*} These conditions are for domestic use in Japan.

Before Using

Operating Environment

The following operating environment is required for a PC to use data communication:

Item	Requirements
PC Main Unit	<ul style="list-style-type: none">· PC-AT compatible machine with a CD-ROM drive· USB port (in accord with Universal Serial Bus Specification Rev 1.1/2.0)* * However, this FOMA terminal does not support "USB2.0 High-Speed".· Display resolution of 800x600 pixels, High Color (65,536 colors) or higher recommended
OS ^{*1,2}	<ul style="list-style-type: none">· Windows Vista, Windows XP, or Windows 2000 (Japanese versions)
Required Memory ^{*3}	<ul style="list-style-type: none">· Windows Vista: 512M bytes or more· Windows XP: 128M bytes or more^{*2}· Windows 2000: 64M bytes or more^{*2}
Hard Disk Space ^{*3,4}	<ul style="list-style-type: none">· Available space of 5M bytes or more^{*2}

*1 DOCOMO does not guarantee proper operation if you upgrade your OS.

*2 The operating environment of DOCOMO Connection Manager is Windows 2000 SP4 or later, or Windows XP SP2 or later. For detailed operating environment, check DOCOMO website.

*3 Required memory or hard disk space may vary depending on the PC system configuration.

*However, USB2.0 HIGHSPEED does not support.

*4 DOCOMO Connection Manager requires 15MB or more.

The following warning screen may appear when you insert the bundled CD in a PC. This warning is displayed according to the security settings of the Internet Explorer. There is no problem with using the software.

Click [はい (Yes)].

Required Devices

To use data communications, the following devices and software are required in addition to the FOMA terminal and a PC:

- FOMA USB Cable with Charge Function 01/02 (optional) or FOMA USB Cable (optional)
- CD-ROM for FOMA L-06A (bundled)

Note

- Purchase the exclusive FOMA Cable with Charge Function 01/02 or FOMA USB Cable. A generic USB cable for PC cannot be used because it does not fit the FOMA USB connector.
- The terminal may not work properly with a USB HUB.

Preparing for Data Transfer (OBEX™ Communication)

To use "FOMA USB Cable with Charge Function 01/02 (optional)", install L-O6A communication setting files.

Download and install L-O6A Communication Setting Files

- Install from the bundled CD
or
- Download and install the files from the DOCOMO website



Data Transfer

Preparing for Data Communications

The flow for preparing to connect the FOMA terminal and a PC for performing packet communication is as follows. For details, see "PC Communication Manual" (PDF format).

Connect the FOMA terminal and a PC using a FOMA USB Cable with Charge Function 01/02



Download and install L-O6A Communication Setting Files

- Install from the bundled CD
or
- Download and install the files from the DOCOMO website



Check after installation



Configure using the installed DOCOMO Connection Manager

Configure without using the DOCOMO Connection Manager



Connect

Note

· "L-06A Communication Setting Files (drivers)" and "DOCOMO Connection Manager", that are software programs for data communication contained in "CD-ROM for FOMA L-06A", can also be downloaded at the DOCOMO website.
<http://www.nttdocomo.co.jp/support/download/>

Software for Data Communication Contained in "CD-ROM for FOMA L-06A"

L-06A Communication Setting Files (Drivers)

These files (drivers) are required for communication or file transfer when the FOMA terminal and a PC are connected using the FOMA USB Cable with Charge Function 01/02 (optional).

DOCOMO Connection Manager

This software is designed to allow users to setup dial-up connection, etc. that is necessary to perform data communications quickly.

AT Commands

An AT command is an instruction used by a PC to check function settings or status of the FOMA terminal. For details, refer to "PC Connection Manual" (PDF format) contained in the bundled CD.

Using the Bundled CD-ROM

The bundled CD contains software that is necessary to perform data communication on the FOMA terminal, and "PC Connection Manual" and "Kuten Code List" instruction manuals (PDF format). For details, refer to the bundled CDROM.

Introduction to DOCOMO Keitai datalink

"DOCOMO Keitai datalink" is a software program to allow you to make a backup of Phonebook entries or mail on your terminal and edit them. It is offered at the DOCOMO website. For details and to download the software, visit the following web site. <http://datalink.nttdocomo.co.jp/> (Japanese only)

Note

· For details about downloading, transferable data, operating environment such as supported OS, installing, operating, or restrictions, visit the above web site. For operations after installing the software, see Help of the software. To use DOCOMO Keitai datalink, a USB Connection Cable (optional) is required.

Appendix/Troubleshooting


Menu List	346
Dial Keys Assignments to Characters	357
Combinations of Multiaccess Functions	358
Combinations of Multitask Functions	359
Services Available from the FOMA Terminal	360
Options and Related Devices	361
Interfacing to External Devices	
Video Play Software	361
Troubleshooting	
Troubleshooting	362
Error Messages	367
Warranty and After-sales Service	382
i-mode Malfunction Diagnosis Site	384
Updating Software	385
Major Specifications	390
Number of Items that can be Stored, Registered and Protected on the FOMA Terminal	393
SAR Certification and Other Information	394
Export Administration Regulations	396
Intellectual Property Issues	397



Menu List



Functions with indicated in the "Default settings:" column are those that can be initialized to their defaults with "Reset settings". → P290




	Function name		Default settings	Reference
✉ Mail	Inbox		♪ Welcome mail ♪	P148
	Outbox		Empty	P149
	Unsent message		Empty	P149
	Compose message		–	P131
	Check new messages		–	P144
	Receive option		–	P144
	SMS	Compose SMS	–	P168
		Check new SMS	–	P171
	Template		Pre-installed data only	P137
	Mail setting	Communication	Receive option set: OFF Receive attach file: All items are selected Check new messages : All items are selected	P162
		Edit	Edit header: None Edit signature: None Edit quotation: > Auto attach: "Signature" is selected	P163

	Function name		Default settings	Reference
✉ Mail	Mail setting	Display	Font size: Standard Scroll: 1 line Mail list: 2 lines name Folder security: None is selected Melody auto play: ON Receiving display: Alarm mode	P163
		SMS	SMS report request: OFF SMS validity period: 3 days SMS input character: Japanese (70characters)	P171
	Others	Check setting: - Reset setting: -	P164	
☰ i-mode	iMenu		–	P175
	Bookmark		Empty	P182
	Screen memo		Empty	P183
	Last URL		–	P177
	Go to location	Input address	–	P180
		URL history	No entries	P180
	Message	MessageR	No messages	P166
		MessageF	No messages	P166
	i-Channel	i-Channel list	Basic channels	P195
		Ticker setting	Ticker display : ON Ticker speed: Normal	P196

	Function name		Default settings	Reference
 i-mode	i-Channel	Reset i-Channel	–	P196
		Check new messages	–	P165
	i-mode setting	Communication	Connection timeout : 60 seconds Check new messages : All items are selected	P189
		Display	Images : ON Sound effect : ON Use phone info: Yes Font size: Standard Scroll: 1 line Message list: 2 lines Auto-display: MessageR preferred Melody auto play: ON	P189
	i-motion	i-motion auto play: ON i-motion type: Standard type	P194 P194	
	Home	Disable, No URL	P190	
	Certificates	All are valid	P192	
	Others	Check settings : - Reset settings : -	P190	


	Function name		Default settings	Reference
 i-appli	Software list		Only pre-installed i-appli	P223
	i-appli info	Security error history	No entries	P234
		Auto start info	No information	P234
		Trace info	No information	P234
	i-appli settings	Display SW info	Not display	P223
		Auto start set	ON	P233
 Phonebook & Logs	Add to phonebook		Empty	P80
	Search phonebook		Show all data	P87
	No. of phonebook		–	P92
	Phonebook settings	Default mode	Show all data	P93
		Create domain list	@docomo.ne.jp	P93
		Display image	Show	P93
		Call/Mail history	Received calls	Empty
		Redial	Empty	P57
		Received mails	Empty	P161
		Sent mails	Empty	P161
Call duration		–	P280	


	Function name		Default settings	Reference
 Phonebook & Logs	Call costs	Check call costs	–	P281
		Set call cost limit	OFF	P281
		Delete call cost icon	–	P282
 Data box	My Picture	i-mode	None	P239
		Camera	None	P239
		Decomail picture	Only pre-installed files	P239
		Decomail pictograph	Only pre-installed files	P239
		Preinstalled	Only pre-installed files	P239
		Data transfer	None	P239
		Item	Only pre-installed files	P239
		Animation	None	P239
	Music	i-mode	None	P217
		Playlists	None	P217
	i-motion	i-mode	None	P249
		Camera	None	P249
		Preinstalled	Only pre-installed files	P249
Data transfer		None	P249	


	Function name		Default settings	Reference
 Data box	Melody	i-mode	None	P254
		Preinstalled	Only pre-installed files	P254
		Data transfer	None	P254
 MUSIC	Recent played*		–	P210
	Music player	Music life	Train : All songs, level 2 Sports timer : All songs 30 Minutes Sleeping : All songs 30 Minutes	P219
		Playlists	Empty	P215
		All songs	Empty	P211
		Artist	Empty	P211
		Genre	Empty	P211
		Album	Empty	P211
		 LifeKit	Receive Ir data	Receive
Receive all	–			P260
One touch key			1-3: Empty My One Touch key: Schedule	P265
Custom menu			–	P278


	Function name		Default settings	Reference
LifeKit	Record message	Rcd. msg. set	Activate record msg.: OFF	P73
		Message List	Empty	P75
	Stopwatch		–	P283
Camera	Photo-mode		–	P200
	Movie-mode		–	P203
	Camera setting	Saving option	Auto saving: OFF	P206
		Shutter sound	Shutter sound 1	P207
		Tuning	Auto	P207
Stationery	Schedule		Empty	P269
	Alarm		Empty	P267
	Memo		Empty	P287
	To do list		Empty	P273
	World time		Tokyo	P282
	Calculator		–	P286
	Unit Converter	Currency	Yen/US Dollar	P283
		Surface	Acre/Hectare	P285
Length		mm/cm	P285	


	Function name		Default settings	Reference
Stationery	Unit Converter	Weight	mg/g	P285
		Temperature	F/C	P285
		Volume	Milliliter/Liter	P285
		Velocity	km/h/meter/sec	P285
	Remembering dates	Date counter	Empty	P276
Date Search		–	P277	
Settings	Sounds& Vibration	Ring tone	Voice call: 25 Ring01 Video call: 26 Ring02 Mail: 15 Message01 Message R: 16 Message02 Message F: 17 Message03 SMS: 18 Message04	P98


	Function name	Default settings	Reference	
 Settings	Sounds& Vibration	Effect tone	Dial sound: Digital tone Flip tone: Flip tone 1 Menu effect: Menu effect 2 Power On: 23 Power On Power Off: 24 Power Off Low battery : ON	P101
		Volume	Incoming call: Level4 Mail/Message/SMS: Level4 Alarm/Schedule: Level4 Keypad tone: Level2 Flip tone: Silent Menu effect: Level2 Power On/Off: Level4 Popup: Silent Receiver Level4	P99
		Vibrator	(All) OFF	P100
		Manner mode set	General manner	P103
		Mail ring duration	1 cycle	P102
		Set mute ring (sec.)	OFF	P125
		Display	Stand-by	Wallpaper : Image, drop Display items: Clock Clock type: Large digital
	Call display		Incoming voice call: Image, incoming_call_white Incoming video call: Image, incoming_call_white	P105
	Wake-up display		Image, pwron	P106

	Function name	Default settings	Reference	
 Settings	Display	Sub display clock	Analog clock 1	P107
		Font size	User set	P111
		Dialing	Motion dialing: OFF Dialing quick search: ON Dialing font color: Black	P106
		Menu settings	Simple menu: ON Menu customization: Color theme setting Menu guidance: ON	P108 P108 P108
		Backlight	Display duration : 30 seconds Display brightness : 100 % AC connected : Display setting	P107
		Color theme	Sparkling wine	P108

	Function name		Default settings	Reference
 Settings	Display	Lighting LED	Lighting: ON Select patterns Incoming voice call: Pattern 1/Red Incoming video call: Pattern 1/Green New mail: Patter 5/ Red&Green New message R: Pattern 2/Red New message F: Pattern 2/Green New SMS: Patter 6/ Red&Green New Voice mail: Pattern 4/Red New Record message: Pattern 4/ Green Playing music: Patter 7/Red&Green Alarm: Pattern 3/Red Schedule/To do list: Pattern 3/Green During call: OFF Missed call: ON Unread message: ON	P110




	Function name		Default settings	Reference
 Settings	Call/VT/ Dialing	Incoming call	Answer mode : SEND key only Auto answer: - Auto answering: OFF Accept/Reject call: - Accept/Reject set: Accept - Reject unknown: OFF Anonymous caller: (All items) Disable On hold tone : Hold tone 1 Display phonebook image : ON	P69 P290 P122, 123 P126 P124 P71 P107


	Function name		Default settings	Reference	
 Settings	Call/VT/ Dialing	Video phone	Videophone set: - Displaying setting : Other-Me - Send camera image: OFF - Screen size: Large - Visual preference: Normal - Light: Always on - Auto redial as voice: OFF - Hand-free switch: ON Substitute image: Default Response hold image: Default Holding image: Default	P76 P76 P76 P76 P76 P76 P76 P75 P76 P76	
			Call feature	Reconnect alarm : Alarm Off Quality alarm : Alarm Off Holding tone : Hold tone 1 Close setting : End the call Noise reduction: ON	P66 P102 P71 P70 P66
			Self mode	OFF	P119


	Function name		Default settings	Reference
 Settings	Call/VT/ Dialing	Prefix dial	PREFIX 1 : 009130010 PREFIX 2/PREFIX 3: Empty	P65
		Sub-address setting	ON	P66
		Earphone	Switch call: OFF	P288
	Lock/ Security	Lock	Lock all : Not set Call/Mail lock: OFF Data access lock : OFF	P118 P118 P119
		Secret mode	OFF	P121
		Display call/ mail logs	(All items) ON	P121
		Change Security code	Security code (4 digits): 0000	P116
		PIN code	-	P116


	Function name		Default settings	Reference
Settings	International roaming	Network	Network search mode: Auto	P332
			Network mode: Auto	P332
			Preferred NW lists	P333
			: (The contents saved in the UIM is displayed)	P333
			Operator name display : ON	P191
			Host selection : i-mode	P172
			SMS center : DOCOMO	P172
	Voice mail (Int.)	–	P335	
	Call forwarding (Int.)	–	P336	
Remote access setting (Int.)	–	P336		
Caller ID request (Int.)	–	P337		
Roaming guide (Int.)	–	P336		
Call barring	–	P334		
International dial	Auto assist setting	Auto	P64	
	IDD prefix setting	IDD prefix name: (WORLDCALL) IDD prefix code : 009130010	P64	

	Function name		Default settings	Reference
Settings	International dial	Auto international dial	Auto international dial : ON	P64
		international dial	Target country : Japan +81	
		Country code list	China 86, Taiwan 886, Japan 81, Korea 82, Hong Kong 852, U.S.A. 1, U.K. 44, Italy 39, India 91, Indonesia 62, Australia 61, Netherlands 31, Canada 1, Singapore 65, Spain 34, Thailand 66, Germany 49, Philippines 63, France 33, Brazil 55, Vietnam 84, and Malaysia 60	P65
	Date&Time	Set Date&Time	Auto time adjust: ON	P48
		Date&Time format	Date format : YYYY/MM/DD Time format : 12-hour	P111
		Hour indication	Set sound : OFF	P290
	Others	Character input	–	P298 P299 P302 P303

	Function name		Default settings	Reference
 Settings	Others	Memory status	–	P291
		バイリンガル	Japanese	P112
		Power saver mode	OFF	P108
		Reset/Clear	–	P127
		Software update	–	P385
		Battery level	–	P46
 Own number			Empty	P279
 Service	Voice mail	Activate	–	P306
		Set ring time	–	P306
		Deactivate	–	P307
		Check setting	–	P307
		Play messages	–	P307
		Voice mail setting	–	P307
		Check messages	–	P307

	Function name		Default settings	Reference
 Service	Voice mail	Notify missed call	–	P307
		Del. voicemail icon	–	P307
		Tone/Vibration message notification	–	P307
	Call waiting	Activate	–	P308
		Deactivate	–	P308
		Check setting	–	P308
	Call forwarding	Activate	–	P310
		Deactivate	–	P310
		Register the forwarding number	–	P310
		Setting if forwarding number busy	–	P310
Check setting		–	P310	

	Function name		Default settings	Reference
 Service	Nuisance call blocking	Register nuisance caller	–	P311
		Register selected number	–	P311
		Delete all entries	–	P311
		Delete last entry	–	P311
		Check the number of entries	–	P311
		Caller ID notification	Activate/Deactivate	–
	Check setting		–	P312
	Caller ID request	Activate	–	P312
		Deactivate	–	P312
		Check setting	–	P312
	Set in-call arrival act	Activate	–	P312
		Deactivate	–	P312
		Check setting	–	P312

	Function name		Default settings	Reference
 Service	Arrival call act		Answer	P313
	Others	Additional service	Empty	P317
		Additional guide	Empty	P318
		English guidance	–	P314
		Service numbers	–	P314
		Roaming guidance setting	–	P334
		Multi number	–	P315
		Dual network	–	P313
	Remote control	–	P315	

■ Simple Menu Item List

Function name		Reference	
Phone	Search phonebook	P87	
	Redial	P57	
	Record message	P59	
	Delete last entry	Record msg. settings	P74
		Record msg. list	P75
	Add to phonebook	P80	
	Own number	P279	
Mail	Inbox	P148	
	Outbox	P148	
	Unsent message	P149	
	Compose message	P131	
	i mode information	P188	
i-mode	i-menu	P175	
	Bookmark	P182	
	Screen memo	P184	
Camera	Photo-mode	P200	
	Movie-mode	P203	
	View photo	P239	
	View movie	P249	
	Camera Settings	P206	

Function name		Reference	
Settings/ Tools	Ring tone settings	Select ring tone	P98
		Select effect tone	P101
		Volume	P99
		Vibrator	P100
	Stand-by display		P103
	One touch key		P265
	Alarm		P267
	Calculator		P286
	Call cost/duration	Call duration	P280
		Call costs	P281
	Voice mail	Activate	P306
		Deactivate	
		Play messages	
	Normal menu		P109

Dial Keys Assignments to Characters

Entry Modes Key	Hiragana and Kanji	Katakana	Alphabetic characters	Digits
1	あいうえお あいうえお	アイウエオ アイウエオ	.@/!:-* ¹	1
2	かきくけこ	カキクケコ	abcABC* ²	2
3	さしすせそ	サシスセソ	defDEF* ²	3
4	たちつてと つ ²	タチツテト ツ ²	ghiGHI* ²	4
5	なにぬねの	ナニヌネノ	jklJKL* ²	5
6	はひふへほ	ハヒフヘホ	mnoMNO* ²	6
7	まみむめも	マミムメモ	pqrPQRS* ²	7
8	やゆよ やゆよ ²	ヤユヨ ヤユヨ ²	tuvTUV* ²	8
9	らりるれろ	ラリルレロ	wxyzWXYZ* ²	9
0	わをんわ □ (Space) 、。ー!?	ワランワ ³ □ (Space) 、。ー!?	□ (スペース) !?-,':()* ¹ _ - ¹ & ¥	0
*	* ° ⁴ 、。ー!?	* °、。ー!?	!?-,':()* ¹ _? ¹ & ¥	*+P ⁵
#	(Line feed)	(Line feed)	(Line feed)	# ⁵

*1 In full-pitch character entry, "~" is entered.

2 Press [] to switch between upper and lower case.

*3 Lower case "ワ" can be entered in full-pitch character entry.

4 These can be added or entered when a character has not been set. For characters that can take only a voiced sound symbol, "" is added, and for characters that can take both voiced and semi voiced sound symbol, "" or "" is entered.

*5 These symbols can be entered when they are valid in that field.

Combinations of Multiaccess Functions

New communication application Application in progress	Voice calls		Video calls		i-mode	i-mode mail		SMS		Packet communication connected to a PC	
	Outgoing	Incoming	Outgoing	Incoming	Connect	Send	Receive	Send	Receive	Send	Receive
Voice calls	△ ^{*1}	△ ^{*2}	×	× ^{*3}	○ ^{*4}	○	○	○	○	○	×
Video calls	×	× ^{*3}	×	× ^{*3}	×	×	×	×	○	×	×
i-mode	○	○	△ ^{*5}	× ^{*3}	×	×	× ^{*6}	×	○	×	×
i-mode mail	○	○	×	× ^{*3}	×	×	× ^{*6}	×	○	×	×
Packet	○	○	×	× ^{*3}	×	×	×	×	○	×	×

○: Can be launched.

△: Can be launched under certain conditions

×: Cannot be launched.

*1 If you subscribe to the Call waiting service, you can place the current voice call on hold and make another call.

*2 If you subscribe to the Call waiting service, you can place the current voice call on hold and answer the call. If you subscribe to the Voice mail service/Call forwarding service, the function can be launched.

*3 The call is recorded in Received call log as a missed call.

*4 The i-appli cannot initiate communication.

*5 Available only for outgoing calls using Phone To function. In that case, i-mode will be disconnected.

*6 After i-mode or i-mode mail is terminated, mail will be received.

Combinations of Multitask Functions

New Application Running Application	Voice call	Video Calls	Mail	i-mode	i-appli	Phonebook	Data box	MUSIC	LifeKit ¹	Camera	Stationery	Service/ Settings
Voice calls	○	×	○	○	×	○	○ ³	×	×	×	○ ²	×
Video calls	×	×	×	×	×	○ ⁴	×	×	×	×	×	×
Mail	○	○	×	×	×	○	○ ³	○	×	○	○ ²	×
i-mode	○	×	×	×	×	○	○ ³	○	×	○	○ ²	×
i-appli	×	×	×	×	×	×	×	×	×	×	×	×
Phonebook	○	○	○	○	×	×	○	○	×	○ ⁹	×	×
Data box	○	○	○	○	×	○	×	○	×	○	○ ²	×
i-motion	○	○	○	○	×	○	×	○	×	○	○ ²	×
MUSIC ⁵	○	○	○	○	×	○	○	×	×	×	×	×
LifeKit ¹	○	○	○	○	×	○	○ ³	○	×	×	×	×
Camera	○	○	○	○	×	○	○ ³	○	×	×	×	×
Stationery	○	○	○	○	×	○	○ ³	○	×	×	×	×
Service/Settings	○ ⁶	×	×	×	×	○ ⁸	○ ⁷	○	×	×	×	×

○: This can run concurrently.

×: This cannot run concurrently.

*1 Excluding "Receive Ir Data".

*2 "Schedule", "To Do list", and "Memo" can be launched from the new task screen.

*3 This task can be launched to set a melody, a Chaku-Uta-Full® song, or an image to a Schedule event or To Do task.

*4 This can be launched from the submenu.

*5 Playback will be paused before the new task is launched. After the task is finished, you can resume playback.

*6 This can be launched from "Service numbers".

*7 This can be launched from "Select ring tone", "Stand-by display", "Call display", or "Wake-up display".

*8 This can be launched from options in "Reject on list" and "Call forward".

*9 This can be launched when you add an image while adding/editing a Phonebook entry.

Services Available from the FOMA Terminal

Services Available from the FOMA Terminal	Phone Number
Directory assistance of fixed line phones and DOCOMO mobile phones (pay service: service and call charges) (No assistance provided for subscribers not listed)	(No prefix) 104
Telegraph (charges apply : telegram fee)	(No prefix) 115
Time check (charges apply)	(No prefix) 117
Weather forecast (charges apply)	Area code + 177
Police emergency	(No prefix) 110
Fire and ambulance	(No prefix) 119
Marine emergency call and accident reports	(No prefix) 118
Message Dial for times of disaster (charges apply)	(No prefix) 171
Collect call (Charges apply to the receiver)	(No prefix) 106

Note

- If you use the collect call service (106), the receiver of the call is charged for the call cost and a commission of 90 Yen (94.5 Yen including tax) per call (as of March 2009).
- When you use the directory assistance service (104), you are charged for the call cost and service charge of 100 Yen (105 Yen including tax). This service is provided free of charge for those visually impaired or physically disabled in the upper body. For details, call 116 (NTT sales contact) from a fixed line phone (as of March 2009).

- When you use "Call Forwarding" from a fixed line phone and have specified a mobile phone as its forwarding destination, the caller may hear a ring tone even if the mobile phone is busy, out of service area, or turned off depending on the settings of the fixed line phone and mobile phone.
- Services such as a call to 116 (NTT sales center), Dial Q2, Message Service and credit card calls are unavailable. (Credit card calls can be made from a fixed line phone or public phone to a FOMA terminal.).
- Even when the UIM is not inserted, emergency phone numbers (911, 999, 112, 000, and 08) can be dialed to make an emergency call overseas.. However, when the Self Mode is set to "ON", emergency calls cannot be made.
- This FOMA terminal supports "緊急通報位置通知 (Emergency Location Report)". When calling 110, 119, or 118 from the FOMA terminal, your current location (location information) is automatically provided to concerned organizations such as the police. The organization may not receive accurate location information depending on your current location or the signal reception. If you do not send your Caller ID such as dialing with "184" added per call, the location information and Caller ID will not be sent. However, if the concerned organization judges the information is necessary to protect a human life, it may acquire your location information and Caller ID. Different organizations and locations may be implementing the "Emergency Location Report" system on different dates.
- For a call to 110, 119 or 118 from the FOMA terminal, because the police or fire department may try to contact you, inform them that you are calling using a mobile phone and give your phone number and detailed information about the place where you are. Do not move around while you are talking during an emergency call to avoid it being terminated unexpectedly. Do not turn the terminal power off

immediately after the call is over; and keep the FOMA terminal ready to receive calls for approximately 10 minutes.

- Depending on the area you are calling from, you may not be connected to the local police or fire department. In such case, use a public phone or fixed line phone nearby.

Options and Related Devices

Using the FOMA terminal with various optional devices makes it more convenient for various uses, both personal and business. Some of the products listed below may be unavailable in some areas.

For details, contact a service counter such as a docomo shop. For details about optional devices, see the related operation manuals.

- Battery Pack LQ2
- Back Cover L10
- Flat-plug Earphone/microphone with Switch P01/P02
- Earphone Plug Adapter P001
- Earphone/microphone with Switch P001/P002¹
- FOMA Dry Battery Adapter 01
- Bone conduction microphone/receiver
- In-Car Holder 01
- FOMA Indoor Booster Antenna²
- FOMA Portable Charging Adapter 01
- Carry Case S 01
- FOMA USB Cable with Charge Function 01/02³
- FOMA Indoor Booster Antenna (Stand Type)²
- FOMA USB Cable³
- FOMA AC adapter 01/02⁴
- FOMA AC adapter 01 for Global use⁴

- Flat-plug Stereo Earphone Set P01
- Stereo Earphone Set P001¹
- FOMA DC Adapter P01/P02
- Desktop Holder LQ2
- *1 Earphone Plug Adapter P001 is required for connecting with the L-06A.
- *2 For domestic use.
- *3 The terminal may not work properly with a USB HUB.
- *4 Charging Using the AC Adapter →P43 to P45

Video Play Software

You need Apple Computer Inc.'s QuickTime Player (free of charge) Version 6.4 or higher (or Version 6.3 + 3GPP) to play videos (in the MP4 file format) captured with the FOMA terminal on a PC.

You can download the QuickTime Player from the following web site:

<http://www.apple.com/jp/quicktime/download/win.html>

Note

- You need a PC connected to the Internet to download the software. Separate communication charges may apply for downloading.
- For details about operating environment, downloading or operations, visit the above web site.

Troubleshooting

Check whether the terminal software requires update first, if required, update the software (Software update→ refer to P384). If the problem is not improved even following the check list, please contact with a repair counter designated by DOCOMO, or the service center.

Symptom	Check
The FOMA terminal cannot be powered on	<ul style="list-style-type: none"> · Is the battery pack inserted correctly? →P42 · Is the battery pack charged ? →P45
Charging is not available (the dial light/charging light of FOMA terminal does not light, or illumination blinks)	<ul style="list-style-type: none"> · Is the battery pack inserted correctly? →P42 · Is the adapter power plug correctly connected to an electric outlet or cigarette lighter socket? →P45 · Is the AC adapter connected to the terminal properly? →P45 · Is the AC adapter's connector connected to FOMA terminal or table holder (optional) properly if AC adapter (optional) is used? · Does FOMA terminal's charging terminal become dirty if table holder is used? If it becomes dirty, Wipe the connector terminals with a clean dry cloth or cotton swab.→P20 · Charging light may blink, if a call or other functions are operated long time while FOMA terminal is charging. Please recharge the FOMA terminal after the temperature drop down.
The FOMA terminal warms up during the operation or charging	<ul style="list-style-type: none"> · FOMA terminal, battery pack and adapter (including the chargers) will become warm while using, charging, or operating i-appli, television call long time. This is normal.→P20
Battery lifetime becomes short	<ul style="list-style-type: none"> · Is FOMA terminal left out of service area long time? FOMA terminal takes more power for searching signals in a location out of service area →P390 · The actual time that a battery pack holds its charge depends on how the FOMA terminal is used and how close the battery pack is to the end of its useful life →P390 · Battery packs are consumables. Using time will become shorter and shorter by charge repeatedly.→P43 Depending on the usage, a battery pack may run out of its charge extremely quickly even if it is fully charged. Purchase a new battery pack as specified in this manual.

Symptom	Check
The FOMA terminal powers off and powers on automatically.	· If the connector terminals become dirty, the contact may become loose, and the FOMA terminal power may be turned off. Wipe the connector terminals with a clean dry cloth or cotton swab. →P20
No operation is performed even if a key is pressed	· Is Lock all set? →P117
Display reaction is slow after a key is pressed	· Display reaction may be slow if a lot of data is saved in FOMA terminal. →P389
FOMA card cannot be recognized	· Does FOMA card is inserted correctly? →P39
A call cannot be made even if the dial button/ key is pressed	· Is Lock all set? →P118 · Is Self mode set? →P119
The ring tone do not sound	· Is Silent set at Volume settings' Incoming call volume? →P99 · Is Public mode, Manner mode, Self mode or Privacy mode set? →P71, P103, P119 · Check these settings : Accept/Reject call settings, Anonymous caller settings, Set mute ring time, and Reject unknown. →P122. P123. P124. P125 · Is the response time of the Voice mail/Call forwarding service set at 0 second? →P71 · Is "To answer" time of "Record message" set at 0 second? →P73 · Have you sent the auto answer time to "0 second"? →P286
Call is not available(the icon indicating the network status is still shown as out of service area even the FOMA terminal is removed to service area, or call cannot be made or received even in the location with good signal reception)	· Turn off and turn it back on, or reset battery and FOMA card →P39, P42, P48 · Even [in service area], [Display the signal strength: State of 3 antenna bars displayed], depending on the signal, call is not available sometimes. Please move to the other place and try again →P48 · Is "Accept/Reject call set? →P118 · Calls and messages will be difficult to make and send out in the crowd. The message [Please wait] will be displayed and accompany with a sound like the ring tone. Please move to the other place or try again later. →P73
Display is not bright enough	· Is Display off time settings set? →P108 · Adjust the Backlight Display brightness. →P107 · Is "Power saver mode" set to "ON"? →P108

Symptom	Check
The other party's voice is too low or too loud during a call	· Did you change the "Volume" setting?
Images or melodies set for some functions do not work, and default settings are used	· Is the same UIM inserted that was installed when images or melodies were obtained? →P40
A message is not automatically received	· If you have set "Revive option setting" to "ON", set it to "OFF".
i-mode, i-mode mail, i-appli and i-Channel cannot be connected	· Is "Host selection" set to something other than "i-mode"? →P191 · If you had started using the FOMA terminal before you subscribed to i-mode, turn the FOMA terminal off and then turn it back on.
i-mode mark does not disappear and keeps blinking continuously	· If i-mode access breaks down between or after i-mode(center) information or sending /receiving mail, i-mode mark keeps blinking. i-mode is stopped automatically if there is no data being transferred. And i-mode also can be stopped by pressing power button. →P174
Still images or movies look blurred	· Change to close-up mode for close-up shooting. →P205 · Check camera lens is dirty or have mist or not. →P198
Data cannot be transferred	· Is a USB HUB being used? The FOMA terminal may not work properly with a USB HUB. →P361
[X] mark appears when trying to display the image, playing for demonstration or preview	· [X] mark may appear when the image data is corrupted. →P190
Image cannot be display as the attachment file is deleted	· Check the [Attachment File Settings]. →P139 · Check the [Limit Mail Size Settings]. For the detail, see "Mobile Phone User's Guide [i-mode] FOMA version". →P147
A phone number is dialed, but a busy tone sounds and the call cannot be connected	· Did you enter the city code? →P52 · Is the phone out of service area? →P47
The icon indicating the network status remains out of service area and "Out of service area" is displayed	· Are you out of service area, or in the location with week/poor signal reception? →P48

Symptom	Check
The Terminal security code entry screen appears on the Stand-by display	· Is Lock all set? →P117
A different ring tone sounds for incoming mail	· Is the sender saved in the Phonebook with a different ring tone? →P81 · Is the sender saved in the Phonebook under a group with a different ring tone assigned? →P85
Accumulated call costs are not counted	· Have you exceeded the call charge limit? Reset the accumulated call costs to restart counting. →P281
"Please wait." or "No lines/ channels are available" is displayed.	· Audio line/packet communication facility failed, or audio line/packet communication network is extremely busy. Try again later. →P334
"Time out." appears and i-mode mail and SMS cannot be sent	

■ When overseas

Symptom	Check
The icon indicating the network status remains as out of service area, and the international roaming service is not available	· Are you out of the international roaming service area, or in a location with weak signal reception? · Check whether you are in an available service area and whether you are using an international carrier listed in the "Mobile Phone User's Guide [International Services]" or at the DOCOMO International service website. · Launch "NW search mode" to search for a compatible operator. →P332 · Switch 3G/GSM to [Automatic] status or an available network. And please turn off the FOMA terminal then turn it back if [Automatic] status is selected in Japan. →P332
A voice call or videophone call cannot be received	· Is "Bar incoming when roam" set to "Active"? →P334 · The videophone is not available during GSM/GPRS network. →P323

Symptom	Check
A voice call or videophone call cannot be received suddenly even it was available	<ul style="list-style-type: none"> · Please check the accumulative amount at docomo Information Center. Before start using the international roaming service (WORLD WING), setting an end service approximate amount is required. Service is stopped when the amount exceed the end service approximate amount. Settle the bill can start to use this service again. →P322 · Check Internet settings. Application of some special networks may not be available if Internet is set as [automatic]. Change the set to [manual] and fit the network environment(3G or GSM). →P332
The other party's caller ID is not notified. The notified caller ID is not the other party's. The FOMA terminal does not perform operations using phonebook data or Valler ID Notification.	<ul style="list-style-type: none"> · If the used network or operator does not notify the caller ID, the caller ID does not appear on the FOMA terminal screen even when the caller ID is notified. Depending on the used network or operator, the notified caller ID may be different from the other party's. →P62
Videophones, i-mode mail, SMS, and packet communication are not available	<ul style="list-style-type: none"> · Check whether you are in an available service area and whether you are using an international carrier listed in the "Mobile Phone User's Guide [International Services]" or at the DOCOMO International service website →P322 · Switch to an available network. →P332
Calls or mail cannot be received	<ul style="list-style-type: none"> · Is "Call barring" activated? →P334
After returning to Japan, the network status icon still shows out of service area	<ul style="list-style-type: none"> · Is "Network search mode" set to "Manual" ? →P332

Error Messages

Error Messages	Description
Not enough data memory	There was not enough storage space in the inbox when attempting to obtain the selected received attached file. Delete unnecessary received mail.
Please check address	The SMS cannot be sent to the entered address. Check the address.
Input address	No address was entered. Enter an address.
Could not send to the following address (561)	Mail could not be sent to the displayed address properly.
Move failed	The file/data could not be moved because an error or another problem occurred.
Some data couldn't be saved	There is data that could not be saved because there was not enough storage space in the saving location. Delete unnecessary files.
No response (408)	The terminal was unable to connect because there was no response from the site or web page. Try again.
Same time already set	Another i-αppli is set to start automatically at the same time. Two or more i-αppli cannot start automatically at the same time. Two or more i-αppli cannot start automatically at the same time.
Same file already exists	The file/folder cannot be created or saved because a file/folder of the same name already exists.

Error Messages	Description
MessageF cannot be received while you are abroad. Check the Center Inquiry functions (566)	MessageF cannot be received while you are abroad. Remove the check mark from "MessageF" in the "Check new messages" settings.
No song!	No song exists. Save a Chaku-Uta-Full® song.
Cannot find file!	No applicable Chaku-Uta-Full® song exists.
Select items	The operation cannot be performed because no song is selected. Select a song.
Cannot add songs!	Up to 50 songs can be registered to one playlist. Delete unnecessary Chaku-Uta-Full® songs from the playlist.
Too much image data Images removed from message Image size is over Reduce image in message	Images were deleted from the message because the total file size of images inserted in Deco-mail exceeded the set value.
Error in image; cannot be displayed correctly Error in image Does not work correctly	The operation could not be performed properly because the image is invalid.
View images set to "OFF"; can't be downloaded View images to "Off" Can't be downloaded	Images cannot be downloaded because "Display image" is set to "OFF." Change the setting.

Error Messages	Description
Save image?	The file cannot be saved because it is a Flash file that cannot be saved or an image that has only been partially downloaded.
The number of images does over Reduce images in the message	The maximum number of images that can be inserted in Deco-mail has been reached. Delete images in the message.
Failed to load screen memo	The screen memo cannot be displayed because an error or other problem occurred.
No screen memos	No screen memos have been registered.
Cannot add screen memo	The screen memo cannot be added because an error or other problem occurred.
Software failed	The terminal failed to start the i-appli DX.
Failed capture	The image cannot be cropped because an error occurred.
Enter MCC	No country code (MCC) was entered. Enter the country code.
Out of service area	The operation cannot be performed because the terminal is in a location with no signal or out of the FOMA service area.
Enter subject	No subject was entered for schedule or To Do. Enter a subject.
This Card cannot be recognized	The UIM cannot be recognized or the wrong type of UIM is inserted. Reinsert the UIM or insert the correct UIM and then try the operation again.
Can't zoom in case of this size	"Select size" is set to "UXGA (1200x1600)" or "SXGA (960x1280)". To use the zoom, set the image size smaller.

Error Messages	Description
MessageF cannot be received while you are abroad. Check the Center Inquiry functions (566)	MessageF cannot be received while you are abroad. Remove the check mark from "MessageF" in the "Check new messages" settings.
No song!	No song exists. Save a Chaku-Uta-Full® song.
Cannot find file!	No applicable Chaku-Uta-Full® song exists.
Select items	The operation cannot be performed because no song is selected. Select a song.
Cannot add songs!	Up to 50 songs can be registered to one playlist. Delete unnecessary Chaku-Uta-Full® songs from the playlist.
Too much image data Images removed from message Image size is over Reduce image in message	Images were deleted from the message because the total file size of images inserted in Deco-mail exceeded the set value.
Error in image; cannot be displayed correctly Error in image Does not work correctly	The operation could not be performed properly because the image is invalid.
View images set to "OFF"; can't be downloaded View images to "Off" Can't be downloaded	Images cannot be downloaded because "Display image" is set to "OFF." Change the setting.

Error Messages	Description
Certificate is rejected. (tampered)	A problem was detected during the authentication process of the SSL. The connection will be terminated.
	A connection could not be established because a modified SSL certificate was received.
Unable to download.	The file cannot be downloaded because it is invalid or an error occurred.
This data may not be displayed	This data may not play properly.
Unable to acquire	The file cannot be acquired because it is invalid or an error occurred.
Cannot forward this item	The selected data cannot be attached to mail.
Unable to acquire	The file cannot be saved because the validity period of the i-motion or a Chaku-Uta-Full® song has expired, or there are no remaining playbacks available.
Set the clock to obtain data	The data cannot be obtained because the clock has not been set.
File format not supported	The file cannot be selected because it is in an unsupported format.
This file cannot be attached	The file cannot be attached to i-mode mail.
Some functions is limited in UIM	Functions are limited because a different UIM card is inserted than the one that was inserted when the data was downloaded from a site, the file was attached to mail, or MessageR/F was saved.

Error Messages	Description
Invalid content. Change i-motion type for replay	The terminal is set not to obtain streaming type i-motion. Change the setting.
Cannot create folder	No more folders can be added because the maximum number of folders has been reached.
Too many items are protected	No more screen memos can be protected.
Invalid content, Download failed	The content cannot be downloaded because it is invalid.
Incomplete downloading	The data is not completely downloaded.
Size overReduce the message or delete attached file	The mail cannot be sent because it exceeds the maximum possible size for sending. Reduce the size of the message or delete attached files.
Playback error	The data cannot be played because it contains an error.
Cannot play this data	The data cannot be played.
Unable to play	The data could not be played because an error or other problem occurred.
Replay period has not yet started Unable to play	The file cannot be played because the playback period set to i-motion or a Chaku-Uta-Full® has not yet started. Play the file on or after the day for which playback is possible.
Replay is restricted (XXXX/XX/XX, XX:XX) - (XXXX/XX/XX, XX:XX)	The file cannot be played because it is not currently in the playback period set to imotion or a Chaku-Uta-Full®. Play the file during the playback period. * Where X represents year, month, day, and time.

Error Messages	Description
Replay is restricted (XXXX/XX/XX, XX:XX)	The file cannot be played because the i-motion or a Chaku-Uta-Full® song has expired. You cannot play the file after the expiration date. * Where X represents year, month, day, and time.
Unable to obtain data due to replay restriction data error	The data cannot be obtained because it is invalid or today's date is not in the playback period.
no recent played info!	Nothing can be played because no file has been played before.
Size of this page is not supported	The reception was stopped because the page at the site or web is too large; only a part is displayed.
	The download was stopped because the data exceeded the maximum size that can be downloaded/obtained.
Unable to download	The data cannot be obtained because the data size exceeds the maximum for retrieving.
Unable to download Data exceeds maximum size (452)	The data could not be received because it exceeds the maximum size.
Unable to download, Data exceeds maximum size	The data cannot be downloaded because it exceeds the maximum size of data that can be downloaded.

Error Messages	Description
No more memos can be protected Up to 10 screen memos can be protected	The screen memo cannot be protected because the maximum number has been exceeded. Up to 10 screen memos can be protected.
URL address changed (301)	The site or web page is automatically forwarded to another URL, or the URL has changed.
Connection failed(403)	The terminal cannot connect to the site or web page.
File with copyright will be deleted	The terminal will delete the attached file and forward the message because the file is copyright protected.
Cannot be deleted	The data cannot be deleted because an error occurred.
There is no bookmark that can be deleted	The operation cannot be performed because there is no bookmark that can be deleted.
There is not a message to delete	There is no message that can be deleted because all messages are protected.
There is no mail that can be deleted	There is no message that can be deleted because no message exists or all messages are protected.
Failed to delete	The terminal failed to delete the data because an error or a problem occurred.
Canceled deleting	Deletion was cancelled because an error or a problem occurred.
Number of creating folder is 20EA	A new folder cannot be created because the number of folders that can be created (20) has been reached.

Error Messages	Description
Service is not registered	You have not subscribed to the i-mode service.
Service is not provided	The terminal failed to send an SMS because the service is not provided.
Not supported format	The file cannot be specified because it is an i-motion movie with only video or audio. The file cannot be played because it is not supported.
Not supported	The operation cannot be performed because it is not supported.
Page is not found(404)	The site or web page may not exist, or the URL may be wrong. Check the URL and then try again.
No content is available (204)	There is no data available at the specified site.
No requested software	The specified software cannot be started because it does not exist.
Requested software unavailable	The operation cannot be performed because the specified software cannot be started.
No messages	There were no messages that matched the conditions specified for the filter operation.
No data	There was no mail that matched the conditions specified for the filter operation.
Unable to retrieve the requested URL (504)	The site or web page may not exist, or the URL may be wrong. Check the URL and then try again.
Invalid number!	An invalid number was entered, or no number was entered. Enter a valid number.
Invalid address	The message cannot be sent because the mail address is invalid.

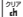
Error Messages	Description
3 i-appli have been already registered for auto-start	A maximum number of 3 i-appli can be set to start automatically.
Please wait	The terminal failed to send the SMS. Wait a while and then try again.
Low battery. Can't update	There is not enough battery power. Charge the battery.
Invalid end time	The end time is set earlier the start time on the same day. Set an end time that is later than the start time.
Invalid end date	The end date is set earlier than the start date. Set the schedule event so that the end date is the same or later than the start date.
Receiving. Please wait	The terminal is receiving data. Wait a while.
Cannot receive message	The selected message cannot be received because the host address set for "Host Selection" is wrong. Check the setting and then try again.
There is no empty space in the Inbox Please delete unnecessary mail to receive SMS	SMS cannot be received because there is not enough storage space in the Inbox. Delete unnecessary received mail.
Inbox is full	The i-mode mail cannot be received because there is not enough storage space in the Inbox. Delete unnecessary received mail. SMS cannot be moved/copied from the UIM because there is not enough storage space in the Inbox. Delete unnecessary received mail.

Error Messages	Description
No messages	There are no received messages.
Reception rejected	The SMS failed because the recipient rejected the message.
Canceled receiving	The reception was cancelled.
No Certificates	There are no SSL certificates.
Schedule is full	There is not enough storage space for Schedule. Delete unnecessary schedule events.
Already set	The mail address cannot be set because it is already set for auto sort.
Already exists	The network cannot be registered because it is already registered.
Host name already exists	The host name cannot be registered because it is already registered.
Already exist	The network cannot be registered because it is already registered.
Same URL already saved	The URL cannot be saved because it is already registered in the FOMA terminal.
Already received message on server	The message cannot be sent because it is already stored on the server.
All data is invalid	The operation cannot be performed because all the data is invalid.
Could not parse all mail to parameters	Some of the parameters are out of range.
Cannot play for limit size	The file attached to the i-mode mail cannot be played because it is too large.

Error Messages	Description
Connection failed(400)	The terminal was unable to connect properly because of an error at the access point.
Software terminated due to security error	i-αppli attempted to perform a prohibited activity.
Connection interrupted	The connection was interrupted because an error or a problem occurred.
Host address is empty	There is no host address entered. Enter the host address.
Host name is empty	There is no host name entered. Enter the host name.
Access point is empty	There is no access point number entered. Enter the access point number.
Connection failed	A connection cannot be established because the host address set for "Host Selection" is wrong. Check the setting and then try again.
Connection failed (562)	A connection cannot be established because there is a problem with the network. Wait a while and then try again.
Time out	The traffic to the i-mode center is heavy. Wait a while and then try again.
Time out Resume download?	The attached file linked to the i-mode mail could not be downloaded within the set time. Do you want to try downloading again?
Failed set !	The ring tone could not be set because an error occurred.
Self mode is set	The operation cannot be performed because self mode is set. Set self mode to "OFF".

Error Messages	Description
Not able to insert a chosen image	The selected image could not be inserted because it exceeds a specified value.
Service unavailable	The terminal cannot connect to the network because it is out of the service area or in a location with no signal. Move to a location with a strong signal and set the network.
	The list of networks cannot be displayed because there is no UIM inserted. Insert the UIM before using the option.
	The network list could not be saved with "UPLMN select by list" in "Preferred network lists."
No decorations. Cannot save as template	The template cannot be saved because there are no decorations.
Preparing to send	The terminal is preparing to send the i-mode mail. Wait a while.
Address is not valid Check the address (451)	The mail could not be sent properly. Check the address and then try again.
Could not send mail	The mail/SMS could not be sent properly.
Transmission failed (XXX)	The mail could not be sent properly. * Where X represents a number to indicate an error type.
Could not send mail Server is full(551)	The mail space for the recipient is full.

Error Messages	Description
Outbox is full	SMS cannot be copied/moved from the UIM because there is not enough storage space in the Outbox. Delete unnecessary sent and unsent mail.
No messages	There is no mail in Outbox.
Transmission rejected	SMS sending was rejected.
Cancelled sending	Sending was cancelled.
Software already updated	The i-αppli cannot be updated because it has already been updated to the latest version.
This software contains an error	The i-αppli data cannot be downloaded because it contains an error.
Download canceled due to the SW error	The i-αppli data cannot be downloaded because it contains an error.
The data cannot be displayed because it is not supported	The data cannot be displayed because it is not supported.
Invalid title	Invalid characters or no characters were entered for the title name. Enter a valid title name.
Time out	The terminal searched for a network for the set amount of time, but no network could be found Check whether the "Network mode" setting is correct.
Keypad dial lock	The operation cannot be performed because Dialing Restriction is set. Remove the checkmark for "Keypad dial lock" in the Call/Mail lock settings.

Error Messages	Description
Download failed	The data could not be downloaded because an error or a problem occurred.
Already downloaded	i-αppli of the same version has already been downloaded.
Usage is currently restricted Try again later	This message will be displayed when extremely large amount of data is transferred via your terminal. This message is displayed only when you subscribe to the fixed amount service for i-mode packet communication. Wait for a while and try again later after you see this message.
i-mode mail service is busy Please try again later(XXX)	The line is very busy. Wait a while and then try again. * Where X represents a number to indicate an error type.
Security code error	The entered security code is incorrect. Enter the correct security code.
Call rejected	An incoming call was rejected because it was from a caller not registered in the Phonebook. To receive calls from callers not in the Phonebook, set "Reject unknown" to "OFF."
	An incoming call was rejected because it was from a caller registered in "Reject on list".
	An incoming call was rejected because "Reject all calls" is set to "Disconnect call".
Failed to retrieve channel information	i-Channel information was not downloaded because a part or all channel information could not be downloaded. Move to a location with a strong signal and then press  in stand-by to receive the information.

Error Messages	Description
Connection suspended	The connection was suspended because the set amount of time elapsed without finding the other party. Check the distance from the other device, angle, and operating procedure.
Exchange failed	Communication failed because the operation was suspended.
Battery low	The battery level is low. Charge the battery.
Invalid data	The operation cannot be performed because the data is invalid.
Input data	The country name and country code were not entered. Enter the country name and country code.
Receiving canceled	Downloading was suspended because the terminal is out of service area. Move to a location with a strong signal.
Low battery Cannot start Photo-mode	The operation cannot be performed because there is not enough battery power. Charge the battery and try again.
Low battery Can't use	The function cannot be used because there is not enough battery power. Charge the battery.
No attachable file	There is no file that can be attached.
Attached file is deleted	The attached file will be deleted and the mail will be forwarded because a different UIM card is inserted than the one that was inserted when the i-mode mail attachment file was received.

Error Messages	Description
Template is full	There is not enough storage space for Template. Delete unnecessary templates.
Size over	The size of the template exceeds the specified value. Delete the message or inserted images.
Phonebook is full	There is not enough storage space for the phonebook entry. Delete unnecessary phonebook entries.
No Phone number	No entry is saved in the Phonebook.
Failed Clipping	The video could not be edited because an error occurred.
Check failed	The terminal failed to check for new SMS.
Registration is in progress Wait a while and try again (554)	The operation cannot be performed because user registration is taking place. Wait a while and try again.
No bookmark data	The bookmark cannot be added because there is no bookmark data that can be added.
Too much data was entered	Sending is not possible because too many characters were entered in the site or web page input field. Delete some characters and then try sending again.
	URL is too long to display.
Input error(205)	The input data contains an error. Check the input data.
Authentication type is not supported (401)	A connection cannot be established because the authentication type is not supported.

Error Messages	Description
Authentication failed	The wrong security code was entered. Enter the correct security code.
Authentication canceled(401)	The connection was suspended because authentication failed.
Enter correct network security code	The Network security code entered was incorrect. Enter the correct network security code.
Enter MNC	The MNC was not entered. Enter the MNC.
Unable to acquire remaining data Data deleted	While attempting to download the remaining data of a partially saved file, the data was deleted because an error occurred and the download failed.
Password is not correct(401)	The user name or password entered in the authentication screen of a site or web page was wrong. Enter the information again.
Receiving failed Because mail to indicate can't replace it.	The mail cannot be received because the terminal is attempting to overwrite a message that is currently being displayed.
There are no files	There are no files in the folder.
This file is not supported	The file cannot be played because the data is not supported or corrupted.
Invalid File(493)	The operation cannot be performed because the file that was obtained is corrupted.
Cannot find file	The operation cannot be performed because the selected file does not exist.
File error	The operation cannot be performed because the file is invalid.
File is deleted	The mail is forwarded with the pasted file deleted because it cannot be forwarded.

Error Messages	Description
Failed to create file	The file could not be moved/copied because an error occurred.
Attached file size is over	The maximum attachment size has been exceeded.
Cannot save file	The file could not be saved because an error or a problem occurred.
Incorrect folder name	Invalid characters or no characters were entered for the folder name. Enter a valid folder name.
XXX folder can't delete	The selected folder cannot be deleted. * Where XXX represents the applicable folder name.
Delete invalid address	An invalid address was deleted.
Invalid data is included	The operation cannot be performed because an inappropriate file is selected.
	The operation cannot be performed because the data is invalid.
Invalid title	Invalid characters or no characters were entered for the folder name. Enter a valid folder name.
Bookmark is full	There is not enough storage space for the bookmark. Delete unnecessary bookmarks.
Too many bookmarks Some cannot be displayed	Some bookmarks cannot be displayed because there are too many bookmarks.
No bookmarks	There are no bookmarks added.

Error Messages	Description
Cannot add bookmark	The bookmark cannot be added because an error or a problem occurred.
Unknown error	The operation cannot be performed because an unknown error occurred.
Cannot add to playlist!	The song cannot be added because the maximum number of playlists/songs in each playlist has been added. Delete unnecessary playlists/songs.
Cannot create playlist!	Up to 10 playlists can be added. Delete unnecessary playlists.
There is no mail to cancel protection	Protection cannot be cancelled because there is no protected mail.
There is not a message to protect	Protection cannot be cancelled because there are no protected messages.
There is no mail to protect	There is no mail that can be protected because any mail is already protected.
There are no messages to protect	There are no messages that can be protected because any messages are already protected.
No protected messages?	There are no protected messages.
Retention period has expired(492)	An attached file can no longer be obtained because the retention period at the i-mode center has expired.
Fail to save	The data could not be saved because an error occurred.
Canceled saving	Saving was cancelled because an error or a problem occurred.

Error Messages	Description
No save area	The operation cannot be performed because there is not enough storage space in the saving location. Delete unnecessary files.
Home page not set	A connection cannot be established because the home page is not set.
Home page disabled	The home page is set to "Disable". Set it to "Enable."
Terminal memory is full	No more settings can be configured. Delete unnecessary items.
Cannot send message; for size over Delete some message	The mail cannot be sent because the maximum number of characters that can be entered for a message has been exceeded. Reduce the size of the message.
Cannot save message; for size over Delete message	The mail cannot be saved because the maximum number of characters that can be entered for a message has been exceeded. Reduce the size of the message.
Cannot send message; for number of images over Reduce images in the message	The mail cannot be sent because the number of inserted images exceeds the specified number. Delete images in the message.
Cannot save message; for number of images over Reduce images in the message	The mail cannot be saved because the number of inserted images exceeds the specified number. Delete images in the message.

Error Messages	Description
Message entry size exceeds limit Delete message	The maximum possible number of characters for the message has been exceeded. Reduce the size of the message.
Cannot edit message	The message cannot be edited.
Cannot save image without playing	The data cannot be saved because it is a Flash file. The data cannot be saved because it is an unplayed Flash animation.
Not registered Register from one touch key menu	A phone number/mail address or a function is not assigned to the One touch hot key. Assign them.
Unsent message mail is full	There is not enough storage space for unsent messages. Delete unnecessary unsent or sent messages.
No messages	There are no unsent messages.
There's empty input Input required	The operation cannot be performed because some items have not been entered.
Empty message cannot be saved	An empty message cannot be saved.
Music player is running	The operation cannot be performed because the Music player is running. Quit the Music player.
Received invalid data	The operation cannot be performed because the received data contains an error.

Error Messages	Description
Invalid Data(XXX)	The specified site or web page is not supported. * Where X represents a number to indicate an error type.
	Check whether the URL is correct. * Where X represents a number to indicate an error type.
	The received data cannot be displayed because it contains an error. * Where X represents a number to indicate an error type.
Invalid date	The value is outside the setting range of the date search.
Invalid file name is included	The file or folder cannot be saved or created because an invalid character was entered for the file name or folder name.
No messages	There is no Message F.
	There is no Message R.
Folder is full	There is not enough storage space for MessageR/F. Delete unnecessary MessageR/F.
Message data invalid	The message cannot be displayed because the message data is corrupted.
Memo is full	There is not enough storage space for memos. Delete unnecessary memos.
Memory is full	The operation cannot be performed because there is not enough storage space in the save location. Delete unnecessary files.
Not enough memory Can't save	Up to 10 access points can be registered. Delete unnecessary access points.

Error Messages	Description
Not enough memory Can't record	A video cannot be recorded because there is not enough memory.
Not enough memory	There is not enough storage space in the moving/copying destination. Delete unnecessary files.
Memory shortage	The process will be suspended because there is not enough memory. If you see this message frequently, turn off, then turn on your terminal.
Memory shortage Stop Browser	i-mode will be terminated because there is not enough memory.
Memory shortage Return to Main Menu	The process will be suspended because there is not enough memory.
Folder is full	There is not enough storage space for both received mail and Message R/F. Delete unnecessary received mail and Message R/F.
Characters are too long to enter	No more characters can be entered because the number of entered characters exceeds the limit.
Loading	The data is being loaded. Please wait.
Loading Please wait.	The data is being loaded. Please wait.
Reject list full	There are too many entries for the list. . Delete unnecessary items.
International roaming service denied	The operation cannot be performed because you have not subscribed to WORLD WING.

Error Messages	Description
Set a period from 2 to 31 days	The period specified is incorrect. Set a period from 2 to 31 days.
Can't save over 50 songs	Up to 50 songs can be added to the Quick playlist. Delete unnecessary Chaku-Uta-Full® songs from the Quick playlist.
Bookmark is full	There are too many bookmarks. Delete unnecessary bookmarks.
Activation failure because of different UIM	An i-αppli could not be started automatically due to the UIM security. Insert the UIM that was inserted when the file was obtained and try again.
Invalid UIM, requested service not available	The operation cannot be performed due to the UIM security. Insert the UIM that was inserted when the file was obtained and try again.
	A different UIM card is inserted than the one that was inserted when the data was downloaded from a site, or the mail attachment file or MessageR/F was saved. Insert the same UIM that was inserted when you downloaded or saved the data.
Invalid UIM cannot send	The mail cannot be sent due to the UIM security. Insert the UIM that was inserted when the mail was created and try again.
Activation failure because of different UIM	i-αppli could not be started automatically due to the UIM security. Insert the UIM that was inserted when the file was obtained and try again.

Error Messages	Description
Invalid UIM. Requested software can't start	An i-αppli that is linked to the UIM inserted at the time of download from a site cannot be started. Insert the UIM that was inserted when the i-αppli was downloaded.
Invalid UIM, incorrect display	Some data subject to restrictions such as images cannot be displayed because a different UIM card is inserted than the one that was inserted when the data was downloaded from a site, or the attached file or MessageR/F was saved. Insert the same UIM that was inserted when you downloaded or saved the data.
	A different UIM card is inserted than the one that was inserted when the screen memo was saved. Insert the same UIM card that was inserted when you saved the screen memo.
UIM reading	The UIM is being read. Wait a while and try again.
UIM not ready	The UIM card is not inserted. Insert the UIM and try again.
Invalid UIM. Requested software can't start	The specified software cannot be started because a different card is inserted than the one inserted when the software was downloaded from a site. Insert the UIM that was inserted when the software was downloaded.
Invalid UIM. Start not possible	An i-αppli that is linked to the UIM inserted at the time of download from a site cannot be started. Insert the UIM that was inserted when the software was downloaded.

Error Messages	Description
Data transmission is frequent Continue transmission? Yes/No/ Terminate	This message will be displayed when an i-αppli performs a lot of data transfer within a short time. Select "Yes" to continue using the i-αppli. Select "No" to continue using the i-αppli without communication. Select "Terminate" to end the i-αppli.
i-αppli To function is not set	The i-αppli cannot be started because "Site i-αppli to" is not enabled. Enable the function and try again.
Cannot receive i-Channel information	The i-Channel information cannot be received because the UIM is not inserted properly, or there is a problem with the UIM. Check the UIM.
The i-motion movie exceeds playable size	The data cannot be obtained because the data size exceeds the limit.
Received data exceeds i-motion playable size	Download was canceled because the data size exceeds the limit.
Network traffic to i-mode center is heavy Please wait (555)	The line facility failed, or the line is very busy. Wait a while and try again.
All items in "Check new messages" set to OFF	No check marks are placed for items of the "Check new messages" settings. Place check marks to items and try again.
PIN 1 (PIN2) code locked	If an incorrect PIN1/PIN2 code is entered 3 times in a row, the PIN lock is set. Enter the PIN Unblock code.

Error Messages	Description
PIN1 (PIN2) code not recognized	If an incorrect PIN1/PIN2 code is entered 3 times in a row, the PIN lock is set. Enter the PIN Unblock code.
PUK code error	An incorrect PUK code was entered. Enter the correct PUK code.
PUK code not recognized	If you enter an incorrect PUK code 10 times in a row, the PUK code is blocked. Contact a docomo shop counter.
PUK blocked	If you enter an incorrect PUK code 10 times in a row, the PUK code is blocked. Contact a docomo shop counter.
No PLMN found	There is no network that can be selected.
Please check SMS Center settings	The terminal failed to send the SMS. Check the "SMS Center" setting.
SSL session cannot be established	A connection could not be established because a modified SSL certificate was received or an SSL error occurred.
SSL session failed	A problem was detected during the authentication process of SSL. The connection will be terminated. A session was not possible because of an authentication error on the server.
SSL certificate not valid	The certificate of the FOMA terminal is set to invalid. Change the setting to establish a connection.
SSL session terminated	The SSL session was terminated because you canceled it.
To do is full	There is not enough space in the storage location for To Do entries. Delete unnecessary To Do entries.

Error Messages	Description
Please set "To type" receiver	There is no address set for the To field. Set at least one address for the To field.
URL too long to register	The URL cannot be registered because it contains too many characters.
Invalid URL	The terminal cannot connect to the site or Internet because the URL is invalid.
No URL history	The operation cannot be performed because there is no entries in URL history.
Unplug the USB cable	The FOMA USB Cable with Charge Function 01/02 is connected. Disconnect the cable and try again.
i-αppli error	An error occurred while an i-αppli is running.

Warranty and After-sales Service

Warranty

- Be sure to receive a warranty at the time you purchase your FOMA terminal. Read contents of the warranty and confirm items such as the "shop name and the date of purchase" and keep it in a safe place. If necessary items are not described, immediately contact the shop where you purchased the FOMA terminal. The warranty for free repair is valid for one year from the date of purchase.
- This product and its accessories are subject to change, in part or whole, for improvement without prior notice.
- The saved contents of phonebook and other functions may be altered or lost by failure, repair or other handling of the FOMA terminal. It is recommended that you write down the contents of the Phonebook as a precaution. If a FOMA terminal is repaired, with some exceptions, information downloaded with i-mode or i-appli is not transferred to the repaired FOMA terminal, because of the Copyright Law.
- * If you have a PC, your Phonebook data can be transferred to and stored on your hard drive using DOCOMO keitai datalink (P361) and FOMA USB Cable with Charge Function 01/02 (optional) or FOMA USB Cable (optional).

After-sales Service

If you have problems with the FOMA terminal

Before requesting for repairs, read "Troubleshooting" in this manual. If the problem still persists, call the Contact for Repairs as listed on the back of this manual.

[Appendix/Troubleshooting](#)

If Repair is required after the inquiry

Take your FOMA terminal to a service center designated by DOCOMO. Repairs are accepted during business hours of the service center. Be sure to bring the warranty when you visit. Please note that depending on the malfunction, it may take more days to repair.

■ During the Warranty period

- The FOMA terminal will be repaired at no charge subject to the conditions of the warranty.
- The warranty must be presented when requesting the repair. You will be charged for repair if the warranty is not presented or the trouble or damage is caused by your inappropriate use of the terminal.
- You are charged even during the warranty period for repair of failures caused by the use of devices or consumable items that are not DOCOMO-specified.
- You will be charged for repair of the LCD screen or the connectors.

■ Repair may not be possible in the following cases:

- At a service center, when perspiration is detected, (e.g., the moisture detection seal is reacted).
- When corrosion due to exposure to moisture, condensation or sweat is found in a test result; or if any of the internal boards are damaged or deformed (When the Headphone/Microphone Jack, the external connector terminals or the LCD liquid is damaged or its case is cracked, repair may not be possible).
- * Since these conditions are outside the scope of the warranty, any repairs, if at all possible, will be charged.

■ After expiration of the warranty

- All repairs that are requested are charged.

■ Replacement parts

- Replacement parts (parts required to maintain production function) will be kept in stock for at least four years in principle after termination of production. However, repair may still not be possible due to a lack of replacement parts depending on the failure. Even after the parts holding period, some failures may be repairable. Call the Contact for Repairs as listed on the back of this manual.

Notes

- Do not modify the FOMA terminal or its accessories.
 - Fire, injury or damage may result.
 - The modified FOMA terminal (in a way such as part replacement, remodeling, or painting) will be repaired only after the terminal is restored to its original condition (containing DOCOMO genuine parts only). However, depending on the details of modification, repair may be refused. Modifications may include the following: Applying a label on the LCD or keys
Decorating the FOMA terminal using adhesive
Replacing the case with the one other than a DOCOMO genuine part
 - Repair of failure or damage caused by modification is charged even during the warranty period.
- Do not remove rating stickers placed on the FOMA terminal. The inscription stickers certify that the FOMA terminal satisfies specific technical standards. If stickers are removed intentionally or are reattached in such a way that confirmation of the sticker's contents is impossible, repair or servicing may be refused because confirmation of whether or not the device conforms to relevant technical standards cannot be made.
- Various function settings and information including total call time may be cleared (reset) by failure, repair or other handling of FOMA terminal. In such a case, you have to make function settings again.

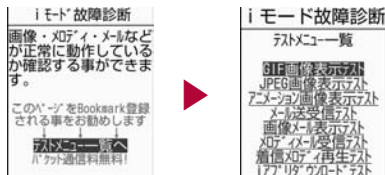 
- The FOMA terminal contains magnetic components given below. Keep cash cards and other objects vulnerable to magnetism away from such components or they may become unusable. Magnetic components: Speaker and Earpiece
- If the FOMA terminal gets wet or moistened, immediately turn the power OFF, remove the battery pack, and bring the terminal to a DOCOMO service center. Note that, depending on the conditions of the FOMA terminal, it may not be possible to repair it.

Phonebook and Downloaded Data

- Write down and keep separately the data you registered in your FOMA terminal. DOCOMO will not accept any liability whatsoever for changes or loss of information.
- The data you created, or imported or downloaded from external sources may be altered or lost as a result of changing the FOMA terminal model or repairing the terminal. DOCOMO is not responsible for data alteration or loss under these circumstances. Under some circumstances, DOCOMO may replace your FOMA terminal with its equivalent instead of repairing it. Data including images or melodies downloaded from the official i-mode site the FOMA terminal and user-defined data will be transferred to another terminal only when the terminal is repaired (some data may not be transferred. Depending on severity of the failure, data may not be transferred.)
 - * Depending on the volume of the data saved in a FOMA terminal, it may take more time or be unavailable to transfer the data.

i-mode Malfunction Diagnosis Site

You can check whether your FOMA terminal is properly sending/receiving mail, downloading images or melodies yourself.



Top screen

Test menu list screen

- Access method to "i モード故障診断(i-mode malfunction diagnosis site)"
i-mode site: iMenu ▶ お知らせ(Information) ▶ サービス・機能 (Service/Function) ▶ i モード(i-mode) ▶ i モード故障診断(i-mode malfunction diagnosis site)

Note

- Packet communication charges free for the i-mode malfunction diagnosis.
- * Charges apply when accessing from overseas.
- Test items will differ depending on the FOMA terminal model. Test items may change.
- Before diagnosing operations for each test item by performing the test, read the warnings on the site carefully.
- When accessing the i-mode malfunction diagnosis site, and performing the sending mail test, information unique to your FOMA terminal (such as a model name and mail address) is automatically sent to the server (i-mode malfunction diagnosis server).. The information sent is used only for i-mode malfunction diagnosis.
- After the diagnosis, if you think that the terminal is malfunctioning, call "Contact for Repairs" as listed on the back of the manual.

Updating Software

About Updating Software

This function checks whether the FOMA terminal software requires update after connecting with network and, if required, updates the software by downloading a part of it using packet communication*.

Functions and operations of FOMA terminal will be improved by updating the important part of the software.

* Packet communication for software update is free of charge

When updating software is required, visit DOCOMO website or "お客様サポート(user support)" from "i menu".

Software may be updated in the following two methods: "Update now" and "Timed update".

- Update now: Update the software immediately.
- Timer update: The software is automatically updated at the scheduled date and time.

Note

- Do not remove the battery pack when updating software. Update may fail.
- Software update can be conducted with the Phonebook data, camera image data, download data registered in FOMA terminal. Note that data may not be able to be protected depending on your terminal (malfunction, damage, dropped in water, etc.) To make a backup for necessary data is recommended. However, please note that for some download data backup is not available.

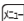

When Using

- Software update is available even if you set the access point other than i-mode.
- Fully charge the battery pack before updating software.
- Software update is not available when:
 - Lock all is set
 - Another function is running
 - The date and time are not set
 - The FOMA card (UIM) is not inserted
 - The battery is not fully charged
 - "Out of service area" appears at the top of the screen
 - Self mode is set
 - Terminal power is off
 - International roaming
- Software update (downloading and rewriting) may take a while.
- Updating software with the "PIN1 code request" set to "ON" displays the PIN1 code entry screen at the automatic restart after overwriting the software. You cannot make/receive calls or perform communication until you enter the correct PIN1 code.
- You cannot make or receive calls or use communication or other functions while updating software (you can receive voice calls while downloading).?When updating software, SSL communication will be conducted to a server (DOCOMO website). Set "ON" in SSL certificate. (SSL certificate settings when purchasing P192)

- It is recommended that you update software* in a location with strong signal reception with three antenna bars displayed in stationary state.
- * If the signal becomes weak during software download, or download is suspended, retry software update in a location with strong signal reception.
- When your software is up to date, a message indicating that "No update required Use it as usual" appears when you check availability of software update.
- After software is updated, an icon indicating the i-mode Center storage status disappears. When mail is delivered during software update with "Receive option" set to "ON", a screen indicating that there is mail may not appear after software update.
- When software is updated, information unique to your terminal (such as a terminal model and the serial number) is automatically sent to the server (software update server managed by DOCOMO). DOCOMO does not use the sent information for other purposes than Software update.
- If software update fails, a message indicating "Rewriting failed" appears. All operations become unavailable. In this case, bring your FOMA terminal to a DOCOMO service center.
- It is not available to use during overseas.

Starting Software Update

Check whether the FOMA terminal software update is necessary.

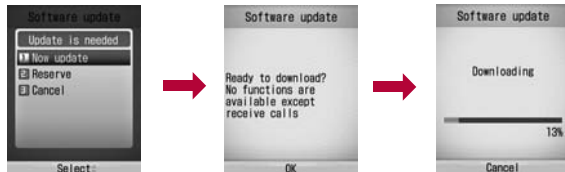
- 1  [Menu] ►  (Setting) ► "Other" ► "Software update"
 - When software update has been reserved already, Reservation note screen will be displayed.
- 2 Check the contents on the confirmation screen and press "OK" ► "OK" ► "YES"
 - The communication starts to check whether software update is necessary. If update is necessary, "Update is necessary" will be displayed. You can choose either "Update immediately" or "Reserve"
 - When software update is not necessary, "Update is not necessary" will appear. Use it as usual.

Note

- Software update confirmation screen will be displayed even in default setting, software is available to update.

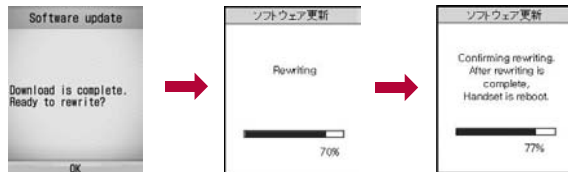
Updating Software Immediately

- 1 On the software update confirmation screen, select "Update now" ► "OK" on the download start screen.
 - Download starts, and when the download is completed, the confirmation screen for software rewriting is displayed.



2 "OK"

- The rewriting starts automatically and the software update confirmation screen appears after completion.
- All operations will be disabled during rewriting. And it can not be disconnected during updating.



3 "OK"



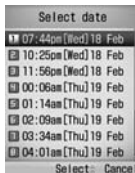
Note

- If disconnected during download, the downloaded data will be deleted.
- As soon as download starts, the update will be conducted whether or not select menu.

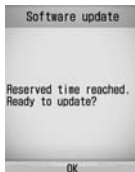
Updating Software on Scheduled Date

You can select the date and time to update software. For the situations when it takes a long time to download or a server is crowded, to set the time of starting software update through communicating with the server in advance is available.

- 1 Select "Reserve" on the software update confirmation screen
 - The available date and time selection screen appear.



- 2 Select the date and time
 - At the scheduled date and time, the software update starts automatically.
 - Select "Others" on the desired date and time screen to set the desired date and time separately.



■ When select "Others"

After communicating with a server, the desired data and time are available to select. Whether or not the reservation is available is shown on time select screen like the followings:

- : Much is available, △: A little is available,
- ×: Not available

If a desired time is selected, a second time selection will appear after communicating with the server.

- 3 "OK"
 - Communicate with the server again to finish

Note

- When software update is scheduled, the time of the server is displayed.

When the reserved time comes

When the reserved time comes, software update will start automatically after 5 seconds.

Note

- Note that if you use other functions, the software update may not start at the scheduled time.
- If alarm is running, the software update may not be started.
- If you perform "Clear memory"(P127) after the reservation is set, the software update may not be started at the scheduled time. Reschedule the time for update.

Confirming/changing/canceling the reserved time

Select "Software update" from setting menu and enter the terminal password to confirm the reserved time. You can change or cancel the reserved time from confirming reservation screen. Select "Change" to change the reserved time. Select "Cancel" to cancel the reserved time.

Ending software update

If select "NO" or "Cancel" in each screen, ending operation screen will be displayed.

If select "YES", software update will be finished and go back to the stand-by screen. If select "NO", it will go back to the former screen.

Major Specifications

■ Phone

Model name		L-06A
Dimensions (H x W x D)		Approx. 100mm×Approx. 51mm×Approx. 16.8mm
Weight		Approx. 100g (with battery pack installed)
Continuous Standby Time	FOMA/3G	Moving: Approx. 220 hours (3G) Moving: Approx. 200 hours (Auto) Stationary: Approx. 300 hours (Auto)
	GSM	Stationary Approx. 300 hours (Auto)
Continuous Call Time	FOMA/3G	Voice call: Approx. 150 minutes Video Call: Approx. 100 minutes
	GSM	Approx. 170 minutes
Charging time		AC Adapter: Approx. 180 minutes DC Adapter: Approx. 180 minutes
Color LCD	Type	Main display: TFT 262,144 colors Sub display: TFT 65536 colors
	Size	Main display: Approx. 2.4 inches Sub display: Approx. 1.3inches
	Pixels	Main display: 76,800 pixels (240 dot×320 dot) Sub display: 20,480 pixels (128 dot×160 dot)
Image Sensor	Type	CMOS
	Size	1/5.0 inches
	Effective Pixels	Approx. 2.00 M pixels

Camera	Recorded pixels (maximum)	Approx. 200M pixels
	Zoom (Digital)	Approx. 3.4 times
Storage	Still images	Approx. 544 ^{*1} (when purchased) Approx. 995 ^{*1} (after deleting preinstalled data that can be deleted)
	Continuous mode	CIF(352x288) : 4 Wallpaper (240x320)/QCIF (176x144)/ Sub-QCIF (128x96)/Phonebook (120x160)/menu icon(80x70) : 6
	Still image file format	JPEG
	Movie record time	Approx.60 minutes ^{*2}
	Movie file format	MP4
Music playback	Continuous playback time	Chaku-Uta-Full* : Approx. 720 minutes ^{*3} i-motion : Approx. 250 minutes ^{*3}
Capacity	Chaku-Uta*/Chaku-Uta Full*	Approx. 102 MB

*1 Image size : 128×96 Image quality: Standard File size: 10K

*2 It is maximum recording time of saving per movie into the FOMA terminal under the following conditions.

- Image size: Sub-QCIF
- Restriction of file size: none
- Quality: Standard (Standard, normal, etc.)
- Type: Image +Voice

The maximum time of recording depends on record size, quality and the image being taken.

*3 File format: AAC

■ Battery Pack

Model name	Battery Pack L02
Dry battery	Lithium ion battery
Nominal voltage	DC 3.7V
Nominal capacity	860mAh

- Continuous call time is approximate duration of time to be spent for talking with normal radio wave reception level.
- Continuous standby time is approximate duration of battery time while in motion. Depending on the battery level, set functions, operating environment such as ambient temperature, or radio wave reception level (Poor or weak radio wave reception level), battery life can be reduced to half. When i-mode communications are performed, the call (communication)/standby time becomes shorter. Even if you do not make calls or perform i-mode communications, the call (communication)/standby time becomes short when you compose i-mode mail, start a downloaded i-appli, start the i-appli stand-by display, perform data communications or multiaccess, use a camera, or play videos or music.
- Continuous standby time in a stationary state is the average usage time in a stationary state with normal radio wave reception level while the terminal is closed.
- Continuous standby time in motion is the average usage time in a state combining "standstill", "in motion" and "out of service area" in an area with normal radio wave reception level while the terminal is closed.
- The estimated charging time is the duration of time to charge the battery pack with the FOMA terminal turned off and with a fully drained battery pack. The charging time becomes longer with the FOMA terminal turned on.

Approximate Number of Savable Still Images

The number of still images that can be saved on the FOMA terminal varies depending on the resolution, image quality, capture conditions, and capture objects.

Quality Resolution	Super fine	Fine	Standard
UXGA (1200×1600)	Approx. 210	Approx. 400	Approx. 640
SXGA (960×1280)	Approx. 450	Approx. 720	Approx. 995
VGA (640×480)	Approx. 995	Approx. 995	Approx. 995
CIF (352×288)	Approx. 995	Approx. 995	Approx. 995
Wallpaper (240×320)	Approx. 995	Approx. 995	Approx. 995
QCIF (176×144)	Approx. 995	Approx. 995	Approx. 995
Sub-QCIF (128×96)	Approx. 995	Approx. 995	Approx. 995
Phonebook (120×160)	Approx. 995	Approx. 995	Approx. 995
Menu-icon (80×70)	Approx. 995	Approx. 995	Approx. 995

- The number of savable still images after deleting images, which can be deleted, in all the data already registered in a terminal

Approximate Movie Capture Duration

The movie capture duration varies depending on the movie length, quality, capture conditions, and capture objects.

■ Continuous capturing duration per video clip

Capture Type	Size restriction	No restriction	
		Resolution Quality	QCIF (176x144)
Audio and Graphics	Super fine	Approx.60 minutes	Approx.60 minutes
	Fine	Approx.60 minutes	Approx.60 minutes
	Standard	Approx.60 minutes	Approx.60 minutes
Graphics only	Super fine	Approx.60 minutes	Approx.60 minutes
	Fine	Approx.60 minutes	Approx.60 minutes
	Standard	Approx.60 minutes	Approx.60 minutes
Audio only		Approx.60 minutes	
Capture Type	Size restriction	2Mbyte	
		Resolution Quality	QCIF (176x144)
Audio and Graphics	Super fine	Approx.100 seconds	Approx.186 seconds
	Fine	Approx.132 seconds	Approx.234 seconds
	Standard	Approx.187 seconds	Approx.315 seconds
Graphics only	Super fine	Approx.110 seconds	Approx.225 seconds
	Fine	Approx.150 seconds	Approx.297 seconds
	Standard	Approx.225 seconds	Approx.441 seconds
Audio only		Approx.19 minutes	

Capture Type	Size restriction	500Kbytes	
		Resolution Quality	QCIF (176x144)
Audio and Graphics	Super fine	Approx.24 seconds	Approx.46 seconds
	Fine	Approx.32 seconds	Approx.58 seconds
	Standard	Approx.46 seconds	Approx.78 seconds
Graphics only	Super fine	Approx.27 seconds	Approx.55 seconds
	Fine	Approx.37 minutes	Approx.73 seconds
	Standard	Approx.56 minutes	Approx.110 seconds
Audio only		Approx.364 seconds	

■ Continuous capturing duration per video clip

Capture Type	Size restriction	500Kbytes	
		Resolution Quality	QCIF (176x144)
Audio and Graphics	Super fine	Approx.94 minutes	Approx.161 minutes
	Fine	Approx.118 minutes	Approx.231 minutes
	Standard	Approx.161 minutes	Approx.245 minutes
Graphics only	Super fine	Approx.103 minutes	Approx.189 minutes
	Fine	Approx.133 minutes	Approx.240 minutes
	Standard	Approx.189 minutes	Approx.326 minutes
Audio only		Approx.1084 minutes	

- The number of savable still images after deleting the images, which can be deleted, in all the data already registered in a terminal.

Number of Items that can be Stored, Registered and Protected on the FOMA Terminal

The maximum number of items that can be stored or protected varies depending on the data size or memory usage.

Type		Maximum Number of Saved Items	Maximum Number Protected Items
Phonebook		1000 ^{*1}	–
Schedule	Schedule events	200	–
	Holiday	100	–
To Do		50	–
Memo		50	–
Mail	Received mail	1000 ^{*2}	1000
	Sent mail	500	500
	Unsent message		–
Message	Message R	100	100
	Message F	100	100
Bookmarks		100	–
Screen memo		50	10
appli		100 ^{*3}	–

Type		Maximum Number of Saved Items	Maximum Number Protected Items
Databox	Image	1000 ^{*3}	–
	Video/i-motion movie	1000 ^{*3}	–
	Melody	1000 ^{*3}	–
	Animation	30	–

*1 Up to 50 entries can be saved in the UIM.

*2 Including the number of "♪ Welcome mail ♪" saved in "Inbox" folder.

*3 Including data registered when purchased.

SAR Certification and Other Information

Specific Absorption Rate (SAR) of Mobile Phones

Mobile phone L-06A meets the technical regulation defined by the government for absorption of radio waves to human body. This technical regulation has been established based on scientific studies so that radio waves emitted from radio devices such as mobile phones used near a human head give no bad influence to the human health. It defines that Specific Absorption Rate (SAR), representing the average amount of energy of radio waves absorbed to a temporal part of human body, should not exceed a permissible value of 2W/kg^* . This permissible value includes a substantial safety margin designed to assure the safety of users, regardless of the age, body size and other conditions of individuals and is equal to the international guideline recommended by International Commission of Non-Ionizing Radiation Protection (ICNIRP) which has cooperative relationships with World Health Organization (WHO).

All mobile phones should be confirmed to comply with the governmental regulation according to Radio Law before they are released. The SAR value of L-06A is 0.543 W/kg . This value has been acquired by Telecom Engineering Center (TELEC) and is the maximum value of those measured under the maximum transmission power of the mobile phone in the procedure defined by the government. Though there may be some differences in SAR value among individual products, they all meet the technical regulation. In addition, mobile phones are designed to have

the lowest transmission power required for communication with base stations; therefore, the SAR value during actual phone operation becomes smaller. SAR value of this mobile phone meets the regulations of individual countries it is available.

For further information about SAR, visit the following web sites:

Ministry of Internal Affairs and Communications

: <http://www.tele.soumu.go.jp/j/ele/index.htm>

Association of Radio Industries and Businesses

: <http://www.arib-emf.org/index.html>

DOCCOMO

: <http://www.nttdocomo.co.jp/product/>

LG Mobile

: <http://jp.lgmobile.com/>

* The technical regulation is defined in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

Radio Frequency (RF) Signals

THIS MODEL PHONE MEETS THE U.S. GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone contains a radio transmitter and receiver. Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The exposure standard for wireless mobile phones employs a unit of

measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.246W/kg, and when worn on the body, is 0.052W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at <http://www.fcc.gov/oet/fccid> after search on FCC ID BEJL705I.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the terminal a minimum of 2.5 cm from the body.

- * In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

Declaration of Conformity

The product "L-06A" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1 (a), 3.1 (b) and 3.2.

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR* limits** for exposure to radio-frequency (RF) energy, which SAR* value, when tested for compliance against the standard was 0.569W/kg. While there may be differences between the SAR* levels of various phones and at various positions, they all meet*** the EU requirements for RF exposure.

- * The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.
- ** The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- *** Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest

certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Important Safety Information

AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers a 'flight mode' or similar feature consult airline staff as to whether it can be used on board.

DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

For other Medical Devices:

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Export Administration Regulations

This product and its accessories may fall under the category of application of Japan Export Control Regulations ("Foreign Exchange and Foreign Trade Law" and relevant laws and regulations). U.S. Re-export Regulations (Export Administration Regulations: EAR) is applied to this product and its accessories. If you export or re-export this product or its accessories, please follow the necessary procedures at your own risk and expense. For details about the procedures, contact the Ministry of Economy, Trade and Industry or the U.S. Department of Commerce.

Intellectual Property Issues

Copyrights and Portrait Rights

You have no right to copy, modify, or distribute the contents such as text, images, music, or software downloaded from web sites on the Internet, or images captured by the cameras of this product without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the Copyright Law. Note that capture or recording of live performances or exhibitions may be prohibited, even for personal use. Refrain from taking portraits of other persons and uploading such portraits on websites without consent, as this violates portrait rights.

Trademarks

- "docomo STYLE series", "FOMA", "mova", "i-mode", "i-αpli", "i-αpli DX", "WORLD CALL", "WORLD WING" "Public mode", "i-area", "i-motion", "i-motion mail", "Chaku-motion", "Deco-mail", "mopera", "mopera U", "sigmarion", "musea", "Dual Network", "visualnet", "V-live", "i-Channel", "DoPa", "OFFICEED", "IMCS", "FOMA" logo, "i-mode" logo, "i-αpli" logo, "HIGH-SPEED" logo are trademarks or registered trademarks of NTT DOCOMO, INC.
- The name of the Free Dial Service and its logo are registered trademarks of NTT Communications Corporation.
- "Multitask" is a trademark of the NEC Corporation.
- "Catch Phone (Call Waiting Service)" is a registered trademark of the Nippon Telegraph and Telephone Corp.
- Quick Time is a trademark of Apple Inc. in the United States and/or other countries.

- Powered by JBlend™ Copyright 2002-2007 Aplix Corporation. All rights reserved.
JBlend and its related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and/or other countries.
- This product preloaded with NetFront Sync Client from ACCESS Co., Ltd.
Copyright© 2007 ACCESS CO., LTD. All rights reserved.
- Microsoft®, Windows® and Windows Vista® are trademarks or registered trademarks of U.S. based Microsoft Corporation in the U.S.A. and other countries.
- Other company names or product names mentioned in this content are the trademarks or registered trademarks of their respective owners.



Others

- Flash® Lite™ developed by Adobe Systems Incorporated is installed on this product.
Copyright© 1995-2007 Adobe Macromedia Software LLC.
All rights reserved.
Adobe, Flash and Flash Lite are registered trademarks or trademarks of Adobe Systems Incorporated in the U.S.A. and other countries.
- A module developed by the Independent JPEG Group is integrated into this product.
- This manual abbreviates operating systems (Japanese version) as follows:
 - Windows Vista is an abbreviation of Windows Vista® (Home Basic, Home Premium, Business, Enterprise, and Ultimate) operating system.
 - Windows XP is an abbreviation of Microsoft® Windows® XP Professional operating system, or Microsoft® Windows® XP Home Edition operating system.
 - Windows 2000 is an abbreviation of Microsoft® Windows® 2000 Professional operating system.
- This product is licensed based on the MPEG-4 Patent Portfolio License. If you use MPEG-4 videos for private purpose without any profits, you are allowed to use them only when:
 - Recording MPEG-4 videos that are compliant with the standard of MPEG-4 Visual.
 - Playing back MPEG-4 videos that consumers recorded for non-commercial activities.
 - Playing back MPEG-4 videos obtained from MPEG-LA licensees.
 For details, contact MPEG LA, LLC.



- Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307	5,504,773	5,109,390	5,535,239
5,267,262	5,600,754	5,416,797	5,490,165
5,101,501	5,511,073	5,267,261	5,568,483
5,414,796	5,659,569	5,056,109	5,506,865
5,228,054	5,544,196	5,337,338	5,657,420
5,710,784	5,778,338		