

This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada. Operation is subject to the following two conditions:(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.







Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.0cm (0.39 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 1.0cm (0.39 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 1.0cm (0.39 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Getting Started

Part Names and Functions

Part names

- 1 Earpiece (Receiver)/speaker
- 2 Physical keyboard
- 3  Home key
- 4 **Proximity sensor:** Turns off the touch screen when your face touches the screen. This prevents you from unintentionally activating functions when you are engaged in a call.
- 5 **Display (Touch screen)**
- 6  Menu key
- 7  Back key
- 8  Search key
- 9  Start key
- 10  Power key/Screen Lock key/End Call key
- 11 **Mouthpiece (Microphone)**
- 12 **Earphone/microphone jack**
- 13 **Camera lens**
- 14 **Back cover**
- 15 **GPS antenna section (inside the unit)**
- 16 **UIM card slot (built-in)**
- 17 **FOMA antenna section:** The FOMA antenna is built in. To ensure good signal quality, avoid covering the antenna section with your hands.
- 18 **microUSB connection jack**
- 19 **microSD card slot (built-in)**
- 20 **Volume key**






Getting Started

Information

- Do not put labels or stickers on the sensors.

Hardware keys

There are six hardware keys on the front of the FOMA terminal. The roles of these hardware keys are shown below.

	Tap this key to display the options menu for the current screen or application.
	Tap this key to return to the previous screen. It also closes a dialog box, an options menu, the Notification panel, or the onscreen keyboard.
	<ul style="list-style-type: none"> • Tap this key on the Home screen to search for Contacts and applications in the FOMA terminal or Web pages. For details, see "Searching" (P41). • If you tap this key while an application is open, you can use the application search function.
	<ul style="list-style-type: none"> • Press this key in the Home screen to display the "Call log" tab. For details about the "Call log" tab, see "Call Log" (P53). • If you press this key while a contact, contact phone number, or phone number is highlighted, you can call the selected contact or phone number. • If another application is displayed during a call, you can display the Call screen by pressing this key.
	<ul style="list-style-type: none"> • If you press this key, you will return to the Home screen, regardless of the application being used or the screen being displayed. • If you press this key for over 1 second, the icon of the most recently used application appears. Touching this icon opens the application.



- Press this key during a call to end the call.
- If you press this key for over 1 second at a time other than during a call, the "Phone options" menu appears.

Physical keyboard

As well as an onscreen keyboard, the FOMA terminal also has a backlit physical QWERTY keyboard. The physical keyboard is convenient for entering many characters.

Using the physical keyboard

Slide the front panel away to reveal the physical keyboard.

- When the physical keyboard is ready to be used, the backlight automatically lights up and the key lock is released.
- The screen display changes to horizontal, regardless of the way you are holding the FOMA terminal.
- If you perform no operations on the physical keyboard for a set period, the backlight will automatically go out.
- For more details about text entry on the physical keyboard, see "Text entry using the physical keyboard" (P49).

UIM

UIM is an IC card that stores your phone number and other information.

You cannot use some of the FOMA terminal functions if the UIM is not inserted. Before inserting or removing the UIM, you must always turn the power OFF and disconnect the AC adapter cable.

UIM security codes

The UIM has a security code, namely PIN code. This code is set to "0000" at the time of subscription, but you may subsequently change them. For details about changing this security code, see "Security codes and UIM protection" (P67).

Inserting the UIM

- 1** Insert a fingernail into the groove in the back cover, and pull up in the direction of the arrow (1) to remove the back cover.

- 2 Remove the battery pack (P25), and insert the UIM into the slot with the gold-colored IC side facing down.

Removing the UIM

- 1 Remove the back cover and the battery pack. Gently press on the UIM with your fingertip and slide it out.

[Getting Started](#)

microSD Card

A microSD card can be used with any other compatible devices.

- When a microSD card is not inserted, camera functions and the playing or downloading of music or videos are not available.
- The FOMA terminal supports a microSD card of up to 2 GB, and a microSDHC card of up to 32 GB (as of January 2011).

Inserting a microSD card

- 1 Remove the back cover (P23).
- 2 Insert the microSD card into the slot with the metal contacts facing down.
 - Load a microSD card properly, paying attention to the insertion direction. Improper loading of a microSD card may damage the card itself or the slot, or may disable ejection of the card.

Removing a microSD card

- 1 Remove the back cover, push the microSD card in to unlock it, and then remove it.

Battery Pack

Attaching the battery pack

- 1 Remove the back cover (P23).
- 2 Insert the battery pack in the direction of the arrow (❶) with the "A" label facing up. Ensure that the tabs on the FOMA terminal and the battery pack are aligned with each other.

- 3 Check the direction of the back cover and attach it to the FOMA terminal (❷). Press each tab to close it firmly (❸).

Removing the battery pack

- 1 Remove the back cover (P23).

2 Put your fingernail into the groove, and lift out the battery pack in the direction of the arrow (②), pushing it toward the direction of the arrow (①).



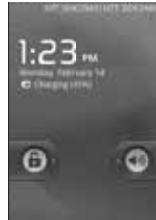
Getting Started

Turning Power ON and OFF

Turning power ON


- 1 Press and hold  for over 1 second.

- The Key Lock screen appears.



- 2 Release the key lock by dragging  to the right.

Information

- The Key Lock screen appears when the power is turned ON or when the backlight is lit up.
- You cannot deactivate the key lock function.
- If the screen lock has been set using a PIN code, a PIN Code Entry screen appears when the power is turned ON. Enter the PIN code and tap "OK". To correct the wrong PIN entry, tap .

Turning power OFF

- 1 Press and hold  for over 1 second.

- The "Phone options" menu appears.

- 2 "Power off"

- The "Contacts" message appears.

- 3 "OK"

- The power is turned OFF.

Turning on the backlight

To prevent unintended operation and to save power, the backlight turns off after a set period. If you then turn on the backlight to release the key lock, the screen that was displayed before the backlight was turned off appears again.

- 1 Press ,  or .

- The Key Lock screen appears. The backlight automatically lights up when you receive a call.

Information

- You can set the length of time before the backlight turns off. For details, see "Display" (P66).
- If a screen unlock pattern has been set, you will be prompted to enter the pattern before releasing the screen lock. For more details about creating a screen unlock pattern and releasing the screen lock, see "Location & Security" (P66).

Initial Settings

Settings when power is first turned ON

When the power is first turned ON, you need to set the language and date for the FOMA terminal. After setting these once, there is no need to set them the next time the power is turned ON. You can also change these settings later.

1 Press and hold  for over 1 second.

- "Welcome to your new L-07C!" appears.

2 "Press here to start"

- The "Date & time settings" screen appears.
- Set the date and time if required. For details, see "Date & Time" (P71).

3 "Next"

- The setting screens for email and SNS accounts are displayed.
- If you tap "Skip", you can omit the settings for email.

4 "OK" on the explanation about updating the software screen.

The docomo Menu screen is displayed.

Information

- If you tap "Exit" on each setting screen, the subsequent settings will be skipped, and a screen explaining software updating will be displayed.
- For details about email and SNS account settings, see "Setting online service accounts" (P32) and "Email" (P72).

Getting Started

- A data connection (3G/GPRS) must be available in order to set online services. For details on enabling data connection, see "Wireless and Networks" (P63).



Configuring Wi-Fi settings

The FOMA terminal connects to the Internet via access points for Wi-Fi networks or public wireless LAN services. To connect, you must configure the access point connection settings on the FOMA terminal.

Information

- Even if the Wi-Fi function is set to ON, you can use packet communication. However, if a Wi-Fi network is connected, it takes priority. When the Wi-Fi network is disconnected, the FOMA terminal automatically connects to the 3G/GPRS network.
- You can reduce battery consumption by turning Wi-Fi OFF when you are not using it.

Wi-Fi network status

When the FOMA terminal is connected to a Wi-Fi network,  appears in the status bar.  always appears in the status bar if an available Wi-Fi network is detected when Wi-Fi network notification has been enabled.

Connecting to a Wi-Fi network

1 From the Home screen, "Menu" ► "Setting" ► "Wireless & networks".

- The "Wireless & network settings" screen appears.

2 Mark the "Wi-Fi" checkbox.

- If this checkbox is marked, it means that a Wi-Fi network is available.



3 "Wi-Fi settings"



- The "Wi-Fi settings" screen appears.

4 Tap the Wi-Fi network that you want to connect to.

- If you try to connect to a protected Wi-Fi network, you will be prompted to enter the security key for that Wi-Fi network. Tap the "Password" box, enter the network password and tap "Connect".
- Usually, when entering a password, only the most recently entered character is displayed and previously entered characters are just represented by "*". If the "Show password." checkbox is marked, all entered characters will be displayed.

Information

- There are 2 types of available networks — open networks and protected networks. The network type is indicated by an icon to the right of the network name.  represents an open network and  represents a protected network.
- The icon also indicates the signal strength.


Strong signal	
Weak signal	

- Depending on the router settings, the network connection name of an available network may not be displayed. If this happens, you can still connect to the network. See "Adding a Wi-Fi network" (P31).
- When establishing a Wi-Fi network connection, the required information is generally obtained from a DHCP server automatically. However, it is possible to specify these items separately. See the next section for more details.

Connecting to a Wi-Fi network by specifying a static IP address

- 1 From the Home screen, "Menu" ► "Setting" ► "Wireless & networks" ► "Wi-Fi settings".

- The "Wi-Fi settings" screen appears.

- 2  ► "Advanced"

- 3 Mark the "Use static IP" checkbox.

- A mark appears in the "Use static IP" checkbox, meaning that you can now enter the 5 items required for Wi-Fi network connection ("IP address", "Gateway", "Netmask", "DNS 1" and "DNS 2").

- 4 Tap "IP address", "Gateway", "Netmask", "DNS 1" and "DNS 2" in that order.

- A menu appears for each item. Set the appropriate value for each item. Be sure to enter values for the items "IP address", "Gateway", "Netmask", and "DNS 1".

Notification of entry into Wi-Fi reception areas

- 1 From the Home screen, "Menu" ► "Setting" ► "Wireless & networks" ► "Wi-Fi settings".

- The "Wi-Fi settings" screen appears.

- 2 Mark the "Wi-Fi" checkbox.

- 3 Mark the "Network notification" checkbox.

- You will be automatically notified when you enter a Wi-Fi reception area.

Adding a Wi-Fi network

- 1 From the Home screen, "Menu" ► "Setting" ► "Wireless & networks" ► "Wi-Fi settings".

- The "Wi-Fi settings" screen appears.

- 2 "Add Wi-Fi network"

- The "Add Wi-Fi network" menu appears.

3 Tap the "Network SSID" box and enter the network SSID.

4 "Security"

- The "Security" menu appears. Select the appropriate type from "Open", "WEP", "WPA/WPA2 PSK", and "802.1x EAP".

5 Tap the "Password" box and enter the password.

- You do not need to enter this if the password has not been set.

6 "Save"

- The Wi-Fi network is added.

Changing the Wi-Fi network password

1 From the Home screen, "Menu" ► "Setting" ► "Wireless & networks" ► "Wi-Fi settings".

- The "Wi-Fi settings" screen appears.

2 Touch the Wi-Fi network name for over 1 second.

- A menu appears.

3 "Connect to network"

- The network settings are displayed. Tap the "Password" box and enter the new password.

Disconnecting from a Wi-Fi network

1 From the Home screen, "Menu" ► "Setting" ► "Wireless & networks" ► "Wi-Fi settings".

- The "Wi-Fi settings" screen appears.

Getting Started

2 Touch the name of Wi-Fi network that you want to disconnect from for over 1 second.

- A menu appears.

3 "Forget network"

- You are disconnected from the Wi-Fi network.

Setting online service accounts

You can update your status on Facebook, Google, Microsoft Exchange ActiveSync, MySpace, Twitter and other online services once you have set up your online service account on the FOMA terminal. You can also configure the FOMA terminal to automatically sync updates from the online service. You can also delete accounts.

Information

- If you do not have a Facebook account, you can open one at <http://www.facebook.com/>.
- If you do not have a Twitter account, you can open one at <http://twitter.com/>.

Adding an online service account

1 From the Home screen, "Menu" ► "Setting" ► "Accounts & sync".

- The "Accounts & sync settings" screen appears.

2 "Add account"

- The "Add an account" screen appears.

3 Tap the online service that you want to set an account for.

- Follow the screen instructions and enter your login details.
- When you have finished adding the account, the added online service appears in the "Manage accounts" group.

Information

- If you mark the "Background data" checkbox, all online service applications installed on the FOMA terminal will automatically communicate with their respective services. If you mark the "Auto-sync" checkbox, the applications will also automatically synchronize data with their respective services. These operations may incur packet communication charges. Marking these checkboxes also runs down the battery due to the increased background activity.

Manually synchronizing online service data

- 1 From the Home screen, "Menu" ► "Setting" ► "Accounts & sync".**
 - The "Accounts & sync settings" screen appears.
- 2 Tap the account that you want to synchronize with.**
 - A list of the online service's synchronized data appears.
- 3 Tap the data that you want to synchronize.**
 - The tapped data is synchronized.

Deleting an online service account

- 1 From the Home screen, "Menu" ► "Setting" ► "Accounts & sync".**
 - The "Accounts & sync settings" screen appears.
- 2 Tap the account that you want to delete.**
 - The "Data & synchronization" screen appears.

3 "Remove account"

- The "Remove account" menu appears.

4 "Remove account"














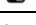 









 
- The selected account is deleted.

Screen Display/Icons














Status bar

The status bar is displayed at the top of the screen. The FOMA terminal status and notifications are displayed in the status bar. Notification icons are displayed on the left side, and the FOMA terminal status icons are displayed on the right side of the status bar.

Status icons

	Signal strength
	Out of service area
	Bluetooth enabled
	Connected to Bluetooth device
	International roaming
	GPRS available
	3G available
	FOMA high speed/HSDPA network available
	Communicating by GPRS
	Communicating by 3G
	Communicating by FOMA high speed/HSDPA network
	Battery level
	The battery needs to be charged
	The battery is charging
	GPS enabled
	GPS is positioning
	Airplane mode activated
	UIM locked or UIM not inserted
	Phone microphone is mute
	Silent mode is set (no vibration)
	Silent mode is set (vibration)
	The alarm is set
	Connected to Wi-Fi
	Synchronizing data

Notification icons

	New Gmail
	New email
	New SMS message
	Problem with an SMS message
	New instant message
	Calling or in a call
	Call on hold
	Missed call
	New voicemail message
	Upcoming calendar event
	Music is playing
	Wi-Fi is on and available
	UIM is not inserted
	USB is connected
	microSD card is not inserted
	microSD card is full
	Uploading data
	Downloading data
	Data download completed
	Problem with login or synchronization
	Update of installed application available
	More (undisplayed) notifications
	Connecting to a VPN
	Not connected to a VPN
	Debug mode

Getting Started

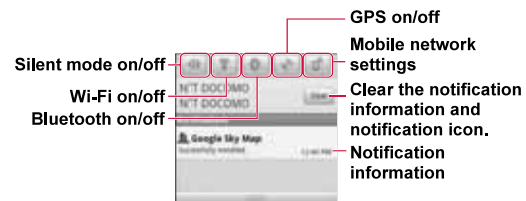
Notification panel

Notification icons are displayed in the Notification panel. You can open notifications, such as messages, reminders, or event notifications, directly from the Notification panel.

Opening the Notification panel

1 Drag or swipe the status bar downwards.

- The Notification panel appears. Icons are displayed at the top of the Notification panel. Icons are a dark color when they are on, and gray when they are off.



Information

- You can also open the Notification panel by tapping **info** in the Home screen.

Viewing notification details

1 Tap the notification message on the Notification panel.

- The notification details are displayed in the appropriate application.

Clearing all notification informations

1 Tap "Clear" on the Notification panel.

Information

- Some notifications cannot be cleared, depending on their content.

Closing the Notification panel

1 Drag or swipe the bottom of the Notification panel upwards.

Information

- You can also close the Notification panel by tapping ↶.

Touch Screen Actions

The display of the FOMA terminal has a touch screen that allows you to perform various operations by touching it.

Precautions on using the touch screen

The touch screen has been designed for light finger touches. Do not press it with sharp objects (nail, ballpoint pen, pin etc.) or forcibly with your finger.

The following user actions may cause the touch screen not to work properly. They may also cause malfunction.

- Touching the screen with gloved hands
- Touching the screen with the tip of a fingernail
- Placing a foreign object on the screen
- Sticking a protective sheet or seal on the screen

Touch screen actions

You can perform the following actions on the touch screen.

- Tap: Touch the screen lightly
- Double-tap: Touch the screen lightly twice successively
- Touch: Touch and hold down the screen
- Swipe: Lightly flick the screen
- Drag: Touch and hold down to flick the screen, and then release your finger
- Pinch-out: Touch the screen with 2 fingers and then move them apart
- Pinch-in: Touch the screen with 2 fingers apart widen and then move them together, as if pinching

Getting Started

Opening items

1 Tap the item.

Marking or unmarking options

1 Tap the item that has a checkbox.

- If the checkbox was unmarked, a tick now appears in it.

2 Tap the item that has a checkbox again.

- If the checkbox was marked, the tick now disappears from it.

Scrolling the screen

You can scroll the screen up or down. On some web pages, you can also scroll sideways.

Drag up or down to scroll.

Swipe to scroll quickly. To stop scrolling, touch the screen.

Zooming in or out

Some applications allow you to zoom in on small characters that are difficult to read. After zooming in, you can also zoom out to a full-screen view.





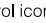 
1 Pinch out on the screen.

- The movement of your fingers enlarges the screen display.

2 Pinch in on the screen.

- The movement of your fingers reduces the screen display.

Information

- Sometimes  appears when you drag the screen. You can also zoom in or out by tapping this zoom control icon. Tap  to zoom in by 1 level. Tap  to zoom out by 1 level. However, the  or  part of the zoom control icon are gray if you have already zoomed in or out as far as possible. This indicates that you cannot zoom in or out any further.

Changing the orientation of the screen

The FOMA terminal screen automatically rotates to horizontal (landscape) and vertical (portrait) views, depending on the direction in which it is turned.

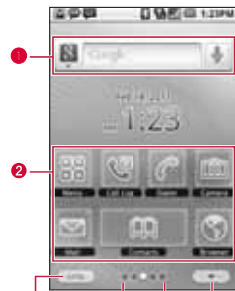
Information

- Turning the FOMA terminal sideways to the left rotates the screen to horizontal (landscape) view. The screen does not rotate if you turn the FOMA terminal sideways to the right.
- Depending on the screen being displayed, the screen may not rotate to the horizontal (landscape) view when the FOMA terminal is turned sideways to the left.
- You can disable screen rotation by tapping "Menu" ► "Setting" ► "Display" in the Home screen, and unmarking the "Auto-rotate screen" checkbox in the "Display settings" screen.

[Getting Started](#)

Home Screen

You can customize the Home screen by adding/moving shortcuts and widgets, and by changing the wallpaper. When you purchase the FOMA terminal, the Home screen has two screens each on the left and right for adding shortcuts and widgets. The Home screen contains a "docomo Menu" and "OPTIMUS UI". Under its original settings, the "docomo Menu" is displayed.



Display notification panel Position of extended home screen Display the All Functions menu

- 1 Widget** (example: Quick Search box)
Tap to activate or operate the widget (application placed on the Home page).
- 2 Shortcut**
Tap to activate an application or setting item for the FOMA terminal.

Information

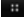 
- The docomo Menu enables you to add up to 9 Home screens. For details on setting Home screens, see "Setting up the Home screen" (P41).

Getting Started

Changing the Home screen to OPTIMUS UI

- 1 From the Home screen, tap "Menu" ► "Applications" ► "Home selector" in the "Setting" group by dragging the All Functions menu downwards.**
 - Home selector opens.
- 2 "LG Home"**
 - The Home screen changes to "OPTIMUS UI".

Information

- To return to the original Home screen, tap  ► "Home selector" ► "docomo Menu" in the Home screen.
- The descriptions of operations in this manual assume that docomo Menu has been set as the Home screen in Home selector, and that the default Home screen is being used. The operations for opening applications and other actions may differ from the descriptions given in this manual, if the Home screen has been changed to OPTIMUS UI, or if the contents of the Home screen have been changed.

Viewing the extended screens to the right or left

- 1 Drag the Home screen to the left or right.**
 - The extended screens on the left or right appear.

Changing the Home screen wallpaper

- 1 Touch the Home screen for over 1 second.**
 - The "Add to Home screen" menu appears.
- 2 "Wallpapers"**
 - The "Select wallpaper from" menu appears.

3 Tap a wallpaper category.

- If you have tapped "Gallery", select the image that you want to use as wallpaper by tapping it. A square appears in the screen. Drag the square to select the section that you want to use as wallpaper, and then tap "Save".
- If you have tapped "Wallpaper docomo Menu" and "Wallpaper LG Home", the selected wallpaper appears at the top of the screen and its thumbnail appears at the bottom of the screen. You can scroll the thumbnail sideways by dragging it. Select one of the thumbnails by tapping it, and then tap "Set wallpaper".

Adding a shortcut to the Home screen

1 Touch the Home screen for over 1 second.

- The "Add to Home screen" menu appears.

2 "Shortcuts"

- The "Select shortcut" menu appears.


3 Tap the type of shortcut that you want to add.

- A list of the selected type of shortcuts appears.

4 Tap the shortcut that you want to add.

- The shortcut icon is added to the Home screen.
- Some shortcuts require additional settings. Follow the instructions on each screen.

Information

- You can also display the "Add to Home screen" menu by tapping  ► "Add" from the Home screen.

Moving a shortcut icon

1 From the Home screen, touch the shortcut icon that you want to move for over 1 second.

2 Keep your finger on the icon, drag it to the new location and release your finger.

- The shortcut icon is moved.

Information

- Touch the shortcut icon for over 1 second to display a popup menu. You can also move the shortcut icon by tapping "Move" from the popup menu.
- You can also drag the shortcut icon to one of the Home screen's extended screens to the left or right.
- You cannot move the default icons in the central Home screen ("Menu", "Call Log", "Dialer", "Camera", "Mail", "Contacts" and "Browser").

Creating a folder on the Home screen

1 Touch the Home screen for over 1 second.

- The "Add to Home screen" menu appears.

2 "Folders"

- The "Select folder" menu appears.

3 Tap the type of folder that you want to create.

- The folder is created.

Adding a shortcut to a folder

- 1 From the Home screen, touch the shortcut icon you want to add to a folder for over 1 second.**
- 2 Drag the shortcut icon to a folder and then release your finger.**
- 3 Tap the folder.**
 - The folder window opens to allow you to confirm that the shortcut icon has been added to the folder.

Renaming a folder

- 1 Tap the folder that you want to rename.**
 - The folder window opens.
- 2 Touch the title bar for over 1 second.**
 - The "Rename folder" menu appears.
- 3 Tap the text box, enter the folder name and then tap "OK".**
 - The folder is renamed.

Adding a widget to the Home screen

- 1 Touch the Home screen for over 1 second.**
 - The "Add to Home screen" menu appears.
- 2 "Widgets"**
 - The "Choose widget" menu appears. The selectable widget menu items as default are as shown below.

Getting Started

Widget	Function
Analog alarm clock	Analog clock with alarm
Analog clock	Analog clock
Bookmarks	List of bookmarks
Calendar Widget	Calendar
Digital alarm clock	Digital clock with alarm
Digital clock	Digital clock
Dual clock	Dual zone clock
Home screen tips	Displays user tips
Latitude	Displays current location
Market	Android market client
Memo	Displays memos
Messaging Widget	Sends and receive SMS messages
Music Widget	Plays music
My Status	Provides application update notifications
News & Weather	News and weather forecast display tool
Picture frame	Displays photo frames <ul style="list-style-type: none">This widget is not displayed when the Home screen is docomo Menu.
Power Control	Manages the FOMA terminal's power
Search	Search tool
Social Feeds	Social RSS reader
Today schedule	Displays your schedule
YouTube	Plays videos

3 Tap the widget that you want to add.

- The widget is added.

Deleting a Home screen icon


1 From the Home screen, touch a shortcut icon, folder or widget for over 1 second.

- A popup menu appears.

2 "Delete from Home screen" ► "OK".

- The selected shortcut icon, folder or widget is deleted from the Home screen.

Information

- You can also delete a shortcut icon, folder or widget by tapping  ► "Delete" from the Home screen.
- You cannot delete the default icons on the Home screen at the center of the docomo Menu ("Menu", "Call Log", "Dialer", "Camera", "Mail", "Contacts" and "Browser").

Setting up the Home screen

1 From the Home screen, "Menu" ► "Home setting".


- The "Home setting" screen appears.

2 Change the settings if required.

Screen number	Set the number of screens for the extended Home screen.
Clock layout	Set the position of the clock in the central Home screen.

Skip 12 icons	Mark the checkbox to display the All Functions menu when "Menu" is tapped in the Home screen.
Auto update	Check this checkbox for automatic checking for an update file in the server at intervals of 2 weeks.
About	View the "docomo Menu" version.

Information

- You can also change the Home screen settings by tapping  ► "Home setting" from the Home screen.

Searching

The "Search" widget allows you to search for Contacts or applications in the FOMA terminal, or web pages. You can also change the type of information that you are searching for and the search range.

Search by text entry

1 Tap the search box in the Search widget in the Home screen.


- The Quick Search box appears.

2 Enter the word that you are looking for and then tap or "Go".

- A web-search result page will be displayed.
- A list of search candidates, search results in the FOMA terminal, and previously selected search results are displayed in accordance with the entered words. Tap one of the items in the list, and the selected item is displayed using the appropriate application.


[Getting Started](#)

Voice-activated search


- 1 Tap  in the Search widget in the Home screen.
- 2 When "Speak now" appears, clearly speak the search term into the microphone.

- Your spoken word is converted into text and entered in the search box. A list of information containing the search term is displayed.

Information

- If your spoken word is not converted correctly, search by tapping  again and saying the word, or by entering the search word(s).
- With voice-activated search, you can search for terms only on web pages.

Configuring search settings

- 1  ► "Search settings" in the Quick Search box.
 - The "Search settings" screen appears.
- 2 Change the settings if required.

Information

- You can also display the search-item setting screen by tapping  on the left of the search box then tapping  on the displayed menu.

Getting Started

Web	
Google search	This allows you to set whether to display suggestions under the Quick Search box when the search term is entered, and whether to include previous search results in the suggestions. It also allows you to open the Google web search history settings page in Browser. <ul style="list-style-type: none">• You must have a Google account to use this option. If you do not have a Google account, see "Setting online service accounts" (P32).
Phone	
Searchable items	This allows you to change the search range and the type of data in the FOMA terminal to include in the search.
Clear shortcuts	This allows you to specify that previously selected search results are not displayed as a list in the Quick Search box.

12-icon Menu

You can access all of the functions of the FOMA terminal from the 12-icon menu.

- 1 From the Home screen, "Menu".
 - The 12-icon menu appears.
- 2 Tap any of the following icons.



Mail	Displays the icons belonging to the respective group of the All Functions menu.
Web	
Applications	
CAM/MOV/MUSIC	
Data box	
Tool	
TEL function	
Setting	Displays the "Settings" screen appears (P63).
Map	Displays the icons belonging to the respective group of the All Functions menu.
Market	
Profile	<p>You can enter "Name", "Reading", "Mail address (1)", "Mail address (2)" as your profile.</p> <ul style="list-style-type: none"> "My phone number" and "Gmail address" are display items. They cannot be changed. For details on Gmail, see "Gmail" (P75).
Home setting	Displays the "Home setting" screen (P41).
Task manager	<p>Displays a list of open applications.</p> <ul style="list-style-type: none"> You can close an application by marking its checkbox and tapping "Terminate". You can close all open applications by tapping "Terminate All".
Home	Returns you to the Home screen.

All Functions Menu

On the All Functions menu, icons for all applications stored on the FOMA terminal are displayed divided into several groups. You can open an application by tapping its icon.

Opening an application from the All Functions menu

1 From the Home screen, .

- The All Functions menu appears, displaying icons of applications divided into groups.
- You can scroll up or down by tapping  or , or by dragging or swiping the screen up or down.

2 Tap an icon.



















- The application for the tapped icon opens.

Information


















- You can also display the All Functions menu by dragging or swiping the screen up in the Home screen.
- On the All Functions menu, tap a group's title bar to hide the icons contained in the group. If a group's icons are hidden, tap its title bar to shown its icons again.
- On the All Functions menu, touch an icon for over 1 second to display a popup menu.
 - Tap "Move" to move the icon.
 - Tap "Add to Home" to add a shortcut to the Home screen.
 - Tap "Info" to display the "Application info" screen that allows you to forcibly quit or uninstall an application. However, preinstalled applications cannot be uninstalled.





[Getting Started](#)

Application list

Applications		
	Facebook for LG	Facebook client software (P98)
	MySpace for LG	MySpace client software (P98)
	Twitter for LG	Twitter client software (P98)
	Evernote Launcher	Evernote client software (P98)
	News & Weather	News and weather forecast display software (P107)
	Manual	Software for viewing the manual (Japanese)
Web		
	Browser	Web browser (P81)
	Google Search	Search software (P41)
	Voice Search	Voice-activated search software (P42)
Tool		
	Calculator	Calculator (P110)
	Calendar	Calendar with reminder function (P108)
	Alarm/Clock	Digital clock with alarm (P108)
	Backup	Backup software (P116)
	ThinkFree Office	Mobile version of the integrated ThinkFree Office software (P99)
	Voice Recorder	Voice recorder (P110)
	Dictionary	Electronic dictionary (P111)
	ToruCa	ToruCa management software (P99)
	Startup Guide	Provides instructions and explains initial settings (P45)

Getting Started

CAM/MOV/MUSIC		
	Music	Plays music (P93)
	YouTube	Plays/uploads YouTube videos (P107)
	Camera	Shoots photos and videos (P90)
	Video player	Plays videos (P92)
TEL function		
	Contacts	Contacts (phonebook) management software (P54)
	PhoneBookCopy	Contacts (phonebook) backup software (P117)
	Phone	Telephone software (P50)
Market		
	Market	Android Market client software (P112)
	docomo market	docomo market client software (P115)
Data box		
	Gallery	Displays photos and videos (P92)
Mail		
	spモードメール (sp-mode mail)	sp-mode email software (P75)
	Email	Email client software (P72)
	Gmail	Gmail client software (P75)
	Messaging	Sends and receives SMS messages (P79)
	Talk	Google Talk client software (P87)
Setting		
	Settings	FOMA terminal settings (P63)
	Home selector	Switches the Home screen (P38)

Map		
	Maps	Google Maps client software (P101)
	Places	Searches for landmarks (P107)
	Navigation	Google Maps Navigation beta version (P106)
	Latitude	Shares location information (P104)

Information

- This is the list of the applications that have been installed in this FOMA terminal at the time of purchase.
- If the software is updated, application content and icon positions may change.
- The names of some applications may not be fully displayed below their respective icons.

Adding a group

You can add a group to the All Functions menu and organize icons on the All Functions menu.

1 "Add group" at the bottom of the All Functions menu.

- The "Add group" dialog box appears.

2 Enter the group name and tap "OK".

- The group is added to the All Functions menu.

Information

- Touch the group's title bar for over 1 second to display a popup menu.
- Tap "Move" to move the group.

- Tap "Delete" to delete a group. The icons in a deleted group are moved to the "Applications" group.
- Tap "Edit title" to rename a group.
- Tap "Change color" to change the color of a group's title bar.
- Groups that are already on the All Functions menu at the time of purchase cannot be deleted or renamed.

Moving an icon or group

- 1 Touch an icon or a group title bar on the All Functions menu for over 1 second.
- 2 Keep your finger on the icon or group title bar, drag it to the new location and release your finger.
 - The icon or group is moved.

Application for the Startup Guide

This is an application that provides operating instructions and support about initial settings for first-time users. It contains basic settings, tutorials for basic operations and a glossary.

* You may incur substantial packet communication charges when you start up this application, due to the download of large amounts of content required. We strongly recommend that you join a packet flat-rate service such as "Pake-hodai double".

- 1 From the Home screen, "Menu" ► "Tool" ► "Startup Guide".

Text Entry

The FOMA terminal has both an onscreen keyboard that is displayed in the touch screen and a physical keyboard for text entry.

[Getting Started](#)

Text entry using the onscreen keyboard

If you tap a text box on the screen, the onscreen keyboard appears in the touch panel. The FOMA terminal provides 2 types of onscreen keyboard for Japanese entry – an onscreen 10-key keyboard and an onscreen QWERTY keyboard.

Onscreen 10-key keyboard

Use this for entering Japanese in "Kana character input".



Onscreen QWERTY keyboard

Use this for entering Japanese in "Roman letter input".



Information

- The above is an iWnn IME onscreen keyboard for Japanese input. The key display varies depending on the entry screen or character mode.
- For information on switching the type of onscreen keyboard, see "Switching the keyboard" (P47).

Getting Started

Text entry using the onscreen 10-key keyboard

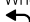 
Tap the following icons to change character modes and perform other input operations.

	Displays the previous character. When "Undo" is displayed, this undoes the last operation.
	The highlight moves to the left. It continues to move if you touch the icon for over 1 second. It can also narrow the conversion range.
	Switches the input mode. Touch this icon for over 1 second to display the "iWnn IME Menu".
	Displays a list of symbols and emoticons.
	Deletes the character to the left of the cursor. The characters continue to be deleted if you touch the icon for over 1 second.
	The highlight moves to the right. Touch this for over 1 second to move it continuously. It can also widen the conversion range. Also, if you tap this icon when the highlight is at the right end of an unconfirmed character string, the number of characters applicable to predictive conversion increases.
	Enters a space. With an unconfirmed character, tapping this icon will display conversion candidates.
	Confirms the entered characters. If the entered characters have already been confirmed, this executes the function of the text box in which the characters were entered. For the white arrow, a new line begins.

There are 8 character input modes. The current mode is indicated by the following icons in the status bar.

	Hiragana and Kanji input		Half-width alphabet input
	Full-width Katakana input		Full-width number input
	Half-width Katakana input		Half-width number input
	Full-width alphabet input		Voice input

Information

- When you no longer need the keyboard, you can close it by tapping . To display it again, tap the text box on the screen.

Switching the keyboard

1 On the onscreen keyboard, touch  for over 1 second.







- "iWnn IME Menu" appears.



2 "10-key ⇄ QWERTY"

- The keyboard is switched.


Text entry using the onscreen QWERTY keyboard


Tap the following icons to change character modes and perform other input operations.

	Switches between upper case and lower case.
	Switches the input mode. Touch this icon for over 1 second to display the "iWnn IME Menu" menu.
	Displays a list of symbols and emoticons.
	The highlight moves to the left. It continues to move if you touch the icon for over 1 second. It can also narrow the conversion range.
	Enters a space. With an unconfirmed character, tapping this icon will display conversion candidates.
	The highlight moves to the right. Touch this for over 1 second to move it continuously. It can also widen the conversion range. Also, if you tap this icon when the highlight is at the right end of an unconfirmed character string, the number of characters applicable to predictive conversion increases.

	Deletes the character to the left of the cursor. The characters continue to be deleted if you touch and hold for over 1 second.
	Confirms the entered characters. If the entered characters have already been confirmed, this executes the function of the text box in which the characters were entered. For the white arrow, a new line begins.

Switching the character mode


Each time you tap  on a text entry screen, the character mode switches in the order of "Hiragana-Kanji" ▶ "Half-width Alphabet" ▶ "Half-width Numeric". If you check "Voice Input" on "Common Keyboard Settings", voice input is enabled.

You can also switch the input mode by touching  for over 1 second and then tapping "Input Mode" on the "iWnn IME Menu" that appears.

Information

- In some text entry screens, certain character modes may not be available or selectable.


Entering symbols/emoticons

Tap  in a text entry screen to switch to symbol/emoticon input mode, and display the available symbols and emoticons on the display.


Tap "Symbol" and "Emoticon" to display respectively the available symbols and emoticons. Tap one of the available symbols or emoticons to enter it.

Tap "Cancel" to return to the onscreen keyboard that was displayed before the symbol or emoticon was entered.


Changing text entry settings

Tap  for over 1 second on a text entry screen to display "iWnn IME Menu". Tap "Change Settings" to change the text entry settings.

Common Keyboard Settings	
Sound on Key Press	Mark this checkbox to play a brief sound on each keypress.
Vibrate on Key Press	Mark this checkbox to make the FOMA terminal vibrate on each keypress.
Key Preview	Mark this checkbox to display an enlarged popup of the entered key.
Auto Capitalization	Mark this checkbox to automatically capitalize the first letter of the first word at the beginning of a sentence.
Keyboard Type	This allows you to set the type of keyboard to use on each screen view (horizontal/vertical) or for each input mode.
Keyboard Image	This allows you to set the keyboard design.
Voice Input	Mark the checkbox to enable voice input, and add it to the text input modes.
10-key Keyboard	
Flick Input	Mark this checkbox to change the input method on the onscreen 10-key keyboard to flick input. Unmark this checkbox to change it back to toggle input.
Flick Sensitivity	If you tap this while the "Flick Input" checkbox has been marked, the "Flick Sensitivity(Low↔High)" menu appears, allowing you to set the flick sensitivity using a slider.

Toggle Input	If you mark this checkbox while the "Flick Input" checkbox has been marked, toggle input is enabled as well as flick input.
Auto Cursor Movement	Specify the speed for auto cursor movement.
Conversion	
Input Word Learning	If you mark this checkbox, the phrase confirmed by the conversion process is learnt by iWnn IME.
Word Prediction	Mark this checkbox to display the predictive conversion candidates.
Typing Error Correction	Mark this checkbox to display the candidates for corrections for input errors.
Wildcard Prediction	Mark this checkbox to display conversion candidates based on the number of characters in the word or phrase.
Lines of Candidate Area	This allows you to set the maximum number of lines of conversion candidates displayed in horizontal (landscape) and vertical (portrait) screens.
Extra Conversion Engine	This allows you to set whether to use an external conversion engine to display the conversion candidates.
External Application	
Mushroom	This allows you to set whether to use the Mushroom application.
Dictionary	
Japanese User Dictionary	Tap this to display the "Word List in Japanese User Dictionary" screen. Tap  to register, edit or delete words, or to delete the entire Japanese User Dictionary.


 

 

 

 
[Getting Started](#)


 

 


 



English User Dictionary	Tap this to display the "Word List in English User Dictionary" screen. Tap  to register, edit or delete words, or to delete the entire English User Dictionary.
Clear Learning Dictionary	Delete all contents of the learning dictionary.
About IME	
iWnn IME	Displays information about iWnn IME, such as its version.

Text entry using the physical keyboard

Slide the front panel away to reveal the physical keyboard. Input areas, such as text boxes, are selected and text can be entered by pressing keys.

Some physical keys are also assigned special functions.

	Press this key for over 1 second to put the FOMA terminal into Silent mode.
	A tab is entered if you press this key after pressing  when character input has been confirmed.
	If a key is pressed after this key has been pressed, the character/function displayed to the right and above the key is entered/executed.
	Press this key to capitalize the next character that is entered.
	Press this key to return to the previous screen. It also closes a dialog box, an options menu, or the Notification panel.
	<ul style="list-style-type: none"> Press this key to display the options menu for the current screen or application. If you press this key while pressing , the "iWnn IME settings" screen appears.

	<ul style="list-style-type: none"> If you press this key, you will be returned to the Home screen, regardless of the application being used or the screen being displayed. If you press this key over 1 second, the icon of the most recently used application appears and the application is promptly launched.
	Press this key to switch the input mode between Japanese  and English  .
	If you press this key while pressing  , you can enter symbols or emoticons.
	<ul style="list-style-type: none"> Press this key on the Home screen to search in Contacts or applications in the FOMA terminal, or web pages. For details, see "Searching" (P41). If you press this key while an application is open, you can use the application's search function.
	Press this key to delete the character to the left of the highlight. The characters continue to be deleted if you press the key for over 1 second.
	Press this key to confirm the characters that have been entered and converted. After confirmation, a new line begins.
	Press this key to move the cursor up/down or to the left/right. In some applications and widgets, this allows you to scroll the page, or move links and text boxes, in these directions.

Calling/Network Services

Making/Receiving Calls

Making a call


You can use the FOMA terminal to make international calls and emergency calls, as well as standard calls. You can also enter a pause when using automated phone services, such as reserving tickets or checking your bank balance.

Making a call

1 From the Home screen, "Dialer".

- The "Phone" tab appears.

2 Enter the phone number ► .

- If you enter a wrong number, tap  to delete the number.

Entering a pause

1 From the Home screen, "Dialer".

- The "Phone" tab appears.

2 Enter the phone number, ► "Add 2-sec pause".

- A comma "," is displayed after the phone number.

3 Enter the menu number of the service that you are using ► .

Emergency numbers

Emergency numbers	Telephone number
Police	110
Fire department or ambulance service	119
Japan Coast Guard	118

Information

- When you are making an emergency call (110, 119, and 118) from your FOMA terminal, be sure to notify that you are calling from a mobile phone and give your mobile phone number and present location clearly, as the police/fire department may call you back for confirmation. During an emergency call, be sure to stay where you are so that your call will not be interrupted. After making an emergency call, do not turn off your mobile phone immediately. Keep it on for about 10 minutes so that it can receive an incoming call.
- Depending on the location from which you make an emergency call, connection may be made to the fire department or the police of another jurisdiction.
- In Japan, the 110, 119, and 118 emergency numbers cannot be dialed from the PIN code input screen nor from the PIN unblocking key input screen. For details on PIN code, see "Security codes and UIM protection" (P67).