

Camera and Video


You can use the camera or camcorder to take and share pictures and videos.

To open the Camera application

From the Home screen, tap  > **Camera** .

OR

Tap the **Camera** icon  from the Home screen.

TIP! If you've set your phone to use the Swipe unlock method, from the locked screen, simply press the **Power/Lock Key**, on the back of the phone, then drag the Camera icon  upward to open the Camera application.

Getting to know the viewfinder



- 1 Menus icon** – Tap to display the Camera settings menus. Tap again to hide the Menus icons.

- 2 **Flash** – Taps to turn the flash **On, Off** or set it to **Auto**.
- 3 **Swap camera** – Tap to swap between the rear camera lens and the front camera lens.
- 4 **Mode** – Mode to select the mode from **Auto** and **Panorama**.
- 5 **Settings** – Tap to adjust the following camera and video settings.
- 6 **Gallery** – Tap to access your Gallery.
- 7 **Video Recording button** – Tap to start recording a video.
- 8 **Capture button** – Tap to take a photo.
- 9 **Back button** – Tap to exit the Camera apps.

Take Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

To take a picture


- 1 From the Home screen, tap  > **Camera** .
- 2 Frame your subject on the screen.
- 3 A square around the subject indicates that the camera has focused.
- 4 Tap  to take a photo. Your picture will be automatically saved to the Gallery.

Camera and Video




Record Videos

In addition to taking pictures, you can record, view, and send videos with your phone's built-in video camera.

To record a video




- 1 From the Home screen, tap  > **Camera** .
- 2 Frame your subject on the screen.
- 3 Tap  to start recording the video.
- 4 The length of the recording is displayed on the top of the screen.


NOTE: Tap  to take pictures while recording video.

- 5 Tap  to pause recording video. You can resume recording again tapping .
- OR
- 6 Tap  to stop recording. Your video will be automatically saved to the Gallery.

Camera and Video Settings

From the camera mode, tap each icon to adjust the following camera settings.

 
- **Flash** : Taps to turn the flash **On**, **Off** or set it to **Auto**.
- **Swap camera** : To swap between the rear camera lens and the front camera lens.
- **Mode** : Mode to select the mode from **Auto** and **Panorama**.
 - ▶ **Auto:** Captures a auto photo shot.

- ▶ **Panorama:** Creates a wide photo of a panoramic view. Hold the phone horizontally, press the shutter to start and slowly sweep the camera across the scene.
- **Settings** : To adjust the following camera and video settings.
 - ▶ **Image size:** Set the size of your picture. Choose from **5M (2560x1920)**, **W4M (2560x1440)**, **3M (1920x1920)**, **1M (1280x960)**. Set the size of your video. Choose from **FHD (1920x1080)** or **HD (1280x720)**.
 - ▶ **Cheese shutter:** Allows you to take pictures with voice commands. When on, you just say "Cheese", "Smile", "Whiskey", "Kimchi", or "LG" to take a picture.
 - ▶ **Timer:** Set your camera's timer. This is ideal if you want to be a part of the picture.
 - ▶ **Grid:** It is easily used to take better pictures to keeping horizontal and verticals.
 - ▶ **Help:** Allows you to learn how a function works. This icon will provide you with a quick guide.

Camera and Video

Gesture shot

Take a picture with hand gesture. To take photo, raise your hand until front camera detects it and a box appears on the screen.

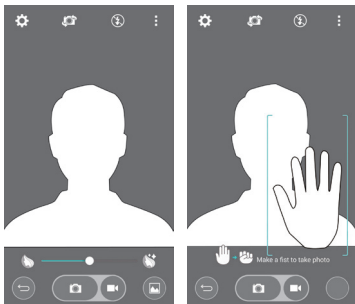

Switch camera

Swipe to switch between the rear camera and the front camera.

View Your Pictures

The Gallery is where you can access the Gallery of stored camera images. You can view them in a slideshow, share them with your friends, and delete and edit them.

- 1 From the Home screen, tap  > **Gallery** .
- 2 Select a location and tap an image to view your picture.

Function

QuickMemo+

 
The **QuickMemo+** allows you to create memos and capture screen shots. Capture screens, draw on them and share them with family and friends with QuickMemo+.

 
- 1 (While screen is switched off) Press and hold the Volume Up key.

OR

 
Touch and slide the status bar downward and tap .

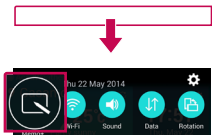

OR

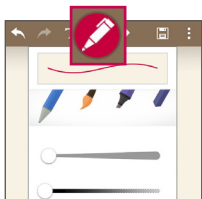

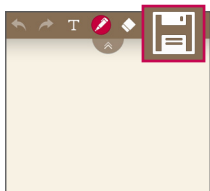

- 2 Select the desired menu option from **Pen type**, **Colour**, **Eraser** and create a memo.



- 3 Tap  in the Edit menu to save the memo with the current screen. To exit QuickMemo+ at any time, tap .

NOTE: Please use a fingertip while using the QuickMemo+. Do not use your fingernail.