

# Appendix

Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4											
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9
234	携	敬	景	桂	溪	畦	稽	系	經	繼	264	哉	塞	妻	宰	彩	才	採	栽	歲	濟	294	夙	宿	淑	祝	縮	肅	塾	熟	出	術
235	繫	罰	莖	荆	蚩	計	詣	警	輕	頸	265	災	采	犀	碎	砦	祭	齋	細	菜	裁	295	述	俊	峻	春	瞬	竣	舜	駿	准	循
236	鷄	芸	迎	鯨	劇	戟	擊	激	隙	桁	266	載	際	劑	在	材	罪	財	冴	坂	阪	296	旬	楯	殉	淳	潤	盾	純	巡	遵	
237	傑	欠	決	潔	穴	結	血	訣	月	件	267	塚	榭	肴	咲	崎	埼	碕	鷺	作	削	297	醇	順	処	初	所	暑	曙	渚	庶	緒
238	儉	倦	健	兼	券	劍	喧	圈	堅	嫌	268	咋	搾	昨	朔	柵	窄	策	索	錯	桜	298	署	書	薯	諸	諸	助	叙	女	序	徐
239	建	憲	懸	拳	捲						269	鮭	笹	匙	冊	刷						299	恕	鋤	除	傷	償					
240		檢	權	牽	犬	獻	研	硯	絹	梟	270		察	搽	撮	擦	札	殺	薩	雜	阜	300		勝	匠	升	召	哨	商	唱	嘗	獎
241	肩	見	謙	賢	軒	遣	鍵	險	顯	驗	271	鯖	捌	鏞	鮫	血	晒	三	傘	參	山	301	妾	娼	宵	將	小	少	尚	庄	床	廠
242	齟	元	原	嚴	幻	弦	減	源	玄	現	272	慘	撒	散	棧	燦	珊	產	算	纂	蚕	302	彰	承	抄	招	掌	捷	昇	昌	昭	晶
243	絃	舷	言	諺	限	乎	個	古	呼	固	273	讚	贊	酸	餐	斬	暫	殘	仕	仔	伺	303	松	梢	樟	樵	沼	消	涉	湘	燒	焦
244	姑	孤	己	庫	弧	戶	故	枯	湖	狐	274	使	刺	司	史	嗣	四	士	始	姊	姿	304	照	症	省	硝	礁	祥	称	章	笑	粧
245	糊	袴	股	胡	菰	虎	誇	跨	鈷	雇	275	子	屍	市	師	志	思	指	支	孜	斯	305	紹	肖	莒	蔣	蕉	衝	裳	訟	証	詔
246	顧	鼓	五	互	伍	午	吳	吾	娛	後	276	施	旨	枝	止	死	氏	獅	祉	私	糸	306	詳	象	賞	醬	鈺	鍾	鐘	障	鞘	上
247	御	悟	梧	檣	瑚	碁	語	誤	護	公	277	紙	紫	肢	脂	至	視	詞	詩	試	誌	307	文	丞	乘	冗	刺	淨	場	壤	孃	常
248	乞	鯉	交	佼	侯						278	諮	資	賜	雌	飼	鹵	事	似		児	308	情	擾	条	杖	淨	狀	量			
249	効	勾	厚	口	向						279	字		慈	持	時						309	釀	錠	囑	墟	飾					
250		后	喉	坑	垢	好	孔	孝	宏	工	280		次	滋	治	爾	璽	痔	磁	示	而	310		拭	植	殖	燭	織	職	色	触	食
251	巧	巷	幸	庑	庚	康	弘	恒	慌	抗	281	耳	自	蒔	辞	夕	鹿	式	識	鳴	竺	311	蝕	辱	尻	伸	信	侵	唇	娠	寢	審
252	拘	控	攻	昂	晃	更	杭	校	梗	構	282	軸	穴	雫	七	叱	執	失	嫉	室	悉	312	心	慎	振	新	晋	森	榛	浸	深	申
253	江	洪	浩	港	溝	甲	皇	硬	稿	糠	283	湿	漆	疾	質	葩	實	篠	偲	柴	芝	313	疹	真	神	秦	紳	臣	薪	親	診	壬
254	紅	紘	絞	綱	耕	考	肯	肱	腔	膏	284	屢	蕊	縞	舍	写	射	捨	赦	斜	煮	314	身	辛	進	針	震	人	仁	刃	塵	壬
255	航	荒	行	衡	講	貢	購	郊	醉	鉦	285	社	紗	者	謝	車	遮	蛇	邪	借	勺	315	尋	甚	尽	腎	訊	迅	陣	鞞	筭	諏
256	砧	鋼	閤	降	項	香	高	鴻	剛	劫	286	尺	杓	灼	爵	酌	积	錫	若	寂	弱	316	須	醉	凶	厨	逗	吹	垂	帥	推	水
257	号	合	壕	拷	濠	豪	轟	趨	克	刻	287	惹	主	取	守	手	朱	殊	狩	珠	種	317	炊	睡	粹	翠	衰	遂	醉	錘	隨	杉
258	告	国	穀	酷	鵠	黑	獄	漉	腰		288	腫	趣	取	酒	首	儒	况	寿	授		318	瑞	髓	崇	嵩	数	枢	趨	錘	据	
259	忽	惚	骨	拍	込						289	綬	需	囚	收	周						319	相	菅	頗	雀	裾					
260		此	頃	今	困	坤	墾	婚	恨	懇	290		宗	就	州	修	愁	拾	洲	秀	秋	320		澄	摺	寸	世	瀨	畝	是	淒	制
261	昏	昆	根	梱	混	痕	紺	良	魂	些	291	終	繡	習	臭	舟	蒐	衆	襲	讐	充	321	勢	姓	征	性	成	政	整	星	晴	棲
262	佐	叉	唆	嵯	左	差	查	沙	磋	砂	292	輯	週	苜	酬	集	醜	什	住	重	銃	322	栖	正	清	性	生	盛	精	聖	声	製
263	詐	鎖	裘	坐	挫	債	催	再	最		293	從	戎	柔	汁	洪	獸	縱				323	西	誠	誓	請	逝	醒	青	静	齊	稅

Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4											
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9
324	脆	隻	席	惜	戚	斥	昔	析	石	積	354	暖	檀	段	男	談	值	知	地	弛	恥	384	獨	讀	析	橡	凸	突	椴	屆	鳶	苦
325	籍	績	脊	責	赤	跡	蹟	碩	切	拙	355	智	池	痴	稚	置	致	蜘	遲	馳	築	385	寅	西	滯	噸	屯	惇	敦	沌	豚	遁
326	接	撰	折	設	窃	節	說	雪	絕	舌	356	畜	竹	筑	蓄	逐	秩	窒	茶	嫡	着	386	頓	吞	曇	鈍	奈	那	內	乍	瓜	薤
327	蟬	仙	先	千	占	宣	專	尖	川	戰	357	中	仲	宙	忠	抽	昼	柱	注	虫	衷	387	謎	灘	捺	鍋	櫛	馴	繩	暇	南	楠
328	扇	撰	栓	梅	泉	淺	洗	染	潛	煎	358	註	耐	鑄	駐	樗	豬	芋	著	貯	388	軟	難	汝	二	尼	式	迹	勾	賑	肉	
329	煽	旋	穿	箭	線						359	丁	兆	凋	喋	寵					389	虹	廿	日	乳	入						
330		織	羨	腺	舛	船	薦	詮	賤	踐	360		帖	帳	疔	吊	張	彫	微	懲	挑	390		如	尿	菲	任	妊	忍	認	濡	襦
331	選	遷	錢	銑	閃	鮮	前	善	漸	然	361	暢	朝	潮	牒	町	眺	聽	脹	腸	蝶	391	祢	寧	葱	猫	熱	年	念	捻	撚	燃
332	全	禪	繕	膳	糗	噌	塑	岨	措	曾	362	調	謀	超	跳	鈹	長	頂	烏	勅	抄	392	粘	乃	迺	之	埜	囊	惱	濃	納	能
333	曾	楚	狙	疏	疎	礎	祖	租	粗	素	363	直	朕	沈	珍	賃	鎮	陳	津	墜	椎	393	腦	膿	農	視	蚤	巴	把	播	霸	杷
334	組	蘇	訴	阻	邇	鼠	僧	創	双	叢	364	槌	追	鎚	痛	通	塚	姆	摑	槻	佃	394	波	派	琶	破	婆	罵	芭	馬	俳	廢
335	倉	喪	壯	奏	爽	宋	層	匠	惣	想	365	漬	柘	辻	蔦	綴	鐳	椿	潰	坪	壺	395	拜	排	敗	杯	盃	牌	背	肺	輩	配
336	搜	掃	挿	搔	操	早	曹	巢	槍	槽	366	孀	紬	爪	吊	釣	鶴	亭	低	停	偵	396	倍	培	媒	梅	煤	煤	狼	買	壳	賠
337	漕	燥	争	瘦	相	窓	糟	總	綜	聰	367	荆	貞	呈	堤	定	帝	底	庭	廷	弟	397	陪	這	蠅	秤	矧	荻	伯	剥	博	拍
338	草	莊	葬	蒼	藻	裝	走	送	遭	鎗	368	悌	抵	挺	提	梯	汀	碇	禎	程	締	398	柏	泊	白	箔	粕	船	薄	迫	曝	漠
339	霜	騷	像	增	憎						369	艇	訂	諦	蹄	遞						399	爆	縛	莫	駁	麥					
340		臟	蔽	贈	造	促	側	則	即	息	370		邸	鄭	釘	鼎	泥	摘	擢	敵	滴	400		函	箱	裕	箸	肇	筭	櫛	幡	肌
341	捉	束	測	足	速	俗	屬	賊	族	統	371	的	笛	適	鎬	溺	哲	徹	撤	轍	迭	401	畑	畠	八	鉢	澆	癸	醜	髮	伐	罰
342	卒	袖	其	揃	存	孫	尊	損	村	遜	372	鐵	典	填	天	展	店	添	纏	甜	貼	402	拔	筏	闊	鳩	嘶	塙	蛤	隼	伴	判
343	他	多	太	汰	訖	唾	墮	妥	情	打	373	轉	顛	点	伝	殿	澱	田	電	兔	吐	403	半	反	叛	帆	搬	斑	板	汎	汎	版
344	舵	舵	檣	陀	馱	驂	体	堆	对	耐	374	堵	塗	妬	屠	徒	斗	杜	渡	登	菟	404	犯	班	畔	帆	繁	般	藩	販	範	采
345	岱	帶	待	怠	態	戴	替	泰	滯	胎	375	賭	途	都	鍍	砥	砺	努	度	土	奴	405	頒	飯	挽	晚	番	盤	馨	蕃	蚤	匪
346	腿	苔	袋	貸	退	逮	隊	黛	卓	代	376	怒	倒	党	冬	凍	刀	唐	塔	塘	套	406	卑	否	妃	庇	彼	悲	扉	批	披	斐
347	台	大	第	醍	題	鷹	滝	瀧	卓	啄	377	宕	島	嶋	悼	投	搭	東	桃	棹	棟	407	比	泌	疲	皮	碑	秘	緋	罷	肥	被
348	宅	托	扞	拓	沢	濯	琢	託	鐸	濁	378	盜	淘	湯	涛	灯	燈	当	痘	禱	等	408	誹	費	避	非	飛	樋	備	尾	微	
349	諾	茸	夙	蛸	只						379	答	筒	糖	統	到						409	批	毘	琵琶	眉	美					
350		叩	但	達	辰	奪	脱	翼	豎	辿	380		董	蕩	藤	討	騰	豆	踏	逃	透	410		鼻	柎	稗	匹	疋	髭	彦	膝	菱
351	棚	谷	狸	鱈	樽	誰	丹	单	嘆	坦	381	鐙	陶	頭	騰	鬪	働	動	同	堂	導	411	肘	弼	必	畢	筆	逼	檜	姬	媛	紐
352	担	探	旦	歎	淡	炭	短	端	端	筆	382	懂	撞	洞	瞳	童	苟	苟	道	銅	峠	412	百	謬	悞	彪	標	水	漂	瓢	票	表
353	綻	耽	胆	蛋	誕	鍛	團	壇	彈	斷	383	鴉	匿	得	德	澆	特	督	禿	篤	毒	413	評	豹	廟	描	病	秒	苗	錨	鈿	蒜

# Appendix

Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4													
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9		
414	蛭	鱸	品	彬	斌	浜	瀕	貧	寶	頻	444	免	棉	綿	緬	面	麵	摸	模	茂	妄	474	榨	驚	瓦	亘	鰐	詫	藁	蕨	椀	灣		
415	敏	瓶	不	付	埠	夫	婦	富	富	布	445	孟	毛	猛	盲	網	耗	蒙	儲	木	默	475	碗	腕										
416	府	怖	扶	敷	斧	普	浮	父	符	腐	446	目	杳	勿	餅	尤	辰	賞	問	野	476													
417	膚	芙	譜	負	賦	赴	阜	附	侮	撫	447	紋	門	勿	也	冶	夜	爺	耶	野	彌	477												
418	武	舞	葡	蕪	部	封	楓	風	葺	蔬	448	矢	厄	役	約	藥	訊	躍	靖	柳	藪	478												
419	伏		副	復	幅	服					449	鏹	愉	愈	油	癒						479												
420		福	腹	複	覆	淵	弗	弘	沸	仏	450		諭	輸	唯	佑	優	勇	友	宥	幽	480		弋	丐	丕	个	卬	、	井	丿	乂		
421	物	鮒	分	吻	噴	墳	憤	扮	焚	奮	451	悠	憂	揖	有	柚	湧	涌	猶	猷	由	481	乖	乘	亂	丿	京	亼	予	于	亞			
422	粉	糞	紛	雰	文	聞	丙	併	兵	嵬	452	祐	裕	誘	遊	邑	郵	融	夕	庸	482	亟	一	亢	仞	仞	仞	仞	仞	仞	仞			
423	幣	平	弊	柄	並	蔽	閉	陛	米	頁	453	余	與	譽	輿	預	傭	幼	妖	容	483	仞	仗	仞	仞	仞	仞	仞	仞	仞	仞			
424	僻	壁	癖	碧	別	警	蔑	篋	偏	變	454	揚	搖	擁	曜	楊	樣	洋	溶	熔	484	佻	佻	佻	佻	佻	佻	佻	佻	佻	佻	佻		
425	片	篇	編	邊	返	遍	便	勉	婉	弁	455	窰	羊	耀	葉	蓉	要	謠	踊	遙	485	侑	伴	來	侑	侑	侑	侑	侑	侑	侑	侑		
426	鞭	保	舖	鋪	圃	捕	步	甫	補	輔	456	養	慾	抑	萊	沃	浴	翌	翼	淀	486	侑	俚	俐	俚	俚	俚	俚	俚	俚	俚	俚		
427	穗	募	墓	慕	戊	暮	母	簿	菩	倣	457	螺	裸	來	萊	賴	雷	洛	絡	落	487	倣	倣	倣	倣	倣	倣	倣	倣	倣	倣	倣		
428	俸	包	呆	報	奉	寶	峰	峯	崩	庖	458	亂	卵	嵐	欄	濫	藍				488	偃	假	會	偃	偃	偃	偃	偃	偃	偃	偃	偃	
429	抱		放	方	朋						459	履	李	梨	理	璃					489	傀	倣	倣	倣	倣	倣	倣	倣	倣	倣	倣		
430		法	泡	烹	砲	縫	胞	芳	萌	蓬	460		痢	裏	裡	里	離	陸	律	率	立	490		僉	僉	僉	僉	僉	僉	僉	僉	僉	僉	
431	蜂	褒	訪	豐	邦	鋒	飽	鳳	鵬	乏	461	葎	掠	略	劉	流	溜	琉	留	疏	粒	491	僮	價	儻	儻	儻	儻	儻	儻	儻	儻	儻	
432	亡	傍	剖	坊	妨	帽	忘	忙	房	暴	462	隆	竜	龍	侶	慮	旅	虜	了	亮	僚	492	僮	儻	儻	儻	儻	儻	儻	儻	儻	儻	儻	
433	望	某	棒	冒	紡	肪	膨	謀	貌	貿	463	兩	凌	寮	料	涼	涼	獵	療	瞭	稜	493	兢	競	兩	兩	兩	兩	兩	兩	兩	兩	兩	
434	鉞	防	吠	頰	北	僕	卜	墨	撲	朴	464	糧	良	諒	遼	量	陵	領	力	綠	倫	494	罔	胃	菁	晃	一	一	一	一	一	一		
435	牧	睦	穆	卸	勃	沒	殆	堀	幌	奔	465	厘	林	淋	熒	琳	臨	輪	隣	鱗	麟	495	丷	决	冫	冫	冰	况	冽	洄	凉	凜		
436	本	翻	凡	盆	摩	磨	魔	麻	埋	妹	466	璫	壘	淚	累	類	令	伶	例	冷	勵	496	几	處	冫	冫	冫	冫	冫	冫	冫	冫		
437	味	樽	每	哩	禎	膜	枕	末	鮪	枉	467	嶺	伶	玲	禮	苓	鈴	隸	零	靈	麗	497	勿	刼	刪	刮	剗	剗	剗	剗	剗	剗	剗	
438	鱒	樹	亦	俟	又	抹					468	齡	曆	歷	列	劣	烈					498	剗	剔	剪	剗	剗	剗	剗	剗	剗	剗	剗	
439	繭	磨	万	慢	滿						469	漣	煉	簾	練	聯						499	劒	劒	劒	劒	劒	劒	劒	劒	劒	劒	劒	
440		漫	蔓	味	未	魅	已	箕	岬	密	470		蓮	連	鍊	呂	魯	櫓	炉	賂	路	500		辦	劬	劬	劬	劬	劬	劬	劬	劬	劬	
441	蜜	湊	蓑	稔	矛	霧	鷓	鳴	姪	牝	471	露	勞	婁	廊	弄	朗	樓	榔	浪	漏	501	勤	勦	匍	匍	匍	匍	匍	匍	匍	匍	匍	
442	夢	無	牟	盟							472	牢	狼	箠	老	聾	蠟	郎	六	麓	祿	502	甸	匍	匍	匍	匍	匍	匍	匍	匍	匍	匍	匍
443	名	命	明								473	肋	錄	論	倭	和	話	歪	賄	脇	惑	503	匍	匍	匍	匍	匍	匍	匍	匍	匍	匍	匍	匍

Appendix







Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4									
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7
684	簇	箴	箴	箴	箴	箴	箴	箴	箴	714	鬻	臧	臺	臻	臾	舛	舛	舛	舛	舛	744	衄	衄	衄	衄	衄	衄	衄	衄	衄
685	箴	箴	箴	箴	箴	箴	箴	箴	箴	715	舍	舛	舖	舛	舛	舛	舛	舛	舛	舛	745	衄	衄	衄	衄	衄	衄	衄	衄	衄
686	箴	箴	箴	箴	箴	箴	箴	箴	箴	716	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	746	衄	衄	衄	衄	衄	衄	衄	衄	衄
687	舛	舛	舛	舛	舛	舛	舛	舛	舛	717	艷	舛	舛	舛	舛	舛	舛	舛	舛	舛	747	裝	裝	裝	裝	裝	裝	裝	裝	裝
688	舛	舛	舛	舛	舛	舛	舛	舛	舛	718	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	748	襪	襪	襪	襪	襪	襪	襪	襪	襪
689	舛	舛	舛	舛	舛	舛	舛	舛	舛	719	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	749	樓	樓	樓	樓	樓	樓	樓	樓	樓
690	舛	舛	舛	舛	舛	舛	舛	舛	舛	720	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	750	襪	襪	襪	襪	襪	襪	襪	襪	襪
691	舛	舛	舛	舛	舛	舛	舛	舛	舛	721	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	751	覈	覈	覈	覈	覈	覈	覈	覈	覈
692	舛	舛	舛	舛	舛	舛	舛	舛	舛	722	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	752	覈	覈	覈	覈	覈	覈	覈	覈	覈
693	舛	舛	舛	舛	舛	舛	舛	舛	舛	723	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	753	訃	訃	訃	訃	訃	訃	訃	訃	訃
694	舛	舛	舛	舛	舛	舛	舛	舛	舛	724	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	754	詒	詒	詒	詒	詒	詒	詒	詒	詒
695	舛	舛	舛	舛	舛	舛	舛	舛	舛	725	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	755	誨	誨	誨	誨	誨	誨	誨	誨	誨
696	舛	舛	舛	舛	舛	舛	舛	舛	舛	726	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	756	詼	詼	詼	詼	詼	詼	詼	詼	詼
697	舛	舛	舛	舛	舛	舛	舛	舛	舛	727	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	757	詼	詼	詼	詼	詼	詼	詼	詼	詼
698	舛	舛	舛	舛	舛	舛	舛	舛	舛	728	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	758	謳	謳	謳	謳	謳	謳	謳	謳	謳
699	舛	舛	舛	舛	舛	舛	舛	舛	舛	729	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	759	證	證	證	證	證	證	證	證	證
700	舛	舛	舛	舛	舛	舛	舛	舛	舛	730	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	760	讓	讓	讓	讓	讓	讓	讓	讓	讓
701	舛	舛	舛	舛	舛	舛	舛	舛	舛	731	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	761	讓	讓	讓	讓	讓	讓	讓	讓	讓
702	舛	舛	舛	舛	舛	舛	舛	舛	舛	732	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	762	豐	豐	豐	豐	豐	豐	豐	豐	豐
703	舛	舛	舛	舛	舛	舛	舛	舛	舛	733	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	763	貍	貍	貍	貍	貍	貍	貍	貍	貍
704	舛	舛	舛	舛	舛	舛	舛	舛	舛	734	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	764	貍	貍	貍	貍	貍	貍	貍	貍	貍
705	舛	舛	舛	舛	舛	舛	舛	舛	舛	735	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	765	賻	賻	賻	賻	賻	賻	賻	賻	賻
706	舛	舛	舛	舛	舛	舛	舛	舛	舛	736	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	766	賻	賻	賻	賻	賻	賻	賻	賻	賻
707	舛	舛	舛	舛	舛	舛	舛	舛	舛	737	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	767	賻	賻	賻	賻	賻	賻	賻	賻	賻
708	舛	舛	舛	舛	舛	舛	舛	舛	舛	738	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	768	跟	跟	跟	跟	跟	跟	跟	跟	跟
709	舛	舛	舛	舛	舛	舛	舛	舛	舛	739	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	769	蹂	蹂	蹂	蹂	蹂	蹂	蹂	蹂	蹂
710	舛	舛	舛	舛	舛	舛	舛	舛	舛	740	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	770	蹇	蹇	蹇	蹇	蹇	蹇	蹇	蹇	蹇
711	舛	舛	舛	舛	舛	舛	舛	舛	舛	741	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	771	蹇	蹇	蹇	蹇	蹇	蹇	蹇	蹇	蹇
712	舛	舛	舛	舛	舛	舛	舛	舛	舛	742	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	772	蹇	蹇	蹇	蹇	蹇	蹇	蹇	蹇	蹇
713	舛	舛	舛	舛	舛	舛	舛	舛	舛	743	舛	舛	舛	舛	舛	舛	舛	舛	舛	舛	773	躑	躑	躑	躑	躑	躑	躑	躑	躑

# Appendix

Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4								
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6
774	軾	輕	輅	輅	輅	輅	輅	輅	輅	804	霹	霽	靈	靈	靈	靈	靈	靈	靈	834	麩	慶	麒	麩	慶	麩	慶	麩	慶
775	輅	輅	輅	輅	輅	輅	輅	輅	輅	805	醜	醜	醜	醜	醜	醜	醜	醜	醜	835	麩	慶	麒	麩	慶	麩	慶	麩	慶
776	輅	輅	輅	輅	輅	輅	輅	輅	輅	806	靺	靺	靺	靺	靺	靺	靺	靺	靺	836	靺	靺	靺	靺	靺	靺	靺	靺	靺
777	辭	辭	辭	辭	辭	辭	辭	辭	辭	807	鞞	鞞	鞞	鞞	鞞	鞞	鞞	鞞	鞞	837	靺	靺	靺	靺	靺	靺	靺	靺	靺
778	逅	迹	迹	迹	迹	迹	迹	迹	迹	808	韶	韶	韶	韶	韶	韶	韶	韶	韶	838	齧	齧	齧	齧	齧	齧	齧	齧	齧
779	迨	透	透	透	透	透	透	透	透	809	顏	顏	顏	顏	顏	顏	顏	顏	顏	839	齧	齧	齧	齧	齧	齧	齧	齧	齧
780		遏	遏	遏	遏	遏	遏	遏	遏	810		顛	顛	顛	顛	顛	顛	顛	顛	840		堯	堯	堯	堯	堯	堯	堯	堯
781	遞	邊	邊	邊	邊	邊	邊	邊	邊	811	飆	飆	飆	飆	飆	飆	飆	飆	飆										
782	邊	邊	邊	邊	邊	邊	邊	邊	邊	812	餞	餞	餞	餞	餞	餞	餞	餞	餞										
783	郢	鄂	鄂	鄂	鄂	鄂	鄂	鄂	鄂	813	饅	饅	饅	饅	饅	饅	饅	饅	饅										
784	酥	醅	醅	醅	醅	醅	醅	醅	醅	814	馮	馮	馮	馮	馮	馮	馮	馮	馮										
785	醪	釀	釀	釀	釀	釀	釀	釀	釀	815	馴	馴	馴	馴	馴	馴	馴	馴	馴										
786	釵	釜	釜	釜	釜	釜	釜	釜	釜	816	驅	驅	驅	驅	驅	驅	驅	驅	驅										
787	鈕	鈹	鈹	鈹	鈹	鈹	鈹	鈹	鈹	817	驢	驢	驢	驢	驢	驢	驢	驢	驢										
788	鉋	鉋	鉋	鉋	鉋	鉋	鉋	鉋	鉋	818	體	體	體	體	體	體	體	體	體										
789	鉋	鉋	鉋	鉋	鉋	鉋	鉋	鉋	鉋	819	髻	髻	髻	髻	髻	髻	髻	髻	髻										
790		鎚	鎚	鎚	鎚	鎚	鎚	鎚	鎚	820		髻	髻	髻	髻	髻	髻	髻	髻										
791	鉋	鉋	鉋	鉋	鉋	鉋	鉋	鉋	鉋	821	閔	閔	閔	閔	閔	閔	閔	閔	閔										
792	鑿	鑿	鑿	鑿	鑿	鑿	鑿	鑿	鑿	822	脛	脛	脛	脛	脛	脛	脛	脛	脛										
793	鑿	鑿	鑿	鑿	鑿	鑿	鑿	鑿	鑿	823	鮓	鮓	鮓	鮓	鮓	鮓	鮓	鮓	鮓										
794	鑿	鑿	鑿	鑿	鑿	鑿	鑿	鑿	鑿	824	錫	錫	錫	錫	錫	錫	錫	錫	錫										
795	鑿	鑿	鑿	鑿	鑿	鑿	鑿	鑿	鑿	825	鹹	鹹	鹹	鹹	鹹	鹹	鹹	鹹	鹹										
796	閔	閔	閔	閔	閔	閔	閔	閔	閔	826	鯁	鯁	鯁	鯁	鯁	鯁	鯁	鯁	鯁										
797	閔	閔	閔	閔	閔	閔	閔	閔	閔	827	繪	繪	繪	繪	繪	繪	繪	繪	繪										
798	關	關	關	關	關	關	關	關	關	828	缺	缺	缺	缺	缺	缺	缺	缺	缺										
799	隋	隋	隋	隋	隋	隋	隋	隋	隋	829	鳩	鳩	鳩	鳩	鳩	鳩	鳩	鳩	鳩										
800		陝	陝	陝	陝	陝	陝	陝	陝	830		鵝	鵝	鵝	鵝	鵝	鵝	鵝	鵝										
801	險	險	險	險	險	險	險	險	險	831	鵝	鵝	鵝	鵝	鵝	鵝	鵝	鵝	鵝										
802	雋	雋	雋	雋	雋	雋	雋	雋	雋	832	鵝	鵝	鵝	鵝	鵝	鵝	鵝	鵝	鵝										
803	霈	霈	霈	霈	霈	霈	霈	霈	霈	833	鵝	鵝	鵝	鵝	鵝	鵝	鵝	鵝	鵝										

## List of city in World time

Country name	City name	Country name	City name	Country name	City name
Ireland	Dublin	England	London	Republic of China	Beijing
Afghanistan	Kabul	Italy	Rome		Hong Kong
Taiwan	Taipei	India	New Delhi	Denmark	Copenhagen
Thailand	Bangkok	Indonesia	Jakarta	Germany	Berlin
Iran	Tehran	Egypt	Cairo	Japan	Tokyo
Russia	Moscow	Australia	Canberra	New Zealand	Auckland
United of states of America	Anchorage		Sydney	Hungary	Budapest
	Guam	Austria	Vienna	Bangladesh	Dhaka
	Seattle	Holland	Amsterdam	Philippines	Manila
	Chicago	Canada	Montreal	Finland	Helsinki
	Dallas	Republic of Korea	Seoul	Brazil	Rio de Janeiro
	Detroit	Greece	Athens	France	Paris
	Denver	Kuwait	Kuwait	Viet Nam	Hanoi
	New York	Saudi Arabia	Jedda	Venezuela	Caracas
	Honolulu	Singapore	Singapore	Belgium	Azores
	Boston	Sweden	Stockholm		Brussels
	Los Angeles	Spain	Madrid	Portugal	Lisbon
	Washington D.C.	Sri Lanka	Colombo	Mexico	Mexico City
Arab Emirates	Abu Dhabi	Thailand	Taipei	Lebanon	Beirut
Aregentina	Buenos Aires	Czecho	Prague		



**Multiaccess Combination Patterns**

You can simultaneously use a voice call and packet transmission (i-mode, i-mode mail, etc.) as well as SMS with the multiaccessing function on the FOMA phone. The available combinations of operations for the multiaccessing function are shown below:

Transmission added / Current Transmission	Voice call		Video-phone		i-appli	i-mode	i-mode mail		SMS		Packet transmission
	Outgoing	Incoming	Outgoing	Incoming			Sending	Receiving	Send	Receive	
During a call	○※1	○※1※2	×	×	○	○	○	○	○	○	○
During a Video-phone call	×	×	×	×	×	×	×	×	×	×	×
While using i-appli	○	○	○	○	—	×	×	×	—	×	○
During i-mode	○	○	×	×	○	—	○	○	—	○	×
During a packet transmission with PC connection	○	○	×	×	○	×	×	×	○	○	—

○ : Available    × : Not available    — : The combination is functionally not possible.

※1: If you have signed up for Call Waiting Service, you can make another voice call with the current voice call put on hold.

※2: If you have signed up for “Voice Mail” or “Call Forwarding Service”, and you have not yet activated either service, you can answer another incoming call after ending the current transmission.

※3: You can check the missed call after ending a call.

※4: You cannot use this menu during communicating i-appli.

※5: The message will be stored in i-mode center with a mark on upper of screen.

※6: You cannot receive message on downloading.

※7: You can receive SMS after ending current transmission.

※8: You cannot activate i-appli which needs data communication during transmitting by packet.

※9: If i-appli runs without connecting the network, the packet transmission can be activated.

※10: You can activate i-appli if you call from site of i-mode.

※11: You can send i-mode mail or i-appli if you compose the mail from the submenus of i-mode browser. You can insert the displayed site or URL into the body of mail.

## Multitask Combination Patterns

You can run multiple functions simultaneously and use them switching displays with the Multitask function.

### Using Multitask

#### 1. While running each function,



You can confirm the functions running.  
You can switch functions by selecting the icon.

Icon	Description	Icon	Description
	Voice call function running		Calculator function running
	Mail function running		Own number is displayed
	i-mode function running		
	i-appli function running		Setting the network/ Displaying the history of recent calls
	Phonebook function <sup>※1</sup> running		Tool function running <sup>※2</sup>
	Data box function running		
	Station function running <sup>※3</sup>		
			Setting the sound function

Icon	Description	Icon	Description
	Multimedia function running		Setting the display menu
			Setting the setting menu
	Scheduler function running		

※1: “Own number” function is not included.

※2: If you switch i-mode/ i-appli, the play is ended, and then is displayed.

※3: “Schedule” function is not included.

※4: “Custom menu”, “Infrared”, “Calculator”, “miniSD memory card” are not included.

#### 2. Select ► ► Select from the following new functions ►

##### Call

The Phone Number entry display appears. → P46

##### Mail

The Mail menu appears. → P127

##### i-mode

The i-mode menu appears. → P109

##### i-appli

The Software List display appears. → P147

##### Search phonebook

The Phonebook Search display appears. → P60

- Although Search phonebook is normal application, it can be always activated until system memory is available.

### **Melody**

The Melody Folder List display appears. → P164

---

### **Camera-mode**

The Still Image Finder display appears. → P102

---

### **Scheduler**

The Monthly Schedule display appears. → P183

---

### **Calculator**

The Calculator display appears. → P175

---


### **Own number**

Own number is displayed. → P65



---

- A few functions are not selected depending on activating the task.  
→ P271

### Information

- To bring up the Task Menu display from Stand-by display, press and hold  for at least one second.
- When you activate multitask function, the submenus can be used.
- It may be a few cases that you cannot use “Search phonebook” depending on the memory status of FOMA handset.

### Ending the task/ Going back to previous task

1.  / 
  - You can go back previous menu.
  - You can end current task at the same time.

## Combination of Functions

You may not be able to select some items on the Task Menu display depending on the added function. The combinations of active functions and added functions executable from the Task Menu are as follows:

Task menu item Active function	Voice call	Mail	i-mode	i-appli	Phonebook search
During a Voice call	×	○	○	○	○ <sup>※1</sup>
A function in the Mail menu running	○	×	×	×	○ <sup>※1</sup>
A function in the i-mode menu running	○	×	×	×	○ <sup>※1</sup>
A function in the i-appli menu running	○	×	×	×	○
A function in a menu other than the Mail/i-mode/i-appli menu running	○	○	○	○	○ <sup>※2</sup>
Own number displayed	○	○	○	○	○


○ : Available

×

x : Not available

※1: You cannot use this menu when activate the menu from phonebook. You cannot use new phonebook function.

※2: You cannot use this menu when you use phonebook function.

- While using or running the following functions, press  does not work:
  - On displaying the warning message or info message/ During a voice call/ video-phone call/ while receiving a call
  - During a video-phone call
  - During data transmission with a personal computer connected
  - While recording moving image
  - While copying/ moving a data/ While deleting all data/ While downloading the data
  - While exchanging a data via infrared



Task menu item / Active function	Melody	Camera	Schedule	Calculator	Own number
During a Voice call	×	×	○ <sup>*3</sup>	○ <sup>*3</sup>	○
A function in the Mail menu running	×	×	○ <sup>*3</sup>	○ <sup>*3</sup>	○
A function in the i-mode menu running	×	×	○ <sup>*3</sup>	○ <sup>*3</sup>	○
A function in the i-appli menu running	×	×	○	○	○
A function in a menu other than the Mail/i-mode/i-appli menu running	○	○	○	○	○
Own number displayed	○	○	○	○	×

## Service Available with FOMA Phones

Available services	Phone number
Collect call (Calls charged to the receiver)	(No prefix) 106
Directory assistance for ordinary phones and DoCoMo mobile phones (Charges apply) (Unlisted phone numbers cannot be given.)	(No prefix) 104
Telegrams (Charges apply) 8 a.m. to 10 p.m.	(No prefix) 115
Time check (Charges apply)	(No prefix) 117
Weather forecast (Charges apply)	Area code + 177
Emergency calls to police	(No prefix) 110
Emergency calls to fire station and ambulance	(No prefix) 119
Emergency calls for accidents at sea	(No prefix) 118
Disaster messaging service (Charges apply)	(No prefix) 171

### Information

- When making a collect call (106), the recipient is charged call fee and a handling fee of ¥90 (¥94.5 with tax) for each a call. (As of March 2006)
- When using the Directory Assistance Service (104), you are charged a guidance fee of ¥100 (¥105 with tax) plus a call fee. For whom having weak eyesight or handicapped arms, the guidance is available charge free. For more details, dial 116 (NTT inquiry counter) from ordinary phones. (As of March 2006)

- When you dial 110/119/118 from the FOMA phone, you cannot be located. Tell the staff at the police/fire station that you are calling from a mobile phone and then notify your phone number and a correct description of your current location so that they can call you back to confirm. Furthermore, remain still while talking to prevent your call from being disconnected. Do not turn off the power immediately after the call, but instead make sure that your phone can receive calls for at least 10 minutes.
- You might not be connected to regional police/fire station depending on the area from where you call. If this happens, use payphones or ordinary phones.
- If you use “Call Forwarding Service” for the ordinary phone and specify a mobile phone or automobile phone (mobile phone) as the forwarding destination, callers may hear ringing tone even when the mobile phone is busy, out of the service area, or the power is turned off depending on the settings of the ordinary phone/mobile phone.
- Note that the FOMA phone is not available to 116 (NTT inquiry counter), Dial Q2, Message Dial, and credit call services. (You can use auto credit call to the FOMA phone from ordinary phones or payphones.)

### Introduction of Data Link

“FOMA L601i Data Link” is the program for data such as phonebook, bookmark exchange or transmission by using FOMA phone to a personal computer via connecting the FOMA USB cable (Option). You can edit and save the data by using personal computer.

- LG Electronics Japan [jp.wowlg.com](http://jp.wowlg.com)

For details related to installation, environments, operation, and limitation, refer to homepage or Installation guide and Help file of Data Link program.

#### ■ OS

Windows98SE, WindowsME, Windows2000, WindowsXP (Japanese version)

- PC/AT transmission operator supported these OS

#### ■ Warranty Limitation

LG Electronics Japan, Inc. shall undertake the flaw warranty of this software, and no other responsibility of a qualification. Moreover, any problems concerning Data Link software and related data shall be solved by responsibility and expense of an user.

“FOMA Data Link”

#### <Customer Service of LG Electronics Japan Inc.>

■ Phone number ☎ 0120-813-023

※Can be called from mobile phone or PHS 03-5675-7323

- Please confirm the phone number before you dial.

■ Business hours 10:00 a.m ~ 6:00 p.m  
(Except for Saturday, Sunday and Holiday)

## Troubleshooting

Problem	Check point	Reference
The FOMA phone does not turn on. (Cannot use)	Make sure the battery pack is attached to the phone correctly.	P38
	Make sure the battery is fully charged.	P41
Cannot operate by pressing buttons.	Turn off the power once and back on, or reattach the battery pack.	P38, 43
Cannot charge.	Make sure the battery pack is attached to the phone correctly.	P38
	Make sure that the charging is done in a correct way.	P39
圏外 appears and a busy tone sounds when making a call.	You may be outside the service area or receiving weak radio waves.	P31
Camera images are dark showing nothing when using the camera/video camera, or making a video-phone call.	Check the rotation direction of the camera.	P29, 101
"All lock" is displayed on the Stand-by display.	This may be because All Lock is activated.	P90
Different ring tones sound for incoming calls/incoming mail.	This may be the call/mail from a party whose ring tone/mail ring tone is set by Utilities per mail address.	P59
	This may be the call/mail from a party stored in a group and set with a ring tone/mail ring tone in Group Setting.	P64
Images or melodies selected return to default.	Make sure the UIM that was inserted when you downloaded images or melodies is inserted.	P37



■ When using at overseas

Problem	Check point	Reference
圏外 keeps displaying, and the International Roaming Service cannot be used.	Make sure the phone is in the international roaming service area and is not receiving weak radio waves.	P215
	Check the "International Roaming Service Manual" or WORLD WING's web site to see whether the service area or the carrier can be used with your phone.	—
	Change the "Network mode" to "Auto" or to the network supporting the service.	P88
	When you are using the FOMA phone for the first time after leaving Japan and entered overseas, power cycle the phone.	—
Cannot use Video-phone call/SMS/i-mode/Packet transmission.	Check the "International Roaming Service Manual" or WORLD WING's web site to see whether the service area or the carrier can be used with your phone.	—
	Change the "Network mode" to "Auto" or to the network supporting the service.	P88
Cannot receive Voice call or Video-phone call.	Make sure "Barring All Incoming when roam" is not set to restrict incoming calls.	P198
Remains 圏外 after returned from overseas.	Make sure "Network mode" is not set to "GSM".	P88


## Error Messages


Message	Description	Reference
Invalid UIM requested software can't start	Cannot auto start i-appli software because of the UIM restrictions. Insert the UIM which had been inserted when the file was obtained and try again.	–
Invalid UIM requested service not available.	Cannot send mail because of the UIM restrictions. Insert the UIM which had been inserted when the mail was created and try again.	–
Invalid UIM cannot send	Cannot operate because of the UIM restrictions. Insert the UIM which had been inserted when the file was obtained and try again.	–
Invalid UIM, incorrect display	Cannot display because of the UIM restrictions. Insert the UIM which had been inserted when the mail was created and try again.	–
Insert FOMA card(UIM) / Insert UIM	No UIM is inserted. Insert it and try again.	–
Invalid UIM requested software can't start	Cannot start i-appli software because of the UIM restrictions. Insert the UIM which had been inserted when the file was obtained and try again.	–
Could not check new message	Was not able to connect i-mode successfully.	–
i-mode mail service is busy. Please try again later (555)	The line facility has trouble or line is very busy. Wait a while and try again.	–
miniSD memory card not ready	The miniSD card does not insert into a phone properly. Try again after re-inserting correctly.	–
miniSD card ejected	On activating the miniSD memory card, the card is removed. After inserting the card correctly, operate it again.	P168

Message	Description	Reference
Invalid PUK1 Remaining: X	The entered PIN1 unblock code is wrong. Enter the correct one.	P97
Invalid PIN1 Remaining: X	The entered PIN1code is wrong. Enter the correct one.	P97
Invalid PIN1 (PIN2) Remaning:X	If you enter wrong PIN1/ PIN2 code over three times, PIN is locked. To unlock it, you enter PIN unlock code.	P97
Invalid PIN1 (PIN2) Remaning:X	If you enter wrong PIN1/ PIN2 code over three times, PIN is locked. To unlock it, you enter PIN unlock code.	P97
Please check SMS Center settings	The setting of the SMS center is wrong. Set the setting correctly and try again.	P93
SSL session cannot be established.	Connection was not established to the site which is supporting SSL communication. Try again.	-
SSL session failed.	Cannot connect because of the error in the server's authentication.	-
Root certificate is not valid.	The SSL certificate for that server is set to "Invalid" in the "Certificate" setting. Change the setting to "Valid" and try again.	P118
Please set "To type" receiver	The mail address (To-type) is not entered. Perform a transfer after entering it.	P139
There is data that can't register to UIM	When you copy the entry of phonebook from handset to UIM, the character may be inputted over the limitation or inputted the item cannot be registered.	P58
URL is too long to register	The URL for the site is too long, so it cannot be registered.	-
URL is too long to display	The URL for the site is too long, so it cannot be displayed.	-

Message	Description	Reference
Invalid URL	The URL is not entered correctly. Enter it correctly and try again.	–
No URL history	URL history is not recorded.	–
9K size cannot be used	"Frame shot" cannot be set because "Size restriction" is set to "9Kbyte". When you want to set "Frame shot", set "Size restriction" to "No restriction".	P104
There is no empty memory.	Since the memory number entered was already in use, so the phonebook entry cannot be saved. Enter a different memory number.	–
Address is not valid (451)	SMS was not able to be sent since the address is wrong. Perform the operation after entering a correct address.	–
Please input address	No address is entered. Perform a transmission after entering an address.	P139
No empty memory	An error occurred so you cannot create the animation.	–
Cannot start application	An error occurred so the i-mode function could not be started.	–
Incorrect password	The Terminal Security Code is wrong. Enter the correct Terminal Security Code.	P96
Can't copy some data Continue?	The data which cannot be copied is included. If you want to copy in this situation, select "Yes".	–
Not moved	An error occurred so the file could not be moved.	–
error	An error occurred, so the operation of i-appli has been terminated.	–
Cannot rename Error in renaming	An error occurred so you cannot change the name.	–



Message	Description	Reference
No response, Rewrite?	A time out occurred during a connection of Infrared data, so the communication was suspended. Select "Yes" to reconnect.	–
No response (408)	No response from the site or the Internet web page, so could not connect. Try again.	–
Same URL already stored. Overwrite?	The same URL is already registered. Select "Yes" to overwrite.	–
Same address is entered. Send?	The same address is entered. Select "Yes" to delete and send.	–
Exist same file	The same file name exists. Change the file name to save.	–
Exist same file	The same folder exists. Change the folder name.	–
Cannot add same desktop icon	You cannot copy the file in same folder. Select the other folder, and then  [Add].	–
All lock	All lock is set. After releasing the lock, try it again.	P90
MessageF (free) service unavailable while abroad. Please make sure the Center Inquiry functions on your mobile phone, does not check for MessageF, when making inquires to the i-mode center(556)	You cannot request MessageF in abroad. Exclude "MessageF" of "Request i-mode".	P119, 144
Not available if size is restricted	You cannot set "Setting saved quality" if you "Size" is "No restriction". If you set it, "Size" is set to "No restriction".	P104
Error in image. Does not work correctly	The memory space is short or an error occurred, so does not run correctly.	–
Cannot save image	An error occurred, so the image could not be saved.	–

Message	Description	Reference
Screen memos is full.	The screen memos are saved up to the maximum. By pressing "Yes", you can delete unnecessary screen memos.	–
Screen memos is full. Select item to delete	The screen memos are saved up to the maximum., so cannot save any more. Select "Yes" and delete unnecessary screen memos.	P112
Failed to load screen memo	Failed to read the screen memo so cannot be displayed.	–
No screen memos	No screen memos saved.	–
Cannot add screen memo	An error occurred, so the screen memo could not be saved.	–
Unable to view file. Access to URL is limited (491)	The maximum number of accessible times exceeded, so could not be displayed.	–
Failed to launch.	Failed to start software because of an error.	–
Out of service area	You are either out of the service area or where radio waves are not received. Move to a place where  lights.	–
Terminal and UIM ID will be sent	This is displayed when IP (Information Service Provider) needs to identify a customer with "Serial number of your mobile phone/UIM". "Serial number of your mobile phone/UIM" is sent to IP over the Internet, so it could be deciphered by third parties. However, your phone number, address, age and gender are not notified to the IP (Information Service Provider) or others by this operation. Select "Yes" to connect.	–
Already downloaded by different UIM. Overwrite?	Already the same i-appli downloaded from a different UIM exists. Select "Yes" to overwrite.	–

Message	Description	Reference
This card cannot be recognized	The UIM cannot be recognized, or an invalid UIM is inserted. Either reinsert the UIM or insert a valid UIM and try the operation again.	P36
Cannot zoom in this image size	Since the "Size" is set to "1280x1024", zoom does not work. Set the screen size to "640x480" or smaller and set the zoom.	P104
Certificate is rejected (tampered)	Could not connect since an altered SSL certificate was received.	–
This site is not certified. Do you connect?	The SSL certificate not supported has been received. Select "Yes" to connect.	–
This certificate has expired. Do you connect?	You have connected to a site supporting SSL communication without your clock being set. Please perform "set time".	–
	An expired or premature SSL certificate is received. Select "Yes" to connect.	–
Root certificate has expired. Do you connect?	The SSL certificate in the FOMA phone has been expired. Select "Yes" to connect.	–
	You have connected to a site supporting SSL communication without your clock being set. Please set the time.	P86
	A request to send a client certificate occurred while connecting to a site supporting SSL communication. Select "Yes" to connect.	–
This certificate is not valid for this URL Do you connect?	When the CN of SSL certificate does not match, this error message will be displayed.	–

Message	Description	Reference
Terminal and UIM ID will be sent.	This is displayed at download for an IP (Information Service Provider) to identify a customer and judge whether it can be used with the mobile phone. "Serial number of your mobile phone/UIM" is sent to IP over the Internet, so it could be deciphered by third parties. However, your phone number, address, age and gender are not notified to the IP (Information Service Provider) or others by this operation. Select "Yes" to connect.	–
This software will use saved data.	The registered data (such as phonebook, bookmark, schedule) saved in your mobile phone is used at download. Select "Yes" to download.	–
Some media is used only with-in your phone.	Since the file protected with copyright protection technology is included, it cannot be transmitted.	–
Digital right prevent from moving	The file cannot be moved since it is protected with copyright protection technology.	–
Digital right prevent from copying	The file cannot be copied since it is protected with copyright protection technology.	–
The data may not be replayed	Since downloaded data is not valid, it may not be able to be played.	–
Digital right prevent from playing.	Cannot be played since it is protected with copyright protection technology.	–
Digital right prevent from playing. Delete?	The date when the data with replay period was received and the current date in the FOMA phone differ, so cannot be played. Select "Yes" to delete.	–
Digital right prevent from setting	Cannot be set since it is protected with copyright protection technology.	–
Digital right prevent from sending.	Cannot be sent since it is protected with copyright protection technology.	–
Digital right prevent from editing	Cannot be edited since it is protected with copyright protection technology.	–
The data cannot be saved.	The data from a site cannot be saved to protect from misuse.	–

Message	Description	Reference
The data cannot be saved. Download?	You cannot save the data even though you obtain it because the data cannot be saved. Select "Yes" to obtain it.	–
Please set the clock to obtain data	Cannot acquire this data because the clock is not set. Perform this operation after setting the clock.	P86
This file cannot be set as a wallpaper	This file cannot be set as a wallpaper.	–
Failed copy.	Failed to copy the phone number and the mail address since an error occurred in the data of the phone number and the mail address while copying the phonebook.	–
Cannot add folder	The maximum number of folders that can be created has been reached, so cannot create any more. Delete unnecessary folders.	–
Too many items are protected	The maximum number of files that can be protected has been reached so cannot protect any more. Release protection for other files and try again.	–
Unable to connect to server.	Connection to the server failed for some reason. Try again	–
Service is not provided	The i-mode service is not subscribed to, so the service cannot be used. Please subscribe to the service.	–
Connection failed	Cannot send since you are in an area where SMS service is not provided.	–
Not supported image size	You cannot insert "Frame" due to the size "1280X1024", "640X480" and "Phonebook".	–
This motion is not complete	Cannot save the data since the data was not fully acquired.	–
This data can no longer be replayed Delete?	An i-motion movie with playable frequency reached is selected. It has already been played back for the specified number of times, so cannot be played back. Select "Yes" to delete.	–

Message	Description	Reference
Replay period has expired Delete?	An i-motion movie with expired replay period is selected. Select "Yes" to delete.	–
Replay period has not yet started	You are selecting an i-motion movie whose playable date has not yet come. Check the playable date.	–
Cannot obtain in error to play back	There is an error in the playback control in i-motion, so cannot be acquired.	–
Unable to obtain data due to replay restriction data error	There is an error in the playback restriction data for i-motion, so cannot be acquired.	–
Can't play	An error occurred, so cannot be played back.	–
Could not play	An error occurred, so could not be played back.	–
Size of this page is not supported	The maximum size of data exceeded, so could not be downloaded successfully.	–
Size of this page is not supported		
Unable to download. Data exceeds maximum size. (452)	The size of data receiving exceeded the maximum size, so could not be received.	–
URL address changed. (301)	The site has been moved, so the URL changed, If this is registered in the bookmark or Home, reregister it.	–
Connection failed (403)	Could not connect to the site for some reasons. Try again. A 3-digit number is displayed in (403).	–
File with copyright is deleted	A file prohibited to be output from the FOMA phone is attached to the i-mode mail you are sending.	–
Could not delete	Failed to delete because an error occurred.	–
Page is not found. (404)	The site could not be found. The site may not exist.	–



Message	Description	Reference
No content is available. (204)	There is no data for display at the connected site.	–
No requested software	There is no i-appli to start from the site or mail.	–
No requested software. End?	There is no i-appli to start from the site or mail.	–
Run selected software?	The URL to activate i-appli is activated. If you activate it, select “Yes”.	–
Requested software unavailable	Could not start an i-appli from the site or mail.	–
Unable to retrieve the requested URL (504)	Could not connect to the specified site. Please try again.	–
No Requested File (492)	The selected file does not exist in the FOMA phone.	–
cannot register anymore	All software programs that can be auto started have already been set up, so you cannot set any more.	–
Please wait	The line facility has trouble or the line is very busy. Wait a while and try again.	–
Low battery	The battery is too short to activate the function. After charging it, try again.	P39
Cannot receive message	Failed to obtain mail.	–
No messages	The received mail has not been saved.	–
No Certificates	SSL certificate is not saved.	–
Inbox message is full	Received mail is saved up to the maximum, and no more can be saved. Delete unnecessary received mail.	P131

Message	Description	Reference
Schedule is full	The schedule is set up to maximum, and no more can be set. Delete unnecessary schedule.	P184, 185
Streaming play not supported	You cannot play the file because i-motion of streaming type is not supported.	–
Invalid data. Connection cannot be established (400)	Could not access i-mode for some reasons. A 3-digit number is displayed in (XXX).	–
No response. Retry?	Cannot find another device for Infrared ray transmission. Place the FOMA phone correctly towards the Infrared port of another device. Select "Yes" to retry the transmission.	P174
Connection interrupted	The line is busy or a transmission error occurred, so connection was suspended. Wait a while and try again.	–
Connection failed	An error occurred during a download. Select "Retry" to reconnect.	–
	Radio waves are weak, so cannot connect. Move to a place where radio waves are strong enough and try again.	
Connection failed	Could not connect because of network trouble. Wait a while and try again.	–
Connection failed (562)		
Time out	Could not connect within the time set at "Connection Timeout". Change the setting or try the operation again.	P119
Network unavailable	You are either out of the service area or where radio waves are not received; so you cannot set the network service because the network is not connected. Move to a place where radio waves can be reached.	–
Sent message is full	Sent mail is saved up to the maximum, and no more can be saved. Delete unnecessary saved mail.	P136

Message	Description	Reference
Sending error	A sending error occurred.	–
Address is not valid (451)	Could not send the message correctly. Check the address and send again.	–
Transmission failed	The mail cannot be sent correctly.	–
Transmission failed (552)	A 3 digit number i displayed in (552).	–
Server is full (551)	The recipient's mail is full.	–
No messages	Sent mail has not been saved.	–
Software updated	The S/W is not updated so you cannot activate the function.	–
Application(s) exist. Folder can't be deleted.	Software is saved in the folder so cannot be deleted. Delete the software and try again.	P150
The software contains an error.	There is an error in the software, so download and version upgrade cannot be performed.	–
This software contains an error. Unable to download.	There is an error in the software, so download and version upgrade cannot be performed.	–
Memory full. Overwrite existing software?	Memory for storing software is short, so no more can be saved. Delete unnecessary software.	P150
This software is not supported by this phone.	The software to download or to update the version is not compatible with a FOMA phone.	–
Installation cancelled	An error occurred, so downloading was suspended.	–
Already downloaded.	The same version of software is already downloading.	–
i-mode mail service is busy. Please try again later(553)	The line is very busy. Wait a while, try again.	–



Message	Description	Reference
Invalid speed dial	No phonebook entry with a memory number corresponding to the number entered on the Phonebook Entry display has been registered.	P58
Security code is wrong	The Terminal Security Code is wrong. Enter the correct Terminal Security Code.	P96
Not allowed	Could not make a phone call since the connection to the network failed. Try making the call again.	–
Call rejected	Rejected a call when incoming call from the other party not registered in phonebook. To receive a call, set “Memory reject call” to “Off”.	P82
	Rejected a call from the other party registered “Reject on list”.	P81
	Rejected a call when “Reject all calls” sets to “Disconnect call”.	P81
Interrupted	The i-mode inquiry was suspended for some reason. Try the operation again.	–
Connection interrupted. Retry?	An error occurred during Infrared ray transmission, so transmission has been suspended. Select "Yes" to retry the connection.	–
Interrupted	An error occurred during Infrared ray transmission, so Infrared reception has been suspended.	–
This data cannot be sent	The file is not sent except of FOMA phone, so you cannot send a mail with attaching the file.	–
Begin data exchange?	The message to activate infrared function is displayed. If you select “Yes”, you can activate this function.	P175
Battery low	The remaining battery is low. Perform the operation after the charging.	P39

Message	Description	Reference
Data full	Data are stored to the maximum, so cannot save any more. Delete unnecessary data.	P131, 150, 156, 158, 162
Invalid data	An invalid data has been downloaded.	–
Receiving canceled	Could not acquire because of invalid data.	–
Low battery Exit camera-mode	Because the battery is short, the camera is ended. After charging it, try again.	P39
Low battery Cannot start camera-mode	The remaining battery level is getting low. Perform the operation after the battery is charged.	P39
Attached file size is over.	The file size of the message you attempt to send exceeds the maximum size.	P140
Cannot attach more than file	No attachable files are saved.	–
Delete attached file	The file was deleted because there was an attachment with UIM restrictions.	–
Delete end the phone number is too long	The number of digits of the phone number entered in the address of SMS message by looking up the phonebook exceeds the maximum number of characters that can be entered.	–
Failed to copy the phone number	The copy of the phone number failed because there was an error in the data of the phone number while it was copied to the phonebook.	–
Registration num is over Can't copy	The phone book memory in the UIM is full, so the phone book cannot be copied. Perform the operation after deleting unnecessary phonebook.	P62
Memory is full	Since the memory of the selected storage place is full, the phone book cannot be stored. Perform the operation after deleting unnecessary phonebook entries.	P62

Message	Description	Reference
Registration is in progress (554)	Cannot operate because the user is being registered. Wait a while and try again.	–
Not registered	An error occurred so the data cannot be registered.	–
Cancel and discard work in progress?	You are about to terminate without saving the content you have edited. Select "Yes" if you are terminating without saving the content.	–
Enter name.	The name of the phonebook is not entered. Save after a name is entered.	P58
Too much data was entered	Too many characters have been entered in the text box or URL, so cannot be sent. Reduce the number of characters to send.	–
Input error (205)	The data (such as text) entered and transmitted from a site are wrong. Check the entered contents and try again.	–
Authentication type is not supported(401)	Cannot connect because the authentication type is not supported.	–
Invalid	An error occurred so you could not register it.	–
Authentication canceled (401)	This will be displayed when "Cancel" is selected from the authentication screen. A 3-digit number is displayed in (401).	–
Enter correct Network Security Code	The Network Security Code is wrong. Enter the correct Network Security Code	P96
No network found	You cannot set the network service because the network is not connected. Please wait a while and try the operation again.	–
No response from network. Activate automatically?	Cannot search for the network automatically. To search manually, select "Yes".	P87
Password is not correct.	The password entered is wrong. Enter the correct password.	–
Password is not correct. (401)		



Message	Description	Reference
Select ON for caller ID notification	Cannot notify the phone number. After setting on in caller ID notification, try again.	P194
File error	Because the file has an error, cannot be saved.	–
Invalid File	Cannot operate since the file is corrupted.	–
Invalid File (493)		
Invalid data	Because the file is invalid, cannot be displayed/played/saved.	–
File size is too big	The file is too big to attach to mail.	–
Image with digital right is included	Since the file protected with copyright protection technology is included in the folder, animation cannot be created. Select a file with no restrictions.	–
File is deleted	This is displayed when incoming mail with a file attached is forwarded. Perform attachment operation in order to attach the file.	P140
File is deleted	Cannot enter the file name. After entering file name, try again.	P157, 158, 162
Can't attach file	The file cannot be attached since it will exceed the size of mail that can be sent.	–
Cannot read file Unknown file format	This file format is not supported in this FOMA phone.	–
Can't create folder. Folder already exists.	The folder cannot be created since there is already a folder with the same name. Change the name.	–
Can't rename folder. Folder already exists.	The folder cannot be created since there is already a folder with the same name. Change the name.	–

Message	Description	Reference
Cannot delete folder	Mail is saved in the folder, so the folder cannot be deleted. Delete the folder after deleting all the mail in the folder.	P131
Incorrect folder name	A character invalid for a folder name is included.	–
Cannot create folder	The maximum number of folders is created, so cannot create any more. Delete unnecessary folders and try the operation again.	P131,149,156
Can't create folder any more	An error occurred so the folder was not created.	–
Bookmark is full. Select item to delete	The maximum number of data items is already bookmarked, so cannot bookmark any more. Delete unnecessary bookmarks by selecting "Yes".	P111
Cannot add bookmark	An error occurred, so could not bookmark.	–
No bookmarks	Bookmark not registered. Register bookmark beforehand.	P120
Unknown browser error	An unknown error occurred.	–
Invalid content	Invalid page, so cannot be displayed.	–
Total size is too big	Total page size exceeded the maximum size, so it cannot receive successfully.	–
Your data will be lost. Quit?	You are about to terminate without saving the edited contents such as phonebook entries by pressing  or  . Select "Yes" to terminate without saving the contents.	–
Cancel editing?	You are about to terminate without saving the edited contents. If you don't want to save it, select "Yes". To continue editing, select "No".	–
Home page not set.	Home is not set. Perform the operation after setting Home.	P118

Message	Description	Reference
Home page disable	The URL registered in Home is not entered correctly. Perform the operation after entering it correctly.	P118
Save failed.	An error occurred, so could not be saved.	–
No messages	No unsent mail messages saved.	–
No save area	Cannot save because there is no room available in the storage area. Delete unnecessary files.	–
Message too long Cannot enter	Cannot enter because the text size exceeded 70 full-pitch characters or 160 half-pitch characters when an SMS message was transmitted.	–
Message too long	The mail size exceeds 5,000 full-pitch characters if a signature is pasted, so cannot be pasted. Make the text of the message short or delete attached data to reduce the size down to 5,000 full-pitch characters or less.	P145
Signature space is not available	The mail size exceeds 5,000 full-pitch characters if a signature is pasted, so cannot be pasted. Make the text of the message short or delete attached data to reduce the size down to 5,000 full-pitch characters or less.	P145
Message too long End of message will be deleted	When received mail is replied to with quote or forwarded, the message will exceed 5,000 full-pitch characters, so the last part of the message will be truncated.	–
Cannot edit message	The text cannot be edited because data equivalent to the size of 5,000 full-pitch characters is attached to the mail.	–
Manner mode Play with sound?	The FOMA phone is set to manner mode. When you play the streaming file with a voice, select "Yes".	–
Play with sound?	The FOMA phone is set to manner mode. Select "Yes" to play sound of moving images or a melody.	–
Unsent message is full	Cannot be saved the mail because the unsent message is full. Delete the unnecessary unsent mail.	P138

Message	Description	Reference
There's empty input. Input required	There are items not entered. Perform the operation after entering these items.	–
Empty message cannot be saved	Cannot be saved because nothing is entered into address/subject/text and no file is attached to the message.	P139
Invalid data. Data size is not supported.	There is an error in the data received, cannot be displayed. The received data will be destroyed. A 3-digit number is displayed in (XXX).	–
Invalid data. Data size is not supported. (413)		
Nuisance call barring service denied	The Nuisance call barring service is not subscribed to so cannot be set. In order to use this feature, please subscribe to the Nuisance call barring service.	P194
Failed to copy mail address	Failed to copy the mail address because an error occurred in the data of the mail address during the copy operation to the phonebook.	–
Please make sure "Receive option" in "Mail Settings" is turned ON	The Receive Option setting is set to "OFF". Change the setting to "ON" and try the operation again.	P144
Message data is broken	An error occurred so the mail cannot be displayed or created.	–
10 files limit for message	The maximum number of files attachable to mail is exceeded, so no more file can be attached. The maximum of number of files that can be attached to mail is 10.	P140
Folder is full	Inbox is full, so no new message can be received. Delete unnecessary received mail.	P131
Message data is broken	The message data is corrupted and cannot be displayed.	–
No messages	There is no MessageF saved.	–
No messages	There is no MessageR saved.	–

Message	Description	Reference
Memory full	Because the memory of the FOMA phone is full, the data received by Infrared ray transmission could not be saved. Perform the operation after deleting unnecessary data.	P62,111, 156, 158, 162
	Because the memory is full, the shot still images cannot be saved.	–
	Because the memory is full, the edited still images cannot be saved.	–
Not enough memory Can't save	Because there is not enough memory, each function cannot be started.	–
	Because there is not enough memory, no still images can be taken.	
Not enough memory	Because the number of characters transmittable is exceeded, the end of text will be truncated. Select "Yes" to send.	–
Exceeds limit. Unable to paste all letters. Paste?	Because the maximum number of characters is exceeded, part of the text could not be pasted. Select "Yes" to paste the portion that can be pasted.	–
Exceeds limit. Unable to paste.	Because the maximum number of characters is exceeded, the text cannot be pasted. Perform the operation after deleting unnecessary text by pressing (CLR).	–
Not enough memory Please delete some files	The memory is full. After deleting the unnecessary files, try again.	P156, 158, 162

## Introduction of Options and Related Equipment

Combining various options with the FOMA phone, you can realize more versatile use from personal purpose to business purpose. Some products may not be dealt in depending on the area. Consult a handling counter for details. Refer to the user's manuals of respective options and related equipment for how to operate them.

- FOMA AC Adapter 01    • FOMA DC Adapter 01
- Rear Cover L01    • Battery Pack L01
- Flat-plug Stereo Earphone Set P01
- FOMA USB Cable
- Stereo Earphone Set P001 ※<sup>1</sup>
- Flat-plug Earphone/Microphone Set with Switch P01/P02
- Earphone/Microphone Set with Switch P001/P002 ※<sup>1</sup>
- FOMA AC Adapter for both overseas and domestic usage 01 ※<sup>2</sup>

※<sup>1</sup> : Earphone Jack Adapter P001 is required.

※<sup>2</sup> : When using overseas, the conversion plug adapter suited to the destination is required.

## Warranty and Maintenance Services

### Warranty

- Make sure that you have received a warranty card provided at purchase. After checking the contents of the warranty card as well as “Shop name and date of purchase”, keep the warranty card in a safe place. If you notice that necessary items of the warranty card are not filled in, immediately contact the shop from where you purchased the FOMA phone. The term of warranty is one year from the date of purchase.
- All or part of this product including the accessories may be modified for improvement without notice.
- Data stored in the FOMA phone such as Phonebook entries may be modified or lost owing to malfunction, repairs, or other mishandling of the FOMA phone. You are advised to take a note of the Phonebook entries for just in case. If you have a personal computer Windows XP, Windows 2000, Windows Me, Windows 98SE, you can transfer and save the data stored in the Phonebook to your computer using the dedicated data link software and a FOMA USB Cable (Option). Also, when the FOMA phone is under repairs, the files you downloaded using i-mode and i-appli cannot be transferred to the new FOMA phone, except for some files, based on the Copyright Law.



## Maintenance Services

### **When there is a problem with the FOMA phone**

Before asking repairs, check “Troubleshooting” in this manual. If the problem remains unsolved, contact “Repairs” listed on the back page of this manual for consultation.

### **When repairs are necessitated as a result of consultation**

Bring your FOMA phone to the repair counter specified by DoCoMo. Note that your phone is accepted for repair during the repair counter’s business hours. Also, make sure that you will bring the warranty card with you to the counter.

- In warranty period
  - Your FOMA phone is repaired charge free in accordance with the terms of warranty.
  - Make sure that you bring the warranty card to the counter for the repair. If you do not show the warranty card, or when troubles or damages are regarded to be caused by your mishandling, the repair cost is charged even within the warranty period.
  - The cost for troubles caused by the use of devices and consumables other than those specified by DoCoMo is charged even within the warranty period.

- Repairs may not be performed in the following cases: Repair may not be feasible when wet-detecting sticker is colored; when corrosion due to soaking, dew condensation, or perspiration was found by the test; when the internal parts are damaged or deformed. Even if repair is feasible, repair due to the reasons above is not covered by the warranty, so the repair cost is charged.
- After the warranty period
  - We will repair your phone on request (charges will apply).
- Spare parts availability period
  - The minimum storage period of the performance parts (parts required for maintaining performance) for repairing the FOMA phone is four years after production comes to an end. The FOMA phone can be repaired during this period. Even after the storage period, the FOMA phone may be repaired depending on the troubled portions. Contact “Repairs” listed on the back of this manual.

### **Other points to note**

- Make sure not to modify the FOMA phone or its accessories.
  - Catching fire, giving injury, or causing damages may result.
  - To avoid radio wave interference or Network troubles, a technical standard for the FOMA phone and the UIM is specified by the law; you cannot use the FOMA phone and the UIM that do not satisfy the technical standard.

- If you make modifications (parts replacement, modification, paints), we can repair the FOMA phone only when you restore the modified portions to their previous status before the modifications (to the DoCoMo genuine product). We may refuse repairing depending on the modifications.
- Repairs of troubles or damages resulting from the modifications are charged even within the warranty period.
- Do not peel the name plate off from the FOMA phone. The name plate is a certificate for ensuring the technical standard. If the name plate is intentionally removed or replaced, the contents described in the name plate cannot be checked, as we cannot verify the conformity of the product to the technical standard. Note that we may refuse repair for some malfunctions in this case.
- Information such as settings of each function and total call time might be cleared (reset) depending on the trouble/repair or other handlings of the FOMA phone. In that case, make settings again.
- Parts generating magnetic field are used in the following places. Note that if you put a card such as cash card liable to be influenced by magnetic field close to them; the card might be adversely affected. <Specifications being confirmed>Places used: Earpiece (speaker)

- If the FOMA phone gets wet or humid, immediately turn the power off and remove the battery pack; then visit the repair counter. The phone may not be repaired depending on its condition.

### **Memory dial (Phonebook function) and downloaded information**

- It is recommended to take a note of the information you have stored in the FOMA phone. We are not responsible for any change or loss of the information.
- When replacing or repairing your mobile phone, the data you created, obtained from external devices, or downloaded may be changed or lost. We at DoCoMo do not take any responsibility for the loss or change incurred to the data. We may replace your mobile phone with a new one instead of repairing, for our convenience sake, but we cannot export data to your new mobile phone except for some data. From this FOMA phone, we can move the images and ring melodies downloaded from the authorized i-mode sites to your new mobile phone at repairs. (There are some contents that cannot be moved. Also, we may not be able to move data depending on the degree of trouble.)

### Specific Absorption Rate of the Mobile Phone

#### Specific Absorption Rate (SAR) Certification Information

This FOMA L601i model phone conforms to the technical standard defined by the country for exposure to radio waves on human body. The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)<sup>※</sup> averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by International Commission on Non-ionizing Radiation Protection (ICNIRP).

All phone models should be confirmed to comply with the regulation, before they are available for sale to the public.

The highest SAR value for this FOMA L601i phone is 0.426W/kg. It was taken by the Telecom Engineering Center (TELEC), a Registered Certification Agency on the Radio Law. The test for SAR was conducted in accordance with the procedure defined by the country, using standard operating positions with the phone

transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum the maximum value. For further information about SAR, please see the following websites:

---

Ministry of Internal Affairs and Communications  
<http://www.tele.soumu.go.jp/j/ele/index.htm>

Association of Radio Industries and Businesses  
<http://www.arib-emf.org/index.html>

DoCoMo  
<http://www.nttdocomo.co.jp/product/>

LG Electronics Japan  
<http://www.jp.lge.com/index.do>

---

※: The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

### Export/Re-export regulations of Japan and USA

The export and re-export regulations of Japan and United States apply to this product and its accessories. Exports (and re-exports) contrary to those laws and regulations, including but not limited to exports and re-exports to sanctioned countries and to restricted end uses or end users is prohibited. A user must apply for approvals or

permissions for export (or re-export) to the restricted countries at the user's expense and responsibility in accordance with such regulations. For further information, contact Japanese Ministry of Economy, Trade, and Industry or the U.S. Department of Commerce.

### Radio Frequency (RF) Signals

THIS MODEL PHONE MEETS THE U.S. GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone contains a radio transmitter and receiver. Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg.\* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at

multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.708W/kg, and when worn on the body, is 0.249W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at <http://www.fcc.gov/oet/fccid> after search on FCC ID BEJL601i.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

※ In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

## Declaration of Conformity

The product “FOMA L601i” is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2.

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR※ limits※※ for exposure to radio-frequency (RF) energy, which SAR※ value, when tested for compliance against the standard was 1.0W/kg. While there may be differences between the SAR※ levels of various phones and at various positions, they all meet※※※ the EU requirements for RF exposure.

- 
- ※ The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.
  - ※※ The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit

incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

- ※※※ Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

## Important Safety Information

### **AIRCRAFT**

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers a 'flight mode' or similar feature consult airline staff as to whether it can be used on board.

### **DRIVING**

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

**HOSPITALS**

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

**PETROL STATIONS**

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

**INTERFERENCE**

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

**Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

**Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

**For other Medical Devices:**

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.





# Index/Quick Manual

Index ..... 306  
Quick Manual..... 316

## Index

- Refer to “i-mode User’s Manual” for the settings in i-mode center such as mail address setting, mail received / rejected setting, mail size setting, deactivating/resuming mail function.
- As for Data Link, see “Manual for Data communication” (Manual for Data communication.pdf).

### A

Activate arrival act .....	195
Additional guidance .....	196
Delete .....	197
Set .....	197
Additional service .....	196
Delete .....	196
Edit .....	196
Register .....	196
Use .....	196
Alarm .....	172
Edit .....	173
Mark/Unmark .....	173
ON/OFF .....	173
Answer mode setting	
Open flip .....	82
Press any key .....	82
Arrival act status request .....	195
Arrival call act .....	195
Answer .....	195
Call forwarding .....	195
Call rejection .....	195
Quality alarm .....	83

Voice mail .....	190
AT command .....	203

### B

Backlight .....	75
Keypad .....	75
Main display .....	75
Sub display .....	75
Battery level .....	32
Battery pack .....	37
Attaching .....	38
Charging .....	39
Removing .....	38
Bookmark .....	111
Compose message .....	111
Copy URL .....	111
Delete .....	111
URL .....	111
Edit bookmark .....	111
Ir exchange .....	111

### C

Calculator .....	175
Call barring .....	198
Activating .....	198
Deactivating .....	198
Status request .....	198
Call duration .....	80
Reset .....	80
Call forwarding service .....	193
Activating .....	193
Deactivating .....	193
Register forward number .....	193
Setting at forwarding party	
busy .....	193
Status request .....	193
Call history .....	78
Add to phonebook .....	78
All calls .....	79
Delete .....	79
Dialed call records .....	79
Display .....	79
Received calls .....	80
Redial .....	79

Send mail.....	79	Taking still images.....	101	Switching pictograph / symbol / emoticon mode .....	207
Call waiting.....	192	Camera settings		Cancel .....	210
Activate.....	192	Brightness .....	103, 104	Character font	
Deactivate.....	192	Auto timer.....	104	Dial character.....	75
Status request .....	192	Effect .....	104	Character input setting	
Call/Answer.....	78	Light .....	103	Edit character .....	208
Caller ID notification service.....	194	Frame shot .....	104	Edit commn phrase.....	210
Setting .....	194	Multishot.....	104	Full/Half .....	206
Status request .....	194	Night mode.....	104	Prediction ON/OFF .....	206, 209
Caller ID request service.....	194	Quality .....	103	Capital/Small .....	208
Activating.....	194	Save to .....	104	Character size	
Deactivating.....	194	Shutter sound.....	104	i-mode.....	118
Status request .....	195	Size .....	103	Mail.....	145
Calls		Size restriction .....	104	Charging .....	39
Call forwarding.....	49	White balance .....	104	Check new message.....	144
Call rejection .....	49	Zoom.....	104	Check new SMS .....	144
Caller ID notification .....	46	Character entry .....	206	Close setting .....	84
Held call.....	47	Changing line.....	209	Color scheme.....	76
End call.....	47	Copy.....	209	Common phrases .....	208
Hold.....	47	Cut .....	209	Delete 1 item .....	210
Making calls.....	46	Edit common phrase.....	210	Edit.....	210
Making calls from phonebook ..	47	Entering characters.....	207	Reset 1 item .....	210
Making international calls .....	48	Kuten code .....	209	Composing mail .....	139
Mute .....	47	Paste .....	209	Add signature .....	140
New call.....	47	Quoting own number .....	209	Address menu .....	140
Prefix dial .....	47	Quoting phonebook.....	209	Attached file menu .....	140
Receiving calls .....	48, 49	Space.....	209	Delete body .....	140
Save .....	47	Switching between full-/ half-pitch .....	206	Delete mail.....	140
Voice mail .....	49	Switching input mode .....	206	Save .....	140
Camera.....	99				

- Send.....139
- Copying file
  - Image file .....156
  - Moving image/i-motion file .....161
- Creating/Deleting folder
  - Images.....156
  - Melody.....164
  - Moving images/i-motion.....161
- Custom menu .....173
  - Add new .....174
  - Delete .....174
  - Edit.....174
  - Open .....174

## D

- Data box .....154
- Data Link.....274
- Data transfer (OBEX) .....200
- Data transfer folder.....154
- Data transmission.....200
- Date & time .....86
  - Daylight saving.....87
  - Set date.....87
  - Set time .....86
- Date counter .....186
  - Add new .....187
  - Delete .....188
  - Display/Display screen .....187
  - Edit.....188

- Mark/Unmark.....188
- Open .....188
- Date search.....186
- Deactivate arrival act .....195
- Deleting file
  - Image file .....156
  - Melody file .....164
  - Moving image/i-motion file .....161
- Dialed call records.....79
- Display .....67
  - Backlight.....75
  - Color scheme .....76
  - Dial font .....75
  - Main display.....73
  - Menu style .....75
  - Sub display .....74
- Displaying file property
  - Image file .....105
  - Melody file .....165
  - Moving image/i-motion file
    - .....134, 163
- Displaying folder property
  - Images.....150
  - Melody.....150
  - Moving images/i-motion.....150
- Displaying images .....155
  - Full.....158
  - Slide show .....157, 158
  - Zoom.....158
- Displaying sites .....120

## E

- Edit word .....208
- Editing moving images
  - Snap.....163
- Editing still images.....159
  - Clipping .....160
  - Delete .....162
  - Effect .....160
  - Frame .....159
  - Go to list .....158
  - Make animated GIF.....157
  - Mirror.....160
  - Rename .....158
  - Resizing .....159
  - Rotate.....159
  - Save .....159
  - Send via mail .....158
  - Set as wallpaper .....158
  - Text .....159
- Effect tone volume .....68
  - Feedback tone.....68
  - Flip tone.....68
  - Key tone .....68
  - Power ON/OFF .....68
- Emoticon
  - List .....254
- English guidance .....197
  - Setting .....197
  - Status request .....198
- Error messages .....277

**H**

How to use the soft keys.....34

**I**

i-appli.....147  
 Certificate .....150  
 Delete .....150  
 Download .....148  
 Sort .....150  
 Startig i-appli .....149  
 Upgrade .....149  
 i-appli setting  
   AutoStart setting .....150  
   System info .....150  
   i-appli to .....150  
   Network setting .....150  
 i-melody .....124  
 iMenu .....125  
 i-mode .....109  
   Bookmark.....111  
   Compose message.....114  
   Displaying internet web pages  
     .....113  
   Displaying sites .....120  
   Last URL .....113  
   My menu .....125  
   Reload .....121  
   Retry .....113  
   Screen memo .....112

i-mode mail .....139  
 i-mode password .....125, 126  
 i-mode setting .....118  
   Character size.....118  
   Check new message .....119  
   Check settings .....119  
   Connection timeout setting ....119  
   i-motion auto play .....119  
   Message list display .....118  
   Pasted data .....145  
   Reset data .....119  
   Reset settings .....119  
   Scroll .....118  
   Setting whether to display  
     images .....118  
   Setting whether to validate or  
     invalidate .....118  
 i-motion  
   Download .....134  
   Information display .....125  
   Save .....125  
 i-mode mail .....127  
 Inbox.....128  
 Infrared data port .....174  
 Infrared exchange .....174  
   Receiving .....175  
   Sending .....175  
 International dial  
   Auto assist setting .....83  
   IDD prefix setting .....84

Introduction of options and  
 related equipment .....297

**K**

Kuten code  
   Entering using kuten code .....209  
 Kuten code list .....258

**L**

List of character assignment of  
 dial buttons .....212  
 List of terms .....252

**M**

Mail .....127  
   Add to phonebook.....132  
   Auto-sort .....131  
   Copy.....132, 137  
   Delete  
     .....131, 132, 136, 138  
   Display .....140  
   Downloading i-motion .....134  
   Filter.....131, 136, 138  
   Forward .....132  
   Move .....131, 132  
   Protect ON/OFF  
     .....131, 132, 136  
   Edit .....136, 145

Reply .....	131, 132	Send via mail .....	165	Minute reminder .....	83
Save file .....	132	Setting ringtone for incoming calls.....	69	Movie mode .....	106
Save pasted data.....	116	Memo .....	185	Shooting moving images.....	106
Send.....	138, 139, 142	Add new .....	186	Movie mode setting	
Sort .....	136, 138	Delete .....	186	Brightness .....	107
Mail ring duration.....	72	Display.....	185	Effect .....	108
Mail setting.....	144	Edit.....	186	Light .....	107
Character size.....	145	Mark/Unmark.....	186	Night mode.....	107
Check new message .....	144	Open .....	186	Quality .....	107
Check settings.....	146	Memory reject call .....	82	Recording time .....	108
Edit quotation .....	145	Memory usage status		Save to .....	108
Edit signature.....	145	Memory status.....	92	Type .....	108
Mail list display.....	145	Menu list .....	224	White balance .....	107
Melody auto play .....	145	Setting menu style .....	75	Zoom.....	107
Pasted data .....	145	Menu operations .....	34	Multiaccess .....	268
Receive attach file.....	144	MessageR/F.....	114	Multimedia (Camera) .....	99
Reset data .....	146	Check new message .....	119	Multitask .....	269
Reset settings.....	146	Delete .....	116	My menu (i-mode) .....	125
Scroll .....	145	Display.....	115		
SMS report request .....	144	Protect On/OFF .....	113, 116	<b>N</b>	
SMS validity term.....	144	Save file .....	116	Network (for overseas use) .....	87
Maintenance services.....	298	miniSD memory card.....	166	Network mode.....	88
Manner settings .....	70	Data box.....	169	Network Name.....	89
Manner mode .....	71	Displaying file .....	169	Network selection .....	88
Original manner mode.....	71	Folder configuration .....	168	Preferred lists.....	88
Melody .....	164	Formatting miniSD		Network password .....	96
Area repeat.....	166	memory card.....	180	Network service .....	189
Mute .....	165	Inserting/removing .....	167	Nuisance call barring service .....	194
Play .....	165	Memory information .....	180	Delete all entries.....	194
Player settings .....	166				

Delete most recent entry .....194  
 Register nuisance caller .....194

**O**

Overseas use .....213  
 Before departure.....214  
 International call ID number for  
 universal number (Table 1)..220  
 International roaming .....214  
 International SMS.....141  
 Major country codes .....219  
 Major international access codes  
 (Table 2) .....220  
 Making calls.....46  
 Network settings.....214  
 Receiving calls .....48  
 Services available.....215  
 Setting Mobile Phone Carrier ..246  
 Troubleshooting.....217  
 WORLD WING .....221  
 Own number .....65

**P**

Packet transmission .....200  
 Password.....96  
 i-mode password.....96  
 Network password.....96  
 PIN unlock code .....97  
 PIN1 code .....97

PIN2 code .....97  
 Terminal security code .....96  
 Phonebook .....57  
 Add new .....58  
 Add to phonebook.....58  
 Compose mail .....61  
 Connect to URL.....61  
 Copy.....62  
 Delete .....62  
 Edit .....63  
 No. of phonebook.....63  
 Own number.....66  
 Search phonebook .....60  
 Send Ir data.....66  
 Phonebook settings  
 Create domain list .....64  
 Display data .....62, 63  
 Display image .....64  
 Display switch.....62  
 Group settings .....65  
 Phonebook settings .....63  
 Search by .....60  
 Search category menu.....61  
 Pictograph  
 Method for entering .....207  
 Pictograph/emoticon list.....254  
 PIN unlock code.....97  
 PIN1 code .....91, 97  
 PIN2 code .....91, 97  
 Playing back moving images .....161

Expand .....163  
 Mute .....164  
 Pause .....163  
 Player settings .....164  
 Send via mail .....163  
 Preferred lists .....88  
 Add new .....88  
 Delete .....88  
 Prefix dial .....83  
 Pre-installed .....224  
 Protect on/off  
 Mail.....131, 132, 136  
 MessageR/F .....116  
 Screen memo .....112  
 Public mode .....49

**R**

Receive option .....143  
 Received calls .....78  
 Received mail.....131  
 Reconnect alarm .....82  
 Redial.....80  
 Reject/accept call.....81  
 Accept call.....81  
 Reject all calls .....81  
 Reject on list .....81  
 Renaming file  
 Image file .....156  
 Moving image/i-motion file .....161



- Renaming folder
  - Inbox .....149
- Resetting the settings .....119
- Ring volume .....68
  - Mail/Message ringtone .....68
  - MessageF ringtone .....68
  - MessageR ringtone .....68
  - SMS ringtone .....68
  - Video-phone ringtone .....68
  - Voice call ringtone .....68
- Ringling time setting .....191

## S

- Safety settings .....95
- Stationery .....181
  - Add new .....182
  - Delete .....184
  - Display .....184
  - Edit .....184
  - Go to date .....184
  - Mark/Unmark .....185
  - Open .....185
  - Set holiday/deleting set
    - holiday .....184
- Screen memo
  - Delete .....112, 113
  - Display .....112
  - Display URL .....112, 113
  - Edit title .....112, 113

- List .....112
- Protect On/OFF .....112, 113
- Save .....120
- Security .....90
  - All lock .....90
  - Changing PIN1 code .....91
  - Changing PIN2 code .....91
  - Changing your terminal
    - security code .....91
  - PIN code request .....90
- Selecting a effect tone .....69
  - Feedback tone .....69
  - Flip tone .....69
  - Key tone .....69
  - Power ON/OFF .....69
- Selecting a ring tone .....68
  - Mail ringtone .....69
  - MessageF ringtone .....69
  - MessageR ringtone .....69
  - Ringtone .....69
  - SMS ringtone .....69
  - Video-phone ringtone .....69
- Sent mail .....134
- Service available with FOMA
  - phones .....190
- Service dial .....198
  - General information .....198
  - Malfunction information .....198
- Set arrival act .....195

- Setting
  - Call feature settings .....82
  - Call/answer settings .....78
  - Changing hosts from i-mode .....89
  - Date & time settings .....86
  - Language settings .....91
  - Network settings
    - (for overseas use) .....87
  - Other settings .....92
  - Security settings .....90
  - Video phone settings .....84
- Setting for video-phone calls
  - Brightness .....107
  - Camera settings .....107
  - Display light .....107
  - Display setting .....85
  - Night mode .....106
  - On-hold image .....86
  - Response hold image .....85
  - Send camera image .....85
  - Sending image quality .....85
  - Sub screen .....85
  - Substitutive images .....85
  - Video phone setting .....84
  - Voice call auto dial setting .....84
  - Zoom .....53
- Setting the call feature .....82
- Setting the display for incoming calls
  - Main display .....73
  - Sub display .....73

Shooting  
 Moving images .....106  
 Still images .....105  
 Side button .....35  
 SMS  
 Phonebook menu .....58  
 Auto-sort .....131  
 Compose SMS .....61  
 Delete .....131, 132, 136, 138  
 Delete body .....140  
 Filter.....136, 138  
 Moving from UIM .....130  
 Moving to UIM .....130  
 Protect on/off.....131  
 Reply .....131  
 Save .....132  
 Send.....132  
 SMS report request .....142  
 SMS validity term.....142  
 Sort .....136, 138  
 Sort  
 File list (Image) .....155  
 File list (Melody).....164  
 File list  
 (Moving image/i-motion) ....161  
 Folder list (Image).....155  
 Folder list (Melody) .....164  
 Folder list (Moving/i-motion) ...161  
 Mail list (Received).....129  
 Mail list (Sent).....135

Mail list (Unsent).....137  
 Software list .....149  
 Sound .....68  
 Effect tone volume .....68  
 Mail ring on/off .....72  
 Manner mode .....70  
 Ring volume.....68  
 Ringing time.....72  
 Setting an Effect Tone.....69  
 Setting a ring tone.....68  
 Vibrator.....70  
 Specific absorption rate (SAR) ...300  
 Setting Main Screen .....72  
 Clock font color .....73  
 Clock type .....73  
 Clock 1 .....73  
 Clock 2 .....73  
 Wallpaper .....73  
 Setting Sub Display .....74  
 Clock font color .....74  
 Clock type .....74  
 Wallpaper .....74  
 Stationery.....181  
 Stop watch .....179  
 Symbol  
 Method for entering .....207  
 Symbol/Special characters list...253

**T**  
 Terminal security code .....96  
 Tools .....171  
 Troubleshooting .....275  
 Turning power ON/OFF .....43

**U**  
 UIM .....36  
 Attaching .....37  
 Differences of UIM .....37  
 Password .....37  
 Removing .....36  
 Restriction functions .....37  
 Unit converter.....176  
 Currency.....177  
 Exchange rate.....177  
 Length .....178  
 Surface.....178  
 Temperature .....178  
 Velocity .....178  
 Volume .....178  
 Weight .....178  
 URL  
 History .....114  
 Input .....121

## V

- Vibrator .....70
  - Incoming call.....70
  - Message.....70
- Video-phone call
  - Call forwarding.....49, 50
  - Call rejection .....49, 50
  - Caller ID notification .....43
  - Making calls.....46
  - Making calls from the
    - phonebook.....47
  - Making international calls .....47
  - Prefix dial .....48
  - Receiving calls .....48
  - Save .....46
  - Substitute image.....54
- Voice mail.....192
  - Activating.....191
  - Check message.....191
  - Deactivating.....191
  - Delete voicemail icon .....191
  - Notify missed call.....191
  - Play messages.....191
  - Set message alert ringer .....191
  - Set ringing time.....193

- Set time zone.....179


## W

- World time.....178
  - Choose city.....179


## Quick Manual

The Quick Manual describes the basics of displays, operations, and such like, of the FOMA phone and can be detached from this manual to carry with you. You can fold the Quick Manual as illustrated below, and carry it with you for convenience.

### 1. Detach it from this manual

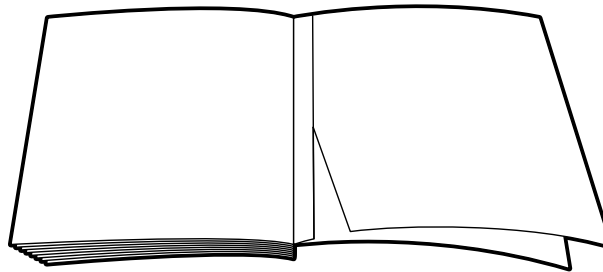

### 2. Fold it in half horizontally

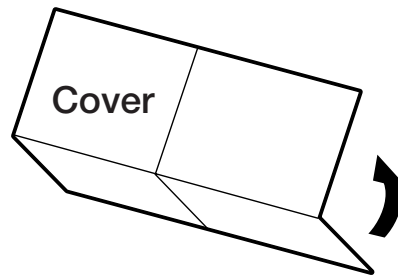

### 3. Fold it in half vertically





If you have any questions about this user's manual, please contact the number below.

### General Inquiries <DoCoMo Information Center>

- From DoCoMo mobile phones and PHSs
  - From ordinary phones
- (No prefix) **151** (In Japanese, toll-free)
 **0120-800-000**
- \* Cannot be called from ordinary phone
 \* Can be called from DoCoMo mobile phones and PHSs.

For any problem, please contact the number below.

### Repairs

- From DoCoMo mobile phones and PHSs
  - From ordinary phones
- (No prefix) **113** (In Japanese, toll-free)
 **0120-800-000**
- \* Cannot be called from ordinary phone
 \* Can be called from DoCoMo mobile phones and PHSs

- Make sure that you dial the correct number.


Cutoff line

- **Selecting a Storage Location**  
Select / (Storage) field ▶ Select Handset/UIM
- **Entering a Name/Reading**  
Select (Name) field ▶ Enter a name ▶   
Select (Reading) field ▶ Enter a reading ▶   
• Automatically inserted if a name is entered.
- **Entering a Phone Number/Mail Address**  
Select (Number) ▶ Enter a phone number ▶   
Select (Mail addr) ▶ Enter a mail address ▶
- **Selecting a Group**  
Select (No group) field ▶ Select a group
- **Setting an Image\***  
Select (Image) field ▶ Select a setup method

## Phonebook

### Adding to Phonebook

1. On the Stand-by display, [Menu] ▶ “Phonebook”  
▶ “Add to phonebook”

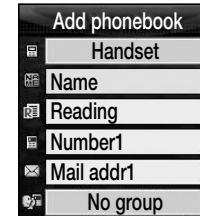

<Add to Phonebook>

2. Select the following setting items

1

- **Setting a Phone Ring Tone/Mail Ring Tone\***  
Select (Ringtone) field ▶ Select a setup method  
Select (Mail ringtone) field ▶ Select a setup method
- **Entering a URL\***  
Select (URL) field ▶ Enter a URL ▶
- **Entering a Home Address/Company Address\***  
Select (Postal code) field ▶ Enter a postal code ▶   
Select (Home addr) field ▶ Enter a home address ▶   
Select (Company name) field ▶ Enter a company name ▶   
Select (Job title) field ▶ Enter a job title ▶   
Select (Company addr) field ▶ Enter a

company address

Select (Memo) filed ▶ Enter a text memo ▶

※: Not displayed if the storage location for the phonebook is set to "UIM".

3. After setting, [Save]

### Storing from Call Records Such as Received Call Records

1. On the Stand-by display, ///

2. Select a call record to store ▶ [Menu] ▶ "Add to phonebook"

3. Set each item ▶ After setting, [Save]

### Searching Phonebook

1. On the Stand-by display, [Menu] ▶ "Phonebook" ▶ "Search phonebook" ▶ Select a search method ▶

4

### Modifying Phonebook

1. On the Stand-by display,

2. Select a phonebook to modify ▶ [Menu] ▶ "Edit"

- In case of changing the phonebook to display (Phone, FOMA card) [Menu] → "Display switch" → "Display data" → "Only Handset"/"Only FOMA card".

3. Modify each item ▶ After modifying [Save]

### Deleting Phonebook

1. On the Stand-by display,


2. [Menu] ▶ "Delete"

- Delete: You can delete the selected phonebook.
- Delete selected: You can select and delete multiple phonebooks.
- Delete all: You can delete all the phonebooks.

5

## Entering Characters

### Character Entry Display

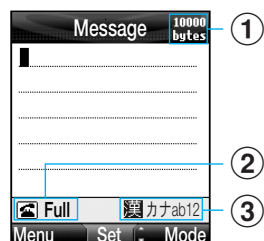

<Character Entry>

- ① Number of characters that can be entered: Displays the number of characters that can be entered in bytes.
- ② Operation guide area: Displays an operation you can perform by


6



③ Entry mode area: Display the entry mode.  
(The cursor is placed on the current mode.)

- To change the input mode, Press several times.
- To change Full/ Half pitch Press
- To switch from pictograph/ symbol/ face mode to text input mode, Press several times.
- To input full/ half pitch or change capital/ small mode, Press after inputting the character.
- To input a punctuation, Press several times.
- To input a character after feeding the line Press /

7

Cutoff line

- **To input a space,**  
Press  [Menu] ► **Special input ► Space**
- **To delete a character**  
**Move the cursor the position to delete a character.**
  - A few cases may be not to operate properly by input mode.






3. Move the cursor to the end position ► 
4. Move the cursor to the display/position to paste to
5.  [Menu] ► “Edit character” ► “Paste”

## Camera Functions

 




### Taking Still Images

1. On the Stand-by display, 
2. After confirming the subject, 
3. 


### Taking Continuous Shot

1. On the Standby display, 
2.  [Menu] ►  (Multishot)
3. Select the number of continuous shots ►  [Close]
4. After confirming the subject, 




### Entering Characters

 - You can use Hiragana mode (漢).
1. **On the Character Entry display, enter characters**
    -  [KanaA1]: Displays Katakana, alphabet and numeral candidates.
    -  [Conv]: Displays conversion candidates
    - : You can finalize the entry without converting it.
  2. **Move the cursor to the prediction candidate area using .**
  3. **Select a character to convert ► **

### Copying/Cutting/Pasting

1. On the Character Entry display,  [Menu] ► “Edit character” ► “Copy”/“Cut”
2. Move the cursor to the start position ► 

### Shooting Moving Images

1. On the Stand-by display,  [Menu] ► “Multimedia” ► “Movie mode”
2. After confirming the subject, 
3. 











## Playing Back Images, Moving Images and Melodies

### Displaying Images

1. On the Stand-by display,  [Menu] ► “Data box” ► “My picture”
2. Select a folder ►  ► Select a file ► 












## Playing Back Moving Images

1. On the Stand-by display,  [Menu] ▶ “Data box” ▶ “i-motion”
2. Select a folder ▶  ▶ Select a file ▶ 
  - Operations you can perform during moving image playback
    - , : Plays back/Pauses
    - : Stops
    - : Plays back the previous file/next file
    -  (press and hold): Fast forwards/rewinds the image while it is pressed
    - , : Adjusts the volume

12





## Playing Back Melodies

1. On the Stand-by display,  [Menu] ▶ “Data box” ▶ “Melody”
2. Select a folder ▶  ▶ Select a file ▶ 
  - Operations you can perform during melody playback
    - , : Playback/Pause
    - : Plays back the previous file / next file
    -  (press and hold): Fast forwards/rewinds the melody while it is pressed
    - , : Adjusts the volume





13

## Making/Receiving Video-phone Calls

### Making Video-phone Calls

1. Enter a phone number ▶  ▶ Start talking when the other party answers the call
  -  [Substitute]: Switches the image to be sent to the other party to the substitute image
  - : Adjusts the earpiece volume
2. After talking, 

### Answering Video-phone Calls

1. When you receive a call, press 
  -  / : Answers the video-phone call with the substitute image to be sent to the other party
2. After talking, 

14

### Switching to Speaker Phone

1. Press and hold  for two seconds during a call

15

Cutoff line

## i-mode Mail

### Composing/Sending i-mode Mail

#### Displaying the Compose Message Screen

1. On the Standby-display, [Mail] ▶ “Compose Mail” ▶ “Compose message”



<Compose Message>

16

Cutoff line

#### Entering an Address

1. Select [To] (To) box ▶ Enter an address ▶

#### Entering a Subject

1. Select [Sub] (Sub) box ▶ Enter a subject ▶

#### Entering Text

1. Select [Text] (Text) box ▶ Enter the text ▶

#### Sending Mail

1. [Send]

17

### Attaching Files

#### Attaching Images

1. On the Compose Message display, select [Attached file] (Attached file) box ▶ “Attach File” ▶ “My picture” ▶ Select a folder ▶ Select an image ▶

#### Attaching Melodies

1. On the Compose Message display, select [Attached file] (Attached file) box ▶ “Attach File” ▶ “Melody” ▶ Select a folder ▶ Select a file ▶

18

### Attaching Moving Images

1. On the Compose Message display, select [Attached file] (Attached file) box ▶ “Attach File” ▶ “i-motion” ▶ Select a folder ▶ Select moving images ▶

### Receiving i-mode Mail

1. Mail comes in ▶ The Reception Result display appears
  - To check the received i-mode mail/SMS right away, select “Mail” and then press.

### Other Mail Functions

#### Replying to Mail

1. On the display of the mail to reply to, [Menu] ▶ “Reply” ▶ Enter text ▶ [Send]

19


## Forwarding Mail

1. On the display of the mail to forward,  [Menu] ►  
 “Forward” ► Enter an address ►  ►  [Send]

## Checking New Messages



1. On the Stand-by display, press  [Mail] for at least two seconds time ► “Check new message”

20


Menu Item	
	1 Input address
	2 URL history
	6 Message
	1 MessageR
	2 MessageF
	7 Check new message
	8 i-mode setting
	1 Home
	2 View
	3 Certificates
	4 Others

22

## Menu List

Menu Item	
	i-appli
	i-mode
	1 iMenu
	2 Bookmark
	3 Screen memo
	4 Last URL
	5 Go to location


21

Menu Item	
	NW Service
	1 Voice mail
	1 Activate voice mail
	2 Set ringing time
	3 Deactivate voice mail
	4 Voice mail status request
	5 Play messages
	6 Voice mail setting
	7 Check messages
	8 Notify missed call
	9 Delete voice mail icon


23

Cutoff line


Cutoff line

Menu Item	
	0 Set message alert ringer
	2 Call waiting
	1 Activate call waiting
	2 Deactivate call waiting
	3 Call waiting status request
	3 Call forwarding
	1 Activate call forwarding
	2 Deactivate call forwarding
	3 Register the forwarding number
	4 Setting at forwarded party busy
	5 Call forwarding status request


24

Menu Item	
	4 Nuisance call barring
	1 Register nuisance caller
	2 Delete all entries
	3 Delete most recent entry
	5 Caller ID notification
	1 Activate/Deactivate caller ID notification
	2 Caller ID notification status request
	6 Caller ID request
	1 Activate caller ID request
	2 Deactivate caller ID request
	3 Caller ID request status request




25

Menu Item	
	7 Set arrival act
	1 Activate arrival act
	2 Deactivate arrival act
	3 Arrival act status request
	8 Arrival call act
	9 Others
	1 Additional service
	2 Additional guidance
	3 English guidance
	4 Service dialing number
	5 Call barring




26

Menu Item	
	Mail
	1 Inbox
	2 Outbox
	3 Unsent message
	4 Compose mail
	1 Compose message
	2 Compose SMS
	5 Check new message
	6 Receive option
	7 Check new SMS
	8 Mail setting


27

Menu Item	
	1 Communication
	2 Edit
	3 View
	4 Others
	Data box
	1 My picture
	2 i-motion
	3 Melody
	4 miniSD memory card
	Multimedia
	1 Camera-mode



28

Menu Item	
	2 Movie-mode
	Stationery
	1 Scheduler
	2 Memo
	3 Date search
	4 Date counter
	Phonebook
	1 Add to phonebook
	2 Search phonebook
	1 Show all data
	2 Group search

29

Menu Item	
	3 Reading search
	4 Memory No. search
	5 Phone No. search
	6 Domain search
	3 No. of phonebook
	4 Phonebook settings
	1 Display data
	2 Create domain list
	3 Search by
	4 Display image
5 Group settings	



30

Menu Item	
	6 Own number
	Tools
	1 Alarm
	2 Custom menu
	3 IrDA
	4 Calculator
	5 Unit converter
	1 Currency
	2 Surface
	3 Length
4 Weight	



31

Cutoff line


Cutoff line

Menu Item	
	5 Temperature
	6 Volume
	7 Velocity
	6 World time
	7 Stop watch
	8 miniSD memory card
	1 Data box
	2 Memory info.
	3 Reset miniSD card
	
1 Ring volume	


32

Menu Item	
	2 Effect tone volume
	3 Select ringtone
	4 Select effect tone
	5 Vibration settings
	6 Manner settings
	1 Manner mode
	2 Original manner
	7 Mail ring duration
8 Set mute seconds	
	Display
	1 Main display


33

Menu Item	
	1 Stand-by display
	2 Incoming call
	3 Outgoing call
	2 Sub display
	1 Stand-by display
	2 Incoming call
	3 Outgoing call
	3 Font
	4 Menu style
	5 Backlight
	6 Color scheme


34

Menu Item	
	Settings
	1 Call/Answer
	1 Call history
	2 Call duration
	3 Auto answer
	4 Reject/Accept call
	5 Memory reject call
	6 Answer mode
	2 Call feature
	1 Reconnect alarm
	2 Quality alarm


35

Menu Item	
	3 Minute reminder
	4 Prefix dial
	5 International dial
	6 Close setting
	3 Video-phone
	1 Video-phone settings
	2 Image settings
	4 Date & Time
	1 Set time
	2 Set date
	3 Daylight saving

36

Menu Item	
	5 Network
	1 Network selection
	2 Network mode
	3 Preferred lists
	4 Network name display
	6 Host selection
	7 Security
	1 All lock
	2 PIN code request
	3 Change password
	8 バイリンガル

37

Menu Item	
	9 Others
	1 Memory status
	2 Reset settings
	3 SMS center
	4 Reset holiday

38

## Network Service

### Voice Mail Service

#### **Activating Voice Mail Service**

1. On the Stand-by display,  [Menu] ▶ “NW service” ▶ “Voice mail” ▶ “Activate voice mail”

#### **Deactivating Voice Mail Service**

1. On the Stand-by display,  [Menu] ▶ “NW service” ▶ “Voice mail” ▶ “Deactivate voice mail”

#### **Playing Messages**

1. On the Stand-by display,  [Menu] ▶ “NW service” ▶ “Voice mail” ▶ “Play messages”

39

Cutoff line

## Call Waiting Service

### Activating Call Waiting Service

1. On the Stand-by display, **[Menu]** ▶ “NW service” ▶ “Call waiting” ▶ “Activate call waiting”

### Deactivating Call Waiting Service

1. On the Stand-by display, **[Menu]** ▶ “NW service” ▶ “Call waiting” ▶ “Deactivate call waiting”

40

### Deactivating Call Waiting Service

1. On the Stand-by display, **[Menu]** ▶ “NW service” ▶ “Caller ID notification” ▶ “Activate/Deactivate caller ID notification” ▶ “Not notify”

42

## Call Forwarding Service

### Activating Call Forwarding Service

1. On the Stand-by display, **[Menu]** ▶ “NW service” ▶ “Call forwarding” ▶ “Activate call forwarding”

### Deactivating Call Forwarding Service

1. On the Stand-by display, **[Menu]** ▶ “NW service” ▶ “Call forwarding” ▶ “Deactivate call forwarding”

## Caller ID Notification Service

### Activating Caller ID Notification Service

1. On the Stand-by display, **[Menu]** ▶ “NW service” ▶ “Caller ID notification” ▶ “Activate/Deactivate caller ID notification” ▶ “Notify”

41

## Services Available From the FOMA Phone


Service	Phone Number
Collect call (Calls charged to the receiver)	(No prefix) 106
Directory assistance for ordinary phones and DoCoMo mobile phones (Charges apply) (Unlisted phone numbers cannot be given.)	(No prefix) 104
Telegrams (Telegram charges apply) 8 a.m. to 10 p.m.	(No prefix) 115
Time check (Charges apply)	(No prefix) 117
Weather forecast (Charges apply)	Area Code + 177
Emergency calls to police	(No prefix) 110
Emergency calls to fire station and ambulance	(No prefix) 119
Emergency calls for accidents at sea	(No prefix) 118
Disaster messaging service (Charges apply)	(No prefix) 171

43



## Main Icons

### Main Display

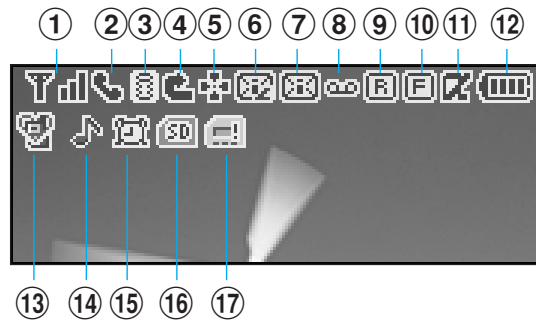

- ① ~ : Shows the level of the received radio waves  
 : Out of service area
- ② : Displayed during a voice call  
 : Displayed during a video-phone call

44

- (White): Displayed when the i-mode Center holds a MessageR (Request)
- (Pink): Displayed when the box for MessagesR (Request) at the i-mode Center is full.
- (White): Displayed when the i-mode center holds a MessageF (Free)
- (Pink): Displayed when the box for MessagesF (Free) at the i-mode Center is full.
- (White): Displayed when the i-mode Center holds mail, a MessageR (Request) and a MessageF (Free)
- (Pink): Displayed when the boxes for i-mode mail, MessagesR (Request) and MessagesF (Free) at the i-mode Center are full
- ⑦ (White): Displayed when unread mail exists.  
 (White): Displayed when an unread SMS message exists.  
 (White): Displayed when unread mail and SMS message exist.  
 (Pink): Displayed when the inbox is full.

46









- : Displayed during a voice call using the speaker phone
- ③ : Blinks while i-mode is activated  
 : Blinks during i-mode transmission
- : Displayed during trying dialup connection
- : Displayed during dialup connection
- : Displayed while an SSL-enabled page is displayed or obtained
- ④ : Displayed while Voice Mail is activated  
 : Displayed while Voice Mail is deactivated
- : Displayed while Call Forwarding is activated
- : Displayed while "All Call Rejection" is activated
- ⑤ : Displayed while a function (Task) is activated
- ⑥ (White): Displayed when the i-mode Center holds mail  
 (Pink): Displayed when the box for i-mode mail at the i-mode Center is full

45











- : Displayed when the area for SMS messages in the UIM (FOMA card) is full.
- ⑧ (White): Displayed when a Voice Mail message exists.  
 (Pink): Displayed when the box for Voice Mail messages is full.
- ⑨ (White): Displayed when an unread MessageR (Request) exists.  
 (Pink): Displayed when the box for MessagesR (Request) is full.
- ⑩ (White): Displayed when an unread MessagesF (Free) exists.  
 (Pink): Displayed when the box for MessagesF (Free) is full.
- ⑪ : Displayed when i-appli is being started  
 : Displayed when i-appli auto start failed
- ⑫ ~ : Shows the battery level.
- ⑬ (Pink): Displayed during Manner Mode.  
 (Blue): Displayed during Original Manner Mode.
- ⑭ : Displayed when the ringtone for incoming voice call or video-phone call sounds, not activating a vibration.

47

Cutoff line

-  : Displayed when a vibration is activated.
-  : Displayed when a vibration and a ringtone sounds at the same time.
-  : Displayed when a vibration and a ringtone do not activate.
- ⑮  : Displayed while an alarm is set
-  : Displayed when today's schedule exists
-  : Displayed when an alarm is set and today's schedule exists
- ⑯  : Displayed while a miniSD memory card is inserted
- ⑰  : Displayed when an error occurs on the UIM (FOAM card)







48

-  : Displayed during trying dialup connection
-  : Displayed during dialup connection
- ③  : Displayed while "All Call Rejection" is activated
- ④  (White): Displayed when the i-mode Center holds mail / an unread mail exists.
-  (Pink): Displayed when the box for mail at the i-mode Center / in UIM (FOMA card) / Inbox is full
- ⑤  : Displayed when an alarm is set.
-  : Displayed when today's schedule exists.
-  : Displayed when an alarm is set and today's schedule exists.
- ⑥  ~  : Show the battery level.

50

## Sub-screen



- ①  ~  : Shows the level of the received radio waves
-  外 : Out of service area
- ②  : Displayed during a voice call
-  : Displayed during a video-phone call
-  : Displayed while using the speaker phone


49


If you have any questions about this user's manual, please contact the number below.

### General Inquiries <DoCoMo Information Center>

■ From DoCoMo mobile phones and PHSs

■ From ordinary phones

 (No prefix) **151** (In Japanese, toll-free)

 **0120-800-000**

※ Cannot be called from ordinary phone

※ Can be called from DoCoMo mobile phones and PHSs.


For any problems, please contact the number below

### Repairs

■ From DoCoMo mobile phones and PHSs

■ From ordinary phones

 (No prefix) **113** (In Japanese, toll-free)

 **0120-800-000**

※ Cannot be called from ordinary phone

※ Can be called from DoCoMo mobile phones and PHSs

- Make sure that you dial the correct number.

51



NTT  
DoCoMo **FOMA L601i**  
Quick Manual (for Overseas Use)

**If the Handset is Lost, Stolen or Payment for Total Dialing Charges**

<DoCoMo Information Center> (24-hour service)

● Universal number

International Call ID Number  
for the Universal Number (See Table 1) **-800-0120-0151**

\* Local dialing charges may apply for the country or region that you are in.

● If the universal number is not available;

Major international  
access codes (See Table 2) **-81-3-5366-3114\***

\* Dialing charges for calls to Japan will apply.



\* When you are calling from L600i, you can dial +81-3-5366-3114.

(Press and hold the "0" key for at least one second for "+".)

\* See Page 11 and 13 of the Quick Manual for the International Call ID Number  
for the Universal Number (See Table 1) / International access code (See Table 2).

\* The Numbers in Table 1 and Table 2 may change.

**Overseas Network and Available Services**

Network	Icon	Voice	Packet transmission (i- mode/mopera U, etc.)	SMS	Video- phone
3G		○	○	○	○
GPRS		○	○	○	X
GSM		○	X	○	X

- Services marked with "O" may not be available depending on the communication carrier or the region.
- See the DoCoMo web page for the service available in each country or local area.  
<http://www.nttdocomo.co.jp/service/world/>

**If the Handset is not Working Properly**

<Network Technical Support and Operation Center> (24-hour service)

● Universal number

International Call ID Number  
for the Universal Number (See Table 1) **-800-5931-8600**

\* Local dialing charges may apply for the country or region that you are in.

● If the Universal Number is not available;

International access  
codes (See Table 2) **-81-3-6718-1414\***

\* Dialing charges for calls to Japan will apply.

\* If you are calling from L600i, you can dial +81-3-6718-1414.

(Press and hold the "0" key for at least one second for "+".)



\* See Page 12 and 14 of the Quick Manual for the International Call ID Number  
for the Universal Number (See Table 1) / International access code (See Table 2).

\* The Numbers in Table 1 and Table 2 may change.

**Setting Network**





During international roaming, available networks are automatically searched to complete the settings. See P5 for other settings such as manual search for the network.

**Making Calls**

If the other party uses the carriers support the FOMA video-phone, you can make a video-phone call by pressing  instead of .

**Making a Call from Abroad to Japan**

- Make sure that "Auto assist setting" is set to "OFF".
- You can also call WORLD WING/WORLD WALKER subscribers abroad by this operation.

1. On the Stand-by display, press and hold  for at least one second to display “+”.
2. Enter “81” for the Country Code of Japan.
3. Enter the other party’s area code except for “0” and phone number ▶  
4. After talking, 





### Calling the Third Party in the Country You Are in

1. Enter the other party’s area code and phone number ▶  
2. After talking, 

### Making Calls from the Country You Are In to Other Countries

- Make sure that “Auto assist Settings” is set to “OFF”. → P5

3


1. On the Stand-by display, press and hold  for at least one second to display “+”
2. Enter other party’s country code (P11)
3. Enter the other party’s area code except for “0” and phone number ▶  
4. After talking, 

### Receiving the call

1. When a call is incoming, press  


### Receiving Calls

### Receiving Calls from Japan

1. Enter your mobile phone number just like calling in Japan ▶ 

4


### Receiving Calls from Countries Other Than Japan

1. Enter the International access code of the originating country (P14)
2. Enter “81” for the country code of Japan
3. Enter your mobile phone number except for the first “0” ▶ 

### Changing Settings to Make Calls Easily

#### Auto Assist Setting

You can change the settings to make a call by automatically converting “+” to the IDD prefix code set in “IDD prefix setting”.


1. On the Stand-by display,  [Menu] ▶ “Settings”
2. “Call feature” ▶ “International dial” ▶ “Auto assist setting” ▶ “Auto”/“OFF”

5

- Auto: Converts “+” to the number set in “IDD prefix number” when dialing
- OFF: Does not convert “+”

#### Setting International Call Settings

You can set the international access number added to the beginning of the phone number for making an international call. “009130010” (WORLD CALL) is set by default.


1. On the Stand-by display,  [Menu] ▶ “Settings”
2. “Call feature” ▶ “International dial” ▶ “IDD prefix setting” ▶ enter “IDD prefix name” and “IDD prefix code”
  - IDD prefix name: Enter the name of an international call
  - IDD prefix code: Enter an international access code

6

Cutoff line

## Change Settings to Select a Network Manually

You can change the settings to manually search for the network you use.


1. On the Stand-by display,  [Menu] ▶ “Settings”
2. “Network” ▶ “Network selection”
3. “Manual”
  - To change the setting back to automatic search, select “Auto”.

## Setting the Types of Network You Search in Advance


Set types of network to be searched (3G/GSM).

1. On the Stand-by display,  [Menu] ▶ “Settings”

7

3.  [Menu] ▶ “Add new” ▶ “Search network” / “Enter new network”
  - Search network: You can select a network from the list
  - Enter new network: You can add a new network

### Setting Priority Order for the Network

1. Select a network of which you want to change priority
  - ▶  [Menu] ▶ “Move up”/“Move down”
    - Move up: Move the priority order up by one
    - Move down: Move the priority order down by one

## Displaying the Network Name

You can set whether to display the name of the network currently set on the Stand-by display.

1. On the Stand-by display,  [Menu] ▶ “Settings”

9

2. “Network” ▶ “Network mode” ▶ “Auto” / “WCDMA” / “GSM”

- Auto: Searches all the networks connectable
- WCDMA only: Searches networks supporting WCDMA only
- GSM only: Searches networks supporting GSM/GPRS only

※ Set the Network mode to “Auto” or “WCDMA only” after you return to Japan.

## Selecting a Network from the List



You can register network (communication carrier) and set priority order for use.

1. On the Stand-by display,  [Menu] ▶ “Settings”
2. “Network” ▶ “Preferred lists”

8

2. “Network” ▶ “Network name display” ▶ “Display on” / “Display off”

## Change Settings to Reject Calls during International Roaming

1. On the Stand-by display,  [Menu] ▶ “NW service”
2. “Others” ▶ “Call barring” ▶ “Activate barring of incoming call – roam” ▶ “Barring all incoming calls” / “Data calls barring” ▶ enter your terminal security code ▶ 
  - Barring all incoming calls: Bars all incoming calls
  - Data calls barring: Bars incoming video-phone calls only

10

## Major Country Codes

Region	Number	Region	Number
Australia	61	South Korea	82
Canada	1	Singapore	65
Greece	30	Switzerland	41
Indonesia	62	UK	44
Italy	39	USA	1

※ Go to the WORLD WING web page for other country codes and details.

11

Region	Number	Region	Number
Philippines	00	Israel	0014
Singapore	001	Italy	00
Spain	00	Switzerland	00
Sweden	00	Taiwan	00
Germany	00	Thailand	001
Hong Kong	001	UK	00
Ireland	00	USA	011

※ Go to the WORLD WING web page for other country codes and details.

13

## International Call ID Numbers for the Universal Number (Table 1)

※ The Universal Number may not be available in some

Region	Number	Region	Number
Argentina	00	Columbia	009
Australia	00	Denmark	00
	900	France	00
	90	South Korea	001
Austria	00	Luxembourg	000
Belgium	00	Malaysia	00
Brazil	0021	Netherlands	00
Canada	011	New Zealand	00
China	00	Norway	00

12

## International Access Codes by Country (Table 2)

※ The international access code may not be available in some areas.

Region	Number	Region	Number
Australia	0011	Finland	00
Belgium	00		990
Brazil	0014	Macao	00
	0021	Malaysia	00
	0023	Monaco	00
Canada	011	Netherlands	00
China	00	New Zealand	00
Czech	00	Norway	00
Denmark	00	Philippines	00

14

Cutoff line

Cutoff line

Region	Number	Region	Number
Poland	00	South Korea	001
Portugal	00	Luxembourg	00
Russia	810	Spain	00
Singapore	001	Sweden	00
France	00	Switzerland	00
Germany	00	Taiwan	002
Greece	00	Thailand	001
Hong Kong	001	Turkey	00
Hungary	00	UK	00
India	00	United Arab Emirates	00
Indonesia	001	USA	011
Ireland	00	Vietnam	00
Italy	00		

※ Go to the WORLD WING web page for other country codes and details.





**You can change the address or payment plan, various procedures or requirements through DoCoMo e-site (ドコモeサイト).**

**From i-mode** i Menu ⇒ 料金&お申込 ⇒ ドコモeサイト

No packet transmission charge

**From personal computer** My DoCoMo (<https://www.mydocomo.com/>) ⇒ 各種手続き (ドコモeサイト)

- \* When applying from i-mode, you need to have your "Network Security Code".
- \* When applying from i-mode, the packet transmission fee is free. You are charged fee, however, when you access e-site from abroad.
- \* When applying from your computer, you need to have your "My DoCoMo ID-Password".
- \* If you do not have or do not remember your "Network Security Code" and "My DoCoMo ID/Password", contact DoCoMo Information Center for inquiries.
- \* This service may not be available depending on the contents of the contract.
- \* During system maintenance, you may not be able to access some services.

## Don't forget your FOMA phone...or your manners!

When using your FOMA phone, do not forget to show common courtesy and consideration to the people around you.

### In the following cases, be certain to turn the power off.

- Where use is prohibited  
Some places prohibit the use of mobile phones. Be sure to turn off the power to your FOMA phone in any of the following places:
  - In airplanes • In hospital

※ Electronic medical equipment is used in places other than the actual wards. Make sure you have the power switched off even if you are in a lobby or waiting room.
- While driving  
Using the FOMA phone while driving interferes with safe driving and could cause danger.

※ Park the car in a safe place before using the FOMA phone, or switch to Driving mode.
- When in crowded places such as packed trains, where you could be near a person with an implanted cardiac pacemaker or implanted defibrillator operation can be affected by radio emissions from the FOMA phone.
- When in theaters, movie theaters, museums, and similar venues  
If you use your FOMA phone where you are supposed to be quiet, you will disturb those around you.

### Adjust the volume of your voice and ring tone according to where you are.

- If you use the FOMA phone in quiet places such as restaurants and hotel lobbies, keep the volume of your voice and the ring tone down.
- Do not block thoroughfares when using the FOMA phone.

### Respect privacy.



Please respect the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

### These functions help you keep your manners in public.

Handy functions are available such as for setting the response to incoming calls and setting all the tones to silent.

- **Manner Mode**

In Manner Mode or Super Silent, the keypad sound, ring tone and all other sounds generated by the FOMA phone are silenced. → P70

- **Vibrator**

When the vibrator is set, it vibrates for incoming calls. → P70

- **Voice Mail, Call Forwarding Service, etc.**

Callers can record a message or calls can be forwarded using optional services when you cannot come to the phone. → P190, P193