

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. if this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product.
- (2) The limited warranty extends on to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping blown fuses spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) The limited warranty is in lieu of all other warranties, express or implied either in fact or by operations law, statutory or otherwise, including, but limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- 3
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT. Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following web address:
www.lgeservice.com

For Your Safety

Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment.

Before You Start

Safety Instructions

WARNING! To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Always store your phone away from heat. Never store your phone in settings that may expose it to temperatures less than 32°F or greater than 104°F, such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby in adequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone.

Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the battery to explode.

IMPORTANT! Please read the TIA SAFETY INFORMATION on page 78 before using your phone.

Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- ▶ Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not dispose of your battery by fire or with hazardous or flammable materials.
- ▶ Make sure that no sharp-edged items come into contact with the battery. There is a risk of this causing a fire.
- ▶ Store the battery in a place out of reach of children.
- ▶ Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.

- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- ▶ Do not use a hand-held phone while driving.
- ▶ Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- ▶ Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- ▶ Never store your phone in temperatures less than -4°F or greater than 122°F.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- ▶ Do not use your phone in high explosive areas as the phone may generate sparks.
- ▶ Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- ▶ Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- ▶ Do not disassemble the phone.
- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- ▶ Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- ▶ Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ▶ Do not hold or let the antenna come in contact with your body during a call.
- ▶ An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

For Your Safety

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.6 inches (1.5cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna (optional, if available)

A minimum separation distance of 8 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Cautions for Battery

- ▶ Do not disassemble.
- ▶ Do not short-circuit.
- ▶ Do not expose to high temperature: 60°C (140°F).]
- ▶ Do not incinerate.

Battery Disposal

- ▶ Please dispose of your battery properly or bring to your local wireless carrier for recycling.
- ▶ Do not dispose in fire or with hazardous or flammable materials.

Adapter (Charger) Cautions

- ▶ Using the wrong battery charger could damage your phone and void your warranty.
- ▶ The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

DoCoMo W-CDMA, GSM/GPRS system

Thank you for purchasing the “FOMA L602i”.

Before or during use of the FOMA L602i, make sure that you read this manual and the separate manuals such as for the battery pack thoroughly so that you can use the FOMA L602i correctly. If you feel any inconvenience in reading the manual, contact the DoCoMo Information Center listed on the back of this manual.

The FOMA L602i is designed to be your close partner. Treat it carefully at all times to ensure long-term performance.

Before using your FOMA phone

- Because the FOMA phones use radio waves, they cannot be used in places where radio waves do not reach, such as inside tunnels, underground, or in buildings; or the outside where radio waves are weak or out of the FOMA service area. They may not be used in the high-rise buildings even when the antennas are unobstructed. You may also experience interruption of calls even when using without moving while the radio waves are strong enough for the 3 antennas to appear on the display.
- Use the FOMA phone carefully to avoid disturbing other people when in public, or in crowded or quiet places.
- Since the FOMA phones use radio waves as the medium of telecommunication, calls may be tapped by the third party. However, the W-CDMA and GSM/GPRS systems automatically support tapping prevention, so your conversation will be incomprehensible to the third party.
- The FOMA phones change your voice into digital signals and send them to the other party. In places where the radio waves are weak, the digital signals may not be converted correctly, and in such a case, the voice heard may sound differently from the original voice.
- It is recommended that you make separate notes of the information stored in the FOMA phone and keep such notes in a safe place. DoCoMo assumes no responsibility for the loss of data stored in the phone.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL. Neither DoCoMo nor the certifier listed herein makes any representation and warranty as for the security in the use of SSL. In the event that the user shall sustain damage or loss due to the use of SSL, neither DoCoMo nor the certifier assumes any responsibility for any such damage or loss.
Certifier: VeriSign Japan K.K. Betrusted Japan Co., Ltd. GeoTrust Japan, inc, RAS Security Inc., and SECOM Trust Systems Co., Ltd.
- This FOMA phone can be used only via the FOMA network or Roaming service area of DoCoMo.

For those who use the FOMA phone for the first time

If this is the first time for you to use the FOMA phone, read this manual in the order as described below. Then you will get acquainted with the outline of preparing and operating procedures for using your FOMA phone.

1. Attach and then charge the battery pack. → P39, P40
2. Turn the power to the FOMA phone ON, initialize, and confirm your phone number. → P44, P45
3. Confirm the buttons on the FOMA phone for their roles. → P28
4. Confirm the meanings of icons that appear on the display. → P31
5. Confirm how to operate the menus. → P35
6. Confirm how to make and receive calls. → P48, P58

● You can download the latest version of this manual from DoCoMo Web page.

- “Manual (PDF file)” download
(<http://www.nttdocomo.co.jp/support/manual/download/index.html>)

※The instructions contained of this manual and URL may be changed without notice.

How to Read/Refer to This Manual

The search methods and page structure of this manual are described here. Screen displays and illustrations described in this manual are for reference. The actual ones may differ.

How to Refer to This Manual

By the following search methods, you can find pages where your desired functions and explanations are described:

Tabs on Cover ▶ Cover

Search from the tabs printed on the cover.

Index ▶ P322

Search from keywords when you know the names of functions or services.

▶ See the next page for more details.

Contents ▶ P4

Search from the contents that categorize functions.

Features ▶ P6

Search from features when you want to use specific functions of FOMA L602i such as new functions or useful functions.

Menu List ▶ P234

Search from list for menus of FOMA L602i.

Quick Manual ▶ P332


Quick Manual gives you a clear, brief explanation about fundamental functions. You can take it with you when you go out.

■ See “Overseas use” (P223) for how to use your FOMA phone outside Japan.

- Note that “FOMA L602i” is referred to as “FOMA phone” in this manual.
- It is prohibited to copy all or part of this manual without permission.
- The instructions contained in this manual may be changed without notice.


■ From the Tabs on the Front Cover

Search for the functions and explanations in the order of the Front Cover → First page of Chapter → Description page.

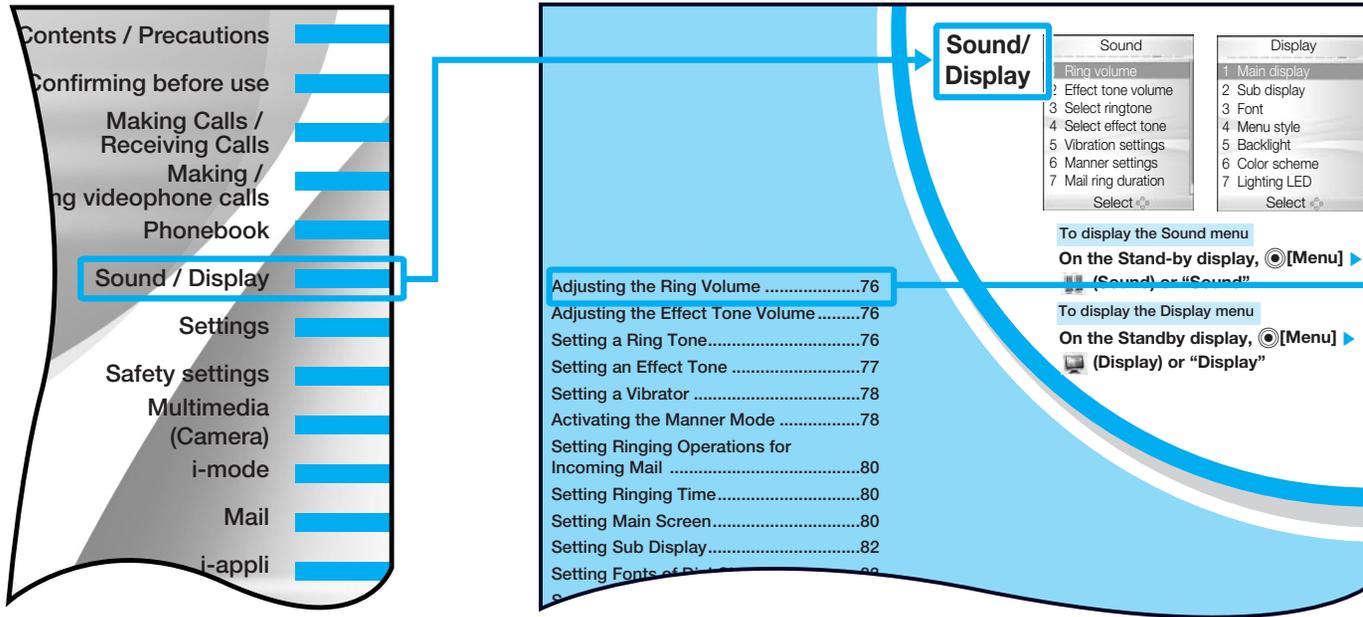

■ From the Index


Search from the index when you know the names of functions or services.

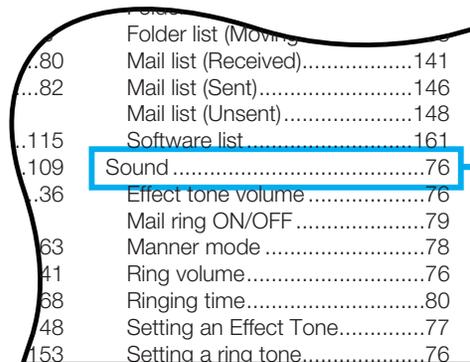

How to use this manual

In this manual, operations of your FOMA phone are explained in the structure as shown below:

- Screen displays and illustrations described in this manual are for reference. The actual ones may differ.

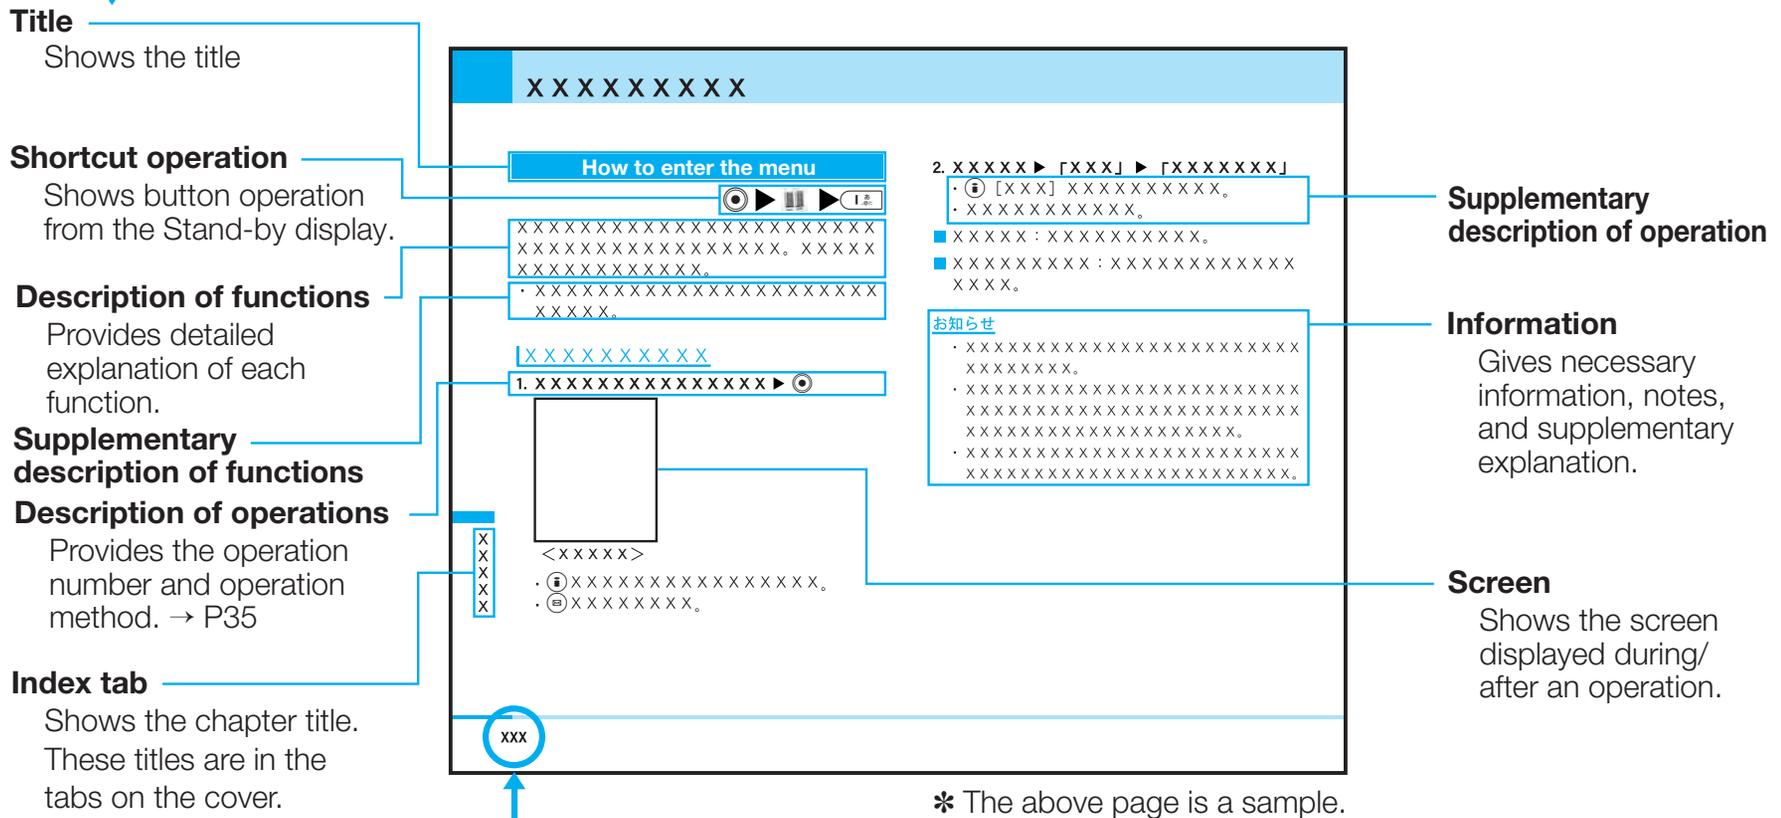

Contents

Before using your FOMA phone.....	Rear side of Front Cover
For those who use the FOMA phone for the first time	Rear Side of Front Cover
How to Read/Refer to This Manual.....	1
Contents	4
Features of FOMA L602i.....	6
Making Full Use of FOMA L602i!.....	8
Safety Precautions (Always follow the safety precautions.).....	10
Notes on Handling.....	20
Intellectual Property Rights	23
Accessories and Main Options	25

Confirming before use..... 27

- Phone Parts and Functions • Display • Menu Operations
- Soft Key Operations • Side Button Main Operations
- Using the UIM (FOMA Card) • Attaching/Removing the Battery Pack
- Charging the FOMA Phone • Turning Power ON
- Turning Power OFF • Date/Time
- Using Caller ID Notification Service • Own Number

Making calls/Receiving calls..... 47

- Making calls • Receiving calls • Using Public mode (drive mode)
- Using Public mode (power off)

Making/Receiving Video-phone calls 57

- About Video-phone • Making Video-phone Calls
- Receiving Video-phone Calls
- Changing Settings for Video-phone Calls

Phonebook..... 63

- Adding to Phonebook • Searching for Phonebook Entries
- Checking the Number of Saved Phonebook Entries
- Setting Phonebook • Setting Groups • Displaying Own Number

Sound/Display 75

- Adjusting the Ring Volume • Adjusting the Effect Tone Volume
- Setting a Ring Tone • Setting an Effect Tone
- Setting a Vibrator • Activating the Manner Mode
- Setting Ringing Operations for Incoming Mail
- Setting Ringing Time • Setting Main Screen
- Setting Sub Display • Setting Fonts of Dial Characters
- Setting Menu Style • Setting Backlight
- Setting color Scheme • Setting LED

Settings 85

- Call/Answer • Call Feature • Video Phone • Date & Time
- Network (for overseas use) • Changing a Host from i-mode
- Security • バイリンガル • Others Settings

Safety settings 103

- Passwords
- Preventing the Phone from Activating the Operation of Function
- Other Safety Settings

Multimedia (Camera) 107

- Notes for when using the camera • Using the Camera
- Shooting Still Images • Shooting Moving Images
- Setting Camera

i-mode 119

- i-mode Menu • What is i-mode? • Displaying the iMenu display
- Displaying Sites from Bookmark • Displaying Screen memo
- Displaying Last URL • Displaying Internet Web Pages
- Displaying MessageR/F
- Checking Whether Center Holds MessageR/F
- Setting Functions of i-mode • Displaying Sites
- How to See/Use Sites • Using My Menu
- Changing i-mode Password

Mail..... 137

- Mail Menu • i-mode Mail • Displaying Mail in Inbox
- Displaying Mail in Outbox • Displaying Mail in Unsent message
- Composing Mail • Checking New i-mode mail and Message
- Receiving Selected Mail • Checking whether Center Holds SMS
- Changing Mail Setting

i-appli 159

- What is i-appli • Downloading i-appli from Sites • Starting i-appli

Data box..... 165

- Introduction of Data box • Displaying/Managing/Editing Images
- Playing back/Managing/Moving Images/i-motion
- Playing back/Managing/Melody

Tools..... 179

- Using Alarm • Setting the Custom Menu
- Using the Infrared Communication Function • Using Calculator
- Using Unit Converter • Using World Time • Using Stop Watch

Stationery..... 189

- Using Schedule • Using Memo
- Using Date Search • Using Date Counter

Network Service 197

- Available Network Services • Using Voice Mail
- Using Call Waiting Service • Using Call Forwarding Service
- Using Nuisance Call Barring Service
- Using Caller ID Notification Service
- Using Caller ID Request Service • Using Set Arrival Act
- Selecting Arrival Call Act • Setting Remote Control
- International Roaming Service • Registering Additional Services
- Registering Additional Guidance • Using English Guidance
- Using Service Dialing Number • Using Call Barring

Data Transmission..... 209

- Data Transmission Available from the FOMA phone • Before Use
- Glossary of Data Transmission Terms
- Preparation Flow for Data Transmission • AT command

Entering Characters..... 215

- Entering Characters • List of Character Assignment of Dial Buttons

Overseas Use..... 223

- International Roaming Service • Setting the Network Mode
- Confirming Before Using Overseas
- Using the FOMA Phone Overseas

Appendix..... 233

- Menu list • Pre-installed data • Symbol/Special Character List
- Pictograph and Emoticon List • Common Phrase List
- Kuten Code List • List of city in World time
- Multiaccess Combination Patterns
- Multitask Combination Patterns
- Service Available with FOMA Phones • Introduction of Data Link
- Troubleshooting • Error Messages
- Introduction of Options and Related Equipment
- Warranty and Maintenance Services
- Specific Absorption Rate of the Mobile Phone
- Export/Re-export regulations of Japan and USA

Index/Quick Manual 321

- Index • Quick Manual

Features of FOMA L602i

FOMA is the name of the DoCoMo's service based on the W-CDMA format, authorized as one of the world's standards for third-generation mobile telecommunication systems (IMT-2000).

i-mode Function
<p>Viewing sites → P130</p> <p>This is on-line service to view the information via connecting the site or homepage by simply operating the button.</p>
<p>i-mode mail → P149</p> <p>You can compose and send i-mode mails. Also, you can attach images, moving images and melodies to be sent.</p>
<p>i-motion → P135</p> <p>You can obtain images and music from sites or Internet web pages.</p>
<p>Chaku-motion/Chaku-Uta® → P76</p> <p>You can download i-motion from i-mode site and set it as a ring alert and/or reception image.</p> <ul style="list-style-type: none"> • “Chaku-Uta” is a registered trademark of Sony Music Entertainment Inc.
<p>i-motion Mail → P149, P150</p> <p>You can attach moving images shot by the camera or i-motion movies obtained from sites or Internet web pages to i-mode mail to be sent.</p>

i-mode Function
<p>i-appli → P160</p> <p>You can download and use a variety of i-appli software programs from sites.</p> <p>For example, you can download and enjoy a variety of games.</p>

Main Futures
<p>Video-phone → P58</p> <p>You can have a conversation with the other party seeing each other's face. You can also let the other party's voice heard from the speaker or the other party see the landscape around you by rotating the camera.</p>

Whole Range of Network Services
Voice Mail (Charged) → P198
Call Forwarding Service (Free) → P201
Call Waiting Service (Charged) → P200
SMS (Short Messages) (Free) → P152
Nuisance Call Barring Service (Free) → P202
Caller ID Display Request (Free) → P202

International Roaming → P224

You can make/receive voice/video-phone calls, perform i-mode communication, exchange i-mode mail and SMS messages and perform data transmission with a personal computer connected to your FOMA phone overseas with the same phone number. Moreover, subscribers of the Voice Mail or Call Forwarding Service can use the network services.

Camera Functions → P109, P115

You can shoot still images and moving images using the rotatable camera (1,300,000 effective pixels and 1,300,000 recording pixels). You can shoot not only a person or landscape but also yourself by rotating the camera. You can use various functions such as adjusting images, zooming images, special effects when you shoot images.

Using the Infrared Communication → P182

You can exchange the data with FOMA handset via Infrared.

To display a character in phonebook → P64

In a phonebook, you can set the image and the character for each entry. You can make your own character by changing “Face”, “Hair”, “Tops”, “Bottoms”, “Accessory” and “Scenery”.

Useful Functions for Overseas Use

Unit converter → P185

You can convert a value of currency, surface, length, weight, temperature, capacity or velocity from one unit to another. You can use Unit converter in confirming a price converted into yen when you shop overseas.

World time → P187

You can check the date and time of 58 cities in the world. Also, a world map is displayed so that you can confirm the locations of cities and the national flags. You can use Global Clock in confirming the date and time and the location of your next destination on a trip.


Dual clock display → P81

You can display the time of two cities on the Stand-by display at the same time. For example, you can view the time difference by setting the city of a stay place.

Making Full Use of FOMA L602i!

"Video-phone", communication seeing each other's face. → P58

You can enjoy a conversation by letting the other party's voice heard from the speaker.

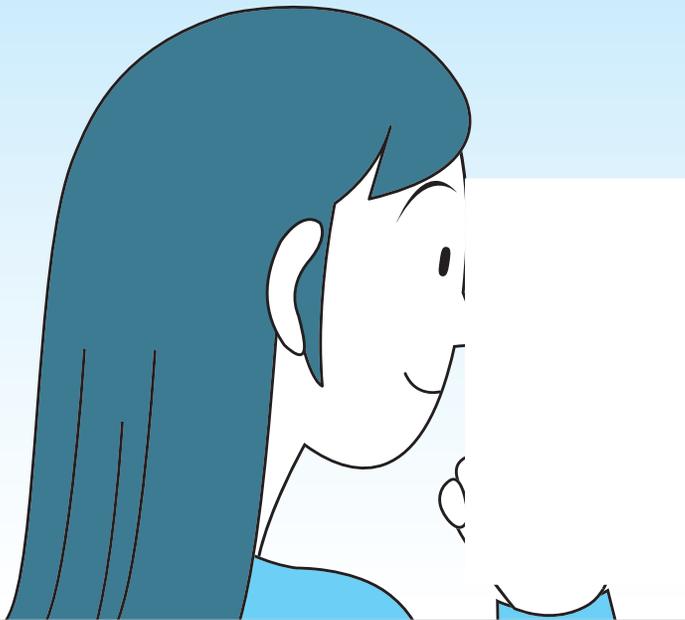

You can send images around you to the other party by rotating the camera.




Simple and Easy Camera Function → P108

You can shoot images with a frame.
→ P112



You can shoot images by rotating the camera.

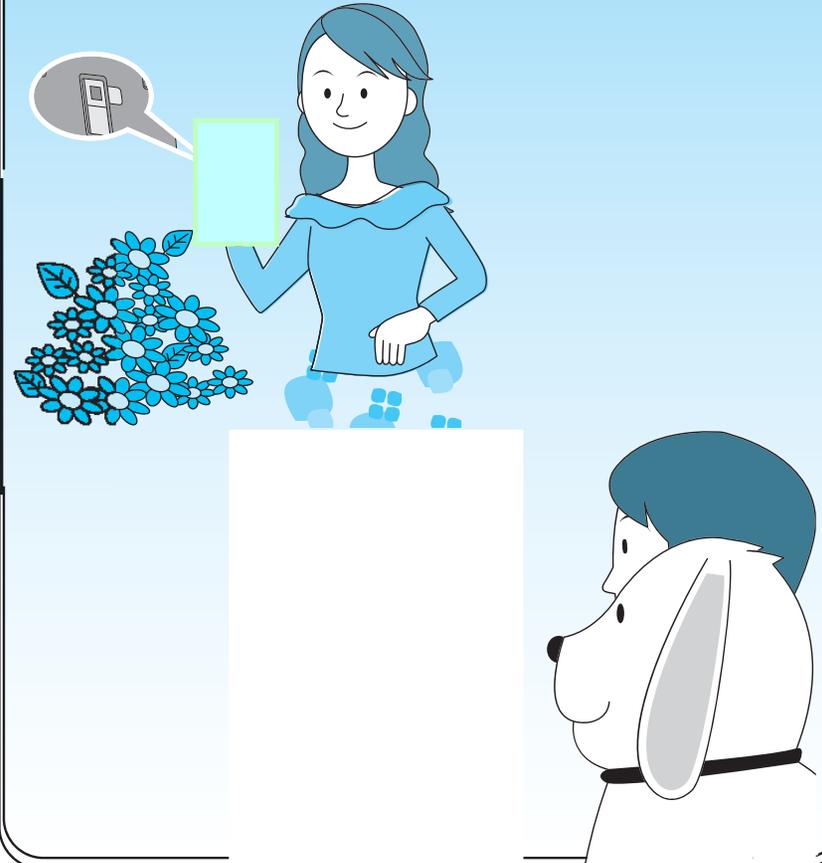

Safety Precautions
(Always follow the safety precautions.)

- Before using the FOMA phone, read these safety precautions carefully so that you can use it correctly. After reading the precautions, keep them in a safe place for future reference.
- Be sure to observe these safety precautions because they are designed to protect you or persons around you from causing injury and to avoid damages to the property.
- The symbols below indicate the levels of danger or damage that can be caused if the particular precautions are not observed.

 Danger	This symbol indicates that incorrect handling will almost certainly cause death or serious injury.
 Warning	This symbol indicates that incorrect handling poses a risk of causing death or serious injury.
 Caution	This symbol indicates that incorrect handling poses a risk of causing injury or damage to the product or property.

- The following symbols show specific directions:

 Don't	Denotes things not to do (Prohibition).
 Do not disassemble	Denotes not to disassemble.
 No wet hands	Denotes not to touch with wet hands.
 Avoid water	Denotes not to use where it could get wet.

 Do	Denotes mandatory instructions (matters that must be complied with).
 Pull the power plug out	Denotes to pull the power from the outlet.

- “Safety Precautions” are divided into the following 6 sections:
 General precautions for FOMA phone, batteries, adapters/chargers and UIM P11
 Precautions for FOMA phone P13
 Precautions for batteries P15
 Precautions for adapters/chargers P17
 Precautions for UIM P18
 Notes on using near electronic medical equipment P19

General precautions for FOMA phone, batteries, adapters/chargers, and UIM

Danger



Use only the batteries and adapters / chargers approved by DoCoMo for the FOMA phone.

If you use any type of battery, adapter or charger other than the specified one, the FOMA phone, battery or other devices may leak, overheat, burst, catch fire, or get damaged.

Battery Pack L02 FOMA AC Adapter 01
 FOMA AC Adapter 01 for both overseas and
 domestic usage FOMA DC Adapter 01

- For other specified products, contact a handling counter such as a DoCoMo shop.



Do not disassemble

Do not disassemble, modify or solder the FOMA phone or accessories.

Accidents such as fire, injury, electric shock, or malfunction may result. The battery fluid may leak, overheat, burst or catch fire.



Do not use or leave the FOMA phone or accessories in places where it is exposed to direct sunlight, or in extremely high temperatures such as inside a car in the summer heat.

Otherwise, the devices may deform or malfunction, battery fluid may leak, overheat, burst, or catch fire, or performance and longevity may deteriorate. Also, part of the case may be heated, causing bare skin burns.



Do not let the FOMA phone or accessories get wet.

If liquids such as water or pet urine get onto them, overheating, electric shock, fire, malfunction, injuries or others may result. Pay attention to the place of use of the way of handling.



Warning



Do not use the FOMA phone near places such as gas stations where there is danger of fire or explosion.

If used in dusty places or where there are flammable gases such as propane or gasoline, explosions or fire may result.

Warning



Do not place the batteries, the FOMA phone, adapters/chargers, or UIM in microwave ovens or high-pressure containers.

The battery may leak, overheat, burst, or catch fire. The FOMA phone or the adapter/charger may overheat, smoke, or catch fire, or its circuit parts may burst.



Do not throw the FOMA phone or accessories, or subject them to severe shocks.

The battery may leak, overheat, burst, catch fire, or cause damage to the equipment.



Be careful not to let electroconductive materials (metal pieces, pencil leads, etc.) contact with the charging terminal or connector terminals. Also, make sure not to let them inside the FOMA phone.

Short-circuit could cause catching fire or malfunction of the FOMA phone.



If the FOMA phone or accessories begins to emit an odor, overheat, discolor, deform, etc., while being used, charged, or stored, take the countermeasures as follows;

1. Pull the power plug off the outlet or socket.
 2. Turn off the FOMA phone.
 3. Remove the battery pack from the FOMA phone.
- If you use the devices with these symptoms not handled, they may overheat, burst, or catch fire, or the battery fluid may leak.

Caution



If children use the FOMA phone or accessories, a guardian should explain the safety precautions and correct operations to them. The guardian should also make sure that the instructions are followed during use.

Otherwise, injury may result.



Do not place the FOMA phone or accessories on unstable locations such as wobbly tables or slanted locations.

The FOMA phone or accessories may fall, resulting in injury or malfunction.



Keep out of the reach of babies and infants.

Accidental swallowing or injury may result.



Do not store in humid or dusty places, or in high temperature environments.

Malfunction may result.

 **Caution**



Temperature of the FOMA phone, battery pack or adapter/charger may rise while charging the battery, shooting moving images, playing back or using the video phone, i-mode or i-appli repeatedly or continuously for a long time.

Prolonged direct contact with a high temperature part may cause redness, itching, rash, etc. on skin depending on your physical conditions or predisposition.

Be careful especially when using the FOMA phone connected to the adapter / charger continuously for a long time.

Precautions for FOMA phone

 **Warning**



Turn off the FOMA phone in places where use is prohibited as in airplanes or hospitals.

Otherwise, electronic devices and electronic medical appliances may be adversely affected. If the Auto Power ON function is set, deactivate the setting, then turn the power off.

For use inside medical facilities, make sure that you comply with their regulations.

You may be punished for using the FOMA phone in airplanes, which is prohibited by law.



Turn off the FOMA phone near high-precision electronic devices or devices using weak electronic signals.

The FOMA phone may possibly cause these devices to malfunction.

※ Electronic devices that may be affected:

Hearing aids, implanted cardiac pacemakers, implanted defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices.

If you are using an implanted cardiac pacemaker, implanted defibrillator or any other electronic medical device, consult the manufacturer or retailer of the device for advice regarding possible effects from the radio waves.



If you have any implanted electronic medical equipment, do not place your FOMA phone in a chest pocket or inner pocket.

If the FOMA phone is close to electronic medical equipment, it may cause that equipment to malfunction.

Warning



For those with weak heart conditions, the vibrator and ring volume must be adjusted carefully.

Those functions may cause an effect on the heart.



Do not operate the FOMA phone while driving a vehicle.

Operating a mobile phone while driving has been prohibited since November 1, 2004. During driving, activate Public mode or Voice Mail.



Do not directly point the infrared data port at someone's eyes during transmission.

His/Her eyes may possibly be affected. Other infrared devices may operate erroneously if the infrared data port is pointed at them during transmission.



When talking on the speaker phone, be sure to keep the FOMA phone away from your ear.

Otherwise, your hearing could be impaired.



Do not put the FOMA phone in the place where it could be affected by an expanded airbag, etc., on the dashboard.

If the airbag expands, the FOMA phone could hit you and others, causing accidents such as injury and the FOMA phone could become damaged.



If thunder starts to rumble while you are using the FOMA phone outdoors, turn the power off, and move to a safe place.

Otherwise, you could be struck by lightning or suffer an electric shock.

Caution



Do not swing the FOMA phone by its strap.

The FOMA phone may hit you or persons around you, and accident such as injury or malfunction may result.



Itching, rash or eczema may be caused depending on your physical conditions or predisposition. If an abnormality occurs, stop using the FOMA phone immediately, and seek medical attention.

Metals are used for the following parts:

 **Caution**

Portion	Material	Finishing
Earpiece/Speaker	Aluminium	Oxidation treatment
Sub display frame	Stainless	Chromium plating
Surrounding part of Navigation button, Menu/Select button	ABS	Chromium plating finishing over nickel plating



Do not allow liquids such as water, or foreign materials such as metal pieces or flammable materials to get into the UIM insertion slit of the FOMA phone.

Fire, electric shock or malfunction may result.



Electronic devices in some types of cars can be affected by use of the FOMA phone.

For safety's sake, do not use the FOMA phone inside such cars.



Do not place magnetic cards or similar objects near the FOMA phone or between phone parts.

Information on magnetic cards such as cash cards, credit cards, telephone cards and floppy disks may be deleted.



Be careful not to let your finger or the strap get caught when you open and close the FOMA phone.

Accidents such as injury or malfunction may result.

Precautions for batteries

- **Check the description on the label of the battery pack for the type of battery.**

Description	Type
Li-ion (Li-polymer)	Lithium-ion battery (Lithium-polymer battery)

 **Danger**



If the battery fluid gets into your eyes, do not rub them. Flush your eyes with clean water and get medical attention immediately.

Otherwise, the loss of eyesight may result.



Do not throw the battery into fire.

The battery may leak, overheat, burst or catch fire.



Do not let any metal such as a wire contact the terminal. Also, do not carry or store the battery together with a metal necklace.

The battery may leak, overheat, burst or catch fire.

Danger



Do not pierce the battery pack with nails, hit it with a hammer, or step on it.

The battery may leak, overheat, burst or catch fire.



Do not use excessive force to attach the battery to the FOMA phone when you cannot attach it successfully. Also, check that the battery is the right way round when you attach it.

The battery may leak, overheat, burst or catch fire.

Warning



If the battery fluid comes in contact with skin or clothes, immediately stop using the battery and wash affected areas thoroughly with clean water.

The battery fluid is harmful to skin.



If charging is not completed at the end of the specified charging time, stop charging.

Otherwise, the battery may leak, overheat, burst or catch fire.



If the battery fluid leaks or emits an odor, immediately stop using the battery and keep it away from fire.

The battery fluid, being flammable, may catch fire and cause an explosion.

Caution



An exhausted battery should not be disposed of with ordinary waste.

The battery may catch fire or destroy the environment. After insulating the battery terminals with tape, bring them to a handling counter such as a DoCoMo shop or dispose of them in accordance with local waste disposal regulations.

Precautions for adapters/chargers

Warning



Don't

Never short-circuit the charging terminals when the adapter is plugged into the power outlet or cigarette lighter socket. Also, never touch the charging terminals with fingers or other bare skin.

Fire, malfunction, electric shock or injury may result.



No wet hands

Do not touch the power cord of the adapter/charger, or power outlet with wet hands.

Electric shock or injury may result.



Don't

Do not use the AC adapter in moist places such as a bathroom.

Electric shock may occur.



Pull the power plug out

When the adapter/charger is not to be used for a long period of time, unplug the power cord from the outlet.

Otherwise, electric shock, fire, or malfunction may result.



Don't

Do not use a damaged adapter/charger cord or power cord.

Electric shock, overheating or fire may result.



Pull the power plug out

If liquids such as water get in the charger, unplug the power cord immediately from the outlet or cigarette lighter socket.

Liquid inside the charger may cause electric shock, smoke, or fire.



Do

When plugging the AC adapter into the power outlet, firmly plug it in, taking care not to contact with metal straps or the like.

Electric shock, short-circuit or fire may result.



Do

Use the adapter/charger at the specified VAC.

Fire or malfunction may result. When using the FOMA phones overseas, use FOMA AC Adapter 01 for both overseas and domestic usage.

AC adapter: 100 VAC

FOMA AC Adapter for both overseas and domestic usage: 100 to 240 VAC

(Connect only to home AC outlet)

DC adapter: 12/24 VDC

(For negative (-) grounded vehicles only)



Do

If a fuse of the DC adapter has blown, replace it with a specified fuse.

Otherwise, catching fire or malfunction may result. For the specified fuse, see the user's manual.

Warning



The DC adapter is for use only in a negative (-) grounded vehicle. Do not use them in a positive (+) grounded vehicle.

Fire may result.



Wipe the dust off the power plugs.

Fire may result.



Place the charger on a stable location during charging. Do not cover or wrap the charger in cloth or bedding.

The FOMA phone may become separated, or the charger may overheat, leading to fire or malfunction.



If it starts to thunder, do not touch the FOMA phone and adapter/charger.

You may be struck by lightning or suffer an electric shock.

Caution



Before cleaning, pull the plug from the power outlet or cigarette lighter socket.

Electric shock may result.



Always hold the plug when pulling the adapter/charger out of the power outlet or cigarette lighter socket.

If you pull the plug out by the cord, the cord may be damaged, which could result in electric shock or fire.



Do not place heavy objects on the adapter/charger cord and power cord.

Electric shock or fire may result.

Precautions for UIM



Caution



Be careful when removing the UIM (IC portion).

Your hand or finger may be injured.

Notes on using near electronic medical equipment

- The description below meets “Guidelines on the Use of Radio-communication Equipment such as Cellular Telephones – Safeguards for Electronic Medical Equipment” by the Electromagnetic Compatibility Conference Japan.

Warning



Turn off the phone in crowded areas such as inside trains during rush hour, as someone with an implanted cardiac pacemaker or implanted defibrillator may be near you.

Operation of an implanted cardiac pacemaker or implanted defibrillator can be affected by radio waves.



Comply with the following in hospitals or health care facilities:

- Do not carry the FOMA phone into operating rooms, intensive care units (ICU) or coronary care units (CCU).
- Turn off the FOMA phone in hospital wards.
- If there is any electronic medical equipment near you, turn off the FOMA phone even when in a location such as a lobby.
- Comply with any regulations of hospital and health care facilities instructing you not to use or carry in a mobile phone.



- If the Auto Power On function is set, deactivate the setting, then turn the power off.

If you use an implanted cardiac pacemaker or implanted defibrillator, use the mobile phone 22cm or more away from an implanted cardiac pacemaker or implanted defibrillator.

Operation of an implanted cardiac pacemaker or implanted defibrillator may be affected by radio waves.



Patients using electronic medical equipment other than implanted cardiac pacemakers or implanted defibrillators (outside medical establishments for treatment at home, etc.) should check the influence of radio waves upon the equipment by consulting its manufacturer.

Operation of electronic medical equipment may be affected by radio waves.

Notes on Handling

General Notes

■ Do not let the equipment get wet.

The FOMA phone, battery and adapter/charger or UIM (FOMA card) are not waterproofed. Do not use them in which are high in humidity such as in bathrooms, and do not allow them to get wet from rain. Furthermore, if carrying them with your body, the internal parts may become corroded if exposed to body perspiration.

If the parts are found to have been damaged due to exposure to the liquids, any repairs will not be covered by warranty, or repairs may not be possible.

This may be repaired at your cost even if repairs are possible.

■ Use a dry soft cloth (lens cleaning cloth) to clean the equipment.

- The screen of the FOMA phone sometimes has a special coating so that it is easier to see. If you rub it roughly with a dry cloth, it may be scratched. Take care of the way of handling, and use only a dry, soft cloth such as used for cleaning glasses.

When the FOMA phone is left with water drops or stains on the display, smear may be generated or its coating may be peeled off.

- Do not use alcohol, thinner, benzene, detergent or other solvents for cleaning, otherwise the printing may be removed or discoloration may result.

■ Occasionally clean the connector terminals of the equipment using a dry cotton swab.

If the connector terminal becomes soiled, the connection may deteriorate so that the power goes off or the battery does not charge fully. Wipe the connector terminal with a dry cloth or cotton swab.

■ Do not place the FOMA phone near an air conditioner outlet.

Condensation may form due to rapid changes in temperature, and this may corrode internal parts and cause malfunction.

■ Do not place the FOMA phone in places where it may be subjected to excessive force.

Do not place the FOMA phone in a bag along with many other articles or in a trouser pocket, because this can damage the LCD display and internal circuitry. Malfunctions caused by such damage are not covered by the warranty.

■ Do carefully read each instruction manual attached to the battery pack or adapter/charger.

Notes on handling the FOMA phone

■ Avoid using in extremely high or low temperatures.

The FOMA phone should be used within a temperature range from 5 °C to 35°C and a humidity from 45% to 85%.

- **The FOMA phone, if operated near ordinary phones, televisions or radios that are in use, may affect them. You should operate your FOMA phone as far away from such equipment as possible.**
- **It is recommended that you make separate notes of the information stored in the FOMA phone and keep such notes in a safe place.**
DoCoMo assumes no responsibility for any loss of the stored data items.
- **Do not sit with the FOMA phone in your trousers or skirts pocket. Do not place the FOMA phone under heavy objects in a bag.**
Malfunction may result.
- **Make sure that nothing, such as a strap, gets caught between the parts of the FOMA phone when you close it.**
Malfunction or breakage may result.
- **The FOMA phone becomes warm while using or charging, but this is not an abnormality. Use the FOMA phone as it is.**
- **Do not leave the FOMA phone with a camera pointing direct to the sunlight.**
Pixels may be discolored or burns may result.

Notes on handling batteries

- **Batteries have a limited life.**
If the usable time of your FOMA phone is extremely short even if the battery is fully charged, replace the battery. Make sure that you only buy the specified battery.
- **Charge the battery in a place with an ambient temperature from 5°C to 35°C.**
- **Make sure that the battery is charged when you use the FOMA phone for the first time.**
- **When the FOMA phone has been left unused for a long period of time, charge the battery pack before using, or the battery may be easily exhausted.**
- **The usable time of the battery varies depending on the usage environment or its remaining life.**
- **Though the battery pack may swell a little as it comes closer to the end of its service life under some conditions, it is not a problem.**
- **Store the batteries in a well ventilated place out of direct sunlight.**
When the battery is not to be used for a long period of time, unplug the power cord from the FOMA phone or adapter (including charger) with the battery power completely drained, and store it in the plastic bag wrapping the battery pack.

[Notes on handling chargers and adapters](#)

- Charge the battery in a place with an ambient temperature from 5°C to 35°C.
- Charge the battery where:
 - There is excessive humidity, vibration, and dust.
 - There are no ordinary phones, television sets or radios nearby.
- During charging, the adapter or charger may become warm. This is not an abnormality, so continue charging.
- Do not use the DC Adapter for charging the battery when the car engine is not running.
The car battery could go flat.
- When using the power outlet having the disengaging prevention mechanism, observe the instructions given in that instruction manual.
- Do not give a strong shock. Also, do not deform the charging terminal.
Malfunction may result.

[Notes on handling the UIM](#)

- Do not apply more than necessary force when detaching the UIM.
- Do not apply more than necessary force when inserting it into the phone.

- The UIM may become warm during use, but this is not a sign of a malfunction. Continue using it as it is.
- The warranty does not cover damage caused by inserting the UIM into some other of IC card reader/writer.
- Always keep the IC portion clean.
- Use a dry soft cloth to clean the equipment.
- It is recommended that you make separate notes of the information stored on the UIM and keep such notes in a safe place.
DoCoMo assumes no responsibility for any loss of the stored data items.
- For the environmental protection, bring any unneeded UIMs to a handling counter such as a DoCoMo shop.
- Avoid using in extremely high or low temperatures.
- Do not damage, carelessly touch, or short-circuit the IC.
Data may be lost or damage to the IC may result.
- Do not drop the UIM or subject it to strong impacts.
Malfunction may result.
- Do not bend the UIM or place heavy objects on it.
Malfunction may result.

Notes on handling the Camera

You may be imposed punishment according to the law and rule (such as nuisance prevention ordinance) if you use the FOMA phone to give a remarkable nuisance and misdeed to the public.



Please respect the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

Intellectual Property Rights

Copyrights and Rights of Portrait

You have no right to copy, modify, or distribute the contents of which a third party holds the copyright such as text, images, music, or software downloaded from web pages on the Internet, or images shot by the cameras of this product without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the Copyright Law.

Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use. Make sure that you refrain from taking portraits of other persons and distributing such portraits over the Internet without consent, as this violates portrait rights.

Trademarks

- “FOMA”, “mova”, “i-mode”, “i-appli”, “i-motion”, “i-motion Mail”, “MessageF”, “i-melody”, “mopera”, “mopera U”, “WORLD CALL”, “WORLD WING”, “Deco-mail” “Public mode”, “My DoCoMo” and the logos of “FOMA”, “i-mode”, and “i-appli” are trademarks or registered trademarks of NTT DoCoMo, Inc.
- The “Free Dial Service” name and its logo are trademarks of NTT Communications.
- “Multitask” is a trademark of the NEC Corporation.
- “Catch phone” (Call Waiting Service) is a registered trademark of Nippon Telegraph and Telephone Corporation.
- Java and Java related trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
- “Chaku-Uta” is a registered trademark of Sony Music Entertainment Inc.
- NetFront and **NetFront**[®] are trademarks or registered trademarks of ACCESS Co.,Ltd. In Japan and other countries.
- Microsoft, MS, and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Windows XP is abbreviation of Microsoft[®] Windows[®] XP Professional operating system or Microsoft[®] Windows[®] XP Home Edition operating system.
- Windows 2000 is Microsoft[®] Windows[®] 2000 Professional operating system.

- Sometimes transcribed like Windows XP or 2000.
- Other company names and product names described in the text are trademarks or registered trademarks of those companies.

Others



- This product contains NetFront for FOMA Internet browser software of ACCESS Co., Ltd.
NetFront is registered trademarks of ACCESS Co., Ltd. in Japan other countries.
Copyright© 1996-2006 ACCESS CO., LTD.
(With Instruction Manual)
- Some part of the software in this product contains modules developed by Independent JPEG Group.
- Adobe and Acrobat Reader are trademarks or registered trademarks of Adobe systems Incorporated in the US and other countries.
- This product is licensed under the MPEG-4 patent portfolio license for the personal and non-commercial use of a consumer to
 - encode video in compliance with the MPEG-4 Visual Standard (“MPEG-4 Video”) and/or
 - decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use.Additional information may be obtained from MPEG LA, LLC.

- Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:
4,901,307 5,490,165 5,056,109 5,504,773 5,101,501
5,506,865 5,109,390 5,511,073 5,228,054 5,535,239
5,267,261 5,544,196 5,267,262 5,568,483 5,337,338
5,600,754 5,414,796 5,657,420 5,416,797 5,659,569
5,710,784 5,778,338

Accessories and Main Options



<Accessories>

- L602i Handset (including Warranty and Rear Cover L02)
- CD-ROM for L602i (“Manual for Data Communication” (PDF file) is included.)
- Battery Pack L02 (With Instruction Manual)
- Instruction manual
 - Quick Manual included (P332)

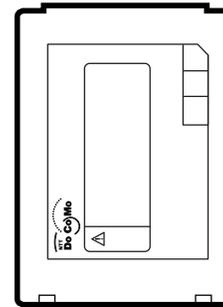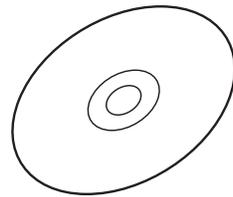

<Main Options>

- FOMA AC Adapter 01 (With Warranty card and Instruction Manual)
- FOMA AC Adapter for Abroad 01 (With Warranty card and Instruction Manual)

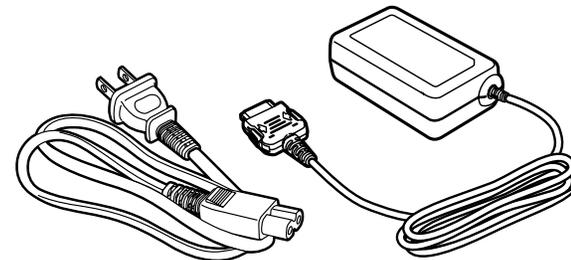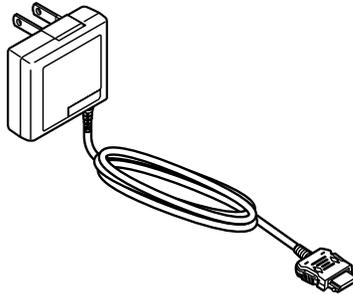

Other Options → P308



Confirming before use

Phone Parts and Functions	28
Display	31
Menu Operations.....	35
Soft Key Operations.....	35
Side Button Main Operations	36
Using the UIM (FOMA Card)	37
Attaching/Removing the Battery Pack.....	39
Charging the FOMA Phone.....	40
Turning Power ON.....	44
Turning Power OFF	44
Date/Time	45
Using Caller ID Notification Service	45
Own Number.....	45

Phone Parts and Functions

The Name and function of each part of the FOMA phone are as follows.

- This manual describes operation of each button using an illustration of the button.

Dimensions (H x W x D):

Approx. 94 x 50 x 18 mm

※ The height and thickness are the values of folded FOMA phone.

Weight:

Approx. 93g

※ With battery attached

- Antenna is embedded in the handset.

① Earpiece/Speaker

While talking over a call (using a speaker phone), the other party's voice is heard from here.

While not talking, ring alerts and alarms are emitted from here.

※ : Do not put your ears close to the speaker phone being active, because it may emit loud sound.

② Main display → P31

③ Camera

For shooting still images and moving images, and for sending images on a video-phone call. Rotate the camera to take a shot.

→ P58, P109, P115

④ Earphone/Microphone terminal

For connecting a Flat-plug Earphone/Microphone Set with Switch (option), etc. Do not forcibly pull the earphone/microphone cover※.

※: You can rotate it forward or backward when it is open.

⑤ Mail button

Press from the Stand-by display to bring up the Mail menu. → P138

Press from the Stand-by display for 2 or more seconds to check new message. → P127, P154

⑥ Navigation button

For selecting an item and scrolling the display.

The following operations can be performed from the Stand-by display:

 Up button : The phonebook list screen appears.
→ P67

 Down button : The custom menu screen appears.
→ P182

 Left button : Received call screen appears.
→ P86

Press for 1 or more seconds to display the received mail list. → P88

 Right button : Redialed call screen appears.
→ P87

Press for 1 or more seconds to display the sent mail list. → P88

⑦ Video-phone button

Press to make/receive video-phone calls. → P58, P60

Press on the Stand-by display to view the other party that you made the latest call.

Press to switch modes, etc. in entering mode (Pictograph/Symbol/Emoticon). → P217

Press to rotate the image when you start the camera.

⑧ Menu/Select button

Press on the Stand-by display to bring up the Main menu. → P35

An operation displayed in the soft key area can be performed. → P35

⑨  **Start button**

Press to make/receive voice calls. → P48, P50
Press on the Stand-by display to view the other party that you made the latest call. Press for 1 or more seconds to display all received/sent mail history.
Press while characters are entered to switch between full-pitch and half-pitch. → P216

⑩ **Dial button**

⑪  *** (asterisk) button**

Press to enter “*” and to switch between upper case and lower case while characters are entered. → P218
On the stand-by display, press this key for 1 or more seconds to set or cancel Public mode (drive mode).
→ P51

⑫ **Microphone**

For speaking to the other party.
For recording sound when shooting moving images by the camera.

⑬  **i-mode button**

Press from the Stand-by display to bring up the i-mode menu. → P120
Press for 2 or more seconds from the Stand-by display to bring up software list screen of i-appli.
→ P161
Press from the entering character mode to switch the mode (Hiragana/Katakana/English/ Number)
An operation displayed in the soft key area can be performed. → P35

⑭  **Multitask button**

Press to bring up the Task Manager.
Press for 1 or more seconds to bring up the New Task screen. → P280

⑮  **Clear button**

Press to return to the previous operation.
Press to cancel the operation depending on the function such as sending mails or downloading data.*
Also, press to delete entered text.
※Note that the operation may not be canceled depending on the timing of canceling.

⑯  **Power/End button**

Press for 1 or more seconds to turn the power on.
Press for 1 or more seconds to turn the power off.
→ P44
Press to end calls and end functions.

⑰  **(Sharp)/ Manner Mode button**

Press for 1 or more seconds from the Stand-by display to activate/deactivate the Manner Mode.
→ P78
Also, press to enter “#” and to start a new line while characters are entered.

⑱ **Connector terminal**

For connecting adapters and cables.

⑲ **Sub display → P33**


⑳ **LED**

You can set LED to go ON when making/receiving a call, playing music or doing other operations. → P84

- ②① **Strap hole**
- ②② **Rear cover**
- ②③ **Infrared data port**
Point this port to the other device for infrared communication. → P182
- ②④ **Volume buttons**
1. For adjusting the keypad volume in idle mode → P36
2. For adjusting the volume during a call → P36
- ②⑤ **Camera button**
Press from the Stand-by display to start up a camera. → P109

Display

Main Display

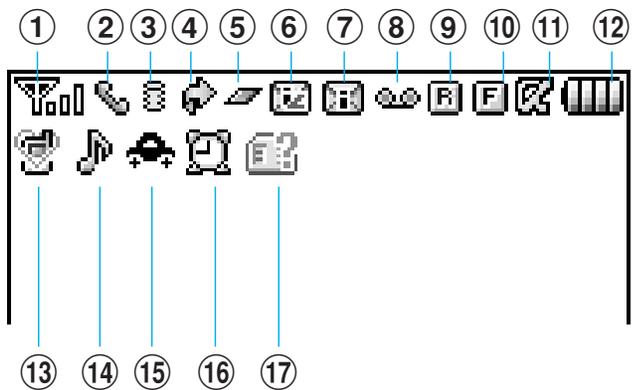

- ① ~ : Shows the level of the received radio waves.
Strong ↔ Weak
 : Out of the service area.
- ② : Displayed during a voice call.
 : Displayed during a video-phone call.
 : Displayed during a voice call using the speaker phone.
- ③ (Blinks): while i-mode is activated.
 (Blinks): during i-mode communication.
 : Displayed during trying dialup connection.
 : Displayed during dialup connection.
 : Displayed while an SSL-enabled page is displayed or obtained.
- ④ : Displayed while “All Call Rejection” is activated.
- ⑤ : Displayed while a function (Task) is activated.
 : Performing multiple functions (Task).
 (Blinking): Alarm starts while talking, activating camera or setting public mode (drive mode).
- ⑥ (White): Displayed when the i-mode Center holds a mail.
 (Pink): Displayed when the box for i-mode mail at the i-mode Center is full.
 (White): Displayed when the i-mode Center holds a MessageR.

-  (Pink): Displayed when the box for MessageR at the i-mode Center is full.
-  (White): Displayed when the i-mode center holds a MessageF.
-  (Pink): Displayed when the box for MessageF at the i-mode Center is full.
-  (White): Displayed when the i-mode Center holds mail, a messageR and a messageF.
-  (Pink): Displayed when the boxes for i-mode mail, MessageR and MessageF at the i-mode Center are full.
- ⑦  (White): Displayed when an unread mail exists.
-  (White): Displayed when an unread SMS message exists.
-  (White): Displayed when an unread mail and SMS message exist.
-  (Pink): Displayed when the inbox is full.
-  : Displayed when the area for SMS messages in the UIM is full.
- ⑧  (Yellowish green): Displayed when a Voice Mail message exists.
-  (Orange): Displayed when the box for Voice Mail messages is full.
- ⑨  (White): Displayed when an unread MessageR exists.
-  (Pink): Displayed when the box for MessageR is full.
- ⑩  : Displayed when an unread MessageF exists.
-  (Pink): Displayed when the box for MessageF is full.
- ⑪  : Displayed when i-appli is being started.
-  : Displayed when i-appli auto start failed.
- ⑫  : Shows the battery level.
- ⑬  (Pink): Displayed during Manner mode.
-  (Blue): Displayed during Original manner mode.
- ⑭  : Displayed when the ringtone for incoming voice call or video-phone call sounds, not operating a vibration.
-  : Displayed when the vibration for incoming call is activated to “Pattern 1” or “Pattern 2” when the alarm for incoming voice call or video-call is muted, and the vibration operate linked with a melody.
-  : Displayed when a vibration and a ringtone for incoming voice call and video-phone call sounds at the same time and the vibration is set to operate linked with a melody.
-  : Displayed when a vibration and a ringtone from incoming voice call or video-phone call do not operate.
- ⑮  : Public mode (Drive mode) active.
- ⑯  : Displayed while an alarm is set.
-  : Displayed when today’s schedule exists.
-  : Displayed when an alarm is set and today’s

schedule exists.

- ⑰  :Displayed when UIM is not inserted or an error occurs on the UIM.

Sub Display



- ①  ~  : Shows the level of the received radio waves.
Strong ↔ Weak
 : Out of the service area.
- ②  : Displayed during a voice call.
 : Displayed during a video-phone call.
 : Displayed during a voice call using the speaker phone.
 : Displayed during trying dialup connection.
 : Displayed during dialup connection.
- ③  : Displayed while “All Call Rejection” is activated.

- ④  (White): Displayed when the i-mode Center holds a mail, MessageR/F, an unread mail, SMS, MessageR/F, or the message in answering machine exists.
 (Pink): Displayed when the box for mail, MessageR/F at the i-mode Center Mail, SMS, MessageR/F, or the message in answering machine is full in inbox or UIM.
- ⑤  : Displayed when an alarm is set, and blinks when an alarm starts while public mode (drive mode) is set.
 : Displayed when today’s schedule exists.
 : Displayed when an alarm is set and today’s schedule exists.
- ⑥  ~  : Show the battery level.
- ⑦  (Pink): Manner mode active.
 (Blue): Original manner mode active.
- ⑧  : In this mode, a ring alert sounds and an incoming vibrator does not operate for voice and video-phone calls.
 : In this mode, an incoming vibrator operates in “Pattern 1 (Vibration only)” or “Pattern 2 (Vibration only)” or no ring alert sounds and an incoming vibrator operates in “Melody + vibration” for incoming voice/video-phone calls.

Confirming before use

 : In this mode, a ring alert sounds and an incoming vibrator operates in “Melody + vibration” for incoming voice/video-phone calls.

 : In this mode no ring alert sounds and no incoming vibrator operates for incoming voice/video-phone calls.

⑨  : Public mode (Drive mode) active.

Subdisplay

The various information such as clock or icons is displayed as follows.



<Clock>




<Alarm>




<Incoming call>

Missed call/ New received E-mail

When closing the FOMA phone, following messages are displayed on the Sub display.

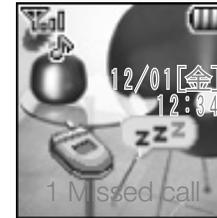

<Missed call>

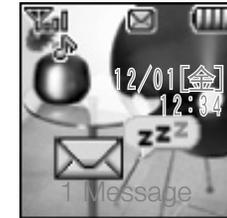

<New message>


- When you open the FOMA phone on displaying “X Missed call”, you can view the time or phone number in main display. You can view the call history by pressing . If you press  [Close], “X Missed call” will not be displayed anymore.
- When you open the FOMA phone on displaying “X Message”, the pop up message on the Sub display will disappear after confirming the screen.

Menu Operations

Example: How to set the “Stand-by display” of the “Main display”.


■ Selecting a function using

1. On the Stand-by display, [Menu] ► **Enlarge** using ► ► **Highlight “Main display”** using ► **Move the cursor to “Stand-by display”** using ►

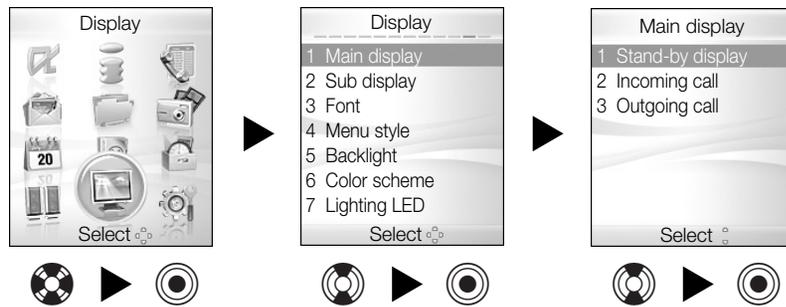


■ Selecting a function by pressing the key corresponding to the menu number

1. On the Stand-by display, [Menu] ► **Enlarge** using ► ►

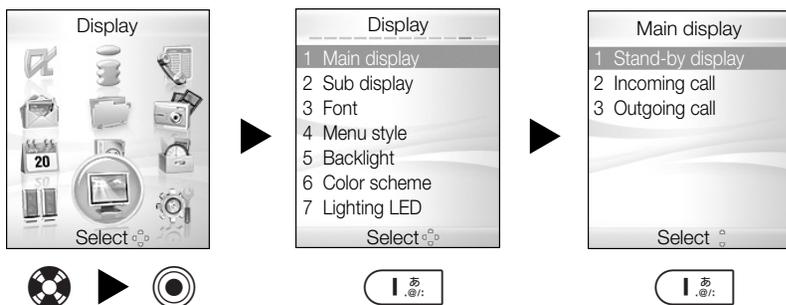

Soft Key Operations

To perform an operation displayed in the soft key area on the Main display, press the corresponding button as below.

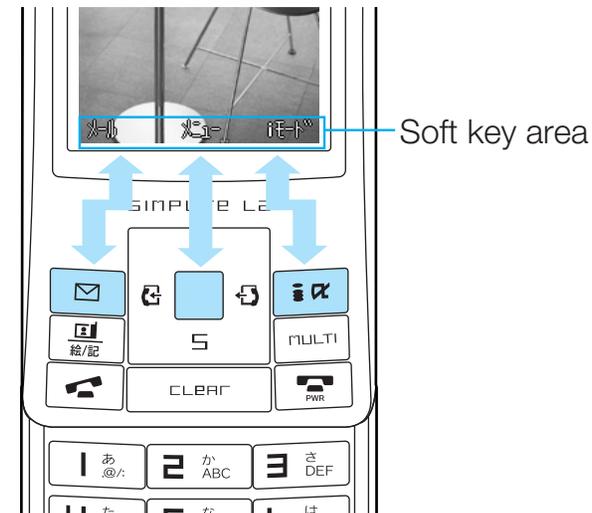

Confirming before use

Information

- (Navigation icon) that indicates the directions in which you can scroll and select items using is also displayed in the soft key area.
- Items displayed in the soft key area vary depending on the display.

Side Button Main Operations

- Major operations that can be performed by pressing  with the FOMA phone closed

FOMA phone operation	How to operate
Switch the display light of the sub display to ON	In Stand-by (Switch ON/OFF) ▶ 
Reject an incoming call	Incoming call ▶ Press  for 1 second
Adjust the volume of a ring tone for incoming call	Incoming call ▶ 
Stop the alarm	While an alarm / schedule alarm is sounding ▶ Press 
Adjust the volume of a ring tone for incoming call	Incoming call ▶ 
Adjust the volume of key tone	In Stand-by ▶ 
Adjust the volume	During a voice call/video-phone call ▶ 

- Main operations that can be performed by pressing  with the FOMA phone opened

FOMA phone operation	How to operate
Adjust the volume for moving image/melody playback	While moving images/a melody is played back ▶ 
Scroll the List display by page	While each List display is displayed ▶  <ul style="list-style-type: none"> • The cursor is moved on some displays.
Switch the Monthly Schedule displays by month	While the Monthly Schedule display is displayed ▶ 
Start the camera	In Stand-by ▶ Press 
Zoom	While the Still or Moving imaged Finder screen is displayed ▶ 
Play back/pause moving images/a melody	Adjust the volume when playing back a moving image/melody While playing a moving image/melody ▶  When moving images/a melody is paused ▶  (Play back) While moving images/a melody is played back ▶  (Pause)

Using the UIM (FOMA Card)

Your phone number and contracted contents for the service, etc. are recorded in the UIM. You need to insert it into the FOMA phone to make/receive calls or perform communication.

Refer to the UIM manual for details of how to use it.

[Inserting/Removing UIM \(FOMA Card\)](#)

Insert/remove the UIM after you turn off the power of the FOMA phone and remove the rear cover and battery pack beforehand (P39).

- Remove the AC adapter and options beforehand.

Inserting

1. **Insert the UIM with its IC-side facing downwards in the direction of the arrow underneath the guide.**

Removing

1. **Slide the UIM in the direction of the arrow to remove it.**

Information

- When inserting / removing the UIM, close the flip, and then put it on your hand. Take care not to accidentally torch or scratch the IC.

About Password of UIM

You can set 2 passwords, PIN1 and PIN2, for a UIM.
→ P105

UIM Restriction Functions

The UIM has a restriction function to protect your data and files.

If you obtain the following types of data and files with a UIM inserted, restrictions are automatically imposed to disable them when the UIM is not inserted or when another UIM is inserted.

- Images/melodies/i-motion/i-appli obtained from sites and Internet web pages
- Files attached to i-mode mail messages and MessagesR/F

Differences of UIM

There are 2 types of UIM, the green, white and blue UIM and the blue UIM. There are differences in specifications of the following functions between those UIMs:

Function	UIM (Green)	UIM (Blue)
Number of digits of the phone number that can be stored in the UIM phonebook	Up to 26 digits	Up to 20 digits
WORLD WING	Available	Not available
Service dialing	Available	Not available

About WORLD WING

WORLD WING is DoCoMo's international roaming service that allows you to use the same mobile phone number for making and receiving calls after inserting your UIM (Green) in a FOMA phone applicable to the service or mobile phone available for overseas use (WCDMA or GSM).

WORLD WING is available without subscription.

- If you subscribed to FOMA services before August 31, 2005 and have not subscribed to WORLD WING, a separate subscription is required for WORLD WING.
- Some billing plans may not be applied to WORLD WING.

- If the UIM (Green) is lost or stolen overseas, contact DoCoMo immediately to suspend the service. For a contact, see General Inquiries on the back cover of this manual. Please be aware that call and transmission charges made after loss or theft will be charged to you.

Attaching/Removing the Battery Pack

Make sure that you attach the dedicated battery pack L02 for FOMA L602i to use it.

Attaching

1. Press the rear cover in the direction of the arrow ❶ to slide it in the direction of the arrow ❷, then lift it up in the direction of the arrow ❸ to remove.

2. Insert the battery in the direction of the arrow ❶ with the label facing downwards, then push it in the direction of the arrow ❷.

3. Adjust the rear cover to the ditch of the FOMA phone holding the cover approx. 3mm off, then press it in the direction of the arrow ❶ to slide it in the direction of the arrow ❷, then push it until it clicks.

Removing

- 1. Press the rear cover in the direction of the arrow ① to slide it in the direction of the arrow ②, then lift it up in the direction of the arrow ③ to remove.**
- 2. Take the projection of the battery pack to lift it up in the direction of the arrow.**

Information

- Attach/remove the battery pack with the FOMA phone closed and held in your hand after you turn off the power. In addition, if you attach/remove the battery pack forcibly, it may damage the charging connector of battery.
- Take care not to attach/remove the rear cover. Note that if the rear cover is forcibly depressed, the slot of the rear cover may be damaged.
- For details about the battery, see the manual for Battery Pack L02.

Charging the FOMA Phone

Charging

Connect specified AC Adapter (option) to charge the battery after attaching the battery pack to the FOMA phone (P39). You need FOMA AC Adapter 01 for both overseas and domestic usage (option) separately when using the FOMA phone overseas.


- 1. Open the cover[※] of the external connector terminal of the FOMA phone.**

※: You can rotate it forward or backward when it is open.

2. While pressing the release buttons on both sides of the connector of the AC adapter, connect it horizontally to the FOMA phone with the arrows-engraved side facing upwards in the direction of the arrow.

- If you start to charge the battery, the charging start tone will sound.
The battery level icon () flashes on and off in turn and it is red. After charging, the alarm tone for ending the charging will ring and then the flashing disappears and the LED turns off.
- If you charge the FOMA phone with the power off, the animation for the battery level is displayed as follows, depending on the battery level.
 - In case the battery level is low: “Please wait” → “Charging” → “Battery charged”
 - In case the battery is empty: “Please wait” → “Low battery Please wait” → “Charging” → “Battery charged”

3. Insert the AC adapter’s plug into a power socket.

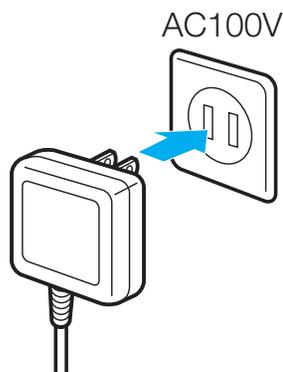

Information

- When you use the FOMA phone for the first time, the battery pack is not fully charged. Fully charge the battery before using it.
- When you attach the AC adapter to the FOMA phone, do not use unnecessary force. The FOMA phone and the connector may be damaged.
- Do not remove the battery pack and the UIM during charging.
- If the battery cannot be charged correctly, turn off the power once, remove the battery pack, and then reattach it to charge the battery again.
- If the battery level becomes very low during a video-phone call, connecting the AC adapter may not charge the battery fully, and the power may go off.
- When charging the battery pack overseas, confirm the voltage used in the country or the area of stay, and use FOMA Overseas/Domestic AC Adapter 01 (option) (A conversion plug

adapter for overseas travel applying to the country or area of stay is required). Also, do not charge the battery pack using an electric transformer for overseas travel.

- Refer to the instruction manuals for FOMA AC Adapter 01 (option) and FOMA AC Adapter 01 for both overseas and domestic usage (option) for details.

Removing the AC Adapter

After charging completes, disconnect the AC adapter from the FOMA phone.

- 1. Disconnect the connector of the AC adapter from the power socket.**
- 2. While pressing the release buttons on both sides of the connector, remove it horizontally from the FOMA phone in the direction of the arrow.**
 - Do not pull the connector forcibly. Malfunction may result.

- 3. Close the cover of the external connector terminal of the FOMA phone.**

Checking the Battery Level

When turning the power on, the battery level (estimate) icon is appeared.

- The Battery Level display indicates just an estimate of the battery level.

 : Almost full

 : Getting low

 : Almost empty. Charge the battery immediately.

When You Need to Charge the Battery

If the battery is completely flat, a message appears,  flickers, and the battery alarm sounds. If you press , the message disappears and the battery alarm stops.

Information

- If you set “Manner mode” or “Original manner mode” and set battery alarm to OFF, the alert tone does not ring.

Precautions on the Battery Pack

Be sure to use the battery pack dedicated to the FOMA phone.

Battery life

- Batteries are consumables. The usage time of all chargeable batteries shortens slightly each time they are charged. The battery's life is considered to be exhausted when the usage time of the battery after charging is about half the time it was at purchase. (The life of the battery is about 1 year. However, it may be shorter if used very frequently.)

For environmental protection, bring the exhausted battery to an NTT DoCoMo, dealer, or recycle shop.



- Do not charge for long periods of time (several days) with the FOMA phone turned on.
 - Do not leave the FOMA phone power on for long periods of time while charging. Otherwise, when charging finishes, the FOMA phone will attempt to receive power from the battery so that when you actually use the FOMA phone, you will be able to do so for just a short amount of time before the battery alarm sounds. If this happens, charge the battery correctly. When charging the battery again, first disconnect the FOMA phone from the AC adapter and then set it again.

Estimated usage time for battery

The usable time of the battery varies depending on the usage environment or its remaining life.

Network	Stand-by time	Continuous talk time
FOMA / 3G	Static : about 380 hrs Dynamic : about 250 hrs	Voice call : about 140 min Video call : about 90 min
GSM/GPRS	Static : about 260 hrs	Voice call: about 200 minutes

- Continuous talk time is the estimated time when radio waves can be sent and received normally.
- Continuous stand-by time is the estimated time you can use the FOMA phone in motion when it is closed and can receive radio waves normally. The standby time could be about half of this estimate depending on the battery level, function settings, other ambient conditions such as temperature, the status of radio waves in the area (weak or no radio waves, for instance) and the status of the network of the country in which you stay. The continuous standby time will be shorter if you don't insert the UIM. When you use i-mode communications, the talk/transmission time and standby time will be shorter. Further, even if you do not make calls or perform i-mode communication, the talk/communication time and standby time will be shorter if you compose i-mode mail, start up a downloaded i-appli.

- The continuous standby time for standstill is the average number of hours you can use the FOMA phone in standstill status when it is closed and can receive radio waves normally.
- The continuous standby time for in motion is the average number of hours you can use the FOMA phone in the combined status of "standstill", "moving" and "out of the service area" when it is closed, in an area where it can receive radio waves normally.
- The talk/communication time and standby time will also be shorter than the above-mentioned estimates when you perform data transmission or multi-access or when you use the camera.

■ Estimated time for charging battery

FOMA AC Adapter 01	Approx. 180 minutes
---------------------------	---------------------

- The estimated charging time is for when the FOMA phone is off and the battery is being charged from empty. The charging time will be longer if you charge the battery with the power turned on.
- ### ■ Other precautions
- Do not use any other adapter than the specified one. It may shorten the life of the battery pack.

Turning Power ON

- Before you turn on the power, make sure that the UIM is inserted and that the battery is fully charged.

1. Press for 2 or more seconds

- After the Wake-up display is displayed, the Stand-by display appears.

Information

- If "PIN code request" (P100) is set to "ON", you need to enter the PIN1 code.
- If "All lock" (P99) is set to "Power on", you need to enter the terminal security code.

Turning Power OFF

1. Press for 2 or more seconds

- The Exit display appears and the power is turned off.

Information

- The time to turn off the FOMA phone may be long. Depending on the status of network, the lead time may differ. During switching off the power, do not repeat to power on/off.

Date/Time

You can set the date and time and daylight saving time. See “Setting Date & Time” (P95) for details of how to set them up.

Using Caller ID Notification Service

The Caller ID Notification Service enables you to notify the other party of your phone number when you make a call. See “Using Caller ID Notification Service” (P202) for details of how to set it up.

Own Number

You can display your phone number recorded in the UIM.

1. On the Stand-by display,   

- See “Displaying Own Number” (P72) for details of how to change the settings on the Own Number display.



Making calls/ Receiving calls




- Making calls.....48
- Receiving calls51
- Using Public mode (drive mode)52
- Using Public mode (power off)54

Making calls/Receiving calls

Making calls


1. Enter the other party's phone number

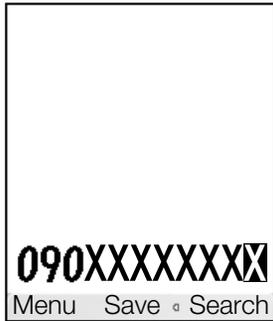

<Enter Phone Number>

- : The last digit is cleared. To clear all digits, press it for 1 or more seconds.
- [Save]: You can register / add the entered phone number to phonebook. Go to step 2 on page 64 of "Adding to Phonebook".
- [Search]: You can search for the phone number in phonebook. See the contents after step 3 on page 66.

2. ▶ Start talking when the other party answers

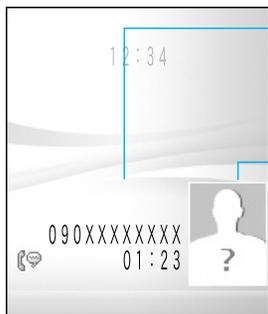

<Talking>

The other party's name ^{※1}
The other party's phone number
Call duration

The other party's picture ^{※2}

※1 : In case of the other party you don't register the information in phonebook, "Unregistered" will be displayed when receiving or making a call.

※2 : The picture will be displayed when you register the picture in phonebook.

- Press for 1 or more seconds: You can switch ON/OFF the speaker phone.

3. to end the call after talking.

Information

- If you press after entering the number from 0 to 9 in the Enter Phone Number screen, you can make a call directly matching the the number saved in memory.
- You can enter a phone number of up to 42 digits.
- If you enter a phone number exceeding 16 digits, dialing will be made displaying the first 16 digits digits of the phone number.
- You can make a call after entering "184" (Not notify) or "186" (Notify) in front of phone number.
- When the Flat-plug Earphone/Microphone Set with Switch (option) is attached, you can only talk on the Earphone / Microphone regardless that the speaker phone is ON/OFF.
- When the call is disconnected, the alert sound sounds from a receiver.
- When dialing/receiving overseas, some name of the other party may not be displayed even that name is registered in the phonebook.

Using the Submenus of the Enter Phone Number Display

1. From the Enter Phone Number screen (See left), [Menu] ▶ Select from the following submenu items

Notify caller ID

Set whether to notify your phone number per call.

- **Not notify** : “#31#” is added in front of the phone number entered, but the phone number is not notified.
- **Notify** : “ *31#” is added in front of the phone number entered, and the phone number is notified.
- **Cancel** : The added “#31#” or “ *31#” is deleted.

Select prefix

The number saved in “Setting Prefix Dial” (P92) is added before the phone number is entered.

International call

The international access code saved in “International dial setting” (P92) is added before the phone number is entered.

Save

You can save the entered phone number entered into the Phonebook. Go to step 2 on page 64 of “Adding to Phonebook”.

Search phonebook

You can search for the phone number in phonebook. For operations after searching, see 3 on page 66 of “Searching for Phonebook Entries”.

Using the Submenus of the Talking screen

1. **From the Talking screen (P48),**  [Menu] ► **Select from the following submenu items**

New call^{※1}

You can put the current call on make and hold a call to another party.

End active call

You can disconnect the call.

Hold^{※1}/Cancel held call^{※1}

You can put/release the call on hold.

Mute^{※2}/Unmute^{※2}

You can mute/unmute the voice transmitted to the other party.

※1: Available only for Call Waiting Service subscribers.

To use this service, go to “Using Call Waiting Service” (P200).

※2: Not displayed during call is held.

Making a Call From the Dialed/Received Call Record

1. **From the Stand-by display,**  /  /  /  ►
Select a record ► 

Information

- See “Using the Submenu of the Received Calls display” (P86) for submenus.

Making a Call from the Phonebook

1.  **in the Stand-by display, or search the phonebook** ► **Select the party you want to call** ► 

When multiple phone numbers are registered, press  to display the Select call number screen, then select the phone number and press  [Call].

Information

- To switch the phonebook list to display between the FOMA phone and UIM, select  [Menu] → “View handset”/“View UIM” on the phonebook list screen.

Using Pause Dial

You can use services such as sending messages to a pocket bell, reserving tickets or checking the balance of your bank account by sending push signal from the FOMA handset.

1. Enter the phone number

2. Enter the dial data

- Press  3 times to enter pause “P”
- Only  to , ,  and pause “P” can be entered.
- Up to 42 digit can be entered.
- If you enter pause “P” before the phone number, you can not dial.

3.

- A call is made to the other party, and the dial data from the beginning to the first pause “P” is displayed while being connected.

4. Confirm that the other party accepted → or [Select]

- The dial data from the beginning to the first “P” is sent, and the dial data to the next pause “P” is displayed. Each time you press  or , the dial data to the next “P” is sent. When you send the last number, the calling screen appears.

Information

- The other party may not be able to receive the signal depending on the type of the receiver's handset.
- When using video-phone call, you can not use pause dial.

International Calls

You can make an international call easily using the DoCoMo international call service “WORLD CALL”. When you have signed up for FOMA service, you have contracted to use “WORLD CALL” (except those who have applied not to use it).

- You can make calls to 240 countries and areas worldwide.

How to make calls

009130 → 010 → Country code → Area code → Destination phone number → 

- This service is not available with some billing plans.
- Application/monthly fee for WORLD CALL is free of charge.
- The WORLD CALL charges are added to your monthly FOMA bill.
- Contact “DoCoMo Information Center” on the back of this manual for inquiries about WORLD CALL.
- If the other party uses a specific 3G mobile phone overseas, you can make an “International Video-phone Call” by dialing out using  after following the dialing method described above.

- See the International Service web page of DoCoMo for the information about connectable countries and telecommunications carriers.
- Images sent from the other party may blur on your FOMA phone or you may not be able to connect, depending on the other party's phone used for the international video-phone.
- When the area code begins with "0", leave this out when dialing. However, include "0" when making a call to some countries or regions such as Italy.

Making an International Call Easily

- Confirm that the "Setting Prefix Dial" (P92) is set to "AUTO" and "009130010" (WORLD CALL) is set for "IDD prefix code" in "IDD prefix setting".
1. On the Stand-by display, press  for 1 or more seconds to enter "+"
 2. Enter Country code → Area code → Destination phone number ▶  ()
 3. "Yes"
Confirmation with the test machine required.
 4.  to end the call after talking

Adjusting the Volume


1. Press   during a call or press  for 1 or more seconds.

Information

- The changed volume is held even after ending the call.

Receiving calls

1. When you receive a call,

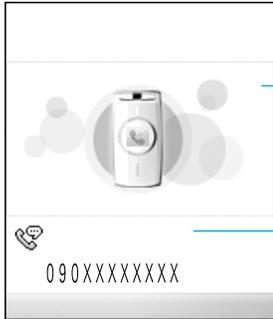

- The other party's image ※1
- The other party's name ※2
- The other party's phone number
- ※1 : Displayed only when the other party's image is registered in the phonebook.
- ※2 : In case the other party's information is not registered in the phonebook, "Unregistered" will be displayed.

<Ringing screen>

-  [Silent]: You can set to no sound for incoming call. If you subsequently press  [Reject], incoming call will be rejected.
 - : You can reject the incoming call.
 - If you close the handset while a call is incoming, the call will be rejected.
2.  to end the call after talking

Information

- When dialing/receiving overseas, some name of the other party may not be displayed even that name is registered in the phonebook.

When you didn't get a call

When you could not answer the incoming voice call/video-phone call, the following screen indicating a missed call appears and the LED blinks for approx. 60 seconds.



The name not registered in phonebook is not displayed.

- [OK] : You can view the list of received calls.
- [Close] : You can close the screen for missed calls.

Using the Submenu of the Ringing Display

1. From the Ringing screen (P51), [Menu] ► Select from the following submenu items

Voice mail^{※1}

The Call is connected to the Voice Mail Service Center.

Call rejection

The call is disconnected without answering it.

Call forwarding^{※2}

The call is forwarded to the registered phone number.

- ※1: If you use voice mail menu, you should register this service in operator. For details, see “Using voice mail” (P198).
- ※2: If you use call forwarding menu, you should register this service in operator. For details, please refer to the “Using Call Forwarding Service” (P201).

Using Public mode (drive mode)

Public mode is an auto-answer service that puts stress on manners in public spaces. When there is an incoming call in Public mode, a guidance to the effect that you cannot answer the call because you are driving a car or in a place (train, bus, theater, etc.) that requires restraint from using a phone is played for the caller and the call is disconnected.

- Public mode can be set/cancelled only from the stand-by display (in addition, from a screen showing “圏外”).
- You can make calls in Public mode.
- When there is an incoming call with “Deactivate caller ID notification” set while caller ID request service is “Activate”, a caller ID request guidance is played (no Public mode guidance is played).

Setting the Public Mode (drive mode)

1. On the stand-by display ► Press for 1 or more seconds.

- The Public mode is set and is appeared.

■ Releasing the Public Mode

- On the stand-by display, press  for 1 or more seconds. The Public mode is released, and  is disappeared.

In Public mode

No ring alert sounds when there is an incoming voice/video-phone call. It is recorded as “Missed calls” in “Received calls” and displayed as “X Missed call” on the stand-by display.

- A guidance to the effect that you cannot answer the call because you are driving a car or in a place that requires restraint from using a phone is played for the caller and the call is disconnected.

Operations while Network Service and Public mode (drive mode) are both active

While Public mode (drive mode) and Network Service are both active at the same time, the FOMA phone operations as listed below. Depending on the settings and/or steps for making a call, Network Service may have precedence, disabling Public mode (drive mode) operations or recording or display of missed calls.

■ Voice Mail

When a voice call is received	When a video-phone call is received
A Public mode (drive mode) guidance is played for the caller and the call is connected to Voice Mail Service Center. ^{※1}	The call is terminated without being connected to the Voice Mail Service Center. ^{※2}

■ Call Waiting

When a voice call is received	When a video-phone call is received
A Public mode (drive mode) guidance is played for the caller and the call is disconnected.	In Public mode (drive mode), a Public mode (drive mode) video guidance is played for the caller and the call is disconnected.

■ Call Forwarding Service

When a voice call is received	When a video-phone call is received
A Public mode (drive mode) guidance is played for the caller and the call is connected to the forwarding destination. [※] Whether the guidance is played to the other party or not depends on the setting of the Call Forwarding Service.	The call is connected to the forwarding destination, with no Public mode (drive mode) video guidance played for the caller. [※]

Nuisance Call Blocking Service

When a voice call is received	When a video-phone call is received
<ul style="list-style-type: none"> For a call from a caller registered for nuisance call blocking, a call rejection guidance is played for the caller and the call is disconnected. For a call from a caller not registered, a Public mode (drive mode) guidance is played for the caller and the call is disconnected. 	<ul style="list-style-type: none"> For a call from a caller registered for nuisance call blocking, a call rejection video guidance is played for the caller and the call is disconnected. For a call from a caller not registered, a Public mode (drive mode) guidance is played for the caller and the call is disconnected.

Caller ID Request Service

When a voice call is received	When a video-phone call is received
<ul style="list-style-type: none"> For a call with no caller ID notified, a caller ID request guidance is played for the caller and the call is disconnected. For a call with caller ID notified, a Public mode (drive mode) guidance is played for the caller and the call is disconnected. 	<ul style="list-style-type: none"> For a call with no caller ID notified, a caller ID request video guidance is played for the caller and the call is disconnected. For a call with caller ID notified, a Public mode (drive mode) video guidance is played for the caller and the call is disconnected.

※: When voice mail or call forwarding ring time is “0 sec”, no Public mode (drive mode) guidance is played and the call is not recorded in Received calls.

- This handset is not applicable to Voice Mail (Video-phone call). Make a voice call to “1412” (free) and set not to be applicable to video-phone call.

Information

In Public mode, the following sounds are not generated:

- Ring alert for incoming voice/video-phone calls
- Ring alert for incoming mail
- Ring alert for incoming MessageR/F
- Wake-up alarm sound (the icon blinks)*
- Schedule alarm sound (the icon blinks)*
- Battery exhaustion alarm sound
- The sound of the i-appli started by the setting of auto-start.
- Battery charging confirmation sound

The alarm sounds after releasing the public mode (drive mode).

Using Public mode (power off)

Public mode is an auto-answer service that lays stress on manners in public spaces. Once you activate Public mode (power off), the guidance is played back telling that you cannot take the call as you are currently in a place (in hospital, airplane, or in around priority seat in a train) where use is prohibited. Then the call is disconnected.

Activate Public mode (power off)



- Public mode (power off) is set. (Nothing is changed in the Stand-by display.)

- After setting Public mode (power off) and turning off the power, the guidance “The person you are calling is currently in an area where use is prohibited. Please try again later.” is played back for incoming calls.

■ **To release Public mode (power off)**



■ **To check Public mode (power off) for the setting,**



When Public mode (power off) is activated

When there is an incoming voice call, the guidance is played back to the caller telling that you are currently in an area where use is prohibited, and then the call is disconnected. When there is an incoming video-phone call, the video-guidance of the public mode is played back to the caller, and then the call is disconnected.

- This setting is continued until you release the setting by dialing “*25250”. If you just switch on, this setting is not released.
- The Public mode (power off) guidance is played back even when you are out of the service area or radio waves do not reach.

Activating between network services and Public mode (power off)

If you use Public mode (power off) and Network service at the same time, the operation will be activated as follow. Depending on the setting or calling, the network service can be preferred, so the activation of Public mode (power off) or the record of missed call may not be displayed.

■ **Voice Mail**

Response to Incoming Voice calls	Response to Incoming Video-phone calls
Plays back the Public mode (power off) guidance to caller, and then the call is connected to the Voice mail Service Center. ※1	The call is terminated without being connected to the Voice Mail Service Center. ※2

■ **Call Forwarding Service**

Response to Incoming Voice calls	Response to Incoming Video-phone calls
Plays back the Public mode (power off) guidance to caller, and then the call is forwarded to the forwarding destination. ※1 The guidance depends on setting of Call Forwarding Service.	Does not play back the video guidance for Public mode, and the call is forwarded to the forwarding destination. If the destination does not support video-phone call, the call is disconnected.

Nuisance Call Blocking Service

Response to Incoming Voice calls	Response to Incoming Video-phone calls
<ul style="list-style-type: none"> When the caller is registered to the Nuisance Call Blocking Service, the guidance of the call rejection is played to the caller and the call is terminated. In other cases, the guidance of the public mode (power off) is played to the caller and the call is terminated. 	<ul style="list-style-type: none"> When the caller is registered to the Nuisance Call Blocking Service, the image guidance of the call rejection is played to the caller and the call is terminated. In other cases, the guidance of the public mode (power off) is played to the caller and the call is terminated.

Caller ID Display Request

Response to Incoming Voice calls	Response to Incoming Video-phone calls
<ul style="list-style-type: none"> For the caller without a caller ID, plays back the Caller ID Request guidance, and then the call is disconnected. For the caller with a caller ID, plays back the Public mode (power off) guidance, and then the call is disconnected. 	<ul style="list-style-type: none"> For the caller without a caller ID, plays back the video guidance for Caller ID Request, and then the call is disconnected. For the caller with a caller ID, plays back the video guidance for Public mode (power off), and then the call is disconnected.

※1: When voice mail or call forwarding ring time is set to “0 sec”, no Public mode (power off) guidance is played.

※2: This handset is not applicable to Voice Mail (Video-phone call). Make a voice call to “1412” (free) and set not to be applicable to video-phone call.

Making/Receiving Video-phone calls

About Video-phone	58
Making Video-phone Calls.....	58
Receiving Video-phone Calls.....	60
Changing Settings for Video-phone Calls.....	61

Making/Receiving Video-phone calls

About Video-phone

When both you and the other party use DoCoMo's video-phones, you can talk seeing each other's image.

- DoCoMo video-phones conform to 3G – 324M^{※2} standardized by the international standard 3GPP^{※1}. You cannot connect to the video-phone that uses a different format.
 - ※1 : 3GPP (3rd Generation Partnership Project) is the regional standards organization for developing common technical specifications for third-generation mobile telecommunications systems (IMT-2000).
 - ※2 : 3G-324M is the international standard for the third generation of mobile video-phones.
- The video-phone call is activated at the speed of 64K bytes.

Making Video-phone Calls

1. Enter the other party's phone number

- The Enter Phone Number screen (P48) is displayed.

2. Start talking when the other party answers



- The other party's image
- The volume during a call
- Call duration
- Own image

<Talking Display>

Mark	Description
 	Speaker phone ON/OFF
  /  	Zooming magnification

- The voice of the other party is heard from the speaker when the call starts.
- Press  for 1 or more second: You can switch ON/OFF the speaker phone.
-  [Image]/[Camera]: You can switch between Substitutive image and your photo image for sending to the other party.
-  [Hold]/[Active]: You can put the call on hold or release hold. While the call is put on hold, a substitutive image is sent to the other party.
- : Rotate an image.

3. Press to end the call after talking

Information

- See “International Calls” (P50) for how to make international calls.
- When the Flat-plug Earphone/Microphone Set with Switch (option) is attached, you can only talk on the Earphone/ Microphone regardless of whether the speaker phone is ON/OFF.

Using the Submenu of the Enter Phone Number screen

See “Using the Submenus of the Enter Phone Number screen” (P48) of voice calls for the submenus available.

Using the Submenus of the Talking screen

Setting item/Setting at purchase → P253

1. From the Talking screen (P58), [Menu] ► Select from the following submenu items

End call

The call is disconnected.

Hold

You can put the call on hold. You can cancel the function by pressing [Active].

Substitutive image/Camera image

You can switch to the Substitutive image for sending to the other party. → P94

Camera settings

You can set the camera of Video-phone call. You can select the icon by pressing [Active]. After setting, press [Close].

- [Zoom] **Zoom** : The camera image is zoomed. (x1/x2)
- [Brightness] **Brightness** : You can change the brightness of photo images.
- [Night mode] **Night mode** : You can set it up when using the camera in a dark place.

Video-phone settings

You can set the display of Video-phone call. After setting, press [Done]. → P93

- **Display setting** : You can set the display method for the Talking screen.
 - Both : The other party's image and your image are displayed.
 - Other : Only the other party's image is displayed.
 - Me : Only your image is displayed.
- **Sub screen** : If you select "Both" of "video-phone settings", you can set the image which displayed each screen.
 - Me : Only your image is displayed.
 - Other : Only the other party's image is displayed.
- **Display light**: You can set the lighting method of the backlight on the Talking screen.
 - Always on : Always lights during a call.
 - Terminal setting : Follows the settings on the "Main screen" of the "Backlight". → P83

Sending image quality

You can set the quality of images to be sent to the other party.

- **Normal** : Sends images in standard quality and motion speed.
- **Prefer motion quality** : Sends images laying stress on motion speed. Prefer motion quality is effective for moving images.
- **Prefer image quality** : Sends images laying stress on image quality. Prefer image quality is effective if there is little motion.

Making/Receiving Video-phone calls

Making a Video-phone call from the Dialed/Received Call Record

1. On the Stand-by display, ► **Select a history** ►

Information

- See “Using the Submenu of the Received Call Record Screen” (P86) for the submenu.

Making a Video-phone Call from the Phonebook

1. On the Stand-by display , or **Search for phonebook entries (P66)** ► **Select a party to call** ►

When multiple phone numbers are registered, press to display the Select call number screen, then select the phone number and press [Call].

Information

- To switch the phonebook to display between the FOMA phone and UIM, select [Menu] → Select “View handset” / “View UIM”.

Adjusting the Volume

1. Press during a call.

Information

- The changed volume is held even after ending the call.

Receiving Video-phone Calls

1. When you receive a call,



The other party's image ^{※1}

The other party's name ^{※2}

The other party's phone number

※1 : Displayed only when the other party's image is registered in the phonebook.

※2 : In case the other party's information is not registered in the phonebook, “Unregistered” will be displayed.

<Ringing Display>

- [Image]: You can receive a call. The substitutive image will be sent to the other party.
- : You can put the call on hold. The holding image will be sent to the other party. If you press , you can answer the call.
- : Rotate an image.
- If you close the handset while a call is incoming, the call will be rejected.

2. **to end the call after talking**

Information

- When inserting the switch of the Flat-plug Earphone/Microphone set with Switch (option), you can connect a call by earphone regardless of Speakerphone ON/OFF.
- If you answer a video-phone call by pressing the switch of the Flat-plug Earphone/Microphone set with Switch (option) when closing the flip, the substitutive image will be sent.

Using the Submenus of the Ringing screen

See “Using the Submenus of the Ringing screen” (P51) of voice calls for the submenus available. Note that “Voice mail” is not displayed for video-phone calls.

Changing Settings for Video-phone Calls





You can set the operation and display for video-phone calls. See “Setting Operation and Display for video-phone Calls” (P93) and “Selecting an Image for video-phone Calls” (P94) for details of the settings.



Adding to Phonebook	64
Searching for Phonebook Entries.....	66
Checking the Number of Saved Phonebook Entries.....	70
Setting Phonebook.....	70
Setting Groups	71
Displaying Own Number	72

Phonebook

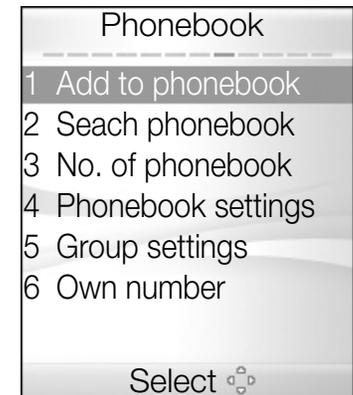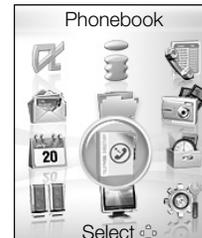

To display the Phonebook menu

On the Stand-by display,  [Menu]   (Phonebook) or “Phonebook”

Adding to Phonebook



2 types of phonebooks are available, the phonebook saved in the handset of the FOMA phone and the phonebook saved in UIM.

1. From the Phonebook menu (P63), “Add to phonebook”



<Saving Phonebook Entries>

2. Select an item to save

Handset / **FOMA card (UIM)**

Select a storage location of the Phonebook (Handset / UIM).

Name

Enter a name. Unless you enter a name, the Phonebook entry cannot be saved.

Reading

Enter reading of the name. Automatically inserted if you enter “Name”.

Number 1 ~ 5^{※1}

Enter a phone number. If you press  [Icon] after entering, you can set a mark other than .

Mail addr 1 – 3^{※1}

Enter a mail address. If you press  [Icon] after entering, you can set a mark other than .

Group (Handset)/ **Group FOMA card (UIM)**

Select a group to save.

Image^{※2}

Select an image to be displayed on dialing / receiving calls screen, talking screen, phonebook list screen and phonebook detail screen.

– **No image** : No image is set.

– **Character**: You can set the character. Select the part (Face, Hair, Tops, Bottoms, Acc., Scenery) by pressing , and then select the item by pressing . After setting, press .

– **Select picture** : You can select from images saved in “My picture” of “Data box”. → P166

– **Take picture**: You can start a camera. Go to step 2 on page 109 of “Shooting Still Images”. The size of image 80x96 cannot be changed.

Set ringtone^{※2}

You can set a ring tone for when you receive a voice / video-phone call from registered caller.

– **Data box** : You can select from melodies saved in “Melody” of “Data box”. →P176

– **Terminal setting** : Go to the settings of “Select ring tone”. → P76

Set mail ringtone ※2

You can set a ring tone for when you receive mail from registered party.

– **Data box**: You can select from melodies saved in “Melody” of “Data box”. → P176

– **Terminal setting**: Follows the settings of “ringtone”. → P76

URL ※2

You can enter a URL.

Postal code ※2

You can enter a postal code.

Home addr. ※2

You can enter a home address.

Company name ※2

You can enter a company name.

Job title ※2

You can enter a job title.

Company addr. ※2

You can enter a company address.

Memo ※2

You can enter a memo.

Secret Code ※3

Set to the secret code.

※1 : Only 1 entry can be saved if the storage location for the Phonebook is set to “FOMA card (UIM)”.

※2 : Not displayed if the storage location for the Phonebook is set to “FOMA card (UIM)”.

※3 : For secret code, refer to “Mobile Phone User's Guide [i-mode]”.

3. After storing,  [Save] ► Enter a memory number (0-499) ► 

Saving in UIM

1. From the Saving Phonebook Entries screen (P64), select the  (Handset) field ► Select  using 

2. Enter required items

- See (P64) of “Adding to Phonebook” for details of the items.

3.  [Save]

Information

- For phone numbers of the Phonebook saved in Memory No 0 – 9 (1 saved in “Number1”), if you press  ~  and then press  () from the Stand-by display, you can make a voice (video-phone) call.
- 500 Phonebook entries can be saved in the FOMA phone and 50 Phonebook entries can be saved in the UIM. Note that the number of savable entries may be smaller depending on the saved contents. → P70

Searching for Phonebook Entries



You can display the Phonebook in the FOMA phone / UIM specifying a search method.

1. From the Phonebook menu (P63), “Search phonebook”

- [UIM]/[Handset]: You can switch Phonebook Search screens between the FOMA phone and the UIM.

2. Select the following search method

Show all data

Press the buttons ~ corresponding to the 50 Japanese syllables (corresponding to Columns) for searching. If you press , you can search for Other item. You can switch tab of the 50 syllabary by pressing .

Group search

You can specify a group for searching. (Group 1~30 (FOMA Handset) / 1~10 (UIM)). After searching, you can switch groups by pressing .

Reading search

You can search by entering some of the characters contained in the reading of the name.

Memory No. search*

You can search by using a memory number (0-499). You can switch tab of the memory number by pressing .

Phone No. search

You can search by entering part of the phone number.

Domain search

You can search by specifying a domain. You can switch domains using .

- To create a domain to specify, see “Creating a domain list” (P70).

※: Not selectable on the Phonebook Search display of UIM.

3. The Phonebook List meeting the search method is displayed.

<Phonebook List>

- / : You can make a voice call or video-phone call to the selected phone number saved in phonebook. However, when multiple phone numbers are registered, press / to display the Select call number screen, then select the phone number and press [Call].

-  [Mail] : You can compose i-mode mail to selected mail address or phone number registered in the selected phonebook. Go to step 3 on page 149 of “Composing i-mode mail”. When multiple mail addresses or phone numbers are registered in the phonebook, press  [Mail] to display the destination selection screen, then select the destination.
※ : If the mail address or phone number is not registered in the phonebook, you cannot use this function.

4. Select the desired Phonebook ▶ 



<Detailed Phonebook>

-  /  : You can make a voice call or video-phone call to the phone number saved in phonebook. When multiple phone numbers are registered, the Select call number screen is displayed, and select the phone number and press  [Call].
-  [Call] : You can make a call to selected phone number.
-  [Mail] : You can compose an i-mode mail to selected mail address saved in phonebook. Go to step 3 on page 149 of “Composing i-mode mail”.

-  [Connect] : You can connect the web page of selected URL.

Using the Submenus of the Phone List display

Setting item/Setting at purchase → P253

1. From the Phonebook List screen (P60),  [Menu] ▶
Select from the following submenu items

View UIM^{※4}/FOMA phone phonebook display^{※6}

Switch between UIM phonebook and FOMA phone phonebook displays.

Search ctgry menu[※]

- **Handset^{※4}/UIM^{※6} Group settings** : After “Group search”, you can set the each displayed group in the phonebook list screen. Go to step 2 on page 71 of “Using the Submenus of the Group Settings screen”.
- **Input char chg**: You can switch entry modes for the Character Entry column displayed at the top of the phonebook list screen after “Reading search”.
- **Return to input**: You can return without “Input character change”.
- **Create domain list**: You can create a new domain list from the Phone List display after “Domain search”. Go to step 2 on page 70 of “Creating a Domain List”.

Mail/URL ^{※2}

- **Compose mail:** The mail address or phone number saved in the selected Phonebook is entered into the destination. Go to step 3 on page 149 of “Composing i-mode mail message”.
- **Compose SMS:** The phone number saved in the selected Phonebook is entered into the destination. Go to step 3 on page 152 of “Creating SMS”.
- **Connect to URL:** Connected to the web page with the URL saved in the selected Phonebook.

Add new

You can create a new phonebook. Go to step 2 on page 64 of “Adding to Phonebook” for items to be saved.

Edit

You can edit the selected Phonebook. Go to step 2 on Page 64 of “Adding to Phonebook” for items to be saved.

Send Ir data ^{※3}

For Infrared Communication, see “Using the Infrared Communication” (P182).

- **Focused data:** Send a selected phonebook entry via infrared communication.
- **All data:** Send all phonebook entries via infrared communication.

Search by

You can select another search method to display a phonebook. For the searching method, Go to step 2 on page 66 of “Searching for Phonebook Entries”.

Copy

- **Copy to UIM ^{※4}:** You can copy the Phonebook selected to the UIM.
- **Select copy to UIM ^{※4}:** You can copy multiple Phonebooks selected to the UIM. If you press , you can select “All data”. After selecting, press  [Done].
- **Copy to handset ^{※5}:** You can copy the Phonebook selected to the handset of the FOMA phone.
- **Select copy to handset ^{※5}:** You can copy multiple Phonebooks selected to the handset of the FOMA phone. If you press , you can select “All data”. After selecting, press  [Done].

Delete

- **Delete:** You can delete the selected Phonebook.
- **Delete selected:** You can delete the multiple Phonebooks selected. If you press , you can select all data. After selecting, press  [Done].
- **Delete all ^{※6}:** You can delete all Phonebooks. To delete all Phonebooks, your terminal security code is required.

Display image ^{※7}

If an image is registered in phonebook list, you can set whether to display the image or not. → P71

Int'l call (Japan) ^{※8}

Make a call to a phone number registered in the selected phonebook. → P227

This submenu appears only while International roaming service is active.

- ※1: You can use phonebook list by Group search except for “No group”, “Reading search”, “Phone No. search” and “Domain search”. You may not be able to select it depending on the search method or storage status of the selected Phonebook.
- ※2: You cannot select it if no phone number/mail address/URL is stored in the selected Phonebook.
- ※3: Not selected in Phonebook for UIM.
- ※4: Displayed on the Phonebook of the handset.
- ※5: Displayed on the Phonebook of the UIM.
- ※6: If you perform “Delete all” while checking new i-mode mail/SMS or activating i-appli, active functions are terminated and returns to Stand-by screen.
- ※7: No image is displayed on the Phonebook of the UIM.
- ※8: Does not appear within Japan.

Using the Submenus of the Detailed Phonebook Display

1. From the Detailed Phonebook screen (P67), [Menu] [Menu] ▶ Select from the following submenu items

Mail/URL ※1

- **Compose mail:** The mail address or phone number saved in the phonebook displayed is entered into the Address. Go to step 3 (P149) of “Composing i-mode mail message”.
- **Compose SMS:** The phone number saved in the phonebook displayed is entered into the Address. Go to step 3 (P152) of “Composing SMS”.
- **Connect to URL:** Connected to the homepage of the URL saved in the Phonebook displayed.

Edit

You can edit the phonebook. Go to step 2 on page 64 of “Adding to Phonebook”.

Send Ir data ※2

For details, please refer to “Using the Infrared Communication Function” (P182).

Copy to UIM ※3

You can copy the phonebook entry to the UIM.

Copy to handset ※4

You can copy the phonebook entry to the FOMA handset.

Delete

You can delete the phonebook entry.

Int'l call (Japan) ※5

Make a call to a phone number registered in the selected phonebook. → P227

- ※1: You cannot select it if no phone number/mail address/URL is stored in the selected Phonebook.
- ※2: Not selected in Phonebook for UIM.
- ※3: Displayed during displaying the Phonebook of the handset of the FOMA phone.
- ※4: Displayed during displaying the Phonebook of the UIM.
- ※5: Does not appear within Japan.

Checking the Number of Saved Phonebook Entries



You can check the number of phonebook entries saved in the handset of the FOMA phone and in the UIM as well as the number of phonebook entries available.

1. From the Phonebook menu (P63), “No. of phonebook”

Information

- Actual savable number of phonebook may be smaller depending on the contents saved in Phonebook.

Setting Phonebook

Setting Display Data



You can set whether to display the phonebook of the handset of the FOMA phone or the phonebook of the UIM when displaying a phonebook.

Setting item/Setting at purchase → P241, P242

1. From the Phonebook menu (P63), “Phonebook settings” ▶ “Display data” ▶ “Handset only”/“UIM only”

Creating a Domain List



You can store domains to be used when doing “Domain Search” (P66).

Setting item/Setting at purchase → P242

1. From the Phonebook menu (P63), “Phonebook settings” ▶ “Create domain list”

- ⓘ [Disp.]^{※1}: You can view all domain registered in a list.
- ✉ [Delete]^{※2}: You can delete the domain saved.

※1: You cannot use this menu when you select no input screen.

※2: You cannot use this menu when you select

“@docomo.ne.jp” or no input screen.

2. Select the domain list field ▶ ▶ Enter a domain

Selecting a Search Method



You can set the search method for when you press on the Stand-by display and bring up the phonebook search display.

Setting item/Setting at purchase → P242

1. From the Phonebook menu (P63), “Phonebook settings” ▶ “Search by” ▶ Select a search method

- Go to step 2 on page 66 of “Searching the Phonebook Entries” for the search method.

Information

- If the “Display data” (See left) is set to “UIM only”, you cannot select “Memory No. search”.

Displaying Images



You can set whether to display the image set when selecting a phonebook with “ (image setting)” set (P64) on the phonebook list screen.

Setting item/Setting at purchase → P242

1. From the Phonebook menu (P63), “Phonebook settings” ▶ “Display image” ▶ “ON”/“OFF”

Setting Groups



You can save the group name for Group of the phonebook. You can also set a ring tone for each group.

Setting item/Setting at purchase → P242

1. From the Phonebook menu (P63), “Group settings”

- Group settings display appears.
-  [UIM]/[Handset]: You can switch the Group settings displays between the FOMA phone (handset) and the UIM.

2. Select the group to set ▶ ▶ Select the following item to register ▶ After setting, press [Finish]

Group name

You can save the name of the group.

Ringtone[※]

You can set a ring tone for when a call comes in.

- **Data box:** You can select from the melodies stored in “Melodies” of “Data box”. →P176
- **Terminal setting:** Follows the settings of “ringtone”. →P76

Mail ringtone[※]

You can set a ring tone for when mail comes in.

- **Data box:** You can select from the melodies saved in “Melody” of “Data box”. →P176
- **Terminal setting:** Follows the settings of “Select ringtone”. →P76

※: Not displayed on the Group setting display of the UIM.

Information

- You cannot set to “No group”.

Using the Submenus of the Group Settings Screen

1. From the Group Settings screen,  [Menu]
 ▶ Select from the following submenu items

Reset^{※1}

You can reset the settings of the group selected.

Move^{※2}

You can change the order of the group selected.

Edit

You can edit the group selected. Go to step 2 (P71) of “Setting Groups”.

Reset all^{※3}

You can reset the settings and orders of all groups.

※1: You cannot use this menu when the selected group is not edited.

※2: You cannot use this menu in FOMA card group setting screen.

※3: You cannot use this menu when not moving or editing any group.

Displaying Own Number



You can display your phone number recorded in the UIM.

1. From the Phonebook menu (P63), “Own number”

- The Own number screen appears.

Information

- You can also check your own number by pressing   from the Stand-by display.

Displaying Details of Own Number

1. From the Own number screen,  [Detail] ▶ Enter your terminal security code ▶ 

- The Detail screen appears.
-  / : You can make a voice/ video-phone call by the number registered in. (except own number) When multiple phone numbers are registered, the Select call number screen is displayed, and select the phone number and press  [Call].
-  [Call][※]: You can make a voice call to the selected phone number.
 ※: You cannot use your own number.
-  [Mail]: You can compose i-mode mail to selected mail address. Go to step 3 on page 149 of “Composing i-mode Mail”.
-  [Connect]: You can connect the homepage of selected URL.

Using the Submenu of the Detail Screen

1. From the Detail Screen, [Menu] ► Select from the following submenu items

Mail/URL [※]

- **Compose mail:** The mail address registered in my number will be entered to destination. Go to step 3 on page 149 of “Composing i-mode Mail”.
- **Compose SMS ^{※2}:** The phone number registered in my number will be entered to destination. Go to step 3 on page 152 of “Composing SMS message”.
- **Connect to URL:** You can connect the homepage of URL registered in my number.

Edit

You can store your own information. For adding method, go to step 2 on page 64 of “Adding to Phonebook”. However, your number registered in “ (Own number)” cannot be edited.

Send Ir data ^{※3}

You can send your own number through infrared communication. For details related to infrared communication, go to “Using the Infrared Communication Function” on P182.

Reset ^{※4}

You can reset the edited own number information to its default.

※1: You cannot use this menu if the phone number/mail/URL are not registered.



※2: You cannot use the menu even if you operate the number registered in own number.

※3: You cannot use this menu during a call.

※4: You cannot use this menu when the own number information is not registered.



Sound/ Display

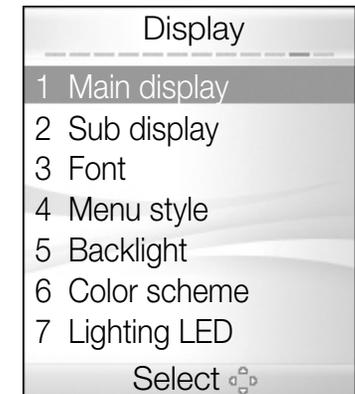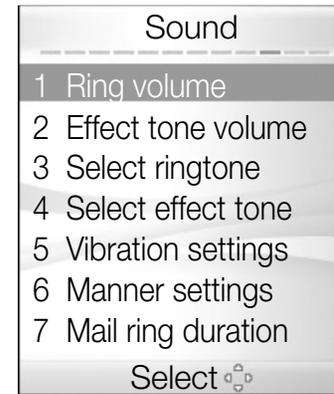

Adjusting the Ring Volume	76
Adjusting the Effect Tone Volume	76
Setting a Ring Tone	76
Setting an Effect Tone	77
Setting a Vibrator	78
Activating the Manner Mode	78
Setting Ringing Operations for Incoming Mail	79
Setting Ringing Time	80
Setting Main Screen	80
Setting Sub Display	82
Setting Fonts of Dial Characters	83
Setting Menu Style	83
Setting Backlight	83
Setting color Scheme	84
Setting LED	84

To display the Sound menu

On the Stand-by display,  [Menu] ►



(Sound) or “Sound”

To display the Display menu

On the Standby display,  [Menu] ►



(Display) or “Display”

Adjusting the Ring Volume



Setting items/Setting at purchase → P244

1. From the Sound menu (P75), “Ring volume” ▶
Select from the following adjustment items ▶
After setting,  [Done]

Voice call

You can adjust the ring tone volume for voice calls.

Video-phone

You can adjust the ring tone volume for video-phone calls.

Mail tone

You can adjust the ring tone volume for mail.

MessageR tone

You can adjust the ring tone volume for MessageR.

MessageF tone

You can adjust the ring tone volume for MessageF.

SMS tone

You can adjust the ring tone volume for SMS.

Information

- When you receive mail, messageR/F or SMS on opening the flip, the alarm sound will be fixed to level 1 regardless of each setting of “Ring volume”. However, if you set level 0 of ring tone, the alarm does not sound.

Adjusting the Effect Tone Volume



Setting items/Setting at purchase → P244

1. From the Sound menu (P75), “Effect tone volume” ▶
Select from the following adjustment items ▶
After setting,  [Done]

Key tone

You can adjust the key pad sound volume.

Power ON/OFF

You can adjust the tone volume for when turning the FOMA phone on/off.

Flip tone

You can adjust the tone volume for when opening or closing the FOMA phone.

Feedback tone

You can adjust the tone volume for when a popup appears.

Setting a Ring Tone



You can set the ring tone for voice call, video-phone call or mail. In addition to ring alerts and melodies registered by default, you can set melodies and/or i-motion downloaded from i-mode sites and web pages as incoming ring alerts. You can set the SMF, MFI or MP4 file as a ringtone.

- For the melody registered at purchase, see “List of melody” (P251).

Setting items/Setting at purchase → P245

1. From the Sound menu (P75), “Select ringtone” ▶

Select from the following adjustment items ▶

After setting, [Done]

- Select from the melodies stored in “Melody” or “i-motion” in “Data box” respectively. →P176
- On a folder list screen, press  to switch between “Melody” and “i-motion”.

Voice call

You can select a ring tone for voice calls.

Video-phone

You can select a ring tone for video-phone calls.

Mail tone

You can select a ring tone for mail.

MessageR tone

You can select a ring tone for messageR.

MessageF tone

You can select a ring tone for messageF.

SMS tone

You can select a ring tone for SMS.

Information

- If you have set a ring tone depending on the voice call/ video phone call/ Mail, the ring tone is preferred. The priority order is as follows:
 - ① Ringtone set in the FOMA phone’s phonebook → Set the

phonebook (P64)

- ② Ringtone set for a group of the FOMA phone’s phonebook → Set group (P71)
- ③ Ringtone volume/Video call ring tone/Mail, Message ring tone → Select the ring tone (P76)

Setting an Effect Tone



Setting items/Setting at purchase → P245

1. From the Sound menu (P75), “Select effect tone” ▶

Select from the following adjustment items ▶ After setting, [Done]

Key tone

You can set to emit an effect tone for when you touch the buttons. The effect tone does not sound when setting to “OFF”.

Power ON/OFF

You can set whether to emit an effect tone for when you switch ON/OFF the FOMA phone.

Flip tone

You can set whether to emit an effect tone for when you open/close the FOMA phone.

Feedback tone

You can set whether to emit an effect tone for when a popup appears.

Setting a Vibrator



Setting items/Setting at purchase → P245

1. From the Sound menu (P75), Vibration settings ▶
Select from the following setting items ▶ After setting, [Done]

Incoming call

You can select a vibration pattern for when a voice call or a video-phone call comes in.

- **melody+vibration:** The vibration and the melody for incoming call are activated at the same time.
- **Pattern 1(Vibration only):** This activates the vibration to pattern 1. Regardless of ring tone, the tone for incoming call does not sound.
- **Pattern 2(Vibration only):** This activates the vibration to pattern 2. Regardless of ring tone, the tone for incoming call does not sound.
- **OFF:** The vibration is not activated in FOMA phone.

Message

You can set a vibration pattern for when mail, messageR/F or SMS comes in.

- **melody+vibration:** The vibration and the melody for incoming call are activated at the same time.
- **Pattern 1(Vibration only):** This activates the vibration to pattern 1. Regardless of ring tone, the tone for incoming call does not sound.

- **Pattern 2(Vibration only):** This activates the vibration to pattern 2. Regardless of ringtone, the tone for incoming call does not sound.
- **OFF:** The vibration is not activated in FOMA phone.

Activating the Manner Mode

You can set whether to mute the ring tone, key pad sound and any other sound from the speaker to avoid annoying people around you. If the manner mode is activated, an incoming call or alarm, etc. is notified with vibrator.

- You can change the activation on setting manner mode to “Original manner mode”. → P79

1. From the Stand-by display, press  for 2 or more seconds

- The handset of the FOMA phone vibrates displaying  (blue/in the Original manner mode) or  (pink/in the Manner mode).
- You can cancel it by pressing  for 2 or more seconds with the Manner mode activated.

Changing Manner Modes



You can change operations in the Manner mode.

Setting at purchase → P245, P246

1. From the Sound menu (P75), “Manner settings” ▶
Select from the following setting items

Manner mode

You can set the Manner mode.

Original manner mode

You can customize operations in the Manner mode.
After setting, press  [Done].

- **Incoming call sound:** You can set whether to make the ring tone sound when a voice call or video-phone call comes in.
- **Incoming call vib.:** You can set whether to vibrate the phone when a voice call or video-phone call comes in.
- **Message sound:** You can set whether to make the ring tone sound when mail, messageR/F or SMS comes in.
- **Message vibration:** You can set whether to vibrate the phone when mail, messageR/F or SMS comes in.
- **Key tone:** You can set whether to make the key operation sound when you do key operations.
- **Flip tone:** You can set whether to make an effect tone sound when you open or close the FOMA phone.
- **Low battery tone:** You can set whether to make a battery alarm tone sound when the battery is flat.

Information

- The following sounds are emitted even when the manner mode is activated.

- The shutter tone on shooting still and moving image. → P110
- The alert tone for disconnecting a call. → P48, P51
- The alert tone to reconnect → P91
- The alert tone for the quality of calling → P92
- If you try to play the melody, moving image or i-motion on manner mode, the confirmation screen appears and you can select whether to play with sounds.

Setting Ringing Operations for Incoming Mail

You can set whether to make the ring tone sound when mail or SMS comes in. You can also set ringing duration and cycle of rings.

Setting items/Setting at purchase → P246

1. **From the Sound menu (P75), “Mail ring duration” ▶ Select from the following setting items ▶ After setting,  [Done]**

Mail ring ON/OFF

You can set whether to make the ring tone sound when mail comes in. If you select “ON”, you can set the ringing duration or cycle of ringing.

Mail ring duration

You can set ringing time and number of rings for the ringing tone.

- **Time:** After selecting Sec. section by pressing , you can enter the duration of ringing.

- **Cycle:** After selecting Cycle section by pressing , you can enter the number of cycle.

Setting Ringing Time



You can specify the mute time in seconds before ringing starts when a voice call or video-phone call which is not registered in phonebook comes in. This function is effective as a countermeasure for nuisance calls such as 1 ring phone scam.

Setting items/Setting at purchase → P246

1. From the Sound menu (P75), Select “Set mute seconds” ▶ Enter ring time. ▶  [Done]

Information

- If the voice call or video-phone call which are not registered in phonebook disconnects within the setting ringing time, they are not recorded in received call list.

Setting Main Screen

You can set the display for stand-by display or Incoming/outgoing screen as Main display.

You can set the maximum of the image size of 1280 x 1024, the file size of JPEG file to 700K bytes and the file size of GIF file to 500K bytes on the Stand-by display.

Depending on the image, some cannot be set properly.

- When the image saved in stand-by mode, making and receiving a call at purchase, please refer to “Pre-installed data” (P260)

Setting the Stand-by Display



You can set wallpapers and clock displays for the Stand-by display.

Setting items/Setting at purchase → P246

1. From the Display Menu (P75), “Main display” ▶ “Stand-by display” ▶ Select from the following setting items ▶ After setting,  [Done]

Wallpaper

– Select type field [※]

- Select file ... Select an image saved in “My picture” of “Data box” from “Select file/Clock theme field”.
- Clock theme ... Select a clock theme from “Select file/Clock theme field”.

– **Select file/Clock theme field [※]:** Select an image (P166) or a clock theme saved in “My picture” of “Data box”.

- The selectable items may differ depending on the settings of “Select type field”.

Display items^{※2}– **Select display type field**^{※1}

- Clock ... Display a digital clock on the stand-by screen. You can select the type of the clock by “Select clock/city field”.
- Dual clock ... Display 2 cities and times on the stand-by screen. You can select the city of the second time displayed lower by “Select clock/city field”.^{※3}
- Calendar + Clock ... Display both calendar and clock on the stand-by screen. You can select the font color of the clock by “Clock font color”.
- Do not show ... Do not display the clock on the stand-by screen.

– **Select clock/city field**^{※1}^{※4}: Select the type of the digital clock or a city.

- The selectable items may differ depending on the settings of “Select display type field”.

Clock font color^{※5}

Set the font color of the clock display.

- ※1: Actually, the name of the selected item is displayed.
- ※2: Not displayed when you select “Clock theme” by “Select type field”.
- ※3: You can change the displayed city name also by “World time” → P187
- ※4: Not displayed when you select “Do not show”/“Calendar + Clock” by “Select display type field”.
- ※5: Displayed only when you select “Calendar + clock” or “Digital 4” of “Clock” by “Select display type field”.

Information

- If you press  [View], you can confirm the display set.

Setting the Display for Incoming Calls

You can set the image displayed when you receive an incoming call.

Setting items/Setting at purchase → P246

1. From the Display Menu (P75), “Main display” ▶ “Incoming call”

- Select from the images saved on “My picture” of “Data box”. → P166

Setting Display for Outgoing Calls

You can set the image displayed when you make a call.

Setting items/Setting at purchase → P246

1. From the Display Menu ▶ “Main display” ▶ “Outgoing call” (P75)

- Select from the images saved on “My picture” of “Data box”. → P166

Setting Sub Display

You can set images of the stand-by display for Sub display and displays for incoming and outgoing calls. You can set the maximum of the image size of 1280 x 1024, the file size of JPEG file to 700K bytes and the file size of GIF file to 500K bytes on the stand-by display. Some images cannot be set properly.

- When the image saved in stand-by mode, making and receiving a call at purchase, see “Pre-installed data at purchase” (P260)

Setting Stand-by Display



You can set wallpapers and clock displays on the Stand-by display.

Setting items/Setting at purchase → P246, P247

1. From the Display Menu (P75), “Sub display” ▶ “Stand-by display” ▶ Select from the following setting items ▶ After setting, [Done]

Wallpaper

– Select type field [※]

- Select file ... Select an image saved in “My picture” of “Data box” from “Select file/Clock theme field”.
- Clock theme ... Select a clock theme from “Select file/Clock theme field”.

- Select file/Clock theme field ^{※1}: Select an image (P166) or a clock theme saved in “My picture” of “Data box”.
- The selectable items may differ depending on the settings of “Select type field”.

Display items ^{※2}

You can set the display format for the clock.

※1: Actually, the name of the selected item is displayed.

※2: Does not appear when a wallpaper is set as stand-by theme.

Information

- You can view the screen after setting by pressing [View].

Setting Display for Incoming Calls



You can set the image to be displayed when you receive a call.

Setting items/Setting at purchase → P247

1. From Display Menu (P75), “Sub display” ▶ “Incoming call”

- Select from the images saved on “My picture” of “Data box”. → P166

Setting the Display for Outgoing Calls



You can change the image to be displayed when you make a call.

Setting items/Setting at purchase → P247

1. From Display Menu (P75), “Sub display” ▶ “Outgoing call”

- Select from the images saved on “My picture” of “Data box”. → P166

Setting Fonts of Dial Characters



You can set the sizes and colors of the dial fonts displayed when you make a call, etc.

Setting items/Setting at purchase → P247

1. From the Display Menu (P75), “Font” ▶ Select from the following setting items ▶ After setting, [Done].

Dial font size

Select a size of dial fonts.

Dial font color

Select a color of dial fonts.

Setting Menu Style



You can set the style of the Menu Style that appears when pressing [Menu] on the Stand-by display.

Setting items/Setting at purchase → P247

1. From the Display Menu (P75), “Menu style” ▶ “Grid”/“List” ▶ [Done]

Setting Backlight



You can set the lighting duration of the Main screen, Sub display or buttons.

Setting items/Setting at purchase → P247

1. From the Display Menu (P75), “Backlight” ▶ Select from the following setting items ▶ After setting, [Done].

Main display

Set the lighting duration and brightness of the Main screen.

Sub display

Set the lighting duration and brightness of the Sub display.

Keypad

Set the lighting duration of the buttons.

Setting color Scheme



You can set the color scheme of the Main screen.

Setting items/Setting at purchase → P247

1. From the Display Menu (P75), “Color scheme” ▶ Select the color scheme you want to set ▶ ⓘ [Done].

Information

- If you press ⓘ [View], you can view the screen after setting.

Setting LED



Set lighting for incoming voice calls, etc.

Setting items/Setting at purchase → P247, P248

1. From Display menu (P75), “Lighting LED” ▶ Select next item to be set ▶ ⓘ [Done]

Lighting

Set whether to set lighting.

Incoming voice call

Set lighting pattern and color used for incoming voice calls.

Incoming video call

Set lighting pattern and color used for incoming video-phone calls.

Receiving mail

Set lighting pattern and color used for incoming mail.

Receiving message R

Set lighting pattern and color used for incoming MessageR.

Receiving message F

Set lighting pattern and color used for incoming MessageF.

Receiving SMS

Set lighting pattern and color used for incoming SMS.

Playing music

Set lighting pattern and color used when playing music.

Alarm

Set lighting pattern and color used for alarm.

Schedule

Set lighting pattern and color used for scheduled alarm.

During call

Set lighting pattern and color used during talking over a call.

Settings

Call/Answer	86
Call Feature	91
Video-Phone	93
Date & Time	95
Network (for overseas use)	96
Changing a Host from i-mode	98
Security.....	99
バイリンガル.....	101
Others Settings.....	101

To display the Settings menu

On the Stand-by display,  [Menu] 
 (Settings) or “Settings”

Call/Answer

Checking Call/Mail History

Displaying Received Call Records



You can view the record of received call.

1. From the Settings menu (P85), “Call/Answer” ▶ “Call/Mail history” ▶ “Received calls”



This list will be displayed when the phone number in a list are registered in phonebook list. You can view the list by pressing .

<Received Calls>

Icon	Description
	Received voice calls
	Received video-phone calls
	Rejected calls
	Missed calls (Voice calls)
	Missed calls (Video-phone calls)

- / : You can make a call to the other party of the record being selected.
- [Delete]: You can delete the record being selected.

2. Select a call record ▶

090XXXXXXXX

2006/12/01

12:34

03:30:00

—When you select “Missed call history”, “Ringing time” is displayed.

<Detail>

- / : You can make a call to the other party in a list.
- [Delete]: You can delete the list of call record.
- : You can view the call record.

Using the Submenu of the Received Calls screen/

Details screen

1. From the Received Calls screen (See left)/Detail screen (See above), [Menu] ▶ Select from the following submenu items

View ^{※1}

You can view details of the call record selected.

Add to phonebook^{※2}

Register a selected/displayed phone number in the history newly/additionally to a phonebook. Go to step 2 (P64) in "Adding to phonebook".

Send mail^{※3}

Create i-mode mail with a destination set to a mail address saved in phonebook. Go to step 3 (P149) of "Composing i-mode mail message".

Delete

You can delete the call record selected/displayed.

Delete all^{※4}

You can delete all the call records.

Go to list^{※4}

You can return to the screen of received call list (P86).

※1: Not displayed in submenu of detail screen.

※2: Not displayed if information on the caller of the call record selected is stored in the phonebook.

※3: When you compose a mail on the Received Calls screen, the phone number or the mail address that the cursor is placed on at the bottom of the screen will be entered as the destination. When you compose a mail on the Detail screen, the mail address which is saved in the phonebook will be entered as the destination. However, when no mail address is registered, phone number is entered as the destination.

※4: Displayed in submenu of detail screen.

Displaying Dialed Call Records

You can view dialed call records.

**1. From the Settings menu (P85), "Call/Answer" ▶
"Call/Mail history" ▶ "Dialed calls"**

- The Dialed Call Records appears.

Mark	Description
	Dialed voice calls
	Dialed video-phone calls

2. Select a history ▶

- The Detail screen appears.

Information

- See "Using the Submenu of Received Calls Screen"/"Using the Submenu of the Detailed Screen" (P86) for the display operation method and the submenus available from the Dialed call records/Detail screen.
- "Dialed calls" appears as the Redial screen when you press on the stand-by screen.

Displaying All Call Records

Received and dialed call records are displayed together.

**1. From the Settings menu (P85), "Call/Answer" ▶
"Call/Mail history" ▶ "All calls"**

- The All calls screen appears.

2. Select a history ▶

- The Detail screen appears.

Information

- See “Using the Submenu of Received Call Records Screen” / “Using the Submenu of the Detailed Screen” (P86) for the display operation method and the submenus available from the All Calls screen / Detail screen.

Displaying received mail history



Display history of received mail.

1. From Settings menu (P85), select “Call/Answer” ▶ “Call/Mail history” ▶ “Recv. mails”

- A history of the received mail appears.

2. Select a history ▶

- Detail screen appears.

Information

- See “Using the Submenu of Received mail history Screen” / “Using the Submenu of the Detailed Screen” (P86) for the display operation method and the submenus available from the All Calls screen / Detail screen.

Displaying sent mail history



Display history of sent mail.

1. From Settings menu (P85), select “Call/Answer” ▶ “Call/Mail history” ▶ “Sent mails”

- A history of sent mail appears.


2. Select a history ▶

- Detail screen appears.

Information

- See “Using the Submenu of Received Call Records Screen” / “Using the Submenu of the Detailed Screen” (P86) for the display operation method and the submenus available from the All Calls screen / Detail screen.

Displaying all mail history

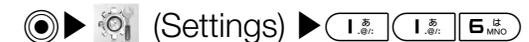

Display history of all sent/received mail collectively.

1. From Settings menu (P85), select “Call/Answer” ▶ “Call/Mail history” ▶ “All mails”

- A history of all mail appears.

2. Select a history ▶

- Detail screen appears.

Information

- See “Using the Submenu of Received mail history Screen” / “Using the Submenu of the Detailed Screen” (P86) for the display operation method and the submenus available from the All Calls screen / Detail screen.

Displaying Call Time



You can confirm call duration for each call type. You can confirm the following items:

- The displayed call duration is a standard. The real of call duration may differ.

1. From the Settings menu (P85), “Call/Answer” ▶ “Call duration”

- Call duration display appears.

Last call

You can confirm the last call duration.

Received calls

You can confirm the received call duration.

Dialed calls

You can confirm the dialed call duration.

All calls

You can confirm the total call duration.

Information

- If the display of call time exceeds “9999999:59:59”, the setting will be reset to “000000:00:00”.

Resetting call duration

1. Select a call duration you want to clear on the Call duration screen ▶ [Reset] ▶ Enter your terminal security code ▶ ▶ “Yes”

- To clear all the call durations ▶ [Menu] ▶ “Reset all”

Setting Earphone/Microphone Auto Answer



You can set how to answer an incoming call with the Flat-plug Earphone/Microphone Set with Switch (option) connected.

Setting item/Setting at purchase → P249

1. From the Settings menu (P85), “Call/Answer” ▶ “Auto answer” ▶ Select from the following setting items ▶ After setting, [Done]

Auto answering

You can set the earphone/microphone auto answer to ON/OFF.

Delayed time (SEC) (0-120)

You can set the time between receiving call and answering a call automatically.

Information

- During a phone number display, you can make a call by pressing the switch.
- While receiving a call, you can connect it by pressing the switch.
- During talking over a call, you can end the call by pressing the switch for 1 or more seconds.
- If you press the switch for 1 or more seconds while receiving a call, the call will be rejected.

Setting to Reject/Accept Incoming Calls



You can set whether to reject incoming calls.

Setting item/Setting at purchase → P249

1. From the Settings menu (P85), “Call/Answer” ▶ “Reject/Accept call” ▶ Enter your terminal security code ▶

- The Reject/Accept call display appears.

2. Select from the following setting items

Accept

You can set whether to accept all incoming calls.

Reject on list

You can reject the incoming call from the specific parties. You can set the rejecting action and the party's phone number to reject a call by pressing [List] (See below).

Reject all calls

- **Silent** : You can disable the ringing tone for all incoming calls.
- **Disconnect call** : You can reject all incoming calls.

Memory reject call

You can reject calls from parties not registered in phonebook and those with no caller IDs.

Information

- Even when rejecting a call by “Reject on list”, “Reject all calls”, or “Memory reject call”, the record will be remained.

Setting Reject call List

1. From the Reject/Accept call display (See left), Select “Reject on list” ▶ [List]

- The Reject on list will be displayed.

Mark	Description
	The type of reject call is set to “Silent”.
	The type of reject call is set to “Disconnect call”.

- [Menu]: You can edit/delete the list set.

2. [Add] ▶ Select from the following setting items ▶ After setting, [Done]

Reject types

- **Silent** : Disables the ring tone when receiving the call from the other party set to “Reject number”.
- **Disconnect call** : Rejects incoming calls when receiving the call from the other party set to “Reject number”.

Reject number

Enter the phone number of a caller you want to reject. You can select a phone number from the phonebook by pressing [Search] *.

*: If you use [Menu] → Edit from “Reject on list”, you cannot use this function.

Setting an Answer Mode



You can set whether to answer a voice call by pressing a button other than .

Setting item/Setting at purchase → P249

1. From the Settings menu (P85), “Call/Answer” ▶ “Answer mode” ▶ Select from the following setting items

Press send key

You can answer a call by pressing  only.

Open flip

You can answer a call by opening the FOMA phone. If the FOMA phone is already open, you can answer a call by pressing .

Press any key

You can answer a call by pressing any key except for , , , .

Information

- This setting is not available for video phone call.

Call Feature

Setting the Reconnect Control



You can set whether to make an alarm sound to inform you when you are reconnected immediately after disconnected owing to bad radio wave conditions.

Setting item/Setting at purchase → P249

1. From the Settings menu (P85), “Call feature” ▶ “Reconnect alarm” ▶ Select from the following setting items

High alarm

Set high alarm sounds.

Low alarm

Set Low alarm sounds.

No alarm

No sound.

Information

- The time to reconnect the network may differ depending on the status of phone or radio (the maximum 10 seconds).
- The duration to reconnect the network can be chargeable.
- Depending on the status of phone or radio, the alarm may not sound, and the call may be disconnected.

Setting Quality Alarm



You can set whether to make an alarm sound to inform you when a call is liable to be disconnected midway because of bad radio wave conditions.

Setting item/Setting at purchase → P250

1. From the Settings menu (P85), “Call feature” ▶ “Quality alarm” ▶ Select from the following setting items

High alarm

Set high alarm sounds.

Low alarm

Set low alarm sounds.

No alarm

No sounds.

Setting Minute Reminder



You can check the call duration by beep sound every minute during a voice call (Not support this function for Video-phone call).

Setting item/Setting at purchase → P249

1. From the Settings menu (P85), “Call feature” ▶ “Minute reminder” ▶ “ON”/“OFF”

Information

- This setting is not available with a video-phone call.

Setting Prefix Dial



You can store prefix numbers such as international access code or “184 / 186” and add it to the beginning of the phone number to dial.

Setting item/Setting at purchase → P249

1. From the Settings menu (P85), “Call feature” ▶ “Prefix dial”
 - The Prefix Dial screen appears.
2. Select a PREFIX field to enter ▶ Enter a number ▶ [Done]

Setting International Dial

Setting Auto assist



You can set whether to automatically replace “+” at the beginning of a phone number with an international access code such as “009130010” for making an international call.

Setting item/Setting at purchase → P249

1. From the Settings menu (P85), “Call feature” ▶ “International dial” ▶ “Auto assist setting” ▶ “Auto”/“OFF”

Setting IDD prefix



You can set the international access code to be added to the beginning of a phone number for making an international call.

Setting item/Setting at purchase → P249

1. From the Settings menu (P85), “Call feature” ▶ “International dial” ▶ “IDD prefix setting” ▶ Select from the following setting items ▶ After setting, ⓘ [Done]

IDD prefix name

Enter the name of an international call service.

IDD prefix code

Enter an international access code.

Setting Close setting



You can set how the FOMA phone works when it is folded.

Setting item/Setting at purchase → P249

1. From the Settings menu (P85), “Call feature” ▶ “Close setting” ▶ Select from the following setting items

End the call

The call is disconnected.

Continue(Mute)

Put the call on mute without emitting Continue (Mute) holding sound. In this case, your voice is not heard to the other party.

Information

- During video-phone call, if you close the flip, the call will be disconnected regardless of this setting.

Video-Phone

You can change settings for the video-phone operation and display.

Changing the Video-Phone Settings



You can set how the FOMA phone works and screens when making a video-phone call.

Setting item/Setting at purchase → P250

1. From the Settings menu (P85), “Video-phone” ▶ “Video-phone settings” ▶ Select from the following setting items ▶ After setting, ⓘ [Done]

VoiceCall AutoSwitch

Sets whether to redial by automatically switching to a voice call if the other party is unable to answer a video-phone call.

Display setting

You can set how to display the Talking screen.

- **Both** : Your image and the other party's image are displayed.
- **Other** : Only the other party's image is displayed.
- **Me** : Only your image is displayed.

Sub screen

You can set an image to be displayed on the sub screen when "Display setting for video phone call" is set to "Both".

- **Me** : Your image is displayed on sub screen and the other party's image is displayed on main screen.
- **Other** : The other party's image is displayed on sub screen and your image is displayed on main screen.

Send camera image

You can set whether to send your image to the other party. If set to "OFF", a substitutive image is sent to the other party.

Sending img. quality

- **Prefer image quality** : Sends images laying stress on image quality. Prefer image quality is effective if there is little motion.
- **Normal** : Sends images in standard quality and motion speed.
- **Prefer motion quality** : Sends images laying stress on motion speed. Prefer motion speed is effective if there is much motion.

Display light

- **Always on** : Keeps the display lit during a call.

- **Terminal setting** : Follows the settings of the "Main display" of the "Backlight". →P83

Hands-free V.phone

Set whether to enable handsfree function during video-phone calls.

Selecting a Video-phone Image

Changing Substitutive images



You can set a substitutive image to send in place of your own image during a video-phone call.

Setting item/Setting at purchase → P250

1. **From the Settings menu (P85), "Video-phone" ▶ "Image settings" ▶ "Substitutive image" ▶ Select from the following setting items ▶ After setting, [Done]**

Image

- **Default Image** : The image by default.
- **Selected image** : You can select an image other than the default image from the "Image list".

Image list

You can select an image for when "Image" is set to "Selected image". Select from images stored in "My picture" of "Data box". → P166

Changing Response Hold Image




You can set an image to display when you put the call on hold during ringing of a video-phone call.

Setting item/Setting at purchase → P250

1. From the Settings menu (P85), “Video-phone” ▶ “Image settings” ▶ “Response hold image”

- See “Changing Substitutive image” (P94) for the subsequent operations.

Changing On-hold Images

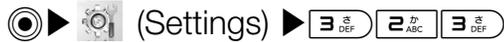

You can set an image to display when you put the call on hold.

Setting item/Setting at purchase → P250

1. From the Settings menu (P85), “Video phone” ▶ “Image settings” ▶ “On-hold image”

- See “Changing Substitutive image” (P94) for the subsequent operations.

Date & Time

Setting Time



You can set the time of city which is already set “Home” (the city at purchase: Tokyo) by “World time” (P187).

Setting item/Setting at purchase → P250

1. From the Settings menu (P85), Select “Date & Time” ▶ “Set time” ▶ Select from the following setting items ▶ After setting, [Done]

Set time

Press to select an input item (hour, minute, second, am/pm[※]). Use the numeric keys to enter numbers. Press to switch between am/pm[※].

Time format

You can set whether to display time in the 12-hour format or in the 24-hour format.

Hour indication

You can set whether the alarm will sound or not after setting (00 min). You can select the ring tone as an alarm. If you do not want this indication, set to “OFF”.

※: Displayed if “Time format” is set to “12-hour”.

Setting Date



You can set the date.

Setting item/Setting at purchase → P250

1. From the Settings menu (P85) ▶ Select “Date & Time” ▶ “Set date” ▶ Select from the following setting items ▶ After setting,  [Done]

Set date

Press  to select an input item (year, month, date).
Use the numeric keys to enter numbers.

Date format

You can change display formats of the date.
(DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD)[※]

※: YYYY stands for Year, MM stands for Month, and DD stands for Day.

Setting Daylight Saving



You can set daylight saving time.

Setting item/Setting at purchase → P251

1. From the Settings menu (P85), “Date & Time” ▶ “Daylight saving” ▶ “ON”/“OFF”

Network (for overseas use)

Selecting the Network Connection Mode

Making settings for Network search



You can select a network setting method in case destination networks (Communication carriers) change for overseas use, etc.

Setting item/Setting at purchase → P251

1. From the Settings menu (P85), “Network” ▶ “Network selection” ▶ Select from the following setting items

Auto

Automatically searches for the network for setting.

Manual

The network search display appears, allowing you to select a network from the list displayed after search.

Information

- It may take a few minutes to find the network.
- If you set “Auto”, you can search the network automatically in the following situation.
 - When you switch on
 - Out of the service area
- If you stop searching the network by “Manual”, the setting will be changed to “Auto”.

Setting the Network Mode



You can set a type of network to search for when networks are searched according to “Network selection”.

Setting item/Setting at purchase → P251

1. **From the Settings menu (P85), “Network” ▶ “Network mode” ▶ Select from the following setting items**

Auto

Searches all the networks connectable.

WCDMA only

Searches only networks supporting 3G.

GSM only

Searches only networks supporting GSM/GPRS.

Information

- You cannot exchange the data through packet service under GSM network.
- When using the FOMA handset in Japan or in the service area of 3G network, we recommend you change the setting of the “Network mode” to “WCDMA only” to save battery power.

Registering a Network of Preferred list



Setting Networks

When you search the network automatically, you can add a preferable network (communication carrier) to connect to.

Setting item/Setting at purchase → P251

1. **From the Settings menu (P85), “Network” ▶ “Preferred lists”**

- Networks registered in UIM are listed downward from the one with the highest priority.
- [Delete]: You can delete the network selected.

2. [Menu] ▶ **Select from the following setting items**

Add new

- Search network

You can select from the network list stored in the FOMA phone for adding.

- Enter new network

You can enter the country code (MCC) and the network code (MNC) for adding. After setting, press [Done].

Delete

You can delete the selected network.

Move up[※]

You can move the selected network upward. The network moved upward is more preferred.

Move down[※]

You can move the selected network downward. The network moved downward is less preferred.

※: If you register multiple networks, you can use this menu.

Information

- If the network is not registered, [Menu], [Delete] of soft key area on preferred list to register will not be displayed. To add new network, press  [Add], select and register.
- The registered data is saved in UIM.

Displaying the Network Name



You can set whether to display the name of the network currently set on the Stand-by display.

Setting item/Setting at purchase → P251

1. From the Settings menu (P85), “Network” ▶ “Network name display” ▶ “Display on”/“Display off”

Changing a Host from i-mode

Setting / Changing the Host



※ Normally, you do not need to change the setting.

You can set a host to use services of various providers other than i-mode. If the host is changed, i-mode becomes unavailable.

Setting item/Setting at purchase → P251

1. From the Settings menu (P85), “Host selection” ▶ From the Host selection screen,  [Add] ▶ Enter your terminal security code ▶  ▶ Set the following items ▶ After setting,  [Done]
 - The host set is displayed on the Host selection screen with  attached to it.

Host name

Enter the name displayed on the Host selection screen.

Host address

Enter the address of the host.

Access point

Enter the Access point (URL, etc.).

Information

- To switch the host back to “i-Mode” or to switch to another host, select “i-Mode”/other hosts and press  on the Host selection screen.
- If you press  [Menu] on the Host selection screen, you can edit / delete / display the host set. Note that you cannot edit / delete pre-installed “i-Mode”.
- In Access point menu, you should enter IP address in PDP type.

Security

Setting All Lock



You can set whether to lock requiring to enter the terminal security code to operate function. During All Lock, “All lock” is displayed on the Stand-by display.

Setting item/Setting at purchase → P251

1. From the Settings menu (P85), “Security” ▶ “All lock” ▶ Select from the following setting items

Power on

You can set whether to lock the FOMA phone when you turn of the power. You need to enter your terminal security code to set it.

Immediate

Sets All lock immediately. You need to enter your terminal security code to set it.

none

You can release All lock. You need to enter your terminal security code to release it.

Information

- While “All lock” is set, even though you receive an SMS, it is only saved, and it is received after you release “All lock”.
- While “All lock” is set, you cannot perform packet transmission connecting a personal computer.
- While “All lock” is set, answering operation is not performed even though you receive a call, and only busy tone is played. It is displayed as a missed call after you release “All lock”.
- While “All lock” is set, you can receive mails and messageR/F. However, the screen of receiving messageR/F or receiving result of the message will not appear, and only the icon appears.
- While “All lock” is set, the alarm tone does not sound, and only the icon appears. The alarm tone sounds after you release “All lock”.

Releasing All Lock

1. Press one of ~ ▶ Enter your terminal security code ▶

- Pressing  [Emergency Call] key on the “lock” screen: Emergency calls (110/118/119)* can be made.

- ※ Display may differ depending on the used UIM.
- If you enter a wrong terminal security code 5 times in a row, the handset turns off automatically. When you turn on the power again, you can enter the terminal security code.

Setting PIN Code Request



You can set to enter PIN1 code every time you turn on the power to the FOMA phone.

Setting item/Setting at purchase → P251

1. From the Settings menu (P85), “Security” ▶ “PIN code request” ▶ “ON”/“OFF” ▶ Enter PIN1 code ▶

Changing Your Password


Changing the PIN1 code / PIN2 code



You can change the PIN1 code / PIN2 code. To change the PIN1 code, you need to set “PIN code request” to “ON” beforehand. The code is set to “0000” at purchase, but you can change to any number as desired.

- In case you purchase a new FOMA phone and start using it inserting the UIM you have been using, use the PIN1 code / PIN2 code you have set.

1. From the Settings menu (P85), “Security” ▶ “Change password” ▶ “PIN1 code”/“PIN2 code”

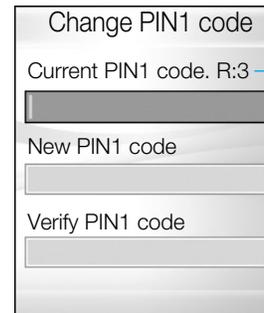

The remaining time to enter PIN is available

<Change PIN1 code>

2. Enter the current PIN1 code/PIN2 code ▶
3. Enter a new PIN1 code/PIN2 code ▶
4. Enter the same code that you did in Step 3 again ▶

Information

- If you enter a wrong PIN code over 3 times, the PIN code will be locked automatically. If you unlock the PIN code, see “Releasing PIN lock code” (P105).

Changing Your Terminal Security Code



You can change your terminal security code.

Setting item/Setting at purchase → P251

1. From the Settings menu (P85), “Security” ▶ “Change password” ▶ “Security code”

- For the subsequent steps, just like the steps to change the PIN1 code / PIN2 code, enter your current terminal security code, enter a new terminal security code and then enter the same code again for confirmation.

バイリンガル



You can switch the languages of the FOMA phone between Japanese and English.

Setting item/Setting at purchase → P251

1. From the Settings menu (P85), “バイリンガル” ▶ “日本語”/“English”

Information

- This setting is registered in FOMA phone and UIM which is currently inserted. If you insert other UIM which registered other settings, the settings of this UIM will be preferred.

Others Settings

Checking the Memory Status



You can check the usage status and available space of the memories of the handset of the FOMA phone.

1. From the Settings menu (P85), “Others” ▶ “Memory status” ▶ Select from the following items

Data box

You can check the empty or the reserved capacity (Approximate) of the Data box for data such as My picture, i-motion or Melody are stored.

Personal info.

You can check the empty or the reserved capacity (Approximate) of the memory for Personal info. for data such as Phonebook, Schedule, Memo or Date Counter.

UIM memory

You can check the empty or the reserved capacity (Approximate) of the memory for data such as “Phonebook” or “SMS”.

Resetting the Settings

Clearing the Memory



You can clear all the data recorded in the FOMA phone.

1. From the Settings menu (P85), “Others” ▶ “Reset settings” ▶ “Clear memory” ▶ Select from the following items

- You need to enter your terminal security code for deleting.

Data box

Clears all the data saved in the Data box folder of the FOMA phone.

Personal info.

Clears all the personal data saved in the FOMA phone such as phonebooks, schedule, call history and so on.

Initializing the Default Settings



You can reset to all settings at purchase except for “i-mode setting” and “Mail setting”.

1. From the Settings menu (P85), “Others” ▶ “Reset settings” ▶ Default settings ▶ “Yes” ▶ Enter the terminal security code ▶ Press

Information

- When the date and time are reset, display or play of i-motion and files with valid period and/or expiration date set may be disabled.

Changing the Settings for the SMS Center



※ Normally, you do not need to change the settings.

You can change the SMS centers to use.

Setting item/Setting at purchase → P252

1. From the Settings menu (P85), “Others” ▶ “SMS center” ▶ “Select from the following setting items” ▶ After setting, [Done]

SMSC

- **DoCoMo** : You can use the DoCoMo SMS center.
- **Others** : You can use another company’s SMS center.

Address

If “SMSC” is set to “Others”, enter the address of the SMS center.

Resetting the holiday



You can reset all settings of holiday of FOMA phone to settings at purchase.

1. From the Settings menu (P85), “Others” ▶ “Reset holiday” ▶ “Yes”

Safety settings

- Passwords104
- Preventing the Phone from
Activating the Operation of Function ..105
- Other Safety Settings106

Passwords

For some functions of the FOMA, you need to enter your password. In addition to the Terminal security Code for operating respective mobile phone functions, the Network Security Code to use network services, and i-mode password are available. These passwords help you utilize your FOMA phone.

Information for Passwords

- Do not use easily-perceived figures such as “Birthday”, “the part of phone number”, “Area code or Room number”, “1111”, “1234” to prevent it from being guessed by others. Note that you make a memo of the password you set.
- Make sure that prevent the password from being known by others. If the password is known by third party, NTT DoCoMo will not have any other responsibility concerning the mischief or the misuse of handset.
- There is no requesting the client's password from NTT DoCoMo.
- Note that if you do not remember password, you need to bring an identification card such as a driver's license, FOMA handset, UIM to a handling counter such as a DoCoMo shop. For details, consult “DoCoMo Information Center” described on the back of this manual.

Terminal security code

The terminal security code is set “0000” at purchase. You can change the terminal security code. To change the code, see “Changing Your Terminal Security Code” (P100).

Network security code

The Network Security Code is a 4-digit number required for using various network services and for various procedures at the “ドコモ e サイト” (DoCoMo e-site). The Network Password is determined at the time of contract and can be changed by the user.

The user who has an ID and a password of “My DoCoMo”※, the integrated support site for PC, can change the network security code through PC.

And, the user can change various procedures of DoCoMo e-site in i-mode.

※ For “My DoCoMo”, “DoCoMo e-site”, see the back of this manual.

i-mode Password

The i-mode password is a 4-digit password required for registering, deleting My-menu, Messaging service, applying for or canceling an i-mode service (charged) (The service provider may supply its own password).

The default for i-mode password is “0000”, but you can change it. If you change the password from i-mode, see “Changing” (P136).

PIN1 code/PIN2 code

For the UIM, you can set the 2 security codes, namely the PIN1 code / PIN2 code. The default for these security codes are “0000”, but you can change these codes as you like. To change the codes, see “Setting PIN Code Request” (P100), “Changing the PIN1 code / PIN2 code” (P100).

■ PIN1 Code

The PIN1 code is the 4-to 8-digit code for checking the user each time the UIM is inserted into the FOMA phone or each time the FOMA phone is turned on so that you can prevent the third party from using your UIM. If you enter PIN1 code, you can receive or make a call or activate the operation.

■ PIN2 Code

The PIN2 code is the 4-to 8-digit code for using the user certificate or applying for the issue of it and performing reset All Calls.

※ This FOMA phone does not have this function.

Information

- If you purchase a new FOMA phone and use the existing UIM with new FOMA phone, use PIN1 code and PIN2 code you have set previously.
- If you enter a wrong PIN1 code / PIN2 code 3 times in a row on the display requiring its entry, the PIN1 code / PIN2 code is locked automatically. To unlock the code, you need to enter PIN lock release code.

Releasing PIN lock code

PIN lock releasing code is a 8-digit password to release locking PIN1 code / PIN2 code. You cannot change it.

Information

- If you enter a wrong “PIN unlock code” 10 times in a row, it is automatically locked. In this case, you need to bring the FOMA phone, UIM and an identification card such as a driver's license to a handling counter such as a DoCoMo shop.

Preventing the Phone from Activating the Operation of Function

To protect the information or data in FOMA phone, you can activate the security function to prevent from activating the operation or the function.

Setting All Lock

After locking FOMA phone, you need to enter terminal password to activate the phone. To set this function, see “Setting All Lock” (P99).

Safety settings

[Setting not to display mail without permission](#)

You can set the security function for the Inbox, Outbox, and Unsent of the Mail menu. For setting this function, see “Display” of “Mail setting” (P156).

Other Safety Settings

The FOMA phone has the following safety settings in addition to the “Security” function:

Purpose	Function/Service	Reference
To reject calls from specified callers	Reject/Accept call	P90
To receive calls from callers registered in the phonebook	Memory reject call	P90
Not to take nuisance calls	Nuisance call barring	P202
Not to take calls from callers not notifying caller ID	Caller ID request	P203
To receive necessary mail only	Receive option	P154

Purpose	Function/Service	Reference
To change the mail address	Change mail address	Refer to “Mobile Phone User's Guide [i-mode]”
Receive/reject only mail between i-mode terminals	Measures for nuisance mail (reception/rejection setting) Receive from specified domain	
Receive/reject mail from specified domains		
Receive/reject mail from specified addresses		
To reject 200th and succeeding i-mode messages sent from a single i-mode phone on the same day	Selected Mail Senders	
To reject unsolicited Ad mail	Reject unsolicited Ad mail/Reject mail	
To reject SMS reception	Set/Confirm SMS Rejection Settings	
To store/check safety information when a disaster occurs	i-mode Disaster Message Board Service Suspend Mail	
To stop the mail function temporarily	Stop the mail function	
To check the settings for the mail function	Confirm Settings	

Multimedia (Camera)



Notes for using the camera.....	108
Using the Camera	109
Shooting Still Images	109
Shooting Moving Images.....	115
Setting Camera.....	118

To display the Multimedia menu

On the Stand-by display,  [Menu]   (Multimedia) or “Multimedia”

Notes for using the camera

- If the lens is stained with finger prints or something oily, you cannot shoot clear images. Clean the lens with a soft cloth before shooting images.
 - If the lens is exposed to direct sunlight for a long time, the color filter inside and images may be discolored.
 - If shooting or saving images after leaving the FOMA phone in a warm place for a long time, image quality may deteriorate.
 - Do not cover the lens with fingers, etc. when shooting images.
 - When the battery level is low, you may not be able to activate camera and movie mode.
 - When shooting a fast moving subject, it may be recorded a little off the displayed position or the image may be blurred.
 - Be careful not to move your hands when taking a shot. Hold the FOMA phone securely with your hands so that it does not move, or place the FOMA phone in a stable place and use the self timer when taking a shot.
 - When moving your hands when shooting a moving image or when shooting a rapidly moving image, the image may be blurred.
 - When trying to directly shoot a strong illuminant such as the sun or a lamp, the image may become dim or blurred.
- The camera has been made with highly precise technologies, but there may be points or lines that always look bright as well as pixels and lines that always look dim. Also, be aware that when shooting an image in a place where light intensity is small, it looks a little rough or noises such as white lines increase.
 - If the battery becomes low level before saving images, you are not able to save still or moving shot images.
 - Since the camera consumes electric power quickly, do not operate the camera or leave it for a long time.
 - It may take a long time until images are displayed on the shooting display after starting the camera depending on the settings.
 - Images shot by the camera may differ from actual subjects in color tone and brightness.
 - To prevent from taking a picture without permission, the shutter tone sound even on manner mode. Also, even when the Flat-plug Earphone/Microphone Set with Switch (option) is attached to the FOMA phone, the shutter tone sound from the speaker.

Copyrights and Rights of Portrait

You have no right to copy, modify, or distribute the contents of which a third party holds the copyright such as text, images, music, or software downloaded from web pages on the Internet, or images shot by the cameras of this product without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the Copyright Law. Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use. Make sure that you refrain from taking portraits of other persons and distributing such portraits over the Internet without consent, as this violates portrait rights.

 Please respect the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

Using the Camera

You can adjust the angle of the camera on setting the scene of a person, an landscape or a portrait.

Information

- If you shoot an image by adjusting the lens within the FOMA phone as shown above, the image is saved as mirror image.

Shooting Still Images



Still images can be shot. The still images you take are saved to "Camera" folder or its sub folders of "My picture" in "Data box" of the FOMA phone. A saving folder can be set from "Auto Saving" (P118).

1. In Stand-by mode, press



<Still Image Finder Stand-by>

- : You can set the magnification of the image.
- : You can change the brightness of the image.
-  [Album]: You can view the “Camera” folder of “My picture”.
- : Flip the image vertically.

2. After confirming the subject,



<Still Image Shooting End>

-  [Mail]: You can compose the message with attaching the image. Go to step 2 on page 149 of “Composing i-mode mail”.

-  [OK]: Return to the Still Image Finder Stand-by screen.
-  [Menu]: You can perform the operations such as deleting the picture in submenu. → P113
- : Return to Still Image Finder Stand-by screen without saving the shot image.

■ When “Auto Saving” is set to OFF

Press  [Save] immediately after shooting an image and go to the next step. When not saving the shot image, press  [Cancel]. For “Auto Saving” → P118



<Still image saving screen>

-  [Save]: After deciding the folder to save the image, the finishing screen of shooting still image is displayed.
-  [Open]: Opens a selected folder.
-  [Menu]: A submenu opens. → P114

After taking a multishot

After setting a multishot (P112) and taking multiple images, you can view the display as below.



The file size of selected one

<Screen multishot shooting End>

- [View]: You can view the selected file using zooming.
- [Mail]: You can compose i-mode mail with attaching the selected file. Go to step 2 on page 149 of “Composing i-mode Mail”.
- : Returns to Still Image Finder Stand-by screen to take a picture.

Icons on the Still Image Finder Stand-by Screen

- Indicates the status of the still image shot setting.

Icon	Description	
	Camera mode (Still image shot mode)	
	File size restriction	No restriction
		100KB
		9KB
	Storage image quality setup	Super fine
		Fine
		Normal
	Multishot	
	Auto timer	
	Zoom	
	Brightness	
	Size	
	169※2	

※1: The remaining number of shots varies depending on the settings of shooting.

※2 : The selected value is displayed.

If “Size” is set to “128X96” and “Quality” is set to “Normal”, the savable number of still images is approx. 8000.

Using the Submenus of the Still Image Finder Stand-by Screen

You can set up functions to shoot still images.

Setting item/Setting at purchase → P254

- 1. From the Still Image Finder Stand-by screen (P110),**
 **[Menu]** ► **Select from the following submenu items using**  ► **Select a setting item** ►  ► 
[Close]

Rotate

Set to rotate the view.

You can rotate the view also by pressing  on Still Image Finder Stand-by screen.

Size

You can set the photo size.

Quality

You can set the image quality to store shots of still images.

Multishot

You can set the number of continuous shots of still images to be taken by pushing the shutter.

Zoom

You can set the magnification of the image.

Brightness

You can set brightness (exposure) of the image.

White balance

You can revise the color tone for the image. This setting is for a shot image with an unnatural color tone.

Night mode

This setting is for when taking a shot in a dark place, etc.

Frame shot

This setting is for when taking a shot with a frame attached to the subject. Select “Choose Frame” and select a frame using  → Press .

Auto timer

You can set Auto timer. Select the number of seconds between pressing the shutter and taking a shot.

Effect

This setting is for when taking a shot with special effect applied to the image.

Size restriction

You can restrict the size of still images to store.

Information

- If taking a shot with the “size” set to “1280x1024”, you cannot use the zoom.
- If “Multishot” is set, still images are automatically saved even if “Auto Saving” is set to OFF.
- If “Multishot” is set, the “Size” automatically changes to “320x240”. After setting Multishot, you cannot change the size.

- If the “Frame shot” is set, the “size” automatically changes to “176x220”. After setting the Frame shot, you cannot change the “size”.
- You cannot set “Multishot” and “Frame shot” at the same time.
- If you are unable to store images in the size set in “File size restriction”, automatically lower the resolution to store images.
- If you set “File size restriction” to “9KB”,
 - You cannot set “Quality”.
 - You can set “Size” only to “128 x 96” or “176 x 144”.
- If you set “File size restriction” to “100KB”,
 - You cannot set “Quality”.
 - You cannot set “Size” to “1280 x 1024”.
- For the frame image stored by default, see “Frame” (P250) in “Data stored by default”.

Using the submenus of the Still Image Shooting End Screen

Setting item/Setting at purchase → P255

- 1. From the Still Image Shooting End screen (P110) / Multishot Shooting End Screen (P111), [Menu]**
 - ▶ **Select from the following submenu items**

New picture

Returns to Still Image Shooting screen.

Mark/Unmark*

You can delete the file shot by multishot. After selecting a file, press [Menu] → “Delete”.

- **Mark** : You can mark a file at a time.
- **Mark all** : You can mark all the files collectively.
- **Unmark** : You can unmark the file marked by “Mark” or one of the files marked by “Mark all” at a time.
- **Unmark all** : You can unmark the file marked by “Mark” or all the files marked by “Mark all”.

Send via mail

You can attach shots of still images to i-mode mail for sending. Go to step 2 (P149) of “Composing i-mode mail message”.

Delete (Selected shot*)

You can delete a shot of a still image.

Set as wallpaper

Set as wallpaper for “Main display” or “Sub display”.

Slide show[※]

- **Go** : You can display still images shot in Multishot in order.
- **Settings** : You can set up “View as” and “Time interval (secs)” for slide show. After setting, press  [Done].

Make animated GIF[※]

You can select multiple files to create animation. After selecting files, press  [Make].

Sort by[※]

You can sort files.

View by[※]

You can change file display methods.

File property[※]

You can display the name, size and type of the file being selected.

※: Displayed only after taking images in Multishot.

[Using submenu on still image saving screen](#)

Setting items/Setting at purchase → P258

1. Press  [Menu] on still image saving screen (P110) ► **Select the next submenu item**

Open

Open a selected folder.

Save to current folder

After deciding the current folder as the folder to save the image, the finishing screen of shooting still image is displayed.

New folder

Create a folder.

Delete[※]

Delete a selected folder.

Sort by

Sort folders.

View by

Change the folder display method.

Memory info.

Display states, etc. of storage area in phone memory, etc.

Folder property

Display the name, size, number of included files and other information of a selected folder.

※: Unavailable for folders set at purchase.

Shooting Moving Images



Moving images can be shot. Shot moving images are saved to "Camera" folder or its sub folders of "i-motion" in "Data box" of the FOMA phone. A saving folder can be set from "Auto Saving". (P110)

1. From the Multimedia menu (P107), "Movie-mode"



< Moving Image Finder Stand-by >

- : You can change the magnification of the images.
 - : You can change the brightness of the images.
 - [Album]: You can view the folder of "Camera" in "i-motion".
 - : Flip the image vertically.
- ※ You cannot flip the image vertically while shooting moving image.

2. After confirming the subject,



Illuminates in red during shot.

Shot elapsed time/maximum shot time

Shot elapsed time is displayed with a bar.

<Moving Image Shooting >

- : You can change the magnification of an image.
- : If you press this key on recording, the moving image is not saved, and return to Stand-by mode to take a picture.
- [Stop]: Press this key to end the camera and return to the screen of step 3.

3. The shooting is ended.



<Moving Image Shooting End >

- [Mail]: You can compose i-mode mail with attaching the selected file. Go to step 2 on page 149 of “Composing i-mode mail”.
- [OK]: Return to the Moving Image Finder Stand-by screen.
- [Menu]: You can delete the picture in submenu. → P117
- : Return to Still Image Finder Stand-by screen without saving the shot image.

■ When “Auto Saving” is set to OFF

Press [Save] immediately after shooting an image and go to the next step. When not saving the shot image, press [Cancel]. For “Auto Saving” → P118



<Still image saving screen>

- [Save]: After deciding the folder to save the image, the finishing screen of shooting moving image is displayed.
- [Open]: Opens a selected folder.
- [Menu]: A submenu opens. → P117

Icons on the Moving Image Finder Stand-by Screen

- Indicates the status of the moving image shot setting.

Icon	Description	
	Movie mode (Taking a moving image)	
	Recording time (for Mail)	
	Movie type	Sound+Video*
		Video only
		Sound only

- See “Icons on the Still Image Finder Stand-by Screen” (P111) for other icons.
- ※: The recording time of a moving image can be set up to 30 minutes.
If “Quality” is set to “Super fine” and “Type” is set to “Sound+Video”, the preservation time of the recorded movie is approx. 80 minutes.
The preservation time varies depending on the set shooting condition.

Using the Submenu of the Moving Image Finder Stand-by Screen

You can set up functions to shoot moving images.

Setting item/Setting at purchase → P255

1. From the Moving Image Finder Stand-by screen (P115), [Menu] ▶ Select from the following submenu items using ▶ Select a setting item ▶ [Close]

 **Rotate**

Set to shoot a rotated image.

You can rotate the view also by pressing  on Still Image Finder Stand-by screen.

 **Quality**

You can set the image quality to store shots of moving images.

 **Zoom**

You can set up the magnification of the images.

 **Brightness**

You can set up brightness (exposure) of the images.

 **White balance**

You can revise the color tone for the images. This setting is for shot images with an unnatural color tone.

 **Night mode**

This setting is for when shooting a shot in a dark place, etc.

 **Effect**

This setting is for when shooting a shot with special effect applied to the image.

 **Recording time**

You can set the recording time for moving images.

 **Type**

You can set whether or not images / sound are recorded when shooting moving images.

Information

- If “Recording time” is set to “Mail attach”, the recording time varies depending on the “Quality” setting.

Using the Submenus of Moving Image**Shooting End Screen**

1. **From the Moving Image Shooting End screen (P115),  [Menu] ► Select from the following submenu items**

New movie

The Finder screen returns.

Send via mail

You can attach shot moving images to i-mode mail for sending. Go to step 2 (P149) of “Composing i-mode mail message”.

Delete

You can delete shot moving images.

Using submenu on moving image saving screen

Setting items/Setting at purchase → P259

1. **Press  [Menu] on moving image saving screen (P116) ► Select one of the submenu items given below**

Open

Open a selected folder.

Save to current folder

After deciding the current folder as the folder to save the image, the finishing screen of shooting still image is displayed.

New folder

Create a folder.

Delete*

Delete a selected folder.

Sort by

Sort folders.

View by

Change the folder display method.

Memory info.

Display states, etc. of storage area in the phone memory.

Folder property

Display the name, size, number of included files and other information of a selected folder.

※: Unavailable for folders set at purchase.

Setting Camera



Camera functions for shooting still and/or moving images can be set.

1. Select “Camera settings” from Multimedia menu (P107) ▶ Select one of the following items to be set

Saving option

Set whether to automatically save shot still or moving image. Use to set ON/OFF. When ON, set the saving destination of still or moving image. After setting, press [Done].

Shutter sound

Set a sound to be emitted when the shutter is pressed.

- When an item is selected, a sample sound is emitted.

Flicker tuning

Set suppressing flickering of the screen.

Information

- Depending on the shooting environment and/or object tone, flickering may not be completely suppressed by setting “Flicker tuning”.

i-mode Menu	120
What is i-mode?	120
Displaying the iMenu display	120
Displaying Sites from Bookmark	121
Displaying Screen memo	122
Displaying Last URL	123
Displaying Internet Web Pages	123
Displaying MessageR/F	124
Checking Whether Center Holds MessageR/F	127
Setting Functions of i-mode	127
Displaying Sites	130
How to See/Use Sites	132
Using My Menu	135
Changing i-mode Password	136

i-mode



To display the i-mode menu

On the Stand-by display,  [Menu] 
 (i-mode) or "i-mode"

i-mode Menu

The i-mode menu is the basic display for viewing various sites and Internet web pages. You can use each function of i-mode from the i-mode menu.

Menu item	Description
 Menu	Connects to the i-mode Center
Bookmark	Displays your favorite sites and Internet web pages.
Screen memo	Displays pages of sites, etc. saved in the FOMA phone.
Last URL	Displays the most recently accessed site or Internet web page.
Go to location	Enter URL to connect to the internet.
Message	Displays a list of the received MessageR/F.
Check new message	You can check whether the i-mode Center holds mail and MessageR/F.
i-mode setting	You can set the FOMA functions related to i-mode.


i-mode

What is i-mode?

i-mode is the online service that makes use of the display of the i-mode phone to enable you to use convenient information from i-mode sites (programs) and homepages supporting i-mode and to exchange mail easily.

- Refer to “Mobile Phone User's Guide [i-mode]” for details.
- Not all the services described in “Mobile Phone User's Guide [i-mode]” are supported. Check the description of the models supporting each service with “Mobile Phone User's Guide [i-mode]”.

Displaying the iMenu display

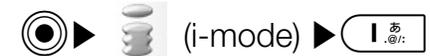

You can access each i-mode site from iMenu.

1. From the i-mode menu (P119), “iMenu”

- Refer to “Mobile Phone User's Guide [i-mode]” for items displayed on the iMenu display.
- See “Displaying Sites” (P130) for the subsequent operations.

Displaying Sites from Bookmark



You can directly access your favorite sites from Bookmark.

- For the registration method, see “Using the Submenus of the Site Screen” (P130).

1. From the i-mode menu (P119), “Bookmark”

<Bookmark List>

2. Select a bookmark ► ●

- Connected to the site.

Using the Submenus of the Bookmark List Screen

1. From the Bookmark List screen (See above), ☒ [Menu] ► Select from the following submenu items

Connect

You can connect to the selected Bookmark site.

Edit bookmark

You can edit the title and URL of the selected Bookmark. After editing, press ● [Done].

Delete

You can delete the selected Bookmark.

Delete selected

You can select and delete multiple Bookmarks. After selecting, ☒ [Menu]→Select “Delete”

Delete all

You can delete all the registered Bookmarks. To delete all, enter terminal security code → ● [OK].

URL

You can display the URL of the selected Bookmark.

Copy URL

You can copy the URL of the selected Bookmark. For the copy, see “Copying/Cutting/Pasting” (P219).

Compose message

You can paste the URL of the selected Bookmark to the text of i-mode mail and send it. Go to step 2 of “Composing i-mode mail” (P149).

Send


Send a selected bookmark via infrared communication. ※

Send all

Send all bookmarks via infrared communication. ※

※: For infrared communication, see “Using infrared communication” (P182).

Displaying Screen memo

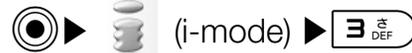

You can display the web pages saved without connecting to i-mode.

- For the registration method for the site screen, see “Using the submenus for the Site screen” (P130).

1. From the i-mode menu (P119), “Screen memo”

Icon	Description
	Unprotected Screen memo
	Protected Screen memo

<Screen Memo List>

2. Select a screen memo ►

- The Screen Memo List screen appears.

Using the Submenus of the Screen Memo Screen

1. From the Screen memo List screen (See above) [Menu] ► Select from the following submenu items

View

You can display the selected screen memo.

Edit title

You can edit the title of the selected screen memo.

Delete

You can delete the selected screen memo.

Delete selected

You can select and delete multiple screen memos. After selecting,  [Menu]→Select “Delete”.

Delete all

You can delete all the screen memos. To delete all, enter terminal security code →  [OK].

URL

You can display the URL of the selected screen memo.

Protect ON/OFF

You can give or cancel protection for the selected screen memo. You cannot delete protected screen memos.

Using the Submenus of the Screen Memo Screen

1. From the Screen memo display See left [Menu] ▶ Select from the following submenu items

Save graphics ^{※1}

You can select and save an image contained in a screen memo. You can confirm the saved image by “My picture” of “Data box”→”i-mode” folder. →P166

Show properties

- **URL** : You can display the URL of the displayed screen memo.
- **Page properties** : You can check the title and URL of the displayed screen memo.
- **Certificates ^{※2}** : You can display the certificate used by the displayed screen memo.

Retry ^{※3}

A GIF animation is played back from the beginning.

Edit title

You can edit the title of the displayed screen memo.

Delete

You can delete the displayed screen memos.

Protect ON/OFF


You can activate or cancel protection for the displayed the page. You cannot delete protected saved pages.

※1: This menu is not selected in case the selected screen memo does not include an image.

※2: This menu is not selected in case the certificate is not used for the displayed screen memo.

※3: This menu is not selected in case the selected screen memo does not include of GIF animation.

Displaying Last URL

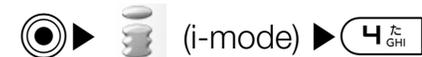


When you exit i-mode, the URL of the page displayed last is stored as “Last URL”. Using “Last URL”, you can connect to the site or Internet web page you visited last time.

1. From the i-mode menu (P119), “Last URL” ▶ [Done]

Information

- If you press  in screen of URL, you can edit the latest URL address.

Displaying Internet Web Pages

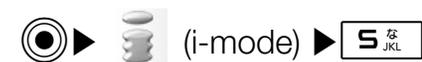

You can display web pages supporting i-mode and directly access sites from the history of the sites you visited by entering their URLs.

1. From the i-mode menu (P119), “Go to location” ► Select from the following items

Input address

You can display Internet web pages supporting i-mode by entering URLs. After entering, press  [Done] to access.

URL history

You can directly access sites by selecting URLs you visited from the URL history.

Information

- You can enter URL up to 256 half-pitch characters.
- You can view the list up to 50 address in URL history.
- Depending on the type of the accessed Internet site, the page may not be displayed correctly.
- Web pages other than Internet web pages supporting i-mode may not be displayed correctly.

Using the Submenus of the URL Screen

1. From URL history screen, press [Menu] ► Select from the following submenu items

Connect

You can connect the site in URL history.

Edit URL

You can connect URL in history after editing URL address.

Delete

You can delete the history of URL.


Delete all

You can delete the history of all registered URL. To delete all, enter terminal security code →  [OK].

Compose message

You can compose i-mode mail with attaching URL to the text. Go to step 2 on page 149 of “Composing i-mode mail”.

Displaying MessageR/F

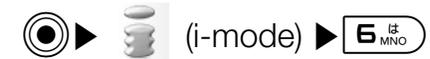

You can display received MessagesR/F.

- MessageR:
Your required information is delivered automatically once you apply for the message service on the site providing the service.
 - MessageF:
Messages are delivered free of charge by performing the Received settings in the option settings. Refer to “Mobile Phone User's Guide [i-mode]” for how to set it up.
- ※: If you subscribed to the FOMA service after October 1, 2004, the setting at purchase is “Receive”.

Information

- You can save up to 100 MessageR and up to 50 MessageF. Depending on the size of messages, the number of savable messages may be smaller.
- If a message is attached to the received MessageR/F, the melody will be played automatically when you display the message.

Icons on the MessageR/F List Screen and the Display MessageR/F Screen

Icon	Description
	Unread MessageR/F
	Read MessageR/F
	Protected MessageR/F
	MessageR/F with a file attached or pasted
	Subject
	Received date and time
	A melody is pasted.
	A melody is attached.
	An image is attached.
	A file with the UIM operation restriction function set up is attached.

Using the Submenus of the MessageR/F List Screen

Setting item/Setting at purchase → P256

1. From the MessageR/F List (P125), [Menu] ► Select from the following submenu items

Delete

You can delete the selected MessageR/F.

Delete selected

You can select and delete multiple MessagesR/F. After selecting,  [Menu] → Select “Delete”.

Delete all

You can delete all the MessagesR/F. To delete all, enter terminal security code →  [OK].

Protect ON/OFF

You can give or cancel protection for the selected MessageR/F. You cannot delete protected MessagesR/F.

Sort

You can sort MessagesR/F displayed on the List screen.

Filter

You can change types of the MessageR/F displayed on the List screen.

Using the Submenus of the Display MessageR/F Screen

1. From the Display MessageR/F screen (P125), [Menu] ► Select from the following submenu items

Delete

You can delete the displayed MessageR/F.

Protect ON/OFF

You can give or cancel protection for the displayed MessageR/F. You cannot delete protected MessagesR/F.

Add to phonebook^{※1}

You can add phone number or mail address displayed on the MessageR/F to phonebook. Go to step 2 on page 64 of “Adding to Phonebook”.

Save attach file^{※2}

You can save the melody () or image () attached to the MessageR/F. You can view the saved melody or the image in “Melody”/“My picture” of “Data box” → “i-mode” folder. → P166, P176

※1: Activate this menu after selecting the phone number or mail address that can be registered. If no item exists, you cannot activate this function.

※2: You can activate this function after selecting the file saved in. If the file to save does not exist, you cannot use this file.

Automatically Receiving MessageR/F

If you are in the FOMA service area, MessageR/F are sent automatically.


1. Receive a MessageR or MessageF

- [R] (White) or [F] (White) is displayed.

2. The reception results are displayed

- To confirm the received MessageR/F immediately, select “MessageR”/“MessageF” and press .
- [CLR/END]: Returns to previous screen.

Checking Whether Center Holds MessageR/F

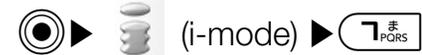

You can check whether the i-mode Center holds any i-mode mail and/or MessageR/F that arrived while the phone was out of the service area or turned off.

1. From the Stand-by screen, press [Mail] for 2 or more seconds

- The Check Result screen appears. To read the received MessageR/F immediately, select “MessageR”/“MessageF” and press .

Information

- If the i-mode Center holds i-mode mail and/or a MessageR/F, an icon (P31) is displayed. Note that the icon may not be displayed if i-mode mail or a MessageR/F arrived at the i-mode Center while the FOMA phone was turned off.

Setting Functions of i-mode

You can set functions of i-mode and MessageR/F.

Home



You can set the URL of a web page displayed when “Home” is selected and whether to enable/disable “Home” (P121).

Setting items/Setting at purchase → P234

1. From the i-mode menu (P119), “i-mode setting” ▶ “Home”
2. “Enable” or “Disable”
3. Select the URL field ▶ ▶ Enter a URL ▶
 - If “ [Done] Disable” is selected, you cannot enter a URL.
4. [Done]

View



You can set functions related to displaying sites and screen memos.

Setting at purchase → P234, 235

1. From the i-mode menu (P119), “i-mode setting” ▶ “View” ▶ Select from the following setting items ▶ After setting, [Done]

Character size

You can change the character size for text of sites, screen memos pages and MessagesR/F.

Image display

You can set whether to display images contained in sites, or screen memos.*

Scroll

You can set the number of lines scrolled when pressing on a display displaying text of sites, screen memos or MessagesR/F.

Message list disp.

You can set how to display MessageR/F list (the number of lines).

※: Images of MessageR/F are displayed regardless of this setting.

Certificates



You can set a certificate used for displaying SSL-enabled sites.

1. From the i-mode menu (P119), “i-mode setting” ▶ “Certificates” ▶ [Menu] ▶ Select from the following setting items

Certificate info

You can view the selected certificate.

Valid/Invalid

You can set whether to validate or invalidate the selected certificate.

- You can check the status of a certificate by the following symbols. : Valid : Invalid

Information

- If “Valid/Invalid” is set to “Invalid”, you cannot display the sites with that certificate.

Others



You can set i-mode connection timeout and the type of message to check. You can also check the i-mode settings.

Setting items/Setting at purchase → P235

1. From i-mode menu (P119), “i-mode setting” ▶ “Others” ▶ Select from the following setting items

Connection timeout

It may take time to download from some sites. You can set the time to wait before canceling downloading. After setting, press [Done].

i-motion auto play

You can set whether to play back an i-motion movie automatically when you download a standard (normal) type of i-motion movie from a site. After setting, press [Done].

Check new message

You can set the contents to check by performing “Check new message” from among i-mode mail, MessageR or Message F. After setting, press [Done].

Check settings

You can check the individual “i-mode setting”.

Reset settings

You can reset each of the “i-mode setting” to their defaults. To reset the settings, enter terminal security code → [OK].

Reset data

You can delete all data related to i-mode (Bookmark, Screen memo, URL history) except for MessageR/F. To reset the data, enter terminal security code → [OK].

Information

- Even when you have set “Connection Timeout” to “Unlimited”, you may be disconnected depending on radio wave conditions.

Displaying Sites

You can connect to sites by easy key operation, and use various types of services offered by IPs (Information Service Providers). (For some sites, you may be required to apply to the IPs separately.)

1. From the i-mode menu (P119), “iMenu”

-  blinks during i-mode communication.

2. Select an item (link) ►

<Site>

- : You can scroll the menu.
- : You can end i-mode.

Information

- If there is a number in front of the item showing the link, you can connect to that link directly by pressing the same number on the keypad. Note that some sites cannot be connected.
- Depending on the site, images may not be displayed.

- Depending on the site connected, the confirmation screen may appear stating that mobile phone information is sent. Your mobile phone information (the model and the serial number of your mobile phone) is sent to the IP (Information Service Provider) over the Internet, so could be perceived by third parties. The phone number, address or age are not sent to IP (Information Service provider).

Using the Submenus of the Site Screen

1. From the Site screen (See left), [Menu] ► Select from the following submenu items

Add bookmark

You can add the displayed URL of the Site to Bookmark. The bookmark screen is displayed, and you can register the site by pressing  [Done]. You can access directly to the site from the registered bookmark. → P121

Add screen memo

You can save a displayed web page as a screen memo. You can display saved screen memos without connecting to i-mode. → P122

Save graphics[※]

You can select and save an image contained in a web page. → P134

Show properties

- **URL** : You can check the URL of the displayed site.
- **Page properties** : You can check information on the displayed web page.

- **Certificates** ※2 : You can check the certificate used in the displayed site.

Bookmark list

You can view a list of bookmarks registered by “Add bookmark”. If you select a bookmark, you can directly access the site.

Go to location

- **Input address** : You can access web pages supporting i-mode by entering URL. After entering it, press  [Done] to connect to the site.
- **URL history** : You can select the URL history of a displayed site to directly access the web page.

Screen memo list

You can view a list of pages saved as “Screen Memo”. You can display the saved page by selecting it.

Menu

You can bring up the iMenu display.

Home

You can display the web page registered as “Home” (P128).

Reload

You can reload data of a site. The contents of the site will change to the latest information each time you reload if the site has been updated.

Compose message

You can send the URL of site being displayed or the URL for link with them attaching to the message text. Go to step 2 on page 149 of “Composing message”.

Change char. code

When characters are not displayed correctly, you can convert them to the correct ones.

Add to phonebook ※3

You can add the phone number and mail address displayed on the web page to the phonebook. Go to step 2 on page 64 of “Adding to phonebook”.

Retry ※4

You can play back a GIF animation from the beginning.

- ※1: You cannot activate this menu in case the image that can be saved is not included in a site or “Image” is set not to display. (P128)
- ※2: If no certificate is used in the site, you cannot use this menu.
- ※3: Activate this menu after selecting the phone number or mail address to register. Otherwise, you cannot activate this menu.
- ※4: You cannot activate this menu when GIF animation is not included in displayed site.

Information

- Some sites may not be saved as bookmarks.
- When characters are not displayed correctly even after “Change char. code”, repeat the operation. However, even if you repeat this operation, the correct characters may not come up. The original characters are displayed if you repeat the operation 4 times.
- If you perform “Change char. code” when the correct characters are displayed, wrong characters may come up instead.

SSL Pages

SSL pages use data encryption for data transmission to prevent hacking and source-file overwriting so that you can more safely exchange personal information.

- If you try to display an SSL-enabled page, the SSL communication starting message appears. When an SSL page is displayed,  appears.
- When moving from an SSL page to an ordinary page, the confirmation display appears. After “Yes” is selected, a regular page is displayed and  disappears.

How to See/Use Sites

Entering/Selecting Information on Sites

When you use a site, you may enter characters (text box) or select an item from multiple options (radio button, checkbox, pull down menu).

Display Example	Name	Description
 : Unselected  : Selected	Radio button	Used for item selection. You can select only 1 item.
 : Unselected  : Selected	Checkbox	Used for item selection. You can select multiple items.
ID  Password 	Text box	You can enter characters.
	Pull down menu	Used for item selection. If you select a pull down menu, a list of selectable items is displayed.

Returning to Obtained Previous Page/Going to Obtained Next Page

The FOMA phone stores the last few screens displayed.

- To display the previous page,** 
- To display the next page,** 

Operations from Highlighted Information

You can easily make calls, send mails, and display Internet web pages using highlighted information (phone numbers, mail addresses, URLs, and so on) displayed on sites and in mail and MessageR/F.

Phone To function/AV Phone To function

You can make a call by selecting displayed information such as a phone number.

- You may not be able to use the Phone To/AV Phone To function depending on the site.
- Select information such as a phone number** ► 
 - “Voice call”/“Video-phone call”**
 - You can make a call after setting the Caller ID notification according to the screen.

Information

- You can add phone number information displayed on a web page to the phonebook using the submenu of the site screen.

Mail To function

You can send mails by selecting displayed information such as a mail address.

- You may not be able to use the Mail To function depending on the site.

- Select information such as a mail address** ► 
- Go to step 2 of “Composing i-mode mail” (P149).

Information

- You can add mail address information displayed on a web page to the phonebook using the submenu of the site screen.

Web To function

You can access a web page by selecting displayed information such as a URL.

- You may not be able to use the Web To function depending on the site.

- Select information such as URL** ► **Press** 
- If the confirmation screen to connect appears, press  [Yes].

i-appli To function

You can start i-appli by selecting the displayed URL (link).

1. Select i-appli information ▶ ▶ [Yes]

Information

- If “i-appli To” (P162) is set to “OFF”, you cannot start i-appli by this operation.

Downloading Images from Sites

You can set images saved from the displayed web page or screen memos. You can check the saved images in “My picture” of “Data box” → “i-mode” folder. → P166

1. Displaying Site / Saved Page screen ▶ [Menu] ▶ “Save graphics” ▶ ▶ Select an image ▶ ▶ “Yes”

Information

- Some images may not be saved.
- You cannot select “Save graphics” if the image that can be saved is not included or “Image” (P128) is set not to be saved.

Downloading i-melody from Sites

You can download a melody from a site and set it.

Download a melody from a site. A saved melody can be checked by “Melody” of “Data box” → “i-mode” folder (P176).

1. Display a site that supports downloading of melodies ▶ Select a melody ▶

- After the download is completed, the confirmation screen appears.

2. Video content menu

- “Play”: You can play the downloaded melody.
- “File Protection”: You can view the information of i-motion downloaded from network.
- “Back”: You can return to the site without saving the melody.

Information

- Depending on the site, you may not be able to download melodies.
- Some downloaded melodies may not be played back successfully.

Obtaining i-motion Movies from Sites

The i-motion movie is a moving image file containing images and sound. Acquired i-motion can be checked by “i-motion” of “Data box” → “i-mode” folder (P173).

- See “Mobile Phone User's Guide [i-mode]” for details.
- 1. Select an i-motion movie on a site that supports downloading of i-motion movies** ▶ 
 - When downloading is done, the confirmation screen appears.
 - 2. Video content menu**
 - “Play”: You can play i-motion downloaded from network.
 - “File property”: You can view the information of i-motion downloaded from network.
 - “Back”: You can return to the site without saving i-motion.

Information

- You can change the playback methods for while downloading i-motion movies. → P129
- Some downloaded i-motion movies might not be played back correctly.
- You cannot download i-motion movies of the streaming type and the ASF format.

Using My Menu

If you register frequently-used sites in My Menu, you can access them easily.

Registering Sites in My Menu

- 1. Bring up the page of the site to be registered** ▶ **Select “Register My Menu”** ▶ 
- 2. Select the i-mode password text box** ▶  ▶ **Enter the i-mode password** ▶  ▶ **“Select”**
 - For i-mode password, see “Changing i-mode Password”.

Information

- Some sites may not be registered in My Menu.
- If you subscribe to Menu/Search in a pay site, it will be registered in My Menu automatically.

Displaying Sites from My Menu

- 1. From the Stand-by display,  [i-mode]** ▶ **“iMenu”** ▶ **“My Menu”** ▶ **Select a site to access** ▶ 

Changing i-mode Password

The “i-mode password” (4 digits) is required to subscribe to and unsubscribe from message services and i-mode pay sites, and to perform i-mode mail settings. At purchase, this password is set to “0000” (4 zeros), so you need to change it to your own i-mode password. Be sure not to let others know your i-mode password.

- 1. On the Stand-by display,  [i-mode] ▶ “iMenu” ▶ “English” ▶ “Options” ▶ “Change i-mode Password”**
- 2. Select the “Current Password” text box  ▶  ▶ Enter your i-mode password (4 digits)  ▶ **
 - At purchase, the setting is “0000”, so enter “0000” for the first time.
- 3. Select the “New Password” text box  ▶ Enter a new i-mode password (4 digits) **
- 4. Select the “New Password (Confirmation)” text box  ▶ Enter a new i-mode password (4 digits)  ▶  ▶ “Select”**
 - Enter the same number as you entered in step 3.

Information

- If you forget your i-mode password, you can have it reset to “0000” at a handling counter such as a DoCoMo shop. You will be required to show your official identification (driver’s license, etc.).

Mail Menu	138
i-mode Mail.....	138
Displaying Mail in Inbox.....	139
Displaying Mail in Outbox.....	144
Displaying Mail in Unsent message	147
Composing Mail	149
Checking New i-mode mail and Message	154
Receiving Selected Mail	154
Checking whether Center Holds SMS....	155
Changing Mail Setting.....	155

Mail



To display the Mail menu

On the Stand-by display,  [Menu] 
 (Mail) or "Mail"

Mail Menu

On the mail menu, the mail functions offered by the FOMA phone are displayed.

Menu item	Description
Inbox	You can check the records and contents of received i-mode mails and SMS messages.
Outbox	You can check the records and contents of sent i-mode mails and SMS messages.
Unsent message	You can check the contents of temporarily saved i-mode mails and SMS messages.
Compose mail	You can bring up the display to compose i-mode mails and SMS messages.
Check new message	You can receive i-mode mails held at the i-mode Center.
Receive option	You can check the subjects of i-mode mail held at the i-mode Center and select mail to receive, or delete mail at the Center before receiving it.
Check new SMS	You can receive SMS messages by checking the SMS Center.
Mail setting	You can change the settings of each mail function of the FOMA phone.

i-mode Mail

The i-mode phone has the mail functions for exchanging e-mail (electronic mail) via the Internet. You need to subscribe to “i-mode” to use i-mode mail.

- See “Mobile Phone User's Guide [i-mode]” for more details.
- This model does not support all the services described in “Mobile Phone User's Guide [i-mode].” Check which models support which services in “Mobile Phone User's Guide [i-mode]”.

[SMS messages \(short messages\)](#)

You can send and receive SMS messages between FOMA phones without subscribing to i-mode. Sending and receiving SMS messages with subscribers to overseas carriers in addition to DoCoMo are also available. For information on the countries and overseas carriers with which SMS messages can be exchanged, see the International Service web page of DoCoMo.


- Refer to “Network Services User's Guide” for more details.

Displaying Mail in Inbox



The inbox folder list is displayed. You can sort mails by folder. You can check the records and contents of received i-mode mails and SMS messages.

1. From the Mail menu (P137), “Inbox”

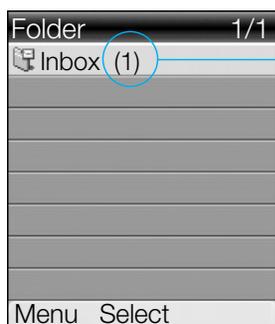

The number of unread mails

<Received Mail Folder List>

2. Select a folder ▶ ●

The time to receive the mail*¹ Sender*²
Subject*³

- ※1: The mail you receive is displayed on a time basis that day. From the next day on, each message is displayed by the date when you received it.
- ※2: The name is displayed when the entry is saved in phonebook.
- ※3: SMS is displayed as “SMS”

- ●/▲▼: You can view previous or after pages for multiple pages.

3. Select mail ▶ ●

<Received Mail Display>

- ●[Reply]: You can reply the receiver. Go to step 3 on page 149 of “Composing i-mode mail” / step 3 of page 152 “Composing SMS”.
- ●: You can view previous or next mail.
- ▲▼: You can scroll the screen.

Information

- To delete all displayed the contents in box setting “Security” (P156), enter terminal security code → ● [OK].
- The deco mail via FOMA phone includes of text and URL. If you select the URL, you can read deco mail. → P144
- You can save up to 400 received mails/SMS. Depending on the size of mails/SMS messages, the number of mails/SMS messages to save may be fewer.

Icons on the Received Mail Folder List Screen

Icon	Description
(gray)	Folder without unread mails/SMS messages
(gray)	Folder with unread mails/SMS messages
(blue)	Created folder without unread mails/SMS messages
(blue)	Created folder with unread mails/SMS messages

Received Mail List and Marks on Display Screen

Icon	Description
	Unread mail messages
	Read mail messages
	Unread SMS messages
	Read SMS messages
	Unread SMS reports
	Read SMS reports
	Unread SMS messages in the UIM
	Read SMS messages in the UIM
	Protected mails
	Forwarded mails
	Replied mails/SMS messages
	Mail with a file attached or pasted

Icon	Description
	Mail with a file to which the UIM restrictions are set attached
	Subject
※	Mail received as To-type
※	Mail received as Cc-type
※	Mail received as Bcc-type
※	To-type broadcast mail address
※	Cc-type broadcast mail address
※	Received date and time
※	A melody is pasted.
※	i-appli launch information is pasted.
※	A melody is attached.
※	An image of up to 10,000 bytes is attached.
※	A URL of i-shot is attached.
※	A URL or i-motion file is attached.
※	A pasted melody is damaged.
※	An attached file is damaged.

※: Appears only on the Received Mail Display Screen.

Using the Submenu of the Received Mail Folder

List Display

1. On the Received Mail Folder List screen (P139),  [Menu] ► Select from the following submenu items

Create folder

You can add a folder.

Rename folder [※]

You can edit the name of the selected folder.

Delete folder [※]

You can delete the selected folder. You cannot delete a folder if a mail is saved.

Auto sort[※]

You can set sort conditions to the selected folder. Go to step 2 of “Distributing the received mail to the folder automatically” (P143).

※: These operations are not available when you select Inbox.

Using the Submenu of the Received Mail

List Screen

Setting item/Setting at purchase → P256

1. On the Received Mail List screen (P139),  [Menu] ► Select from the following submenu items

Move to folder[※]

You can move the selected mails and messages to other added folders.

Delete

You can delete the selected mails and messages.

Delete selected

You can select and delete multiple mails and messages. After selecting mail messages,  [Menu] → Select “Delete”.

Delete all

You can delete all mail messages in the folder. To delete all, enter terminal security code →  [OK].

Protect ON/OFF^{※1}

You can set or cancel the protection of the selected mails and messages. Protected mail cannot be moved/deleted.

Sort

You can sort the mails and messages displayed on the List display.

Filter

You can change the type of the mails and messages displayed on the List display.

UIM^{※2}

You can move and copy the selected SMS messages in the FOMA phone to the UIM, and move and copy the SMS messages in the UIM to the FOMA phone.

※1: You cannot use this menu for SMS in the UIM.

※2: You cannot use this menu for protected SMS or SMS delivery report.

Using the Submenu of the Received Mail Display Screen

1. On the Received Mail List screen (P139), [Menu]

▶ Select from the following submenu items

Reply

You can reply after selecting the method to reply. Go to step 3 on page 149 of “Composing i-mode mail”/ step 3 on page 152 of “Composing SMS”.

- **Reply**^{※1}: You can reply to the sender of i-mode mail from the detailed received mail list.
- **Reply quoted**^{※1}: You can send the reply quoting the original text in your received i-mode mail.
- **Reply all**^{※1}: You can reply all receivers and senders at the same time.
- **Reply quoted all**^{※1}: You can reply all receivers and senders with quoting the original text in your received i-mode mail.

Forward

You can forward the displayed mail to other party. Go to step 2 (P149) of “Composing i-mode mail” or step 2 (P152) of “Composing SMS messages”.

Move to folder^{※2}

You can move the displayed mail to other added folders.

Delete

You can delete the displayed mail.

Protect ON/OFF^{※2}

You can set or cancel the protection to the displayed mail. The protected mail messages cannot be moved/deleted.

Store Address

You can register mail address / phone number of receiver on displaying the mail. Go to step 2 on page 64 of “Adding to Phonebook”.

Add to phonebook^{※3}

You can add the mail address / phone number written on the displayed mail text to the phonebook. Go to step 2 of “Adding to Phonebook” (P64).

Save attach file^{※4}

You can save an image () and a melody () of up to 10,000 bytes attached to the displayed mail. You can check the saved images by selecting “Data box”. → “My picture”. → “i-mode” folder. → P166, P176

Copy

- For copying after selecting the following items, see “Copying/Cutting/Pasting” (P219).
- **Body**: You can copy the text.
- **Subject**^{※4}: You can copy the title.
- **Sender**: You can copy e-mail address / phone number of the sender.

UIM^{※5}

You can move / copy the displayed SMS message in the FOMA phone to the UIM, and move / copy the SMS messages in the UIM to the FOMA phone.

※1: This menu is not displayed for SMS.

※2: You cannot use this menu for SMS of UIM.

※3: Activate this menu after selecting mail address / phone number to register. If nothing to be registered is included, you cannot activate this function.

※4: Activate this menu after selecting the file to save. If the file to register does not exist, you cannot activate this function.

※5: You cannot activate this function for i-mode mail or protected SMS.

Information

- The Submenu items for the SMS report / voice mail incoming notification display screen are “Move to folder”, “Delete,” and “Protect ON/OFF” only.

Distributing the received mail to the folder automatically

The mails / SMS messages is applicable for the condition can be saved to the folder automatically. You can set this only to additional folder.

1. On the Received Mail Folder List screen (P139), select a folder to specify conditions ▶ [Menu]

▶ Auto Sort

- The screen for automatic sort is displayed.

2. [Menu] ▶ Select submenu.

Address ※1 ※2

You can enter e-mail address or phone number to distribute each folder.

– **Open phonebook:** You can enter the phone number searching from phonebook.

– **Input address:** You can directly enter the address. When you enter e-mail address, you input correctly to a domain (the part of after @ mark).

Subject ※1 ※2

You can input the subject of mail to distribute a folder.

Release

You can cancel one of conditions of distribution of folder.

Release all

You can cancel all distribution conditions of folders.

※1 : When a received mail contains multiple conditions, it is distributed to the top folder of the folder list that corresponding condition is set.

※2 : You cannot set the multiple conditions in the same folder.

Receiving i-mode Mail/SMS Messages Automatically

When the FOMA phone is in the service area, it automatically receives i-mode mail/ SMS messages.

1. A mail or an SMS message is received

-  (White) or  (White) is displayed.

2. The result of the reception is displayed

- If you want to check the received i-mode mail message immediately, select “i-mode mail”, and press .
- If you want to check the received SMS message immediately, press .
- : Go to previous screen.

Saving Images over 10,000 bytes

A JPEG image over 10,000 bytes is not downloaded properly to the FOMA handset. Therefore, you can save it after extracting the data from URL for image view in mail text, and connecting i-shot center.

1. On the Received Mail Folder List screen (P139), select “URL” ▶ ▶ “Yes”

- For the method of saving images, see “Obtaining Images from Sites” (P134).

Information

- You can view the contents of received Deco-mails in this way.

Downloading i-motion Movies from i-motion Mail

Data of i-motion mail is not downloaded to the FOMA phone even when it is received. You need to access the i-motion mail Center from its URL given to the mail text to see an i-motion movie to download and save the data. The saved i-motion can be checked in “i-motion” of “Data box” → “i-mode” folder (P173).

1. From the Received Mail Folder List screen (P139), select the URL ▶ ▶ “Yes”

- Downloading of i-motion starts.
- The i-motion is played while being downloaded in the case it is possible.

2. After downloading, press

- “Play”: You can play downloaded i-motion.
- “File property”: You can view information of downloaded i-motion from a site.
- “Back”: The site will be returned, not saving i-motion.

Displaying Mail in Outbox



The Sent Mail List is displayed. You can check the records and contents of sent i-mode mail and SMS messages.

1. From the Mail menu (P137), select “Outbox”.

The time to send the mail*¹ Receiver*²
Subject*³

※1: The mail you receive is displayed on a time basis that day. From the next day on, each message is displayed by the date when you received it.

※2: The name is displayed when the entry is saved in phonebook.

※3: SMS is displayed as SMS

<Outbox>

- /▶: Display the previous or next page for multiple pages.

2. Select a mail ▶ 

1/6

docomo-△△-taro. □□□ — Receiver*
 @docomo.ne.jp
 2006/12/01 12:34 — The time to send the mail*
 — Subject*

<Sent Mail Display>

- : Display the previous or next page.
- : Scroll by screen.

Information

- To display the box which is set “Security” (P156), enter terminal security code →  [OK].
- You can save up to 400 mails / SMS. Depending on the size of mails / SMS messages, the number of mails / SMS messages that can be saved may be smaller.

Icons on the Sent Mail List display and the Sent Mail display screen

Icon	Description
	Mail successfully sent
	Mail failed to be sent
	SMS message successfully sent

Icon	Description
	SMS message failed to be sent
	Sent SMS messages in the UIM
	Protected mail / SMS messages
	Mail with a file attached
	Mail with an attached file to which UIM restrictions are set
	Subject
 ※	Mail address successfully sent as To-type mail
 ※	Mail address failed to be sent as To-type mail
 ※	Mail address successfully sent as Cc-type mail
 ※	Mail address failed to be sent as Cc-type mail
 ※	Mail address successfully sent as Bcc-type mail
 ※	Mail address failed to be sent as Bcc-type mail
 ※	Sent date and time
 ※	A pasted melody file is attached.
 ※	An i-appli activation information file is attached.
 ※	A melody is attached.
 ※	An image of up to 10,000 bytes is attached.
 ※	An image (JPEG) of over 10,000 bytes is attached.
 ※	Moving images are attached.
 ※	A corrupted melody file is attached.
 ※	A corrupted file is attached.

※: Appears only on the Sent Mail Display Screen.

[Using the Submenu of the Sent Mail List Screen](#)

Setting item/Setting at purchase → P256

1. From the Sent Mail Folder List screen (P144), [Menu] ► Select from the following Submenu items

Edit

You can edit the selected mail again. See “Composing i-mode mail” (P149) / “Composing SMS messages” (P152).

Delete

You can delete the selected mail.

Delete selected

You can select and delete multiple mail messages. After selecting mail messages,  [Menu] → Select “Delete”.

Delete all

You can delete all mail messages in the Sent box.
To delete all, enter terminal security code →  [OK].

Protect ON/OFF^{※1}

You can set or cancel the protection to the selected mail. Protected mail cannot be deleted.

Sort

You can sort the mail messages displayed in the list screen.

Filter

You can change the type of the mail messages displayed in the list screen.

UIM^{※2}

You can move and copy the selected SMS message in the FOMA phone to the UIM, and move and copy the SMS messages in the UIM to the FOMA phone.

※1 : You cannot use this menu for SMS in the UIM.

※2 : You cannot use this menu for i-mode mail or SMS delivery report.

[Using the Submenu of the Sent Mail Display Screen](#)

1. From the Sent Mail Display screen (P145), [Menu] ► Select from the following Submenu items

Edit

You can edit the displayed mail again. Go to step 2 in “Composing i-mode mail” (P149) / “Composing SMS messages” (P152).

Delete

You can delete the displayed mail.

Protect ON/OFF^{※1}

You can set or cancel the protection to the displayed mail. The protected mail messages cannot be deleted.

Store address

You can register mail address/phone number of receiver on displaying the mail. Go to step 2 on page 64 of “Adding to Phonebook”.

Add to phonebook^{※2}

You can add the mail address and phone number of the sender of the displayed mail to the phonebook. Go to step 2 (P64) of “Adding to Phone Book”.

Copy^{※3}

- For copying after selecting the item, see “Copying / Cutting / Pasting” (P219).

– **Body:** You can copy the text.

– **Subject:** You can copy the subject.

UIM^{※4}

You can move and copy the displayed SMS message to the UIM, and move and copy the SMS messages in the UIM to the FOMA phone.

※1: This function is not available in SMS of UIM.

※2: After selecting the mail address / phone number, you can activate the function. If nothing that can be registered is included, you cannot activate the menu properly.

※3: This function is not available for SMS.

※



The time to save^{※1} Receiver^{※2}
Subject^{※3}

※1: The mail you save is displayed on a time basis that day. From the next day on, each message is displayed by the date when you saved it.

※2: The name is displayed when the entry is saved in phonebook.

※3: SMS is displayed as “SMS”

<Unsent message List>**Information**

- To display the box which is set “Security” (P156), enter terminal security code →  [OK].
- You can save up to 400 mails / SMS. Depending on the size of mail/ SMS, the number of mails / SMS messages that can be saved may be smaller.

Icons on the Unsent Mail List display and the Unsent Mail display screen

Icon	Description
	Unsent mail
	Unsent SMS message
	Mail with a file attached
	Mail with an attached file to which UIM restrictions are set
	Subject
 ※	Address of To-type
 ※	Address of Cc-type
 ※	Address of Bcc-type
 ※	Attached file
 ※	A pasted melody file is attached.
 ※	i-appli launch information is attached.
 ※	A melody file is attached.
 ※	An image file of up to 10,000 bytes is attached.
 ※	An image (JPEG) of over 10,000 bytes is attached.
 ※	A moving image file is attached.
 ※	A damaged melody file is attached.
 ※	A damaged file is attached.
 ※	Text

※: Only appears on the Unsent Mail display screen.

Using the Submenu of the Unsent Message List Screen

Setting item/Setting at purchase → P257

1. From the Unsent Message List screen (P147), [Menu] ► Select from the following submenu items

Send

You can send the selected mails and messages.

Delete

You can delete the selected mails and messages.

Delete selected

You can select and delete multiple mail mails and messages. After selecting mail messages,  [Menu] → Select “Delete”.

Delete all

You can delete all mail messages in the folder. To delete all, enter terminal security code →  [OK].

Sort

You can sort the mail messages displayed in the list display.

Filter

You can change the type of the mail messages displayed on the list display.

Using the Submenu of the Unsent Mail Display Screen

From the Unsent Mail display screen (P147), press  [Menu] and select a submenu item. See “Using the Submenu of the Compose mail display” (P150) / “Using the Submenu of the Compose SMS Screen” (P153) for the available submenu items.

Composing Mail

Composing i-mode Mail



You can create and send new i-mode mail.

- 1. From the Mail menu (P137), select “Compose mail”**
▶ **“Compose message”**

<Compose message Display>

- 2.  Select the Address field ▶  ▶ “Enter Address” ▶ Enter the address ▶ “Enter Address”**
▶ 
 - For a menu displayed for destinations, see “Address menu” (P150) of “Using the Submenu of the Compose Mail Display”.
- 3.  Select the Subject field ▶  ▶ Enter the subject ▶ **
 - In case of not attaching the file, go to step 5.
- 4.  Select (Attach file) field ▶  ▶ Add attached file**
 - Select the file saved in “My picture” / “i-motion” (P166) / “Melody” (P173) of Data box” (P176) / “Melody”.
 - For a menu displayed for attachment files, see “Attach file menu” (P150) of “Using the Submenu of the Compose Mail Display”.
 - If a file is attached, it can be displayed/played by pressing .
- 5.  Select the Message field ▶  ▶ Enter message ▶ **
- 6.  [Send]**

Information

- Depending on the radio wave conditions, the characters may not be sent successfully to the destination.
- Half-pitch katakana or pictographs may not be displayed properly when exchanging mails between i-mode phones.
- When you enter the destination of the phonebook that a secret code is set, the secret code is automatically added. However, the secret code does not remain on the destination of the sent mail.

Using the Submenu of the Compose Mail

Display

1. From the Compose Mail display (P149),  [Menu] ►
Select from the following Submenu items

Send

You can send the i-mode mail that you are composing or editing.

Save

You can save the i-mode mail that you are composing or editing in unsent message.

Add address

You can add addresses. When you add addresses, you can send same i-mode mail to multiple recipients at the same time. You can send same mail to up to 5 addresses at a time.

- **Open phonebook:** You can add the address by searching the phonebook.

- **Input address:** You can enter the address directly.
- **Received list:** Set an address selected from received mail history.
- **Sent list:** Set an address selected from sent mail history.

Address menu

- **Open phonebook:** You can add the address by searching the phonebook.
- **Input address:** You can enter the address directly.
- **Change to To:** You can change the setting of receiver to “To type”.
- **Change to Cc:** You can change the setting of receiver to “Cc type”.
- **Change to Bcc:** You can change the setting of receiver to “Bcc type”.
- **Delete address:** You can delete the address.
- **Received list:** Set an address selected from received mail history.
- **Sent list:** Set an address selected from sent mail history.

Attach file menu

- **Attach file:** You can select the file in “My picture” (P166) / “i-motion” (P173) / “Melody” (P176) of “Data box”.
- **Take a picture **: A Still Image Finder Stand-by screen appears. → P110
Press  [Attach] on Still Image Shooting End display to add to the attachment file.

– **Take a movie**^{※4}: A Moving Image Finder Stand-by screen appears. → P115
Press  [OK] on Moving Image Shooting End display to add to the attachment file.

– **Delete att. file**^{※2}: You can delete the attachment file.

– **Play/ Display file**^{※2}: You can play or view the file.

Add signature

You can insert a signature at the end of the text of mail.

- You need to register the signature beforehand.
→ p156

Delete body

You can delete the the text of mail that you are composing or editing.

Delete mail

You can delete the mail under composing or editing.

※1 : After selecting  /  /  , you can operate the menu.

※2 : After selecting  , you can operate the menu.

※3 : Unavailable when a shot still image exceeding 5,000 bytes is already attached to an attachment file.

※4 : Unavailable when a moving image/i-motion or JPEG image exceeding 10,000 bytes is already attached to an attachment file.

Information

- The type or receiver
 - To: Ordinary receiver
 - Cc: To inform the contents in addition to the receiver.
 - Bcc: To inform the contents if you do not want other receivers to know except for direct receiver.

- About attachable files

Type of file	Maximum number of files
Melody	Up to 10 files ^{※1}
Image of 10,000 bytes or less (JPEG, GIF)	
Image over 10,000 bytes (JPEG)	1 file ^{※2}
Moving image/ i-motion movie	

※1 : Up to 10 files when the total size of a data file including melodies, images and the text is equivalent to 5,000 full-pitch characters (i.e., 10,000 bytes).

※2 : You can attach either an image or moving image/ i-motion movie of up to 100K bytes. You can attach the file separately from melody files and images of 10,000 bytes or less.

- You cannot attach files that are prohibited from being attached to mail or output from the FOMA phone to other devices.
- When a JPEG image or an i-motion movie in excess of 10,000 bytes is attached, the number of characters you can enter in the text field decreases by the equivalent of 100 full-pitch (200 half-pitch) characters.
- The i-mode phone of the mova service cannot receive GIF images and melodies.
- Some attached files may be deleted at the i-mode Center or not be received, displayed, or played properly by the recipients.

Using the Submenu of the Creating next Entry Screen


From creating next Entry screen, press  [Menu] and select a Submenu item. See “Using the Submenu of Character Entry display” (P218) for the available Submenu items.

Composing SMS messages



You can create and send SMS messages. You can send and receive SMS messages to and from the subscribers to overseas carriers in addition to DoCoMo. For information on the countries and overseas carriers with which SMS messages can be exchanged, see the International Service web page of DoCoMo.

1. From the Mail menu (P137), select “Compose mail”
▶ “Compose SMS”

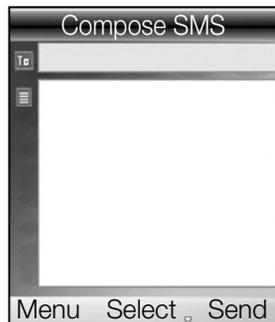

<Compose SMS Display>

2.  Select the Address field ▶  ▶ “Enter Address” ▶ Enter the recipient’s phone number ▶ 
 - For a menu displayed for destinations, see “Address menu” (P153) of “Using the Submenu” of the Compose SMS Display.
3.  Select the Message field ▶  ▶ Enter the message ▶ 
4.  [Send]

If the recipient is a subscriber to an overseas carrier other than DoCoMo:

“+” (Press * key 2 times) ▶ “Country code” ▶
“Mobile phone number of the recipient”

or

“010” ▶ “Country code” ▶ “Mobile phone number of the recipient”

- If the mobile phone number starts with 0, enter the number by omitting “0”.

Information

- Depending on the radio wave conditions, the characters may not be sent successfully to the destination.
- When you send an SMS message to a subscriber to an overseas carrier, if characters that the other party does not support are included in its text, they may not be displayed correctly.
- If the receiver has an i-mode phone of mova service, it may receive SMS from FOMA phone as i-mode mail.

- If the sender does not notify caller ID (including public phone/Unknown ID), you cannot answer to the SMS message.

Using the Submenu of the Compose SMS

Display

1. From the Compose SMS display (P152), [Menu] [Menu] **▶ Select from the following Submenu items**

Send

You can send an SMS message that you are composing or editing.

Save

You can save an SMS message that you are composing or editing in Draft box.

Address menu

- **Open phonebook:** You can add the address by searching the phonebook.
- **Input address:** You can enter the address directly.
- **Received list:** Set an address selected from received mail history.
- **Sent list:** Set an address selected from sent mail history.

SMS report request

You can set whether to request a report for the SMS message that you are composing. An SMS report is an SMS message to notify you when your SMS message reaches the recipient.

SMS validity term

You can set the period during which the SMS Center holds the SMS message that you are composing or editing when the recipient cannot receive it immediately.

Delete body

You can delete whole sentences entered in the text. The phone number of receiver will not be deleted.


Delete SMS

You can delete the SMS message that you are composing or editing.

Using the Submenu of of the Character Entering Display while Composing SMS

From the Compose SMS display, press [Menu] [Menu] and select a submenu item. See “Using the Submenu of the Character Entry display” (P218) for the available Submenu items.

Checking New i-mode mail and Message

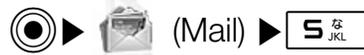

When your FOMA phone has been turned off or out of the service area, you can check whether or not the i-mode Center holds i-mode mail and messageR/F.

1. From the Stand-by screen, press for 2 or more seconds

- The Check results display appears. To read the received i-mode mail immediately, select “Mail” and press .

Information

- When the i-mode Center holds i-mode mail and messageR/F, the relevant icon (P31) is displayed. When mail or messages arrive at the Center when, for instance, your FOMA phone is turned off, the icon may not be displayed.
- When “Receive option” is set to “ON,” you will receive all mail held at the Center if you use “Check new message.” If you do not want to receive all mail, unmark “Mail” from the “Check new message” (P155) beforehand.

Receiving Selected Mail



You can check the subject of i-mode mail held at the i-mode Center and select mails to receive, or delete mails at the Center before receiving them.

To use this function, you need to set “Receive option” (P155) to “ON” beforehand. Note that, when this is “ON”, i-mode mail cannot be received automatically.

1. From the Mail menu (P137), “Receive option”

- The phone is connected to the Center, and the display for selecting mail to receive is displayed.

2. Select the pull-down menu for each mail Select “Receive”, “Delete” or “Hold”

3. Select “Receive/Delete”

- The confirmation screen appears.

4. Select “OK”

- In step 2, the mail for which “Receive” was selected are received immediately.

Checking whether Center Holds SMS



When your FOMA phone has been turned off or out of the service area, you can check whether or not the SMS Center holds SMS messages.

1. From the Mail menu (P137), “Check new SMS”

- The Check results display appears. To read the received SMS messages immediately, press

Changing Mail Setting

Communication



You can make settings related to communication of mail and SMS messages.

Setting items/Setting at purchase → P239

1. From the Mail menu (P137), “Mail setting” ▶ “Communication” ▶ Select from the following setting items ▶ After setting, [Done]

Receive opt. setting

You can set whether to select i-mode mail to receive. If this function is set to “ON,” you cannot receive i-mode mail automatically.

Receive attach file

You can set whether to receive images or melodies attached to i-mode mail.

Check new message

When you receive messages by performing “Check New Message,” you can select an item to check from i-mode mail, messageR/F.

SMS report request

You can set whether to request a report for the SMS message that you are composing. An SMS report is an SMS message to notify you when your SMS message reaches the recipient.

SMS validity term

You can set the period during which the SMS Center keeps the SMS message that you are composing or editing when the recipient cannot receive it immediately.

Information

- The attachment file set to by “Receive attach file” cannot be received as the file is deleted at i-mode center.
- You can receive the melody of MFi format attached to the body of mail even if you set the “Melody” to by “Receive attach file”.

Edit



You can make settings related to a signature to be attached to the mail text and quotation mark for when replying to mail.

Setting items/Setting at purchase → P239

1. From the Mail menu (P137), “Mail setting” ▶ “Edit”
▶ Select from the following setting items ▶ After setting,  [Done]

Edit signature

You can set whether to automatically attach your name and address (signature) at the end of the text and can set the contents of the signature.

Edit quotation

You can set symbols or sentences to be attached to the head of the original text (quotation mark) for “Reply quoted”.

View



You can make the settings related to the display of mail and SMS messages.

Setting items/Setting at purchase → P239

1. From the Mail menu (P137), “Mail setting” ▶ “View” ▶ Select from the following setting items ▶ After setting,  [Done]

Character size

You can set the character size of the text on the Mail display screen.

Scroll

You can set the number of lines to scroll when pressing  on the Mail display screen.

Mail list display

You can set the display method (the number of lines/the contents displayed) on the mail list display.


Folder security

You can set security to Inbox, Outbox, and Unsent messages in the Mail menu. To display the messages in the box with security set, enter terminal security code →  [OK].

Melody auto play

You can set whether to automatically play a melody attached or pasted on the mail display screen.

Others

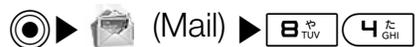

You can check the settings made in “Mail setting” and reset the settings to the default.

1. **From the Mail menu (P137), “Mail setting”** ▶
“Others” ▶ **Select from the following setting items.**

Check settings

You can check the settings made in the “Mail settings”.

Reset settings

You can reset the settings made in the “Mail settings” to the default. To reset settings, enter terminal security code → [OK].

Reset data

You can delete all mail messages and MessageR/F stored in the FOMA phone. To reset the data, enter terminal security code → [OK].



What is i-appli.....160
 Downloading i-appli from Sites160
 Starting i-appli.....161

i-appli



To display the Software List

On the Stand-by display,  [Menu] 

 (i-appli) or “i-appli”

What is i-appli

By downloading various software programs from sites and saving them into the FOMA phone, you can automatically update the stock prices, weather information, etc. and enjoy games even without connecting to the network.

- Refer to “Mobile Phone User's Guide [i-mode]” for details.
- This model does not support all the services described in “Mobile Phone User's Guide [i-mode]”. Check which models support which services described in “Mobile Phone User's Guide [i-mode]”.

Downloading i-appli from Sites

Download software from sites and start the FOMA phone.

1. Display a site that supports downloading of i-appli

▶ Select an item that enables you to download the software ▶ 

2. After the download is finished,

- After the download is finished, the communication setup display may appear. After setting, press  [Done].
- Some software may start immediately after it is downloaded. In this case, the software may not have been saved. When ending the software, the confirmation display may appear asking whether to save it. Select “Yes” to save it.

3. “Yes”/“No”

- “Yes”: Activates i-appli.
- “No”: Returns to the Site display.

Information

- Downloading is not available at some accessed sites.
- At downloading software, the confirmation display may appear asking whether to use the “serial number of your mobile phone/UIM”. Select “Yes” to start downloading. In this case, the “serial number of your mobile phone/UIM” is sent to the IP (Information Service Provider) over the Internet, so could be perceived by third parties. However, your phone number, address, age and gender are not notified to the IP (Information Service Provider) or others by this operation.

Starting i-appli



1. Press [i-mode] for 1 or more seconds from on Stand-by display.

<Software List>

2. Select the software to be launched
 - : End the activation of i-appli.

Icons on the Software List

Icon	Description
(Blue)	The folder you created
	Normal i-appli
	i-appli downloaded from SSL site
	i-appli that Auto start is set

- Each icon will be displayed thinly when downloading by other UIM or upgraded of i-appli (Restriction on UIM).

Information

- Some software continues communication after downloaded. You can let it not communicate by “Communication” setting.

Using the Submenu of the Software List

Setting item/Setting at purchase → P257

- Some submenus are not available depending on the software.

1. From the Software List (See left), [Menu] ►
Select from the following Submenu items

Create folder[※]

You can create a folder.

Delete folder[※]

You can delete a selected holder. You cannot delete a folder in which software is saved.

Rename folder[※]

You can edit the name of the selected holder.

Move to folder

You can move a selected software to another folder you created.

Upgrade

You can upgrade the version of the selected software.

Delete

You can delete the selected software.

Delete selected

You can select and delete multiple software. After selecting, [Menu] → Select “Delete”.

Delete all

You can delete all softwares in i-appli. To delete all,  → Enter terminal security code →  [Done].

Sort

You can sort software.

Properties

You can check the name, size, etc. of the selected software.

Certificate

You can check the owner, issuer, expiration date, etc. of the certificate used for the selected software.

Network setting

You can set whether to communicate while the selected software is being started. After setting, press  [Done].

i-appli To

You can set whether to start the software selected from a site or mail. After setting, press  [Done].

Icon info setting

You can set whether icon information for i-mode mail, SMS, messageR/F, battery level, Manner Mode, radio wave strength and being out of area is to be used by the software selected. After setting, press  [Done].

Autostart setting

You can set to activate the selected software automatically. If you set to “Set”, select “Edit” and enter the method for activation and the time. After setting, press  [Done].

Show desc setting

You can set whether to display software information at i-appli downloading. After setting, press  [Done].

Autostart failure

You can check information when i-appli fails to start automatically.

Trace info

You can check information when i-appli supporting the trace function has been terminated due to an error.

System info

You can check system information such as memory usage status of i-appli.

※ : You cannot use the folder you created.

Information

- Note that you may not be able to receive timely information if you have set “Network Setting” to “OFF”.
- When you perform “Upgrade” of the software, the confirmation display may appear asking whether to use the “serial number of your FOMA phone / UIM”. If you select “Yes”, version upgrade starts. In this case, your “mobile phone number / serial number of UIM” is sent to the IP (Information Service Provider) over the Internet, so could be perceived by third parties. However, your phone number, address, age, and gender are not notified to the IP (Information Service Provider) or others by this operation.
- Since the version up of pre-installed i-appli is free of charge, the confirmation screen asking whether to use the “serial number of your FOMA phone / UIM” does not appear.
- If “Icon Info set” is set to “Use”, icon information for i-mode mail, SMS, messageR/F, battery level, Manner mode, radio wave strength and being out of area may be sent to the IP (Information Service Provider) over the Internet just like your “mobile phone number / serial number of UIM”, so could be perceived by third parties. However, your phone number, address, age, and gender are not notified to the IP (Information Provider) or others by this operation.

Pre-installed i-appli

九九で頭の体操

This game is to remove the blocks when putting the block has a same result after multiplying the serial number. (Brain teaser by multiplication matrix)

1. From the screen of software list (P161), select “九九で頭の体操” ▶ ▶ Select the following menu

-  [Quit]: You can end a game.

Start ^{※1}

Starts the game.

Stage ^{※1}

You can select the stage (01~10) by pressing 

Continue ^{※2}

You can resume the game on pause.

Key info

You can view the information on each button. After displaying, press  [Menu] to return to the menu.

Help

You can view the information to remove the block. After displaying, when you press , you can change the screen. Press  [Menu] to return to the menu.

Rank

You can view the status of score rank. After displaying, you can return to the menu by pressing  [Menu].

Sound

You can set the sound of game. Each time you press , you can turn on or off sound.

- ※1 : You cannot see these menus on games on pause.
- ※2 : You can see these menus only on games on pause.

Screen on game



- Indicates next block.
- If you remove the block, the number will be reduced. If the number is 0, the stage will be clear.
- Indicates the current stage.
- If the rest of blocks are cleared, the block will be dropped beside 1 line.

-  [Pause]/[Resume]: You can pause the game. If you press it again, you can resume it.
-  [Menu]: Terminate the game and display the menu.

Button on game


See Key info (P163) of menu for details.

Deleting the block

You can delete the falling blocks if you meet the following condition. When the blocks are full from 4th line to 7th line from the left, the game is over.


<Example: Combining the block of number **2 2 4**>

Vertical direction

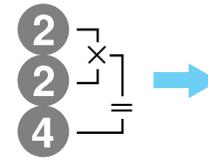

All 3
blocks will
be
removed.

Horizontal direction

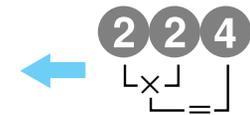

- In case the result after multiplying is 2 digits a, you can paste the block beside same to the last number.
- See “Help” (P163), for the block except for number.

Game over


The screen of game over is displayed. If you press , you can view the score by displaying rank screen. If you press  [Menu], you can return to the menu.

Information

- When you close the FOMA phone during the game, the game is continued. The game is paused when a call comes in.

Introduction of Data box.....	166
Displaying/Managing/ Editing Images.....	166
Playing back/Managing/ Moving Images/i-motion.....	173
Playing back/Managing/Melody.....	176

Data box

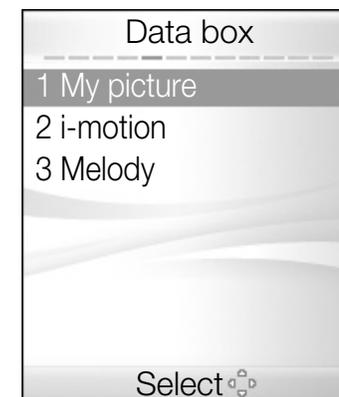

To display the Data box menu

On the Stand-by display,  [Menu] 
 (Data box) or “Data box”

Introduction of Data box

Data box has the following items and folders:※

※: Folders added by the user are not included.

Menu item	Folder	Contents
My picture	Camera	Still images etc. shot camera.
	Data transfer	Still images obtained through data transmission, etc.
	Item	Still images usable for frames and elements
	Pre-installed	Pre-installed still images
	i-mode	Still images obtained from sites, etc.
i-motion	Camera	Moving images shot by video camera etc.
	Data transfer	Moving images obtained through data transmission, etc.
	Pre-installed	Pre-installed moving images
	i-mode	i-motion obtained from sites, etc.

Menu item	Folder	Contents
Melody	Data transfer	Melodies obtained through data transmission, etc.
	Pre-installed	Pre-installed melodies
	i-mode	Melodies obtained from sites, etc.

Displaying/Managing/Editing Images



You can display the shot still images, or still images obtained from sites or i-mode mails.

The File Format To Display


- This FOMA phone supports to display file format as follows.

File format ※	JPEG, GIF
Pixel/File size	Up to 1280 x 1024 dots
File size	JPEG file : Up to 700K bytes, GIF file : Up to 500K bytes
Extension name	jpg, gif

※: Some files cannot be played depending on the file format.

Displaying Images

1. From Data box menu (P165), “My picture”

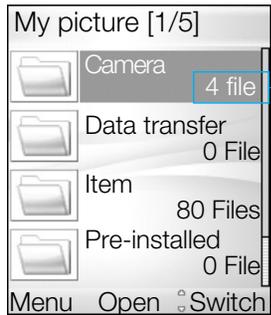

The number of files in the selected folder

- [View by] : You can select the type of listing the folder.

<Folder List>

2. Select a folder ▶



The name and size of selected file

- [Mail] : You can compose i-mode mail with attaching the selected file. Go to step 2 on page 149 “Composing i-mode mail”.

<Image File List>

3. Select a file ▶



File name

- [Full] : The image will be displayed in full screen.
- [Mail] : You can send i-mode mail with attaching the selected file. Go to step 2 on page 149 of “Composing i-mode mail”.
- : Displays the previous or next file.

<Image>

The mark on the image file list

Mark	Description
	Previous list
	The file set the restriction*
	Unrecognized file

※: Output from the FOMA phone is inhibited or file editing is restricted.

Using the Submenu of the Folder List

Setting item/Setting at purchase → P258

1. From the Folder List (P167), [Menu] ► Select from the following Submenu items

Open

You can open the selected folder.

New folder[※]

You can create a folder.

Delete[※]

You can delete the selected folder.

Sort by

You can sort the folders.

Sorting the created folders are applied to only by the "Name".

View by

You can change folder display methods.

Memory info.

You can check status of the storage area on the FOMA phone, etc.

Folder property

You can check the name, size and the number of the files in the folder of the selected folder.

※: You cannot use this menu in pre-installed folder.

Information

- If you delete a folder which includes an image set as a wallpaper in stand-by mode, phonebook or the video-phone call, or if you delete a folder which includes a melody set to ringtone, alarm or schedule, each one can be returned to the setting at purchase.

Using the Submenu of the Image File List Display

Setting item/Setting at purchase → P258

1. From the Image File List screen (P167), select a file ► [Menu] ► Select from the following Submenu items

New folder^{※1}

You can create a folder.

Files^{※1}

- **View** : You can display the selected file.
- **Edit**^{※2 ※4} : You can edit the selected file. → P171
- **Move**^{※3} : You can move the selected file to other folder. Select the folder [Folder] → [Paste].
- **Copy**[※] : You can copy the selected file to other folder. Select the folder [Folder] → [Paste].
- **Delete** : You can delete the selected file.
- **Delete all** : You can delete all the files in the folder. You need to enter your terminal security code for deleting.
- **Rename** : You can change the name of the selected file.

Mark/Unmark ※

You can move, copy, and delete after selecting multiple files. After selecting, press  [Menu] → “File”
→ Select “Move”/“Copy”/“Delete”

- **Mark** : You can select a file at a time.
- **Mark all** : You can select all the files collectively.
- **Unmark** : You can deselect the file selected by “Mark” or one of the files selected by “Unmark all” at a time.
- **Unmark all** : You can deselect the file selected by “Mark” or all the files selected by “Unmark all”.

Send via mail ※ ※4

You can attach a file to i-mode mail for sending. Go to step 2 (P149) of “Compose i-mode mail”.

Set as wallpaper

Select the “Main display” or “Sub display” and set as wallpaper for the Stand-by display, etc.

Slide show

- **Go** : Files in the folder are displayed in order.
- **Settings** : You can set the “view as” and “Time interval (secs)”. After setting, press  [Done].

Make animated GIF ※ ※4

You can select up to 10 files to create animation. After selecting the files, press  [Make].

Sort by

You can sort files.

View by

You can change file display methods.

Memory info.

You can check status of the storage area on the FOMA phone, etc.

File property

You can check the name, size and type, created time, resolution, file restriction of the selected file.

- ※1: You cannot use this menu in “Item” or “Pre-installed” folder.
- ※2: You can use only JPEG file (Except for unrestricted file).
- ※3: You cannot move and copy this menu to “Item” or “Pre-installed” folder.
- ※4: You cannot use this menu for restricted file.

Information

- If you delete the image set in stand-by mode, phonebook, or video-phone, each image returns to the setting at purchase.

Using the Submenu of the Image Display

Setting items/Setting at purchase → P258

1. From the Image display (P167), [Menu] ► Select from the following Submenu items

Files^{※1}

- **Delete** : You can delete the displayed file.
- **Rename** : You can change the name of the displayed file.
- **Edit^{※2}** : You can edit the displayed file. →P171

Send via mail^{※1 ※3}

You can attach a file to i-mode mail for sending. Go to step 2 of “Compose i-mode mail” (P149).

Full

You can bring up an image on the full display hiding the soft keys and display information.

- : The previous image/next image is displayed.
- : The full display is cancelled.

Zoom

Displays an image in a large size.

-  [+]: Each time you press , the displayed image is enlarged.
-  [-]: The image is displayed in the previous size.
-  : You can move the display position of the expanded image.
-  : The zoom is cancelled.

Set as wallpaper

Select the “Main display” or “Sub display” to set as wallpaper for the Stand-by display.

Slide show

- **Go** : Files in the folder are displayed in order.
- **Settings** : You can set the “View as” and “Time interval (secs)” for the slide show. After the setting, press  [Done].

Go to list

You can return to the list screen. (P167)

File property

You can check the name, size, type, created time, resolution and file restriction of the selected file.

- ※1: You cannot use this menu in “Item” or “Pre-installed” folder.
- ※2: You can use only JPEG file (Except unrestricted file).
- ※3: You cannot use this menu in restricted file.

Information

- If you delete each image which set as a wallpaper in stand-by mode, phonebook, or video-phone call, each one can be returned to the setting at purchase.

Editing Still Images

You can edit a still image. You can edit only a JPEG file. There are some cases that you may not be able to edit. The edited still image is saved into the folder containing the original still image.

Setting items/Setting at purchase → P258

1. **From the Image File List (P167) Display (P167), select a file, on the Image Display screen, press**  **[Menu] ▶ “Files” ▶ “Edit”**
 - The screen to edit the image appears.
2. **From the Edit display,  [Menu] ▶ Select from the following editing methods ▶ After setting,  [Save] ▶ New file/Original file ▶ **
 - After editing in screen, you can operate the function as follow.
 -  [Menu]: Displays the edit menu.
 -  [Undo]: Undoes the edited file.

Save[※]

You can save the edited still image.

Rotate

You can rotate a still image 90 degrees to the left or to the right.

1) Left / Right

-  [Rotate]: You can rotate a still image 90 degrees to the left or to the right.
-  [Cancel]: You can cancel editing.

2) Press

Resizing

You can change the size of a still image.

Insert

– **Text** : You can paste a text to a still image.

- If you press  [Menu], you can change the settings of “Font size” and “Font color”.

1) Select a text box ▶

2) Enter text ▶

-  [Text]: You can change the text box.
-  [Cancel]: Returns to previous menu.

3) ▶ Select a position of the text using ▶

- **Frame** : A frame is added to a still image.
Select a frame to add.

1) Select a frame ▶

-  [Rotate]: You can rotate a still image 180 degrees to the left or to the right.
-  [Cancel]: Returns to previous menu.

2) Press

- **Element** : An element is pasted to a still image.

- If you press  [Menu] on element selection screen, you can select a size of the element.

1) Select an element ▶

2) Select a position to paste the element by ▶



- If you continue to add same element, repeat step 2.
-  [More]: You can change to another element.

3) [Done]

Clipping

1) Select the size for trimming ▶

- The range for trimming is marked in red line.

2) Select the position for trimming by pressing



- If you select “User defined size”, move the red cursor by pressing , and set the starting and ending point for trimming by pressing .

Effect

- **Black & White** : Makes the color tone black and white.

- **Sepia** : Makes the color tone sepia.

- **Negative** : Reverses the color tone.

- **Black & White negative** : Makes the color tone black and white and reverses the color tone.

- **Color balance** : After selecting “Red”, “Green” or “Blue”, adjust the shading by pressing .

- **Contrast** : Emphasizes or weakens contrast.

- **Sharpness** : Emphasizes the contour.

- **Softness** : Gradates the contour.

- **Mosaic Blur** : Applies the mosaic. Select “Square” / “Round” and move to red line by pressing , and then set the starting and ending point to apply the mosaic by pressing .

Mirror

Reverse the image horizontally.

Undo [※]

Undoes the edited file.

※You cannot use this menu for the file before editing.

Information

- You can perform “Resizing” only to make it smaller than the original still image. You may not be able to change the size depending on the display size of the original image.
- If a screen proportion of the size selected by “Resize” is different from the original size of still image, it may be saved by different size from selected one.

- In the size of still image is “1280 x 1024”, you cannot set “Insert” or “Effect”.
- Image sizes that allow “Frame” setting are “352X288”, “320X240”, “176X220”, “176X144” and “128X96”. “Frame” cannot be set for frames of other sizes.
- You cannot specify a display size larger than the original still image to “Clipping”.
- For the Text box, Frame image or Element at purchase, see “Text” (P263), “Frame” (P262) and “Element” (P263) of “Pre-installed”.

Playing back/Managing/ Moving Images/i-motion



You can play back moving images shot by the camera, or moving images obtained from sites or i-mode mail.

Playable file format

FOMA handset can play the file as follow.

File format*	MP4
Codec system	MP4 file (Image: MPEG4, H.263, Voice: AAC, AMR)
Extension name	3gp


※ You may not be able to play some files depending on file format even if it is compatible with a phone.

Information

- When more than 3,000 files are stored in one folder, if you try to play a movie stored in this folder, it may not be played properly because of lack of memory. In this case, move the file to another folder and play.

Playing back Moving Images / i-motion

1. From the Data box menu (P165), “i-motion”

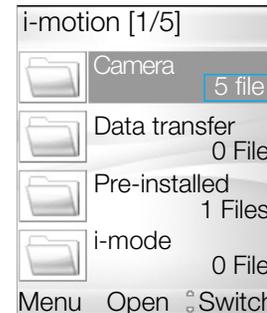

The number of the files in the selected folder

<Folder List>

- [Switch] : You can change the type of display of folder.

2. Select a folder ▶ ●



• See step 2 Display screen (P167) for the mark on display screen

Voice file

The name and size of selected file

<Moving image File List>

-  [Mail] : You can send i-mode mail attaching the selected file. Go to step 2 on page 149 of “Composing message”.

3. Select a file ▶



- Volume
- Playback bar
- Playback elapsed time / maximum playback time
- Stereo / monaural

<Moving Image Playback>

-  [Plays back]/ [Pauses]: Plays back / Pauses
-  [Stop]: Stops
-  : Plays back the previous file / next file
-  (Press and hold): The images are fast forwarded / fast rewind while it is pressed
-  : Adjusts volume

[Using the Submenu of the Folder List](#)

See “Using the Submenu of the Folder List” of images (P168) for the submenus available.

[Using the Submenu of the Moving Image File List](#)

Setting item/Setting at purchase → P259

1. From the Moving Image File List (P173), select a file ▶ [Menu] ▶ Select from the following Submenu items

Play

Plays back the selected file.

New folder^{※1}

You can create a folder.

Files^{※1}

- **Move^{※2}** : You can move the selected file to another folder. Select a folder to move →  →  [Paste].
- **Copy^{※2}** : You can copy the selected file to another folder. Select a folder to move →  →  [Paste].
- **Delete** : You can delete the selected file.
- **Delete all** : You can delete all files in the folder. If you delete all files, you need to enter your terminal security code.
- **Rename** : You can change the name of the selected file.

Mark/Unmark^{※1}

You can move, copy or delete multiple files. After selecting ,  [Menu] → “File” → Select “Move”/“Copy”/“Delete”.

- **Mark^{※2}** : You can select a file at a time.
- **Mark all** : You can select all the files collectively.

- **Unmark** : You can deselect the file selected by “Mark” or one of the files selected by “Mark all” at a time.
- **Unmark all** : You can deselect the file selected by “Mark” or all the files selected by “Mark all”.

Send via mail ^{※1} ^{※3}

You can attach a file to i-mode mail for sending. Go to step 2 (P149) of “Compose i-mode mail”.

Ringtones

Set a ring alert for incoming voice and video-phone calls.

- **Voice call** : Set a selected file as a ring alert for incoming voice calls.
- **Video-phone** : Set a selected file as a ring alert for incoming video-phone calls.

Sort by

You can sort files.

View by

You can change file display methods.

Memory info.

You can check the status of the storage area on the FOMA phone, etc.

File property

You can check the name, size, type, created time, resolution or file restriction of the selected file.

- ※1: You cannot use the file in “Pre-installed” folder.
- ※2: You cannot move or copy the file in “Pre-installed” folder.
- ※3: You cannot use this menu in restricted file.

Using the Submenu of the Moving Image Playback Screen

For MP4 file with only voice without image, see “Using the Submenu of the Melody Playback” (P177).

Setting item/Setting at purchase → P259

1. From the Moving Image Playback display (P174), [Menu] ► Select from the following Submenu items

Pause ^{※3} (Play ^{※5})

You can pause the moving images being played back.

Send via mail ^{※1} ^{※2}

You can compose an i-mode mail attaching a file to it for sending. Go to step 2 (P149) of “Composing i-mode message”.

Expand ^{※3}

You can view the whole moving image without displaying the indication of soft key or player.

- : cancel this function.

Data box

Snap ※2※4

You can save paused moving images as still images. Snapped images are saved into the “Camera” folder of “My picture”.

Mute (Unmute)

You can play back moving images muting the sound.

Player settings

You can change settings of the visual effect and the color tone of the player.

File property

Displays the name, size, type, created time, play duration, restriction states, track state, availability as a ring alert, title, creator, copyright and description of a moving image file being played.

- ※1: You cannot use this menu in “Pre-installed” menu.
- ※2: You cannot use this menu for restricted file.
- ※3: You can use this menu only on playing the file.
- ※4: You can use this menu only on pause.
- ※5: You can use this menu while pausing or after ending to play back the file.

Data box

Playing back/Managing/Melody



You can play back pre-installed melodies, and melodies obtained from sites, etc.

Playable file format

- This FOMA phone supports to display file format as follow.

File format ※1	SMF, MFi, MP4 ※2
Extension name	mid, mld


- ※1: Some files may not be played even if its format is supported.
- ※2: The voice format of AAC or AMR is saved as 3gp file in “i-motion” folder.

Information

- When more than 3,000 files are stored in one folder, if you try to play a melody stored in this folder, it may not be played properly because of lack of memory. In this case, move the file to another folder and play.

Playing Back Melody

1. From the Data box menu (P165), “Melody”

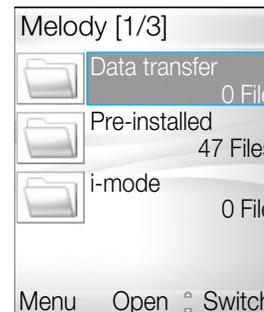

Folder name
The number of files in the folder.

<Folder List>

- [Switch] : You can change the display type of folder.

2. Select a folder ▶




- See step 2 “Display screen” for the mark on display screen.

File name/File size

<Melody File List>

-  [Mail] : You can attach the file to i-mode mail.
Go to step 2 on page 149 of “Composing i-mode mail”.

3. Select a file ▶

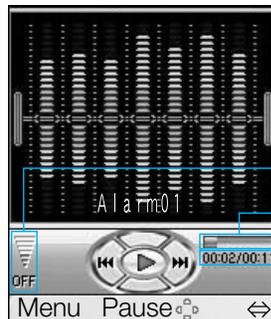

Volume

Playback bar

Playback elapsed time /
maximum playback time

<Melody Playback>

- : Plays back / pauses
- : Plays back the previous file / next file
-  (Press and hold): Melodies are fast forwarded / fast rewind while pressing it.
- : Adjusts the sound volume

-  [↔]: Sets the repeat area (Starting point/Ending point) If you press after setting, you can release it.

Information

- When you play an MFI file that auto-repeat is set, you cannot pause (stop temporarily) while playing the file after second play back. To pause the file, select “Pause” from the sub menu. → P178

Using the Submenu on the Folder List

For the submenu items available see “Using the Submenu of the Folder List” of Images (P168).

Using the Submenu of the Melody File List

See “Using the Submenu of the i-motion File List” (P174) for the Submenus available.

Information

- If you delete the melody set as the tone for incoming call, alarm or schedule, each melody returns to setting at purchase.

Using the Submenu of the Melody Playback Screen

Setting item/Setting at purchase → P259

1. From the Melody Playback display (P177),  [Menu] ▶ Select from the following Submenu items

Pause ※4 (Play ※5)

You can pause the melody being played back.

Send via mail ※1 ※2

You can attach melody files to i-mode mail for sending.
Go to step 2 (P149) of “Composing i-mode mail”.

Ringtones ※2 ※3

You can set a ring tone for voice or video phone calls.

Mute (Unmute)

You can mute the tone for playing back melodies.

Set repeat ※3 ※4

You can select a repeat method of melody.

- **None** : You can cancel repeat setting.
- **Current file** () : You can repeatedly play back the current melody.
- **All files** () : You can repeatedly play back all the melodies in the folder.
- **Shuffle** : You can shuffle and play back all the melodies in the folder.

Area repeat (⇄) ※5

You can specify a playback area for playing back melodies. You can set the starting point by performing this operation. You can set the ending point by repeating the same operation or pressing  [⇄].

Player settings

You can change settings of the visual effect and the color tone of the player.

File property

You can display the name, size, type, created time, duration, ringtone and file restriction of the selected file.

-
- ※1: You cannot use the menu in pre-installed folder.
 - ※2: You cannot use this menu for restricted file.
 - ※3: You cannot use this menu in MP4 file, if image is not recorded.
 - ※4: You can use this menu only on playing.
 - ※5: You can use this menu only on pause or after ending to play back.
 - ※6: You cannot use this menu on pause or after ending to play back.

Information

- You can also change settings of the ring tone from the Melody File List Screen. From the Melody File List screen (P177), press  [Menu] select a “Ringtone”.

Using Alarm	180
Setting the Custom Menu	181
Using the Infrared Communication Function	182
Using Calculator	184
Using Unit Converter	185
Using World Time	187
Using Stop Watch	188


Tools



To display the Tools menu

On the Stand-by display,  [Menu] 
 (Tools) or “Tools”

Using Alarm

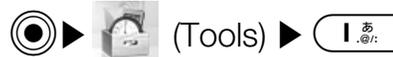

You can set Alarm to alert you at the specified time. You can also set Snooze or an alarm tone.

Setting Alarm

Setting item/Setting at purchase → P242

1. From the Tools menu (P179), “Alarm”

Icon	Description
	Alarm is set to “ON”
	Alarm is set to repeat

<Alarm List>

- [ON]/[OFF] : You can set the alarm ON or OFF.

2. Select the alarm to edit ► ► Select the item to edit ► ► After editing, [Done].

(Setting ON/OFF)

You can select “ON” or “OFF”. To set Alarm, select “ON”.

Time setting

You can set the time for making the Alarm sound.

(Setting repeat)

You can select the type of repeat.

- If you set “Except holiday”, the alarm does not alert on Sunday or holiday (P192).

(Melody)

You can select an alarm tone.

- Select from alarm tone stored in “Melody” in “Data box”. →P176

(Memo)

You can enter an alarm name.

Turbo Alarm

Set an alarm to sound at the maximum volume and the vibration to operate at the maximum level. Select “OFF” when not setting the turbo alarm.

Snooze

Select the time intervals of Snooze. If you do not want to use Snooze, select “OFF”.

If “Snooze” is set to “ON”, the alarm repeats up to 12 times.

When the Specified Time Comes

When the specified time comes, the display informing of Alarm appears and the Alarm sounds. To stop Alarm, perform the following operations:

- [OFF]: Alarm stops. When Snooze is set to “ON”, it is canceled.
- [Snooze]: Alarm stops. The set Snooze continues.

■ During a Voice/Video-phone Call

An alarm does not sound at the specified time during a call because the icon is not displayed on upper side. After ending the call, the alarm will be alerted on time.

- After ending to play a file/to take image, the alarm will be sounded with displaying alarm screen.
- If you receive a voice call or video-phone call during Alarm notification, Alarm is temporarily stopped, and the Alarm is resumed after terminating the call.

■ During playing back moving image, melody/activating camera, video camera

An alarm does not sound at the specified time during a call but the icon is displayed on upper side. After ending the call/shooting, the alarm screen is displayed and alarm sounds.

Information

- If the FOMA phone is not turned on, the alarm does not sound.
- If the alarm cannot be sounded during activating i-appli, the alarm icon  blinks on upper part of the screen instead of alarm sound to notify that the set time has come.
- The alarm sounds after i-appli is finished.

Using the Submenu of the Alarm List Screen

1. From the Alarm List screen (P180), [Menu] ► Select from the following Submenu items

Edit

You can edit the selected alarm. Go to step 2 on page 180 of “Setting alarm”.

ON/(OFF)

You can activate/deactivate the selected alarm.

Mark/Unmark

Select and set 1 or more of edited alarms “ON” or “OFF”. After selecting alarm(s), select  [Menu] → “ON”/“OFF”.

- **Mark:** You can mark 1 alarm at a time.
- **Mark all:** You can mark all alarms at once.
- **Unmark:** You can unmark 1 alarm at a time, which you selected by “Mark” or “Mark all”.
- **Unmark all:** You can collectively unmark all alarms you selected by “Mark” or “Mark all”.

Setting the Custom Menu



You can specify functions to store in the Custom menu. If you store functions frequently used in the Custom menu, you can quickly start the functions simply by pressing  on the Stand-by display.

Setting item/Setting at purchase → P242

1. From the Tools menu (P179), “Custom menu”



<Custom Menu>

- [Select]: You can activate the selected menu.
- [Edit]: You can change the menu saved as Custom.

2. Select a blank line ► [Add]

- The list of functions that can be stored in the Custom menu appears.

3. Select a function ►

- You cannot select the menu which is already registered.

Using the Submenu of the Custom Menu Display

1. From the Custom menu display (See above), [Menu] ► Select from the following Submenu items

Add new ※1

You can add a function to be registered from the function list. Go to step 3 of “Setting the Custom Menu” (See above).

Open ※2

You can start the function selected.

Edit ※2

You can change the functions registered. Go to step 3 of “Setting the Custom Menu” (See above).

Delete ※2

You can delete a function registered at a time.


Delete all

You can delete all the registered functions collectively.

※1: This Submenu item is displayed when a blank line is selected.

※2: This Submenu item is displayed when a registered function is selected.

Using the Infrared Communication Function

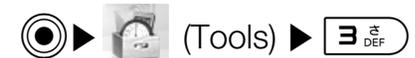

You can send and receive data such as Phonebook and Bookmark using the infrared communication to and from other FOMA phones and personal computers supporting the infrared communication function.

The data to send by infrared

Data	Contents
Phonebook	Sending / Receiving 1 or multiple data (Phonebook of FOMA phone) Data that can be sent / received is name / phone number / mail address / note / web page. (vCard items)
	Own number
Bookmark	Sending / Receiving 1 or multiple data (Bookmark of FOMA phone) Data available in infrared communication is title / URL. (vBookmark items)

Performing Infrared Communication

Place the FOMA phone parallel to another device so that the infrared data ports of these devices face each other.

- The infrared data port is located on the right side of the FOMA phone. →P28
- Place the FOMA phone on a stable location such as a table and do not move it during communication.
- The distance for infrared communication should be within 20 cm.
- Use Infrared communication within ± 15 degrees from the center line.

Information

- During infrared communication, do not remove the battery. If you remove the battery during communication the data via infrared, this operation will be stopped.
- If the battery level is low, you cannot exchange the data via infrared. Before activating this menu, check the battery level.
- The amount of data that can be received varies depending on the capacity of the memory. If you cannot receive data, delete unnecessary data, and then activate infrared menu again.
- Before activating the infrared between the other phone, check the infrared compatibility of each equipment.
- You may not be able to exchange data via infrared even if the other party supports infrared communication function.
- While performing infrared communication, call, i-mode or data transmission cannot be performed as the FOMA phone becomes the same status as out of the service area.

Sending Data

Make the receiving end ready for receiving the data and then start sending data within 30 seconds following the steps below.

<Example: When you want to send/receive a phonebook via infrared communication>

1. **Display of the data to be sent** ▶  **[Menu]** ▶ **“Send Ir data”**[※] ▶ **“Focusd data”/“All data”** ▶ **“Yes”**

※: Not displayed when sending a bookmark.

2. Make sure that the receiving end is ready for receiving the data ▶ “Yes”


- When sending all items, enter a terminal security code (P104) and authentication password*.
- ※: Enter the same password as that entered from the receiver's terminal.

Receiving Data

1. Select “Receive Ir data” from Tools menu (P179)
2. Perform sending operation on sender's terminal
3. “Receive”/“Receive all” ▶ “OK”


- When receiving all items, enter a terminal security code (P104) and authentication password*.
 - When receiving 1 bookmark, confirm a bookmark registration screen displayed and press  [Done].
 - The Phonebook will be registered to the available smallest memory number.
 - The bookmark will be registered at the top of the bookmark list.
 - You can view a received phonebook by “Search phonebook” (P66) and bookmark by “Bookmark” (P121).
 - If you remove the battery pack or turn off the handset while receiving a bookmark via infrared communication and receiving is interrupted, the bookmark received before the interruption will not be saved.
- ※: Enter the same password as that entered from the sender's terminal.

Using Calculator

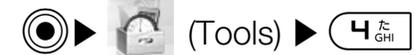

You can perform calculation such as addition, subtraction, multiplication and division. Use the numeric buttons to enter numbers.

1. From the Tools menu (P179), Select “Calculator”

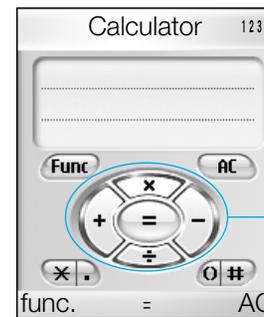

The fundamental rules of arithmetic. (+, -, ×, ÷ (/))
You can operate by pressing  

< Calculator screen >

- : Used to enter decimal point.
- : Used to enter the parenthesis.
- : Used to delete the number to backward from the end.
-  [AC]: You can reset all the number and calculation.

Using the Function Menu of the Calculator Display

1. From the Calculator display (See above),  [func] ▶ Select from the following function menu items

+/-

Switches between positive and negative numbers.

(period) Does not go to step 2.

sin

Used for calculation of trigonometric functions.

cos

Used for calculation of trigonometric functions.

tan

Used for calculation of trigonometric functions.

log

Used for calculation of logarithmic functions.

ln

Used for calculation of natural logarithms (the logarithm assuming e as the base) of the specified positive number.

exp

Used for calculation of exponential functions.

sqrt

Used for calculation of square roots (root).

deg

Specifies the unit of angle to “degree”.

rad

Specifies the unit of angle to “radian”.

Radian expresses the angle in constant number n (n radian equals to 180 degree). 1 radian ($360 \text{ degree}/2\pi$) equals to approx. 57.29578 degree, 1 degree ($2\pi/360 \text{ degree}$) equals to approx. 0.01745 radian ($\pi=3.141592653$).

(Step)

2. Enter the number ►  [=]

Using Unit Converter

This is a useful function to convert currency, surface, length, weight, temperature, volume, and velocity.

Converting Unit of Currency

This is a useful function for converting the yen on hand to the dollar, etc.

Setting at purchase → P242, P243

1. From the Tools menu (P179), “Unit converter” ► “Currency”

- The screen for converting a currency is displayed. (P186)

2. Select the currency ►  [Rate]

Currency unit filed

Value entry field

<Currency Unit Conversion>

3. Select next item ► After setting, press [Done].

Currency unit field

Select the unit of the currency. If you press , you can edit the currency. However, you cannot change “円”.

Value entry field

You can set the currency exchange rate. For example, in case you convert from 米ドル(Dollar) to 円(Yen) (Ex. 1 米ドル ⇔ 120 円), you can set 円 to 120, 米ドル to 1.

- : Enters the decimal point.
- : Deletes the number you entered from the end.

Converting the currency

Converts a currency that exchange rate is set to another currency. You can enter the currency whichever field to convert. The value after conversion is displayed in the other field.

1. “Unit converter” from “Tool”(P179) ► “Currency”

<Currency conversion display>

2. Select next item.

Currency unit field

You can select the unit before / after conversion.

Exchange rate entry field

Enter the amount of the currency to convert. The amount after the conversion is displayed in the other field.

- : You can enter decimal point.
- : Deletes the character you entered from the end.
-  [Reset]: You can reset all the number you entered.

Converting Unit of Surface




You can change the unit of surface. You can enter the unit in up / down field to enter. The number after the conversion is displayed in the other field.

Setting item/Setting at purchase → P243

1. From the Tools menu (P179), “Unit converter” ► “Surface”

- The Surface Unit Conversion display appears

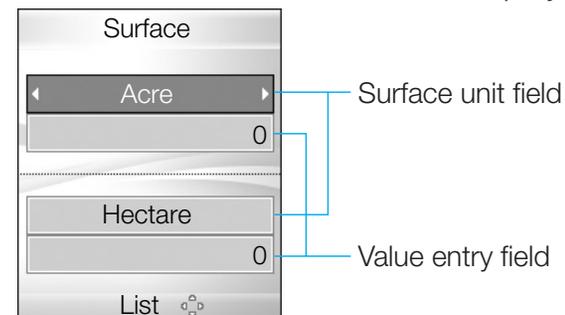

<Surface Unit Conversion>

Surface unit field

You can select the unit of surface before/after conversion.

Value entry field

Enter a numerical value of the surface to be converted. The number after the conversion is displayed in the other field.

- : Enters the decimal point.
- : Deletes the number which you already entered from the end.
- : [Reset]: The numerical value is reset.
- The maximum input value is an integer of 10 digits and 8 digits after the decimal point. However, when you input an actual number, the maximum input value is 10 digits including the decimal point.
- The maximum output value is an integer of 10 digits and 6 digits after the decimal point. However, it will be the value rounded off to six decimal places.

Converting Unit of Length/Weight/ Temperature/Volume/Velocity



Setting item/Setting at purchase → P243,P244

1. From the Tools menu (P179), “Unit converter”
 - ▶ “Length”/“Weight”/“Temperature”/“Volume”/“Velocity”

- For the subsequent operations, perform the same operations as “Converting Unit of Surface” (P186).

Using World Time



You can check the date and time of major cities in the world.

The time of city “Home” is set to the time of “Setting date/time” (P95).

1. From the Tools menu (P179), “World time”

The city name and time which are checked

<World Time>

-  [List]: You can select a city by displaying the city list.
2. Use  to select a city to be checked
 -  [Set]: The selected city is set as Home.

Using the Submenu of the World Time Display

Setting item/Setting at purchase → P244

1. From the World time display (P187), [Menu]

▶ Select from the following Submenu items

Choose city

You can choose a city. After choosing, press .

Set time zone[※]

Sets the selected city to home.

※: This menu is not displayed if you select the city as a home.

Using Stop Watch




You can use the FOMA phone as a stop watch.

1. From the Tools menu (P179), Select “Stop watch”

-  [Go]/[Stop]: You can start or stop measuring.
-  [Reset]: You can reset the result of measuring.
- During measuring, you can do the following operations.
 -  [Lap]: The lap time is recorded and displayed at the bottom of the display.
 -  [Detail]: You can view the list of the lap records.

Using Schedule.....	190
Using Memo.....	193
Using Date Search.....	194
Using Date Counter.....	195

Stationery

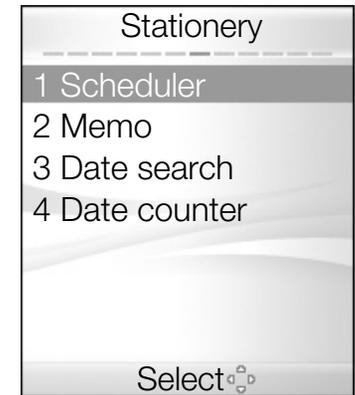

To display the Stationery menu


On the Stand-by display,  [Menu] 
 (Stationery) or "Stationery"

Using Schedule



Storing Schedule Events

1. From the Stationery menu (P189), “Scheduler”
 - The monthly display (P191) appears.
2. Select a date to store a schedule event. ▶ [Add]

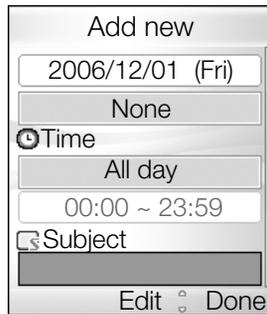

<Add new schedule display>

3. Select from the following items to store ▶ After storing, [Done]

Start date

You can set a date to start the schedule event. You can enter a date by pressing and dial buttons. You can select a date from the calendar display by pressing .

End date

You can set a date to end the schedule event. You can enter a date by pressing and dial buttons. You can select a date from the calendar display by pressing .

When the “Start date” and the “End date” are different, set the “End date” later than the “Start date”.

None※ (Schedule type)

You can set a type of the schedule event.

Time

You can set time to start and end the schedule event.

- You cannot set the starting time and the ending time of one event on different days. For example, if you want to set the starting time to 22:00 of the starting day and set the ending time to 9:00 of the following day, you should set two events, 22:00 to 23:59 on the starting day and 00:00 to 9:00 on the following day.
- Regardless of the number the days till the ending, the ending time cannot be set earlier than the starting time of the starting day.

– **All day:** The schedule event is stored as an all-day event.

– **Set time:** You can set time to start and end the event by selecting the time field. You can enter the time using and dial buttons.

Subject

You can set a subject of the schedule event. You cannot store the event without entering a subject.

Alarm

You can set whether or not to be notified by an alarm when the date and time specified in “Start date” and “Time” come. You can select a melody※ when the alarm function is set to other than “No alarm”.

- You can select the menu from “Melody” of “Data box”.
→ P176

Repeat※2

You can set the repeat setting for the schedule event.
If you do not want to repeat it, select “Once”

※1: The content you have set is displayed.

※2: If “Start date” and “End date” are different, you can use only “Once”.

Information

- You can save up to 200 schedules and up to 100 holidays.
- When the specified time of a schedule event setting by alarm comes, the display to notify it appears.
 -  [OK]: After stopping the alarm, you can view the time and the subject of schedule. If you press  again, the alarm will be released.
 -  [Snooze]: You can set the snooze.
- As for the operation of alarm setting during a call or taking a photo, see “When the Specified Time Comes” (P180).

Checking Schedule Events

1. From the Stationery menu (P189), “Scheduler”



The date registered the schedule is underlined.

The number of schedule events stored in the date on which the cursor is placed.

<Monthly Display>

-  : You can move the year of date.

-  : You can move the month of date.
- : You can move the cursor to the current date .
-  [Add]: You can add your own schedule. Go to step 3 on page 190 of “Storing Schedule Events”.

2. Select a date in which a schedule event is stored




Icon	Description
	Sets the alarm setting
	Sets the repeat setting

<Daily Display>

-  [Add]: You can add your own schedule. Go to step 3 on page 190 of “Storing Schedule Events”.
- : Displays the schedule of previous and next day.

3. Select a schedule event

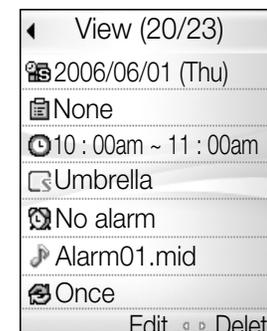

<Display>

Icon	Description
	Start date of schedule
	End date of schedule
	The type of schedule
	Holiday
	Alarm

- For other icons, see page 190.
-  [Edit]: You can edit the selected schedule. Go to step 3 on page 190 of “Storing Schedule Events”.
-  [Delete]: You can delete the selected schedule.
- : Displays the previous and next schedule.

Using the Submenus of the Monthly Display

1. From the monthly display (P191),  [Menu] ► Select from the following submenu items.

Add new

You can add a new schedule event. See step 2 (P190) of “Storing Schedule Events”.

Open

You can see the details of the schedule events of the selected date (Daily display).

Set holiday[※]

You can set the selected date to holiday. After entering the holiday name, press  [Done]. The setting date is marked in red color on Monthly view.

- **On the day:** Enter the holiday name and set the selected date as a holiday.
- **Weekly:** Enter the holiday name and set the selected day of the week as a holiday for every week.
- **Monthly:** Enter the holiday name and set the selected date as a holiday for every month.

- **Annually:** Enter the holiday name and set the selected date as a holiday for every year.
- **Duration (2~31):** Enter the holiday name and set the holiday period.

Go to date

The cursor is moved to the specified date. You can enter a date by pressing  and dial buttons.

Delete

- **Holiday:** All the schedule events set as holidays are deleted.
- **Old schedules:** All the schedule events stored for up to the preceding day of the selected date are deleted.
- **Current day schedules:** The schedule events of the selected date are deleted.
- **Current week schedules:** All the schedule events of the selected week are deleted.
- **Current month schedules:** All the schedule events of the selected month are deleted.
- **All schedules:** All the schedule events are deleted.

Calendar Type

- **Sunday first:** Display a calendar with weeks beginning with Sunday.
- **Monday first:** Display a calendar with weeks beginning with Monday.

※: You cannot the menu if select the date which you've already set “Set holiday”.

Using the Submenus of the Daily Display Screen

1. From the Daily display screen (P191),  [Menu] ►
Select from the following Submenu items

Add new

You can add a new schedule event. See Step 3 (P190) of “Storing Schedule Events”.

Open

The details of the selected schedule event (Display screen) are displayed.

Edit ※1 ※2

You can edit the selected schedule event. See Step 3 on page 190 of “Storing Schedule Events”.

Set holiday ※

You can set the selected date as a holiday. See “Holiday settings” of “Using the Submenus of the Monthly Display Screen” (P192) for the setting items.

Mark/Unmark

You can delete after selecting multiple schedules. After selecting, press  [Delete].

Go to Date

Displays the schedule you set. You can enter a date by pressing  and dial buttons.

Delete

You can delete schedule events.

※1: You cannot use this menu when you select the date which is already set as the holiday by “Set holiday”.

※2: You cannot use this menu when you select the daily display of the date which is already set as the holiday.

Using Memo



Creating Memo


You can create and save a memo.

1. From the Stationery menu (P189), “Memo”
 - The memo display (See right) appears.
2.  [Add] ► Enter a memo ► 

Viewing Memo

You can view the memo that you created.

1. From the Stationery menu (P189), “Memo”

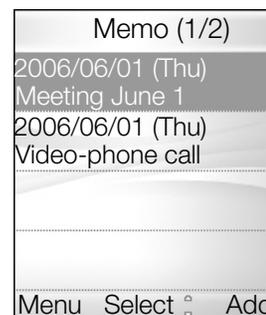

<Memo>

2. Select a memo to view ► 
 - The screen will be displayed.

-  [Edit]: You can edit the displayed memo.
-  [Delete]: You can delete the displayed memo.
- : Displays the previous and next memo.

Using the Submenus of the Memo Display/Display Screen

1. From the Memo display (P193)/Display screen,  [Menu] ► Select from the following submenu items

Add new

You can create a memo.

Open[※]

You can display the screen of the selected memo.

Edit

You can edit the selected/displayed memo.

Mark/Unmark[※]

You can select and delete multiple memos. After selecting, press  [Delete].

Delete

You can delete the memo selected or displayed memo.

※: This menu is not displayed in submenus of the displayed screen.

Using Date Search



You can search for the number of days (target date) after a specified period from a specified date. For instance, you can search for the date after 90 days from the current date for convenience.

1. From the Stationery menu (P189), “Date search”

► Select from the following setting items

-  [Reset]: You can reset all setting values.

From

You can enter a date to start the search. Enter the date using  and the dial buttons.

After

You can enter the number of days. Use the dial buttons to enter the number of days. For instance, if you want to know the date after 90 days from the “Start date”, enter 90.

Using Date Counter



If you store the name and date of an event such as a birthday, you can check how many days remain before the event or how many days have passed after the event.

Storing Events in Date Counter

1. From the Stationery menu (P189), “Date counter”

- The Date counter display (P187) appears.

2. [Add] ► Select from the following setting items ► After setting, [Done]

[Date]


You can set the date of an event. Enter the date using [Date] and the dial buttons.

[Memo]

You can enter a memo. You cannot set without entering.

Displaying Date Counter

1. From the Stationery menu (P189), “Date counter”

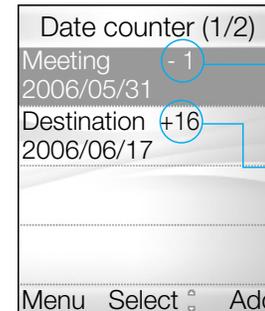

– before a number: The number of days before the specified date

+ before a number: The number of days after the specified date

<Date Counter>

- [Add]: You can compose the date counter. Go to step 2 (See above) of “Storing Events in Date Counter”.

2. Select a date counter ► [Edit]



<Display Screen>

- [Edit]: You can edit the selected date counter. Go to step 2 (P195) of “Storing Events in Date Counter”.
- [Delete]: You can delete the selected daily counter.

- : Displays the date counter of previous and next day.

Using the Submenu of the Date Counter Display/Display Screen

1. **From the Date counter display (P195)/display screen (P195),  [Menu] ► Select from the following submenu items**

Add new

You can store an event to the date counter. See Step2 (P195) of “Storing Events in Date Counter”.

Open[※]

You can view the selected date counter.

Edit

You can edit the selected or displayed date counter. See Step2 of “Storing Events in Date Counter”.

Mark/Unmark[※]

This function is used when you select and delete multiple date counters. After selecting, press  [Delete].

Delete

You can delete the selected or displayed date counter.

※: This menu is not displayed in submenus of screen.

Available Network Services	198
Using Voice Mail	198
Using Call Waiting Service	200
Using Call Forwarding Service.....	201
Using Nuisance Call Barring Service...	202
Using Caller ID Notification Service	202
Using Caller ID Request Service.....	203
Using Set Arrival Act	203
Selecting Arrival Call Act.....	203
Setting Remote Control.....	204
International Roaming Service.....	204
Registering Additional Services.....	205
Registering Additional Guidance	206
Using English Guidance	206
Using Service Dialing Number	207
Using Call Barring.....	207

Network Service



- | NW service | |
|------------|------------------------|
| 1 | Voice mail |
| 2 | Call waiting |
| 3 | Call forwarding |
| 4 | Nuisance call barring |
| 5 | Caller ID notification |
| 6 | Caller ID request |
| 7 | Set arrival act |
| Select | |

To display the Network service menu

On the Stand-by display,  [Menu] 
 (NW service) or “NW service”

In this manual, the outline of the network service is explained by the method of using the FOMA handset menu. For details, refer to “Network Services User’s Guide”.

Available Network Services

With FOMA phone, following DoCoMo Network Services are available.

Service	Application	Monthly fee	Reference
Voice Mail	Required	Charged	See right
Call Waiting Service	Required	Charged	P200
Call Forwarding Service	Required	Free	P201
Nuisance Call Barring Service	Required	Free	P202
Caller ID Notification Service	Not required	Free	P202
Caller ID Request Service	Not required	Free	P203
Remote control	Not required	Free	P204
International roaming service	Not required	Free	P204
English Guidance	Not required	Free	P206
Service Dialing Number	Not required	Free	P207
Public mode (drive mode)	Not required	Free	P51
Public mode (power off)	Not required	Free	P54

- In this manual, the summaries each network service are explained in the ways using the menu of the FOMA phone. For detail, see “Mobile Phone User's Guide [Network services]”.

- This FOMA phone is not applicable to all the services described in “Mobile Phone User's Guide [Network services]”.
- Contact “DoCoMo Information Center” on the back of this manual for application or inquiry.

Information

- The Network Services that are operated by connecting to the Network Service Center are not available when “圏外” is displayed on your handset.
- You can register newly provided network services when additionally provided by DoCoMo. → P205

Using Voice Mail



When you are in an area where radio waves do not reach, when you turn off the FOMA phone or when you cannot answer the call, this service answers to the party who made a voice/video-phone call to you, and the Voice Mail Center holds voice mail messages for you.

- When you did not answer a voice call or video-phone call that came in while Voice Mail is activated, it is recorded to the received call history as a missed call and a screen notifying a missed call appears.
- This handset is not applicable to Voice Mail (Video-phone call). Make a voice call to “1412” (free) and set not to be applicable to video-phone call.

- If a call comes in from a caller not notifying caller ID with “Caller ID request” activated, the Caller ID Request guidance is played back and the center will not hold voice mail messages.

1. From the Network Service menu (P197), “Voice mail” ► Select from the following setting items

Activate voice mail

You can start using Voice Mail.

Set ringing time

You can set the time from the first ring until the call is connected to the Voice Mail Service Center. (period)

Deactivate voice mail

You can stop using Voice Mail.

Voice mail status request

You can check the current settings of Voice Mail Service. If you press  [Menu], you can start/stop the service of voice mail or set the length of ringing time.

Play messages

You can play back recorded Voice Mail messages.

Voice mail setting

You can connect to the Voice Mail Service Center to change the settings of Voice Mail by following the voice guidance.

Check messages

You can check whether or not new messages are recorded.

Notify missed call

If the FOMA phone is turned off or out of the service area, you are informed by SMS (Short Message Service) of missed calls when the FOMA phone is turned on or in the service area again.

– **Activate missed call notification:** You can start using Missed Call Notice Service.

– **Deactivate missed call notification:** You can stop using Missed Call Notice Service.

– **Missed call notification status request:** You can check the settings of the Missed Call Notice Service.

Delete voice mail icon

You can delete  displayed in the icon view area.

Set message alert ringer

You can set the ring tone to sound when a new message is recorded.

Using Call Waiting Service



When you receive another voice call during a call, you will be notified of it by busy ring tone, and you can put the current call on hold to answer the new call. You can also newly make a call to another party by putting the current call on hold.

- To use Call Waiting Service, set “Arrival Call Act” (P203) to “Answer” beforehand. If this is set to another setting, you cannot answer the incoming voice call while you are performing a voice call even if you start Call Waiting Service.
- When using Call Waiting, set “Arrival call act” to “Answer”. → P203
- If a call comes in from a caller not notifying caller ID while Caller ID Request Service is set to “Activate caller ID Request”, the Caller ID Request guidance is played back and Call Waiting is not available.
- When a video-phone call comes in during a voice call, or a voice call comes in during a video-phone call, Call Waiting does not work. The second call is recorded as a missed call in Received Calls.

1. From the Network Service menu (P197), “Call waiting” ▶ Select from the following setting items

Activate call waiting

You can start using Call Waiting.

Deactivate call waiting

You can stop using Call Waiting.

Call waiting status request

You can check whether the Call Waiting is activated or deactivated.

Submenus on using Call Waiting Service

- Press to view the submenu.

When a new call comes in during a call

Voice mail^{※1}

When a new call comes in, the caller can connect the voice mail center.

Call rejection

You can reject a call without receiving.

Call forwarding^{※2}

You can forward the incoming call to the forwarding destination you have registered beforehand.

End active call

You can answer a new call after disconnecting the current call.

Mute/Unmute

The voice to send to the other party is set to mute or unmute.

※1: You can use the voice mail when you have signed up this service. See “Using Voice Mail” (P198) for details.

※2: You can use the call forwarding service only when you have signed up this service. See “Using Call Forwarding Service” on the next page.

■ When you are talking with a party while a call to another party is put on hold (Multi call).

Switch

Put the current call on hold to enable talking with another party on hold.

End

- **End active call:** After ending a call, you can take the new call on hold.
- **End held call:** You can end a call on hold.
- **End all calls:** You can end both calls.

Mute/Unmute

The voice to send to the other party is set to mute or unmute.

Using Call Forwarding Service



This is a service to forward a voice call/video-phone call when you are in an area where radio waves do not reach, you turn off the handset or you did not answer within the set ring time.

- When you did not answer a voice call or video-phone call that came in while Call Forwarding Service is activated, it is recorded to the received call history as a missed call and a screen notifying a missed call appears.
- If a call comes in from a caller not notifying caller ID while Caller ID Request Service is set to “Activate caller ID Request”, the Caller ID Request guidance is played back

and the call is not forwarded.

- Call Forwarding Service will be automatically deactivated if “Voice Mail” is set to “Activate Voice mail”.
- This service is not available with some billing plans.

1. From the Network Service menu (P197), “Call forwarding” ▶ Select from the following setting items

Activate call forwarding

You can start using Call forwarding Service.

- **Register fwd number:** You can register the phone number of the forwarding destination. If you press [Search], you can search for phonebook.
- **Set ringing time:** You can set the time from the first ring until the call is forwarded.

Deactivate call forwarding

You can stop using Call forwarding Service.

Register the forwarding number

You can change the phone number of the forwarding destination. If you press [Search], you can search for phonebook.

Setting at forwarded party busy

You can set an incoming call to be connected to the Voice Mail Service Center if the forwarded destination is busy.

Call forwarding status request

You can check the current setting status of Call Forwarding Service.

Setting to enable or disable call forwarding guidance

Press     .

- Make settings following the voice guidance.
- For details, see “Mobile Phone User's [Network services]”.

Using Nuisance Call Barring Service



This is a service to reject "Nuisance calls" such as prank calls. If you register a caller to reject, calls from the caller will be automatically rejected and the caller will be answered by the guidance.

- Even if a call from a caller who is registered to be rejected, the ring tone will not sound, and the call will not be recorded in the received call history.

1. From the Network Service menu (P197), “Nuisance call barring” ▶ Select from the following setting items

Register nuisance caller

You can register the phone number of the call that you answered the last for rejection.

Delete all entries

All the phone numbers registered for rejection are deleted.

Delete most recent entry

You can delete the phone number registered last for rejection.

Using Caller ID Notification Service



You can notify your phone number to the other party when making a call. When the other party's phone is the digital terminal that supports caller ID, your phone number appears on the other party's phone.

- Your caller ID is important information, so take great care to notify it.

1. From the Network Service menu (P197), “Caller ID notification” ▶ Select from the following setting items

Activate/Deactivate caller ID notification

You can display your phone number on the other party's phone (display) when making a call. To use this service, enter the Network Security Code.

Caller ID notification status request

You can check the current setting status of Caller ID Notification.

Using Caller ID Request Service



This is a service to request for the Caller ID notification by guidance to the call from the party who does not notify Caller ID, and terminate the call.

- A call that was not answered by Caller ID Request Service will not be recorded in the received call history, and the screen notifying of the missed call does not appear.

1. From the Network Service menu (P197), Caller ID request” ▶ Select from the following setting items

Activate caller ID request

You can start using Caller ID Request Service.

Deactivate caller ID request

You can stop using Caller ID Request Service.

Caller ID request status request

You can check the current settings of Caller ID Request Service.

Using Set Arrival Act



You can activate or cancel the arrival call act set by “Selecting Arrival Call Act” (See right). You can view the current settings.

1. From the Network Service menu (P197), “Set arrival act” ▶ Select from the following setting items

Activate arrival act

You can start using the response you set in “Arrival Call Act”.

Deactivate arrival act

You can stop using the response you set in “Arrival Call Act”.

Arrival act status request

You can check the current settings of Set Arrival Act.

Selecting Arrival Call Act



You can set how to react to a voice call/video-phone call that comes to a customer who has subscribed to “Voice Mail”, “Call Forwarding Service” or “Call Waiting Service” while performing a call.

- If you have not subscribed to “Voice Mail”, “Call Forwarding Service” or “Call Waiting Service”, you cannot answer a call while performing a call.
- To use arrival act, set “Set arrival act” to “Activate arrival act”.

Setting item/Setting at purchase → P237

1. From the Network Service menu (P197), “Arrival call act” ▶ Select from the following setting items

Answer

The phone rings. If Voice Mail, Call Waiting Service, or Call Forwarding Service is activated, the phone follows each setting.

Voice mail

Connects incoming calls to Voice Mail. Even if Call Waiting Service is activated, the calls are connected to Voice Mail.

Call forwarding

Forwards incoming calls to the forwarding phone number registered. Even if Call Waiting Service or Voice Mail is activated, the calls are forwarded.

Call rejection

Rejects incoming calls.

Setting Remote Control



This service allows you to operate “Voice Mail” or “Call Forwarding Service” from touch-tone phones, public phones or DoCoMo's cellular phones.

- To use “Voice Mail” or “Call Forwarding Service” overseas, you need to set “Remote control” to “Activate remote control” beforehand.

1. Select “Remote control” from Network Service menu (P197) ▶ Select one of the following items to be set

Activate remote control

Start remote control.

Deactivate remote control

Stop remote control.

Remote control status request

Check settings for remote control.

International Roaming Service



This service allows you to use functions such as Voice Mail and Call Forwarding Service while you stay overseas.

1. Select “International service” from NW service menu (P197) ▶ Select one of the following items to be set

Voice mail (Int.)

- **Activate voice mail:** Start Voice Mail.
- **Deactivate voice mail:** Stop Voice Mail.
- **Play messages:** Play recorded voice message.
- **Voice mail setting:** Check current settings of Voice Mail.

Call forwarding (Int.)

- **Activate call forwarding:** Start Call Forwarding Service.
- **Deactivate call forwarding:** Stop Call Forwarding Service.

Roaming guidance (Int.)

Set roaming guidance.

Registering Additional Services



When a new network service is added by DoCoMo, you can register the service to the menu and use.

1. From the Network Service menu (P197), “Others” ▶ “Additional service”

- The additional service list will be displayed.

2. ⓘ [Edit] ▶ After editing, press ⦿ [Select]

USSD code

Enter the service code (USSD) supplied by DoCoMo.

Service name

Enter any service name. Press ⓘ [Edit] to edit.

Using the Submenu of the Additional Service List Screen

1. From the Additional Service List screen, ⓘ [Menu] ▶ Select from the following submenu items

Edit

Edit a service.

Select[※]

The selected service is performed.

Delete 1 item[※]

The selected service is deleted.

Delete all

All the registered services are deleted.

※: Not displayed if an unregistered service is selected.

Using Registered Services

1. From the Additional Service List screen, select a registered service ▶ ⦿

Registering Additional Guidance



When you perform services added by “Additional Service”, you can register reply messages that correspond to the codes (USSD) returned from the Service Center. The reply message is displayed when the registered code is returned as a reply.

1. **From the Network Service menu (P197), “Others”**
 - ▶ **“Additional guidance”**
 - The reply message list will be displayed.
2. **[Edit] ▶ After setting, press [OK]**

USSD code

Enter the service code (USSD) supplied by DoCoMo.

Reply message

Enter a reply message name. Press [Edit] to edit.

Using the Submenu of the Reply Message List Screen

1. **From the Reply Message List screen, [Menu]**
 - ▶ **Select from the following Submenu items**

Edit

You can set a reply message.

Delete 1 item [※]

The selected reply message is deleted.

Delete all

The all registered reply messages are deleted.

※: Not displayed if an unregistered service is selected.

Using English Guidance



You can set the guidance of setting network services such as “Voice Mail” or voice guidance such as “out of the service area” to English.

Available Languages

Setting	Language
Japanese	Plays back the guidance in Japanese.
English	Plays back the guidance in English.
Japanese + English	First plays back the guidance in Japanese and then in English.
English + Japanese	First plays back the guidance in English and then in Japanese.

1. From the Network Service menu (P197), “Others”
 - ▶ “English guidance” ▶ Select from the following setting items

Guidance setting

- **Outgoing + Incoming call:** You can set languages of the guidance for outgoing and incoming calls. Select “Yes” and then select a language.
- **Outgoing call:** You can set a language of the guidance only for outgoing calls. Select “Yes” and then select a language.
- **Incoming call:** You can set a language of the guidance only for incoming calls. Select “Yes” and then select a language.

Guidance status request

You can check the current settings of the guidance.

Using Service Dialing Number



You can make a call to DoCoMo Information Center or DoCoMo repair counter.

- The displayed item may differ or some items may not be displayed depending on the FOMA card.

1. From the Network Service menu (P197), “Others”
 - ▶ “Service dialing number” ▶ Select from the following items

ドコモ故障問合せ (DoCoMo Malfunction information)

Connect to the DoCoMo repair counter.

ドコモ総合案内・受付 (General information)

Connect to the DoCoMo Information Center.

Using Call Barring



You can block all incoming calls while you are roaming outside Japan with the FOMA phone.

1. From the Network Service menu (P197), “Others”
 - ▶ “Call barring” ▶ Select from the following setting items

Activate barring of incoming call - roam

- **Barring all incoming calls:** All incoming calls are restricted. Enter your Network Security Code.
- **Data calls barring:** Only incoming video-phone calls are restricted. Enter your Network Security Code.

Deactivate barring of incoming call - roam

You can stop using Barring All Incoming When Roam. Enter your Network Security Code.

Barring of incoming call - roam status request

You can check the settings of Barring All Incoming When Roam.



Data Transmission

Data Transmission Available from the FOMA phone	210
Before Use	211
Glossary of Data Transmission Terms	212
Preparation Flow for Data Transmission	213
AT command	213

As for data transmissions, refer to Manual for data transmission in CD-ROM for details. To read this manual, it is recommended to set up Adobe Reader (Over Ver 6.0). If this program is not installed in your personal computer yet, install it from the attached CD-ROM to read the manual. For details, see the Help of Adobe Reader.

Data Transmission Available from the FOMA phone

The data transmission services you can use by connecting the FOMA phone to a personal computer are classified as follows: packet transmission, and data transfer (OBEX).

- This FOMA handset does not support 64K data transmission.
- This FOMA handset is not applicable with Remote Wakeup.
- This FOMA handset does not support FAX transmission.
- This FOMA phone is applicable only to packet transmission through IP connection (mopera U, etc.). It is not applicable to packet transmission through PPP connection.

Types of Available Transmission

Packet Transmission

This service charges a transmission fee according to the amount of data you sent and received. The packet transmission is suitable for sending and receiving data only when data transmission is required, with a device always connected to the network. This service is provided by best effort that the communication speed varies depending on the communication environment and traffic of the network.

It uses an access point which supports FOMA packet transmission such as “mopera U”, an Internet connection service for FOMA, and allows data transmission at a

maximum rate of 384kbps in downloading and 64kbps in uploading.

FOMA L602i allows data transmission overseas using an access point compatible with W-CDMA or GPRS packet transmission.

- Note that uploading and downloading a massive amount of data results in a high amount of communication fee.

Data Transfer (OBEX)

This service transfers data using infrared rays. This data transfer service is not chargeable.

By infrared communication, you can exchange data with another FOMA phone or a device having the infrared communication function such as a personal computer.

Notes for Using Data Transmission

Charges of Internet service provider

To use the internet, you need to pay the charge for the Internet service provider you use (referred to as “provider” in this document).

Besides the FOMA service fee, you need to pay the charge directly to the Internet service provider.

For details on the charges, contact the Internet service provider.

You can use the DoCoMo Internet service, “mopera U”. To use “mopera U”, subscription (charged) is required.

Setting access point (Internet service provider, etc.)

To use the packet transmission, connect to an access point for packet transmission.

- You cannot connect to the DoPa access point.
- You cannot connect to PHS 64K or 32K data transmission access point such as PIAFS.

About user authentication for accessing network

User certification (ID and password) may be required at connection to some access points. In this case, enter your ID and password on the transmission software (dial-up network). An ID and a password are given from a connecting provider or a network administrator of the connecting access point. Consult your Internet service provider or network administrator for details of the ID and password.

Conditions for packet transmission

To perform the transmission using the FOMA phone by connecting to a personal computer, the following conditions are required. Even when these conditions are satisfied, however, if the base station is congested or the radio wave conditions are bad, you may not be able to perform transmission.

- The personal computer to be used should support the FOMA USB cable (option).
- Within FOMA service area.
- The access point supports IP access of packet transmission (PDP type) of the FOMA.

Before Use

Operating Environments

The following operating environments are applicable to a personal computer used for data transmission:

Item	Requirements
PC unit	<ul style="list-style-type: none"> • PC-AT compatible PC with CD-ROM drive. • USB port (USB Specification Rev1.1/2.0 compliant) • Display resolution 800X600 dots, High Color (65,536 colors) or higher recommended.
OS ^{※1}	Windows XP, Windows 2000, (All Japanese editions)
Required memory	<ul style="list-style-type: none"> • Windows XP: 128M bytes or more^{※2} • Windows 2000: 64M bytes or more^{※2}
Hard disk space	Free space of 5M bytes or more ^{※2}

※1: DoCoMo does not assure the operation from the OS upgrade.

※2: Required memory and hard disk space depends on system configuration of a PC.

Information


- Purchase the dedicated FOMA USB Cable (option). The USB cable for personal computer cannot be used because the shape of the connector differs.

Glossary of Data Transmission Terms

- APN
An abbreviation for Access Point Name. Used to identify an Internet service provider or Internet LAN system you access for packet transmission. For example, “mopera U” is expressed with character string “mopera.net” in APN.
- cid
An abbreviation for Context Identifier. A registration number of the APN that is registered in the FOMA phone beforehand for packet transmission. In the FOMA phones, you can register up to 10 cid numbers (1 to 10).
- DNS
An abbreviation for Domain Name System, which converts a name easy-to-understand for human-being. For example, a domain name “mopera.net” is converted into an address indicated by a number easy-to-manage for computer.
- PDP type
An abbreviation for Packet Data Protocol, which indicates packet transmission. Usually, the type provider indicates will be selected from PPP access point and IP access point. This FOMA phone supports IP access service. For PDP type, consult provider or network service.
- QoS
An abbreviation for Quality of Service, which indicates the quality of network service. For the QoS setting of the FOMA phone, you can specify a communication speed.*
※: Connection speed may vary depending on communicating conditions, etc.
- W-TCP
A TCP parameter used to maximize the TCP/IP transmission capability when performing the packet transmission in the FOMA network. To maximize the transmission performance of the FOMA phone, you need to optimize the TCP parameter.
- PC Administrator right
Means the right with which the user can access all functions of Windows XP and Windows 2000 systems. A user without an administrator right cannot install/uninstall transmission setup files (drivers) and FOMA PC setup software, etc.

Preparation Flow for Data Transmission

The following outline shows a preparation flow for packet transmission, and data transfer by connecting a FOMA phone to a personal computer.

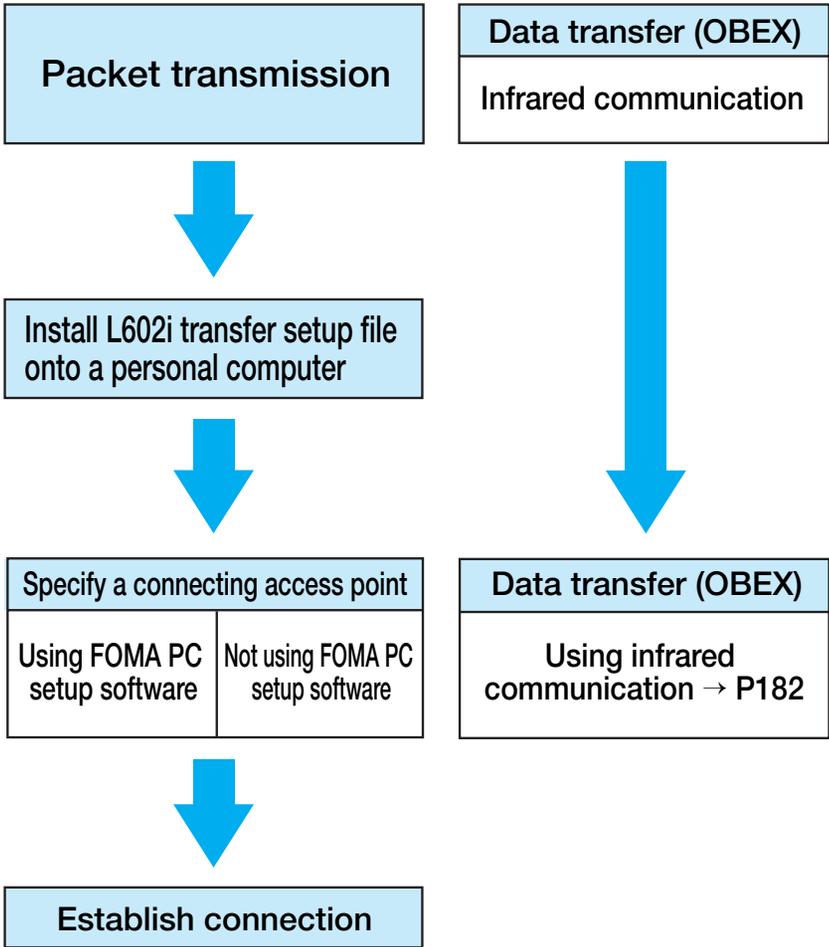

Transmission setup files and FOMA PC setup software

Attached FOMA L602i CD-ROM contains the transmission setup files (drivers) and FOMA PC setup software.

- The L602i transmission setup files are software (drivers) required for packet transmission, and data transfer using the FOMA USB Cable (option).
- The FOMA PC setup software can setup access points (APN) for packet transmission and dial-up settings easily.

AT command

AT commands are used to specify and modify the functions of the FOMA phone on the personal computer. FOMA phone is in conformity with AT commands. For details, refer to “Data Transmission” in attached FOMA L602i CD-ROM.



Entering Characters

Entering Characters	216
List of Character Assignment of Dial Buttons	222

Entering Characters

Entering Characters

[About Character Entry Display](#)

FOMA phone has some functions to enter characters for phonebook or mail.

On the Character Entry display, information on the current input mode or operation guidance is displayed.

<Character Entry display>

- ① Remaining number of bytes: Remaining number of characters you can enter is displayed in bytes.
- ② Operation guidance field: Full-pitch and half-pitch are displayed.
- ③ Input mode field: Input mode is displayed.

[Setting the prediction conversion to enter character](#)

You can set ON/OFF to predict the conversion candidates (P217) on entering Hiragana.

- This method is set to “ON” at purchase.

1. From the Character Entry display,  [Menu] ► “Input setting” ► “Prediction ON/OFF”

2. ON/OFF

[Switching Input Mode](#)

1. Press  [i-mode] on the Character Entry display (See left)

- Each time you press  [i-mode], the input mode switches.
 - “漢” ... You can enter Kanji and Hiragana.
 - “力 (カ)” ... You can enter Katakana.
 - “a/A* (ab/AB*)” ... You can enter Alphabets.
 - ※: Indicates that you can enter the capital letters.
 - “1 (12)” ... You can enter Numerals.

[Switching Between Full-pitch/Half-pitch](#)

- You may not be able to switch between full/half-pitch depending on the display of character entry.

1. Press  on the Full Entry display (See left)

- Each time you press , the full-pitch and half-pitch modes switch.

Switching Pictograph/Symbol/Emoticon Mode

- You cannot switch the mode depending on the display of character entry.

1. Press  on the Character Entry display (P216)

- Each time you press , the input mode switches.
 - “絵” ... You can enter pictographs.
 - “記” ... You can enter full-pitch Symbols.
 - “キコウ” ... You can enter half-pitch Symbols.
 - “顔” ... You can enter emoticons.
-  [Continue]: You can enter characters after selecting multiple. After selecting them, press  [Set].
- : You can change the page. If you select “キコウ”, the cursor will be jumped.

Entering Characters

You can enter characters by pressing dial buttons to which desired characters are assigned.

- To allocate the character on each button, refer to “List of Character Assignment of Dial Buttons” (P222).

Entering Characters in Prediction mode

- You can use this method on setting “漢” of Hiragana mode.

1. Enter characters on the Character Entry display (P216)

-  [KanaA1]: The entered characters are converted to Katakana or Numerals.
-  [Conv]: The entered characters are converted to Kanji or other characters.
- : The entered characters are finalized.

2. Move the cursor to Prediction/Conversion area using .

3. Select a character to convert .

Entering Characters in Normal mode

When entering the characters in other than “Hiragana mode (漢)”, the conversion (after step 2) is not required.

1. On Character Entry display (P216), enter characters

-  [Katakana/ Numeral]*: You can convert the characters on inputting to Katakana or number.

-  [Set]※: You can confirm the character on inputting.
※: In Hiragana mode
2.  /  [Convert]
 3. Move the cursor by pressing  to the area of conversion candidates.
 4. Select the character to convert. ▶ 
- **Switching Upper / Lower Character Mode**
To switch upper / lower characters, press  several times after entering characters. If the character is not correspond with each one, you cannot convert it.
 - You cannot convert the character in numeral mode (“1(12)”).
 - **Entering Voiced / Semivoiced Marks**
After entering the character, press  several times. However, you cannot enter a full-pitch character if it does not correspond to a half-pitch character.
 - You cannot enter it in alphabet (“a(ab/AB)”) or numeral (“1(12)”) mode.
 - **Entering a Punctuation**
Press  several times.
 - You cannot enter it in alphabet (“a(ab/AB)”) or numeral (“1(12)”) mode.
 - **Entering Line Feed**
Press  / 
 - Press  in numeral mode (“1(12)”) a line feed).

■ Entering a Space

 [Menu] → “Special input” → Select “Space”. In case of being the cursor at the middle of sentence, press  to enter a space.

■ Deleting a Character

Move the cursor to the character to delete and press . If the cursor is at the end of a character, press  once to delete the character left of the cursor. And, press  for more than 1 seconds to delete all the characters.

Using the Submenu on the Character Entry Display

- A few menus may not be activated depending on the display of character entry.

1. **From the Character Entry display (P216),  [Menu]**
▶ **Select from the following Submenu items.**

Common phrases

- **Input common phrase:** You can select and enter the registered common phrases.
- **Edit common phrase:** You can create and register common phrases and edit registered common phrases. Go to step 2 in “Editing Common Phrases” (P220).

Edit character

You can specify a range to copy/cut and paste characters. Go to “Copying/Cutting/Pasting” (P219).

Edit word

You can register words. Go to step 2 (P221) of “Registering Words”.

Quote

- **Phonebook:** You can access a Phonebook entry and quote the registered contents. Go to step 3 on page 66 of “Searching Phonebook”.
- **Own number:** You can bring up your own number and quote the registered contents.

Input setting

- **Full/Half:** You can switch between full-pitch and half-pitch.
- **Upper/Lower**※: You can switch between upper case and lower case of Alphabets (a/A (ab/AB)).
- **Prediction ON/OFF:** You can activate/deactivate the Prediction and Conversion function.

Special input

- **Changing line:** You can start a new line.
- **Space:** You can enter a space before the cursor.
- **Kuten code:** You can enter characters using the Kuten code. Go to step 2 of “Entering Characters Using Kuten Code” (See right).

※: After converting the English mode “a(ab/AB)”, you can activate the menu. You cannot use this menu in other modes.

Entering Characters Using Kuten Code

You can enter characters or symbols using the 4-digit Kuten code.

- For details, see “Kuten code list” (P269).

1. From the Character Entry display (P216),  [Menu] ▶ “Special input” ▶ “Kuten code”

2. Enter a Kuten code using the numeric buttons ▶



- You can also select characters or symbols using .

Copying/Cutting/Pasting

You can copy or cut a character string and paste it to another display/position.

1. From the Character Entry display (P216),  [Menu] ▶ “Edit character” ▶ “Copy”/“Cut”

2. Move the cursor to the start position using  ▶



3. Move the cursor to the end position using  ▶



4. Display the Character Entry display to which you want to paste the copied/cut characters ▶ Move the cursor to the desired position for pasting using .

5.  [Menu] ▶ “Edit character” ▶ “Paste” ▶ “Yes”

- Select  [Menu] ▶ “Edit character” ▶ “Undo” in sequence to undo cut or pasted characters.

Information

- If the number of characters which are copied or cut from the sentence exceeds the limit, you can paste them after deleting the characters over the limit.

- To paste the character after copying or cutting, its type should be same. For example, you cannot enter (half pitch of Alphabet and numeral) Hiragana or Kanji in screen to input mail address.
- If you paste character lines including a line feed in the entry screen that line feeds cannot be entered, it is replaced by a blank (half-pitch space).

Editing Common Phrases

You can edit registered common phrases or add new common phrases.

1. From the Character Entry display (P216), [Menu] ► “Common phrases” ► “Edit common phrase”



<Edit common phrase>

2. Select Category ► ●
 - The Select Common phrase display appears.
 - If you press ● in common phrase list, you can view all categories.
 - If you register new phrase, select “Original”.

3. Select a common phrase to be changed ► [Edit] ► Edit/input the common phrase ► ●

Using the Submenus of the Edit Common Phrase Display/ Select Common Phrase Display / Input Common Phrase Display

1. From the Edit Common Phrase display / Common Phrase display, [Menu] ► Select from the following Submenu items

Reset all ※1

All common phrases are reset to their defaults.

Delete 1 item ※2

A selected/displayed common phrase is deleted.

Reset 1 item ※2

A selected/displayed common phrase is reset to its default.

Category reset ※2

All common phrases stored in the category are reset to their defaults.

Cancel

You can cancel editing of common phrases.

※1: Not displayed on the submenu of the common phrase display.

※2: Not displayed on the submenu of the Edit common phrase display.

Information

- If you activate the menu “Reset all”, the contents of “Original” will be deleted.

Registering Words

For those words not displayed as the conversion candidates or words with unusual readings, you can register them with their readings. Once registered, the words are displayed as conversion candidates when their readings are entered.

1. **From the Character Entry display (P216),**  **[Menu] ▶ “Edit word”**
 - The registered Words List is displayed.
 - Select a dictionary and press  to confirm the registered words.
2.  **[New registration] ▶ Select the next item to register ▶ After registering,  [Register] following**

Reading

You can set reading of “Word”.

Word

You can set a word that will be displayed as a conversion candidate when you enter characters registered as “Reading”.

Deleting Words

1. **From the Registered Words list,**  **[Menu] ▶ “Delete 1 item”/“Delete all” ▶ “Yes”**

List of Character Assignment of Dial Buttons

You can enter a character by pressing dial button. On pressing each button, you can enter multiple characters as follow the table below. Each time you press the button, the character will be changed. Each time you press , the character will be changed in reverse order.

Button	Hiragana mode (「漢」)	Katakana mode (「カ(カナ)」)	Alphabet mode (「a/A (ab/AB)」) ^{※5}	Hiragana mode (「1 (12)」)
	あ い う え お あ い う え お	ア イ ウ エ オ ア イ ウ エ オ	. @ / : - ~ ^{※3}	1
	か き く け こ	カ キ ク ケ コ カ ^{※2} ケ ^{※2}	a b c A B C	2
	さ し す せ そ	サ シ ス セ ソ	d e f D E F	3
	た ち つ て と っ	タ チ ツ テ ト ッ	g h i G H I	4
	な に ぬ ね の	ナ ニ ヌ ネ ノ	j k l J K L	5
	は ひ ふ へ ほ	ハ ヒ フ ヘ ホ	m n o M N O	6
	ま み む め も	マ ミ ム メ モ	p q r s P Q R S	7
	や ゆ よ ゃ ゅ ょ	ヤ ュ ヨ ャ ヷ ヲ	t u v T U V	8
	ら り る れ ろ	ラ リ ル レ ロ	w x y z W X Y Z	9
	わ を ん わ (Space) 、 。 - ・ ! ?	ワ ヲ ン ヲ ^{※2} (Space) 、 。 - ・ ! ?	(Space) ! ? - , ' ; () “ ~ ^{※3} & ¥	0
	ゝ ^{※1} っ ^{※1} 、 。 - ・ ! ?	ゞ ^{※1} ッ ^{※1} 、 。 - ・ ! ?	! ? - , ' ; () “ ~ ^{※3} & ¥	* + ^{※4} P ^{※4}
	(Line feed)	(Line feed)	(Line feed)	#

※1: In full-pitch mode, “ ゝ ” or “ ゞ ” is displayed only when the character to which “ ゝ ” or “ ゞ ” can be added is displayed.

※2: You can enter a character only in full-pitch mode. ※3: In half-pitch mode, “ ~ ” is displayed. ※4: You can enter a character only in half-pitch mode.

※5: If you set capital mode in “Switching Capital/Small letter mode” (P219), the capital letter will be displayed at first.

Overseas Use

International Roaming Service	224
Setting the Network Mode.....	225
Confirming Before Using Overseas....	225
Using the FOMA Phone Overseas.....	227

International Roaming Service

International roaming service (WORLD WING) is a service that allows you to make calls or communications overseas using the same phone number as that used in Japan, utilizing networks of affiliate telecommunications carriers overseas. Refer to “Network Services User’s Guide (Chapter of International Service)” for details of the communications services available while in international roaming. The International Service web page of DoCoMo offers the downloadable latest version of “Network Services User’s Guide (Chapter of International Service)” as well as the latest information about WORLD SERVICE: <http://www.nttdocomo.co.jp/service/world/>

Application for WORLD WING

- The customer who subscribed to the service on or after September 1, 2005 is not required to apply to this service. However, the customer who declined this service at subscription to the FOMA service is required to apply.
- The customer who subscribed to the FOMA service on and before August 31, 2005 and has not applied to the “WORLD WING” is required to apply to this service.
- This service is not available with some billing plans.

Overseas Networks and Services Available



See “Network Name” (P98) to display the network name on connecting and to set it.

Network	Icon	Voice	Packet transmission (i-mode, mopera U, etc.)	SMS	Video-phone
3G		O	O	O	O
GPRS		O	O	O	X
GSM		O	X	O	X

- ※ Services marked with “O” in the table above may not be available depending on the mobile phone carrier being used or the place of stay.
- ※ See the International Service web page of DoCoMo for details about services available in each country or region <http://www.nttdocomo.co.jp/service/world/>

Information

- You can set to display Japan time together with the local time on the stand-by display. → P81

Setting the Network Mode



Network mode of the FOMA phone is set to “Auto” at purchase. If you know the network in your area, you can select it directly.

Setting item/Setting at purchase → P251

1. From the Settings menu (P85), “Network” ▶ “Network mode” ▶ Select from the following setting items

Auto

Searches all the networks connectable.

WCDMA only

Searches only networks supporting 3G.

GSM only

Searches only networks supporting GSM/GPRS.

For the network search setting (changing of the communication carriers), see P96.

Information

- You cannot exchange the data through packet service under GSM network.
- When using the FOMA handset in Japan or in the service area of 3G network, we recommend you change the setting of the “Network mode” to “WCDMA only” to save battery power.

Confirming Before Using Overseas

Before Departure

Charging the Battery

Make sure of the voltage available in the country or area of stay and use the FOMA Overseas/Domestic AC Adaptor 01 (option) for overseas and domestic usage (a conversion plug adapter according to the place of stay will be required).

And, do not charge the FOMA phone using an electrical transformer for overseas travel.

Using Voice Mail/Call Forwarding from Overseas

Use of the Voice Mail or Call Forwarding service from overseas is part of “remote operation” and requires the activation of Remote operation before your departure. For details to set the remote operations, refer to “Remote Operation Settings” (P204).

- ※ Before departure, make sure that you have the Network Security Code, which may be required for remote-accessing the Voice Mail etc. If you have forget your Network Security Code, visit a DoCoMo Shop or DoCoMo World Counter with an identification such as the driver’s license to make necessary changes.

Using i-mode Overseas

To use i-mode overseas, you need to set “International Settings” to “YES”.

- To change settings in Japan
 - No packet transmission fees apply.

“iMenu” ▶ “English” ▶ “Options” ▶ “International Settings” ▶ “YES”

- To change settings outside Japan
 - Packet transmission fees apply.

“iMenu” ▶ “International Settings” ▶ “YES”

- If set to “NO”, you can send and receive i-mode mail messages and view the i Menu only. The setting at purchase is “NO”.
- ※ Some i-mode sites may not be available depending on the information provider.
- ※ Packet transmission fees apply to all types of access from overseas including transmissions that are free of charge in Japan.
- ※ Japan time applies even if i-mode sites are accessed from overseas. Be careful when registering entries to or deleting entries from My Menu at the beginning or end of a month.

Using FOMA phone overseas

Setting Mobile Phone Carrier

The network will be set after searching it automatically if “Setting the Network Mode” (P97) is set to “Auto” in international roaming.

- You can set up beforehand the type of network on searching by “Setting the Network Mode” (P97).
- If you search the network automatically, you can set the preferred network by “Registering a Network from the list” (P97).
- You can select the network manually. Refer to “Selecting the Network Connection Mode” (P96).

Information

- “Network mode” is set to “Auto” after you search with “Network mode” set to “WCDMA only” or “GSM only” and “Network selection” set to “Auto”, “Network mode” will be set to “Auto” after searching.
- If you search with “Network mode” set to “Auto” and “Network selection” set to “Auto”, the same mode (“WCDMA only” / “GSM only”) of the network (communication carrier) you selected after searching will be set.

Settings to be made after returning to Japan

After Coming Back to Japan

When network settings have been changed for use overseas, “圏外” may appear in Japan. In that case, make settings given below.

- You have to set “Network selection” (P97) to “Auto/WCDMA only”.
- You have to set “Network selection” (P96) to “Auto” or “Manual” and select “JP DoCoMo-3G” on the network selection screen displayed after searching.

Using the FOMA Phone Overseas

- If the other party subscribes to a mobile phone carrier supporting the FOMA video-phone, you can make a video-phone call by pressing .

Making Calls

- Making a call to Japan from the country you stay
When entering the phone number directly

Press  for 1 or more seconds to display “+”
▶  (Country code for Japan) ▶ Other party's phone number excluding “0 (zero)” at the beginning of the area code ▶  ()

Example: When the other party is in one of the 23 wards of Tokyo (area code: 03)

“+” →  →  →  → XXXX – XXXX

Making a call to a number registered in phonebook

The phonebook list screen (P67) or  [Menu] on phonebook detail screen (P67) ▶ “International call (Japan)” ▶  [Call] when recipient's phone number appears

Example: When a phone number saved in phonebook has area code “03” (in 23 ward of Tokyo)
+813XXXX - XXXX

- A recipient's phone number is generated, automatically prefixed with Japan's Country code “+81” and “0” removed from area code.

- Calling another WORLD WING/WORLD WALKER user

Press  for 1 or more seconds to display “+”
▶  (Country code for Japan) ▶ Other party's phone number excluding “0 (zero)” at the beginning of the area code ▶  ()

Example: When the other party has a mobile phone number beginning with (090)

“+” →  →  →  → XXXX – XXXX

- Calling a mobile phone or fixed-line phone within the country of stay

Dial the other party's phone number including the area code ▶  ()

Overseas Use

- Calling from the country of stay to a mobile phone or fixed-line phone in another country (except for Japan)
 - In some countries or areas such as Italy, “0” may be required.

Press  for 1 or more seconds to display “+”
▶ Country code of the other party ▶ Other party’s phone number excluding “0 (zero)” at the beginning of the area code ▶  ()

Receiving calls

When a call comes in,  ()

Having Others Call You

- Receiving a call from Japan

Have the other party call you at your mobile phone number as usual.

   → XXXX – XXXX/

   → XXXX – XXXX ▶ CALL

- Receiving a call from a country other than Japan

International access code of the country where you make the call ▶   (Country code for Japan)
▶ Your phone number excluding “0 (zero)” at the beginning ▶ CALL

Troubleshooting

Unable to Make or Receive Calls/Always Out of the Service Area/Handset Does Not Turn ON

Possible causes for inability to make or receive calls, reception level indication permanently being “Out of the service area” or the handset not turning on are as follows:

- Weak radio waves being received or being out of the service area
- Failure of the local switchboard or base station or temporary line congestion
- Wrong operation of the handset
- Others

See the International Service web page of DoCoMo for the latest information about service areas and network interruption:

In addition, make sure of the operation and try the following:

- If you are indoors, confirm if the condition is the same outdoors.
- Confirm if your monthly charges have not exceeded the limit.
- Turn OFF the handset once and back ON.
- Manually select the mobile phone carrier to use.

If the problem persists after the above troubleshooting procedures are taken, contact the Network Technical Support and Operations Center (P229).

If i-mode is inaccessible

- If i-mode sites other than “iMenu” is unavailable, first make “International Settings” (P225). Some sites may not be available depending on the information provider.
- The i-mode services may not be available depending on the operator being used.
- Select a mobile phone carrier compatible with packet transmission.
- For the latest information about overseas carriers compatible with packet transmission, see the International Service web page of DoCoMo.
- “i-mode” services offered by overseas carriers are not available.

Contact (While outside Japan)**If the handset is lost or stolen, etc.**

<DoCoMo Information Center> (24-hour service)

■ Universal Number

International Call ID Number for the Universal Number (See Table 1)
--

– 800-0120-0151

※ Domestic call charges of the country you stay apply if you make a call from a mobile phone.

■ If the Universal Number (above) is not available

International access code for the country of stay (See Table 2)
--

– 81-3-5366-3114

※ Dialing charges for calls to Japan will apply.

Please be aware that you are charged for call fee incurred after the phone or UIM is lost or stolen. Contact the Information Center immediately after the loss and follow the procedures to cancel the service.

If the Handset is not Working Properly

<Network Technical Support and Operations Center>
(24-hour service)

■ Universal Number

International Call ID Number for the Universal Number (See Table 1)
--

– 800-5931-8600

※ Domestic call charges of the country you stay apply if you make a call from a mobile phone.

■ If the Universal Number above is not available

International access code for the country of stay (See Table 2)
--

– 81-3-6718-1414

※ Dialing charges for calls to Japan will apply.

Overseas Use

Major Country Codes

Country/Region	Code	Country/Region	Code
Australia	61	Maldives	960
Austria	43	Netherlands	31
Belgium	32	New Caledonia	687
Brazil	55	New Zealand	64
Canada	1	Norway	47
China	86	Peru	51
Czech	420	Philippines	63
Egypt	20	Russia	7
Fiji	679	Singapore	65
Finland	358	South Korea	82
France	33	Spain	34
Germany	49	Sweden	46
Greece	30	Switzerland	41
Hong Kong	852	Tahiti	689
Hungary	36	Taiwan	886
India	91	Thailand	66
Indonesia	62	Turkey	90
Italy	39	UK	44
Japan	81	USA	1
Macao	853	Vietnam	84
Malaysia	60		

Overseas Use

※The International Call ID Numbers for the Universal Number in Table 1 and international access codes in Table 2 are subject to change.

※Be careful that the Universal Number may be often unavailable when making calls from mobile phones, public phones or hotel phones.

International Call ID Number for the Universal Number (Table 1)

Country/Region	Code	Country/Region	Code
Argentina	00	Luxembourg	00
Australia	0011	Malaysia	00
Austria	00	Netherlands	00
Belgium	00	New Zealand	00
Brazil	0021	Norway	00
Canada	011	Philippines	00
China	00	Singapore	001
Columbia	009	South Korea	001
Denmark	00	Spain	00
Finland	990	Sweden	00
France	00	Switzerland	00
Germany	00	Taiwan	00
Hong Kong	001	Thailand	001
Ireland	00	UK	00
Israel	014	USA	01
Italy	00		

Major International Access Codes (Table 2)

Country/Region	Code	Country/Region	Code
Australia	0011	Malaysia	00
Belgium	00	Monaco	00
Brazil	0041	Netherlands	00
	0021	New Zealand	00
	0023	Norway	00
Canada	011	Philippines	00
China	00	Poland	00
Czech	00	Portugal	00
Denmark	00	Russia	810
Philippine	00	Singapore	001
Finland	990	South Korea	001
France	00	Spain	00
Germany	00	Sweden	00
Greece	00	Switzerland	00
Hong Kong	001	Taiwan	002
Hungary	00	Thailand	001
India	00	Turkey	00
Indonesia	001	UAE	00
Ireland	00	UK	00
Italy	00	USA	011
Luxembourg	00	Vietnam	00
Macao	00		

※ Be careful that the Universal Number may be often unavailable when making calls from mobile phones, public phones or hotel phones.

Applying for WORLD WING

At DoCoMo e-site

- By i-mode
“iMenu” ▶ “料金&お申込・設定” ▶ “ドコモeサイト”
 - From a personal computer
My DoCoMo (<http://www.mydocomo.com/>) ▶
Procedures (ドコモeサイト)
- ※ You need to enter your “Network Security Code” for application by i-mode.
- ※ You need to enter your “DoCoMo ID/Password” for application from a personal computer.
- ※ DoCoMo e-site may not be available for the application depending on the contracted contents.

By phone

<DoCoMo Information Center>

- From DoCoMo mobile phone or PHS
 151 (toll-free)
※ Not accessible from fixed-line phones, etc.
- From fixed-line phones, etc.
 0120-800-000 (Japanese only)
※ Also accessible from a mobile phone or PHS.

※ Make sure that you dial the correct number.

At DoCoMo Shop

Your local DoCoMo Shop accepts the application.

At the DoCoMo World Counter

Applications accepted even on the day of departure.

- DoCoMo World Counter Narita International Airport No. 1: 4F Central Building, Narita International Airport Terminal 1
- DoCoMo World Counter Narita International Airport No. 2: B1F Main Building, Narita International Airport Terminal 2
- DoCoMo World Counter Kansai International Airport: 4F Kansai International Airport Terminal Building
- DoCoMo World Counter Central Japan International Airport: Business Center P@tio, 3F Central Japan International Airport Terminal Building

- ※ Processing the application may take time. Allow sufficient time for application at the DoCoMo World Counter.
- ※ For business hours, refer to “Network Services User's Guide (Chapter of International Service)”.

How to Use WORLD CALL

■ Check the settings of “International Settings”

<How to activate WORLD CALL>

⊙ [Menu] ▶  or “Settings” ▶ “Call feature” ▶ “International dial” ▶ “IDD prefix setting”

- Set to use “009130010” for WORLD CALL.

■ Making

Display “+” → Country code → Area code → Other party's phone number → 

- ※ When you call a mobile phone, dial the mobile phone number after the country code.
- ※ When the other party's area code or mobile phone number begins with 0, omit the zero when dialing (This does not apply in some countries/regions).

Appendix

Menu list	234
Pre-installed data	260
Symbol/Special Character List	264
Pictograph and Emoticon List	265
Common Phrase List.....	267
Kuten Code List.....	269
List of city in World time	278
Multiaccess Combination Patterns	279
Multitask Combination Patterns	280
Service Available with FOMA Phones	284
■ Connecting with External Devices	
Introduction of Data Link	285
■ When You are in Trouble	
Troubleshooting	286
Error Messages	288
Introduction of Options and Related Equipment	308
Warranty and Maintenance Services ..	308
Specific Absorption Rate of the Mobile Phone	311
Export/Re-export regulations of Japan and USA.....	314

Menu list

- You can select the function by pressing the button corresponding with the number in the table below.

Menu Item	Setting Item (Blue color: Setting at purchase)	Reference
 i-appli	Pre-installed i-appli only	P159
 i-mode		P119
1 iMenu	-	P120
2 Bookmark	No bookmarks	P121
3 Screen memo	No screen memos	P122
4 Last URL	-	P123
5 Go to location		
1 Input address	http://	P124
2 URL history	No URL history	
6 Message		P125
1 MessageR	No messages	
2 MessageF	No messages	
7 Check new message	-	P127
8 i-mode setting		
1 Home	Enable/Disable URL Address: http://	P128
2 View		
1 Character size	Small/Standard/Large	
2 Image display	ON/OFF	
3 Scroll	1 line/3 lines/5 lines	

Menu Item		Setting Item (Blue color: Setting at purchase)	Reference
	4 Message list disp.	1 line/ 2 lines	P128
	3 Certificates	-	
	4 Others	-	
	1 Connection timeout	60 seconds /90 seconds/Unlimited	P129
	2 i-motion auto play	ON /OFF	
	3 Check new message	Mail/MessageR/MessageF (All marked)	
	4 Check settings	-	
	5 Reset settings	-	
6 Reset data	-		
 NW Service			P197
1 Voice mail			P198
1 Activate voice mail		-	P199
2 Set ringing time		-	
3 Deactivate voice mail		-	
4 Voice mail status request		-	
5 Play messages		-	
6 Voice mail setting		-	
7 Check messages		-	
8 Notify missed call			
1 Activate missed call notification		-	
2 Deactivate missed call notification		-	
3 Missed call notification status request		-	

Appendix

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference		
	9	Delete voice mail icon	-		P199	
	0	Set message alert ringer	-			
	2	Call waiting			P200	
	1	Activate call waiting	-			
	2	Deactivate call waiting	-			
	3	Call waiting status request	-			
	3	Call forwarding			P201	
	1	Activate call forwarding	1	Register fwd number		-
			2	Set ringing time		-
	2	Deactivate call forwarding	-			
	3	Register the forwarding number	-			
	4	Setting at forwarded party busy	-			
	5	Call forwarding status request	-			
	4	Nuisance call barring			P202	
	1	Register nuisance caller	-			
	2	Delete all entries	-			
	3	Delete most recent entry	-			
	5	Caller ID notification				
	1	Activate/Deactivate caller ID notification	-			
	2	Caller ID notification status request	-			
6	Caller ID request			P203		
1	Activate caller ID request	-				

Menu Item		Setting Item (Blue color: Setting at purchase)	Reference
	2 Deactivate caller ID request	–	P203
	3 Caller ID request status request	–	
	7 Set arrival act		
	1 Activate arrival act	–	
	2 Deactivate arrival act	–	
	3 Arrival act status request	–	
	8 Arrival call act	Answer/Voice mail/Call forwarding/Call rejection	
	9 Remote control		
	1 Activate remote control	–	
	2 Deactivate remote control	–	
	3 Remote control status request	–	
	10 International service		
	1 Voice mail (Int.)		
	1 Activate voice mail	–	
	2 Deactivate voice mail	–	
3 Play messages	–		
4 Voice mail setting	–		
2 Call forwarding (Int.)		P204	
1 Activate call forwarding	–		
2 Deactivate call forwarding	–		
3 Roaming guidance (Int.)			
11 Others			

Appendix

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference	
		Not recorded		P205	
	2 Additional guidance	Not recorded		P206	
	3 English guidance				
		1 Guidance setting	Outgoing+Incoming call/ Outgoing call/ Incoming call		P207
		2 Guidance status request			
	4 Service dialing number				
		1 ドコモ故障問合せ			
		ドコモ総合案内・受付			
	5 Call barring				
		1 Activate barring of incoming call - roam	1 Barring all incoming calls		
			2 Data calls barring		
			-		
		-			
	Mail			P137	
	1 Inbox	Inbox	No messages	P139	
		Folder created by user	None		
	2 Outbox	No messages		P144	
	3 Unsent message	No messages		P147	

Menu Item		Setting Item (Blue color: Setting at purchase)	Reference
	4 Compose mail		P149
	1 Compose message	–	
	2 Compose SMS	–	P152
	5 Check new message	–	P154
	6 Receive option	–	
	7 Check new SMS	–	P155
	8 Mail setting		
	1 Communication		
	1 Receive opt. setting	ON/OFF	
	2 Receive attach file	Image, Melody (All marked)	
	3 Check new message	Mail, MessageR, MessageF (All marked)	
	4 SMS report request	ON/OFF	
	5 SMS validity term	None/1 day/2 days/3 days	
	2 Edit		P156
1 Edit signature	Auto attach: Marked Signature field: Not marked		
2 Edit quotation	>		
3 View			
1 Character size	Small/Standard/Large		
2 Scroll	1 line/3 lines/5 lines		
3 Mail list display	1 line subject/1 line address/1 line name/2 lines address/2 lines name		
4 Folder security	Inbox, Outbox, Unsent message (All unmarked)		

Appendix

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference
		5 Melody auto play	ON/OFF	P156
	4 Others	1 Check settings	–	P157
		2 Reset settings	–	
		3 Reset data	–	
	Data box			P165
1 My picture	Camera, Data transfer, i-mode		No data	P166
	Item, Pre-installed		Only preinstalled file	
	Folder created by user		None	
2 i-motion	Camera, Data transfer, i-mode		No data	P173
	Pre-installed		Only preinstalled file	
	Folder created by user		None	
3 Melody	Data transfer, i-mode		No data	P176
	Pre-installed		Only preinstalled file	
	Folder created by user		None	
	Multimedia			P107
1 Camera-mode		–		P109
2 Movie-mode		–		P115
3 Camera settings	1 Saving option Auto saving	ON/OFF		P118
	2 Shutter sound	Shutter 1/Shutter 2/Shutter 3		
	3 Flicker tuning	Auto/50Hz area/60Hz area		

Menu Item	Setting Item (Blue color: Setting at purchase)		Reference
 Stationery			P189
1 Scheduler	Not registered		P191
	Schedule type	None /Private/Anniversary/Trip/Work/Meeting	
	 Alarm	No alarm /On time/Before 15 mins/Before 30 mins/Before 1 hour/Before 1 day/Before 3 days/ Before 1 week	
	 Repeat	Once /Daily/Mon~Fri/Sat~Sun/Weekly/Monthly/Yearly	
2 Memo	Not registered		P193
3 Date search	-		P194
4 Date counter	Not registered		P195
 Phonebook			P63
1 Add to phonebook	Not registered		P64
2 Search phonebook	-		P66
	1 Show all data		
	2 Group search		
	3 Reading search		
	4 Memory No. search		
	5 Phone No. search		
6 Domain search			
3 No. of phonebook	-		P70

Appendix

Menu Item		Setting Item (Blue color: Setting at purchase)	Reference
	4 Phonebook settings		P70
	1 Display data	Handset only /UIM only	
	2 Create domain list	1. @docomo.ne.jp 2~10. Not registered	
	3 Search by	Show all data /Group search/Reading search/ Memory No. search/Phone No. search/Domain search	
	4 Display image	ON/OFF	P71
	5 Group settings	Group name: Group 1 - Group 30 (Not setting)	
6 Own number	-	P72	
	Tools		P179
1 Alarm	Not setting		P180
	 (ON/OFF setting)	ON/OFF	
	 (Repetition setting)	Once /Daily/Mon~ Fri/ Sat~Sun/Except holiday	
	 (Turbo Alarm)	OFF /ON (Max Ring&Vib)	
	 (Snooze setting)	OFF/ In 5 mins /In 10 mins/ In 30 mins/In 1 hour/ In 2 hours/In 4 hours/ In 8 hours/In 1 day/In 1 week	
2 Custom menu	1 Search phonebook , 2 Mail , 3 i-mode , 4 Camera-mode , 5 Alarm , 6 Select ringtone , 7~10 Not registered	P181	
3 Receive Ir data	-	P184	

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference
	4 Calculator	-		P184
	5 Unit converter			P185
	1 Currency	Currency unit	円 (Yen) / ドル (Dollar) / ユーロ (Euro) / 通貨1 (Currency 1) / 通貨2 (Currency 2) / 通貨3 (Currency 3) / 通貨4 (Currency 4)	P186
	2 Surface	Surface unit	Acre/Hectare/Square in/ Square feet/Square yd/ Square miles/Square mm/ Square cm/Square m/ Square km	
	3 Length	Length unit	mm, cm, m, km, inch, feet, yard, mile	P187
	4 Weight	Weight unit	mg, g, kg, ton, ounce, pound, stone	
	5 Temperature	Temperature unit	Celsius/Fahrenheit	

Appendix

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference	
	6 Volume	Volume unit	Milliliter, Liter, Cubic mm, Cubic cm, Cubic meter, Cubic inch, Gallon, Liq.pt, Liq.oz, Fluid oz, Barrel	P 187	
		7 Velocity	Velocity unit		km/h, meter/sec, mile/h, feet/sec
	6 World time	Choose city	Tokyo	P188, 278	
		Home setting	-		
	7 Stop watch	-		P 188	
	Sound			P75	
1 Ring volume	Voice call	Level 0~7 (Level 3)		P76	
	Video-phone	Level 0~7 (Level 3)			
	Mail tone	Level 0~7 (Level 3)			
	MessageR tone	Level 0~7 (Level 3)			
	MessageF tone	Level 0~7 (Level 3)			
	SMS tone	Level 0~7 (Level 3)			
	2 Effect tone volume	Key tone	Level 0~7 (Level 3)		
		Power ON/OFF	Level 0~7 (Level 3)		
		Flip tone	Level 0~7 (Level 3)		
		Feedback tone	Level 0~7 (Level 3)		

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference	
	3 Select ringtone	Voice call	Ring01.mid	P77	
		Video-phone	Ring02.mid		
		Mail tone	Message02.mid		
		MessageR tone	Message03.mid		
		MessageF tone	Message04.mid		
		SMS tone	Message05.mid		
	4 Select effect tone	Key tone	OFF/Digital Tone/Japanese/English/Korean		P78
		Power ON/OFF	ON/OFF		
		Flip tone	Sound off/Sound1/Sound 2/Sound3		
		Feedback tone	ON/OFF		
	5 Vibration settings	Incoming call	melody + vibration/Pattern 1 (Vibration only)/Pattern 2 (Vibration only)/OFF		P79
		Message	melody + vibration/Pattern 1 (Vibration only)/Pattern 2 (Vibration only)/OFF		
	6 Manner settings		Manner mode/Original manner mode		P79
	1 Manner mode		-		
	2 Original manner mode		Incoming call sound	ON/OFF	
			Incoming call vib.	ON/OFF	
			Message sound	ON/OFF	
			Message vibration	ON/OFF	

Appendix

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference
		Key tone	ON/ OFF	P79
		Flip tone	ON/ OFF	
		Low battery tone	ON/ OFF	
	7 Mail ring duration	Mail ring ON/OFF	ON /OFF	P80
		Mail ring duraiton	Time 3 Sec. /Duration 1 Cycle	
8 Set mute seconds	0 Sec.			
	Display			P75
1 Main display	Wallpaper	Select file: Vivid red.gif Clock theme: Willy Willy	P80	
	1 Stand-by display	Display items	Clock: Digital 1 /Digital 2/ Digital 3/Digital 4 Dual clock Calendar + Clock Not display	P81
		Clock font color	16 colors in total (black)	
	2 Incoming call	Incoming_call_clean.gif		
	3 Outgoing call	Outgoing_call_clean.gif		
	2 Sub display			P82
	1 Stand-by display	Wallpaper	Select file: Sub_vivid red.jpg Clock theme: Tropical	
Display items		Dual clock/Calendar+clock		

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference	
	2 Incoming call	Sub_incoming.gif		P82	
	3 Outgoing call	Sub_outgoing.gif			
	3 Dial Font	Dial font size	Small /Large		P83
		Dial font color	Total 16 colors (Orange)		
	4 Menu style	Grid			
		List	List		
	5 Backlight	Main display	10 seconds /30 seconds/60 seconds/ 120 seconds/180 seconds		
			100% /80%/60%/40%		
		Sub display	10 seconds /30 seconds/60 seconds/ 120 seconds/180 seconds		
			100% /80%/60%/40%		
	Keypad	10 seconds /30 seconds/60 seconds/ 120 seconds/180 seconds			
6 Color scheme	Green tea black/Cherry pink/Water drop blue/ Ceramic white				
7 LED Settings	Lighting	ON /OFF		P84	
	Incoming voice call	Pattern 10 (red/pink/blue/aqua/green /yellow)			

Appendix

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference
		Incoming video call	Pattern 10 (red/pink/blue/aqua/green/yellow)	P84
		Receiving mail	Pattern 9 (red/yellow/green)	
		Receiving messageR	Pattern 9 (yellow/pink/green)	
		Receiving messageF	Pattern 9 (green/yellow/blue)	
		Receiving SMS	Pattern 9 (blue/yellow/red)	
		Playing music	Pattern 8 (aqua/white/pink)	
		Alarm	Pattern 3 (aqua)	
		Schedule	Pattern 4 (blue/red)	
		During a call	Pattern 1 (aqua)	
	Settings			P85
	1 Call/Answer			P86
	1 Call/MAil history			
		1 Received calls	No record	P87
		2 Dialed calls	No record	
		3 All calls	No record	

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference		
		4 Received mails	No record		P88	
		5 Sent mails	No record			
		6 All mails	No record			
	2	Call duration	Last call, Received calls, Dialed calls, All calls (00:00:00)			
	3	Auto answer	Auto answering	ON/OFF		P89
			Delayed time (SEC) (0 - 120)	10		
	4	Reject/Accept call	Accept/Reject/Reject all calls/Memory reject call			
	5	Answer mode	Press send key/Open flip/Press any key			
	2	Call feature			P91	
	1	Reconnect alarm	High alarm/Low alarm/No alarm			
2	Quality alarm	High alarm/Low alarm/No alarm				
3	Minute reminder	ON/OFF				
4	Prefix dial	PREFIX 1	009130010		P92	
		PREFIX 2~3	Not registered			
5	International dial					
	1 Auto assist setting	Auto/OFF		P93		
		2 IDD prefix setting	IDD prefix name		WORLDCALL	
		IDD prefix code	009130010			
6	Close setting	End the call/Continue (Mute)				

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference	
	3 Video-phone			P93	
	1 Video-phone settings	VoiceCall AutoSwitch	ON/ OFF	P94	
		Display setting	Both /Other/Me		
		Sub screen	Me /Other		
		Send camera image	ON /OFF		
		Sending img. quality	Prefer image quality/ Normal /Prefer motion quality		
		Display light	Always on /Terminal setting		
		Hands_free V.phone	ON /OFF		
	2 Image settings			P95	
		1 Substitutive image	Image		Default image /Selected image
			Image list		Not setting
		2 Response hold image	Image		Default image /Selected image
			Image list		Not setting
		3 On-hold image	Image		Default image /Selected image
			Image list		Not setting
	4 Date & Time			P96	
		1 Set time	Set time		00 : 00 : 00
Time format			12-hour/ 24-hour		
Hour indication			OFF		
2 Set date		Set date	2006.01.01		
	Date format	DD/MM/YYYY / MM/DD/YYYY / YYYY/MM/DD			

Menu Item		Setting Item (Blue color: Setting at purchase)	Reference		
	3	Daylight saving	ON/OFF	P96	
	5	Network			
	1	Network selection	Auto/Manual		
	2	Network mode	Auto/WCDMA only/GSM only		P97
	3	Preferred lists	Depending on user's setting		
	4	Network name display	Display on/Display off	P98	
	6	Host selection	i - mode		
	7	Security		P99	
	1	All lock	Power on/Immediate/None	P100	
	2	PIN code request ^{*1}	ON/OFF		
	3	Change password			
	1	PIN1 code ^{*1}	0000		
	2	PIN2 code ^{*1}	0000		
		3	Security code	0000	
	8	バイリンガル ^{*2}	日本語/English	P101	
	9	Others			
	1	Memory status			
	1	Data box	—		
		2	Personal info.	—	
		3	UIM memory	—	

Appendix

Menu Item		Setting Item (Blue color: Setting at purchase)		Reference	
	2 Reset settings			P101	
		1 Clear memory	1 Data box		–
			2 Personal info.		–
	2 Default settings	–		P102	
	3 SMS center	SMSC	DoCoMo/Others		
		Address	81903101652		
	4 Reset holiday	–			

※1: Settings of UIM takes precedence.

※2: The setting is registered in FOMA phone and UIM, but if each setting is different, the setting of UIM takes precedence.

Default List of the Submenu/Function Menu Items

Video-phone talking screen → P59

Items / Function Name	Setting Items
Camera settings	
 (Zoom)	X1/X2
 (Brightness)	High/ Medium /Low
 (Night mode)	ON/ OFF
Video phone settings	
Display setting	Both /Other/Me
Sub screen	Me /Other
Display light	Always on /Terminal setting
Sending img. Quality	Normal /Prefer motion quality/Prefer image quality

Phonebook list screen → P67

Items / Function Name	Setting Items
Search phonebook	Show all data /Group search/Reading search/Memory No. search/Phone No. search/Domain search
Display image	ON /OFF

Still Image Finder Stand-by display →P112

Submenu Items	Setting Items
 (Upside down)	Upside down
 (Size)	1280X1024/640X480/352X288/320X240/176X220/ 176X144 /128X96/ Phonebook
 (Quality)	Super fine /Fine/Normal
 (Multishot)	OFF /3/6/9
 (Zoom)	x1 ~ x10 (x1)
 (Brightness)	-2 ~ 0 ~ +2 (0)
 (White balance)	Auto /Daylight/Cloudy/Incandescent/Fluorescent
 (Night mode)	ON/ OFF
 (Frame shot)	Choose frame/ No frame
 (Auto timer)	None /3 sec./5 sec./10 sec.
 (Effect)	None /Black & White/Sepia/Negative
 (File size restriction)	No restriction /100KB/9KB

Still Image Display (After taking a multishot) → P113

Submenu Item	Setting Items
Slide show settings	
View as	Normal screen /Full screen
Time interval (secs)	1 ~ 9 sec (s) (1)
Sort by	Name/ Date /Type
View by	Simple list /Detailed list/Grid

Moving Image Display → P116

Submenu Item	Setting Items
 (Upside down)	Upside down
 (Quality)	Super fine /Fine/Normal
 (Zoom)	x1 ~ x10 (x1)
 (Brightness)	-2 ~ 0 ~ +2 (0)
 (White balance)	Auto /Daylight/ Cloudy/Incandescent/Fluorescent
 (Night mode)	ON/ OFF
 (Effect)	None /Black & White/Negative/Sepia
 (Recording time)	30 secs/1 min/2 mins/5 mins/30 mins/ Mail attach
 (Type)	Sound+Video /Video only/Sound only

MessageR/F list screen →P126

Items / Function Name	Setting Items
Sort	Subject(asc.)/Subject(desc.)/Date(asc.)/ Date(desc.)
Filter	All /Unread/Read/Protected/Not protected/Pasted/Attached

Received mail list screen →P141

Items / Function Name	Setting Items
Sort	Subject(asc.)/Subject(desc.)/Address(asc.)/Address(desc.)/Date(asc.)/ Date(desc.)
Filter	All /Unread/Read/Protected/Not protected/Pasted/Attached/i-mode mail/SMS/SMS report

Sent mail list screen →P146

Items / Function Name	Setting Items
Sort	Subject(asc.)/Subject(desc.)/Address(asc.)/Address(desc.)/Date(asc.)/ Date(desc.)
Filter	All /Protected/Not protected/Attached/i-mode mail/SMS

Unsent mail list screen → P148

Submenu Item	Setting Items
Sort	Subject (asc.)/Subject (desc.)/Address (asc.)/Address (desc.)/Date (asc.)/ Date (desc.)
Filter	All /Attached/i-mode mail/SMS

Software list screen →P161

Submenu Item	Setting Items
Sort	Name (asc.) /Name (desc.)/Exec time (asc.)/Exec time (desc.)/ Create time (asc.)/Create time (desc.)/S/W size (asc.)/S/W size (desc.)/ Exec count (asc.)/Exec count (desc.)
Network setting	Yes /No/Check every start
i-appli To	Yes /No
Icon info setting	Yes /No
Autostart setting	Set/ Not set
Show desc setting	Show/ Don't show

Still image saving screen →P114/moving image saving screen →P117/Image folder list screen →P168/Image file list screen →P168/Image display screen →P170

Submenu Item		Setting Items
Sort by		Name/Date/Type
View by		Simple list/Detailed list/Grid
Slide show settings		
	Settings	
	View as	Normal screen/Full screen
	Time interval (secs)	1 sec ~ 9 secs (1 sec)

Image edit screen →P171

Submenu Item		Setting Items
Resizing		640x480/320x240/160x120/Wallpaper size/Phonebook size/Sub display size
Insert		
	Text	→ Text focus (P251)
	Frame	→ Frame (P250)
	Element	→ Stamp (P251)
Clipping		1280X960/640X480/320X240/160X120/Wallpaper size/Phonebook size User-defined size
Effect		Black & White/Sepia/Negative/Black & White negative/Color balance/Contrast/ Sharpness/Softness/Mosaic Blur

Moving image folder list screen →P174/i-motion file list screen →P174/Moving image playback screen →P175

Submenu Item	Setting Items
Sort by	Name /Date/Type
View by	Simple list/ Detailed list /Grid
Player settings	
Visual effect	Spectrum analy /Dancing notes
Player skin (Color)	Pink /Blue/Violet
Volume	OFF~Level 7 (Level3)

Melody folder list screen →P177/Melody file list screen →P177/Melody playback screen →P177

Submenu Item	Setting Items
Sort by	Name /Date/Type
View by	Simple list/ Detailed list /Grid
Set repeat	None /Current file/All files/Shuffle
Player setting	
Visual effect	Spectrum analy /Dancing notes
Player skin	Pink /Blue/Violet
Volume	OFF~Level 7 (Level3)

Pre-installed data

In Stand-by mode

■ Main display



Ceramic.jpg



Green tea.jpg




Sakura.jpg



Vivid blue.jpg



Vivid red.jpg

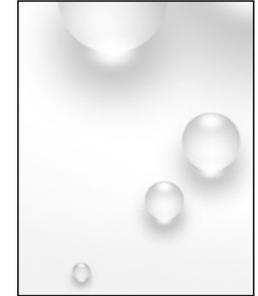

Waterdrop.jpg

■ Sub-display



Sub_ceramic.jpg



Sub_green tea.jpg




Sub_sakura.jpg



Sub_vivid blue.jpg



Sub_vivid red.jpg

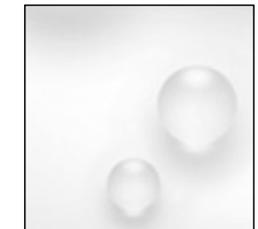


Sub_waterdrop.jpg

The screen for receiving/making a call

■ Main display



Ceramic_in_calling.gif

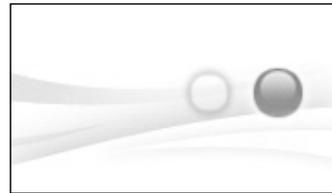

Ceramic_out_calling.gif



Green_in_calling.gif



Green_out_calling.gif



Incoming_call.gif



Outgoing_call.gif



Sakura_in_calling.gif



Sakura_out_calling.gif



Waterdrop_in_calling.gif



Waterdrop_out_calling.gif

■ Sub display




Sub_incoming.gif



Sub_outgoing.gif

Frame

- The frame including of multiple file sizes can be different to view depending on file size.
- The frames enclosed in the lines below can be selected by “Frame Shot” in “Using the Submenus of the Still Image Finder Stand-by Screen” (P112).
- The displayed frame differs depending on the size of the image to be edited.

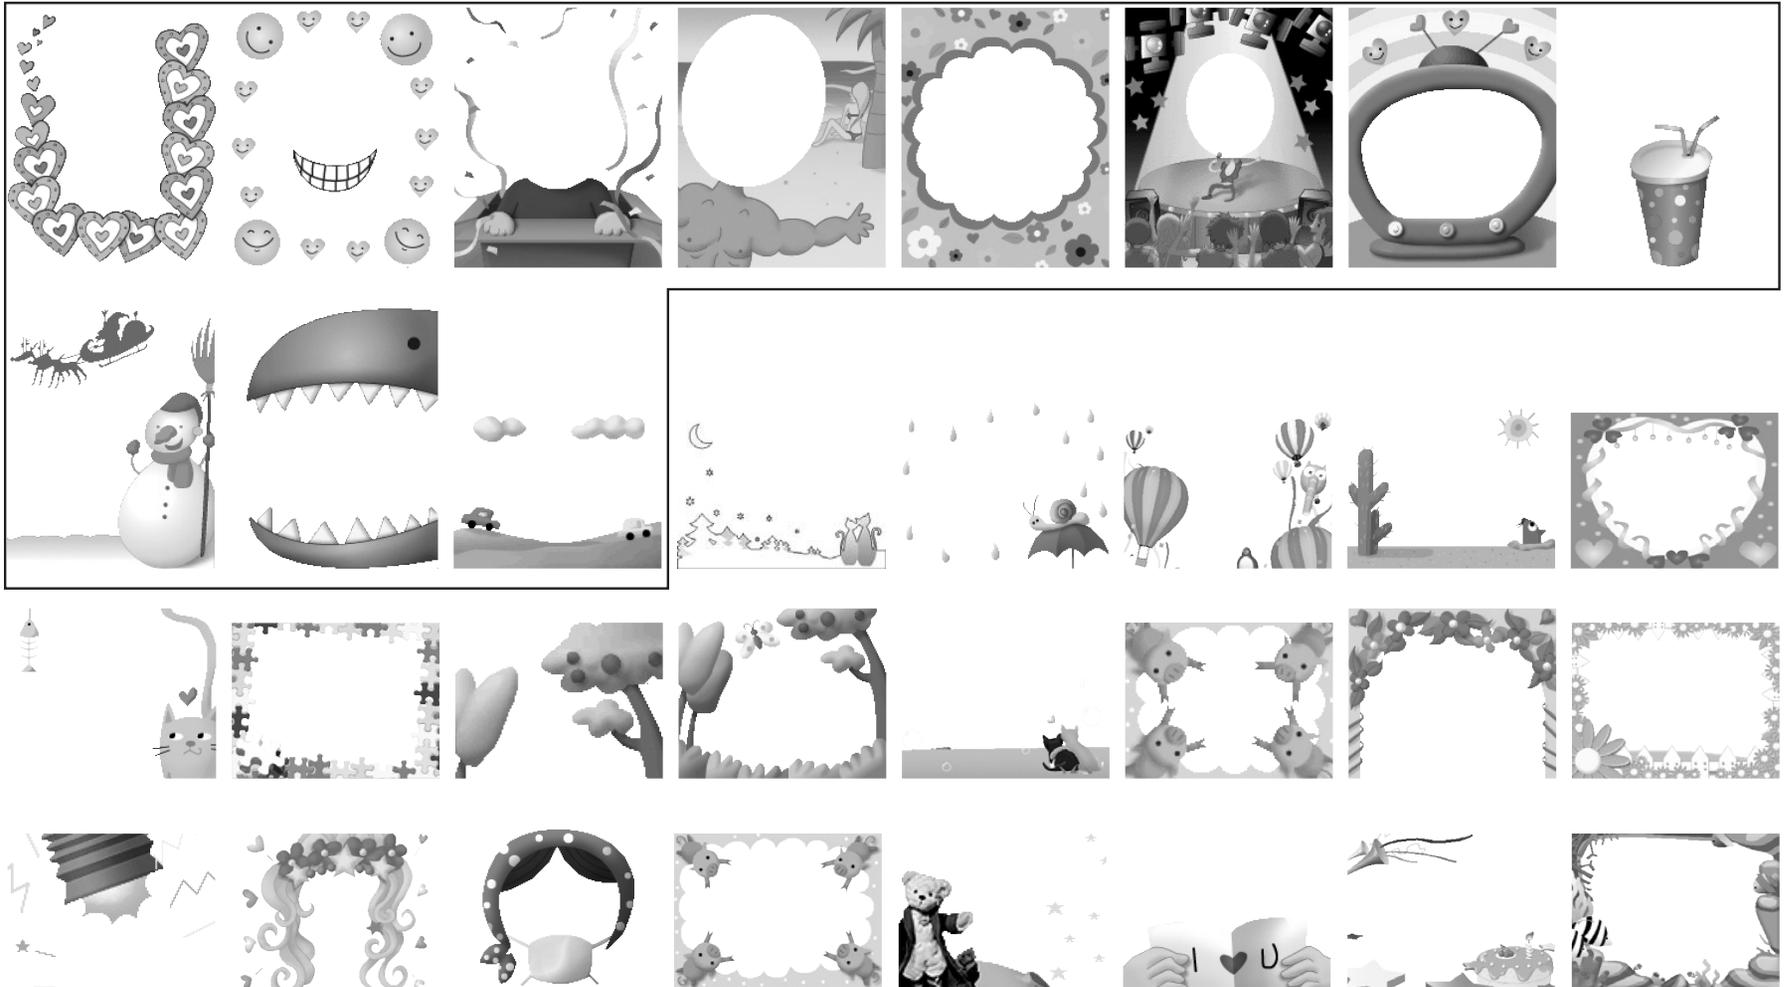


Element

- Appearances may differ depending on file size.



Text focus

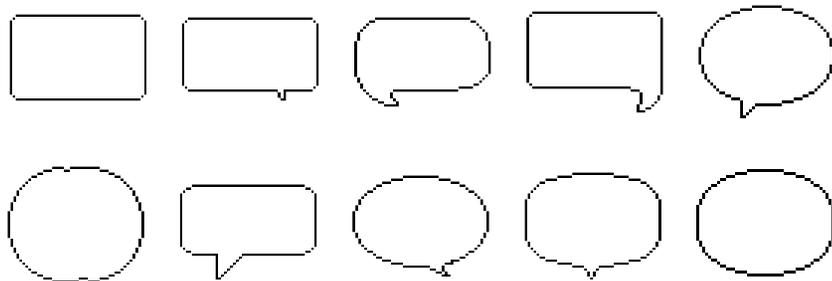

i-motion



DiMAGIC eco-motion.3gp

Information

- i-motions on the left are 3D-sound-supported i-motions, but as this FOMA phone does not support 3D-sound, they are not played with 3D-sound.

List of melody

Melody title	Melody title
Air on The G String.mid	If I Could.mid
Alarm01 ~ Alarm03.mid	Jasmine.mid
An der schonen blauen donau.mid	Jingle Bell.mid
Beautiful Life.mid	Menueti.mid
Blues Mania.mid	Message01 ~ Message12.mid
Brandenburg Concertos.mid	Moonlight.mid
Cave No.31.mid	Musette.mid
Czardas.mid	Play Dominoes.mid
Dark Valley.mid	Ring01 ~ Ring05.mid
Driving Bayside.mid	Secret Of Nature.mid
Energetic Today.mid	Swan Lake.mid
Funny Funky.mid	Touch Of Light.mid
Green Park.mid	Wedding Martch.mid
Happy Birthday to you.mid	Welcome My Friend.mid
Hunter G.mid	Winter.mid

- The copyright of each melody belongs to LG electronic Japan, Inc.

Symbol/Special Character List

■ Full-pitch symbol

Full symbol (1/8)
\ . , . . . : ; ? ! " ° ^ ~ ^ - _ \ \ ^ > > # 全々 〆 〇 --- ^ ~ " " " () [] { } <

Full symbol (2/8)
) 《》 「」 『』 【】 + - ± × ÷ = ≠ ◇ ≤ ≥ ∞ ∴ ♂ ♀ ° ' " °C ¥ \$ φ £ % # & * @ § ☆ ★ ○ ● ◎ ◆ ◇ ■ □ ▲ ▼

Full symbol (3/8)
▼ ※ 〒 → ← ↑ ↓ ≡ ≡ ≡ ≡ ≡ ≡ ≡ ≡ ≡ ≡ ≡ ≡ ⇔ ∇ ∃ ∠ ⊥ ^ ∂ ∇ ≡ ≡ ≡ ≡ ≡ √ ∞ ∞ ∴ ∴ ∴ ∴ ∴ # b ♪ † ‡ ¶ ○ わ め ぎ

Full symbol (4/8)
ワ 卍 ヲ ヱ ヲ カ ケ A B Γ Δ E Z H Θ I K Λ M N E O Π P Σ T T Φ X Ψ Ω α β γ δ ε ζ η θ ι κ λ μ ν ξ ο π ρ σ τ υ

Full symbol (5/8)
φ χ φ ω A B B Γ D E Ё Ж З И Й К Л М Н О П Р С Т У Ф Х Ц Ч Ш Щ Ъ Ы Ь Э Ю Я а б в г д е ё ж з и й к л

Full symbol (6/8)
м н о п р с т у ф х ц ч ш щ ъ ы ь э ю я — ㄱ ㄴ ㄷ ㅈ ㅊ ㅌ ㅍ ㅑ ㅓ ㅕ ㅗ ㅛ ㅜ ㅠ ㅡ ㅚ ㅜ ㅠ ㅡ ㅚ ㅜ ㅠ

Full symbol (7/8)
ㄴ ㄷ ㄹ ㄺ ㄻ ㄼ ㄽ ㄾ ㄿ ㅀ ㅁ ㅂ ㅃ ㅄ ㅅ ㅆ ㅈ ㅉ ㅊ ㅋ ㆁ ㆂ ㆃ ㆄ ㆅ ㆆ ㆇ ㆈ ㆉ ㆊ ㆋ ㆌ ㆍ ㆎ ㆏ ㆐ ㆑ ㆒ ㆓ ㆔ ㆕ ㆖ ㆗ ㆘ ㆙ ㆚ ㆛ ㆜ ㆝ ㆞ ㆟ ㆠ ㆡ ㆢ ㆣ ㆤ ㆥ ㆦ ㆧ ㆨ ㆩ ㆪ ㆫ ㆬ ㆭ ㆮ ㆯ ㆰ ㆱ ㆲ ㆳ ㆴ ㆵ ㆶ ㆷ ㆸ ㆹ ㆺ ㆻ ㆼ ㆽ ㆾ ㆿ ㆿ ㆿ ㆿ ㆿ ㆿ

Full symbol (8/8)
k m m g k g o c c m 平 威 No.K.K. TEL ㊦ ㊧ ㊨ ㊩ ㊪ (株) (有) (代) 明治 大正 昭和 ≡ ≡ ≡ § § Σ √ ⊥ ⊥ L Δ ∴ ∴ ∴ ∴ ∴ ∴ ∴ ∴

Special Characters

Information

- Special characters may not be correctly displayed if they are sent to mobile phones or personal computers that do not support i-mode mail.

■ Half-pitch symbol

Half symbol
! " # \$ % & ' ()
* + , - . / : ; < =
> ? @ [¥] ^ _ ` {
} ~ . 「 」 、 ・ - " °

Pictograph and Emoticon List

Pictograph List

■ Pictograph1

Pictograph1 (1/6)

Pictograph1 (2/6)

Pictograph1 (3/6)

Pictograph1 (4/6)

■ Pictograph2

Pictograph1 (5/6)

Pictograph1 (6/6)

Emoticon List

Category	Expressions	Category	Expressions	Category	Expressions
Happy	(^_^)	Angry	(-_-X)	Embarrass	(^^;)S"
	o(^o^o		(`□´)		f(^_^;
	(^▽^)		(¯^¯)		(*^^*)
	(#.^#)		(`m´#)		(#_#)S"
	~(^Д^~)		(ノ-o-)ノ 卍 ∴ ∴ ∴		^ (*¯-¯) >
Cry	(;_;	Sweat	(¯▽¯;)	Greeting	m(_ _)m
	(;_-----;)		(-_-;)		(^ ▽ ^) <※☆
	(ToT)		(^o^;)		\(^_^)(^_^)/
	(T^T)		(^^;)(;^^)		(^o^)/
	. . ° (>_<) ° . .		(;´ ㄩ `)		(;_;)/~~~~
Chill	(-_-)	Surprise	(° □° ;)	Other	φ (. .)
	(.-.)y-~		(*_*)		(^ 3 ^)-☆ Chu !
	\(¯ ㄩ ¯;)/		(° ▽ ° ;)		(?_?)
	∟ (-o -;) ∟		!(° Ⅲ°)		(¯-+¯)
	(∩_∩)		(¯□¯)		^ (° ◇、 °) ∩ ~


Information

- For the method of entering pictographs and emoticons, see “Switching Pictograph/Symbol/Emoticon” (P217).

Common Phrase List

Category	Phrase	Category	Phrase
Internet folder	@docomo.ne.jp	Greeting folder	いってらっしゃい
	.ne.jp		お誕生日おめでとう！
	.co.jp	Business folder	いつもお世話になっております
	.com		よろしくお願い致します
	.or.jp		申し訳ございません
	.go.jp		大変失礼致しました
	.ac.jp		至急TEL下さい
	http://		少々お待ち頂けますか
	www.		後ほどご連絡いたします
	.html		メールでご連絡いたします
Greeting folder	おはようございます	Business folder	FAX確認をお願いします
	おやすみなさい		電車遅延のため、遅れます
	こんにちは	Private folder	遊びに行こう
	こんばんは		飲みに行きませんか？
	お疲れ様です		遅れます
	お久しぶりです		変更します
	昨日は、どうもありがとうございました		中止です
	行ってきます		先に行きます

Appendix

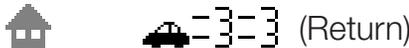Category	Phrase	Category	Phrase
Private folder	先に帰ります	Pictograph	 (?)
	時間です	idiom folder	 (Hello)
	何してるの？		 (Waiting a call)
	どこにいるの？		 (Happy)
Thank you!	 (Angry)		
Reply folder	bye-bye!	Original folder	 (Christmas)
	OKです		You can enter your own phrase from 1 to 0.
	NGです		
	ありがとう		
	ごめんなさい		
	もう少し待ってて		
	後で連絡入れます		
	今TELできない		
	了解！！		
	Pictograph idiom folder	 (Glad)	
 (OK)			
 (Lovely)			
 (Return)			

Kuten Code List

To enter a Kuten Code, first enter the 3-digit number for “Kuten digits 1 to 3” and enter the 1-digit number for “Kuten digit 4”

- Some characters in Kuten Code List may appear different from those on the display.

Kuten digit 1 to 3	Kuten digit 4										Kuten digit 1 to 3	Kuten digit 4										Kuten digit 1 to 3	Kuten digit 4																
	0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6
010	SP	、	°	、	、	、	、	、	、	、	033			A	B	C	D	E	F	G	056	ボ	ポ	マ	ミ	ム	メ	モ	ヤ	ユ									
011	!	”	°	、	、	、	、	、	、	、	034	H	I	J	K	L	M	N	O	P	Q	057	ユ	ヨ	ヨ	ラ	リ	ル	レ	ロ	ワ								
012	々	々	々	”	全	々	々	々	々	々	035	R	S	T	U	V	W	X	Y	Z	058	キ	エ	ラ	ン	ヴ	カ	ケ											
013	-	/	\	~			‘	’	036					a	b	c	d	e	059																		
014	“	”	()	[]	[]	{	}	037	f	g	h	i	j	k	l	m	n	o	060		A	B	Γ	Δ	E	Z	H	Θ	I							
015	<	>	《	》	「	」	『	』	【	】	038	p	q	r	s	t	u	v	w	x	y	061	K	Λ	M	N	Ξ	O	Π	P	Σ	T							
016	+	-	±	x	÷	=	≠	<	>	≧	039	z										062	Υ	Φ	X	Ψ	Ω												
017	≧	∞	∴	♂	♀	°	’	”	°C	¥	040		あ	あ	い	い	う	う	え	え	お	063				α	β	γ	δ	ε	ζ	η							
018	\$	¢	⊗	%	#	&	*	@	§	☆	041	お	か	が	き	ぎ	く	ぐ	け	げ	こ	064	θ	ι	κ	λ	μ	ν	ξ	ο	π	ρ							
019	★	○	●	◎	◇						042	ご	さ	ざ	し	じ	す	ず	せ	ぜ	そ	065	σ	τ	υ	φ	χ	ψ	ω										
020	◆	□	■	△	▲	▽	▼	※	〒		043	ぞ	た	だ	ち	ぢ	っ	つ	づ	て	で	066																	
021	→	←	↑	↓	=						044	と	ど	な	に	ぬ	ね	の	は	ば	ぱ	067																	
022						≡	≡	≡	≡		045	ひ	び	び	ふ	ぶ	ぶ	へ	べ	ぺ	ほ	068																	
023	∩	∩	∩	∩							046	ぼ	ぼ	ま	み	む	め	も	や	や	ゆ	069																	
024			∧	∨	∩	⇒	⇔	∇	∃		047	ゆ	よ	よ	ら	り	る	れ	ろ	わ	わ	070		A	B	B	Γ	Д	E	Ё	Ж	З							
025											048	ゐ	ゑ	を	ん							071	И	Й	К	Л	М	Н	О	П	Р	С							
026	∠	⊥	(∂	∇	≡	≡	≡	≡	√	049										072	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы								
027	∫	∞	∴	∫	∫						050	ア	ア	イ	イ	ウ	ウ	エ	エ	オ	073	Ь	Э	Ю	Я														
028			À	%	#	b	♪	†	‡	¶	051	オ	カ	ガ	キ	ギ	ク	グ	ケ	ゲ	コ	074											a						
029					○						052	ゴ	サ	ザ	シ	ジ	ス	ズ	セ	ゼ	ソ	075	б	в	г	д	е	ё	ж	з	и	й							
030											053	ゾ	タ	ダ	チ	ヂ	ツ	ヅ	ツ	テ	デ	076	к	л	м	н	о	п	р	с	т	у							
031						0	1	2	3		054	ト	ド	ナ	ニ	ヌ	ネ	ノ	ハ	バ	パ	077	ф	х	ц	ч	ш	щ	ъ	ы	ь	э							
032	4	5	6	7	8	9					055	ヒ	ビ	ピ	フ	ブ	プ	ヘ	ベ	ペ	ホ	078	ю	я															

Appendix

Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4									Kuten digit 1 to 3	Kuten digit 4												
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9	
079										174	曳	采	永	泳	洩	瑛	盈	穎	穎	英	204	竿	管	簡	緩	缶	翰	肝	艦	莞	觀		
080		一	丨	冂	冂	冂	冂	冂	冂	175	衛	詠	銳	液	疫	益	馱	悅	謁	越	205	諫	貫	還	鑑	間	閑	閑	陷	韓	館		
081	上	十	丨	冂	冂	冂	冂	冂	冂	176	閱	榎	厭	円	園	堰	奄	宴	延	怨	206	館	丸	含	岸	巖	玩	癌	岩	翫			
082	十	十	十	十	十	十	十	十	十	177	掩	援	沿	演	炎	焰	煙	燕	猿	緣	207	賸	雁	頑	顏	願	企	伎	危	器			
083	十	十	十	十	十	十	十	十	十	178	艷	苑	菌	遠	鉛	鴛	塩	於	汚	甥	208	賸	奇	嬉	寄	岐	希	幾	忌	機			
084										179	凹	央	奧	往	応						209	旗	既	期	棋	棄							
130		①	②	③	④	⑤	⑥	⑦	⑧	⑨	180		押	旺	横	欧	毆	王	翁	襖	鶯	210		機	帰	毅	氣	汽	畿	祈	季	稀	
131	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	181	鷓	黄	岡	冲	荻	億	屋	憶	臆	桶	211	紀	徹	規	記	貴	起	軌	輝	飢	騎	
132	⑳	I	II	III	IV	V	VI	VII	VIII	IX	182	牡	乙	俺	卸	恩	温	穩	音	下	化	212	紀	鬼	龜	偽	儀	宜	戲	技	擬	欺	
133	X	ミ	キ	ケン	カ	グ	トン	ル	錦		183	仮	何	伽	価	佳	加	可	嘉	夏	嫁	213	鬼	犧	疑	祇	義	誼	議	掬	鞠		
134	ル	フ	加	ドル	セン	カ	グ	トン	ル	cm	184	家	寡	科	暇	果	架	歌	河	火	珂	214	吉	吃	喫	桔	橘	詰	砧	杵	黍	却	
135	km	mg	kg	cc	m ²						185	禍	禾	稼	箇	花	苛	茄	荷	華	菓	215	客	脚	虐	逆	丘	久	仇	休	及	吸	
136			職	”	”	No.	KK.	TEL	Ⓢ		186	蝦	課	嘩	貨	迦	過	霞	蚊	俄	峨	216	客	宮	弓	急	救	朽	求	汲	泣	灸	球
137	Ⓢ	Ⓣ	Ⓤ	Ⓥ	Ⓦ	Ⓧ	Ⓨ	Ⓩ	ⓐ		187	我	牙	画	臥	芽	蛾	賀	雅	餓	駕	217	究	窮	笈	級	糾	給	旧	牛	去	居	
138	≡	≡	∩	∪	∑	√	∟	∠	∟	△	188	介	会	解	回	塊	壞	廻	快	怪	悔	218	巨	拒	扞	拳	渠	虛	許	距	鋸	漁	
139	∴	∩	∪								189	恢	懷	戒	拐	改						219	禦	魚	亨	享	京						
160		亜	唾	娃	阿	哀	愛	挨	始	逢	190		魁	晦	械	海	灰	界	皆	繪	芥	220		供	俠	僑	兇	競	共	凶	協	匡	
161	葵	茜	穉	惡	握	渥	旭	葦	蓼	綫	191	蟹	開	階	貝	凱	劾	外	咳	害	崖	221	卿	叫	喬	境	峽	強	狹	怯	恐	恭	
162	梓	庄	幹	扱	宛	姐	虻	飴	絢	綾	192	慨	概	涯	碍	蓋	街	該	鎧	骸	湮	222	挾	教	鄉	鏡	況	狹	矯	胸	脅	興	
163	鮎	或	栗	裕	安	庵	按	暗	案	闇	193	馨	蛙	垣	柿	蚯	鈎	劃	嚇	各	廓	223	蓄	鄉	鏡	響	饗	驚	仰	凝	堯	曉	
164	鞍	杏	以	伊	位	依	偉	困	夷	委	194	拈	攪	格	核	殼	獲	確	穫	覺	角	224	業	局	曲	極	玉	桐	料	僅	勤	均	
165	威	尉	惟	意	慰	易	椅	為	畏	異	195	赫	較	郭	閣	隔	革	學	岳	樂	額	225	巾	錦	斤	欣	欽	琴	禁	禽	筋	緊	
166	威	移	維	緯	胃	衣	謂	為	遺	医	196	顛	掛	笠	桴	樞	梶	外	咳	害	崖	226	巾	芹	菌	襟	謹	近	金	吟	銀	九	
167	井	亥	域	育	郁	磯	一	壹	溢	逸	197	恰	括	活	渴	滑	葛	藕	轄	且	釜	227	俱	駒	句	區	狗	叢	苦	偶	寓		
168	稻	茨	芋	鱒	允	印	咽	員	因	姻	198	叶	花	樺	鞞	株	兜	竈	蒲	釜		228	俱	駒	具	愚	虞	喰	空	寓	遇		
169	引	飲	淫	胤	蔭						199	嚙	鴨	栢	茅	萱						229	串	櫛	釧	屑	屈						
170		院	陰	隱	韻	吋	右	宇	烏	羽	200		粥	刈	苜	瓦	乾	侃	冠	寒	刊	230		掘	窟	沓	靴	轡	窪	熊	隈	彛	軍
171	迂	雨	卯	鵜	窺	丑	確	臼	渦	噓	201	勘	勸	卷	喚	堪	姦	完	官	寬	干	231	栗	繰	桑	袂	勲	君	薰	訓	群	啓	圭
172	唄	鬱	蔚	鰻	姥	厩	浦	瓜	閏	噲	202	幹	患	感	慣	憾	換	敢	柑	桓	棺	232	郡	卦	袈	袂	係	傾	刑	兄	啓	慧	搥
173	云	運	雲	在	餌	叡	營	嬰	影	映	203	款	歛	汗	漢	澗	灌	環	甘	監	看	233	珪	型	契	形	徑	惠	慶	慧	慧	慧	慧

Appendix