




OWNER'S MANUAL

LOADING . . .



HYUNDAI

 

 


Table of contents

General information7-10

Safety notes	7-8
Types of Playable Discs	9
Precautions of handling discs and player	9
NOTES ON COPYRIGHTS	10
Disposal of your old appliance	10

Name of each component11-13




Control Panel	11-12
Steering wheel remote control	13

Basic operation14-15

Start-up screen	14
Turning the unit on/ Turning the unit off	14
Inserting a disc/ Ejecting a disc	14
Adjusting the volume	14
Selecting a source on the control	15
Selecting a source on the screen	15
Rear view camera	15

Setup16-19

General operations of SETUP menu	16-19
Bluetooth	16
System	16-17
Traffic/ Navigation	18
Audio	18-19
Display	19

   

 



Table of contents

Getting started with navigation20-21

What is GPS?20
 About satellite signals20
 Acquiring satellite signals20
 Initial navigation screen20
 Indicators of the map screen20-21
 How to view a map screen20-21
 Changing the scale of a map21

Finding a destination by using navigation menu . .22-32

Navigation menu overview22
 General operations of destination menu22
 Address Search23
 Last destination24
 Address Book24
 POI (Point of Interest)24
 Near position25
 Near Destination26
 In City26
 Kia service26
 Phone Number26
 GPS Input27
 Parking28
 Using Map28
 Tour Planner29-30
 Store Destination31
 Store Position31
 Home 1/ Work2/ 3~1232

 

 


Table of contents

Using the map menu33-38

Map menu overview33
General operations of map menu33
POI category34
2D/ 3D34
Split screen/ Full screen35
Store Position35
Tour Planner35
Route Options36
Detour37
Info Nearby37
Info on Route38

Bluetooth wireless technology39-45

Understanding Bluetooth wireless technology39
Connecting your unit and bluetooth phone39-40
Disconnecting/Connecting again the bluetooth phone41
Deleting a connected phone41
Changing the passkey41
Making a call by entering phone number42
Switching the sound path during a call42
Switching the microphone on/off42
Answering calls42
Using your Phone Book43
Using your Calling list44
Making a call with speed dial numbers45

 


Table of contents

CD/MP3/WMA/USB/iPod operation 46-51

Playing an audio CD and MP3/ WMA/ USB/ iPod files 46-48
 Skip to the next track/file 46
 Skip to the previous track/file 46
 Return to the beginning of the current track/file 46
 Search 46
 Intro scan 47
 Repeat 47
 Shuffle 48
 Locating a folder/file using the list 49
 Searching music 49
 Setting audiobook play speed 50
 USB device requirement/ Compatible USB devices 50
 MP3/WMA file requirement 51
 iPod device requirement 51

Radio operation 52-54

Listening to the radio stations 52
 Storing and recalling stations 52
 AS (Auto search memory) 53
 To scan broadcast frequencies 53
 TA (Traffic announcement) 53
 NEWS 54
 REGION Auto/Off 54

Auxiliary device operation 55

Using an AUX source 55


 
 
 


Table of contents

Voice recognition system56-60	
Voice recognition56	
Giving voice commands56	
How to say numbers56	
Voice command examples57-58	
Help command58	
Voice commands59-60	
Troubleshooting61-62	
Bluetooth phone compatibility list63-68	
Specifications69	
Index70-71	

 

General information

Safety notes



The lightning flash with the arrowhead symbol, within an equilateral triangle is intended to alert the user about the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Always operate the vehicle in a safe manner. Do not become distracted by the vehicle while driving, and always be fully aware of all driving conditions. Do not change settings, or any functions. Pull over in a safe and legal manner before attempting such operations. To promote safety, certain functions are disabled unless the hand break is on.



Do not use for many hours at extremely low or high temperature. (-10°C to 60°C)



To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.



To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture.



The temperature of unit's outside can be extremely high, please use the unit after proper installation in your vehicle.



While driving, keep the sound volume at a proper level.




Do not drop it and avoid heavy impacts at anytime.

General information



The driver must not watch the monitor while driving. If the driver watches the monitor while driving, it may lead to carelessness and cause an accident.



This unit is for vehicles with a 12-volt battery and negative grounding. Before installing it in a recreational vehicle, lorry or bus, check the battery voltage. To avoid shorts in the electrical system, be sure to disconnect the  battery cable before beginning the installation.

CAUTION :



This product uses a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center. Performing controls, adjustments, or carrying out procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

CAUTION :

CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

CAUTION :

- Do not keep the navigation system running with the engine stopped. Doing so may discharge the vehicle battery. When you use the navigation system, always keep the engine running.
- When the driver wants to operate the navigation system, first park the vehicle in a safe location and set the parking brake. Operating the system while driving can distract the driver and may result in a serious accident.
- Do not disassemble or modify this system. If you do, it may result in accidents, fire or electrical shock.
- Some states/provinces may have laws limiting the use of video screens while driving. Use the system only where it is legal to do so.
- Don't use your phone when you are driving. You must stop at a safe place to use your phone.
- When driving your vehicle, be sure to keep the volume of the unit low enough to allow you to hear sounds coming from the outside.

aaa

FCC Information

The Federal Communications Commission Radio Frequency Interference Statement includes the following warning:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTES ON COPYRIGHTS

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.

This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When playing the pictures of these discs on a unit, picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

General information

Types of Playable Discs

This unit plays CD-R or CD-RW containing audio titles, MP3 or WMA files.

- Depending on the conditions of the recording equipment or the CD-R/RW disc itself, some CD-R/RW discs cannot be played on the unit.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregularly shaped CDs (e.g., heart-shaped or octagonal). It may result in malfunctions.



Do not expose the disc to direct sunlight or excessive heat.



This unit cannot play 8cm disc (use 12cm disc only).



- Clean the disc before playback. Wipe the disc from the center outward with a cleaning cloth.
- Never use solvents such as benzine or alcohol to clean the disc.



iPod is a trademark of Apple Inc., registered in the U.S. and other countries. "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.



"The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners."

Precautions of handling discs and player




- A defective or soiled disc inserted into the unit can cause sound to drop during playback.
- Handle the disc by holding its inner/outer edges.
- Do not touch the surface of the unlabeled side of the disc.




Do not stick paper or tape etc. on the surface.

Name of each component

Control Panel

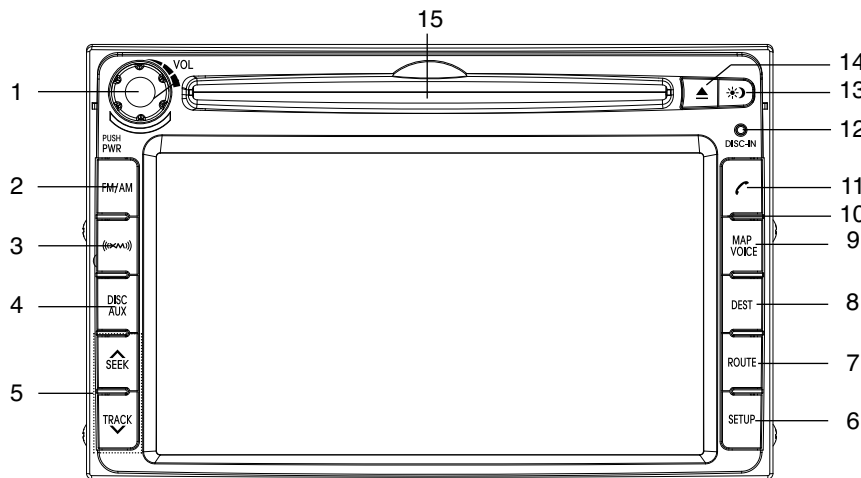

 1. • **Power** ^{PUSH}
PWR
- Power on
Press this button in power off status.
- Power off
Press this button in power on status.
• **Volume knob (VOL)**
- Rotate it leftward/rightward to adjust the volume.
2. **FM/AM**
Selects the FM1/FM2/AM band.
3. **XM**
Selects the XM band.
4. **DISC/AUX**
Selects a source: CD, USB, iPod, AUX
5. ^{SEEK /} **TRACK** ^{TRACK}
• Press this button.
- Automatic tuning: **RADIO**
- Track up/down: **USB CD iPod**
• Press and hold this button.
- Search (FF/REW): **USB CD iPod**



Name of each component

6. SETUP

Press to access system settings.

7. ROUTE

You can modify the route conditions or confirm the route information from the vehicle location to the destination.

9. DEST

Press to enter a destination menu. Various methods for entering a destination are available.

10. MAP VOICE

Press to display the current location map screen.

11. PHONE (☎)

Use to enable Bluetooth Hands-Free Phone.

12. DISC IN

When a disc is inserted, the indicator is illuminated.

 
 
 
13. Day/Night (☀/🌙)

 
Press to switch between the day screen (bright) and the night screen (dark).

14. ▲

Press to eject a disc from the unit.

15. Disc slot





Name of each component

Steering wheel remote control



1. Volume (Λ / ∇)

Increases or decreases the volume level.

2. MODE

Selects a source.

FM → AM → CD → USB → iPod
→ AUX → FM...

3. Λ / ∇

• Press this button.

 
- Automatic tuning: **RADIO**

- Track up/down: **USB CD iPod**

• Press and hold this button.

- Manual tuning: **RADIO**

- Search (FF/REW): **USB CD iPod**



Basic operation

Start-up screen

1. The navigation system starts when the ignition switch is placed in the ACC or ON position.



2. When the start-up screen is displayed, touch [Language] to set the language used in the system.



3. Touch the preferred language.




4. When the start-up screen is displayed, read the caution carefully and then touch the [Agree].



* Note

The start-up screen is displayed only once on the screen after the ignition switch is placed in the ACC or ON position.


Turning the unit on

Press  on the control panel in power off status.

* Note

When you insert the disc in the disc slot, the unit is turned on automatically.

 
Turning the unit off

Press  on the control panel in power on status.

Inserting a disc

Insert a disc in the disc slot and playback starts automatically.

Ejecting a disc

Press  on the control panel. The disc is ejected from the loading slot.

* Note

If the ejected disc is not removed in approximately 10 seconds, the disc is automatically inserted again into the loading slot.

Adjusting the volume

Rotate the volume knob (VOL) on the control panel.

* Note

When you turn the unit off, the current volume level is automatically memorized. Whenever you turn the unit back on, it operates at the

Basic operation

Selecting a source on the control

Press DISC/AUX repeatedly to select a source.

The mode switches as follows.

CD → USB → iPod → AUX → CD...

* Note

If a source is not connected to the unit, the source is not recognized.

Selecting a source on the screen

You can select the source on the screen to make it operate according to your particular needs.

1. Touch the source icon in the left upward position when playing a source.



2. Touch the desired source.



* Note

If a source is not connected to the unit, the the source is not recognized.

Rear view camera

When using the unit with a rear view camera, automatic switching to video from a rear view camera is possible when the gearshift is moved to **REVERSE (R)** position.

Rear view mode also allows you to check what is behind you while driving.



When the unit is booted completely, the guide line is displayed on the screen.

* Note

- Use input only for reverse or mirror image rear view camera. Other use may result in injury or damage.
- The screen image may appear reversed.
- The rear view camera function is to use this product as an aid to keep an eye on trailers, or backing into a tight parking spot. Do not use this function for entertainment purposes.
- The object in rear view may appear closer or more distant than in reality.
- Please note that the edges of the rear view camera images may differ slightly according to whether full screen images are displayed when backing, and whether the images are used for checking the rear when the vehicle is moving forward.
- after booting

Setup

General operations of SETUP menu

The navigation system can be customized to make it easier for you to use: Main, Navigation, My Places, System Info, Voice Setup, Display

1. Turn the unit on.
2. Press SETUP on the control panel.



3. Touch the desired option.
4. Touch the desired settings then touch [Done] to confirm your selection.

* Note

Touch to return to the previous screen. Press MAP VOICE to return to the current location map screen.

Main

There are three kinds of screen menus.



Keyboard

This allows you to view the paired Bluetooth device list.

Language

This allows you to search for Bluetooth devices. (Page 39)

Factory Defaults

This allows you to use when you connect your unit and bluetooth phone by using your bluetooth phone settings. (Page 40)


Navigation

There are five kinds of screen menus.



My Places

This allows you to change the language used in the system.

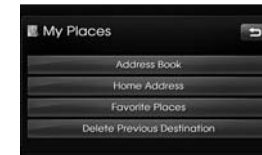

Touch the language button you want. Use or to scroll up or down if necessary.

Setup

System Info

This allows you to set the time format and the summer time.



- Time format: Change the time format between the "12h" and "24h".
- Summer time: Set the summer time between the "On" and "Off".

Display

This is a demonstration function. After a route is set, a simulation of route guidance to a destination is automatically displayed.



- Navigation Demo
 - Off: Demo mode is set off.
 - 1x: Sets the demo drive only once.
 - Loop: Repeat demo drive
- Speed: Sets the speed of demo drive.

Voice Setup

This allows you to set the unit of distance displayed on your navigation system.



Change the unit between the "km" and "mils".


Getting started with navigation

What is GPS?

The Global Positioning System (GPS) is a satellite-based navigation system made up of a network of 24 satellites placed into orbit by the U.S. Department of Defense.

GPS was originally intended for military applications, but in the 1980s, the government made the system available for civilian use.

GPS works in any weather conditions, anywhere in the world, 24 hours a day. There are no subscription fees or setup charges to use GPS.

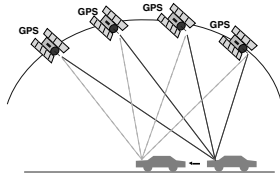

About satellite signals

Your unit must acquire satellite signals to operate. If you are indoors, near tall buildings or trees, or in a parking garage, the unit cannot acquire satellites.

Acquiring satellite signals

Before the unit can find your current location and navigate a route, you must do the following:

1. Go outside to an area free from tall obstructions.
2. Turn on the unit.

Acquiring satellite signals can take a few minutes.

Initial navigation screen

After the ignition switch is placed in the ACC or ON position, when you enter a navigation mode for the first time, the caution screen is displayed on the screen. Read the caution carefully and then touch the [Agree].






 
Indicators of the map screen

How to view a map screen

 



The navigation system displays various information on the screen.




-  : Indicates the direction of the map. Touch to switch the orientation of the map.
-  : Indicates the current vehicle location and the direction of travel.
-  : Touch [Menu] to access the map menu.



Getting started with navigation

 -  :
Indicates the scale of the map.
-  :
Indicates the arriving time, distance and remaining time to the destination.
-  :
Appears on the upper right corner of the screen when a route is set. Indicates the distance to the next guide point and the turning direction at that guide point.
-  :
Indicates the speed limit on the road that you're driving now.




Changing the scale of a map




1. Touch  on the map screen.

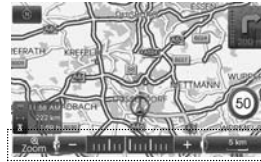


 2. Touch [+] to view the map in detail. Touch [-] to view the map a wider area.




50 m ↔ 100 m ↔ 200 m ↔ 300 m ↔
 500 m ↔ 750 m ↔ 1 km ↔ 2 km ↔
 5 km ↔ 10 km ↔ 20 km ↔ 50 km ↔
 100 km ↔ 200 km ↔ 500 km

 3. Touch  to view automatically the map in detail. The  indicator is displayed on the map screen. To cancel it, touch .



Finding a destination by using navigation menu

Navigation menu overview

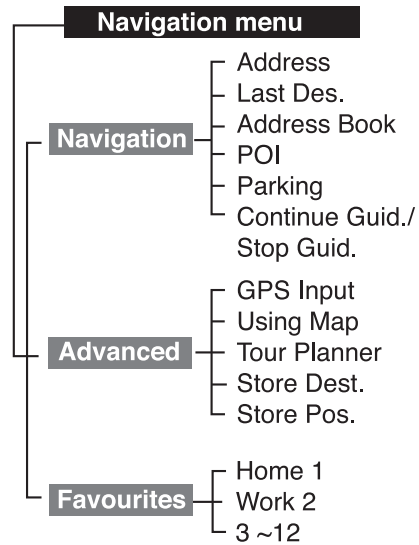

General operations of destination menu

1. Turn the unit on.
2. Press NAV on the control. The navigation menu appears on the screen.



3. Touch [Navigation], [Advanced] or [Favourites] to select the desired option.



[Advanced] menu



[Favourites] menu

4. Touch the preferred setting method.
 - Address: Finds a destination by setting an address. (Page 23)
 - Last Dest.: Sets a destination to a location that you have lastly set. (Page 24)
 - Address Book: Sets a destination to a location stored in the address book. (Page 24)
 - POI: Searches for a destination from various categories of businesses or locations. (Page 24-26)
 - Parking: Sets a parking as your destination. (Page 28)
 - Continue/Stop Guidance: Sets the guidance to On/Off. (Page 28)
 - GPS Input: Sets a latitude and a longitude as your destination. (Page 27)
 - Using Map: Searches for a destination by scrolling the map. (Page 28)
 - Tour Planner: Adds new destination or waypoint. (Page 29-30)
 - Store Dest.: Stores your destination in the address book. (Page 31)
 - Store Pos.: Stores your position in the address book. (Page 31)
 - Home 1/ Work2/ 3~12: You can set a home location, work location or etc you want for the place you return to most often. (Page 32)

Finding a destination by using navigation menu

Address Search

You can find the destination by searching the address.

1. Press [NAV] > Touch [Address].


2. Set the preferred country.
If the country has already been set, follow the step 3.



3. Set the preferred city name and then touch [OK].



4. Touch the city in the list.

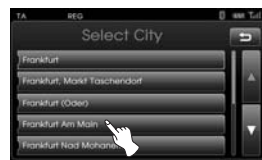

5. Set the part characters of street name and then touch [OK].



6. Touch the street in the list.



7. Touch the house number and then touch [OK].



8. Set the route options and then touch [OK].



Refer to the "Route Options" on the page 36.

9. Touch [Start].



- If you want to store your destination in the address book, touch [Store]. And input the name of your destination then touch [Ok].
- If you want to view the map of your destination, touch [Show Map] then [Start].

10. Touch the preferred route, then touch [Start].



Drive in accordance with the screen and voice information.

Finding a destination by using navigation menu


Last destination

You can find the destination to a location that you have lastly set as the destination. Up to 50 last destinations are automatically stored. If the number of last destinations exceed 50, the oldest one is replaced by the new one.

1. Press [NAV] > Touch [Last Dest.].
2. Touch the preferred last destination from the list.



3. Touch the preferred route, then touch [Start].

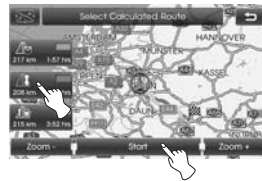

Drive in accordance with the screen and voice information.

Address Book

You can find the destination to a location stored in the Address Book. To utilize this function more effectively, destinations that you often travel to should be stored in advance.

First of all, store in the Address Book by searching the address. Refer to the [Address Search] on the page 23.

1. Press [NAV] > Touch [Address Book].
2. Touch the preferred destination from the list.



3. Touch the preferred route, then touch [Start].



Drive in accordance with the screen and voice information.

 
POI (Point of Interest)

You can find a destination from various categories of businesses or locations.

1. Press [NAV] > Touch [POI].
2. Touch one of the main category.



- Near position: Sets a POI located near the current vehicle position. (Page 25)
- Near destination: Sets a POI located near the selected destination. (Page 26)
- In City: Sets a POI located in the city. (Page 26)
- Name: Sets a POI by the name of the facility. (Page 26)
- Kia Service: Sets a facility of the Kia service. (Page 26)
- Phone Number: If you know the telephone number of the facility, use this to find the entering the number. (Page 26)



Finding a destination by using navigation menu

Near position

1. Press [NAV] > Touch [POI] > [Near position].

2. Touch one of the subcategory. (For example: Emergency)



3. Touch one of the subcategory in next level. (For example: Hospital)



4. Touch the preferred POI.



5. Touch [Ok] after confirming the location of the displayed POI.



If you want to call on the telephone, touch . It is available only when the bluetooth is active.

6. Touch [Start].



 
 
 
7. Touch the preferred route.



8. Touch [Start].



Drive in accordance with the screen and voice information.



Finding a destination by using navigation menu

Near Destination


1. Press [NAV] > Touch [POI] > [Near Destination].
2. Follow steps 2-8 on the page 25 (Near position).

In City

1. Press [NAV] > Touch [POI] > [In City].
2. Set the part characters of city name and then touch [Ok].



3. Touch the city in the list.

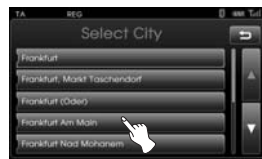

4. Follow steps 2-8 on the page 25 (Near position).

Name

1. Press [NAV] > Touch [POI] > [Name].
2. Input the part characters of the facility name and then touch [Ok].



3. Follow steps 4-8 on the page 25 (Near position).

Kia service

1. Press [NAV] > Touch [POI] > [Kia service].
2. Follow steps 4-8 on the page 25 (Near position).

Phone Number

1. Press [NAV] > Touch [POI] > [Phone Number].
2. Input the phone number and then touch [Ok].

 


3. Touch the preferred phone number from the list.
4. Touch [Ok] after confirming the location of the displayed POI.



If you want to call on the telephone, touch [☎]. It is available only when the bluetooth is active.

5. Follow steps 6-8 on the page 25 (Near position).



Finding a destination by using navigation menu


GPS Input

You can find the destination by inputting the coordinates of latitude and longitude.


1. Press [NAV] > Touch [Advanced] > [GPS input].
2. Touch [Latitude].




3. Input the coordinates of latitude by touching the degree. (For example: 49°)

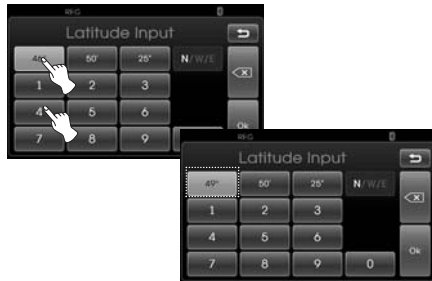

4. Input the coordinates of latitude by touching the minutes. (For example: 58')

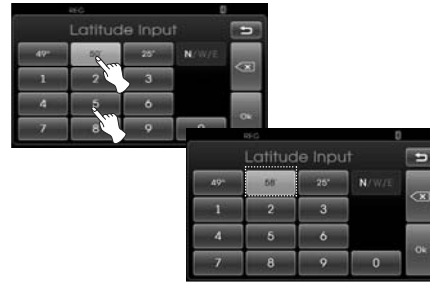

5. Input the coordinates of latitude by touching the seconds. (For example: 29'')

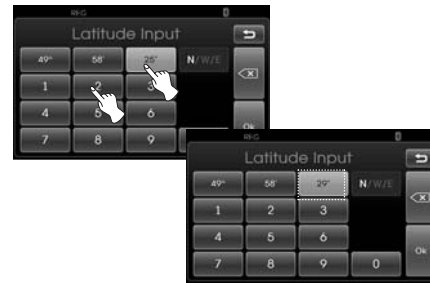

6. Touch [Ok].



7. Input the coordinates of longitude. Refer to the steps 2-6. (For example: 8°, 42', 31'')

 
 
 
8. When the settings are completed, touch [Start].

 


9. Follow steps 7-8 on the page 25 (Near position).

* Note

If you make a mistake while touching, touch **<X>** to erase one digit at a time.





Finding a destination by using navigation menu

Parking

You can find the destination by searching the parking facility.

1. Press [NAV] > Touch [Parking].
2. Touch a preferred facility.



3. Follow steps 4-8 on the page 25 (Near position).

Continue Guidance/ Stop Guidance

If you no longer need to travel to your destination or if you want to change your destination, press [NAV] > touch [Stop Guidance]. If you continue to travel to your destination again, touch [Continue Guidance].

Using Map

This allows you search for a destination by scrolling the map.

1. Press [NAV] > Touch [Advanced] > [Using Map].
2. Scroll the map, place the cross pointer over the preferred location.



 
 
 
3. Touch [Start].

 


4. Touch the preferred route, then touch [Start].



Drive in accordance with the screen and voice information.





Finding a destination by using navigation menu

Tour Planner

The tour planner allows you to travel through the searched routes by setting a destination or waypoint.

You can set a total of 4 destination or waypoint .

- New Tour: Sets a tour.
- Load Tour: Displays the tourist.
- Show Tour: Displays tourist set lastly.

Setting a tour


1. Press [NAV] > Touch [Advanced] > [Tour Planner].
2. Touch [New Tour].




3. Touch [Yes].



4. Set a destination by using the navigation menu.
(Refer to the page 22.)
The destination you set is displayed.

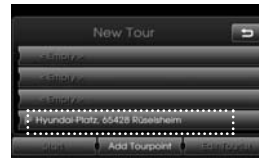

5. Touch [Add Tourpoint].

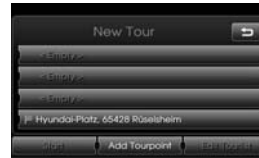

6. Set a waypoint by using the [Navigation], [Advanced], and [Favourites] menu.
(Refer to the page 22.)



If you need an additional waypoint, set it by touching [Add Tourpoint] again.

7. Touch [Start].
If you would like to save the searched routes, touch [Yes].
Otherwise, touch [No].

 


 
8. Input a name, then touch [Ok].



The searched routes are stored in the [Load Tour] automatically.

9. Drive in accordance with the screen and voice information.






Finding a destination by using navigation menu

Editing/deleting a destination or waypoint

You can modify or delete the destination or waypoint already set.

1. Press [NAV] > Touch [Advanced] > [Tour Planner] > [Load Tour].
2. Touch the desired tourist.

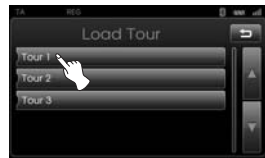

3. Touch [Edit Tourist].



4. Touch the desired options.



[Tourist sort]: Changes the order of the destination and waypoint already set. (Follow Steps 5-6)

[Tourpoint Delete]: Deletes the waypoint. (Follow Steps 7-9)

[Tourist Delete]: Deletes the tourist. (Follow Steps 10-11)

5. Touch [Tourist sort] and then touch [OK] after changing the order.



6. Follow steps 7-9 on the page 29 (Setting a tour).

7. Touch [Tourpoint Delete] to delete the waypoint.



8. Touch the desired waypoint.

 


 
9. Follow steps 7-9 on the page 29 (Setting a tour).

10. Touch [Tourist Delete] to delete the tourist you set.



11. Touch the desired tourist.





Finding a destination by using navigation menu

Store Destination

Destinations that you often visit can be stored in the Address Book. The stored destinations can be easily retrieved to set them as a destination or waypoint. This is available only when the destinations have been set already.

1. Press [NAV] > Touch [Advanced] > [Store Dest.]
2. Input the name of the destination then touch [Ok].




The destination is stored in the Address Book automatically. (Page 24)




Store Position


The current vehicle position can be stored in the Address Book.

1. Press [NAV] > Touch [Advanced] > [Store Dest.]
2. Input the name of the current position then touch [Ok].

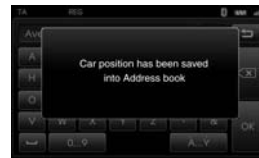

    The current vehicle position is stored in the Address Book automatically. (Page 24)






Finding a destination by using navigation menu

Home 1/ Work2/ 3~12

If your home location, work location and favourite locations are already stored in the Address Book, it can be easily retrieved to set the route to your home location, work location and favourite locations.

Storing your home

1. Press [NAV] > Touch [Address Book].
2. Touch  after confirming the preferred location.



3. Touch [Favourites].



4. If you want to set the location to your home, touch [Home 1].



5. Touch [Ok].



* Note

- The procedure to store your work location and favourite locations is same as the one for storing your home.
- New information placed in the same storage position overwrites the old data.

Finding your home

1. Press [NAV] > Touch [Favourites].
2. Touch [Home 1].



 
3. Touch the preferred route, then touch [Start].

 


Drive in accordance with the screen and voice information.

* Note


The procedure to find your work location and favourite locations is same as the one for finding your home.





Using the map menu

Map menu overview

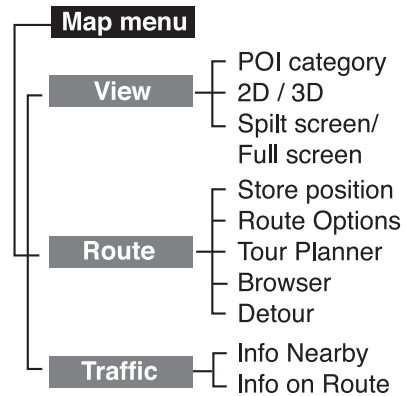

General operations of map menu


1. Turn the unit on.
2. Press MAP. The map screen appears.
3. Touch [Menu].



4. Touch [View], [Route] or [Traffic] to select the desired option.



[View] menu

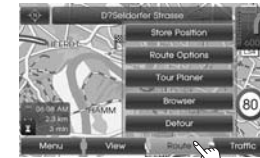



[Route] menu



[Traffic] menu

  5. Touch the preferred setting method.
For details, refer to the page 34-38.





Using the map menu

POI category

Some landmarks in the surrounding area can be displayed as icons on the screen.

This allows you to display or hide the landmark icons by type.

1. Press [MAP] > Touch [Menu] > [View] > [POI category].



2. Touch the desired icons.
The icon display settings toggle on and off each time you touch the icon. The indicator of the selected icon illuminates.



3. Touch [OK].



The activated landmark icons are displayed on the map.

2D/ 3D

 
The map view can be changed between 2D and 3D.

 
- 2D: Displays the map in a 2-dimensional environment similar to a road map.
- 3D: Displays the view from an elevated perspective. It is easy to recognize an image of the route because it provides a panoramic view over a long distance.

1. Press [MAP] > Touch [Menu] > [View] > [2D/3D].



2. Touch [2D/3D] again to switch to the 2D screen.





Using the map menu

Split screen/ Full screen

The map view can be changed between split screen and full screen.

1. Press [MAP] > Touch [Menu] > [View] > [Split screen].



Split screen

2. To switch to the full screen mode, touch [Menu] > [View] > [Full screen].



Full screen


Store Position

The current vehicle position can be stored in the Address Book.

1. Press [MAP] > Touch [Menu] > [Route] > [Store position].



2. Input the name of the current position then touch [Ok].

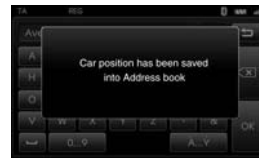

The current vehicle position is stored in the Address Book automatically. (Page 24)

 
Tour Planner

The tour planner allows you to travel through the searched routes by setting a destination or waypoint.

1. Press [MAP] > Touch [Menu] > [Route] > [Tour Planner].



2. Refer to "Tour Planner" on the pages 29-30.



Using the map menu

Route Options

You can modify the route conditions or confirm the route information. Set the appropriate route condition according to your purpose.

1. Press [MAP] > Touch [Menu] > [Route] > [Route Options].



2. Touch the preferred setting item.
 - Route: If you don't set the [Plan different routes] in the setup menu, set the route option to Fast, Short or Eco.
 - TMC:
 - Auto: When the TMC event is found on current route, the navigation system searches the detour route automatically without any announcement.
 - Off: Cancels the TMC function.

- On: When the TMC event is found on current route, the navigation system displays the pop-up screen of the event information.

- Toll Road
 - Use: Includes the use of toll roads.
 - Avoid: Enables the avoid of toll roads.

- Tunnel
 - Use: Includes the use of tunnel.
 - Avoid: Enables the avoid of tunnel.

 
- Main road
 - Use: Includes the use of main road.
 - Avoid: Enables the avoid of main road.

- Ferry
 - Use: Includes the use of ferries.
 - Avoid: Enables the avoid of ferries.

3. Press [Ok].
When the current location map screen or route setting screen is displayed, the system recalculates a route with the set conditions.

* Note

- Always stop the vehicle in a safe local before modifying the route conditions.
- Modifying the route conditions while driving may cause an accident.



Using the map menu

Detour

If you want to make a detour due to traffic conditions, you can use the detour function to calculate an alternative route from the vehicle location to the destination.

1. Press [MAP] > Touch [Menu] > [Route] > [Detour].
2. Touch [Short] or [Longer] to set a route which take a detour as the distance you select.




- Blue: Original route
- Red: Detour route

3. Touch [Start].



4. Touch the preferred route, then touch [Start].

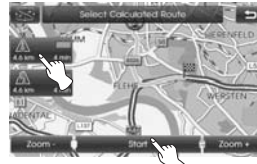

Drive in accordance with the screen and voice information.

* Note

If you need not to take a detour when you are navigating a route, touch [Menu] > [Route] > [Detour] > [Delete].

Info Nearby

The list of traffic information around the current vehicle position is displayed.

1. Press [MAP] > Touch [Menu] > [Traffic] > [Info Nearby].
2. Touch the desired option to check the detailed information.



 
3. Touch [Show Map] after checking it.



4. Touch [Zoom+] to view the map in detail. Touch [Zoom-] to view the map a wider area.



5. Touch [Back] to return to the previous screen. Press MAP to return to the current location map screen.



Using the map menu

Info on Route

The list of traffic information found on the recommended route from the current vehicle position to the destination is displayed.

A detour route to avoid the event is searched for from the current vehicle position to the destination. Also, you can check the detailed information about the displayed events.

1. Press [MAP] > Touch [Menu] > [Traffic] > [Info on Route].


2. Touch the desired option to check the detailed information.



3. If you need to take a detour, touch [Detour].



* Note

Touch [Show Map], if you want to view the position about the event found on the route. Touch  to return to the previous screen. Press MAP to return to the current location map screen.

5. Touch the preferred route.



6. Touch [Start].
Drive in accordance with the screen and voice information.

Bluetooth wireless technology

Understanding Bluetooth wireless technology


Bluetooth wireless technology establishes a wireless link between two devices, such as your phone and the unit. The first time you use two devices together you must connect them by establishing a relationship using a PIN code. After the initial connecting, the two devices can connect automatically each time you turn them on.


* Note

- There may be restrictions on using Bluetooth technology in some locations.
- Due to the variety of Bluetooth phones and their firmware version, your device may respond differently when performing over Bluetooth.
- As difference in functional operation by model is mainly resulted from feature of a hands-free phone, consult manufacturer of a phone if you have any question.

Connecting your unit and bluetooth phone

To connect using the unit settings (1)

1. Press  on the control panel.
2. Touch [Bluetooth].

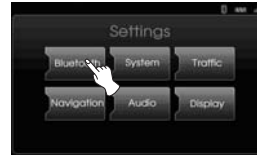


3. Touch [Search for Bluetooth Devices].



If you want to cancel, touch [Cancel].

4. Touch a bluetooth phone you desire from the "Bluetooth Devices" screen.

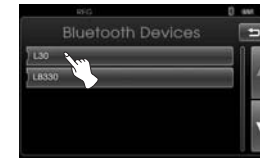


5. Input the passkey (Default: 0000) showed on the screen in your phone when the pop-up screen is displayed on the screen. When it is successfully connected, the Bluetooth main screen appears on the screen.




When it is not connected, the connection failure message appears on the screen.

Bluetooth wireless technology


To connect using the unit settings (2)

1. Press  on the control panel.
2. Press [Search for Bluetooth Devices].

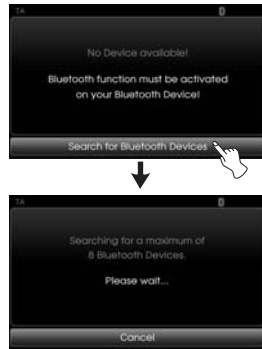


3. Follow steps 4-5 on the page 39.

* Note

If you touch  on the control panel again after connected via *Bluetooth* wireless technology, the Bluetooth main screen appears on the screen.

To connect using the phone settings

Your phone's Bluetooth feature may be set to off by default. To use the Bluetooth feature, Bluetooth must be turned on in your phone. Refer to your phone's user guide.

1. Enable the phone's Bluetooth component. This might be in a menu called Settings, Bluetooth, Connections, or Hands-free.
2. Press [] > Touch [Bluetooth] > [External Device Authorization].



If you want to cancel, touch [Cancel].

3. Initiate a search for Bluetooth devices. These settings might be located in a menu called Bluetooth, Connections, or Hands-free.
4. Select the your device from the list of phone.

5. Input the passkey (Default: 0000) showed on the screen in your phone when the pop-up screen is displayed on the screen.
When it is successfully connected, the [Bluetooth] screen appears on the screen.



* Note

- It works the same as the wired headset for mobile phone. The headset functionality is for telephone conversation. It is not for listening to music.
- Unlike the hands-free functionality, Headset connection will allow only two functions "answering calls" and "making a call from the latest call". Also the caller's number is not displayed when answering calls.
- If connecting through a Bluetooth phone, the hands-free connection or headset connection may not operate depending on the type of the phone.

Bluetooth wireless technology


Disconnecting/Connecting again the bluetooth phone

1. Touch [View Bluetooth Device list] on the "Bluetooth" screen.




2. Touch the connected phone. And then touch [Yes].



Your phone is disconnected and the  mark disappears.

3. Touch the disconnected phone again to connect your phone. And then touch [Yes].




The  mark appears again.

Deleting a connected phone

If you no longer need to use a connected phone, you can delete it.

1. Touch [View Bluetooth Device list] on the the "Bluetooth" screen.



2. Touch  on the right-hand side of the device name of the phone you want to delete.



3. Touch [Yes].





- The connected phone is deleted.
- When not deleting a connected phone, touch [No].

Changing the passkey

You can change the passkey.





1. Input the passkey using the keypad,  and .
2. Touch [OK].

Bluetooth wireless technology

Making a call by entering phone number

The most basic way to make a call is to simply dial the number.

Connect your unit and bluetooth phone before you make a call.


1. Press the  button on the control panel.
The Bluetooth main screen appears on the screen.
2. Input the phone number you want to call by touching the number buttons. And then touch .



3. Touch [Hang up] to finish the telephone conversations.



* Note

- If you make a mistake while dialing, touch **Clear** to erase one digit at a time. If you want to erase all digits at a time, touch and hold **Clear**.
- Touch  for long to make a call from a latest call.
- If you want to make an international telephone call, touch [0] for long, then input the phone number.
- The user's recent call history applies only to the hands-free connection. (Making a call from a recent call with the headset connection depends on the call history of the Bluetooth phone.)
- The headset connection allows only making a call from a recent call.

Switching the sound path during a call

You can hear sound through the speaker of unit and phone by touching [Transfer Call]/ [Transfer call back].

Switching the microphone on/off

You can switch the microphone on/off by touching [Microphone off]/ [Microphone on].

Answering calls

1. When you receive a call, your phone rings and the "Incoming Call" pop-up screen is displayed on the screen.
2. Touch [Accept] to answer the call.



If you want to reject a call, touch [Refuse].

* Note

- If the Call-ID service is available, the caller's phone number is displayed.
- If the phone number is in the phone book, phone book entry's name is displayed.
- If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.
- If "Rejecting" function is unusable, then the phone connected to the device does not support the rejecting calls function.

Bluetooth wireless technology


Using your Phone Book

You can use the phonebook entries stored on the memory of phone supporting PBAP (Phone Book Access Profile) profile.

After connecting your unit and bluetooth phone via *Bluetooth* wireless technology, the numbers in your phone's phone book is transferred automatically into phone book.


Calling a number in the phone book

After finding the entry in the phone book you want to call, you can select the number and make a call.

1. Press  on the control panel. And then touch [Phonebook].



2. Touch a phone book entry you want to call.

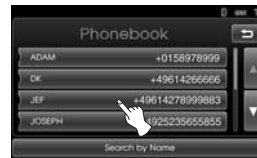

Touching  or  switches to the next or previous page in the list.

3. Touch [Hang up] to finish the telephone conversations.

Searching the phonebook entry by alphabet

If there are many entries in the phone book list, it can be useful to display them in the alphabetical order for easier searching.


1. Touch [Search by name] on the "Phonebook" screen.




2. Input the first letter of the entry in the phone book list you want to search by using the keypad, then touch [OK].



3. Touch a phone book entry you want to call.

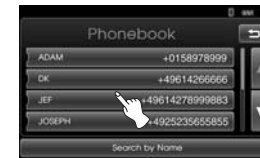

Touching  or  switches to the next or previous page in the list.

4. Touch [Hang up] to finish the telephone conversations.


Bluetooth wireless technology

Using your Calling list

You can use the calling list stored on the memory of phone supporting PBAP (Phone Book Access Profile) profile. After connecting your unit and bluetooth phone via *Bluetooth* wireless technology, the numbers in your phone's [Outgoing Calls], [Missed Calls], and [Incoming Calls] list is transferred automatically into calling list.

Calling a number in the calling list

After finding the entry you want to call in the [Outgoing Calls], [Missed Calls], or [Incoming Calls] list, you can select the number and make a call.

1. Press  on the control panel. And then touch [Calling lists].



2. Touch [Outgoing], [Missed], or [Incoming].



Outgoing Calls



Missed Calls




Incoming Calls

3. Touch the entry you want to call.

Updating the calling list

You can update the numbers in your phone's [Outgoing Calls], [Missed Calls], or [Incoming Calls] list into calling list.

 
1. Press  on the control panel. And then touch [Calling lists].



2. Touch [Outgoing], [Missed], or [Incoming], then touch [Update].

3. The updated calling lists are downloaded.





Bluetooth wireless technology

Making a call with speed dial numbers

You can use the phonebook entries stored on the memory of phone supporting PBAP (Phone Book Access Profile) profile.

You can easily store up 12 phone numbers and later recall them the touch of a speed dial number.

Registering phone numbers to the speed dial list

1. Press on the control panel. And then touch [Speed dial].




2. Touch and hold one of speed dial numbers (1-12). (For example: 1)




Touching or switches to the next or previous page in the list.

3. Touch one of categories you want to assign to speed dial number. (For example: Phone book)

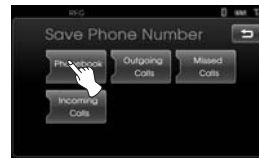

4. Touch one of phone numbers you want to assign to speed dial number.

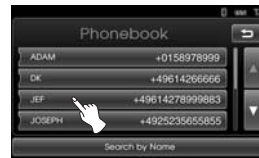

5. Input the name by using the keypad, then touch [OK].



The name (phone number) is stored in memory. The next time you touch the same name, the name (phone number) is recalled from memory.

Calling a number in the speed dial list

 
1. Press on the control panel. And then touch [Speed dial].
2. Touch one of speed dial numbers to make a call.



3. Touch [Hang up] to finish the telephone conversations.

* Note

Make sure that the speed dial functionality in the Bluetooth phone is enabled before using.



CD/MP3/WMA/USB/iPod operation

Playing an audio CD and MP3/ WMA/ USB/ iPod files

Disc

Insert a disc in the disc slot and playback will start automatically.



Audio CD



MP3/WMA CD

USB

You can play the files recorded in a USB memory device. Connect a USB device to the USB port and playback starts automatically.



iPod

You can play an iPod device on the unit by connecting the iPod to the USB port by using the appropriate cable. Connect an iPod device to the USB port and playback starts automatically. For details about iPod, refer to the iPod User Guide.



* Note

Use the car cable for exclusive use of iPod when connecting iPod to the terminals for iPod device for playback.

Skip to the next track/file **ALL**

Touch **▶▶** to select the next track/file.

Skip to the previous track/file

ALL

Touch **◀◀** within 1 second of playing time.

Return to the beginning of the current track/file **ALL**

Touch **◀◀** after 1 second of playing time.

Search **ALL**

Touch and hold the **◀◀** or **▶▶** buttons during playback and then release at the point you want.

CD/MP3/WMA/USB/iPod operation

Intro scan **Disc - Audio CD** **USB**

Disc - MP3/WMA

The first 10 seconds of each tracks/files are played.

1. Touch [Option] during playback.



Example: Audio CD

2. Touch [SCAN Start].



3. Touch [SCAN Stop] to cancel the intro scan.



Repeat **ALL**

The current selected tracks/files are played repeatedly.

1. Touch [Option] during playback.



Example: Audio CD

2. Touch [Repeat] repeatedly.



Disc - Audio CD

- [REPEAT Off] : Plays repeatedly all tracks within the disc.
- [REPEAT Track] : Plays repeatedly the current track.

USB **Disc - MP3/WMA**

- [REPEAT Off]: Plays repeatedly all files within the disc or USB.
- [REPEAT Track]: Plays repeatedly the current file.
- [REPEAT Folder]: Plays repeatedly all files within the current folder.

iPod

- REPEAT Off: Plays repeatedly all files within the iPod.
- REPEAT On: Plays repeatedly the current file.

CD/MP3/WMA/USB/iPod operation

Shuffle **ALL**

All of the tracks/files are played randomly.

1. Touch [Option] during playback.



2. Touch [SHUFFLE] repeatedly.



Disc - Audio CD

- [SHUFFLE All]: Plays randomly all files within the disc.
- [SHUFFLE Off]: Cancels SHUFFLE play.

USB Disc - MP3/WMA

- [SHUFFLE Off]: Cancels SHUFFLE play.
- [SHUFFLE Folder]: The unit plays randomly all files within current folder.
- [SHUFFLE All]: The unit plays randomly all files within the disc or USB.

iPod

- [SHUFFLE Off]: Cancels SHUFFLE play.
- [SHUFFLE All]: The unit plays randomly all files within the iPod.
- [SHUFFLE Album]: The unit plays randomly all files within current album.

CD/MP3/WMA/USB/iPod operation

Locating a folder/file using the list **Disc - Audio CD** **USB**

Disc - MP3/WMA

You can listen to music by displaying the track/folder/file list.

1. Touch the [List] button during playback.



Example: Audio CD

2. In case of Audio CD, touch the file you want.
In case of MP3/WMA file, touch the folder button you want. If there is no folder, touch the file you want.



Audio CD

MP3/WMA file

3. The selected track/file is played.

* Note

- In case of MP3/WMA file, touch the **[L]** button to move to upper folder.
- Touch the **[▲]** or **[▼]** buttons to select the list you want to view.
- If you want to move to the playlist screen, touch **CD**.


Searching music **iPod**

You can search iPod for playlist, artist names, album titles, Genre, songs, composer, audiobooks, podcasts. For details about iPod, refer to the iPod User Guide.

1. Touch [List] during playback.



2. Touch the desired item.

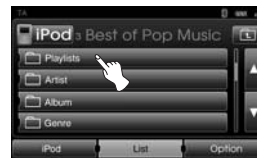

- [Playlist]: Plays the songs in the [Playlist].
- [Artists]: Plays the songs in the [Artists].
- [Albums]: Plays the songs in the [Albums].
- [Genres]: Plays the songs in the [Genres].
- [Songs]: Plays the songs in the [Songs].
- [Composers]: Plays the songs in the [Composers].
- [Audiobooks]: Plays the songs/chapters in the [Audiobooks].
- [Podcast]: Plays the songs/chapters in the [Podcast].

* Note

- If you want to move to upper folder, touch **[L]**.
- Touch the **[▲]** or **[▼]** buttons to select the list you want to view.
- If you want to move to the playlist screen, touch **iPod**.

CD/MP3/WMA/USB/iPod operation

Setting audiobook play speed **iPod**

Setting the play speed only affects audiobooks purchased from the iTunes store or audible.com.

For details about iPod, refer to the iPod User Guide.

1. Touch [Option] when you listen to songs/ chapters in the [Audiobook].



2. Touch [Audiobook] repeatedly.



- [Audiobook Normal]:
Plays the audiobooks with original speed.

- [Audiobook Fast]:
Plays the audiobooks with fast speed.
- [Audiobook Slow]:
Plays the audiobooks with slow speed.

* Note

If you want to move to the playlist screen, touch **iPod**.

USB device requirement

- This unit supports only USB Flash Drive and USB External HDD with FAT16 or FAT32 format.
- Do not extract the USB device during operation (play, etc.).
- Regular back up is recommended to prevent data loss.
- If you use a USB extension cable or USB HUB, the USB device may not be recognized.
- Some USB devices may not work with this unit.
- Digital camera and mobile phone are not supported.
- This unit is not supported when the total number of files is 10000 or more.

Compatible USB devices

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- MP3 player: Flash type MP3 player
The MP3 player requiring installation of a driver is not supported.
- USB Flash Drive: Devices that support USB2.0 or USB1.1 .

CD/MP3/WMA/USB/iPod operation

MP3/WMA file requirement

 
- Sampling Frequency / 16 - 48 kHz (MP3) 8 - 44.1 kHz (WMA)
- Bit rate / within 8 - 320 kbps (include VBR) (MP3) 5 -160 kbps (WMA)
- CD-R/CD-RW physical format should be "ISO 9660"
- If you record MP3/WMA files using software which cannot create a FILE SYSTEM, for example "Direct-CD" etc., it will not be possible to playback MP3/WMA files.

We recommend that you use "Easy-CD Creator" which creates an ISO9660 file system.

Customers should also note that permission is required in order to download MP3/WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.

iPod device requirement

- Compatibility with your iPod may vary depending on the type of your iPod.
- Depending on your iPod's software version, it may not be possible to control your iPod from this unit. We recommend installing the latest software version.
- If you have a problem with your iPod, please visit www.apple.com/support/ipod.
- This system can receive analog sound from the following iPod models.
 - iPod touch 1th generation
 - iPod mini (1st/2th generation)
 - iPod nano (1st/3th generation)
 - iPod classic (4st/5th/6th generation)
- If content on the iPod is not played back correctly, update your iPod software to the latest version. For details about updating the iPod, check the Apple web site <<http://www.apple.com>>.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



Radio operation

Listening to the radio stations

1. Press the "RADIO" button to select the radio.



2. Press the "RADIO" repeatedly to select a band. The mode switches as follows. FM → AM → FM...

*** Note**

To select the FM/AM by touching the screen Touch **FM** on the screen to select the AM and then touch **AM**.



3. **Auto tuning:**

Touch **◀/▶** on the screen. Or press **▲ / ▼** on the control panel.
- When a station is received, searching stops.

Manual tuning:

Rotate the Jog dial leftward/ rightward on the control panel.
- The frequencies move up and down step by step.

Storing and recalling stations

You can easily store up to 12 preset stations for later recall at the touch of a button.

1. Select the band (FM, AM) you want to store a station into.
2. Select the desired frequency.
3. Touch [Presets] on the screen.



4. Touch and hold one of the preset buttons.

The preset station information will be displayed. The selected preset station has been stored in memory.



 
If you move to the previous/next page, touch **◀/▶**.

5. Repeat steps 1 and 4 to preset other stations.

Next time, if you touch the preset buttons, the station is recalled from the memory.

*** Note**

When a station is preset on the preset station button number on which another station of the same band has already been preset, the previously preset station is automatically erased.



Radio operation

AS (Auto search memory)

This is only available for AM reception. This function lets you automatically store the strong broadcast frequencies.

1. Select the band to AM.
2. Touch [Option] on the screen.
3. Touch [Autostore] on the screen.



Local stations with the strong signals are searched and stored automatically in the list menu. And then the list menu appears on the screen.



4. Touch the broadcast frequency you want.

To scan broadcast frequencies

The first 10 seconds of each broadcast frequency are played.

1. Touch [Option] on the screen in AM/FM mode.



2. Touch [Scan Start] on the screen.
3. Touch [Scan Stop] to cancel it.

TA (Traffic announcement)

TA function allows the unit to switch to traffic announcement (TA) from the current source (Another FM station, CD, or other connected components).

1. Touch [Option] on the screen in AM/FM mode.
2. Touch [TA Off]/ [TA On] on the screen.



[TA On]: Traffic programs and announcements can be automatically received using TP/TA features.

[TA Off]: Traffic programs and announcements can not be received.

Radio operation

NEWS

This function allows the unit to switch to news from the current source (Another FM station, CD, or other connected components).

1. Touch [Option] on the screen in AM/FM mode.
2. Touch [NEWS Off]/ [NEWS On] on the screen.



[NEWS On]: News can be automatically received.

[NEWS Off]: News can not be received.

REGION Auto/Off

This is only available for FM reception.

1. Select the band to FM.
2. Touch [Option] on the screen.
3. Touch [REGION Auto]/ [REGION Off] on the screen.

 


[REGION Auto]:

The unit switches to another station, within the same network, broadcasting the same program when the receiving signals from the current station become weak.

[REGION Off]:

The unit switches to another station, within the same network when the receiving signals from the current station become weak. (This mode, the program may differ from the one currently received.)



Auxiliary device operation

Using an AUX source

It is possible to use auxiliary equipment with unit.

1. Press "MEDIA" until "AUX" screen appears.



AUX Audio

 
 
 


AUX Video

2. Connect an auxiliary device to the AUX connector, then activate the auxiliary function.

* Note

- Some auxiliary devices that don't have the video source may not output the video screen.
- In case of some iPod devices, Use the iPod cable for exclusive use of iPod for video playback when connecting iPod to the AUX connector.



Voice recognition system

Voice recognition


Voice recognition allows hands-free operation of the AV system (RADIO, CD, USB, iPod), navigation and other systems equipped on this vehicle, such as the phone.

* Note

To get the best recognition performance out of voice recognition, observe the following:




 
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.), which may prevent the system from recognizing the voice commands correctly.
- Wait until a beep sounds before speaking a command. Otherwise, the command will not be recognized properly.
- Speak in a natural voice without pausing between words.

Giving voice commands

1. Press , on the steering wheel remote control.
2. After the beep sounds, say "Help". All commands shall be listed which are presented in active fields.



* Note

- If the command is not recognized, the system announces, 1 st time, [Pardon] and 2nd time [Please, repeat].
- If you want to cancel the voice recognition, press , one more time or press the any button or touch screen say [Cancel].
- If you want to adjust the volume of the system feedback, press  or  on the steering wheel remote control or use the volume knob () on the control while the system is making an announcement.

How to say numbers

Voice recognition requires a certain way to say numbers in voice commands. Refer to the following examples. (General rule: Either "zero" or "oh" can be used for "0".)

Frequency

Say frequency number according to the following example.

"Frequency ninety five dot four"/ "Ninety five dot four mega-hertz"



Phone number

Say phone number according to the following example.

0-1-0-2-0-0-5-2 (Single digit)




Voice recognition system


Voice command examples

To use the voice recognition function, saying one command is sometimes sufficient, but at other times it is necessary to say two or more commands. As examples, some additional basic operations by voice commands are described here.

Example 1: Changing FM Radio & Frequency

1. Press , on the steering wheel remote control.
2. After the beep sounds and say "FM".
3. When the "FM" command recognized, the main screen will be changed to the FM main screen.




4. Press , on the steering wheel remote control.


5. After the beep sounds and say "Frequency one-hundred two" or "one-hundred two mega hertz".
6. When the spoken frequency is recognized, the FM frequency is changed to the 102 MHz.



Example 2: Changing playlist of USB (CD)


1. Press , on the steering wheel remote control.
2. After the beep sounds and say "LIST".
3. When the command recognized, the screen will be changed to the USB (CD) LIST screen.



4. Press , after the beep sounds, you can say one of the playlist like a "micky green oh".

5. When the playlist is recognized, it is played at once.




6. Press , on the steering wheel remote control.
5. After the beep sounds and say "Next track" or "Previous track".
6. When the command is recognized, the played list is changed to "Next track" or "Previous track".

Voice recognition system

Example 2: Dial number

To use this function, you need a mobile phone which is supported a Bluetooth. Connect your unit and bluetooth phone before using.

1. Press  on the steering wheel remote control.
2. After the beep sounds and say "Dial Number".
3. When the spoken command is recognized, the screen is changed to the bluetooth main screen, and then the system announces "Please say phone number".




4. Say the phone number like "01020052" (single digit).



5. When the spoken numbers are recognized, the system announces the recognized numbers and then a prompt "and then?".
6. If you want to make a call the recognized number, say "Call". If there is misrecognized number or you want to delete the number, say "Clear". If you want to finish it at any time, say "Cancel".

Help command

If you are controlling the system by voice commands for the first time or do not know the appropriate voice command, say the following command.

1. Press  on the steering wheel remote control.
2. After the beep sounds, say "Help". All commands shall be listed which are presented in active fields.



3. The voice feedback will announce "Possible commands are".
4. After the beep sounds, say "Other commands". All commands shall be listed which are presented in active fields.



5. The voice feedback will announce "Possible commands are".
6. After the beep sounds, say "AUX". The screen is changed to the AUX screen.



Voice recognition system

Voice commands

Category	Voice command	Condition
Application command	CD	All
	Radio	All
	USB	All
	AUX	All
	Phone (Handsfree)	All
	MEDIA	All
	Map	All
	Navigation	All
Global Audio Action Command	Volume up	All
	Volume down	All
Radio Action Command	News off	All
	News on	All
	Next station	AM/FM
	Previous station	AM/FM
	TA off	All
	TA on	All
	Preset 1~12 <Number>	All
Radio Local Command	AM	AM/FM
	FM	AM/FM
	Autostore	AM
	Presets	AM/FM
	List	AM/FM


Category	Voice command	Condition
Radio Local Command	Option	AM/FM
	Scan Start	AM/FM
	Scan Stop	AM/FM
	Region Auto	FM
	Region off	FM
CD/MP3 Action Command	Next track (Next song)	All
	Previous track (Previous song)	All
CD/MP3 Local Command	Directory up	MP3
	Repeat Track	CD/MP3
	Repeat Off	CD/MP3
	Repeat Folder	MP3
	Shuffle All	CD/MP3
	Shuffle Off	CD/MP3
	Shuffle Folder	MP3
	Scan Start	CD/MP3
	Scan Stop	CD/MP3
	List	CD/MP3
	Option	CD/MP3
	OK	CD/MP3
	Track info (ID3 tag, Title info)	CD/MP3

Voice recognition system

Voice commands

Category	Voice command	Condition
USB Action Command	Next track (Next song)	All Media
	Previous track (Previous song)	All Media
USB Local Command	Directory up	USB
	Repeat Track	USB
	Repeat Off	USB
	Repeat Folder	USB
	Shuffle All	USB
	Shuffle Off	USB
	Shuffle Folder	USB
	Album	USB
	Artist	USB
	Folder	USB
	Scan Start	USB
	Scan Stop	USB
	List	USB
	Option	USB
	OK	USB
Track info (ID3 tag, Title info)	USB	

Category	Voice command	Condition
iPod Action Command	Next track (Next song)	All Media
	Previous track (Previous song)	All Media
iPod Local Command	Directory up	iPod
	Repeat On	iPod
	Repeat Off	iPod
	Shuffle All	iPod
	Shuffle Off	iPod
	Shuffle Album	iPod
	Scan Start	iPod
	Scan Stop	iPod
	List	iPod
	Option	iPod
	OK	iPod
	Track info (ID3 tag, Title info)	iPod
	Audiobook Slow	iPod
	Audiobook Normal	iPod
	Audiobook Fast	iPod

 

Troubleshooting

Cannot identify the current location. (GPS not receiving)

GPS cannot be used indoors and must be connected to a power source with ACC in a vehicle in a location where the signal from the sky can be received easily.

When initially connecting the GPS, it usually takes about 10 minutes to be working normally, but the connection speed can differ depending on the weather condition, and surrounding obstacles.

If the GPS connection is unstable for a long period of time, try the following.

- Check if the product is connected to a power source.
- Check if the back of the GPS product is in a location where the sky can be seen well.
- If there are high buildings or if you are under a tree, move to a location where there aren't any obstacles.
- Check the GPS receiving condition from the GPS menu.

Cannot hear the voice guide.

Check that volume is set to Mute to very small volume in the setup menu. No guide sound comes out in the case

of straight sector or not in the guide time. In this case, an appropriate sound in the current position if pressing the NAVI button.

There is a difference between the driving road and the road on the map in the product.

Even though GPS is usually very accurate, there is a small margin for error. When the GPS receiver is installed, there can be an error of about 10m. But for newly built roads, the problem could come from the data update to the map.

Cannot see the map.

Perhaps you cannot see the map even when you have executed the navigation menu.

This happens when the data within the memory is damaged. Delete all the data in the memory and install the data again. If the issue persists after installation, contact the A/S center.

 
The path guide can be different from the actual path. (Path guide error)

- When the road is closely parallel.
- When the splitting road angle is very small.

- When there is an adjacent road when turning.
- When driving on a road that is narrowing fast.
- When driving through the mountain or where the road is too curvy.
- When the starting, passing and arriving locations are too close within 1km.
- When you have set the starting, passing or arriving location more than 1km away from the road.
- When driving through the tunnel.
- When driving through high buildings.

Map matching


As mentioned, the GPS systems used by this Mobile Navigation System are susceptible to certain errors. Their calculations may on occasion place you in a location the map where no road exists. In this situation, the processing system understands that vehicles travel only on roads, and is able to correct your position by adjusting it to a nearby road. This is called map matching.



With map matching.



 With no map matching.



Troubleshooting

Symptom	Cause	Correction
Power doesn't turn on. The unit doesn't operate.	Leads and connector are not properly connected.	Confirm once more that all connections are correct.
	The fuse is blown.	Rectify the problem that caused the fuse to blow, and then replace it. Be very sure to install the correct fuse with the same rate.
	Noise and other factors are causing the built-in microprocessor to operate incorrectly.	Turn the unit off and then on.
Playback is not possible.	The disc is dirty.	Clean disc.
	The loaded disc is of a type this unit cannot play.	Check what type the disc.
No sound is heard. The volume level will not rise.	Cables are not connected correctly.	Connect the cables correctly.
There's no sound.	The volume level is low.	Adjust the volume.
There's audio skipping.	This unit is not firmly secured.	Secure this unit firmly.
The unit does not operate correctly even when the appropriate remote control buttons are pressed.	Some operations are prohibited with certain discs.	Check using another disc.

Bluetooth phone compatibility list

- If even a phone as described in this list meets requirements of Bluetooth Hand-free Profile 1.0, it can operate. However, it is noted that we cannot assure for operation by function.
- As difference in functional operation by model is mainly resulted from feature of a hand-free phone, consult manufacturer of a phone if you have any question.

O: Support, X: No support

Manufacturer	Model	Set				Phone				Reject	Answer	Audio switch	Hang up	Dialing			Phone book	Remarks
		Search	Pairing	Connect	Disconnect	Search	Pairing	Connect	Disconnect					Dialing	Last	Memory		
LG	KG800	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	U890	O	O	O	O	O	O	O	O	X	O	O	O	O	O	O	O	Note3, Note5
LG	KE970	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	M4410	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	ME970	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	KE850	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	MG280	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	KE500	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note13
LG	KG290	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
LG	KU380	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	KU580 (3G)	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	KU970 (3G)	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	KU950	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
LG	KE600	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	KG338	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note13
LG	CU575 (3G)	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	SV240	O	O	O	O	O	O	O	O	X	O	O	O	O	O	O	O	Note3
LG	KF1000	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note3
LG	LP-3900	O	O	O	O	O	O	O	O	O	O	O	O	O	O	X	O	Note9
LG	LV2400	O	O	O	O	O	O	O	O	X	O	O	O	O	O	O	O	Note3

Bluetooth phone compatibility list

O: Support, X: No support

Manufacturer	Model	Set				Phone				Reject	Answer	Audio switch	Hang up	Dialing			Phone book	Remarks
		Search	Pairing	Connect	Disconnect	Search	Pairing	Connect	Disconnect					Dialing	Last	Memory		
Nokia	E62	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	E70	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	N73	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	N80	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	N92	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	E60	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	E61	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	3650	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	6103	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note8, Note4
Nokia	6131	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	6230	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	6230i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	6280	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note7, Note4
Nokia	6630	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note2, Note4
Nokia	6650	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note2, Note4
Nokia	6600	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note2, Note4
Nokia	6670	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note2, Note4
Nokia	6680	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note2, Note4
Nokia	6820a	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note2, Note4
Nokia	7370	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	7380	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	7610	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	8910i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Nokia	9500	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note2, Note4, Note9

Bluetooth phone compatibility list

O: Support, X: No support

Manufacturer	Model	Set				Phone				Reject	Answer	Audio switch	Hang up	Dialing			Phone book	Remarks
		Search	Pairing	Connect	Disconnect	Search	Pairing	Connect	Disconnect					Dialing	Last	Memory		
Samsung	T509	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O		
Samsung	Z540v	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O		
Samsung	D820	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note14	
Samsung	SCH-B380	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note14	
Samsung	SPH-V9000	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note14	
Samsung	SPH-V7450	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O		
Nokia	3230	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4	
Nokia	3250	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note2,Note4	
Nokia	6021	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note7,Note4	
Nokia	6681	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4	
Nokia	6820	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note2,Note4	
Nokia	8800	O	O	O	O	O	O	O	O	O	O	O	O	O	X	O	Note6,Note4	
Nokia	5300	O	O	O	O	O	O	O	O	O	O	O	O	O	X	O	Note6,Note4	
Nokia	5500	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4	
Nokia	N-gage	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4	
Nokia	E50	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4	

Bluetooth phone compatibility list


O: Support, X: No support

Manufacturer	Model	Set				Phone				Reject	Answer	Audio switch	Hang up	Dialing			Phone book	Remarks
		Search	Pairing	Connect	Disconnect	Search	Pairing	Connect	Disconnect					Dialing	Last	Memory		
Motorola	V500	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1
Motorola	V360	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1, Note2
Motorola	E680	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1
Motorola	E680i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1
Motorola	A780	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1
Motorola	V3X	O	O	O	O	O	O	O	O	O	O	O	O	O	O	X	O	Note1 , Note6
Motorola	U6	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1
Motorola	V360	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1, Note2
Motorola	V525	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1, Note2
Motorola	E550	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1
Motorola	V600	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1, Note2
Motorola	E1000	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1, Note2
Motorola	A1000	O	O	O	O	X	X	X	X	O	O	O	O	O	O	O	O	Note1, Note2, Note12
Motorola	RAZR V3i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note1
Sony Ericsson	Z608	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	T618	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	T628	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	K700c	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	P908	X	X	X	X	O	O	O	O	O	O	O	O	O	O	O	O	Note10

Bluetooth phone compatibility list

O: Support, X: No support

Manufacturer	Model	Set				Phone				Reject	Answer	Audio switch	Hang up	Dialing			Phone book	Remarks
		Search	Pairing	Connect	Disconnect	Search	Pairing	Connect	Disconnect					Dialing	Last	Memory		
Sony Ericsson	P990i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	T610	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	W710i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	K800i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	W850i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	T610	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	Z600	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	S700i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	K700i	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sony Ericsson	V800	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Siemens	SL75	O	O	O	O	O	O	X	X	O	O	O	O	O	O	O	O	Note11
Siemens	S65	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Siemens	SX1	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note4
Siemens	SK65	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Pantech	PG6200	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	Note13, Note8
Panasonic	X800	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
NEC	N750	X	X	O	O	O	O	O	X	O	O	O	O	O	O	O	X	Note9, Note10,Note12
NEC	N930	X	X	O	O	O	O	O	O	O	O	O	O	O	O	O	X	Note9, Note10,Note12
Sharp	GX15	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
Sharp	GX30	O	X	O	O	O	O	O	O	O	O	O	O	O	O	O	X	Note9, Note11
K-JAM	i_mate	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	



 


Bluetooth phone compatibility list

Remarks

Bluetooth may not operate if you connect the unit to headset or your phone is not initial screen condition depending on type of phone.

   - Note1: Discoverable time is limited.
- Note2: This phone accepts PIN code for limited time.
- Note3: If you connect the unit and your phone at the first time, make a connection at your phone's settings first.
- Note4: If you switch the sound path during a call, the connection is broken.
- Note5: This phone does not support REJECT function.
- Note6: This phone does not support MEMORY DIAL function.
- Note7: This phone makes a call in a last dialed order without MEMORY DIAL function.
- Note8: This phone does not support DTMF function.
- Note9: This phone does not support PHONEBOOK function.
- Note10: Make a connection at your phone's settings.
- Note11: Make a connection at your unit's settings.
- Note12: The Call ID is not displayed.
- Note13: Touch "SEND" twice to get a call with the stored phone number.



Specifications

GENERAL

Output Power50W x 4CH (Max.)
 Power SourceDC 12V
 Speaker impedance4 Ω
 Ground System Negative
 Dimensions (W x H x D)206.4 x 118.4 x 185.4 mm
 Net Weight2.44 kg

DISPLAY

LCD6.5 inch TFT LCD
 Resolution480 X 234
 Back LightCCFL type

CD/DVD/VCD SECTION

Frequency Response20 Hz-20 kHz
 S/N Ratio60 dB
 Distortion0.3 %
 Channel Separation (1kHz)50 dB

RADIO SECTION

FM
 Frequency Range87.5-108 MHz
 S/N Ratio50 dB
 Distortion1 %
 Usable Sensitivity10 dBμV

AM (MW)

Frequency Range522-1620 kHz
 S/N Ratio45 dB
 Distortion1.0 %
 Usable Sensitivity38 dBμV




NAVIGATION SECTION


CPUAU1350
 OSWinCE 6.0
 SDRAM256 MB
 Memory (Map)8 GB
 Memory (OS)32 MB NAND Flash
 GPSTRIMBLE
 MapNavteq
 User InterfaceTouch screen



Index

Address Book24	Near Destination26
Address Search23	Near position25
Answering calls42	NEWS54
AS (Auto search memory)53		
<i>Bluetooth</i> wireless technology39	Parking28
		Phone Number26
Changing the passkey41	POI category34
		POI (Point of Interest)24
Detour37	REGION Auto/Off54
		Repeat47
Giving voice commands56	Return to the beginning of the current track/file46
GPS Input27	Route Options36
Help command58	Search46
Home 1/ Work2/ 3~1232	Setup16-19
		Shuffle48
In City26	Skip to the next track/file46
Info Nearby37	Skip to the previous track/file46
Info on Route38	Split screen/ Full screen35
Intro scan47	Store Destination31
		Store Position31,35
Kia service26	Switching the microphone on/off42
		Switching the sound path during a call42
Last destination24		
		TA (Traffic announcement)53
Making a call by entering phone number42	Tour Planner29-30, 35
Making a call with speed dial numbers45	2D/ 3D34

   

 

Index

Using Map28
Using your Phone Book43
Using your Calling list44
Voice commands59-60
Voice recognition56

