 


# FLATRON LCD 565LM

User's Guide  
Manuel d'utilisation  
Guía del Usuario  
Manual do proprietário

Please read this manual carefully before operating your set.  
Retain it for future reference.  
Record model number and serial number of the set.  
See the label attached on the back cover and quote this  
information to your dealer when you require service.

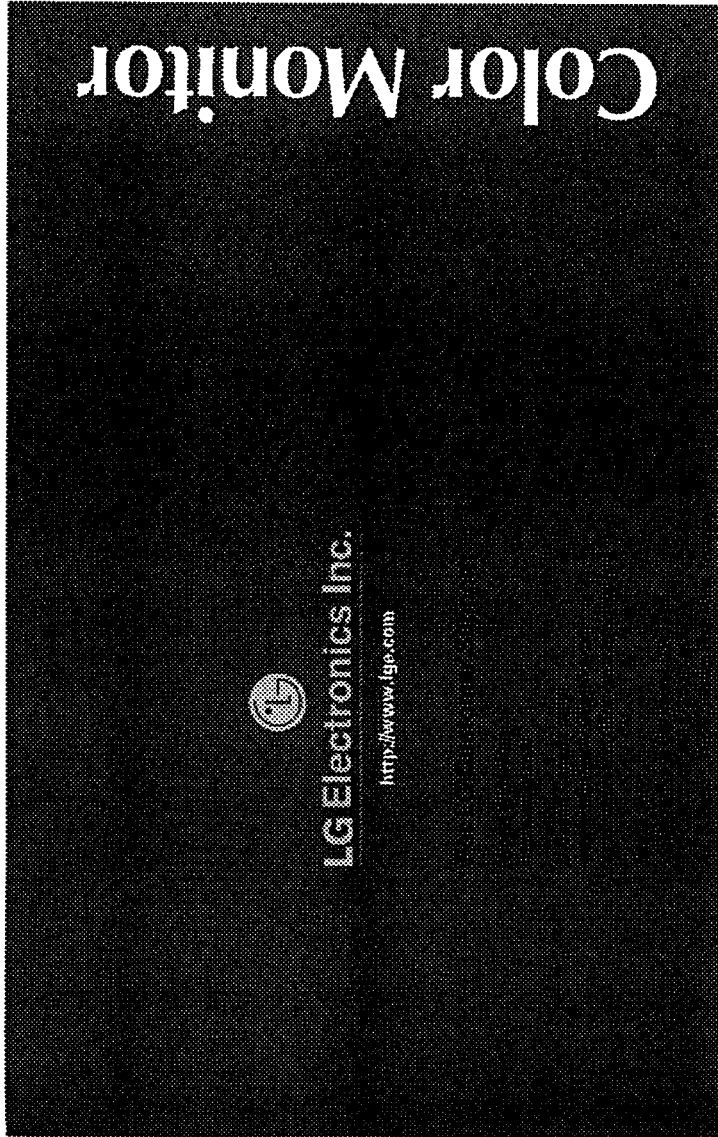

**Mexico only:**  
LG Electronics México S.A. de C.V.  
Sor Juana Inés de la Cruz No. 555 Col. San Lorenzo  
Tlalreparta, Edo. de México C.P. 54033  
Tel. 321 19 00 fax 565 75 49  
Lada sin costo 01 800 50 481 00



As an ENERGY STAR Partner  
LG Electronics U. S. A., Inc.  
has determined that this product  
meets the ENERGY STAR  
guidelines for energy efficiency.

P/NO : 3828TJUL



# Contents

Introduction .....	A1	Introducción .....	E1
Connecting the Monitor .....	A2	Conectando del Monitor .....	E2
Location and Function of Controls .....	A4	Ubicación y Funcion de los Controles .....	E4
Control Panel Function .....	A5	Función del Panel de Control .....	E5
On Screen Display (OSD) Control Adjustment ...	A6	Ajuste del Control de Exhibición en Pantalla (OSD) .....	E6
On Screen Display(OSD) Selection and Adjustment .....	A7	Ajuste del OSD y Selección de Elementos .....	E7
Video Memory Modes .....	A9	Modos de Memoria de Video .....	E9
Troubleshooting .....	A10	Sugerencias para Localizar las Fallas .....	E10
Specifications .....	A11	Especificaciones .....	E11
Einleitung .....	B1	Introdução .....	F1
Anschließen .....	B2	Conectando o Monitor .....	F2
Ort und Funktion der Bedienungselemente .....	B4	Posição dos Controles e Descrição .....	F4
Bedienungselemente der Bildkontrolle .....	B5	Funções do Painel de Controle .....	F5
On Screen Display (OSD) Anpassung .....	B6	Ajuste On Screen Display(OSD) .....	F6
OSD Einstellung und Auswahlssymbole .....	B7	Ajustes OSD e Itens de Seleção .....	F7
Videospeichermodi .....	B9	Modos de Memória de Vídeo .....	F9
Störungen .....	B10	Resolvendo Problemas .....	F10
Produktbeschreibung .....	B11	Especificações .....	F11
Introduction .....	C1	Inleiding .....	N1
Branchement du Moniteur .....	C2	De Monitor Aansluiten .....	N2
Nomenclature et Fonctions .....	C4	De plaatsing en de werking van de knoppen .....	N4
Fonctions du Paneau de Commande .....	C5	Het bedieningspaneel .....	N5
Réglage des Commandes Affichage Écran .....	C6	Bediening via het beeldscherm OSD (On Screen Display) .....	N6
Options de sélection et de Réglage OSD (affichage écran) .....	C7	Kiezen en instellen via het OSD-systeem .....	N7
Mise en Mémoire de Modes Vidéo .....	C9	Modi voor videogeheugen .....	N9
Quelques Conseils en Cas D'incident .....	C10	Problemen oplossen .....	N10
Spécifications D'entree .....	C11	Specificaties .....	N11
Introduzione .....	D1		
Collegamento del Monitor .....	D2		
Posizione e Funzione dei Conando di Controllo .....	D4		
Funzione del Pannello di Controllo .....	D5		
Controllo Regolazione On Screen Display (OSD) .....	D6		
Elementi di Selezione e Regolazione dell'OSD ...	D7		
Modalità di Memoria Video .....	D9		
In Caso di Problemi .....	D10		
Specifiche .....	D11		

## Introduction

**The FLATRON LCD 575LM Flat Panel Monitor has an active matrix TFT (Thin-Film Transistor) LCD (Liquid Crystal Display). This monitor is designed for use in small working areas or for those who need more working space on the desk.**

ENGLISH

### Features

- The FLATRON LCD 575LM is a 15 inch (15 inches viewable) intelligent microprocessor based monitor.
- Digitally controlled auto-scanning is done with the micro-processor for horizontal scan frequencies between 31 and 61kHz, and vertical scan frequencies between 56 - 75Hz.
- This monitor provides audio function. Thanks to built in audio function in the speaker, you can easily separate speakers from the monitor and place them where you want.
- We accomplished to adapt the advanced design and technology to the monitor. Soft touch buttons on the front panel are simple and allow you to conveniently adjust a variety of image controls. The absolute flat screen and screen surface treatment eliminate distracting glares.
- It supports resolutions up to 1024x768, and has a wide viewing angle of  $\pm 50$  degrees horizontal and  $+30, -40$  degrees vertical.
- Plug and play capability if supported by your system.
- This monitor has DDC 2B function.\*
- Compliant with the following regulated specifications :\*
  - EPA ENERGY STAR
  - Swedish TCO'99

 
*\*For detailed information, please refer to the Reference Guide provided.*

AT

## Connecting the Monitor

To set up the monitor, ensure that the power is turned off to the monitor, computer system, and other attached devices, then follow these steps:

- 1 Power off both the monitor and computer.
- 2 Slightly press and pull the latch on Stand cover.
- 3 Connect one end of the monitor signal cable to the input connector on the rear panel of the monitor.
- 4 Connect the other end to the 15-pin connector on the rear panel of the computer and tighten the screws. Be sure the signal cable aligns with the 15-pin connector.
- 5 Connect the other end of the monitor signal cable to the rear panel of Macintosh computer through a Macintosh adapter and then tighten screws.
- 6 Connect the plug from the AC adapter into the base of the monitor. Connect one end of the AC power cord to the AC adapter and the other end to a properly grounded AC outlet that is easily accessible and close to the monitor.
- 7 Power on the computer, then the monitor.
- 8 If you see the □□□□□□□□ message, check the signal cable and connectors.
- 9 After using the system, power OFF the monitor, then the computer.

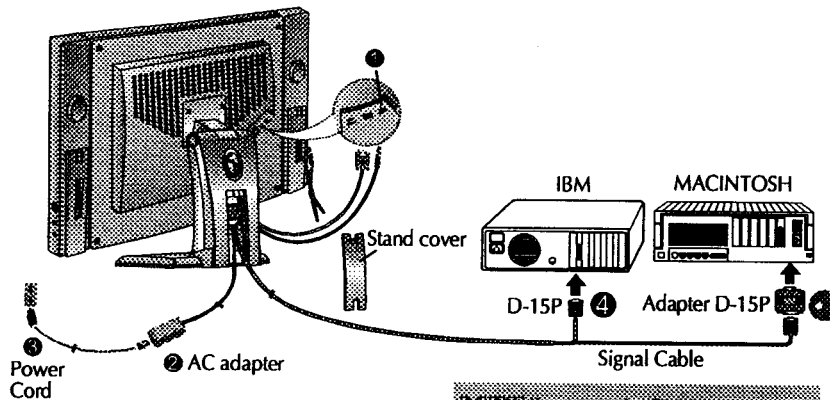 


**□ CHECK** If you see the "□□□□□□□□" message, check to make sure your system is set to one of the factory preset modes (see page A9), or is set to a resolution and refresh rate within the specification limits of this monitor.

 
## Connecting the Monitor

### Connection the Audio

 
1. Connect the speaker as described in below picture.
2. Connect the one end of Audio DC power cable, which is attached on the speaker to AUDIO DC OUT connector ❶ and the other end to DC 24V connector ❷ on the back of the speaker. Then connect the audio cable port which is directly connected to the speaker to AUDIO L-OUT port ❸.
3. Connect the audio cable from the Speaker's AUDIO IN port ❹ to the audio output port of your computer's sound card.

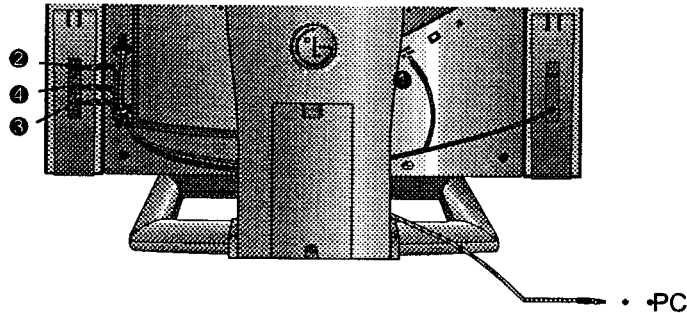

4. After connecting both cables, fix them with cable fixed holder (extra cable fixed holders are shipped with the speaker).

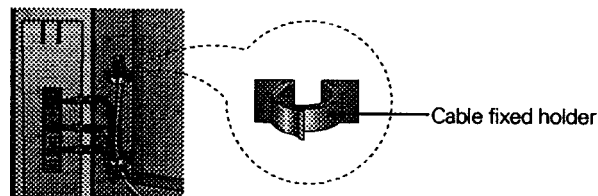 


5. Turn on the speaker with power button and adjust volume to proper level.

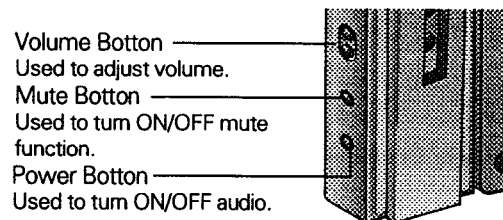 


# Location and Function of Controls

## Front View

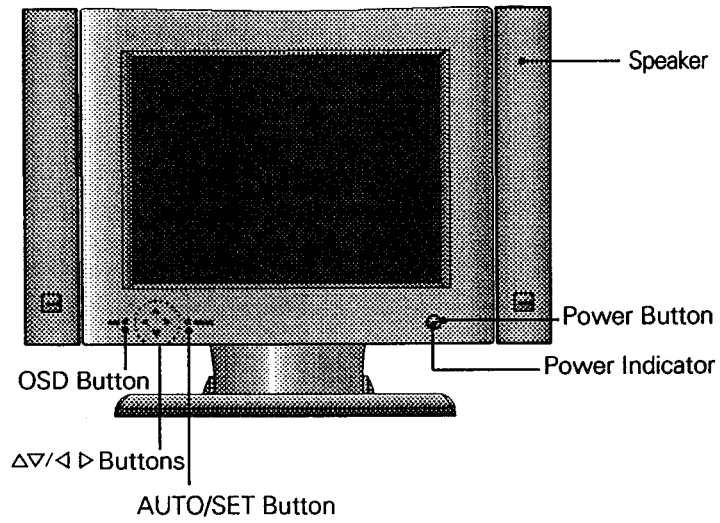 




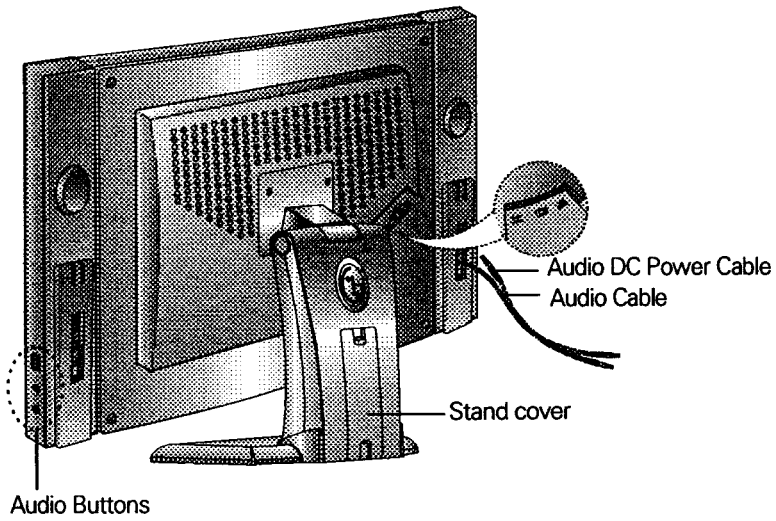


## Rear View

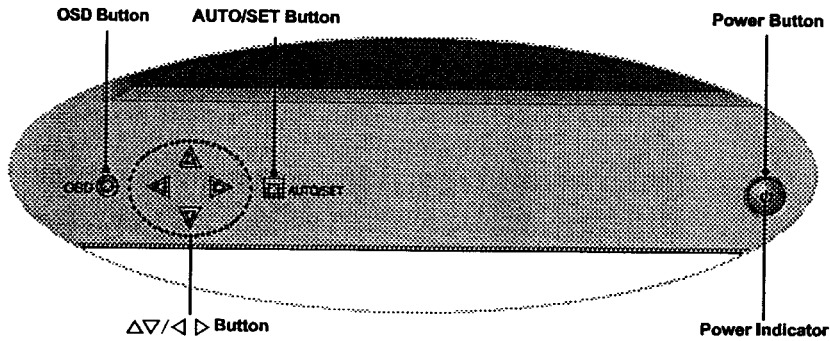

# Control Panel Function

## Front Panel Controls



Control	Function
 <b>OSD Button</b>	Use this button to enter or exit the on screen display.
 <b>Δ▽/◀▶ Button</b>	Use these buttons to choose or adjust items in the on screen display. <b>&lt;Shortcut Keys&gt;</b> <ul style="list-style-type: none"> <li>Brightness and Contrast can be adjusted directly without entering the On Screen Display (OSD) system. Touch the ◀/▶/Δ/▽ buttons to adjust the settings and then the OSD button to save all changes. The Brightness and Contrast functions are also available in the On Screen Display (OSD) menu.</li> </ul>
 <b>AUTO/SET Button</b>	Use this button to enter a selection in the on screen display. <b>* AUTO adjustment function</b> Touch the AUTO/SET button before using OSD menu. This button is for the automatic adjustment of the screen position, clock and phase. <b>Note:</b> Some signal from some graphics boards may not function properly. If the results are unsatisfactory, adjust your monitor's Position, Clock and Phase manually.
 <b>Power Button</b>	Use this button to turn the monitor on or off.
 <b>Power Indicator</b>	The power indicator light is shown in the power button. This indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (stand-by/ suspend/power off), this indicator color changes to amber.

 
## On Screen Display (OSD) Control Adjustment





 




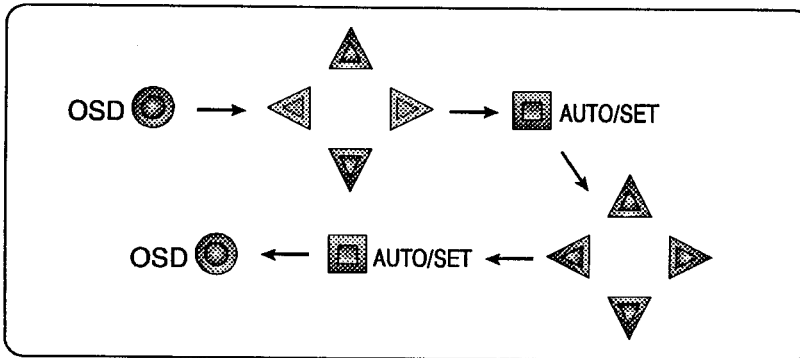




















Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system. A quick example is given below to familiarize you with the use of the controls. Following section is an outline of the available adjustments and selections you can make using the OSD.

### NOTE

• Allow the monitor to stabilize for at least 30 minutes before making image adjustment.

To make adjustments in the On Screen Display, follow these steps:



 


 
 
 
 
- 1 Press the       . Then the main menu of the OSD appears.
- 2 To access a control, use the  or  . When the icon you want becomes highlighted, press the      .
- 3 Use the   /    to adjust the item to the desired level.
- 4 Accept the changes by pressing the      .
- 5 Exit the OSD by Pressing the   .



 
 
# On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selection and adjusting an item using the OSD system.

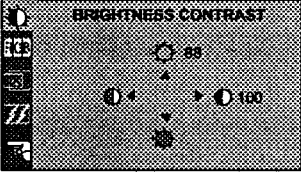Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.

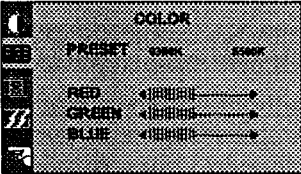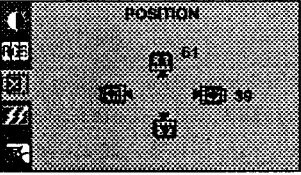OSD Adjust	Description
	<div style="display: flex; align-items: flex-start;"> <div style="margin-right: 10px;">  </div> <div> <p><b>Brightness</b> Used to adjust the brightness of the screen.</p> </div> </div> <div style="display: flex; align-items: flex-start; margin-top: 10px;"> <div style="margin-right: 10px;">  </div> <div> <p><b>Contrast</b> Adjust the display to the contrast desired.</p> </div> </div>
	<p><b>PRESET</b> 9300K/ 6500K To appear the displays color temperature.</p> <p><b>RED</b></p> <ul style="list-style-type: none"> <li>• 9300K: Slightly bluish white.</li> <li>• 6500K: Slightly reddish white.</li> </ul> <p>To set your own color levels.</p> <p><b>GREEN</b> To set your own color levels.</p> <p><b>BLUE</b> To set your own color levels.</p>
	<div style="display: flex; align-items: flex-start;"> <div style="margin-right: 10px;">  </div> <div> <p><b>Vertical Position</b> To move image up and down.</p> </div> </div> <div style="display: flex; align-items: flex-start; margin-top: 10px;"> <div style="margin-right: 10px;">  </div> <div> <p><b>Horizontal Position</b> To move picture image left and right.</p> </div> </div>

# On Screen Display(OSD) Selection and Adjustment

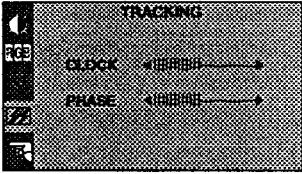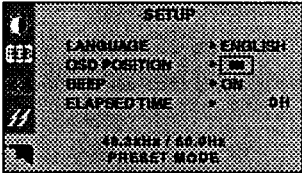OSD Adjust	Description
	<p><b>CLOCK</b> To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.</p> <p><b>PHASE</b> To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.</p>
	<p><b>LANGUAGE</b> To choose the language in which the control names are displayed.</p> <p><b>OSD POSITION</b> To adjust position of the OSD window on the screen.</p> <p><b>BEEP</b> To select beep ON or OFF.</p> <p><b>ELAPSED TIME</b> To display the use time of monitor</p>

## Video Memory Modes

The monitor has 30 memory locations for display modes, 14 of which are factory preset to popular video modes.

### Display Modes (Resolution)

Display Modes (Resolution)	Horizontal Freq.(kHz)	Vertical Freq.(Hz)
1 VGA 640 x 350	31.47	70
2 VGA 720 x 400	31.47	70
3 VGA 640 x 480	31.47	60
4 MAC 640 x 480	35.00	67
5 VESA 640 x 480	37.86	73
6 VESA 640 x 480	37.50	75
7 VESA 800 x 600	35.16	56
8 VESA 800 x 600	37.88	60
9 VESA 800 x 600	48.08	72
10 VESA 800 x 600	46.88	75
11 MAC 832 x 624	49.72	75
12 VESA 1024 x 768	48.36	60
13 VESA 1024 x 768	56.48	70
14 VESA 1024 x 768	60.02	75

**Note :** This LCD monitor has been pre-adjusted to the video mode of VESA 1024x768 @75Hz.








 




 


### User Modes

- Modes 15-30 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 15.

If you use up the 16 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 15.

# Troubleshooting

## Check the following before calling for service.

- 
  - Push the  Button.
  - If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display.
- 
  - Push the  Button.
  - If the results are unsatisfactory, decrease the vertical bars or stripes using the  icon in the on screen display.
- 
  - Push the  Button.
  - If the results are unsatisfactory, decrease the horizontal bars using the  icon in the on screen display.
- 
  - The signal cable is not connected, or is loose. Check and secure the connection.
- 
  - The frequency of the signal from the video card is outside the operating range of the monitor.
    -  
- Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).
- You can change the setup to the supported resolution using the  (Press the F8 key during booting the system).
- 
  - The monitor is in its display power management mode.
  - There is no active signal coming from the PC.
  - The signal cable is not fastened securely.
  - Check the computer power and graphics adapter configuration.
- 
  - Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

**NOTE**

- If the power indicator(LED) light is blinking amber, may result in abnormal condition of the monitor.
- Then press a power ON/OFF button on the front panel control and call your service technician for more information.



# Specifications

<b>Display</b>	□ □ □ □	15inch (38.1cm) Flat Panel Active matrix-TFT LCD
		Anti-Glare coating
	□ □ □ □ □ □ □ □ □ □	15inch (38.1cm)
	□ □ □ □ □ □ □ □ □ □	0.297 x 0.297mm
	□ □ □ □ □ □ □ □ □ □	16 million color
<b>Sync Input</b>	□ □ □ □ □ □ □ □ □ □ □ □ □ □	31kHz - 61kHz (Automatic)
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	56Hz - 75Hz (Automatic)
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	Separate, TTL, Positive/Negative
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	15 pin D-Sub connector
<b>Video Input</b>	□ □ □ □ □ □ □ □ □ □ □ □ □ □	304 x 228mm / 12.0 x 9.0inch
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	Separate, RGB Analog, 0.714Vp-p/75ohm, Positive
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	VESA 1024 x 768 @ 75Hz
<b>Audio</b>	□ □ □ □ □ □ □ □ □ □ □ □ □ □	1W(R+L)
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	0.7Vrms
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	4Ω
<b>Power Consumption</b>	□ □ □ □ □ □ □ □ □ □ □ □ □ □	≤ 36W
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	≤ 3W
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	≤ 3W
<b>Dimensions</b>	□ □ □ □	39.4 cm / 15.5 inches (without speaker)
		52.2 cm / 20.6 inches
	□ □ □ □ □ □	37.87 cm / 14.9 inches
	□ □ □ □ □ □	16.18 cm / 6.37 inches
<b>Power Input</b>	DC 12V 3A	
<b>AC Adapter</b>	□ □ □ □ □ □	AC 100-240V, 50 - 60Hz, 1.2A - 0.6A
	□ □ □ □ □ □	DC 12V $\equiv$ 3A $\ominus$ $\oplus$
<b>Weight</b>	□ □ □	5.1 kg / 11.24 lbs (without speaker)
		6.1 kg / 13.4 lbs
<b>Tilt Range</b>	□ □ □ □	5°
	□ □	30°
<b>Environment Conditions</b>	□ □ □ □ □ □ □ □ □ □ □ □ □ □	
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	10°C to 35°C
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	10% to 80% non-condensing
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	-20°C to 60°C
	□ □ □ □ □ □ □ □ □ □ □ □ □ □	5% to 95% non-condensing

## NOTE

- Information in this document is subject to change without notice.

