

Car Navigation System



OWNER'S MANUAL

TUSON



 
Thank you for purchasing this Car Navigation system.

This owner's manual explains how to use the Hyundai Vehicle's Navigation system. Before using the product, read the contents of this owner's manual carefully and use this product safely.

- The screens shown in this manual may differ from the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this owner's manual so that the next driver can continue its use.

Precautions for safety

Safety notes

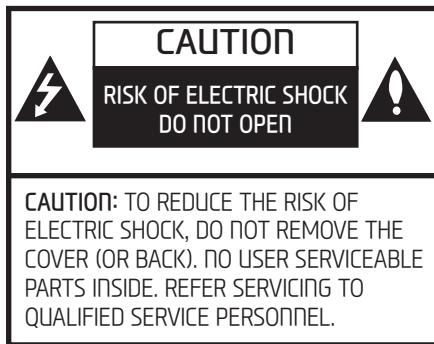

The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user about the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Always operate the vehicle in a safe manner. Do not be distracted by the vehicle while driving and always be fully aware of all driving conditions. Do not change settings or any functions. Pull over in a safe and legal manner before attempting such operations.

To promote safety, certain functions are disabled unless the parking brake is on.



To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.



To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture.



When driving your vehicle, be sure to keep the volume of the unit low enough to allow you to hear sounds coming from the outside.



Do not drop it and avoid heavy impacts at anytime.



The driver should not watch the monitor while driving. If the driver watches the monitor while driving, it may lead to carelessness and cause an accident.

Precautions for safety

WARNING:

- Don't use a mobile phone when you are driving. You must stop at a safe place to use a mobile phone.
- The use of the navigation radio by no means relieves the driver of his/her responsibilities. The highway code must always be observed. Always observe the current traffic situation.
- The applicable traffic regulations and the prevailing traffic situation always take precedence over the instructions issued by the navigation system if they contradict one another.
- For traffic safety reasons, use the navigation system menus only before starting a journey or when the vehicle is stationary.
- In certain areas, one-way streets, turn-off, and entry prohibitions (e.g. pedestrian zones), the navigation system will give a warning. Pay particular attention to these kind of cases.

- The navigation system does not take the relative safety of the suggested routes into consideration:
Road blocks, building sites, height or weight restrictions, traffic or weather conditions or other influences which affect the route safety or travel time are not taken into consideration for the suggested routes. Use your own discretion in order to decide on the suitability of the suggested routes.
- The current legal road traffic speed limit always takes priority over the values saved in the data. It is impossible to provide an assurance that the speed values of the navigation system will always match those of the current traffic regulations in every situation.
- Do not rely exclusively on the navigation system when attempting to locate an emergency service (hospital, fire service etc.). It cannot be guaranteed that all available emergency services in your vicinity are saved in the database. Use your own discretion and abilities to secure help in such situations.

CAUTION:

- Do not keep the navigation system running with the engine stopped. Doing so may discharge the vehicle battery. When you use the navigation system, always keep the engine running.
- Do not disassemble or modify this system. If you do, it may result in accidents, fire, or electrical shock.
- Some states/provinces may have laws limiting the use of video screens while driving. Use the system only where it is legal to do so.

Table of contents

Precautions for safety	3	Configuration for Home screen.....	14	Repeat.....	23
Safety notes	3	Basic operation for [Home] screen.....	15	Shuffle.....	23
Table of contents	5	Editing the [All menus].....	15	Sound settings.....	23
General information	8	Adding your favourite menu items to [My Menu].....	16	Viewing USB video	23
About USB.	8	Rearranging the favourite menu items of [My Menu].....	17	Switching to menu screen or full screen..	23
Music file information.	9	Deleting the favourite menu items of [My Menu].....	17	Pause.....	23
Video file information.	9	Playing last media source.....	17	Skip.....	23
Using iPod devices	9	Radio operation	18	Search.....	24
Precautions upon using iPod.....	9	Listening to AM.	18	Seek.....	24
Supported iPod devices.....	9	Opening the station list sorted in numerical order.....	18	List.....	24
Cautions upon using SD cards	9	Auto search.....	18	Repeat.....	24
Ejecting and inserting SD cards.....	9	Saving AM favourites.....	19	Info.....	24
Usage of SD cards.....	9	Listening to FM.	19	Sound settings.....	24
Name of each component	10	Opening the station list.....	20	Display settings.....	24
Head unit.	10	Saving FM favourites.....	20	iPod operation	25
Steering wheel remote control.	12	Scan.	20	Playing iPod	25
Basic operation	13	Sound settings	20	Pause.....	25
Starting the system for the first time	13	USB operation	21	Skip.....	25
Turning the system on	13	Playing USB music	21	Search.....	25
Turning the system off.	13	Pause.....	21	Seek.....	25
AV OFF	13	Skip.....	21	List.....	25
AV ON	13	Search.....	21	Repeat.....	25
Adjusting the volume	13	Seek.....	21	Shuffle.....	25
Resetting the system	14	Delete current file.....	22	Sound settings.....	25
[Home] screen	14	List.....	22	Auxiliary device operation	26
				Playing an AUX source.	26
				Sound settings.....	26

Table of contents

Bluetooth® audio	27	Adding favorite	34	Restricted Area	40
Playing Bluetooth audio	27	Finding favorite.....	34	Settings for navigation	41
Starting the Bluetooth audio.....	27	Viewing favorite.....	35	Settings	41
Pause	27	Editing favorite	35	Map	41
Skip	27	Deleting favorite.....	35	Display.....	41
Repeat	27	Recent	35	Language.....	42
Shuffle	27	Hyundai service.....	35	POI Icon	42
Connection settings	27	Coordinate	35	Guidance.....	42
Sound settings	27	Intersection	36	Unit.....	43
Getting started with navigation	28	Category	36	Speed Alert	43
Precautions for safe driving	28	Current Position	36	Sound.....	43
What is GNSS?	28	Using the route menu	37	Trail	44
About satellite signals	28	Itinerary	37	Factory Default.....	44
Acquiring satellite signals	28	Adding itinerary's way points	37	Safe Mode.....	44
Operating navigation screen	29	Viewing the map information.....	37	Checking on navigation system	45
Map screen	29	Saving itinerary to [My Itinerary].....	37	Information	45
Zoom in / Zoom out.....	30	Rearranging itinerary's way points	38	My Data	45
Quick menu	30	Vacating itinerary's way points from		Android Auto/Apple CarPlay - option	46
Sound setting for navigation.....	30	[itinerary].....	38	What is Android Auto/Apple CarPlay? . . .	46
Scrolling the map screen.....	30	Loading itinerary from [My Itinerary]		Cautions	46
into [itinerary]	38	Renaming itinerary from [My Itinerary]..	38	Using Android Auto or Apple CarPlay . . .	47
Main Menu	31	Deleting itinerary from [My Itinerary]....	38	NOTICE	47
Sub-menu operation	31	Route Options	38	NOTICE-Android Auto.....	47
Searching for destination	32	Turn List	39	NOTICE-Apple CarPlay.....	47
Address search	32	Best Fit	39		
POI (Points of interest)	32	Cancel Route	39		
Searching for POI by [POI].....	32	Demo	39		
Keyword search	33	Stop Demo	40		
Favorite	34	Bypass Waypoint.....	40		
		Detour	40		

Table of contents

Bluetooth® Wireless Technology	48	Settings	55	Troubleshooting	65
Before using the Bluetooth hands-free . . .	48	[Settings] menu overview	55	Trademarks and licenses	67
What is Bluetooth Wireless Technology?..	48	Sound	55	Bluetooth® Wireless Technology	67
Precautions for safe driving.....	48	Display	56	iPod®	67
Cautions upon connecting Bluetooth		Bluetooth	57	OPEN SOURCE SOFTWARE NOTICE	67
phone.....	48	Bluetooth connections.....	57	DivX®	67
Pairing and connecting the unit and a		Auto connection priority	57		
Bluetooth phone	48	System Bluetooth info	58	Specification	68
When no phones have been paired.....	48	Vehicle name	58		
When a phone is already paired	49	Passkey.....	58		
When pairing additional device	49	Default.....	58		
Disconnecting the connected phone.....	50	Phone projection	58		
Deleting Bluetooth devices.....	50	Custom button	59		
Making a call by entering phone number .	50	Date/Time	59		
Making a call by redialling	50	Language	59		
Answering/Rejecting a call.	51	Screensaver	60		
Switching call to the mobile phone	51	Advanced	60		
Ending a call	51	System info	60		
Using the menu during a phone call. . . .	51	Version info.....	60		
Calling list	52	Update.....	61		
Making a call from calling list.....	52	Default.....	61		
Downloading call history.....	52				
Contacts	52	Using rear camera	62		
Making a call from contacts	52	About rear camera	62		
Downloading mobile phone contacts	53				
Searching by name or number	53	Before thinking there is a product			
Favourites	53	defect	63		
Calling favourites.....	53				
Adding as a favourite.....	54				
Deleting favourites.....	54				
Phone settings	54				

General information

About USB

- Take precautions regarding static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 players will not be recognised when connected as an external device.
- When connecting an external USB device, the device may not properly recognise the USB is in some states.
- USB devices formatted as FAT 16/32, exFAT or NTFS are supported.
 - Read: FAT 16/32, exFAT, NTFS
 - Write: FAT 16/32 (It may be limited when using the POI export function.)
- Some USB devices may not be supported due to compatibility issues.
- Avoid contact between the USB connector and bodily parts/foreign objects.
- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- The amount of time required to recognise the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in required time are not indications of malfunction.
- The device may not recognise the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly with the multimedia terminal of the vehicle.
- When application programmes are installed to specific USB, files may not properly play.
- The device may not operate normally if MP3 players, mobile phones, digital cameras, or other electronic devices (USB devices not recognised as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type other than metal cover type USB memory.
- The device may not support normal operation when using formats such as HDD type, CF, or SD memory.
- The device will not support files locked by DivX DRM (Digital Rights Management).
- USB memory sticks used by connecting an adaptor (SD type or CF type) may not be properly recognised.

General information

Music file information

- Sampling frequency:
 - 32, 44.1, 48 kHz (MP3, WMA, OGG, WAV)
 - 1 Hz - 48 kHz (FLAC)
- Bit rate:
 - 32 ~ 320 kbps (MP3, WMA, OGG, FLAC)
 - 8 bit/16 bit (WAV)
- Version: Any version
- Playable file format: “.mp3” / “.wma” / “.ogg” / “.flac” / “.wav”

Video file information

- Playable file format: “.mpg”, “.mpeg”, “.dat”, “.asf”, “.wmv”, “.mp4”, “.m4v”, “.divx”, “.avi”, “.mkv”
- It may not properly work depending on the storage type.

Using iPod devices

Precautions upon using iPod

iPod® is a registered trademark of Apple Inc.

- Some iPods with unsupported communication protocols may not properly operate with the system.
- If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual.)

- During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/iPhone product.) will charge the iPod through the system. (However, iPad is not charged.)
- The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)
- With some iPhones, streaming audio and iPod control may occasionally conflict. If problems persist, remove the iPhone and connect again.
- Use iPod with complete synchronisation to iTunes. Unauthorised song addition may cause abnormal operation.
- If iPod and Bluetooth are connected simultaneously with the same iPhone, you cannot use Bluetooth audio function.
- If iPod touch or iPhone is used, iOS5.0 or a later version is recommended.

Supported iPod devices

iPhone7, iPhone7 Plus

iPhoneSE

iPhone6, iPhone6 Plus, iPhone6s, iPhone6s Plus

iPhone5C, iPhone5S, iPhone5

iPhone4S, iPhone4

iPhone3GS, iPhone3G, iPhone

iPod Touch (1st through~ 5th generation)

iPod Nano (1st through~ 7th generation)
iPod Classic (1st through~ 6th generation)
iPad WiFi (1st through~ 4th generation)
iPad Air WiFi (1st ~2nd generation)
iPad Mini (1st ~2nd generation)

Cautions upon using SD cards

Ejecting and inserting SD cards

 
- Ejecting and inserting SD cards while the system is operating may result in SD card or system errors. To eject or insert the SD card, first turn off the system and the vehicle should be off status.
- Eject/insert SD cards only to update the map with a new version.
- When an SD card with the new version of update software is installed, then the system will reboot automatically.

Usage of SD cards

- The SD card is formatted to include only map and new navi S/W.
- The SD card cannot be used to save and play music.
- Do not add, delete, or format files within the SD card.

Name of each component

Head unit

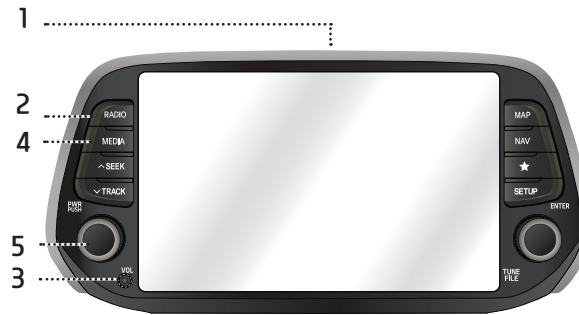

1. **Cover for protecting SD card (SD card insert slot)**

Insert the SD card into the slot.

2. **RADIO button**

Converts to the last played radio mode (FM, AM).

3. **Reset hole**

Press with a thin object to reset the unit when it does not operate normally.

4. **MEDIA button**

If the playable media source is one, it moves to the corresponding screen. If the playable media sources are more than two, it moves to the [Media] screen. You can select a media source. ([USB Music]/[USB Video]/[iPod]/[Apple CarPlay]/[AUX]/[Bluetooth Audio]/[Android Auto])

5. • **POWER PUSH button**

- Power on
Press this button in system OFF status.
- Power off
Press and hold this button in power ON status.

• **Volume control knob (VOL)**

Turn anticlockwise or clockwise to control volume.

• **AV on/off**

Press this button to turn AV on or off in power ON status.

Name of each component



6. VSEEK/TRACK button

- When it is pressed for a short time
 - AM mode: plays previous/next available frequency.
 - FM mode: plays previous/next available station existing within [List] menu. (If there is no or one station in the [List] menu, the “Auto tuning” function is executed.)
 - MEDIA mode: plays previous/next file.
- When it is pressed and held
 - AM mode: plays previous/next available frequency.
 - FM mode: plays previous/next available station existing within [List] menu.

- MEDIA mode (except for Bluetooth, AUX and Android Auto): rewinds or fast forwards the file.

7. MAP button

Press to display the map screen of the current location.

8. NAV button

Press to move to the navigation menu screen.

9. SETUP button

Press to go to the [Settings] menu.

 
- ## 10. ☆ (Custom button)
- Press to go to the [Custom button settings] menu. After setting, press to use desired function.

11. ENTER/TUNE/FILE button

- AM mode: turn left/right to tune manually.
- MEDIA mode (except for Bluetooth, AUX, Apple CarPlay and Android Auto): turn left/right to search for the desired file and press.
- Navigation mode: turn to the left/right to change the map scale on the map screen.

Name of each component

Steering wheel remote control

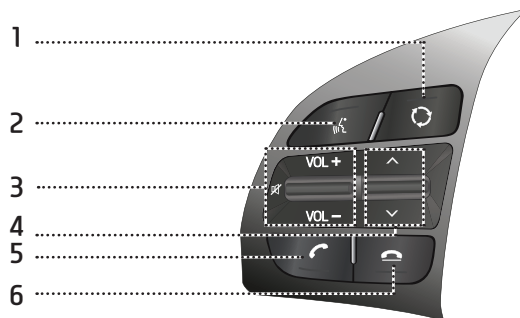

1. (MODE) button

- Each time this button is pressed, the radio or media mode is changed. You can select the modes to toggle in settings.
- If the media is not connected, it is changed in the order FM → AM → FM.
- When it is pressed and held, AV is turned off. (But, the voice guidance works normally in navigation mode.)

2. button

Press to switch to voice recognition mode when the phone supporting Android Auto/Apple CarPlay function is connected. To cancel it, press the button again.

3. • Volume (VOL+/VOL-) button

Increases or decreases the volume level.

• (MUTE) button

Press to mute the sound. (It will be paused in some media modes.)

4. button

- When it is pressed for a short time
 - Radio (FM, AM) mode: plays previous/next favourites.
 - MEDIA mode: plays previous/next file.
- When it is pressed and held
 - Radio (FM, AM) mode: plays previous/next available frequency.

- MEDIA mode (except for Bluetooth, AUX and Android Auto): rewinds or fast forwards the file.

5. button

Press to operate Bluetooth hands-free function.

- Press to accept a call.
- Press to make a call from last calls.
- Press and hold for redialling.

6. button

 
- Press to end the phone call during a call.
- Press to reject the call in the incoming call screen.

Basic operation

Starting the system for the first time

1. Press the engine start button or set the ignition key to On or ACC.

Once the system is turned on, the booting process will start and the safety warning page is displayed.

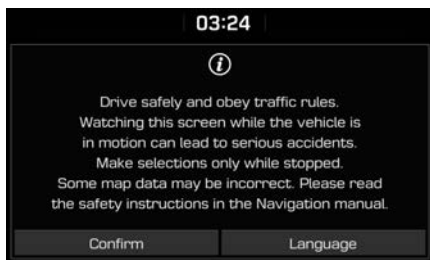

2. Press [Confirm].

If you want to change the system language, press [Language]. For more details, refer to “Language” on page 59.

Notes

- You cannot operate the system while it is booting up. It may take some time for all of the features to be ready.
- The safety warning page is displayed every time the ignition is turned on. The displayed

warnings are related to safety, please closely read and comply with the safety warnings.

- If there is no operation for 10 seconds in the safety warning screen the system automatically switches to the last played mode.

Turning the system on

Press [POWER PUSH] on the head unit in system OFF status.

Note

Pay attention to the volume setting when turning the system on. A sudden output of extreme volume upon turning the system on could lead to hearing impairment. Adjust the volume to a suitable levels before turning off the system.

Turning the system off

Press and hold [POWER PUSH] on the head unit in system ON status.

AV OFF

Press [POWER PUSH] on the head unit to turn AV off in power ON status.

AV ON

Press [POWER PUSH] on the head unit to turn AV on in AV OFF status.

Adjusting the volume

Turn the volume control knob (VOL) on the head unit to the left/right.

Mode	Description
Radio or media	During the radio or media playback, turn to the left/right.
Bluetooth call	During a Bluetooth call, turn it to the left/right.
Bluetooth bell	During an incoming call, turn to the left/right.

Basic operation

 
Resetting the system

This feature is used to reset the system in the occurrence of an unforeseen error or problem. Press “RESET” button. (The use of a clip or pin is recommended when resetting the system.)



[Home] screen

Configuration for Home screen

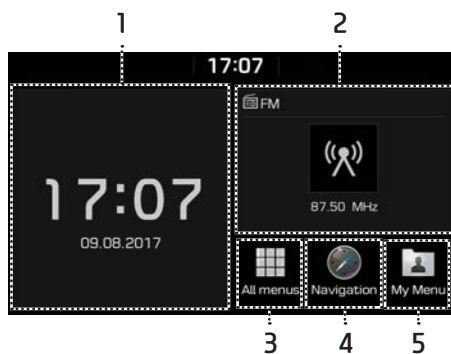

1. Date/Time

- Shows the current date and time.
- Press the area to move to date and clock settings.

2. AV widget

- Shows brief information on the radio or media currently playing.
- Press the area to move to the mode for what you are listening to.

3. All menus

Press [All menus] to move to all of the items of the system menu.

- [Phone]: Operates Bluetooth hands-free function.
- [Android Auto]: Runs [Android Auto] function.
- [Apple CarPlay]: Runs [Apple CarPlay] function.
- [Quick guide]: Moves to the quick guide menu. ([Using the touch screen], [Home], [Bluetooth], [Phone projection])
- [Radio]: Converts to the last played radio mode.

- [Music]: Converts to the last played music mode.
- [USB Video]: Converts to the last played video mode.
- [Current position]: Displays the map screen of the current position.
- [Navigation]: Moves to the [Navigation] menu.
- [Settings]: Moves to the [Settings] menu.
- [My Menu]: Moves to the [My Menu] menu.

4. Navigation

Press to move to the [Navigation] menu.

 
5. My Menu

- You can add and save up 24 menu items.
- You can add your favourite menu items to have quick and easy access.

Basic operation

Basic operation for [Home] screen


1. Press  on the screen.

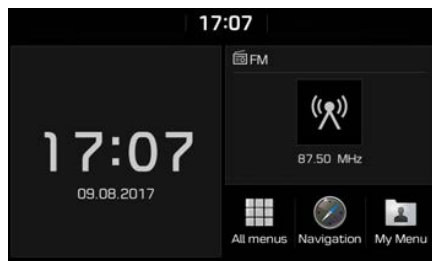


2. Select a desired item and it moves to the corresponding screen.

Editing the [All menus]

 1. Press [All menus] on the [Home] screen.

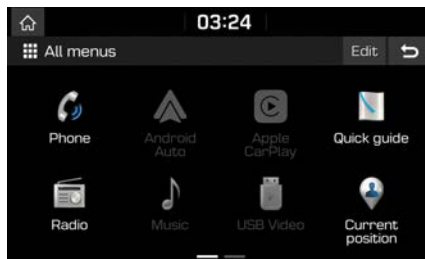

 2. Press [Edit] on the [All menus] screen.

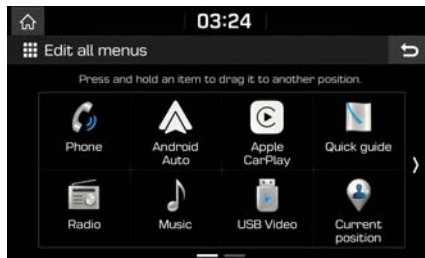

3. Select the desired menu item from the list, then drag and drop it to a desired place.

 


4. Press .

Basic operation

Adding your favourite menu items to [My Menu]

1. Press [My Menu] on the [Home] screen or [All menus] screen.
2. Press [Add to My Menu].
If your favourite menu items are already added, press [Menu] > [Add].

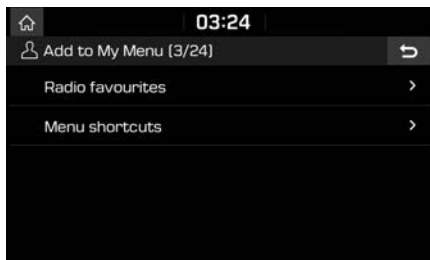


3. Select one of the [Radio favourites], or [Menu shortcuts] on the screen.




<For example: the [Menu shortcuts] screen>

 4. Select one of the categories.
5. Mark the subcategories.

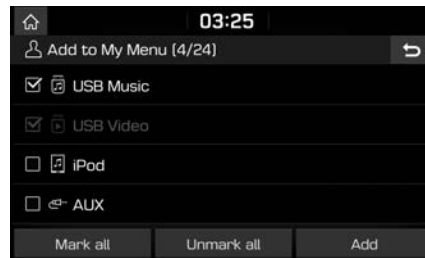

6. Press [Add] > [Yes].
 - [Mark all]: Marks all items.
 - [Unmark all]: Unmarks all items.

Note

- Press [>] to move to the previous screen.
- Up to 24 menu items can be added to [My Menu].
- If you select the menu item added to [My Menu], it moves to the corresponding screen.

 
Basic operation

Rearranging the favourite menu items of [My Menu]

1. Press [My Menu] on the [Home] screen.
2. Press [Menu] > [Rearrange].




3. Select the desired menu item from the list, then drag and drop it to a desired place.

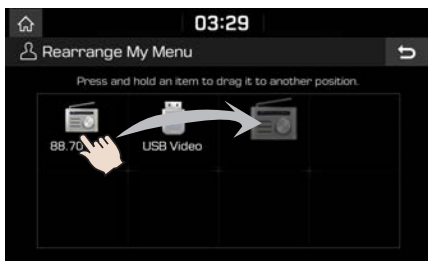

4. Press [↵].

Deleting the favourite menu items of [My Menu]

 1. Press [My Menu] on the [Home] screen.
2. Press [Menu] > [Delete].

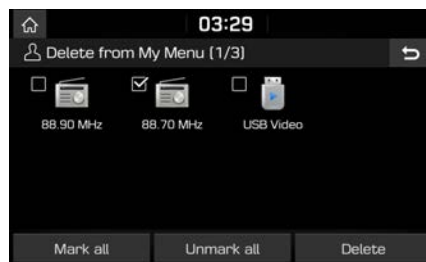

3. Select the desired items, then press [Delete] > [Yes].
 - [Mark all]: Marks all items.
 - [Unmark all]: Unmarks all items.

Playing last media source

When you press the Engine Start button or set the ignition key to ON/ACC ON, the media source played the last time will play automatically. But, the message "Reconnect last media source to play." is displayed on the home screen if you set the ignition key to ON/ACC ON with the existing media source disconnected or removed.

Radio operation

Listening to AM

1. Press [RADIO] on the head unit.
2. Press [AM] on the screen.

The AM screen of the most recent listened station is displayed.



Note

Each time the [RADIO] button on the head unit is pressed, the mode is changed in the order AM → FM → AM.

3. Auto tuning:

Press [VSEEK/TRACKΛ] on the head unit.
- Plays next/previous available station.

Manual tuning:

Turn the right knob of the head unit left/right.
- The frequency moves up and down accordingly.

 
Favourites tuning:

Press [Favourites]. Press the favourites numbers of the desired broadcast station.

Opening the station list sorted in numerical order

You can see station list with superior reception.


1. Press [AM] on the screen.
2. Press [List].

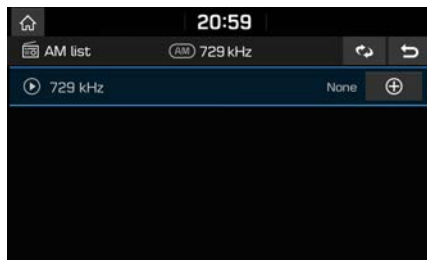

Auto search

This function lets you automatically search the broadcast stations with superior reception.

 1. Select the AM band.
2. Press [List].

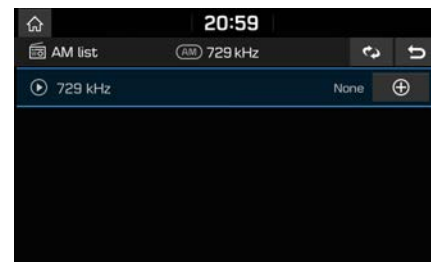

3. Press [↺].

Note

If you want to save the stations to [Favourites] menu, press [⊕] and then press the desired favourites number.

 
Radio operation

Saving AM favourites

It manually saves the listening frequency to desired favourites list.

1. Select the AM band.
2. Select the frequency to save.
3. Press [Favourites].
4. Press the desired favourites number.


If you want to overwrite an existing favourites, press and hold the respective favourites number.

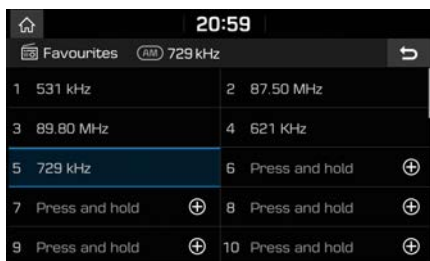

Listening to FM

1. Press [RADIO] on the head unit.
2. Press [FM] on the screen.

 The FM screen of the most recent listened station is displayed.

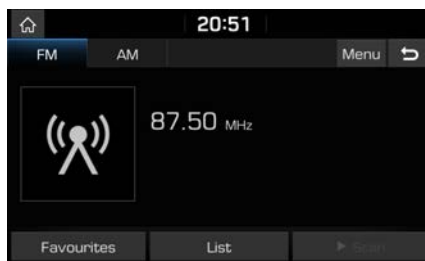


Note

Each time the [RADIO] button on the head unit is pressed, the mode is changed in the order FM → AM → FM.

3. **Auto tuning (When there are no or one station in [List] menu):**
 - Press [VSEEK/TRACKΛ] on the head unit.
 - Plays next/previous available station.
- List tuning (When there are two or more stations in [List] menu):**
 - Press [VSEEK/TRACKΛ] on the head unit.
 - Plays next/previous available station existing within [List] menu.

Manual tuning:

 - In the FM mode, press [Menu] > [Manual tune FM].

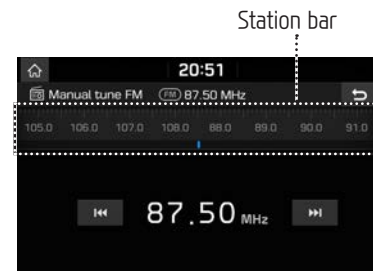

- Drag the station bar to the left/right to find the radio station that you want.
- Press [◀◀/▶▶].
- Turn the right knob of the head unit left/right, then press it when the desired station is displayed in a highlighted colour.

Favourites:

 
- Press [Favourites]. Press the favourites numbers of the desired broadcast station.
- Press [V/Λ] on the steering wheel remote control.

Radio operation

Opening the station list

You can see the station list with superior reception.

1. Press [FM] on the screen.
2. Press [List].

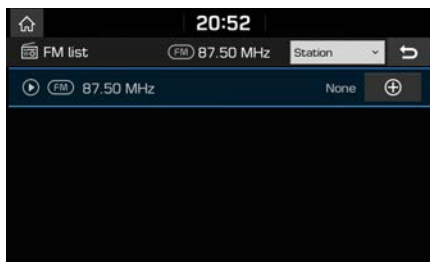


- If you want to save the stations to the [Favourites] menu, press [**+**] and then press the desired favourites number.
- Press [Station] or [Programme type] to arrange the list in station or programme type order.

Saving FM favourites

It saves the listening station to the desired favourites list.

1. Press [FM] on the screen.
2. Select the desired station.
3. Press [Favourites].
4. Press the desired favourites number.

 If you want to overwrite an existing favourites, press and hold the respective favourites number.

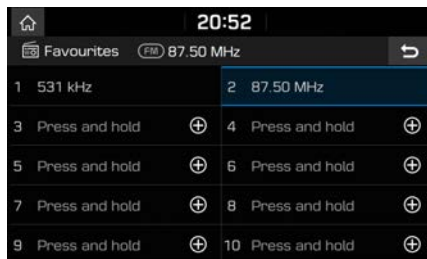

Scan

This function scans all stations and plays only stations with good signal strength for 5 seconds each.

Press [**▶** Scan].

Press [**■** Stop] to stop the scan function.

Sound settings

 
1. Press [Menu] > [Sound settings].
2. For details refer to page 55 ("Sound").

USB operation

Playing USB music

You can play music files stored in a USB memory device.

Connect a USB device to the USB port and playback starts automatically.

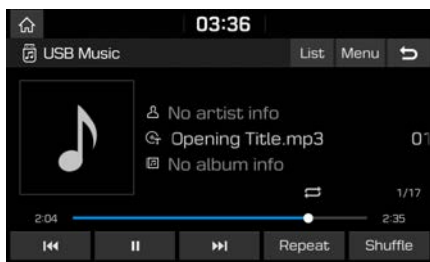

Note

To play USB music while a different source is playing, press [MEDIA] > [USB Music].

Pause

You can pause the playing file.

Press [II] during playback.

Press [▶] to play it again.

Skip

You can play the previous or next file.

Position	Description
Screen	<ul style="list-style-type: none">• Press [◀◀/▶▶].• Pressing [◀◀] after 3 seconds of playback time plays the current file from the beginning.
Head unit	<ul style="list-style-type: none">• Press [VSEEK/TRACKΛ].• Pressing [VSEEK] after 3 seconds of playback time plays the current file from the beginning.

Search

You can fast rewind/forward to a specific point of a file.

Position	Description
Screen	Press and hold [◀◀/▶▶] and then release at the point you want.
Head unit	Press and hold [VSEEK/TRACKΛ] and then release at the point you want.

Note

When you drag or touch the desired part on the progress bar, the music of the selected part plays.

Seek

You can play the file directly by searching for the desired file.

 
1. To search for a desired file, turn the right knob of the head unit left/right.
2. If the desired file is displayed, press the right knob of the head unit to play the file.

USB operation

Delete current file

You can delete the currently playing file in a USB.

1. Press [Menu] > [Delete current file].

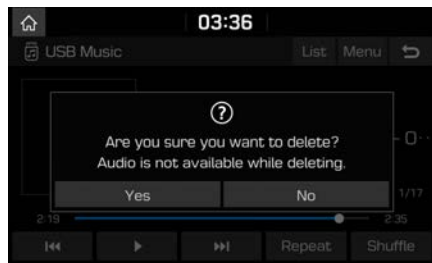


2. Press [Yes].

List

You can play the desired file by searching for the file list of the USB menu.

 1. Press [List].

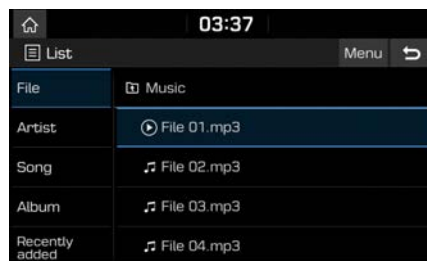


2. Press the desired file after searching for a category.
The category can be sorted by [File], [Artist], [Song], [Album] or [Recently added].

Note

Press [⏪] to move to an upper folder.

Using the list menu

 1. Press [Menu] in list screen.

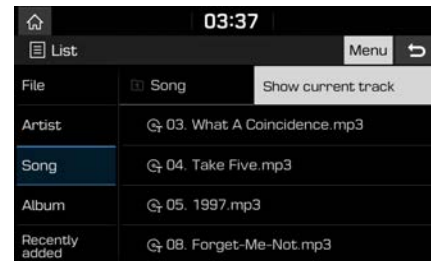


2. Press [Show current track].
The screen moves to the file list currently playing.

USB operation

Repeat

You can play a set of files repeatedly.

 1. Press [Repeat].

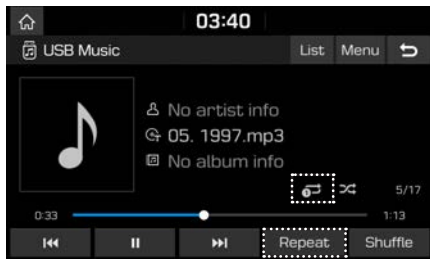


2. Select the desired mode by pressing [Repeat] repeatedly.
 - [🔁]: Plays all files sequentially.
 - [📁]: Repeats all files within the current folder.
 - [🔁]: Repeats the current file, only.
 - [📁]: Plays the files sequentially within the [Artist], [Song], [Album] or [Recently added].

Shuffle

You can play files in random order.

 1. Press [Shuffle].

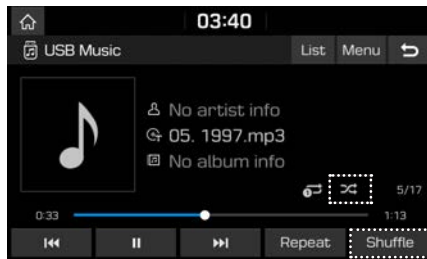

2. Select the desired mode by pressing [Shuffle] repeatedly.
 - [🎲]: Plays all files randomly.

Sound settings

1. Press [Menu] > [Sound settings].
2. For details, refer to page 55 ("Sound").

Viewing USB video

You can watch video files saved in a USB memory device.

1. Connect a USB device to the USB port.
2. Press [MEDIA].

To play video file while a different source is playing, press [MEDIA] > [USB Video].

Switching to menu screen or full screen

Press the screen repeatedly.

(If there is no operation for 10 seconds on menu screen mode, it switches to full screen mode.)

Pause

You can pause the playing file.
For details, refer to page 21 ("Pause").

Skip

You can play the previous or next file.
For details, refer to page 21 ("Skip").

USB operation

Search

You can fast forward/rewind to a specific point of a file.

For details refer to page 21 ("Search").

Seek

You can play the file directly by searching for the desired file.

For details refer to page 21 ("Seek").

List

You can search for a desired video using the video list.

1. Press [List].



- To move to the file list screen currently playing, press [Menu] > [Now playing].
- Press [**1**] to move to an upper folder.




2. Press the desired video.

Repeat

You can play a set of files repeatedly.

1. Press [Repeat].

 


2. Select the desired mode by pressing [Repeat] repeatedly.
 - []: Plays all files sequentially.
 - []: Repeats all files within the current folder.
 - []: Repeats the current file, only.

Info

This menu shows File name, Resolution and Total time of the currently playing video.

Press [Info].

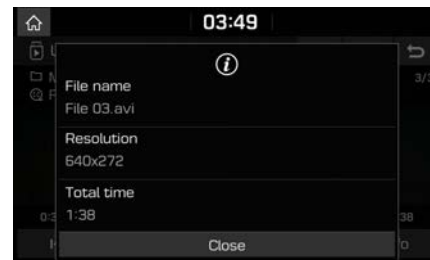

Sound settings

1. Press [Menu] > [Sound settings].
2. For details refer to page 55 ("Sound").

Display settings

1. Press [Menu] > [Display settings].
2. For details refer to page 56 ("Display").

iPod operation

Playing iPod

1. Use an iPod exclusive cable to connect an iPod to the USB connector.
2. Press [MEDIA].
To play an iPod while a different source is playing, press [MEDIA] > [iPod].

Pause

You can pause the playing file. For details, refer to page 21 (“Pause”).

Skip

You can play the previous or next file. For details, refer to page 21 (“Skip”).

Search

You can fast rewind/forward to a specific point of a file. For details, refer to page 21 (“Search”).

Seek

You can play the file directly by searching for the desired file. For details, refer to page 21 (“Seek”).

List

You can play the desired file by searching in the files list in the iPod Menu.

1. Press [List].

 


2. Press the desired file after searching for [Playlist], [Artist], [Album], [Song], or [Other].

Repeat

You can play a set of files repeatedly.

1. Press [Repeat].

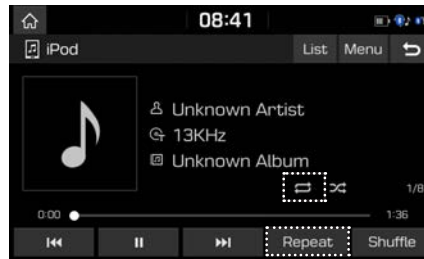


2. Select the desired mode by pressing [Repeat] repeatedly.
 - [Repeat]: Plays all files sequentially.
 - [Repeat Once]: Repeats the current file, only.

Shuffle

You can play files in random order.

 1. Press [Shuffle].

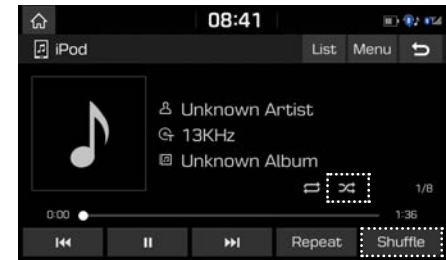

2. Select the desired mode by pressing [Shuffle] repeatedly.
 - [Shuffle]: Plays all files randomly.

 
Sound settings

1. Press [Menu] > [Sound settings].
2. For details, refer to page 55 (“Sound”).

Auxiliary device operation

Playing an AUX source

1. Connect an auxiliary device to the AUX terminal.

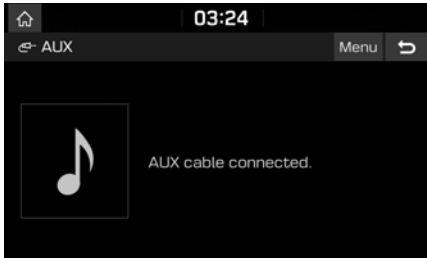

2. Play the auxiliary device.

Note

To play an auxiliary device while a different source is playing, press [MEDIA] > [AUX].

Sound settings

1. Press [Menu] > [Sound settings].
2. For details refer to page 55 ("Sound").

Bluetooth® audio

 
Playing Bluetooth audio

- Music stored in the mobile phone can be played in the car through Bluetooth audio streaming.
- Bluetooth audio can be played only when a Bluetooth phone or Bluetooth audio device has been connected. To play Bluetooth audio, connect the Bluetooth phone to the car system. For more information on connecting Bluetooth, please refer to the owner's manual [Pairing and connecting the unit and a Bluetooth phone] on page 48.
- If Bluetooth is disconnected while playing Bluetooth audio, the audio stream will be interrupted.
- The audio streaming function may not be supported in some mobile phones. Only one function can be used at a time. You can not use the Bluetooth hands-free and the Bluetooth audio function at the same time. For example, if you convert to the Bluetooth hands-free while playing Bluetooth audio, the music stream is paused.
- Playing music from the car is not possible when there are no music files saved in the mobile phone.

Starting the Bluetooth audio

1. Connect your Bluetooth device to the head unit.
2. Press [MEDIA].

The Bluetooth audio screen is displayed.

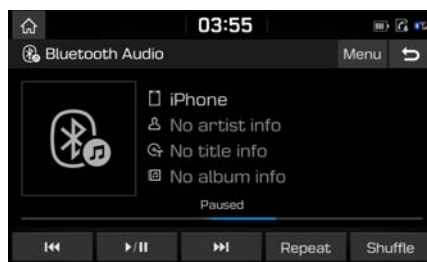

Note

To play Bluetooth audio while a different source is playing, press [MEDIA] > [Bluetooth Audio].

Pause

Press [▶/⏸] during playback.

Press [▶/⏸] to play it again.

Skip

You can play the previous or next file.

For details refer to page 21 ("Skip").

Repeat

You can play a set of files repeatedly. Select the desired mode by pressing [Repeat] repeatedly.

Shuffle

You can play files in random order. Select the desired mode by pressing [Shuffle] repeatedly.

Note

These features may not be supported in some Bluetooth devices.

Connection settings

1. Press [Menu] > [Connection settings].
2. For details refer to page 57 ("Bluetooth connections").

Sound settings

1. Press [Menu] > [Sound settings].
2. For details refer to page 55 ("Sound").

Getting started with navigation

Precautions for safe driving

Please observe and comply with local traffic rules and regulations.

- The route displayed for destination guidance is a reference and the route guidance will take you to the vicinity of your destination. The highlighted route is not always the shortest distance, the least congested, and in some cases, might not be the fastest route.
- Road, name, POI and speed limit may not always be completely updated.
- The car position mark does not indicate your exact location. This system uses GNSS information, various sensors, and road map data to display the current position. However, errors in displaying your location may occur if the satellite is transmitting inaccurate signals or less than two satellite signals are received. Errors that occur in such conditions cannot be corrected.

- The position of the vehicle within the navigation may differ from your actual location depending on various reasons, including the satellite transmission state, vehicle state (driving location and conditions), etc. Additionally, the car position mark may differ from the actual position if the map data is different from the actual road landscape, such as changes due to the construction of new roads. If such differences occur, driving for a short period of time will automatically correct the position of the vehicle through map matching or GNSS information.

What is GNSS?

The GNSS(Global Navigation Satellite System) is a satellite-based navigation system made up of a network of 32 satellites placed into orbit by the Global Positioning System (GPS) of U.S.A, GLONASS of RUSSIA, etc.

GNSS works in any weather conditions, anywhere in the world, 24 hours a day.

There are no subscription fees or setup charges to use GNSS.

About satellite signals

Your unit must acquire satellite signals to operate. If you are indoors, near tall buildings or trees, or in a parking garage, the unit cannot acquire satellite signals.

Acquiring satellite signals

Before the unit can determine your current position and navigate a route, you must take the following steps:

1. Go outside to an area free from tall obstructions.
2. Turn on the unit.

Acquiring satellite signals can take a few minutes.

Getting started with navigation

Zoom in / Zoom out

To set the zoom level on the map screen, turn the right knob of the head unit left/right.

Quick menu

 
1. Press [☰] on the map screen.



2. Press the desired item.
 - [☰]: Press [☰] to open or close the sub menu.
 - [⌂]: Cancels the route when it is set.
 - [🏠]: Moves to the home when it is set.
 - [🔊]: Moves to the sound settings screen.
 - [📍]: Finds a destination by searching for POI near the current position.
 - [▶]: Starts simulation when the route is set. (Page 39)

Sound setting for navigation

1. Press [🔊] on the quick menu.

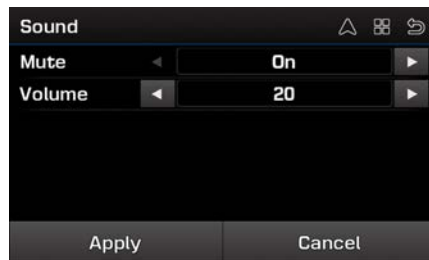

2. Set the guidance volume of navigation by pressing [◀]/[▶], then press [Apply].



Note

You can access the sound setting menu for navigation by pressing [⚙️] > [Sound].

Scrolling the map screen

Drag and drop the map screen to the desired direction, then touch the desired point. Information on the point is displayed on the screen. It can be used as an electronic map.



1.  Displays compass. Press to change the orient of map.
2.  **button**
Press the button to switch the map screen to 2D or 3D.
3. **Selected location mark**
Displays selected location (road or POI) with information panel about it.

Getting started with navigation

4. **[50 m]**

Displays scale ruler.

5. **[↻] button**

Rotates the map screen.

Press **[↻]** repeatedly to rotate or stop it.

6. **[↶] button**

 
Returns to current vehicle position.

7. **[Main Menu] button**

Moves to the main menu of navigation.

Main Menu

1. Press **[NAV]** or touch anywhere on the map screen.

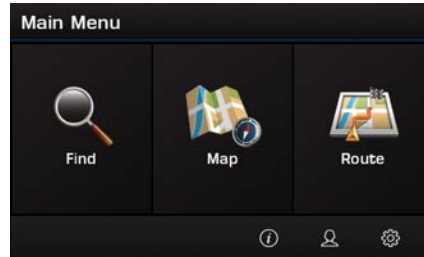

2. Press the desired option.
 - **[Find]**: Finds a destination by using the **[Find]** menu. (Pages 32–36)
 - **[Map]**: Moves to the map screen or navigation/free run screen.
 - **[Route]**: Accesses the current route, itinerary, statistics and map information. (Pages 37–40)
 - **[Settings]** (Settings): Changes the software settings of navigation. (Pages 41–44)
 - **[My Data]** (My Data): Maintains user specific information like **[My Favorite]**, **[My Itinerary]**, **[My Trail]**, and **[Clear Data]**. (Page 45)

- **[i]** (Information): Displays **[GPS]**, **[Statistics]** and information about the navigation system. (Page 45)

Sub-menu operation

All sub-menus of navigation have the following features at the top of the screen.



- **[↶]**: Moves to navigation/free run screen.
- **[Grid]**: Moves to the main menu.
- **[↶]**: Moves to the previous screen.

Searching for destination

Address search

You can find the destination by searching for an address.

 
1. Press [Find] > [Address].



2. Enter the city name, then press [Done].



3. Select the desired item from the list (over and over).

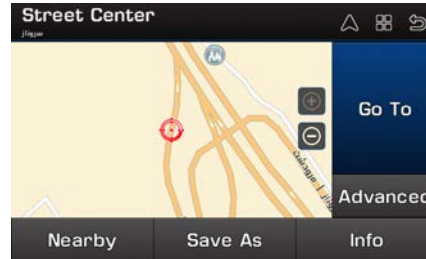

- If you want to search for a list of nearby POI or streets, press [Nearby].
 - If you want to save the location as the [My Favorite], press [Save As].
 - If you want to know information about the selected location, press [Info].
 - If you want to add intermediate waypoint in route to your destination or set the location as the start point to simulate the route, press [Advanced].
4. Press [Go To].
 - When the destination already set exists, press [Replace] to move to another destination recently set.
 - Press [Extend] to extend the destination already set.
 - Press [Cancel] if you don't want the [Replace], [Extend].

POI (Points of interest)

You can set a POI as the destination using different search methods.

Searching for POI by [POI]

When searching for POI by POI name in [POI]

1. Press [Find] > [POI].



2. Enter a POI name, then press [Done].
3. Follow steps 3-4 of the “Address search” on page 32.

Searching for destination

When searching for POI by [Nearby] in [POI]

 
1. Press [Find] > [POI].



2. Press [Nearby], then select one of the [Around City]/[Near Car].
3. 1) When selecting the [Around City], follow steps 2-4 of the “Address search” on page 32.




- 2) When selecting the [Near Car], follow steps 3-4 of the “Address search” on page 32.

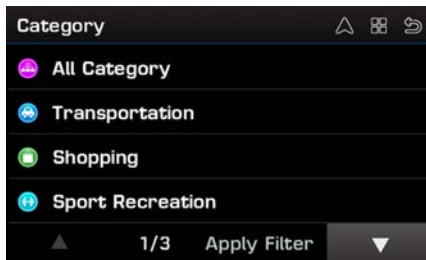

When searching for POI by [Phone] in [POI]

 1. Press [Find] > [POI] > [Phone].

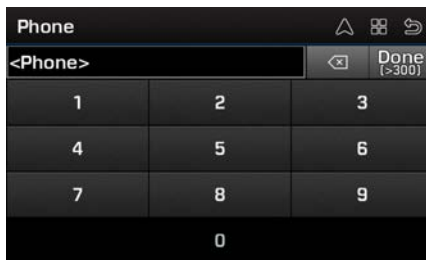

2. Enter a phone number, then press [Done].
3. Follow steps 3-4 of the “Address search” on page 32.

Keyword search

You can find the destination by searching for a key word.

1. Press [Find] > [Keyword].
2. Enter a key word, then press [Done].



Searching for destination

3. Select one of the [POI], [City Center], [Street], [All].



- If you want to stop a search, press [Stop].
4. Follow steps 3-4 of the “Address search” on page 32.

 
Favorite

If your favorites are already in the [Favorite] menu, they can be easily retrieved by pressing them.

First of all, store a favorite through [Save As] of the “Address search” in order to activate the [My Favorite] menu. Then, you can store favorites in the [My Favorite] menu.

Adding favorite

1. Press [] > [My Favorite].

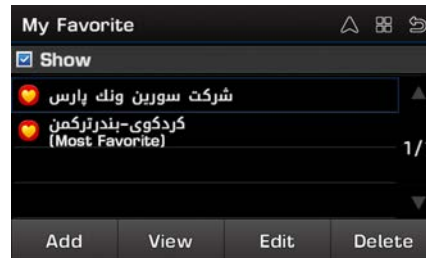

2. Press [Add], then select the desired position through the destination search function.

3. Press [OK].



4. Press [➤] to change the name and select one of the Most Favorite, Home, Special Location, then press [Save].

It is saved in the [My Favorite] menu automatically.

Note

You can also store a favorite in the [My Favorite] menu through [Save As] of the “Address search”. (Page 32)

Finding favorite

1. Press [Find] > [Favorite].
2. Follow steps 3-4 of the “Address search” on page 32.

Searching for destination

Viewing favorite

1. Press [📍] > [My Favorite].
2. Select the desired item from the list, then press [View].
Switches to the map screen on what you select.
3. Press [Info] to check information on what you select. Press [Map] to switches to the map screen again.

Editing favorite

1. Press [📍] > [My Favorite].
2. Select the desired item from the list, then press [Edit].
3. Press [>] to change the name if you want and select one of the Most Favorite, Home, Special Location, then press [Save].

Deleting favorite

1. Press [📍] > [My Favorite].
2. Select the desired item from the list, then press [Delete] > [Yes].

Recent

The destinations set through the search function are automatically saved in the [Recent] menu. You can reset them as the destination from the [Recent] menu.

1. Press [Find] > [Recent].
2. Follow steps 3-4 of the “Address search” on page 32.

Hyundai service

You can set the facilities of Hyundai dealers as the destination.

1. Press [Find] > [Hyundai].
 - You can also search for the facilities of Hyundai dealers by pressing [Keyword].
2. Follow steps 3-4 of the “Address search” on page 32.

 
Note

The information for the dealers facilities may not correspond with a result of map information, since the information can be provided up to date.

Coordinate


You can find a destination by entering the coordinates of latitude and longitude.

1. Press [Find] > [Coordinate].

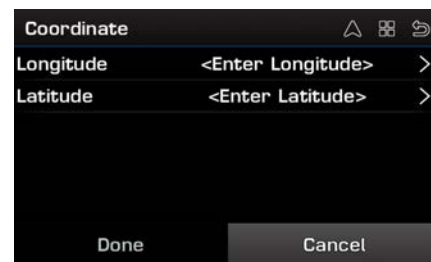

Searching for destination

 2. Press <Enter Longitude> and <Enter Latitude> respectively.

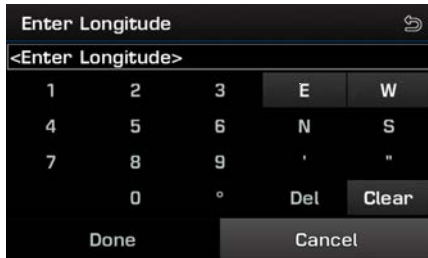

<For example: the Longitude screen>

3. Enter the coordinates and press [Done] respectively.
4. Press [Done] again, then follow steps 3-4 of the “Address search” on page 32.

Intersection

You can use this menu to determine the intersection of two streets.

1. Press [Find] > [Intersection].

 


2. Enter each search box, then press [Done].
3. Follow steps 3-4 of the “Address search” on page 32.

Category

You can search for a POI by the [Category] menu.

1. Press [Find] > [Category].

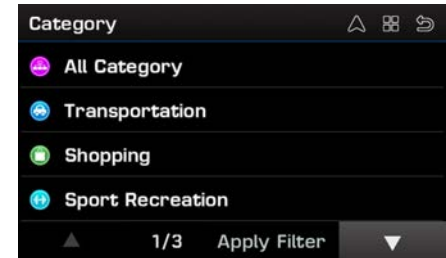

2. Follow steps 3-4 of the “Address search” on page 32.

Current Position

Press [Current Position] if you want to know information on the current position.

1. Press [Find] > [Current Position].
2. Follow steps 3-4 of the “Address search” on page 32.

Using the route menu

Itinerary

The itinerary is a list of users who have defined their way points to their destination. The itinerary can be added/deleted/edited and its order can be changed.

Adding itinerary's way points

1. Press [Route] > [Itinerary].



2. Press [Add].

3. Select a way point through the destination search function, then press [OK].



4. If you want to add a way point (over and over), follow steps 2-3.
5. Press [Go] if you want to start the itinerary's route guidance.

Viewing the map information

 
1. Press [Route] > [Itinerary].
2. Press the desired item from the list.
3. Press [Info] to check information on what you select. Press [Map] to switch to the map screen again.

Saving itinerary to [My Itinerary]

If the itineraries are already saved in the [My Itinerary] menu, they can be easily retrieved to set the route.

First of all, you can save an itinerary to the [My Itinerary] menu when you add the itinerary's way points.

1. Press [Route] > [Itinerary].
2. Press [Save].

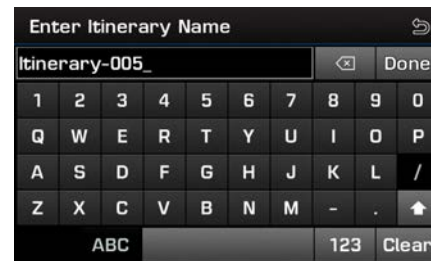

3. Enter the itinerary name, then press [Done]. It is saved in the [My Itinerary] menu automatically.

Using the route menu

Rearranging itinerary's way points

1. Press [Route] > [Itinerary].
2. Press [Edit].



3. Select the desired item from the list, then press [Move Up] or [Move Down].
4. Press [Done].

Vacating itinerary's way points from [Itinerary]

This operation doesn't mean the itinerary saved in the [My Itinerary] menu is deleted, but mean the itinerary from the [Itinerary] menu is vacated.

1. Press [Route] > [Itinerary].
2. Press [Edit].
3. Select the desired item from the list, then press [Delete].
4. Press [Done].

Loading itinerary from [My Itinerary] into [Itinerary]

1. Press [👤] > [My Itinerary].
2. Select the desired item from the list, then press [Load].
 - When the itinerary already set exists in the [Itinerary] menu, press [Yes] to replace it.
 - Press [No] if you don't want to replace it.

Renaming itinerary from [My Itinerary]

1. Press [👤] > [My Itinerary].
2. Select the desired item from the list, then press [Rename].
3. Enter a desired name, the press [Done].

 
Deleting itinerary from [My Itinerary]

1. Press [👤] > [My Itinerary].
2. Select the desired item from the list, then press [Delete].
3. Press [Yes].

Route Options

You can modify various route options according to your needs.

1. Press [Route] > [Route Options].

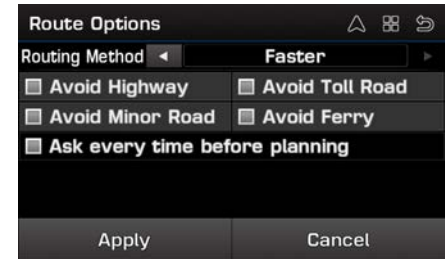

2. Set the desired options, then press [Apply].
 - [Routing Method]: This option allows you to set the routing method as the Shorter (distance), Faster (time).
 - [Avoid Highway]: Highway is not considered as route solutions.
 - [Avoid Toll Road]: Toll roads is not considered as route solutions.
 - [Avoid Minor Road]: Minor roads in communities or paved for walker is not considered as route solutions.
 - [Avoid Ferry]: Ferry is not considered as route solutions.

Using the route menu

- [Ask every time before planning]: This option allows you to set route options each time you plan your route.

Note

The options set by user may not be supported depending on condition.

Turn List

This function allows you to view the distance to the next guide point and the turning direction at that guide point.

1. Press [Route] > [Turn List].



Turn List	Distance	Time
برج میلاد Towards محله کوی نصر منطقه دو	120 m	<1 min
برج میلاد Towards محله کوی نصر منطقه دو	790 m	2 min
برج میلاد محله کوی نصر منطقه دو	2 km	5 min
میدان Towards محله کوی نصر منطقه دو	2 km	5 min
میدان محله کوی نصر منطقه دو	2 km	6 min

2. Press the desired items to view a turn.
A map showing the location of the turn is load.

Best Fit

You can check the entire route between your current location and your destination.

Press [Route] > [Best Fit].



Cancel Route

If you want to stop the route guidance with a route set, press [Route] > [Cancel Route] > [Yes].

Demo

This function allows the user to simulate a route guidance when a route is set.

1. Press [Route] > [Demo].



- [1x], [2x], [4x], [Full]: Set the speed of driving simulation by pressing [◀]/[▶].
- [Repeat]: Select whether to repeat driving simulation.

Using the route menu

2. Press [Start Demo].



- [⏸ / ▶]: Pauses or plays the driving simulation.
- [■]: Ends the driving simulation.
- [◀]: Sets the speed of driving simulation slowly.
- [▶]: Sets the speed of driving simulation fastly.

Stop Demo

When you press [NAV] during driving simulation, press [Route] > [Stop Demo] to stop driving simulation.

Bypass Waypoint

The route is recalculated to bypass waypoint around the location or street when an itinerary has more than 2 way points.

Press [Route] > [Bypass Waypoint] > [Yes].

Detour

The route is recalculated to take a detour around the location or street.

1. Press [Route] > [Detour].



2. Select the desired item from the list. The route is recalculated and the map screen is displayed automatically.

 
Restricted Area

By using this menu, the most efficient traffic plan will be provided to you according to having or not having permission to enter different traffic zones.

When the planned route passes through the restricted area without permission, the navigation system will display a warning message “You don’t have permission! Can you go through restricted area now?”.

If you press [Yes], the system starts navigation according to the original route, otherwise it will calculate another one.

1. Press [Route] > [Restricted Area].

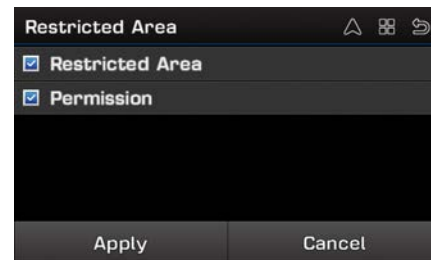


2. Select the desired options, then press [Apply].

Settings for navigation

Settings

The navigation system offers a high degree of personalization settings as well as normal system settings.

 
Press [⚙️] on the main menu screen to change the software settings of navigation.

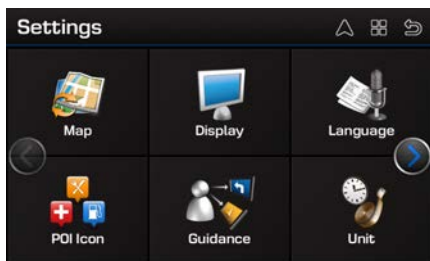

Map

For dual language map, this option could be selected to display the default language on the map screen.

 1. Press [⚙️] > [Map].

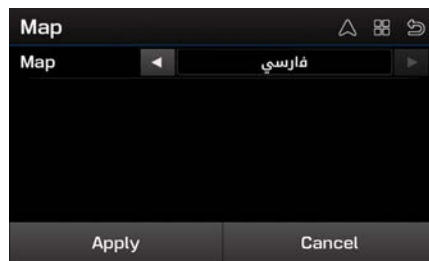


2. Select the desired language displayed on the map screen by pressing [◀]/[▶], then press [Apply].

Display

This menu allows you to change the display features used by the navigation.

You can adjust the colour scheme to suit your current lighting conditions for ease of visibility and font size.

 1. Press [⚙️] > [Display].

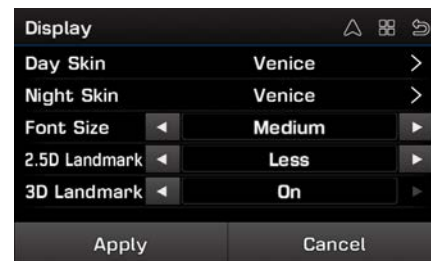


2. Select the desired options by pressing [>] > [Done] or pressing [◀]/[▶].
3. Press [Apply].

Settings for navigation

Language

This menu allows you to change languages in using the navigation system.

 1. Press [⚙️] > [Language].

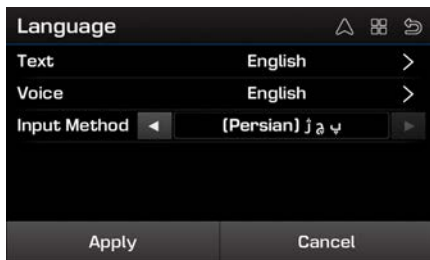


2. Select the desired options by pressing [>]/[<]/[▶], then press [Apply].
 - [Text]: In the navigation system, there are 2 texts to be selected.
 - [Voice]: In the navigation system, there are 5 voice prompts to be selected
 - [Input Method]: In the navigation system, you can select the input method to be the default keyboard when entering words.

POI Icon

All POI icons or several POI icons can be revealed or hidden on the map screen for the improvement of visibility.

 1. Press [⚙️] > [POI Icon].

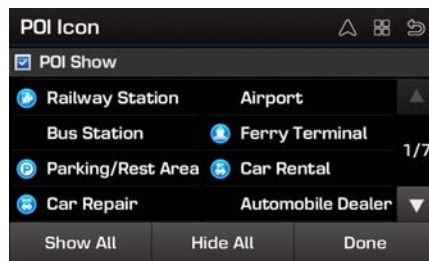


2. Select the desired items to reveal or hide them, then press [Done].
 - [Show All]: Shows all POI icons on the map screen.
 - [Hide All]: Hides all POI icons on the map screen.

Guidance

This menu allows you to adjust Map Orientation and set Auto Zoom, Approaching View, Turn PIP and Next Street as Enable/Disable.

 1. Press [⚙️] > [Guidance].

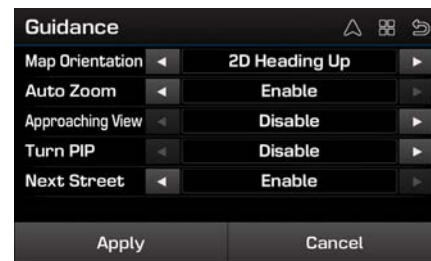


2. Select the desired options by pressing [<]/[>], then press [Apply].

Settings for navigation

Unit

This menu allows you to change the measurement units (distance) in using the navigation system.

 1. Press [⚙️] > [Unit].

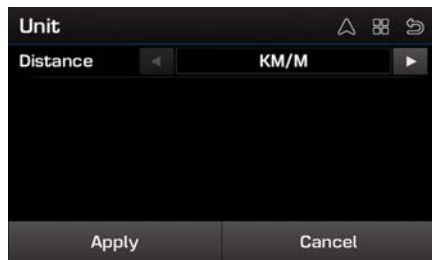


2. Select the desired option by pressing [◀]/[▶], then press [Apply].


Speed Alert

You can set whether you will be notified about speed cameras on the map screen and warned against driving too fast.

 1. Press [⚙️] > [Speed Alert].

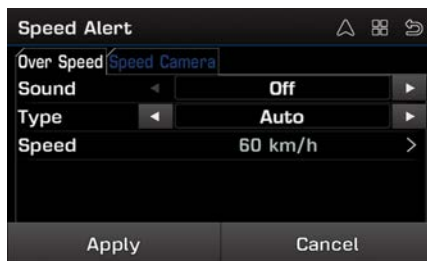

<For example: the [Over Speed] screen>

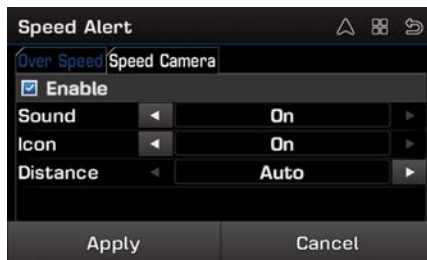 


<For example: the [Speed Camera] screen>

2. On each screen, select the desired options by pressing [◀]/[▶], then press [Apply].

Sound

You can set the sound setting for navigation. For example, you can set Mute as On/Off and adjust the guidance volume of navigation.

 1. Press [⚙️] > [Sound].

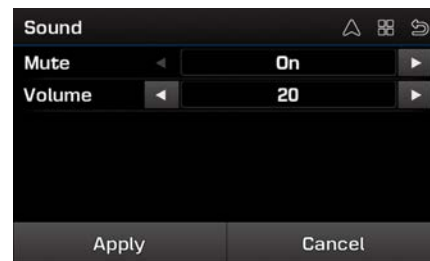

2. Select the desired options by pressing [◀]/[▶], then press [Apply].

Note

You can access the sound setting menu for navigation by pressing [🔊] on the quick menu.

 
Settings for navigation

Trail

To enable the trail function, you can log the trail. You can set the file name to save, interval and file size.

When the file size reach the set value, the navigation system stops logging the trail.

1. Press [⚙️] > [Trail].

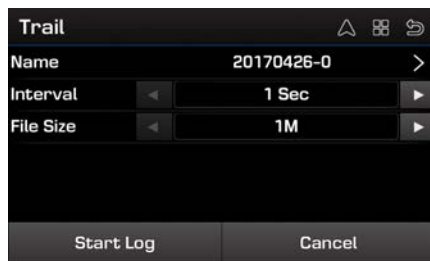

2. Select the desired options by pressing [>]/[<]/[▶], then press [Start Log].
 - [Name]: Change the trail's name, then press [Done].
 - [Interval]: Set the interval as 1sec, 3secs, 5secs, 10secs, 1min, 5mins.
 - [File Size]: Set the file size as 1M, 5M, 10M.
3. Press [Trail] > [Stop Log] if you want to stop the log.

Factory Default

If you would like to clear all the settings in the navigation system, you could restore them through the factory default menu.

 
- Press [⚙️] > [Factory Default] > [Yes] > [OK].

Safe Mode

This menu allow you not to touch the screen when the vehicle speed is above 40km/hr. This is to prevent you form dangerous operation when driving.

To touch the screen is possible when the vehicle speed is below 40km/hr.

1. Press [⚙️] > [Safe Mode].

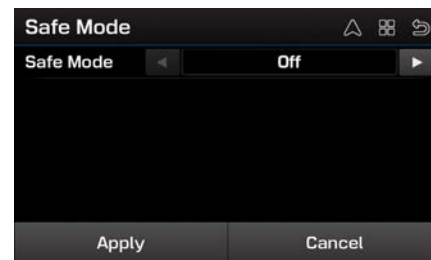


2. Set the safe mode as On/Off by pressing [<]/[▶], then press [Apply].

Checking on navigation system

Information

This menu gives you information about your route, itineraries, destinations, locations, and maps.

 Press [📍] on the main menu screen.

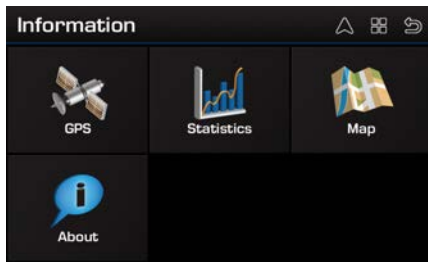


- [GPS]: Accesses information about satellite coverage, current time, longitude, latitude, altitude, quality of the signals received and the status.
- [Statistics]: Accesses information about your current location, heading, velocity, time, etc.
- [Map]: Accesses information about the maps the navigation system is using and what maps you have available.
- [About]: Accesses information about the navigation system, version number, memory usage, etc.

My Data

In My Data, the navigation system offers the UI to access your personal data such as My Favorite, My Itinerary and My Trail.

You can save, edit or delete the personal data for the conveniences of next time usage.

 Press [🗑️] on the main menu screen.

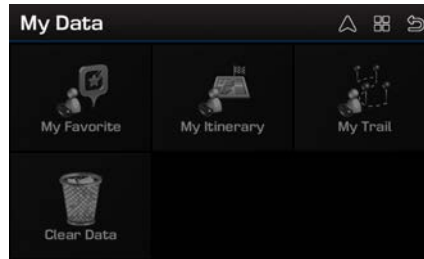

- [My Favorite]: You can edit your favorite destinations by accessing the my favorite menu.
- [My Itinerary]: You can retrieve a planned itinerary by pressing Load button. After having a loaded itinerary (current itinerary), you can add, edit or save the itinerary. If a route already exists before you retrieve an itinerary, a warning message will be shown.

- [My Trail]: You can use [Rename] or [Delete] to manage the trails, also show a trail on the map screen by pressing [Show].
- [Clear Data]: You can clear the data you have saved here.

Android Auto/Apple CarPlay – option

- ※ Android Auto and Apple CarPlay aren't available in some countries.

What is Android Auto/Apple CarPlay?

Securely access your mobile phone while driving. Various functions of your mobile phone are displayed on and operable from the screen of the multimedia device (e.g. navigation, making a call, listening to music etc.)

When connected, an Android Auto/Apple CarPlay icon appears on the screen. Available functions and operations may differ depending on the company model.

For more information, visit the Google or Apple website.

- Google: <http://support.google.com/androidauto/>
- Apple: <http://www.apple.com/ios/carplay/>

Cautions

- Android Auto is a registered trademark of Google Inc.
- Apple CarPlay is a registered trademark of Apple Inc.
- Android Auto and Apple CarPlay are unavailable if the phone OS is not the latest version or if the phone cannot be recognized due to a shutdown caused by a failure or defect in the device itself.

- Your phone may not be recognised if its battery is low. Charge your phone then try again.
- If your phone is shut down due to a defect in the device itself, reset your phone and try again.
- If the USB cable of the Android Auto/Apple CarPlay device is repeatedly disconnected and reconnected in a short period of time, the phone may malfunction. This can also cause a device failure.
- The device recognition time may differ depending on the device type and firmware/OS version.
- Using the USB cable that came with the phone is recommended. (Using a non-genuine product may cause noise or malfunction.)
- Normal operations cannot be guaranteed if the phone is arbitrarily manipulated while Android Auto/Apple CarPlay is active.
- Apple CarPlay cannot be run while making a call via Bluetooth.
- Android Auto or Apple CarPlay may not operate normally due to mobile phone issues.
- Carrier charges may apply when using Android Auto or Apple CarPlay.
- ※ Some features may not operate normally according to the version of iOS and Android.

- The following problems may occur due to phone-related issues:

[Android Auto]

- Intermittent black screens appear when entering Android Auto.
- Differentiation of phones that support Android Auto and those which do not, may not be possible.
- Black screens appear in some areas of the screen due to app errors.

[Apple CarPlay]

- Intermittent black screens appear when entering Apple CarPlay.
- Black screens appear in some areas of the screen due to app errors when navigating between screens in Apple CarPlay.
- The audio volume control may not operate depending on the status of connected phone. Apple CarPlay can control the volume on the head unit regardless of phone volume. Even if the phone volume is set to 0, the sound can be outputted by controlling the volume of head unit.
- The sound output of a call may be cut upon disconnecting Apple CarPlay during a call via Apple CarPlay.

- ※ If services do not work properly due to problems similar to the specified above, check your phone, and if necessary, reconnect your phone after restarting.

Android Auto/Apple CarPlay – option

Using Android Auto or Apple CarPlay

1. Make sure only genuine USB cables are used that were provided by the mobile phone's manufacturer.
2. Enter Android Auto /Apple CarPlay from the home screen or from the submenu [All menus].
3. Now the features such as navigation, music and phone are ready to be used.

NOTICE

- Before connecting your mobile phone, check whether Android Auto or Apple CarPlay is activated in the [Phone projection] menu.
- After connecting the mobile phone, the phone has to be unlocked and the disclaimers on the phone have to be accepted in order to launch Android Auto or Apple CarPlay.
- The screens and features displayed on the multimedia system correspond to the screens and features provided by Google or Apple. They are subject to changes according to the policy of the respective company.

NOTICE–Android Auto

- Bluetooth media features will be disabled when Android Auto is activated. After removing the USB cable, these features will be available again.
- If Android Auto is not activated even after a successful connection, follow these steps:
 - Check whether an error occurred on the phone.
 - Check whether Android Auto has been closed on the phone.
 - Check whether Android Auto is activated in the [Phone projection] menu.
- If Android Auto does not work normally even after a reconnection has been made, visit the Google website <http://support.google.com/androidauto/>

NOTICE–Apple CarPlay

- Bluetooth phone/media features will be disabled when Apple CarPlay is activated. After removing the USB cable, these features will be available again.
- If Apple CarPlay is not activated even after a successful connection, follow these steps:
 - Check whether Apple CarPlay is disabled in the iPhone's application settings.
 - Check whether Apple CarPlay is activated in the [Phone projection] menu.
- If Apple CarPlay does not work normally even after a reconnection has been made, visit the Apple website <http://www.apple.com/ios/carplay/>

Bluetooth® Wireless Technology

Before using the Bluetooth hands-free

What is Bluetooth Wireless Technology?

- Bluetooth Wireless Technology refers to a short-distance wireless networking technology which uses a 2402 MHz ~ 2480 MHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth phones, PDAs, various electronic devices, and automotive environments, Bluetooth Wireless Technology is transmitted at high speeds without having to use a connector cable.
- Bluetooth hands-free refers to a device which allows the user to conveniently make phone calls with Bluetooth mobile phones through the system.
- The Bluetooth hands-free feature may not be supported in some mobile phones.

Precautions for safe driving

- Bluetooth hands-free is a feature that enables drivers to practice safe driving. Connecting the head unit with a Bluetooth phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using Bluetooth Wireless Technology, carefully read the contents of this owner's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the

cause of accidents. Do not operate the device excessively while driving.

- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.

Cautions upon connecting Bluetooth phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth features.
- If you do not want automatic connection with your Bluetooth device, turn the Bluetooth feature off on the Bluetooth device.
- Park the vehicle when pairing the head unit with the mobile phone.
- Some Bluetooth features may occasionally not operate properly depending on the firmware version of your mobile phone. If such features can be operated after receiving a S/W upgrade from your mobile phone manufacturer, unpair all devices and pair again before use.

Pairing and connecting the unit and a Bluetooth phone

To use the Bluetooth feature, make sure the Bluetooth on your phone is turned on. Refer to your phone's user guide.

When no phones have been paired

1. Press [HOME] > [All menus] > [Phone]. Or press [VOLUME DOWN] on the steering wheel remote control.
 - [Cancel]: Cancels Bluetooth connection.
2. In your phone, initiate a search for Bluetooth devices. (The default vehicle name is HYUNDAI MOTORS.)
3. 1) If the SSP (Secure Simple Pairing) is not supported, enter the passkey on your Bluetooth device. (The default passkey is 0000.)
2) If the SSP (Secure Simple Pairing) is supported, press [Yes] on the pop-up screen of your Bluetooth device. (The pop-up screen may differ from the actual information of the Bluetooth device.)

Bluetooth® Wireless Technology

 
- Bluetooth device is connected.
The mobile phone contacts and the calling list are downloaded.
When the connection fails, a failure message is displayed on the screen.

When a phone is already paired


- Press [HOME] > [All menus] > [Phone]. Or press [PHONE] on the steering wheel remote control.
- Press the device from the Bluetooth device list pop-up screen.
If you want to pair additional device, press [Add new]. Follow the steps 3-4 of “When no phones have been paired”.

When pairing additional device

- 1) When using [SETUP] button, press [SETUP] > [Bluetooth] > [Bluetooth connections].

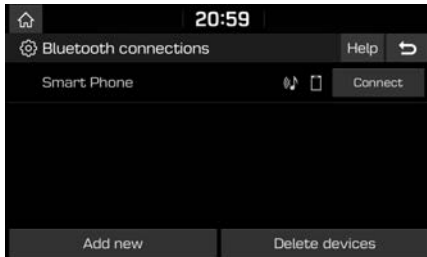

 - 2) When using [PHONE] button, press [PHONE].

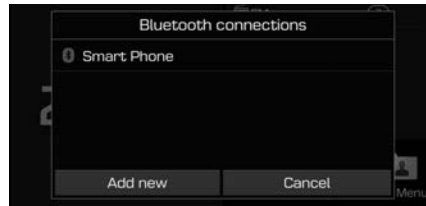

- 1) Select the device you want to connect.
- 2) If there is no device you want to connect, press [Add new].
- In your phone, initiate a search for Bluetooth devices. (The default vehicle name is HYUNDAI MOTORS.)
- 1) If the SSP (Secure Simple Pairing) is not supported, enter the passkey on your Bluetooth device. (The default passkey is 0000.)
2) If the SSP (Secure Simple Pairing) is supported, press [Yes] on the pop-up screen of your Bluetooth device. (The pop-up screen may differ from the actual information of the Bluetooth device.)

- Bluetooth device is connected.
The mobile phone contacts and the calling list are downloaded.
When the connection fails, failure message is displayed on the screen.

Notes

- For safety reasons, pairing a Bluetooth phone is not possible when the vehicle is in motion. Park the vehicle in a safe location to pair a Bluetooth phone. It is possible to pair up to 5 mobile phones. In order to pair new phone, you must first delete one of the previously paired phones.
- Some functions may not be supported due to limited Bluetooth compatibility.
- When a Bluetooth device is connected, a new device cannot be paired.

Bluetooth® Wireless Technology

Disconnecting the connected phone

1. Press [SETUP] > [Bluetooth] > [Bluetooth connections].
2. Select the connected phone.



3. Press [Yes].

Note

If you want to connect the disconnected phone again, select the disconnected phone.

Deleting Bluetooth devices

If you do not need to use a phone any longer, you can delete it. Note that deleting a Bluetooth device will delete all calling list and contact entries.

1. Press [SETUP] > [Bluetooth] > [Bluetooth connections] > [Delete devices].



2. Select the desired devices, then press [Delete] > [Yes].
 - [Mark all]: Marks all items.
 - [Unmark all]: Unmarks all items.

Making a call by entering phone number

Connect your unit and Bluetooth phone before making a call.

1. Enter the phone number using the keypad on the phone screen.
2. Press [CALL] on the phone screen or [CALL] on the steering wheel remote control.

Note

If you press the wrong number, press [X] to delete one digit of the entered number.

Making a call by redialling

Press and hold [CALL] on the phone screen or [CALL] on the steering wheel remote control.

Note

Redialling is not possible when there is no number in the dialled calls list.

Bluetooth® Wireless Technology

Answering/Rejecting a call

1. If there is an incoming call, a pop-up message will appear.
2. Press [Accept] in the pop-up message or [↻] on the steering wheel remote control.
To reject a call, select [Reject] in the pop-up message or [⏏] on the steering wheel remote control.

 
Notes

- If the Call-ID service is available, the caller's phone number is displayed.
- If caller's phone number is saved in the phone book, the caller's name is displayed on the unit.
- Upon receiving a call, the [Reject] function may not be supported in some mobile phones.

Switching call to the mobile phone

1. If you want to switch the call to the mobile phone while talking on the car hands-free, press [Use private] on the screen or press and hold [↻] on the steering wheel remote control.

As shown below, the call is switched to the mobile phone.

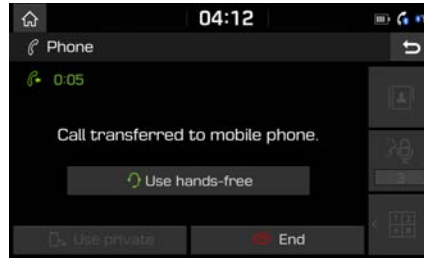

2. If you want to switch the call to the car hands-free while talking on the mobile phone, press [Use hands-free] on the screen or press and hold [↻] on the steering wheel remote control.
The call is switched to the car hands-free.






Ending a call

1. To end a call, press [End] on the phone screen or [⏏] on the steering wheel remote control.
2. The call is ended.

Using the menu during a phone call

When making a call, you can use the following menu items.




Position	Description
1 	Switches a voice call from the car hands-free to the mobile phone.
2 	Ends a call.
3 	Moves to a screen for entering ARS numbers.
4 	Displays the Mic volume settings. You can adjust the in-call volume that the other party hears.
5 	Displays the contacts list.

Bluetooth® Wireless Technology

Calling list

Making a call from calling list

 1. Press **[☎]** on the phone screen.

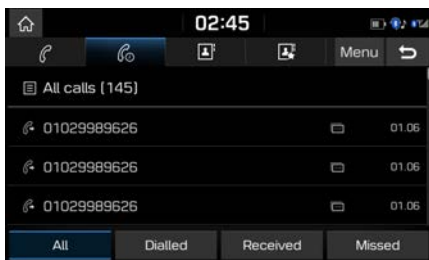

2. Press **[All]**, **[Dialled]**, **[Received]**, or **[Missed]**.
 - **[All]**: Displays all calling list.
 - **[Dialled]**: Displays the outgoing calling list.
 - **[Received]**: Displays the incoming calling list.
 - **[Missed]**: Displays the missed calling list.
3. Press the entry you want to call.

 
Note

The calling list may not be saved in some mobile phones.

Downloading call history

You can download the call history information from your mobile phone.

1. Press **[☎]** on the phone screen.
2. Press **[Menu]** > **[Download]** > **[Yes]**.

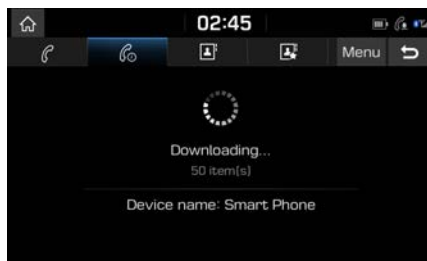

Notes

 
- Up to 50 received, dialled, and missed call history lists can be downloaded.
- The download feature may not be supported in some mobile phones. Check to see that the Bluetooth device supports the download feature.

Contacts

Making a call from contacts

1. Press **[☎]** on the phone screen.

The contacts are displayed on the screen.

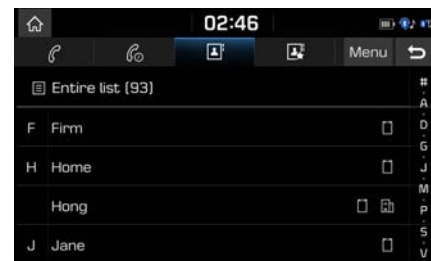


2. Select the contact you want to call from the list of contacts.

Bluetooth® Wireless Technology

Downloading mobile phone contacts

You can download contacts from your mobile phone.

 1. Press **[F1]** on the phone screen.
2. Press [Menu] > [Download] > [Yes].

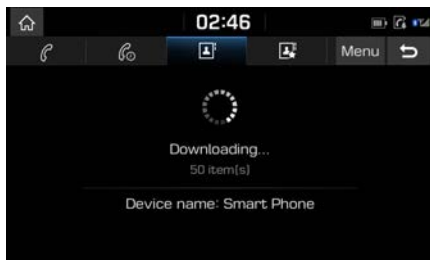

Notes

- Upon downloading mobile phone contacts, the previous data is deleted.
- This feature may not be supported in some mobile phones.

Searching by name or number

You can search contacts for the name or number that you enter.

1. Press **[F1]** > [Menu] > [Search] on the phone screen.



2. Enter the name or number, then press [OK].
3. Select the contact you want to call.

 
Favourites

Calling favourites

If the phone number has already been stored in the favourites, it can be easily called by tapping on it.

First of all, add the phone number in the favourites. Refer to the “Adding as a favourite” on page 54.

1. Press **[F1]** on the phone screen.

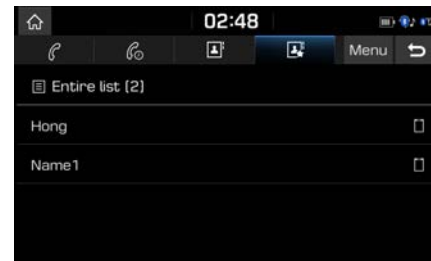

<Favourites screen>

2. Select the desired favourite.

Bluetooth® Wireless Technology

Adding as a favourite

Up to 10 contacts can be added to favourites menu.

1. Press **[Add]** > [Add new] on the phone screen.



2. Select one of the contacts.



 
3. Press **[Star]** > [Close] > **[Back]**.

Note

If the phone numbers have already been stored in the favourites, you can add or delete them by pressing [Menu] > [Edit].

Deleting favourites

1. Press **[Add]** on the phone screen.
2. Press [Menu] > [Delete items].

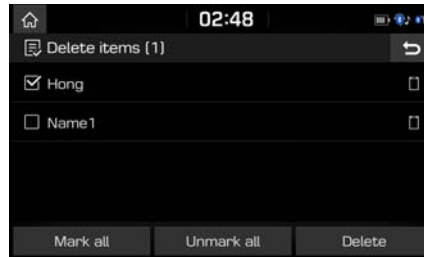

3. Select the desired item, then press [Delete] > [Yes].
 - [Mark all]: Marks all items.
 - [Unmark all]: Unmarks all items.

 
Phone settings

This menu describes phone settings.

1. Press **[Settings]** on the phone screen.
2. For details, refer to the “Bluetooth” on page 57.

Settings


[Settings] menu overview

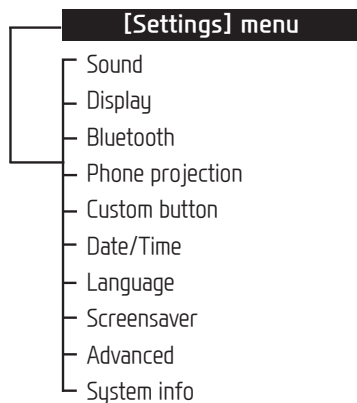

Sound

This menu is used to adjust the sound effects for the whole system. (It may vary depending on the type of vehicle.)

 1. Press [SETUP] > [Sound].

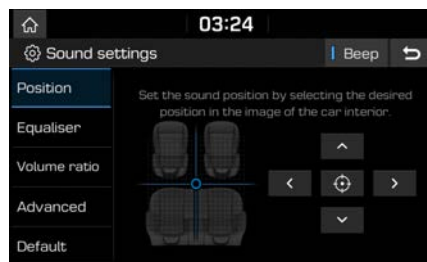

2. Select the desired items.

- [Position]: This menu allows you to set the sound position. For example, you can set the sound close to the driver-seat so that the volume is relatively lower in the passenger or rear seats.
 - Press [**▲**]/[**▼**]/[**◀**]/[**▶**] to control the sound positioning.
 - Drag and drop the dot to a desired place to adjust the sound position.
 - Press [**⊕**] to concentrate the sound in the centre of the vehicle.

 
- [Equaliser]: This menu allows you to set the Bass [BASS]/Middle [MID]/Treble [TREBLE].
 - Press [-]/[+] to control bass/middle/treble settings.
 - Drag the slide bar to control bass/middle/treble settings.
 - Press [Centre] to initialize the settings.
- [Volume ratio]:
 - [Navigation prioritised]: Lowering of all other audio volumes during playback of navigation prompts.
 - [Reverse warning priority]: Lowering of audio volumes when the shift lever is set to reverse.
 - [Volume limitation on startup]: If the audio volume is exceeding the defined maximum upon vehicle start, it is lowered accordingly.
- [Advanced]: This menu allows you to control automatically the audio volume according to the speed of the vehicle. Press [SDVC].
- [Default]: Resets the sound settings to factory default.
- [Beep]: This menu allows you to play a beep sound whenever you operate the touch screen. Press [Beep].

Settings

Display

This menu is used to change the display environment settings.

1. Press [SETUP] > [Display].

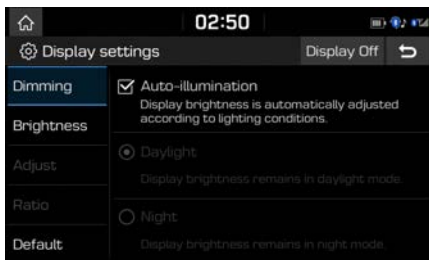

2. Select the desired items.

- [Dimming]: Sets the display brightness according to mode changes.
 - [Auto-illumination]: Adjusts the brightness automatically according to surrounding brightness.
 - [Daylight]: Always keeps the brightness high regardless of surrounding brightness.
 - [Night]: Always keeps the brightness low regardless of surrounding brightness.

- [Brightness]:
 - Press [-]/[+] to set display brightness for daylight or night mode.
 - Drag the slide bar to control the display brightness settings.
 - Press [Centre] to initialize the settings.
- [Adjust]: This menu can be set in video mode.
 - Press [-]/[+] to control [Brightness]/[Contrast]/[Saturation] settings.
 - Drag the slide bar to control [Brightness]/[Contrast]/[Saturation] settings.
 - Press [Centre] to initialize the settings.
- [Ratio]: Sets the display ratio according to mode changes.
 - [Normal]: Adjusts the screen to 4:3.
 - [Full]: Adjusts the screen to full screen display.
 - [Wide]: Adjusts the screen to 16:9.
- [Default]: Resets the display settings to factory default.
- [Display Off]: Press [Display Off] to turn the screen off. Press the screen itself again to turn the screen on.

Settings

Bluetooth

This menu describes Bluetooth phone settings.

Bluetooth connections

This menu is used to pair and connect the head unit and a Bluetooth phone.

Press [SETUP] > [Bluetooth] > [Bluetooth connections].



 
- 1 Paired device list: Displays the paired Bluetooth device list. When selecting from the list, the device is either connected or disconnected.
- 2 Bluetooth audio connection status: An icon appears when you make a Bluetooth audio connection.
- 3 Bluetooth hands-free connection status: An icon appears when you make a Bluetooth hands-free connection.

- 4 [Add new]: Registers a new Bluetooth device.
- 5 [Delete devices]: Moves to "Delete devices".
- 6 [Help]: Switches to the Bluetooth connection help screen.

Auto connection priority

If auto connection priority is turned on, a Bluetooth device will automatically be connected according to the option setting when the car ignition is turned on.

1. Press [SETUP] > [Bluetooth] > [Auto connection priority].

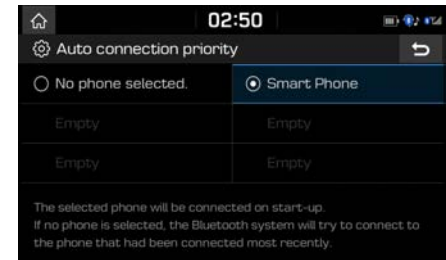

2. Select the desired items.

Note

If there is no phone selected, the previously connected phone will be automatically connected. If there are no previously connected phones, the system will try to connect to devices in the list in order.

Settings

System Bluetooth info

Vehicle name

You can change the Bluetooth device name of the vehicle.

1. Press [SETUP] > [Bluetooth] > [System Bluetooth info] > [Vehicle name].



2. Enter the desired name using the keypad, then press [OK].

Note

The default vehicle name is set to HYUNDAI MOTORS.

Passkey

You can change the passkey used for Bluetooth device authentication.

1. Press [SETUP] > [Bluetooth] > [System Bluetooth info] > [Passkey].



2. Enter the passkey using the keypad.

Note

The passkey is a 4-digit authentication code used for a Bluetooth connection between the mobile phone and car system. The default passkey is set to 0000.

Default

 
This menu is used to reset the Bluetooth settings to factory default.

Press [SETUP] > [Bluetooth] > [Default] > [Yes].

Phone projection

This menu describes phone projection settings.

1. Press [SETUP] > [Phone projection].

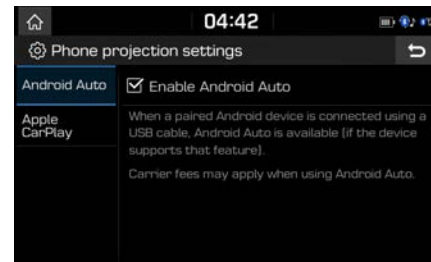

2. Press the desired items.

 
- [Android Auto]: If Android Auto is checked, you can use the functions of your Android device with a USB cable connected.
- [Apple CarPlay]: If Apple CarPlay is checked, you can use the functions of your iPhone with a USB cable connected.

Settings

Custom button

You can assign a function to custom button.

1. Press [SETUP] > [Custom button].

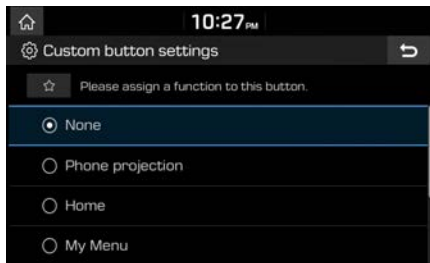


2. Select the desired function.

Date/Time

This menu describes date and clock settings.

 1. Press [SETUP] > [Date/Time].

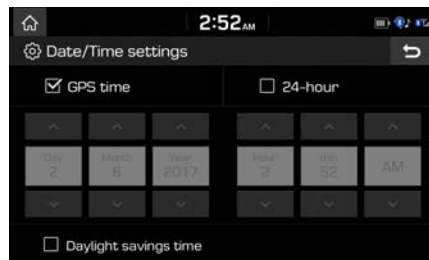


2. Select the desired items.
 - [GPS time]: Displays time according to the received GNSS (Global Navigation Satellite System) time.
 - [24-hour]: Switches to 12 hour or 24 hour.
 - [Daylight savings time]: Turns the daylight savings time on or off. When daylight savings time is turned on, the clock is moved forward one hour.

Language

This menu is used to set the language of the system.

 1. Press [SETUP] > [Language].

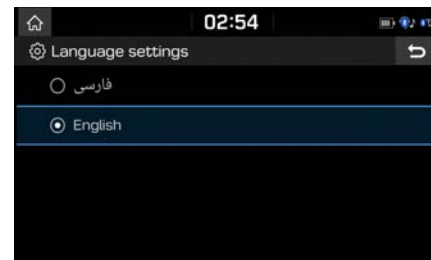


2. Select the desired language.

Settings

Screensaver

This menu is used to select the screen displayed when the screen or power is turned off.

 1. Press [SETUP] > [Screensaver].

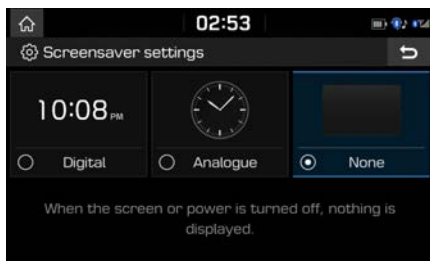


2. Select the desired item.
 - [Digital]: The digital clock and date is displayed.
 - [Analogue]: The analogue clock and date is displayed.
 - [None]: Nothing is displayed.

Advanced

This menu describes advanced settings.

 1. Press [SETUP] > [Advanced].

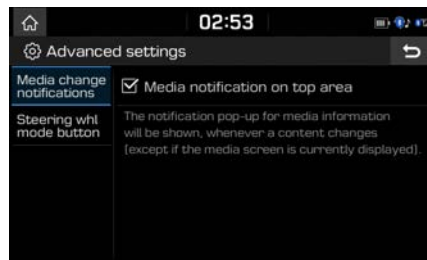

2. Select the desired items.
 - [Media change notifications]: If the box is checked, the notification pop-up for media information will be shown on the top of the screen, whenever a content changes.
 - [Steering whl mode button]: Selects the desired feature when you press [MODE] on the steering wheel to toggle media modes.

System info

Version info

You can view software version and firmware version.

Press [SETUP] > [System info] > [Version info].



Settings

Update

For system's software security, new function addition, and map update, you need an update.

1. Press [SETUP] > [System info] > [Version info].



2. Insert the SD card with latest file downloaded into the SD card slot.
3. Press [Update] > [OK].

Once updating is completed, the system will automatically restart.

Notes

- This product requires regular updates for software corrections, new functions and map updates. Updating may require up to 1 hour depending on the data size.
- Turning off the power or ejecting the SD card during the update process may result in data loss.
- Please use only the SD card that was included with the vehicle purchase.
- The use of a separately purchased SD card may result in damage due to heat related deformation.
- Product malfunctions caused by the use of separately purchased SD cards shall not be covered within the product warranty.
- Repeatedly connecting/disconnecting the SD card in a short period of time may cause damage to the device.

Default

This menu is used to reset all settings specified by the user.

1. Press [SETUP] > [System info] > [Default].
2. Press [Default] > [Yes].

Note

This [Default] menu cannot be operated if any USB device, iPod or Android Auto/Apple CarPlay device has been connected to the system.

Using rear camera

About rear camera

Rear camera is parking guide system, when the ignition switch is on and a car start-up with being in R position of a transmission lever.

Notes

- Rear camera has an optical lens to secure wide view, so there is a little difference in the distance shown on the screen. For safety, make sure to check the rear, left, and right view by yourself.
- The colour of the parking guide line on the screen may differ from reality.



Note

When driving backwards, it displays drive and neutral steering path.

Line	Instruction
1 Red line	About 0.5 m from the vehicle rear bumper
2 Yellow line 1	About 1 m from the vehicle rear bumper
3 Yellow line 2	About 3 m from the vehicle rear bumper
4 Yellow line 3	Vehicle path of the left side wheel in the vehicle's front passenger seat side
5 Yellow line 4	Vehicle path of the right side wheel in the vehicle's front passenger seat side
6 Blue line	Steering neutral path

Before thinking there is a product defect

The current car position as shown on the navigation may differ from the actual position under the following conditions.

- When driving on Y-shaped roads with narrow angles the current position may be displayed in the opposite direction.
- Within city streets, the current position may be displayed on the opposite side or on an off-road position.
- When changing the zoom level from maximum to a different level, the current position may be displayed on a different road.
- If the vehicle is loaded onto a ferry or a car transport vehicle, the current position may be stalled on the last position prior to loading.
- When entering a road after passing an underground parking structure, building parking structure, or roads with many rotations.
- When driving in heavy traffic with frequent starts and stops.
- When driving under slippery conditions, such as heavy sand, snow, etc..
- When the tires have recently been replaced (Especially upon use of spare or studless tires).
- When using tires of improper size.

- When the tire pressure for the 4 tires are different.
- When the replacement tire is worn or used (Especially studless tires having passed a second season).
- When driving near high-rise buildings.
- When a roof carrier has been installed.
- When a long distance route is calculated while driving on an expressway, in such cases, continued driving will automatically enable the system to conduct map matching or use updated GNSS information to provide the current position (In such cases, up to several minutes may be required).

Correct route guidance may not occur due to search conditions or driving position. The following occurrences are not malfunctions:

- Guidance to go straight may be given while driving on a straight road.
- Guidance may not be given even when turning onto an intersection.
- There are certain intersections in which guidance may not occur.

- A route guidance signaling for a U-turn may occur in some no U-turn intersections.
- Route guidance signaling entrance into a no-entry zone may occur (no-entry zone, road under construction, etc.).
- Guidance may be given to a position that is not the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks away from the designated route. (e.g. if a turn is made at an intersection while the navigation provided guidance to go straight.)

These situations may occur after conducting route calculation. The following occurrences are not malfunctions:

- Guidance may be given to a position differing from the current position when turning at an intersection.
- When driving in high speeds, route recalculation may take a longer period of time.

Before thinking there is a product defect

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your authorised Hyundai dealer.

Problem	Possible Cause
There are small red, blue, or green dots on the screen	Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels.
The sound or image is not working	<ul style="list-style-type: none">• Has the switch for the vehicle been turned to [ACC] or [ON]?• Has the system been turned off?
The screen is being displayed but sound is not working	<ul style="list-style-type: none">• Has the volume been set to a low level?• Has the volume been muted?
When the power is turned on, the corners of the screen are dark	<ul style="list-style-type: none">• The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction.• If the screen is very dark, contact your nearest authorised Hyundai dealer for assistance.
Sound is working from only one speaker	Are the positions of fader or balance sound controls adjusted to only one side?
Sound does not work in AUX mode	Are the audio connector jacks fully inserted into the AUX terminal?
The external device is not working	Is the external device connected with a standard connector cable?
When turning power on, the most recent mode screen is not displayed	<p>Within modes that play files by reading external sources, such as USB, iPod, or Bluetooth® streaming mode, the most recently played mode screen prior to turning off power may not properly load.</p> <ul style="list-style-type: none">• If the corresponding device is not connected, the mode operated prior to the most recent mode will operate.• If the previous mode still cannot be properly played, the mode operated prior to that will operate.

Troubleshooting

Problem	Possible Cause	Countermeasure
The power does not turn on.	The fuse is disconnected.	<ul style="list-style-type: none">• Replace with a suitable fuse.• If the fuse is disconnected again, please contact your authorised Hyundai dealer.
	Device is not properly connected.	Check to see that the device has been properly connected.
The system does not play.	The vehicle battery is low.	Charge the battery if the problem persists, contact your authorised Hyundai dealer.
The image colour/ tone quality is low.	The brightness, saturation, and contrast levels are not set properly.	Properly adjust the brightness, saturation, and contrast levels through display setup.
Sound does not work.	The volume level is set to the lowest level.	Adjust the volume level.
	The connection is not proper.	Check to see that the device has been properly connected.
	The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode.	The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode.

Troubleshooting

Problem	Possible Cause	Countermeasure
The sound or image quality is low.	Vibration is occurring from where the conversion switch has been installed.	The sound may be short circuited and the image distorted if the device vibrates.
	Image colour/tone quality is low.	The device will return to normal once vibrations stop.
The USB does not work.	USB memory is damaged.	Please use after formatting the USB into FAT 16/32, exFAT or NTFS format.
	USB memory has been contaminated.	Remove any foreign substances on the contact surface of the USB memory and multimedia terminal.
	A separately purchased USB hub is being used.	Directly connect the USB memory with the multimedia terminal on the vehicle.
	A USB extension cable is being used.	Directly connect the USB memory with the multimedia terminal on the vehicle.
	A USB which is not a metal cover type USB memory is being used.	Use standard USB memory.
	An HDD type, CF, SD memory is being used.	Use standard USB memory.
	There are no music files which can be played.	Only MP3, WMA, OGG, FLAC and WAV file formats are supported. Please use only the supported music file formats.
The iPod is not recognised even though it has been connected.	There are no titles which can be played.	Use iTunes to download and save MP3 files into the iPod.
	The iPod firmware version has not been properly updated.	Use iTunes to update the firmware version and reconnect the iPod with the device.
	The iPod device does not recognise downloads.	Reset the iPod and reconnect with the device.

Trademarks and licenses

Bluetooth® Wireless Technology



The Bluetooth Wireless Technology word mark and logos are registered trademarks owned by Bluetooth Wireless Technology SIG, Inc.

iPod®

iPod® is a registered trademark of Apple Inc.

OPEN SOURCE SOFTWARE NOTICE

To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

DivX®



This DivX Certified® device can play DivX® HD video files (including .avi, .divx).

Download free software at www.divx.com to create, play and stream digital videos.

DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.

Covered by one or more of the following U.S. patents: 8,731,369; RE45,052.

Specification

Common	Power supply	DC 12 V
	Operating power	DC 9 V ~ DC 16 V
	Current consumption	Maximum 5 A
	Dark current	Maximum 0.5 mA
	Operating temperature	-20 °C ~ +65 °C
	Storage temperature	-30 °C ~ +75 °C
	Dimensions (Head unit)	317.55 mm (W) X 177.13 mm (H) X 208.08 mm (D)
	Weight (Head unit)	2.04 kg
Bluetooth	Supported profile	HFP 1.6, A2DP 1.2, AVRCP 1.5, PBAP 1.1
	Supported Bluetooth specification	3.0
	Frequency range	2402 MHz ~ 2480 MHz
	Output Power (Class2)	Maximum 4.0 dBm
	Number of channels	79

Radio	AM	
	Tuning range	522 kHz ~ 1620 kHz
	Usable sensitivity	35 dBuV
	Signal-to-noise ratio	Minimum 45 dB
	FM	
	Tuning range	87.50 MHz ~ 108.00 MHz
	Usable sensitivity	10 dBuV
	Signal-to-noise ratio	Minimum 50 dB
TFT-LCD	Screen size	203.2 mm (8 inches) 176.4 (W) x 99.36 (H) mm (Active area)
	Resolution	384,000 pixel
	Operating method	TFT (Thin Film Transistor)
	Viewing angle	R/L/U/D 89 (Typ)
	Internal lighting	LED

- Designs and specifications are subject to change without prior notice.

LIMITED WARRANTY

ORIGINAL NAVIGATION HEAD UNIT SUPPLIED BY VEHICLE DEALER

Product :
Product No. :

WHAT THIS WARRANTY COVERS

1. Vehicle Dealer Shop (“Dealer”) warrants to you that the Hardware will be free from defects in workmanship and materials under Normal use (“Defects”) from the original date of the registration of the motor vehicle (“Warranty Period”). During the Warranty Period the Hardware will be repaired or replaced at DEALER’s choice (“Limited Warranty”) without charge to you for either parts or labor. This Limited Warranty covers the replacement of the head unit including of the Hardware only.

WHAT THIS WARRANTY DOES NOT COVER

2. The Limited Warranty does not apply to normal wear and tear, does not apply when the Hardware is opened or repaired by someone not authorized by DEALER and does not cover repair or replacement of any Hardware or part thereof damaged by: misuse, moisture liquids, proximity or exposure to heat and accident, abuse, non-compliance with the instructions supplied with the Hardware, neglect or misapplication. The Limited Warranty does not cover physical damage to the surface of the Hardware. This Limited Warranty does not cover any software that may accompany or be installed on the Hardware. The Limited Warranty does not cover the installation, removal or maintenance of the Hardware or any costs related herewith.

HOW TO MAKE A WARRANTY CLAIM

3. In order to make a claim of a Defect, you must contact DEALER. If a defect arises and a valid claim under this Limited Warranty is received by DEALER after the first 3yr/100,000km of the Warranty Period, DEALER is entitled to charge you for any reasonable shipping and handling costs made in connection with the repair or replacement of the Hardware. You must comply with any other return procedures stipulated by DEALER, if any.

DEALER LIMITED WARRANTY

YOUR LEGAL RIGHTS

4. Some countries may not allow the exclusion or limitation of damages. If any part of this Limited Warranty is held to be invalid or unenforceable, the remainder of the Limited Warranty shall nonetheless remain in full force and effect.
5. This Limited Warranty is the only express warranty made to you and is provided in place of any other express warranties or similar obligations (if any) created by any advertising, documentation, packaging, or other communications.
6. Except for the Limited Warranty and to the maximum extent permitted by applicable law, DEALER and its suppliers provide the Hardware “AS IS AND WITH ALL FAULTS”, and hereby disclaim all other warranties and conditions, whether express, implied or statutory, including, but not limited to, any (if any) implied warranties, duties or conditions of satisfactory quality, of fitness for a particular purpose, of reliability or availability, of accuracy or completeness of responses, of results, of workmanlike effort, of lack of viruses, and of reasonable care and skill, all with regard to the Hardware, and the provision of or failure to provide support or other services, information, software, and related content through the Hardware or otherwise arising out of the use of the Hardware. Also, there is no warranty or condition of quiet enjoyment, quiet possession, or non-infringement with regard to the Hardware.
7. This Limited Warranty does not affect any legal rights under applicable national legislation governing the sale of consumer goods.
8. This Limited Warranty cannot be transferred to any other person.

LIMITATION OF LIABILITY

9. Neither DEALER nor its suppliers shall be liable to you or to any third party for any damages either direct, indirect, incidental, consequential or otherwise (including in each case, but not limited to, damages for the inability to use the equipment or access data, loss of data, loss of business, loss of profits, business interruption or the like) arising out of the use of or inability to use the Hardware even if DEALER has been advised of the possibility of such damages.
10. Notwithstanding any damages that you might incur for any reason whatsoever, the entire liability of DEALER and any of its suppliers shall be limited to the amount actually paid by you for the Hardware.
11. DEALER shall not be liable for
 - (I) any fraud on the part of its employees and/or agents; or
 - (II) any fraudulent misrepresentation on the part of its employees and/or agents.
12. Notwithstanding the above, neither party’s liability for death or personal injury resulting from its own negligence shall be limited.

FCC Warning

FCC approval

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device should be installed and operated with minimum 20 cm between the radiator and your body.

MME Auto Spare Parts Trading LCC

Dubai Business bay, aspect tower D, office 2804
E-MAIL:service@motrex.co.kr