

We are pleased that you have purchased the LG MC500 mobile phone, state-of-the-art and compact.

It is designed with the latest digital mobile communication technology, aiming to facilitate your operation.

### **Part 15.21 statement**

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

### **Part 15.105 statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. if this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Part 15 Class B Compliance**

This device and its accessories comply with part15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received,  
including interference that may cause undesired operation.

## **Body-worn Operation**


This device has been tested for typical body-worn operations

with the distance of 0.79inches (2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79inches(2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain metallic components.

# Getting to know your phone

 **Caution:** Placing a heavy object on your mobile phone or keeping it in your pocket may affect the functions of its LCD display and touch screen.

## **Answer key**

Make or answer  
a call.

•  
Delete texts or  
digits from the  
display and return  
to the upper-level  
menus.

## **End/Power key**

•  
Press and hold it to power  
on or off your mobile  
phone. Press it to end a  
conversation or reject  
an incoming call. Press it  
to return to the standby  
screen.

**port/Earpiece port**

**TIP:** To connect a USB data cable, ensure that your mobile phone is powered on.

**Side keys (volume keys)**

**Memory card slot**

**Lock/unlock key**

**Camera key**

**Touch pen**

# Getting to know your phone

**Camera lens**

**Battery  
compartment  
cover**

**Battery**

**UIM card slot**

# Installing UIM Card and Battery

## 1 Removing battery compartment cover

As shown in the figure below, remove the battery compartment cover.

## 2 Removing battery

Lift the battery bottom and take it out from the battery compartment.

## 3 Installing UIM card

Insert the UIM card into the UIM card slot. Ensure that the golden contact area faces downwards.



**Caution:** Do not take out the battery when your mobile phone is powered on to avoid damaging your mobile phone.

# Installing UIM Card and Battery

## 4 Installing battery

Insert the battery top into the top of the battery compartment. Ensure that the battery contact point aligns with the top of the battery compartment. Press the battery bottom until the battery clicks into place.

## 6 Charging

Open the cover of the charger slot on the side of the MC500.

## 5 Installing battery compartment cover

Slide the battery compartment cover along the bottom of your mobile phone until it clicks into place.



# Memory Card


## Installing memory card

Using a memory card can expand the available storage space of your mobile phone.

To insert a memory card, insert it into the card slot until it clicks into place. Ensure that the golden contact area faces upwards, as shown in the figure.

## Formatting memory card

If your memory card has been formatted, you can use it. If your memory card is not formatted, format it first.

- 1 Touch  on the standby screen, and then touch  and select **Phone settings**.
- 2 Touch **Memory Status**, and then select **Initialize Memory**.
- 3 Enter the security password to format your memory card. After the memory card is formatted, you can use it.

# Menu Map

Touch  Then, upper-level menus are displayed on the standby screen.



## Communicate

- eSurfing
- Dialling
- Speed dials
- Contacts
- Call manager
- Messages



## Entertainment

- My stuff
- Camera
- MP3
- FM radio
- Game
- Doc. viewer



## Utilities

- Organizer
- Alarms
- Voice recorder
- Skech memo
- Dictionary
- Calculator
- Tools



## Settings

- Sound/vib
- Display
- Phone settings
- Touch settings
- Bluetooth
- USB connection

# Standby screen

On the main screen, you can access all menu options, use the speed dial function and carry out other corresponding operations.

## Touch screen tips

You can familiarize yourself with touch screen on the main screen.





To select an item, please touch its icon.

To scroll items in a list, please touch the last seen item and then use your finger tip to slide upwards on the screen. The list will scroll upwards so that you can see more items.

- Because the touch screen is so sensitive that you just need to touch it slightly.
- Use your finger tip to slightly touch your desired item. Do not touch other items nearby.
- When the screen indicator is off, press any key to restore the main screen.

## Shortcut keys

Shortcut keys allow you to access commonly used functions just by one touch.






-  Slightly touch it to display a complete menu, which contains four sub-menus. Slightly touch each sub-menu to display more items.
-  Slightly touch it to display a dial so that you can make a call.
-  Slightly touch it to display the **Information**.
-  Slightly touch it to display your phone book, so that you can easily find the number of the desired person.







# Standby screen

## Status bar

The status bar displays various icons to indicate such information as signal strength, new message, battery level, and the use of Bluetooth.

The table below lists the meanings of various icons on the status bar.

| Icon  | Description   |
|---|---|
|   | Network signal strength (indicated by the number of segments) |
|  | Battery level   |
|  | New text message  |
|  | The alarm is set and started.                                 |
|  | In User mode  |

| Icon  | Description            |
|---|------------------------|
|  | In Super mode          |
|  | In Mute mode           |
|  | In Vibrate mode        |
|  | Roaming service in use |
|  | Fly mode selected      |
|  | Bluetooth enabled      |

# Text Entry Modes

When using a mobile phone, you always need to enter texts. For example, write a short message, enter the name to be saved in the phone book, and write a memo. Six text entry modes are available: Pinyin, numeric, lower-case English letters, upper-case English letters, English and stroke.

## Take the edit panel as an example:

### Pinyin

Example: To enter “ ”, select **拼音**. Slightly touch **p q r s** and **def**, and then slightly touch **m n o** twice. Finally, select “ ”.

### Numeric entry mode

Slightly touch **ABC** and select **123**. Slightly touch numeric keys to enter digits.

### English letter entry mode

Example: To enter “Work”, slightly touch **ABC** and select **Abc**.

Slightly touch **wxyz**, and then touch **MNC** three times, **PQRS** three times and **JKL** twice.

### Stroke entry mode

Enter strokes in order of writing a Chinese character.

Example: To enter “ ”, slightly touch **拼音** and select **笔划**. Select **丿**, **一**, **丨** and **丿** in order. Slightly touch “ ” at last.

### Symbol entry mode

In the text edit mode, slightly touch **^^ /** to enter various symbols or special symbols.

# Communications

## Making a call

---

### Best Tone

Select it to directly connect to the Best Tone Service portal of China Telecom.

### I-music

Select it to directly connect to the Best Tone Service portal of China Telecom.

### Download

Select it to start the software manager, allowing you to download programs and games.

### UIM card application

Select it to enjoy various information services.






### Vnet


Select it to directly connect to Vnet service portal.

## Dial


---

### Making a call

- 1 Slightly touch  to display the keypad.
- 2 Enter numbers to be dialed. To delete a digit, slightly touch .
- 3 Slightly touch  or press  to initiate a call.
- 4 To end a conversation, press .



**TIP!** Press and hold  to display the prefix of an international number, "+", which is replaced with an international call access code during making a call.

### Dialing from phone book


- 1 Slightly touch  on the standby screen to display the phone book.
- 2 Slightly touch the desired contact person in the phone book list. If there are multiple numbers corresponding to the contact

person, touch the number to be dialed.

## Answering and rejecting an incoming call

When the phone rings, press  to answer a call. Press  to reject an incoming call.

## Menus available during a conversation


If you are making a conversation, you can also carry out various operations on the phone. During a conversation, slightly touch  to select the desired menu.

## Shortcut Keys

---

### Making a call

Set a shortcut key for a phone number. Then, you can use the speed dial function by pressing the shortcut key.

- If you set “3” as the shortcut key of a phone number, press and hold  to speed dial the phone number.
- You can specify shortcut keys for the phone numbers stored in the mobile phone only.

# Communications



## Phone Book

---

### New

Select the storage place to add a phone book entry.

### Search

On the standby screen, slightly touch  to display the phone book list, which contains all saved phone numbers. Select a phone number, and then slightly touch . Then, you can carry out corresponding operations.

### Last Searched

Select it to view the last searched phone number.

### Group Management

Select it to modify group names or group ring tones.

### Phone Info

Select it to display your phone model, edit phone numbers saved

in the UIM card, and edit E-mails.

### Copy

Select it to copy a phone book entry.

### Move

Select it to move a phone book entry.

### Delete All

Select it to delete all the phone numbers saved in the phone or UIM card.

### Capacity

Select it to display capacity utilization of the phone or UIM card.

### Settings

**Set storage place** : Select it to choose where to save a phone number.

Options are: Phone/ UIM card UIM/  
Phone & UIM card &UIM/ Prompt every time.



**Search type** : Select it to choose a search type.

Options are: Common/ Group.

## Call Management

---

### Call Records

**All Calls** : Select it to display all calls.

**Missed Calls** : Select it to display the list of calls missed recently.

**Dialed Calls** : Select it to display the list of calls dialed recently.

**Received Calls** : Select it to display the list of calls received recently.

**Memo** : Select it to temporarily save one phone number or other digits during a conversation.

### Call Timing

Select it to check the last conversation, conversation duration (dialed call or received call), total conversation duration, and sent short messages. The conversation duration may differ from the actual charged duration.

# Communications

## Reject Call

Select it to set the phone numbers and groups to be rejected. Using this function requires the entry of your security password.

## Call Settings

### Conversation Volume

Select it to adjust volume during a conversation.

### Call Transfer

- **Unconditional Transfer** : This option enables you to transfer all the incoming calls to the specified phone number.
- **Transfer On Busy** : When you are busy on the phone, an incoming call will be transferred to the specified phone number.
- **Transfer On No Reply** : This option enables you to transfer all the incoming calls that you do not answer.
- **Default Call Transfer** : When your phone cannot connect to

the network or is powered off, incoming calls are transferred to the specified phone number.

- **Cancel All Transfer** : This option enables you to cancel all preset transfer.


## Call Waiting

If you activate this function, your phone will play a special alert tone to tell you an incoming call during a conversation. You can answer such an incoming call.

## IP Dialing Setting


Dial the specified digits before dialing the phone number to save costs.

## Messages

If you receive a message during a conversation, your phone will play a specified alert tone. In standby mode, slightly touch  to directly display the Messages menu.


### New

Select it to create a text message, voice message, or multimedia message.

- 1 Slightly touch the receiver name to enter the receiver's phone number or slightly touch  to select the desired number from the last used number, phone book, or recent call list.
- 2 Slightly touch the content area to enter the message content. You can change the entry mode when editing a message.
- 3 Slightly touch the down scroll bar to select whether to save the message and the message level.

**TIP!:** The message level options are Common/ Urgent/ Extra Urgent, which is irrelative to the speed of sending a message.

### Message Inbox

When you receive a message, your phone will prompt you. The received message will be saved in the message inbox. If there are any un-read messages in the message inbox, the  icon will be displayed.

### Card Message Inbox

Messages in the card message inbox are saved in the card. Storage capacity of different cards differs.

**TIP!:** Messages in the card message inbox can be moved to the message inbox. Similarly, the messages in the message inbox can be moved to the card message inbox.

# Communications

## Message Outbox

This option allows you to view the messages sent successfully.

## Draft Folder

This option allows you to view the messages saved in advance and those which are not sent successfully.

## Interactive Mailbox

You can receive notification messages, which may inform you of downloading ring tones or pictures from the specified address.

## Voice Mailbox

This function requires network support. Therefore, in some regions, this function cannot be used.

## Frequent Words

This option allows you to edit the words that are frequently used in messages and save them.

## Delete Message

This option allows you to clear the message inbox, message outbox, card message inbox, draft folder, voice mailbox, and trash box.

## Junk Message

This option allows you to view junk messages and junk numbers.

## Message Settings

### Common Settings

#### **Incoming Message Alert Type :**

This option allows you to set the alert type of receiving a message.

#### **Incoming Message Alert**

**Frequency :** This option allows you to set how many times of informing you of receiving a text message, voice message/multimedia message, and interactive message.

#### **Message Alert Tone :**

This option allows you to set the alert tone type and volume of receiving a text message, voice message,

multimedia message, and interactive message.

**Capacity** : This option allows you to check utilization of the message inbox, message outbox, draft folder, card message inbox, and trash box.

## Text Message Settings

**Received Message Content Alert** : This option allows you to determine whether to only prompt that you have received a message or to display the message content.

**Message Background** : This option allows you to set the background of received messages.

**Message Color** : This option allows you to set text color of received messages.

### Auto Delete

**Display Phone Book Photos** : If this option is set to Yes, when the message inbox is full after receiving a new message, the message read earliest in the message inbox will be

automatically deleted.

**Message Valid Period** : This option allows you to set the time for saving messages in the short message center.

**Status Report** : If you set it to Enable, you can check whether messages have been successfully sent.

**IN Message** : IN message service is a series of message value-added products launched by China Telecom, including return notification for calling subscriber, short message transfer, and timed short messages.

## Multimedia Message Settings

**Auto Download** : This option determines whether to activate or deactivate automatic download.

**Status Report** : This option determines whether to allow requesting a status report.

**Deliver Report** : This option determines whether to allow

# Communications

delivering a report.

**Valid Time** : This option allows you to set the time for saving messages in the short message center.

**Account/Password** : This option allows you to check your account and password.

## Customer Service

---

### Hotline

Select it to directly dial the customer service hotline of China Telecom, 10000.

### Palm Business Hall

Select it to access the online business hall of China Telecom.

### Comm. Assistant

Select it to dial 11843490004, the secretary voice service phone number of Best Tone Service.

### Query&Cancel Service

Select it to query the subscribed services and cancel them.

### Phone Service Guide

Select it to display after-sales information.

## Vnet


---

Select it to directly connect to Vnet service portal.

## Document

---

### Picture

Select it to view pictures. Select one picture, and slightly touch . Then, you can use various functions.

### Video

Select it to view the stored video files.

### Ring

Select it to view the stored sound files.

### E-contact Card

Select it to view the stored electronic contact cards.

### External U-disk

You can use an external IT-Flash memory card to save the photos

downloaded or taken by camera, video files, and MP3 files.

### Search Doc

Select it to view the documents saved in the built-in memory, internal U-disk, and external U-disk.

# Entertainment

## Camera

---

### Take Photos/Record Video

You can use the built-in camera to take photos or record videos.

### Album

Select it to view and edit photos.

### Slide

Select it to set effects of the saved photos and set the slide as the main picture.

### Camera Setting

Select it to set camera sound effect and automatic storage, choose storage mode and initialize camera settings.



## MP3

---

### MP3 Music Box

Select it to save and play the downloaded MP3 music.

### MP3 List

Select a song from the MP3 music box, and slightly touch . Slightly touch  to select Add to MP3 List MP3 to add it to the MP3 list.

### MP3 Settings

**Skin Setting** : This option allows you to select different background pictures.

**Time Setting** : This option allows you to set the play time.






## FM Radio

---




**Note:** To listen to the radio, insert your earpiece first.

### Search Channel

#### Auto Search


- 1 Slightly touch  and select . Then, select **FM Radio**
- 2 Select  and **Auto Search**. Then, select **Yes**.

#### Reset All

- 1 Slightly touch  and select . Then, select **FM Radio**
- 2 Select  and **Reset All**. Then, select **Yes**.

#### Listen to Radio

- 1 Slightly touch  and select . Then, select **FM Radio**
- 2 Select the desired channel.

**Note:** You can listen to radio by the built-in speaker. To do so, slightly touch  and select the listening mode. Then, select **Earpiece/ Speaker**.

## Game

---

You can select new games or mini games to be downloaded.

## E-book

---

You can view the saved e-books.

# Utilities

## Best Tone

---

### Life Info

Select it to directly access the home page of the life search channel for mobile WAP portal of the Best Tone Service.

### Map Service

Select it to directly access the home page of the surrounding search channel for mobile WAP portal of the Best Tone Service.

### Book Air Tickets

Select it to directly dial the dedicated number for air-ticket booking of the Best Tone Service, 11843490001.

### Book Hotel

Select it to directly dial the dedicated number for hotel booking of the Best Tone Service, 11843490002.

### Book Restaurant

Select it to directly dial the dedicated number for restaurant booking of the Best Tone Service, 11843490003.

### Comm. Assistant

Select it to directly dial the secretary voice service phone number of the Best Tone Service, 11843490004.

### Central Phone Service

Select it to set the central phone number of your enterprise, modify it, or dial it.

### Member Space

Select it to directly access the member home page for mobile WAP portal of the Best Tone Service.

### Dial Best Tone

Select it to directly dial the number of the Best Tone Service, 118114.

## Manager

---

### Calendar

Select it. Then, a calendar is displayed. After you modify a date, the calendar will be updated. Also, the square cursor stays on the modified date. If a date is identified by a special cursor, you can infer that a schedule has been made on that day.

This function reminds you of your schedule. If you have set a reminder, your phone will play an alert tone.

### Work Schedule

This option allows you to record your plan.

### Memo


This option allows you to record and save memo information.

- 1 Slightly touch **添加**. Enter a record, and then slightly touch **保存** to save the record.
- 2 Select the entry to be viewed from the memo list, and then slightly touch **确定** to view the entry. Slightly touch **<** or **>** to check other saved memo entries.

### Countdown

- 1 Slightly touch **添加**. Then, slightly touch time to select year, month, and day, and numeric keys to enter digits.

# Utilities

- 2 Slightly touch text input area and  to save the time.

## Private record

To view a private memo, you need to enter your password. The default password is 0000.

You can add or view credit card information, bank account, etc. and delete all saved information.


## Search Data

You can search for all data entries or single data entry.

## Alarm

---

In standby mode, slightly touch clock to add an alarm.






- 1 Slightly touch  to add an alarm.
- 2 Slightly touch time and select Off / After 10min 10 / After 20min 20 / After 30min 30 / After 1hr 1 / Set Time.
- 3 If you select Set Time, slightly touch Repeat and select Once / Mon~Fri / Mon~Sat ~ /Every day / Select Time.
- 4 Slightly touch Sleep Time and select Off) / 3min 3 / 5min 5 / 10min 10 / 15min 15 .
- 5 Slightly touch Ring Type and select Same as Profile / Ring / Vibrate /Ring+Vibrate.
- 6 Slightly touch Ring Tone and edit a ring tone. Slightly touch Shutdown Alarm and select Off / On. Slightly touch Memo to enter the memo.

- 7 Slightly touch  to save the settings.



## Sound Recording

---

### New

- 1 Slightly touch  to begin recording sound. Slightly touch  to pause recording. Slightly touch  to stop recording.
- 2 After recording is stopped, slightly touch  to save the sound. Slightly touch  to play the sound.

### Sound Record

Slightly touch  to play the recorded sound and slightly touch  to carry out corresponding operation.

### Recording Settings

**Storage Setting** : Select phone's memory or external memory to save the recorded sound.


**Auto Storage** : Select Yes /No to

automatically save the recorded sound.

**Restore Settings** : Select Yes /No to restore settings.

### Drawing Board

---






Select it to simply draw a picture. Slightly touch  to carry out corresponding operation.

# Utilities

## E-dictionary

---

### Search

- 1 Enter the first letters of the word to be searched for, and then slightly touch . The lower part of the entry box displays all the words which begin with these letters.
- 2 Select a word and slightly touch  to view information. Slightly touch   to view other words similar to the word being searched for.
- 3 To save the word, slightly touch  to add it to the word booklet.

### Last Searched Word

This option allows you to check a list of the words searched for recently.

### Word Booklet

This option allows you to view the saved word booklet, in English or Chinese.

### My Dictionary

This option allows you to view your own English or Chinese dictionary.

### Review&Test

This option allows you to take an English or Chinese test.

### Color Setting

This option allows you to display text topics (main pictures 1~3).

## Calculator

---

This option allows you to simply carry out “plus”, “minus”, “multiply”, and “divide” operations and various function operations.

## Tools

---

### Conversion

This option allows you to convert currency, length, area, weight, volume, temperature, and speed.

### World Time

This option allows you to browse time of major cities in the world.

### Stop Watch

Slightly touch **开始** to begin the stop watch. Slightly touch **取时** to obtain the time.

Slightly touch **停止** to stop counting.

Slightly touch **继续** to continue.

Slightly touch **重设** to reset the stop watch. Slightly touch **记录** to record the time.

## Bookmark

This option allows you to save URLs of your favorite web pages so that you can easily visit them later.

# Settings

## Sound/Vibrate

---

### Vibrate Mode

Select ON /Off. If you select ON, all alert tones are changed into vibration.

### Incoming Call Alert

The alert type for an incoming call can be Ring/ Vibrate/ Frequency Vibration/ Mute/ Ring&Vibrate/ Ring Then Vibrate/ Vibrate Then Ring/ Escalate Ring Tone/ Super Ring Tone&Vibrate.

**TIP:** The Frequency Vibration option only applicable to the default ring tone accompanied with your phone.

### Ring

This option allows you to set ring tones and volume for incoming calls.

### Message Alert Tone

This option allows you to set the alert tone type and volume of receiving a text message, voice message, multimedia message, and interactive short message.

### Sound Effects

This option allows you to set keypad tone, power-on ring tone, power-off ring tone, and volume.

### Sharp Time Alert

This option allows you to set sharp time alert type, volume, and time.

### System Alert Tone

This option allows you to set battery level alert tone, window popup alert tone, service alert tone, call connected alert tone, 1 min alert tone, and WAP alert tone.

### Vibration Setting

This option allows you to set vibration mode and strength.



## Display

---

### Background

**Wallpaper** : Slightly touch < > to select a wall paper, and then slightly touch 保存 to save it.

**Clock/Calendar** : Slightly touch < > to select a clock type.

**Greetings** : Select it to enter the characters displayed on the standby screen. You can also set the display effects of these characters.

**Network Name Display** : Activate it to display the network name on the main screen.

**Incoming Call Picture** : Select it to set the picture displayed for incoming calls.

### Font

This option allows you to set font size and color of the characters displayed.

### Display Color

Display color of your phone can be set to black or white.

### Menu Style

Menus can be displayed in a table or scrolled.

### Dialed Digit Effects

Digits entered on the standby screen can be set, including font size and color.

### Backlight

The duration and brightness of the backlight can be set.

### Power Saving Mode

Select **Activate** to enter the power saving mode.

# Settings

## Phone Settings

---

### Protection Settings

If you select **Activate**, touch screen and keys are locked when the backlight is turned off.

### Security Settings

Enter the password before accessing this menu. The default password is 0000.

**PIN Setting PIN** : Select ON or OFF. If you select **ON**, your phone will prompt you to enter the PIN code. You can use your phone only after you enter a correct PIN code. For the default PIN code, contact your local operator.

**Lock Phone** : Select **Lock upon Power-on** or **Lock Immediately**.

You can use your phone only after you enter the correct password to unlock it.

**Lock Functions** : This option allows you to prevent others from using

each function of your phone.

**Emergency Number** : Even if your phone is locked, you can also dial emergency numbers. Up to two emergency numbers can be set.

**Change PIN/Password** : To change the default password of your phone, enter a new password, slightly touch **确定**, enter the new password again, and slightly touch **确定**.

**TIP!**: To change PIN code, you must activate PIN code first.

**Password Prompt** : You can set a password prompt so that your phone will give you some tips when you forget your password.

### Language

You can set the language of your phone, affecting the text entry mode.

## Default Text Entry Mode

You can set the default text entry mode.

## Fly Mode

If it is activated, you cannot use Bluetooth to receive or make a call or send or receive short messages.

## Time Format

You can select 12-hour format or 24-hour format.

## Data Service Settings

You must enter the password: 0000.

**Data Rate Setting** : You can select High Speed and Low Speed for your phone to access Internet.

**Vnet Setting** : You can set the Vnet server and duration for accessing Vnet.

**Download Setting** : You can set the functions of the download server.

**Positioning Setting** : You can lock positioning and the display on the

prompt window.

## Memory Status

You can view utilization of each memory and initialize it.

## Touch Settings

---

### Touch Settings

You can select **Touch Type**, **Touch Ring**, **Touch Vibration** and **Volume**.

### Calibrate

You can use the touch pen to make fine adjustment.

## Bluetooth

---

### Bluetooth QDID:B014935


Using Bluetooth, you can directly communicate with compatible mobile equipment, peripherals, and computers without any cables.

This mobile phone supports internal Bluetooth connection so that it can be connected to the compatible

# Settings

Bluetooth mobile phone and computer's applications.

## Enable/Disable Bluetooth

This option determines whether to enable or disable Bluetooth. If you select **Enable**, the Bluetooth icon  is displayed on the upper part of the standby screen.

## Match Device

Slightly touch **Add** to search for the devices that are matched. Find the desired device, and then slightly touch **Match**. Enter the password to match with the device

## Connect Devices

You can choose to connect to a Bluetooth earpiece or a vehicle-mounted phone.

## Data Transfer

**Phone Book** : Select it to send phone numbers to another person.

**Photo** : Select it to send photos to

another person.

**MP3** : Select it to send MP3 files to another person.

**My Info** : Select it to edit your own information.

**TIP!**: Your phone can transfer a file up to 6 MB.

## Bluetooth Settings

**My Settings** : Select it to set your own information and device visibility.

**Connection Waiting** : Select it to set connection waiting.

## Select Memory

---

Select it to connect to a data cable for downloading files.

# Specifications and Features

|                          |   |                          |        |
|--------------------------|---|--------------------------|--------|
| <b>Bandwidth</b>         | Send : 824MHz-849MHz    Receive : 869MHz-894MHz |                          |        |
| <b>Appearance (mm)</b>   | 106.5 x 55.4 x 11.9 (mm)                        |                          |        |
| <b>Temperature range</b> | -20°C~+50°C                                     | <b>Relative humidity</b> | 5%~95% |
| <b>Weight</b>            | 90g (including battery)                         | <b>Model</b>             | MC500  |

## Precautions

- Do not lend your phone to others at will.
  - Please go to the specified place, such as our service center to enjoy after-sales service.
  - Report to your operator at once when losing your phone or having it stolen.
  - Use original accessories, because using other antenna, charger, hands-free kit, battery, data cable, and toolkit may degrade phone's performance and result in faults or personal injuries.
- 
- Thank you for using LANGCHAO LG mobile phone.
  - Phone's functions and appearance may be subject to change without prior notice.

# Product Warranty

- LANGCHAO LG provides the following warranty according to the compensation regulations on damages or injuries of consumers.
- In case of any fault , go to the place where you purchase the phone or an agent nearby. Show your warranty card and require them to repair it. If you cannot go to the Thank you for using LANGCHAO LG mobile phone. Phone's functions and appearance may be subject to change without prior notice. place where you purchase the phone or an agent, contact our service center

## Free Service

This limited warranty applies to the faults arising from manufacturer's errors or natural faults.

| Damage/Injury Type                                 |  | Compensation              |                        |
|--|--|---------------------------|------------------------|
|  |  | Within warranty period    | Warranty period expiry |
| Require major repair within 7 days after purchase  |  | Replace or refund         |                        |
| Require major repair within 15 days after purchase |  | Replace product           |                        |
| Free repair for the faults within one year         | First and second time for the faults arising from non-man-made factors | Free repair               | Charged repair         |
|  | Third time for the faults arising from non-man-made factors            | Replace product or refund | Charged repair         |
|  | Parts are repaired. Repair is not completed after 30 days.             | Replace product or refund |                        |
|  | Parts are not repaired. Repair is not completed after 60 days.         | Replace product or refund |                        |

**Note :** The preceding warranty is carried out according to Provisions on the Liability for the Repair, Replacement and Return of Mobile Telephone Products.

|                          |                |                          |  |
|--------------------------|----------------|--------------------------|--|
| <b>Product Name</b>      | Mobile phone   | <b>Model</b>             | MC500                                    |
| <b>Product Date</b>      | Month Day Year | <b>Manufacturing No.</b> |  |
| <b>Place of Purchase</b> |                | <b>Warranty Period</b>   | Within one year since the day of purchas |

### Charged Service

#### Not a fault

If you require repair in the case of no fault, we will charge you, so please carefully read the User Manual. (If we cannot repair it, we will follow other charging standards.)

### Request for repair due to unfamiliar operation (such as losing password)

#### Faults due to errors of users

Faults due to errors of users or improper handling, for example, broken, soaking, collision, damaged, excessive force.

Faults or damages arising from repair or reconstruction made by others except repair technicians of our company.

Faults due to misbehavior or errors of users.

Faults or damages arising from using non-original parts or accessories.

#### Other cases

Faults due to natural disasters, such as fire, acid and alkaline corrosion, flood, and abnormal power supply.

Expiry of service life of consumable accessories, such as battery, charger, antenna, and other auxiliary devices.