



 

IMG370 | USER GUIDE

This manual may differ from the phone depending on the phone software version and service provider used.



Turning Your Phone On and Off

1. Hold down the  [END] key until the phone switches on.
2. To switch the phone off, hold down the  [END] key until the power-off image displays.

Making a Call

1. Enter a phone number including the area code.
2. Press the  [SEND] key to call the number.
3. When finished, press the  [END] key.

 

Answering a Call

1. When the phone rings and the phone icon flashes on the screen, press the  [SEND] key or the left soft key to answer.
2. End the call by pressing the  [END] key.

Note

- ▶ After the call ends, the phone will go back to standby mode.

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  [send] key to call the number.

How to set the tone

Ringtone

1. Press the left soft key [Menu] and select [Settings - Profiles] using the up/down navigation keys.
2. Select [Personalise] and choose Ringtones menu.
3. Press the left soft key [OK] and then you can set the desired ringtone.

Tip

- ▶ If you want to change your ringer to vibrate, select Vibrate mode or press and hold the upper navigation key.

Ringtone/Keypad/Message/Call alert tones and volumes

You can select Ringtone/Keypad/Message/Call alert tones and volumes.

You can change the sound that will occur when a key is pressed, or volume level.

[Menu - Settings - Profiles - Personalise]

Installing the SIM Card and Charging the Battery






Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

- ▶ *The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.*

Illustrations


-   Open battery cover
-  Insert your SIM
-  Close the battery cover
-  Charge your battery

Menu and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed via the left and right soft keys.

The label on the bottom of the display screen immediately above the soft keys indicates their current function.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. To change modes, press the  key.

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

Symbol Mode

This mode allows you to enter special characters by pressing  key.

Quick feature reference



This section provides brief explanations of features on your phone.

Messaging Menu 1

This menu includes functions related to SMS (Short Message Services).

New message	This menu includes functions related to SMS (Short Message Services).
Inbox	You will be alerted when you have received a message.
Drafts	This menu shows the preset message list.
Outbox	This menu allows to view the message which is about to be sent or has failed to be sent.
Sent	This menu allows you to view the messages which have already been sent, including time and content.
Voice mail	This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).
Templates	There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
Settings	This menu allows you to set features of your network service provider.

Contacts Menu 2

Search	You can Search for contacts in Phonebook. <i>Note: Instant searching is available by inputting the initial letter of the name you want to search.</i>
New contact	You can add phonebook entries by using this menu.
Speed dials	Assign contacts to any of keys  and  .
Copy all	You can copy all entries from SIM card memory to Phone memory.
Delete all	You can delete all entries from SIM card memory or Phone memory.
Memory status	You can check free space and memory usage.
Information	<ul style="list-style-type: none"> ▶ Service dial numbers: Access the list of service numbers assigned by service provider safely. ▶ Own numbers: You can save and check your own numbers in SIM card. ▶ Business card: This option allows you to create your own business card featuring your name, mobile phone number and so on.

Call history Menu 3

You can check the record of missed, received, and dialed calls only if the network supports the Calling Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call durations.

Menu tree

1. Messaging	3. Call history	6. Settings
1.1 New message	3.1 All calls	6.1 Profiles
1.2 Inbox	3.2 Missed calls	6.2 Date & Time
1.3 Drafts	3.3 Dialed calls	6.3 Languages
1.4 Outbox	3.4 Received calls	6.4 Display
1.5 Sent	3.5 Call duration	6.5 Call
1.6 Voice mail		6.6 Security
1.7 Info message	4. SIM services	6.7 Power save
1.8 Templates		6.8 Network selection
1.9 Settings	5. Tools	6.9 Reset settings
2. Contacts	5.1 Game	6.0 Memory status
2.1 Search	5.2 Calendar	
2.2 New contact	5.3 Alarm	
2.3 Speed dials	5.4 Memo	
2.4 Copy all	5.5 Calculator	
2.5 Memory status	5.6 Unit converter	
2.6 Information	5.7 World clock	

Call history Menu 3 (Continued)	
All calls	Displays all the lists of three types (Received/Dialed/Missed calls) by time.
Missed calls	This option lets you view the last 10 unanswered calls.
Dialed calls	This option lets you view the last 10 outgoing calls (called or attempted).
Received calls	This option lets you view the last 10 incoming calls.
Call duration	Allows you to view the duration of your incoming and outgoing calls.

SIM services Menu 4	
This menu depends on SIM and the network services.	

Tools Menu 5	
Game	In this menu, you can manage the Java applications installed in your phone.
Calendar	You can check track of daily or monthly schedules.
Alarm	Allows you to set one of three alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, the Alarm icon will be displayed on the LCD screen and the alarm will sound.

☐ Guidelines for safe and efficient use (Continued)

Tools Menu 5 (Continued)	
Memo	You can create a list of tasks.
Calculator	This contains the standard functions such as +, -, x, ÷: Addition, Subtraction, Multiplication and Division .
Stopwatch	Stopwatch is available just as common stopwatches we see and use in daily life.
Unit Converter	This converts any measurement into a unit you want.
World clock	Allows you to determine the current time in another time zone or country.

Settings Menu 6	
You can set the following menus for your convenience and preferences.	
Profiles	You can adjust and customize the phone tones for different events, environments or caller groups.
Date & Time	You can set functions relating to the date and time.
Language	You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
Display	You can change settings for the phone display.
Call	You can set the menu relevant to a call.

☐ Guidelines for safe and efficient use (Continued)

Security	This menu allows you to set the phone safely. <ul style="list-style-type: none"> › PIN code request : You can set the phone to ask for the PIN code of your SIM card when the phone is switched on. › Phone lock : You can use a security code to avoid unauthorized use of the phone. › Call barring : The Call barring service prevents your phone from making or receiving a certain category of calls. This function requires the call barring password. › Fixed dial number (SIM dependent): You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code. The numbers you wish to allow access to once this service has been enabled, must be added to the contacts after enabling Fixed dial number. › Change codes : PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized persons. You can change the access codes: Security code, PIN code, PIN2 code.
Power save	If you set this to On, you can save the power when you are not using the phone.
Network selection	You can select a network that will be registered either automatically or manually. Usually, the network selection is set to Automatic.
Reset settings	You can initialize all setting values as defaults. You need a Security code to activate this function.
Memory status	You can check free space and memory usage of each repository.

☐ Guidelines for safe and efficient use (Continued)

☐ Guidelines for safe and efficient use

Please read these simple guidelines. Ignoring them may be dangerous or illegal. Further detailed information is given in this manual.

Warning

- › For your safety, use ONLY specified ORIGINAL batteries and chargers.
- › Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- › Batteries should be disposed of in accordance with relevant legislation.

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- › Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- › The unit should be kept away from heat sources such as radiators or cookers.
- › Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- › Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

FCC RF Exposure Information

WARNING! Read this information before operating the phone. In August 1996, the Federal Communications (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.