



# PLASMA MONITOR OWNER'S MANUAL

**MODELS: MU-50PZ90M/90V  
MU-50PZ90MA/90VA  
MU-50PZ90MB/90VB  
MU-50PZ90MK/90VK  
MU-50PZ90MR/90VR  
MU-50PZ90MS/90VS**

Please read this owner's manual carefully before operating the Monitor.

Retain it for future reference.

Record model number and serial number of the Monitor.

See the label attached on the back of the Monitor and quote this information to your dealer when you require service.

Model number :

Serial number :

P/NO : 3828VA0410A (RF03GB)

# Warning



**WARNING**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



## **WARNING:**

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## **WARNING:**

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

### **FCC NOTICE**

#### **• A Class B digital device**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **• Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

## **WARNING**

TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

# Safety Instructions

## Important safeguards for you and your new product

Your product has been manufactured and tested with your safety in mind. However, improper use can result in potential electrical shock or fire hazards. To avoid defeating the safeguards that have been built into your new product, please read and observe the following safety points when installing and using your new product, and save them for future reference.

Observing the simple precautions discussed in this booklet can help you get many years of enjoyment and safe operation that are built into your new product.

This product complies with all applicable U.S. Federal safety requirements, and those of the Canadian Standards Association.

### 1. Read Instructions

All the safety and operating instructions should be read before the product is operated.

### 2. Follow Instructions

All operating and use instructions should be followed.

### 3. Retain Instructions

The safety and operating instructions should be retained for future reference.

### 4. Heed Warnings

All warnings on the product and in the operating instructions should be adhered to.

### 5. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

### 6. Water and Moisture

Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

### 7. Accessories Carts and Stands

Do not place this product on a slippery or tilted surface, or on an unstable cart, stand, tripod, bracket, or table. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

### 8. Transporting Product

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

### 9. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

### 10. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

### 11. Power Sources

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

### 12. Power-Cord Polarization

This product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin. This plug will only fit into the grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

### 13. Power-Cord Protection

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.



PORTABLE CART WARNING

(Continued on next page)


# Safety Instructions continued

(Continued from previous page)

## 14. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI/ NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

### Example of Grounding According to National Electrical Code Instructions

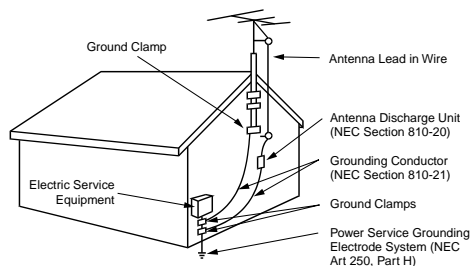

NEC - National Electrical Code

## 15. Lightning

For added protection for this product (receiver) during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

## 16. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

## 17. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

## 18. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

## 19. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## 20. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. If the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the product.
- c. If the product has been exposed to rain or water.
- d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the product has been dropped or the cabinet has been damaged.
- f. If the product exhibits a distinct change in performance.

## 21. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

## 22. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

## 23. Wall or Ceiling Mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer. The product may slide or fall, causing serious injury to a child or adult, and serious damage to the product.

## 24. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

# Contents

Warnings .....	2	Screen Menu Options	
Safety Instructions .....	3~4	Auto Adjustment .....	20
<b>Introduction</b>		Setting Picture Format .....	20
Controls and Connection Options .....	7	Picture Size Zoom .....	20
Remote Control Key Functions .....	8	Split Zoom .....	21
<b>Installation</b>		Screen Position .....	21
Installation Instruction .....	9~10	Manual Configure .....	21
External Equipment Connections .....	11~14	Screen Adjustments .....	22
VCR Setup .....	11	Initializing .....	22
Cable TV Setup .....	11	Selecting Wide VGA/XGA mode .....	22
External A/V Source Setup .....	12	PIP (Picture In Picture) Feature	
DVD Setup .....	12	Watching PIP .....	23
DTV Setup .....	12	PIP Size .....	23
PC Setup .....	13~14	PIP Aspect Ratio .....	23
<b>Operation</b>		Swapping PIP .....	23
Turning on the Monitor .....	15	Moving PIP .....	23
Menu Language Selection .....	15	Selecting a Input Signal Source for PIP .....	23
Video Menu Options		Twin Picture Setup Options	
APC (Auto Picture Control) .....	16	Main Picture Size Adjustment .....	24
Manual Picture Control .....	16	Sub Picture Size Adjustment .....	24
Adjusting Auto Color Control .....	16	Swapping the Twin Picture .....	24
Manual Color Temperature Control .....	16	Selecting a Source for the Twin Picture .....	24
Audio Menu Options		<b>External Control Device Setup .....</b>	<b>25~29</b>
DASP (Digital Auto Sound Processing) .....	17	<b>IR Code (NEC format) .....</b>	<b>30~31</b>
Manual Sound Control .....	17	<b>Troubleshooting Checklist .....</b>	<b>32</b>
AVL (Auto Volume Leveler) .....	17	<b>Maintenance .....</b>	<b>33</b>
Time Menu Options		<b>Specifications .....</b>	<b>33</b>
Setting the Clock .....	18		
Setting the On/Off Timer .....	18		
Auto Off .....	18		
Sleep Timer .....	18		
Special Menu Options			
Key Lock .....	19		
ISM Method .....	19		
Low power .....	19		
Menu Rotation For Vertical Viewing .....	19		

After reading this manual, keep it handy for future reference.

# Introduction

## What is a Plasma Display Panel (PDP)?

If voltage is inputted to gas in glass panels, ultraviolet rays is outputted and fused with a fluorescent substance. At this moment, light is emitted. A Plasma Display is a next generation flat Display using this phenomenon.

## 160° - Wide angle range of vision

Your flat panel plasma screen offers an exceptionally broad viewing angle -- over 160 degrees. This means that the display is clear for audience members anywhere in the room.

## Wide Screen

The screen of a Plasma Display is 50" so that you can get vivid experience as if you are in a theater.

## Multimedia

Connect your plasma display to a PC and you can use it for conferencing, games, and internet browsing. The Picture-in-Picture feature allows you to view your PC and video images simultaneously.

## Versatile

The light weight and thin size makes it easy to install your plasma display in a variety of locations where conventional displays don't fit.

## The PDP Manufacturing Process: Why colored dots may be present on the PDP screen

The PDP (Plasma Display Panel) which is the display device of this product is composed of 0.9 to 2.2 million cells. A few cell defects will normally occur in the PDP manufacturing process. Several colored dots visible on the screen should be acceptable. This also occurs in other PDP manufacturers' products and the dots appearing does not mean that this PDP is defective. Thus a few cell defects are not sufficient cause for the PDP to be exchanged or returned. Our production technology is designed to minimize cell defects.during the operation of this product. We hope you understand that a certain level of noise from the cooling fans is acceptable and is not sufficient cause for the PDP to be exchanged or returned.

## Cooling Fan Noise

In the same way that a fan is used in a PC computer to keep the CPU (Central Processing Unit) cool, the PDP is equipped with cooling fans to cool the Monitor and improve its reliability. Therefore, a certain level of noise could occur while the fans are operating and cooling the PDP.


This noise doesn't have any negative effect on the PDP's efficiency or reliability. The noise from these fans is normal during the operation of this product. We hope you understand that a certain level of noise from the cooling fans is acceptable and is not sufficient cause for the PDP to be exchanged or returned.

### **WARNING**

TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.


# Controls

## Front Panel Controls

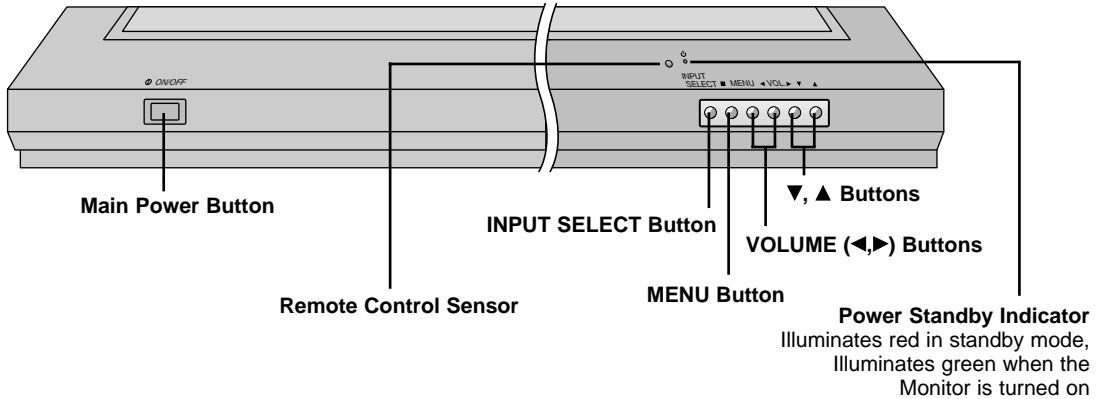

# Connection Options


## Back Connection Panel

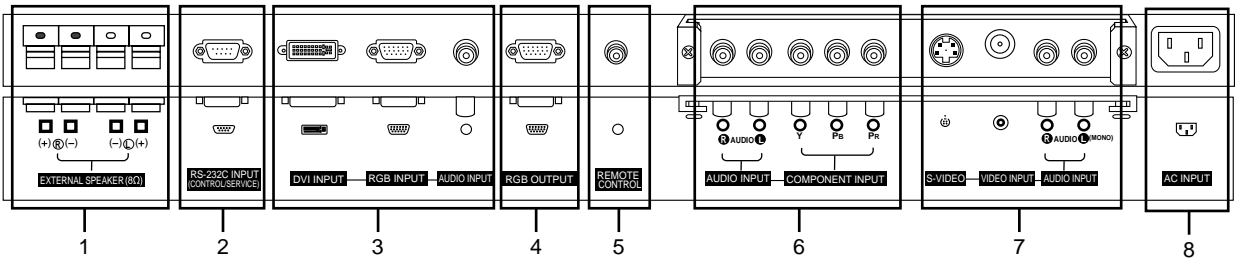


- 1. EXTERNAL SPEAKER (8 ohm output)**  
Connect to optional external speaker(s).  
\* For further information, refer to 'Speaker & Speaker Stand' manual.
- 2. RS-232C INPUT (CONTROL/SERVICE) PORT**  
Connect to the RS-232C port on a PC.
- 3. DVI (Digital Visual Interface) INPUT/ RGB INPUT/AUDIO INPUT JACKS**  
Connect the monitor output connector of a PC to the appropriate input port.
- 4. RGB OUTPUT JACKS**  
You can watch the RGB signal on another monitor, connect RGB OUTPUT to another monitor's PC input port. Note: In standby mode, RGB output does not work.
- 5. REMOTE CONTROL**  
Connect your wired remote control to the remote control port on the Monitor.
- 6. COMPONENT INPUT/AUDIO INPUT JACKS**
- 7. S-VIDEO INPUTS**  
Connect video out from an S-VIDEO VCR to the S-VIDEO input.  
**AUDIO/VIDEO INPUT JACKS**  
Connect audio/video out from external equipment to these jacks.
- 8. POWER CORD SOCKET**  
This Monitor operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the Monitor on DC power.

# Remote Control Key Functions

- When using the remote control, aim it at the remote control sensor on the monitor.
- Under certain conditions such as when the beam is interrupted, the remote control may not function. Press the key again if necessary.

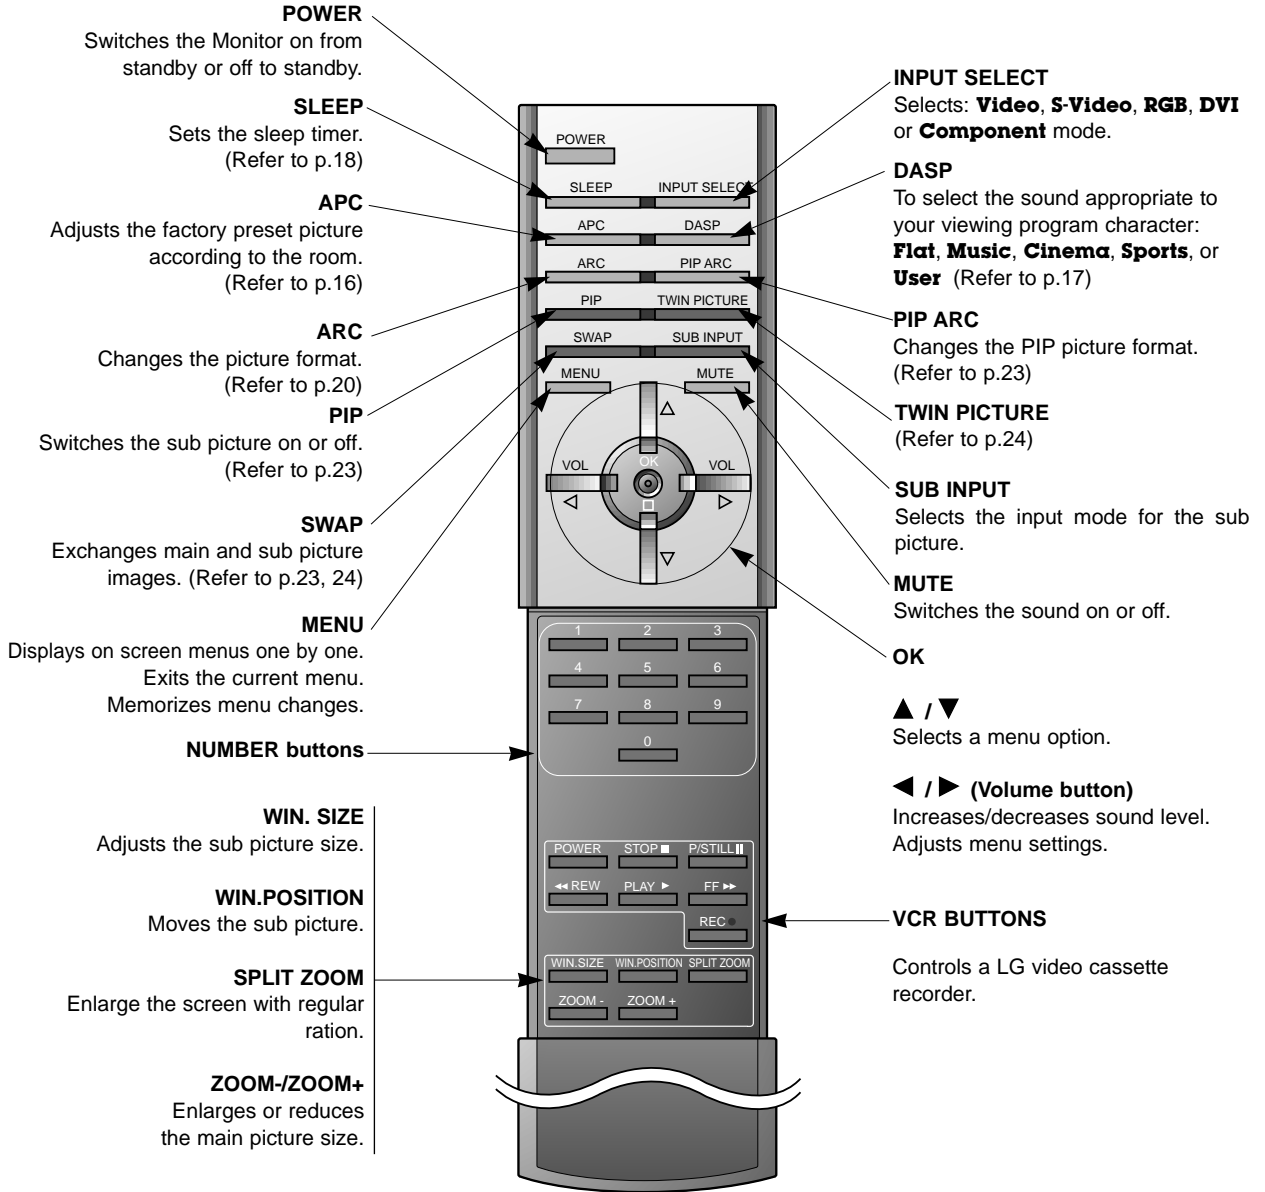

## Installing Batteries

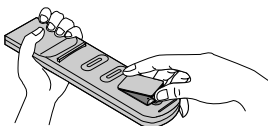


- Open the battery compartment cover on the back side and insert the batteries with correct polarity.
- Install two 1.5V alkaline batteries of AAA type. Don't mix used batteries with new batteries.




# Installation

 Ensure that the following accessories are included with your plasma display. If an accessory is missing, please contact the dealer where you purchased the product.



Owner's Manual

 


Alkaline batteries



BNC-RCA adapter



 Remote Control



D-sub 15 pin cable



Power Cord




DVI Cable

## Installation Instructions


- The Monitor can be installed in various ways such as on a wall, or on a desktop etc.
- The plasma display is designed to be mounted horizontally or vertically. The speakers depicted are optional.

### GROUNDING


Ensure that you connect the grounding / earth wire to prevent possible electric shock. If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightning rods, or gas pipes.

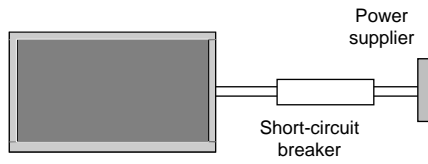

### Wall Mount Installation

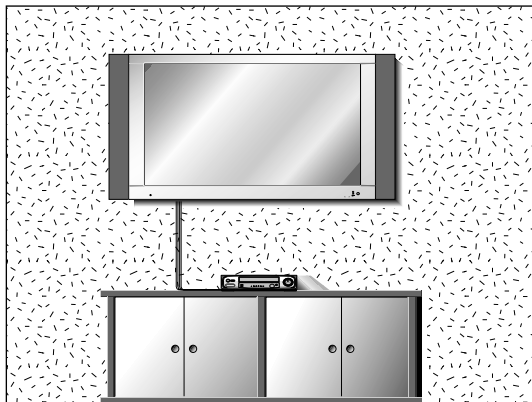


For proper ventilation, allow a clearance of 4" on each side and 2" from the wall. Detailed installation instructions are included from your dealer in the optional Wall Mounting Bracket Installation and Setup Guide.

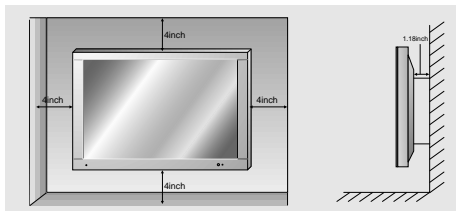


## Installation Instructions continued


### Desktop Pedestal Installation

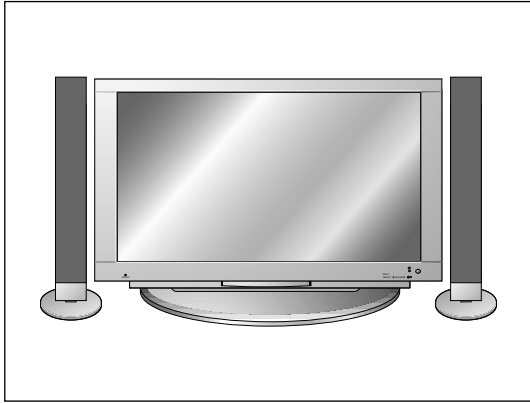

For proper ventilation, allow a clearance of 4" on each side and the top, 2.36" on the bottom, and 2" from the wall. Detailed installation instructions are included from your dealer in the optional Desktop Stand Installation and Setup Guide.

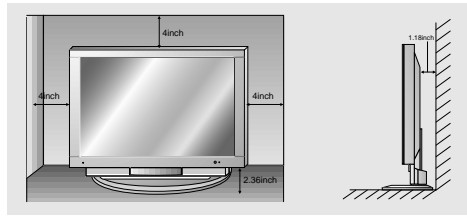

### Wall Mount: Vertical installation

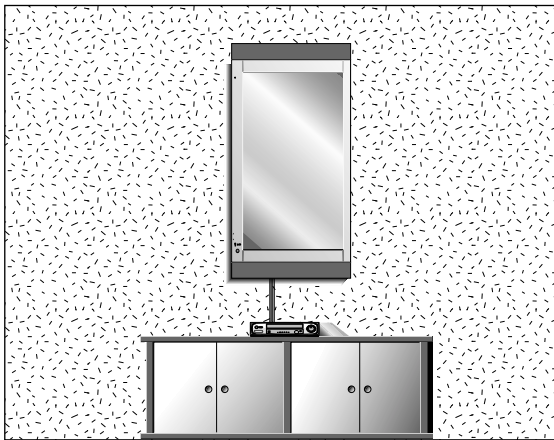

Detailed installation instructions are included from your dealer in the optional Vertical Wall Mounting Bracket Installation and Setup Guide.

**NOTE:** When installing the monitor vertically, the front panel controls must be in the left side position.



When installing the monitor vertically, you have to change the OSD display mode so that the menus will appear correctly and also to protect the monitor from overheating (Refer to P. 19).

# External Equipment Connections

**NOTE:** Not all depicted cables are included with the plasma display.

## VCR Setup

- To avoid picture noise (interference), leave an adequate distance between the VCR and Monitor
- Use the orbiter function to Avoid having a fixed image remain on the screen for a long period of time. Typically a frozen still picture from a VCR. If a 4:3 picture format is used; the fixed image may remain visible on the screen.

### How to connect


1. Connect the provided BNC-RCA adapter to the monitor's VIDEO INPUT.
2. Connect the audio and video cables between the VCR's output jacks and the monitor input jacks, as shown in the figure. When connecting the monitor to VCR, match the colors of connecting jacks (Video = yellow, Audio Left = white, and Audio Right = red).

**Mono VCR:** Connect the video output cable from the VCR to the VIDEO input.

**S-VIDEO VCR:** Connect the S-Video output cable from the VCR to the S-VIDEO input. (Note that S-Video offers higher quality).

### How to use

1. Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)
2. Use the **INPUT SELECT** button on the remote control to select **Video**. (If connected to S-VIDEO, select the **S-Video** external input source.)

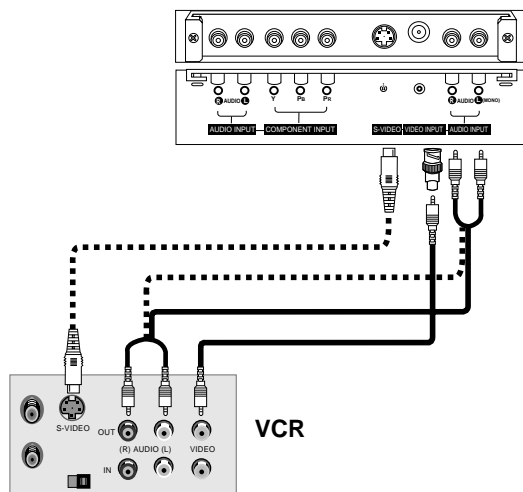

## Cable TV Setup


- After subscribing to a cable TV service from a local provider and installing a converter, you can watch cable TV programming. The monitor cannot display TV programming unless a TV tuner device or cable TV converter box is connected to the Monitor.
- For further information regarding cable TV service, contact your local cable TV service provider(s).

### How to connect

1. Connect the provided BNC-RCA adapter to the monitor's VIDEO INPUT.
2. Connect the audio and video cables between the cable TV's output jacks and the monitor input jacks, as shown in the figure. When connecting the monitor to VCR, match the colors of connecting jacks (Video = yellow, Audio Left = white, and Audio Right = red).

### How to use

1. Use the **INPUT SELECT** button on the remote control to select **Video**.
2. Select your desired channel with the remote control for cable box.

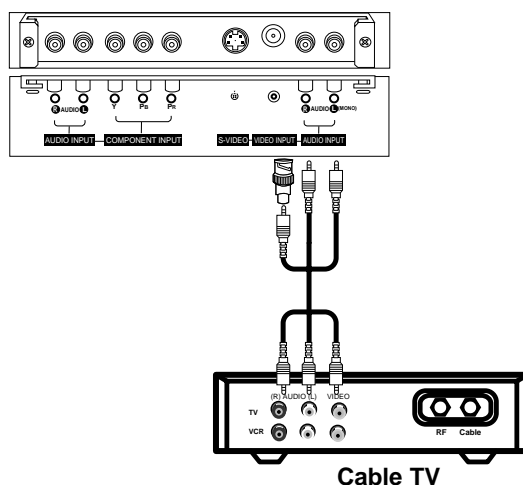


### External A/V Source Setup

#### How to connect


1. Connect the provided BNC-RCA adapter to the monitor's VIDEO INPUT.
2. Connect the audio and video cables between the external equipment's output jacks and the monitor input jacks, as shown in the figure. When connecting the monitor to external equipment, match the colors of connecting jacks (Video = yellow, Audio Left = white, and Audio Right = red).

#### How to use

1. Use the INPUT SELECT button on the remote control to select **Video**.
2. Operate the corresponding external equipment. Refer external equipment operating guide.

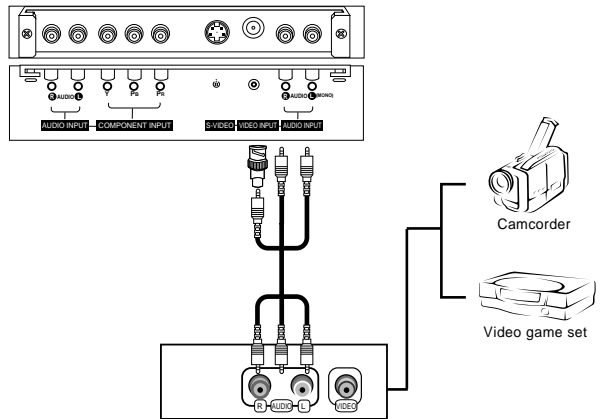

### DVD Setup

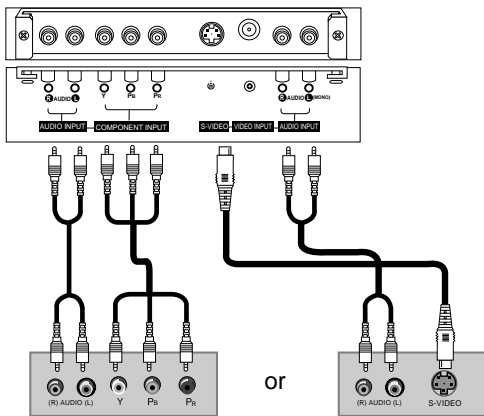

DVD

#### How to connect

1. Connect the DVD video outputs to the COMPONENT (Y, Pb, Pr) INPUT jacks and connect the DVD audio outputs to the AUDIO INPUT jacks, as shown in the figure.
2. If your DVD only has an S-Video output jack, connect this to the S-VIDEO input on the monitor and connect the DVD audio outputs to the AUDIO INPUT jacks, as shown in the figure.

#### How to use

1. Turn on the DVD player, insert a DVD
2. Use the INPUT SELECT button on the remote control to select **Component**. Refer to the DVD player's manual for operating instructions.

#### • Component Input ports

To get better picture quality, connect a DVD player to the component input ports as shown below.

Component ports of the Monitor	Y	Pb	Pr
Video output ports of DVD player	Y	Pb	Pr
	Y	B-Y	R-Y
	Y	Cb	Cr
	Y	PB	PR

### DTV Setup


- To watch digitally broadcast programs, purchase and connect a digital set-top box.
- This monitor supports HDCP (High-bandwidth Digital Contents Protection) protocol for DVI DTV (480p, 720p, 1080i) mode.

#### How to connect

1. Connect the DTV set-top box video output to the monitor's COMPONENT (Y, Pb, Pr) INPUT and audio jacks.
2. If the box has an RGB connector, connect it to the monitor's RGB INPUT connector and the audio input jack.

#### How to use

1. Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
2. Use **INPUT SELECT** on the remote control to select **Component**, **RGB** or **DVI**.

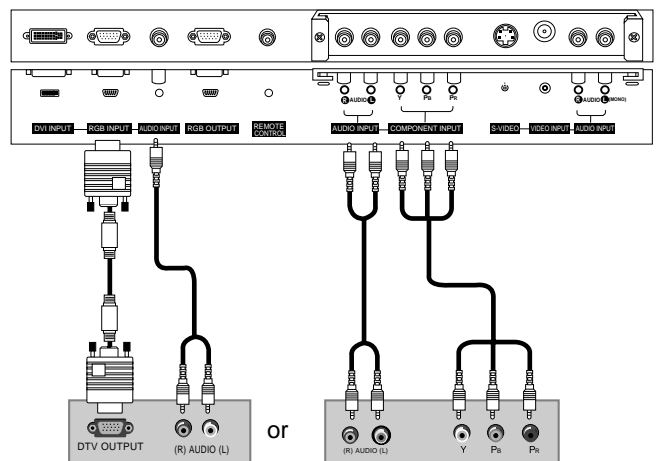

Digital Set-top box

## PC Setup

This plasma display provides Plug and Play capability, meaning that the PC adjusts automatically to its settings. The plasma display sends configuration information (EDID) to the PC using the Video Electronics Standard Association (VESA) Display Data Channel (DDC) protocol. It perceives the 640x480 resolution at 60 Hz to provide the Advanced Television Systems Committee (ATSC) 480P or 480-line progressive-scan television video signaling standard that is part of the Digital Television (DTV) standard for 60 frame-per-second video.


### How to connect

1. To get the best picture quality, adjust the PC graphics card to a 1024x768, 60Hz or 1366x768, 75 Hz. Resolutions over UXGA cannot be displayed.

2. Connect the signal cable from the PC video output port to the monitor's RGB INPUT port, or the PC's DVI (Digital Visual Interface) output port to the monitor's DVI INPUT port. If the graphic card on the PC does not output analog and digital RGB simultaneously, connect only one of both RGB INPUT or DVI INPUT to display the PC on the monitor.

If the graphic card on the PC does output analog and digital RGB simultaneously, set the monitor to either RGB or DVI; (the other mode is set to Plug and Play automatically by the monitor.)

3. Connect the audio cable from the PC to the AUDIO INPUT jacks on the plasma display. If using a sound card, adjust the PC sound as required.

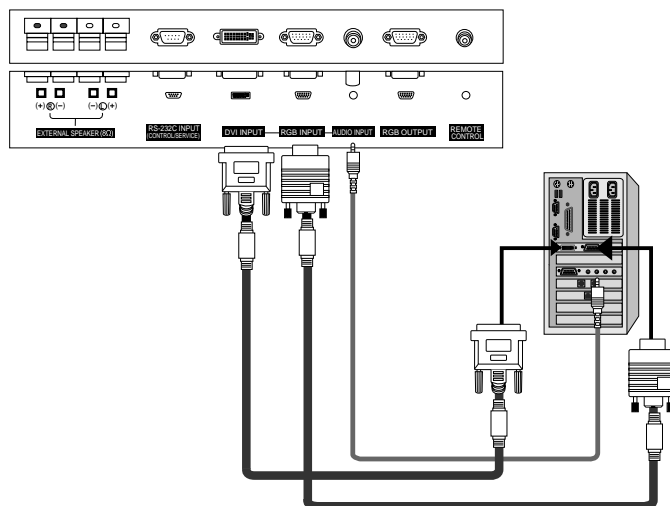

### How to use

1. Turn on the PC and the monitor.
2. Turn on the display by pressing the POWER button on the monitor's remote control.
3. Use the **INPUT SELECT** button on the remote control to select the **RGB** or **DVI**.
4. Check the image on your monitor. There may be noise associated with the resolution, vertical pattern, contrast or brightness in PC mode. If noise is present, change the PC mode to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.

- NOTES:**
- Depending on the graphics card, DOS mode may not work if you use a DVI-I cable.
  - Avoid keeping a fixed image on the monitor's screen for a long period of time. The fixed image may become permanently imprinted on the screen. Use the Orbiter screen saver when possible.
  - The synchronization input form for Horizontal and Vertical frequencies is separate.

## Monitor Display Specifications

## RGB Mode

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)	DDC	Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)	DDC
640x350	31.468	70.09		852x480	31.50	60.00	
	37.861	85.08			35.00	70.00	
720x400	31.469	70.08	o		37.50	75.00	
	37.927	85.03		1024x768	48.363	60.00	o
640x480	31.469	59.94	o		56.476	70.06	
	35.000	66.66			60.023	75.02	
	37.861	72.80		68.677	84.99		
	37.500	75.00		1152x864	54.348	60.05	o
	43.269	85.00			63.995	70.01	
	45.913	90.03			67.500	75.00	
53.011	100.04	1280x960	77.487	85.05	o		
64.062	120.00		75.000	75.00			
800x600	35.156	56.25	o	1280x1024	63.981	60.02	o
	37.879	60.31					
	46.875	75.00					
	53.674	85.06					
	56.000	90.00					
64.016	100.00						
832x624	49.725	74.55	o				
848x480	31.50	60.00					
	35.00	70.00					
	37.50	75.00					

## DVI Mode

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)	DDC	Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)	DDC	
640x350	31.468	70.09		852x480	31.50	60.00		
	37.861	85.08			35.00	70.00		
720x400	31.469	70.08	o		37.50	75.00		
	37.927	85.03		1024x768	48.363	60.00	o	
640x480	31.469	59.94	o		56.476	70.06		
	35.000	66.66			60.023	75.02		
	37.861	72.80		68.677	84.99			
	37.500	75.00		1152x864	54.348	60.05	o	
	43.269	85.00			63.995	70.01		
	800x600	35.156			56.25	o		67.500
37.879		60.31	77.487	85.05				
48.077		72.18	1152x870	68.681	75.06		o	
46.875		75.00	1280x960	60.000	60.00		o	
53.674		85.06		75.000	75.00			
832x624	49.725	74.55	o	1280x1024	63.981	60.02	o	
848x480	31.50	60.00						
	35.00	70.00						
	37.50	75.00						

# Operation

## Turning on the Monitor

### Turning on the Monitor just after installation

1. Connect power cord correctly.
2. Press the **ON/OFF** button on the Monitor. At this moment, the Monitor is switched to standby mode. Press the **INPUT SELECT** button on the Monitor or press the **POWER, INPUT SELECT** button on the remote control and then the Monitor will switch on.

### Turning on the Monitor (power cord is still connected)

1. If the Monitor was turned off with the **ON/OFF** button on the Monitor
  - Press the **ON/OFF** button on the Monitor to turn the Monitor on.
2. If the Monitor was turned off with the remote control or the **ON/OFF** button on the Monitor
  - Press the **ON/OFF** button on the Monitor and then press the **INPUT SELECT** button on the Monitor or press the **POWER, INPUT SELECT** button on the remote control to turn the Monitor on.

## Menu Language Selection

- The menus can be shown on the screen in the selected language. First select your language.

1. Press the **MENU** button and then use **▲ / ▼** button to select the **SPECIAL** menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Language**.
3. Press the **▶** button and then use **▲ / ▼** button to select your desired language.  
From this point on, the on-screen menus will be shown in the language of your choice.
4. Press the **MENU** button to save and return to the previous menu.

 


# Video Menu Options

- Each adjustment for video menu options doesn't effect other input source. Readjust Video menu for each following mode.
  - : RGB (PC) / DVI (DVI),
  - : RGB (DTV) / DVI (DTV) / Component (480p, 720p, 1080i)
  - : Video / S-Video / Component (480i)

## APC (Auto Picture Control)

- This function adjusts the Monitor to the best picture appearance.
1. Press the **APC** button repeatedly to select the picture appearance setup option as shown below.



- You can also select **Clear**, **Optimum**, **Soft** or **User** in the **VIDEO** menu.
- **Clear**, **Optimum** and **Soft** are preset for good picture quality at the factory and cannot be changed.

## Manual Picture Control (**User** option)

- You can adjust picture contrast, brightness, color, sharpness and tint to the levels you prefer.
- PIP settings are not adjustable.


1. Press the **MENU** button and then use **▲ / ▼** button to select the VIDEO menu.
2. Press the **▶** button and then use **▲ / ▼** button to select the desired picture option (**Contrast**, **Brightness**, **Color**, **Sharpness**, **Tint**).
3. Press the **▶** button and then use **◀ / ▶** button to make appropriate adjustments.
4. Press the **MENU** button to save and return to the previous menu.



## Adjusting Auto Color Control

- To initialize values (reset to default settings), select the **Normal** option.

1. Press the **MENU** button and then use **▲ / ▼** button to select the VIDEO menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **ACC**.
3. Press the **▲ / ▼** button to select either **Normal** (Default), **Cool** (Preset), **Warm** (Preset) or **User** (Manual Adjustment).
4. Press the **MENU** button to save and return to the previous menu.

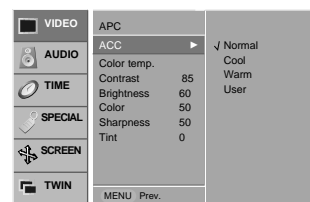

## Manual Color Temperature Control (**User** option)

- You can adjust red, green, or blue to any color temperature you prefer.

1. Press the **MENU** button and then use **▲ / ▼** button to select the VIDEO menu.
2. Press the **▶** button and then use **▲ / ▼** button to select the **Color temp.**
3. Press the **▶** button and then use **▲ / ▼** button to select **Red**, **Green** or **Blue**.
4. Use the **◀ / ▶** button to make appropriate adjustments.
  - The adjustment range of **Red**, **Green**, and **Blue** is -10 ~ +10.
5. Press the **MENU** button to save and return to the previous menu.





# Audio Menu Options

## DASP (Digital Auto Sound Processing)

- This function lets you enjoy the best sound without any special adjustment because the Monitor automatically selects the appropriate sound option based on the program content.
- When adjusting sound options (treble, bass, and balance) manually, DASP automatically changes to **User**.


1. Use the **DASP** button repeatedly to select the appropriate sound setup as shown below.



- You can also select **Flat**, **Music**, **Cinema**, **Sports**, or **User** in the **AUDIO** menu.
- **Flat**, **Music**, **Cinema** and **Sports** are preset for good sound quality at the factory and cannot be changed.

## Manual Sound Control (**User** option)


1. Press the **MENU** button and then use **▲ / ▼** button to select the **AUDIO** menu.
2. Press the **▶** button and then use **▲ / ▼** button to select the desired sound option (**Balance**, **Treble**, **Bass**).
3. Press the **▶** button and then use **◀ / ▶** button to make appropriate adjustments.
4. Press the **MENU** button to save and return to the previous menu.

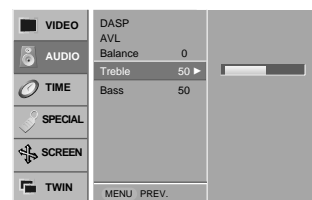

## AVL (Auto Volume Leveler)

- This feature maintains an equal volume level; even if you change channels.

1. Press the **MENU** button and then use **▲ / ▼** button to select the **AUDIO** menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **AVL**.
3. Press the **▶** button and then use **▲ / ▼** button to select **On** or **Off**.
4. Press the **MENU** button to save and return to the previous menu.

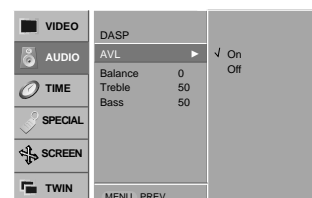

# Time Menu Options

## Setting the Clock

- If current time setting is erased by a power failure, if TV is unplugged or if the monitor is turned off with the **ON/OFF** button on the monitor, reset the clock.

1. Press the **MENU** button and then use **▲ / ▼** button to select the **TIME** menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Clock**.
3. Press the **▶** button and then use **▲ / ▼** button to set the hour.
4. Press the **▶** button and then use **▲ / ▼** button to set the minutes.
5. Press the **MENU** button to save and return to the previous menu.



## Setting the On/Off Timer

- Timer function operates only if current time has been already set.  
 - Off-Timer function overrides On-Timer function if they are set to the same time.  
 - The monitor must be in standby mode for the On Timer to work.


1. Press the **MENU** button and then use **▲ / ▼** button to select the **TIME** menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Off timer** or **On timer**.
3. Press the **▶** button and then use **▲ / ▼** button to select **On**.
  - To cancel **On/Off timer** function, select **Off**.
4. Press the **▶** button and then use **▲ / ▼** button to set the hour.
5. Press the **▶** button and then use **▲ / ▼** button to set the minutes.
6. **For only On timer function;** Press the **▶** button and then use **▲ / ▼** button to set volume level.
6. Press the **MENU** button to save and return to the previous menu.



## Auto Off

- If there is no input signal, the Monitor turns off automatically after 10 minutes.

1. Press the **MENU** button and then use **▲ / ▼** button to select the **TIME** menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Auto off**.
3. Press the **▶** button and then use **▲ / ▼** button to select **On** or **Off**.
4. Press the **MENU** button to save and return to the previous menu.

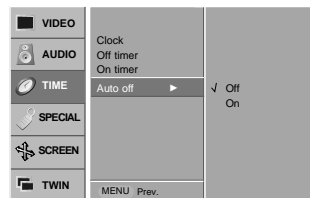

## Sleep Timer

- The sleep timer turns the Monitor off at a preset time. Note that this setting is cleared when the monitor is turned off.


1. Press the **SLEEP** button repeatedly to select the number of minutes. First the **zz** --- **Min** option appears on the screen, followed by the following sleep timer options:  
 10, 20, 30, 60, 90, 120, 180, and 240 minutes.
2. When the number of minutes you want is displayed on the screen, press the **OK** button. The timer begins to count down from the number of minutes selected.
3. To check the remaining minutes before the monitor turns off, press the **SLEEP** or **OK** button once.
4. To cancel the Sleep Timer, press the **SLEEP** button repeatedly until **zz** --- **Min** appears.


# Special Menu Options

## Key Lock

- The monitor can be set up so that it can only be used with the remote control.
- This feature can be used to prevent unauthorized viewing.
- This Monitor is programmed to remember which option it was last set to even if you turn the monitor off.

1. Press the **MENU** button and then use **▲ / ▼** button to select the SPECIAL menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Key lock**.
3. Press the **▶** button and then use **▲ / ▼** button to select **On** or **Off**.
4. Press the **MENU** button to save and return to the previous menu.

- With the Key lock 'On' setting, the display '  **Key lock**' appears on the screen if any button on the front panel is pressed.

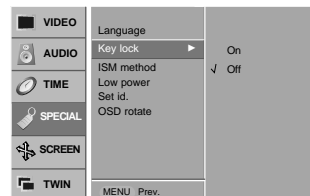

-In setting **Key lock 'On'**, if the monitor is turned off with the remote control, press the **INPUT SELECT** button on the monitor or **POWER, INPUT SELECT** on the remote control.

## ISM (Image Sticking Minimization) method

- Frozen still picture from a PC/video game displayed on the screen for prolonged periods will result in an ghost image remaining even when you change the image. Avoid allowing a fixed image to remain on the Monitor's screen for a long period of time.

1. Press the **MENU** button and then use **▲ / ▼** button to select the SPECIAL menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **ISM method**.
3. Press the **▶** button and then use **▲ / ▼** button to select either **Normal**, **White wash**, **Orbiter** or **Inversion**. If you unnecessary to set this function, set **Normal**.

### • White wash:

White Wash removes permanent images from the screen. Note: An excessive permanent image may be impossible to clear entirely with White Wash.


### • Orbiter:

Orbiter may help prevent ghost images. However, it is best not to allow any fixed image to remain on the screen. To avoid a permanent image on the screen, the screen will move every 2 minutes: Right → Right → Downside → Downside → Left → Left → Upside → Upside. To return to normal viewing, press the any button.

### • Inversion:

This is the function to invert the panel color of monitor. The panel color is automatically inverted every 30 minutes.

4. Press the **MENU** button to save and return to the previous menu.

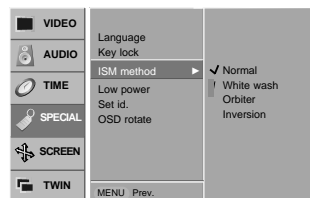


## Low power

- This is the function to reduce the power consumption of the monitor.

1. Press the **MENU** button and then use **▲ / ▼** button to select the SPECIAL menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Low power**.
3. Press the **▶** button and then use **▲ / ▼** button to select **On** or **Off**.

- When you select **On**, the screen becomes dim.

4. Press the **MENU** button to save and return to the previous menu.

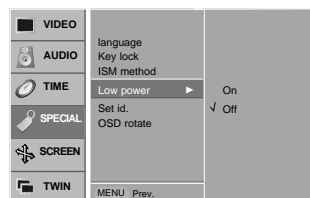


## Menu Rotation for Vertical Viewing

1. Press the **MENU** button and then use the **▲ / ▼** button to select the SPECIAL menu.
2. Press the **▶** button and then use the **▲ / ▼** button to select **OSD rotate**.
3. Press the **▶** button and then use the **▲ / ▼** button to select **Normal** or **Rotate**.

- Select **Normal** if the monitor was installed horizontally.
- Select **Rotate**, if the monitor was installed vertically.

4. Press the **MENU** button to save and return to the previous menu.

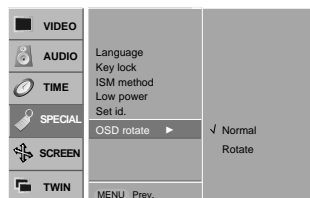

# Screen Menu Options

## Auto Adjustment

- RGB (PC) mode only; This function doesn't work in RGB-DTV.
- Automatically adjusts picture position and minimizes image shaking.
- If the image is still not correct, your Monitor is functioning properly but needs further adjustment.
- The **AUTO CONFIG.** and the **MANUAL CONFIG** can be adjust automatically for DVI mode.

1. Press the **MENU** button and then use **▲ / ▼** button to select the **SCREEN** menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Auto config.**
3. Press the **▶** button to run Auto configure.
  - When **Auto config.** has finished, **OK** will be shown on screen.
  - If the position of the image is still not correct, try Auto adjustment again.
4. If picture needs to be adjusted more after Auto adjustment in RGB mode, you can adjust the **Manual config.**




## Setting Picture Format

- If a 4:3 fixed image is on the screen for a long time, it may remain visible.
1. Use the **ARC** button repeatedly to select the desired picture format. You can also select picture format **4:3**, **16:9**, **Panorama** or **ZOOM** in the **SCREEN** menu.
    - **4:3**
      - Choose when you want to view a picture with an original 4:3 aspect ratio, with black bars appearing at both the left and right sides.
    - **16:9 (Wide)**
      - Choose when you want to adjust the picture horizontally, in a linear proportion to fill the entire screen. (Useful for viewing 4:3 formatted DVDs.)
    - **Panorama**
      - Choose when you want to adjust the picture in a non-linear proportion, that is, more enlarged at both sides, to create a spectacular view.
      - RGB, DVI or Component (DTV) sources can't use the Panorama feature.
    - **ZOOM**
      - Choose when you want to view the picture without any alteration. However, the top and bottom portions of the picture will be cropped.
      - RGB, DVI or Component (DTV) sources can't use the Zoom feature.

## Picture Size Zoom

When enlarging or reducing the picture, the image may become distorted.


1. Use **ZOOM+/ZOOM-** button to enlarge or reduce the picture size.
  - The adjustment range of Zoom is 100~300.
2. Adjust the main picture position with the **▲ / ▼ / ◀ / ▶** buttons in enlarged picture mode.

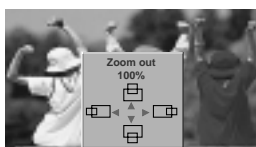


## Split Zoom

- Enlarges the picture in correct proportion.
- Split Zoom can be used for every input source.
- with 2-SPLIT ZOOM, you can only move the screen into upside or downside.
- If a screen is enlarged, a screen can move without selecting section of screen Split Zoom.

1. Press the **SPLIT ZOOM** button repeatedly switches between dividing the screen into 2, 4 or 9 sections.

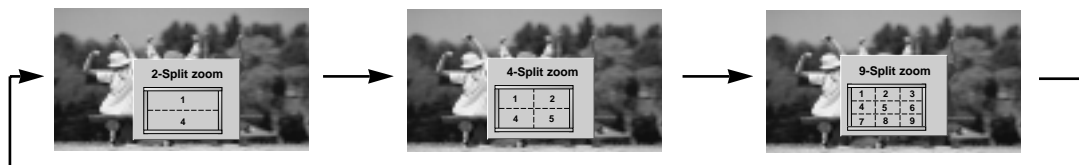


2. Press the number button corresponding to the section you wish to enlarge. you can move the enlarged screen with using the **▲ / ▼ / ◀ / ▶** button. To return to normal viewing, press the **SPLIT ZOOM** button again.

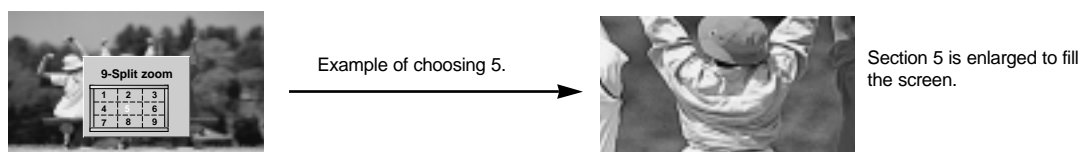

## Screen Position

- This function works in the following mode:  
RGB-PC, RGB-DTV (480p,720p,1080i), COMPONENT (480p,720p,1080i).


1. Press the **MENU** button and then use **▲ / ▼** button to select the SCREEN menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Position**.
3. Press the **▶** button and then use **▲ / ▼ / ◀ / ▶** button to adjust the position.
4. Press the **MENU** button to save and return to the previous menu.

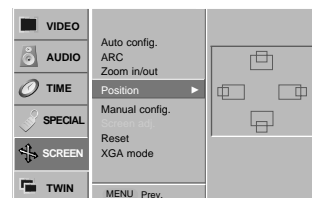

## Manual Configure (RGB-PC mode only)

- If the picture isn't clear after auto adjustment and especially if characters are still jittery, adjust the picture phase manually.
- To correct the screen size, adjust **Clock**.

1. Press the **MENU** button and then use **▲ / ▼** button to select the SCREEN menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Manual config.**
3. Press the **▶** button and then use **▲ / ▼** button to select **Phase** or **Clock**.
4. Use the **◀ / ▶** button to make appropriate adjustments.
  - The adjustment range of **Phase** is 0 ~ 31.
  - The adjustment range of **Clock** is -50 ~ +50.
5. Press the **MENU** button to save and return to the previous menu.

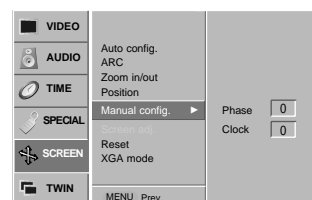

## Screen Menu Options continued


### Screen Adjustments (Video, S-Video and Component 480i mode only)

- Use this function to correct jittering or picture instability while viewing a video tape.
1. Press the **MENU** button and then use ▲ / ▼ button to select the **SCREEN** menu.
  2. Press the ► button and then use ▲ / ▼ button to select **Screen adj.**.
  3. Press the ► button and then use ▲ / ▼ button to select **TV** or **VCR**.
    - Select the **VCR** option if watching a VCR.
    - Select the **TV** option for other equipment.(Except VCR)
  4. Press the **MENU** button.




### Initializing (Reset to original factory value)

- This function operates in every mode.
  - To initialize the adjusted value
1. Press the **MENU** button and then use ▲ / ▼ button to select the **SCREEN** menu.
  2. Press the ► button and then use ▲ / ▼ button to select **Reset**.
  3. Press the ► button.
    - You can initialize POSITION, PIP size, PIP position and sub picture size for twin picture.

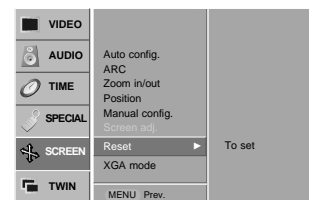

### Selecting Wide VGA/XGA mode (RGB, DVI-PC mode only)

- To see a normal picture, match the resolution of RGB XGA mode (1024x768, 1360x768, 1366x768) with the selection for XGA mode and the resolution of RGB VGA mode (640x480, 848x480, 852x480) with the selection for VGA mode in the SCREEN menu.
  - If the input source is RGB VGA mode, the screen menu option is changed from **XGA mode** to **VGA mode** automatically.
1. Press the **MENU** button and then use ▲ / ▼ button to select the **SCREEN** menu.
  2. Press the ► button and then use ▲ / ▼ button to select **VGA mode/XGA mode**.
  3. Press the ► button and then use ▲ / ▼ button to select the desired VGA/XGA resolution.
  4. Press the **MENU** button.

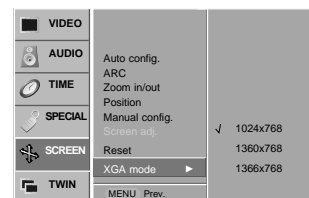

# PIP (Picture-In-Picture) Feature

- PIP lets you view 2 different inputs (sources) on your monitor screen at the same time. One source will be large, and the other source will show a smaller inset image.
- When you select PC or DTV for main picture in PIP, you can watch VIDEO, S-VIDEO or COMPONENT 480i for sub picture.

## Watching PIP

Press the **PIP** button repeatedly to select turn PIP on or off.



## PIP Size

Press the **WIN.SIZE** button and then use **◀ / ▶** button to change the sub picture size.




## PIP Aspect Ratio

Press the **PIP ARC** button. The sub picture appears as shown.



## Swapping the PIP

Press the **SWAP** button to exchange the main and sub pictures.

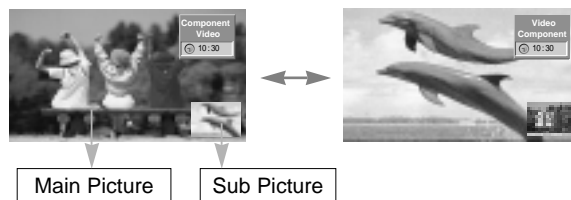

## Moving the PIP

Press the **WIN.POSITION** button.

Press the **▲ / ▼ / ◀ / ▶** button repeatedly until desired position is achieved. The sub picture moves up/down/left/right.



## Selecting a Input Signal Source for the PIP

Use the **SUB INPUT** button to select the input source for the sub picture.

- In Video for main picture, you can select S-Video, Component 480p/720p/1080i, RGB and DVI for sub picture.
- In S-Video for main picture, you can select Video, Component 480p/720p/1080i, RGB and DVI for sub picture.
- In Component 480i for main picture, you can select RGB, DVI, Video and S-Video for sub picture.
- In Component 480p/720p/1080i for main picture, you can select Video and S-Video for sub picture.
- In RGB and DVI for main picture, you can select Component 480i, Video and S-Video for sub picture.



# Twin Picture Setup Option

- As the name suggests, this mode splits the screen into 2, allowing 2 picture sources to be shown on the monitor screen at the same time. Each source is given half the screen.

## Main Picture Size Adjustment

Use the **TWIN PICTURE** button repeatedly to select one of the Twin Picture options.



## Sub Picture Size Adjustment


Use the **WIN.SIZE** button.

- Use the ◀ / ▶ button to adjust the sub picture size.
- Using WIN.SIZE function in Twin Picture mode, main and sub picture are adjusted simultaneously.
- Using WIN.SIZE function in PIP mode, sub picture is adjusted.
- WIN.POSITION is not functional in twin picture mode.



## Swapping the Twin Picture

Use the **SWAP** button to switch the main and sub pictures in twin picture mode.

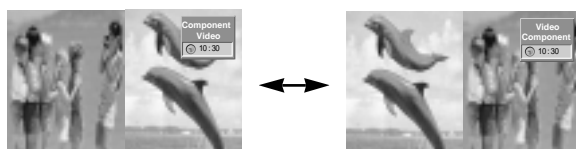

## Selecting a Source for the Twin Picture

Use the **SUB INPUT** button to select the input source for the sub picture.

- In Video for main picture, you can select S-Video, Component 480p/720p/1080i, RGB and DVI for sub picture.
- In S-Video for main picture, you can select Video, Component 480p/720p/1080i, RGB and DVI for sub picture.
- In Component 480i for main picture, you can select RGB, DVI, Video and S-Video for sub picture.
- In Component 480p/720p/1080i for main picture, you can select Video and S-Video for sub picture.
- In RGB and DVI for main picture, you can select Component 480i, Video and S-Video for sub picture.






# External Control Device Setup


- Connect the RS-232C input jack to an external control device (such as a computer or an A/V control system) and control the Monitor's functions externally.
- Connect the serial port of the control device to the RS-232C jack on the Monitor back panel.
- RS-232C connection cables are not supplied with the Monitor.

## Type of connector; D-Sub 9-pin male

No.	Pin name
1	No connection
2	RXD (Receive data)
3	TXD (Transmit data)
4	DTR (DTE side ready)
5	GND
6	DSR (DCE side ready)
7	RTS (Ready to send)
8	CTS (Clear to send)
9	No Connection

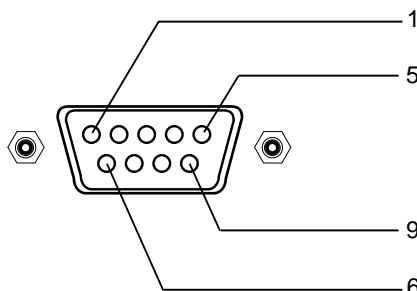


## RS-232C configurations

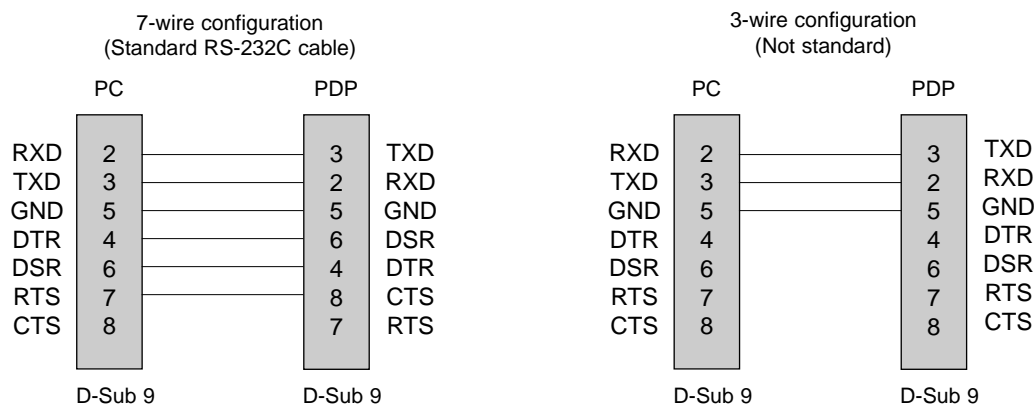

## Set ID

- Use this function to specify a monitor ID number.
  - Refer to 'Real Data Mapping 1'. See page 27.
1. Press the **MENU** button and then use the **▲ / ▼** button to select the **SPECIAL** menu.
  2. Press the **▶** button and then use **▲ / ▼** button to select **Set id.**
  3. Press the **▶** button and then use **◀ / ▶** button to adjust **Set id.** to choose the desired monitor ID number.
    - The adjustment range of **Set id.** is 1 ~ 99.

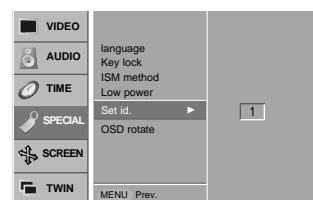

## Communication Parameters

- Baud rate : 115200 bps (UART)
- Data length : 8 bits
- Parity : None
- Stop bit : 1 bit
- Communication code : ASCII code

## Command Reference List

	COMMAND 1	COMMAND 2	DATA (Hexadecimal)
01. Power	k	a	0 ~ 1
02. Input Select	k	b	0 ~ 4
03. Aspect Ratio	k	c	0 ~ 2
04. Screen Mute	k	d	0 ~ 1
05. Volume Mute	k	e	0 ~ 1
06. Volume Control	k	f	0 ~ 64
07. Contrast	k	g	0 ~ 64
08. Brightness	k	h	0 ~ 64
09. Color	k	i	0 ~ 64
10. Tint	k	j	0 ~ 64
11. Sharpness	k	k	0 ~ 64
12. OSD select	k	l	0 ~ 1
13. Remote control lock mode	k	m	0 ~ 1
14. PIP/Twin	k	n	0 ~ 3
15. PIP size	k	o	0 ~ 1
16. PIP position	k	q	0 ~ 3
17. Treble	k	r	0 ~ 64
18. Bass	k	s	0 ~ 64
19. Balance	k	t	0 ~ 64
20. Color temperature	k	u	0 ~ 3
21. Red adjustment	k	v	0 ~ 64
22. Green adjustment	k	w	0 ~ 64
23. Blue adjustment	k	\$	0 ~ 64
24. PIP input source	k	y	0 ~ 4
25. Abnormal Status	k	z	0 ~ a
26. Orbiter	j	p	0 ~ 1
27. White Wash	j	q	0 ~ 1
28. Orbiter Time Setting	j	r	1 ~ FE
29. Orbiter Pixel Setting	j	s	0 ~ 9
30. Picture Size Setting for Twin Picture mode	j	t	0 ~ 64

- When setting the 26 ~ 30, a menu doesn't display on screen.

## Transmission / Receiving Protocol

### Transmission

[Command1][Command2][ ][Set ID][ ][Data][Cr]

- \* [Command 1] : k
- \* [Command 2] : To control PDP set.
- \* [Set ID] : You can adjust the set ID to choose desired monitor ID number in special menu. See previous page. Adjustment range is 1 ~ 99. When selecting Set ID '0', every connected PDP set is controlled.
- \* [DATA] : To transmit command data. Transmit 'FF' data to read status of command.
- \* [Cr] : Carriage Return  
ASCII code '0x0D'
- \* [ ] : ASCII code 'space (0x20)'

### OK Acknowledgement

[Command2][ ][Set ID][ ][OK][Data][x]

- \* The Monitor transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

### Error Acknowledgement

[Command2][ ][Set ID][ ][NG][x]

- \* The Monitor transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

## 01. Power (Command:a)

- ▶ To control Power On/Off of the Monitor.

### Transmission

[k][a][ ][Set ID][ ][Data][Cr]

Data 0 : Power Off 1 : Power On

### Acknowledgement

[a][ ][Set ID][ ][OK][Data][x]

- ▶ To show Power On/Off.

### Transmission

[k][a][ ][Set ID][ ][FF][Cr]

Data 0 : Power Off 1 : Power On

### Acknowledgement

[a][ ][Set ID][ ][OK][Data][x]

- \* In like manner, if other functions transmit 'FF' data based on this format, Acknowledgement data feed back presents status about each function.

## 02. Input Select (Command:b) (Main Picture Input)

- ▶ To select input source for the Monitor.  
You can also select an input source using the INPUT SELECT button on the Monitor's remote control.

### Transmission

[k][b][ ][Set ID][ ][Data][Cr]

Data 0 : RGB 1 3 : S-VIDEO  
1 : COMPONENT 4 : RGB 2  
2 : VIDEO

### Acknowledgement

[b][ ][Set ID][ ][OK][Data][x]

### 03. Aspect Ratio (Command:c) (Main picture format)

- ▶ To adjust the screen format.  
You can also adjust the screen format using the ARC (Aspect Ratio Control) button on remote control or in the Special menu.

#### Transmission

[k][c][ ][Set ID][ ][Data][Cr]

Data 0 : Wide screen (16:9)  
1 : Normal screen (4:3)  
2 : Full screen (Zoom)

#### Acknowledgement

[c][ ][Set ID][ ][OK][Data][x]

- \* Using the PC input, you select either 16:9 or 4:3 screen aspect ratio.

### 04. Screen Mute (Command:d)

- ▶ To select screen mute on/off.

#### Transmission

[k][d][ ][Set ID][ ][Data][Cr]

Data 0 : Screen mute off (Picture on)  
1 : Screen mute on (Picture off)

#### Acknowledgement

[d][ ][Set ID][ ][OK][Data][x]

### 05. Volume Mute (Command:e)

- ▶ To control volume mute on/off.  
You can also adjust mute using the MUTE button on remote control.

#### Transmission

[k][e][ ][Set ID][ ][Data][Cr]

Data 0 : Volume mute on (Volume off)  
1 : Volume mute off (Volume on)

#### Acknowledgement

[e][ ][Set ID][ ][OK][Data][x]

### 06. Volume Control (Command:f)

- ▶ To adjust volume.  
You can also adjust volume with the volume buttons on remote control.

#### Transmission

[k][f][ ][Set ID][ ][Data][Cr]

Data Min : 0 ~ Max : 64  
\* Refer to 'Real data mapping1' as shown right.

#### Acknowledgement

[f][ ][Set ID][ ][OK][Data][x]

### 07. Contrast (Command:g)

- ▶ To adjust screen contrast.  
You can also adjust contrast in the Video menu.

#### Transmission

[k][g][ ][Set ID][ ][Data][Cr]

Data Min : 0 ~ Max : 64  
\* Refer to 'Real data mapping1' as shown below.

#### Acknowledgement

[g][ ][Set ID][ ][OK][Data][x]

### 08. Brightness (Command:h)

- ▶ To adjust screen brightness.  
You can also adjust brightness in the Video menu.

#### Transmission

[k][h][ ][Set ID][ ][Data][Cr]

Data Min : 0 ~ Max : 64  
\* Refer to 'Real data mapping1' as shown below.

#### Acknowledgement

[h][ ][Set ID][ ][OK][Data][x]

### 09. Color (Command:i)

- ▶ To adjust the screen color.  
You can also adjust color in the Video menu.

#### Transmission

[k][i][ ][Set ID][ ][Data][Cr]

Data Min : 0 ~ Max : 64  
\* Refer to 'Real data mapping1' as shown below.

#### Acknowledgement

[i][ ][Set ID][ ][OK][Data][x]

### 10. Tint (Command:j)

- ▶ To adjust the screen tint.  
You can also adjust tint in the Video menu.

#### Transmission

[k][j][ ][Set ID][ ][Data][Cr]

Data Red : 0 ~ Green : 64  
\* Refer to 'Real data mapping1' as shown below.

#### Acknowledgement

[j][ ][Set ID][ ][OK][Data][x]

* Real data mapping 1	* Real data mapping 2
0 : Step 0	0 : -10
⋮	5 : -9
A : Step 10 (SET ID 10)	A : -8
⋮	⋮
F : Step 15 (SET ID 15)	2D : -1
10 : Step 16 (SET ID 16)	32 : 0
⋮	37 : +1
64 : Step 100	⋮
	5F : +9
	64 : +10

**11. Sharpness (Command2:k)**

- ▶ To adjust the screen sharpness.  
You can also adjust sharpness in the Video menu.

*Transmission*

[k][k][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64

- Refer to 'Real data mapping1'. See page 27.

*Acknowledgement*

[k][ ][Set ID][ ][OK][Data][x]

**12. OSD Select (Command2:l)**

- ▶ To select OSD (On Screen Display) on/off.

*Transmission*

[k][l][ ][Set ID][ ][Data][Cr]

Data 0: OSD off                      1: OSD on

*Acknowledgement*

[l][ ][Set ID][ ][OK][Data][x]

**13. Remote Control Lock Mode (Command2:m)**

- ▶ To lock the front panel controls on the monitor

*Transmission*

[k][m][ ][Set ID][ ][Data][Cr]

Data 0: Lock off                      1: Lock on

*Acknowledgement*

[m][ ][Set ID][ ][OK][Data][x]

- If you're not using the remote control, use this mode.  
When main power is on/off, remote control lock is released.

**14. PIP / Twin (Command2:n)**

- ▶ To control the PIP (Picture In picture).  
You can also control the PIP/TWIN using the PIP or Twin picture button on the remote control or in the Special menu.

*Transmission*

[k][n][ ][Set ID][ ][Data][Cr]

Data 0: PIP/DW off                      2: DW1  
1: PIP                                      3: DW2*Acknowledgement*

[n][ ][Set ID][ ][OK][Data][x]

**15. PIP Size (Command2:o)**

- ▶ To select the PIP picture format.  
You can also select the PIP picture format using WIN.SIZE on the remote control.

*Transmission*

[k][o][ ][Set ID][ ][Data][Cr]

Data 0: 4:3                              1: 16:9

*Acknowledgement*

[o][ ][Set ID][ ][OK][Data][x]

**16. PIP Position (Command2:q)**

- ▶ To select sub picture position for PIP.  
You can also adjust the sub picture position using WIN.POSITION on the remote control or in the Special menu.

*Transmission*

[k][q][ ][Set ID][ ][Data][Cr]

Data 0: Right down on screen  
1: Left down on screen  
2: Left up on screen  
3: Right up on screen*Acknowledgement*

[q][ ][Set ID][ ][OK][Data][x]

**17. Treble (Command2:r)**

- ▶ To adjust treble.  
You can also adjust treble in the Audio menu.

*Transmission*

[k][r][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64

- Refer to 'Real data mapping1'. See page 27.

*Acknowledgement*

[r][ ][Set ID][ ][OK][Data][x]

**18. Bass (Command2:s)**

- ▶ To adjust bass.  
You can also adjust bass in the Audio menu.

*Transmission*

[k][s][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64

- Refer to 'Real data mapping1'. See page 27.

*Acknowledgement*

[s][ ][Set ID][ ][OK][Data][x]

**19. Balance (Command2:t)**

- ▶ To adjust balance.  
You can also adjust balance in the Audio menu.

*Transmission*

[k][t][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64

- Refer to 'Real data mapping1'. See page 27.

*Acknowledgement*

[t][ ][Set ID][ ][OK][Data][x]

**20. Color Temperature (Command2:u)**

- ▶ To adjust color temperature.  
You can also adjust ACC in the Video menu.

*Transmission*

[k][u][ ][Set ID][ ][Data][Cr]

Data 0: Normal    1: Cool    2: Warm    3: User

*Acknowledgement*

[u][ ][Set ID][ ][OK][Data][x]

## 21. Red Adjustment (Command2:v)

▶ To adjust red in color temperature.

### Transmission

[k][v][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64

- Refer to 'Real data mapping 2'. See page 27.

### Acknowledgement

[v][ ][Set ID][ ][OK][Data][x]

## 22. Green Adjustment (Command2:w)

▶ To adjust green in color temperature.

### Transmission

[k][w][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64

- Refer to 'Real data mapping 2'. See page 27.

### Acknowledgement

[w][ ][Set ID][ ][OK][Data][x]

## 23. Blue Adjustment (Command2:\$)

▶ To adjust blue in color temperature.

### Transmission

[k][\$][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64

- Refer to 'Real data mapping 2'. See page 27.

### Acknowledgement

[\$][ ][Set ID][ ][OK][Data][x]

## 24. PIP Input Select (Command2:y)

▶ To select input source for sub picture in PIP mode.

### Transmission

[k][y][ ][Set ID][ ][Data][Cr]

Data 0: RGB1            1: COMPONENT  
2: VIDEO            3: S-VIDEO            4: RGB2

### Acknowledgement

[y][ ][Set ID][ ][OK][Data][x]

## 25. Abnormal State (Command2:z)

▶ To recognize an abnormal state.

### Transmission

[k][z][ ][Set ID][ ][FF][Cr]

Data 0: Normal (Power on and signal exist)  
1: No signal (Power on)  
2: Turn the monitor off by remote control  
3: Turn the monitor off by sleep time function  
4: Turn the monitor off by RS-232C function  
5: 5V down  
6: AC down  
7: Turn the monitor off by Fan Alarm function  
8: Turn the monitor off by off time function  
9: Turn the monitor off by auto off function  
a: Turn the monitor off by AV board detect

### Acknowledgement

[z][ ][Set ID][ ][OK][Data][x]

\* This function is "read only".

## 26. Orbiter (Command2:p)

▶ To control the orbiter function on/off.

### Transmission

[i][p][ ][Set ID][ ][Data][Cr]

Data 0: Orbiter off  
1: Orbiter on

### Acknowledgement

[p][ ][Set ID][ ][OK][Data][x]

## 27. White Wash (Command2:q)

▶ To control the white wash function on/off.

### Transmission

[i][q][ ][Set ID][ ][Data][Cr]

Data 0: White Wash off  
1: White Wash on

### Acknowledgement

[q][ ][Set ID][ ][OK][Data][x]

## 28. Orbiter Time Setting (Command2:r)

▶ To adjust orbiter operation time term.

### Transmission

[i][r][ ][Set ID][ ][Data][Cr]

Data Min: 1 ~ Max: FE

- Refer to 'Real data mapping1'. See page 27.

### Acknowledgement

[r][ ][Set ID][ ][OK][Data][x]

## 29. Orbiter Pixel Setting (Command2:s)

▶ To adjust pixel number in orbiter function.

### Transmission

[i][s][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 9

- Refer to 'Real data mapping1'. See page 27.

### Acknowledgement

[s][ ][Set ID][ ][OK][Data][x]

## 30. Picture Size Setting for Twin Picture mode (Command2:t)

▶ To adjust main window size in twin picture mode.

### Transmission

[i][t][ ][Set ID][ ][Data][Cr]

Data Min: 0 ~ Max: 64

- Refer to 'Real data mapping1'. See page 27.

### Acknowledgement

[t][ ][Set ID][ ][OK][Data][x]

# IR Code (NEC Format)


## How to connect

- ▶ Connect your wired remote control to the Remote port on the Monitor.  
Set the CONTROL LOCK to 'ON' on the Monitor back panel to operate Monitor with wired remote control.

## Remote Control IR Code (NEC Format)


### ▶ Output waveform

Single pulse, modulated with 37.917KHz signal at 455KHz

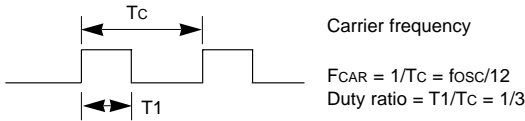


### ▶ Configuration of frame

 
- 1st frame




- Repeat frame

 


### ▶ Lead code

 

### ▶ Repeat code

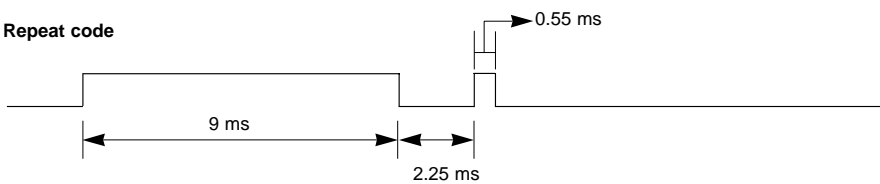


### ▶ Bit description

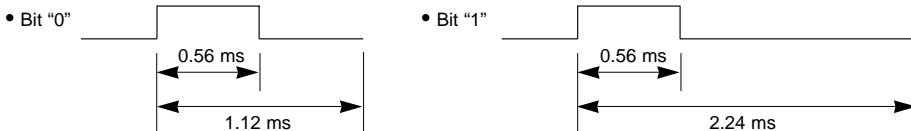

### ▶ Frame interval : $T_f$

The waveform is transmitted as long as a key is depressed.

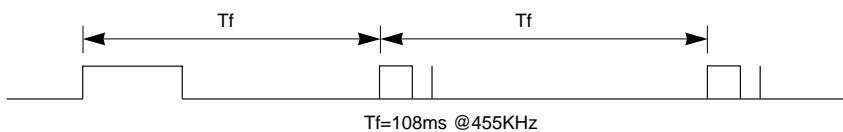

Code (Hexa)	Function	Note
00H	UP (▲)	R/C Button
01H	DOWN (▼)	R/C Button
02H	VOL+ (▶)	R/C Button
03H	VOL- (◀)	R/C Button
08H	POWER On/Off	R/C Button (Power On/Off)
C4H	POWER ON	Discrete IR Code (Only Power On)
C5H	POWER OFF	Discrete IR Code (Only Power Off)
09H	MUTE	R/C Button
10H	Number Key 0	R/C Button
11H	Number Key 1	R/C Button
12H	Number Key 2	R/C Button
13H	Number Key 3	R/C Button
14H	Number Key 4	R/C Button
15H	Number Key 5	R/C Button
16H	Number Key 6	R/C Button
17H	Number Key 7	R/C Button
18H	Number Key 8	R/C Button
19H	Number Key 9	R/C Button
0BH	All INPUT SELECT	R/C Button(RGB1/RGB2/Comp/VIDEO/S-VIDEO)
98H	RGB 1	Discrete IR Code (Input RGB1 Selection)
C6H	RGB 2 (DVI input)	Discrete (Input RGB2 Selection)
5AH	VIDEO	Discrete (Input VIDEO Selection)
51H	S-VIDEO	Discrete (Input S-VIDEO Selection)
BFH	COMPONENT	Discrete (Input COMPONENT Selection)
0EH	SLEEP	R/C Button
44H	OK (■)	R/C Button
43H	MENU	R/C Button
52H	DASP	R/C Button
4DH	APC	R/C Button
60H	PIP	R/C Button
61H	PIP INPUT	R/C Button
63H	SWAP	R/C Button (PIP/TWIN Exchange)
64H	PIP ARC	R/C Button (4:3/16:9)
6BH	TWIN PICTURE	R/C Button
40H	ZOOM +	R/C Button
41H	ZOOM -	R/C Button
69H	Window Size	R/C Button
6AH	Window Position	R/C Button
7BH	Split Zoom	R/C Button
79H	ARC	R/C Button(4:3/16:9/Zoom Mode Selection)
76H	ARC (4:3)	Discrete (Only 4:3 mode)
77H	ARC (16:9)	Discrete (Only 16:9 mode)
AFH	ARC (ZOOM)	Discrete (Only ZOOM mode)

# Troubleshooting Checklist

## No picture & No sound

- Check whether the Monitor is turned on.
- Power cord inserted into wall outlet?
- Test the wall power outlet, plug other product's power cord into the wall outlet where the Monitor's power cord was plugged in.

## Picture OK & No sound

- Press the **VOLUME** (▶) button.
- Sound muted? Press **MUTE** button.

## The remote control doesn't work

- Check to see if there is any object between the Plasma Display and the remote control causing obstruction.
- Are batteries installed with correct polarity (+ to +, - to -)? (Refer to p.8)
- Install new batteries. (Refer to p.8)

## Picture appears slowly, after switching on

- This is normal as the image is muted during the startup process of the monitor. Please contact your service centre, if the picture has not appeared after five minutes.

## No or Poor color or Poor picture

- Select **Color** in the **VIDEO** menu and press the **VOLUME** (▶) button. (Refer to p.16)
- Keep a certain distance between the Monitor and the VCR.
- Activate any function to restore the brightness of the picture. (If still picture is on the screen for more than 5 minutes, the screen gets dark.)

## Horizontal/vertical bars or picture shaking

- Check for local interference such as an electrical appliance or power tool.

## No output from one of the speakers

- Adjust **Balance** in the **AUDIO** menu. (Refer to p.17)

## Unusual sound from inside the monitor

- A change in ambient humidity or temperature may result in an unusual noise at the time of switching off or on of the monitor and does not indicate a fault with the monitor.



# Maintenance

- Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new Monitor. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

## Cleaning the Screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Monitor.

## Cleaning the Cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

## Extended Absence



If you leave your Monitor dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

# Product Specifications

MODEL	MU-50PZ90M/90MA/90MB/90MK/90MR/90MS MU-50PZ90V/90VA/90VB/90VK/90VR/90VS
Width (inches / mm)	48.2 / 1223
Height (inches / mm)	28.9 / 734
Depth (inches / mm)	4.1 / 105
Weight (pounds / kg)	99.2 / 45
Power requirement	AC120V, 60Hz
Resolution	1366 x 768 (Dot)
Color	16,770,000 (256 steps of each R, G and B)
Operating Temperature Range	32 ~ 104°F (0 ~ 40°C)
Operating Humidity Range	Less than 80%
Maximum Elevation	6561 feet (2000m)

- The specifications shown above may be changed without notice for quality improvement.

