



# LG-P690g User Guide - English

- Some of contents of this manual may not apply to your phone depending on your phone's software or your service provider.
- This handset is not recommended for the visually impaired because of its touch-screen keypad.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.

This device is not intended for sale in the USA.

### **Part 15.21 statement**

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

### **Part 15.105 statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **FCC Part 15 Class B Compliance**

This device and its accessories comply with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada. Operation is subject to the following two conditions:(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

### **Body-worn Operation**

This device was tested for typical body-worn operations with the back of the phone kept 1.0cm (0.39 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 1.0cm (0.39 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 1.0cm (0.39 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

## **Conformité aux normes FCC Part 15 Class B**

Cet appareil et ses accessoires sont conformes aux normes FCC Part 15 Class B de la Federal Communications Commission et aux exigences pour appareils numériques ICES-003 Class B d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes : (1) Cet appareil et ses accessoires ne doivent pas provoquer de brouillage préjudiciable, et (2) cet appareil et ses accessoires doivent accepter toutes les interférences reçues, y compris celles pouvant causer un fonctionnement indésirable.

### **Utilisation comme appareil portatif**

Ce téléphone a été testé en vue d'une utilisation type comme appareil portatif, avec une distance de 1.0cm (0,39 pouces) entre l'arrière de l'appareil et le corps de l'utilisateur. Pour satisfaire aux exigences de la FCC en matière d'exposition aux radiofréquences, une distance d'au moins 1.0cm (0,39 pouces) doit être maintenue entre le corps de l'utilisateur et l'arrière du téléphone. Les pinces de ceinture, les étuis et autres accessoires semblables d'autres marques et contenant des composantes métalliques ne doivent pas être utilisés. Les accessoires portatifs empêchant le maintien d'une distance de 1.0 cm (0,39 pouces) entre le corps de l'utilisateur et l'arrière du téléphone et qui n'ont pas été testés en vue d'une utilisation type comme accessoires portatifs peuvent ne pas satisfaire aux limites d'exposition aux radiofréquences stipulées par la FCC et, par conséquent, ne doivent pas être utilisés.

# Getting to know your phone

To turn on the phone, press and hold the **Power** key for three seconds. To turn off the phone, press and hold the **Power** key for three seconds and touch Power off.

**Earpiece**

**Proximity sensor**



**Power/Lock key**

Switch your phone on/off by pressing and holding this key.

Turn off and lock the screen.

**Home key** 

Return to home from any screen.

**Menu key** 

Check what options are available.

**Back key** 

Return to the previous screen.

**Search key** 

Search the web and contents in your phone.

## **NOTE: Proximity sensor**

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

## **WARNING**

Placing a heavy object on the phone or sitting on it, can damage its LCD and touch screen functions. Do not cover the protective film on the LCD's proximity sensor. This may cause the sensor to malfunction.

# Getting to know your phone

## Volume keys

On the home screen: control ringer volume.

- During a call: control your earpiece volume.
- When playing a track: control volume continuously.

Charger, micro USB  
cable connector

Stereo earphone connector

Power/Lock key

Back cover

Camera lens

Battery

microSD  
memory card  
slot

SIM card slot

Internal antenna

Microphone

## Installing the SIM card and battery


Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:

- 1** To remove the back cover, hold the phone firmly in your hand. With your other hand, firmly press your thumb on the back cover. Lift off the battery cover with your forefinger.
- 2** Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards.

# Getting to know your phone

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery.

## Charging your phone

Insert the charger and plug it into an electrical socket. Your LG-P690g must be charged until you can see .

- 4 Replace the back cover of the phone.

**NOTE:** The battery must be fully charged initially to extend battery lifetime.



## Installing the memory card

### To insert a memory card:

Slide the memory card into the slot until it clicks into place. Make sure the gold contact area on the card is facing downwards.

### WARNING

Do not insert or remove the memory card when the phone is on. Otherwise, it may damage the memory card as well as your phone and the data stored on the memory card may be corrupted.

### Removing a memory card


Carefully remove the memory card by gently pushing it in to the phone and quickly releasing it.

# Getting to know your phone

## Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

**NOTE:** All files on your memory card are deleted when you format it.

- 1 On the home screen, touch the **Applications** tab  to open the applications menu.
- 2 Scroll and touch **Settings** > **Storage**.
- 3 Scroll and touch **SD card & phone storage**.
- 4 Touch **Unmount External SD card**.
- 5 Touch **Format External SD card**, then confirm your choice.
- 6 If you set the pattern lock, input the pattern lock and select **Erase Everything**. The card will then be formatted and ready to use.

**NOTE:** If there is content on your memory card, the folder structure may be different after formatting, as all the files will have been deleted.

### TIP!

If your memory card is already unmounted, you can use the following steps to format it. Touch **Applications** > **Settings** > **Storage** > **Format External SD card**.



### WARNING

To remove the memory card safely, please select **Applications** > **Settings** > **Storage** > **Unmount External SD card**.

# Your Home screen

## Touch-screen tips

Here are some tips on how to navigate around your phone.

**Touch** - To choose a menu/option or open an application, touch it.

**Touch and hold** - To open an options menu or grab an object you want to move, touch and hold it.

**Drag** - To scroll through a list or move slowly, drag across the touch screen.

**Flick** - To scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

### NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.

- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

## Lock your phone

When you are not using LG-P690g, press the **Power** key to lock your phone. This helps to prevent accidental touching of the keys and saves battery power.

If you do not use the phone for a while the home screen or other screen you are viewing is replaced by the lock screen to conserve the battery.

**NOTE:** If there are any programs running when you set the pattern, they may be still running in lock mode. It is recommended that you exit **all** programs before entering lock mode to avoid unnecessary charges. (e.g. phone call, web access and data communications)

# Your Home screen

## Unlock screen

To turn on your phone, press the **Power** key. The lock screen will appear. Touch and slide up the lock screen to unlock your home screen. The last screen you were working on will open.

## Home

Simply swipe your finger to the left or right to view them.

You can also customise each panel with widgets, LG widgets, shortcuts to your favourite applications, folders and wallpapers.

**NOTE:** Some screen images may be different depending on your phone provider.

In your home screen, you can view quick keys on the bottom of the screen. The quick keys provide easy, one-touch access to the functions you use the most.



Touch the **Phone** icon to bring up the touch-dialling pad to make a call.



Touch the **Contacts** icon to open your contacts.



Touch the **Message** icon to access the messaging menu. Here, you can create a new message.



Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications. Just touch to scroll through your applications.

To open the desired application, simply touch the icon in the applications list.

**NOTE:** Preloaded applications may be different depending on your phone's software or your service provider.

## Setting the number of home screens

Touch the Menu key from the home screen and select Home settings. Select the desired number of home screens and press OK.

## Adding widgets to your home screen

You can customise your home screen by adding shortcuts, widgets, or folders to it. For more convenience when using your phone, add your favourite widgets to the home screen.

### To add a desired icon to your home screen:

- 1 On the home screen, touch the **Menu** key and select **Add**. Or long touch the empty part of the home screen.


- 2 On the **Edit Mode** menu, touch the type of item you want to add.
- 3 For example, select **Folders** from the list and tap it. Select **Contacts with phone numbers** from the list and tap it.
- 4 You will see a new folder's icon on the home screen. Drag it to the desired location on the desired panel and release your finger from the screen.

**TIP!** To add an application icon to the home screen on the **Applications** menu, touch and hold the application you want to add.

### To remove an application icon from the home screen:

- 1 Touch and hold the icon you want to remove.

# Your Home screen

- 2 Drag and drop an application icon to the bin icon .

**NOTE:** You cannot delete the preloaded applications. (Only their icons can be deleted from the screen.)

## Getting back to a recently used application

- 1 Touch and hold the **Home** key. The screen will show you a pop up with icons of applications that you have used recently.
- 2 Touch an icon to open its application. Or touch the **Back** key to return to the current application.

## Home preview function

You can move to the home preview screen by placing two fingers on the home screen and bringing them closer together. You can move back to the home


screen by placing two fingers on home preview screen and spreading them farther apart.

## Capturing the screen


If you touch and hold the Home key and press Power/Lock key at the same time, the current image on the screen is captured with a camera shutter sound effect. You can find the captured image in the Gallery. (Note that you cannot capture an image from a video.)

## Notification drawer

The notification drawer runs across the top of your screen.

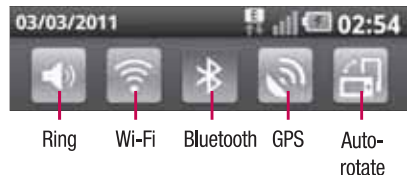

Touch and slide the notification drawer down with your finger.

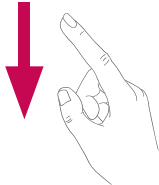

Or on the home screen touch the **Menu** key and select **Notifications**. Here you can check and manage sound, Wi-Fi, Bluetooth, GPS and Auto-rotate status as well as other notifications.












## Viewing the status bar

The status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.















Below is a table explaining the meaning of icons you are likely to see in the status bar.




### [Status bar]


Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on

# Your Home screen

Icon	Description
	Connected to a Bluetooth device
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging
	Data in and out
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS

Icon	Description
	On-Screen Phone connected
	3 more notifications not displayed
	Data is syncing
	Download finished
	New Gmail
	New Google Talk message
	New message
	Song is playing
	Upcoming event
	FM radio turned on in the background
	USB tethering is active
	Portable Wi-Fi hotspot is active






Icon	Description
	Both USB tethering and portable hotspot are active

## Onscreen keyboard


You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

### Using the keypad & entering text

 Tap once to capitalise the next letter you type. Double-tap for all caps.

  Tap to switch to the numeric and symbol keyboard. You can also touch and hold this tab to view the settings menu.

 Tap to view or long press to change the writing language.

 Tap to insert the emoticon you prefer which writing a message.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the onscreen keyboard.

## Entering accented letters





When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. "á").


For example, to input "á", touch and hold the "a" key until the zoom-in key grows bigger and displays all the other characters of different languages for the alphabet.

And now you can select the special character you want.

# Calls/Contacts



## Making a voice call

- 1 Touch  to open the keypad.
- 2 Enter the number on the keypad. To delete a digit, touch Clear icon .
- 3 Touch Call icon  to make a call.
- 4 To end a call, touch **End** icon .

**TIP!** To enter “+” to make international calls, touch and hold down .

**TIP!** To bring up the keypad during a call, touch Dialpad.

## Making a video call


- 1 Touch  to open the keypad.
- 2 Enter the phone number, as before.
- 3 Touch Video call icon  to make a video call.

- 4 If you do not want to use the speaker phone, touch Speaker icon and ensure you have the headset plugged in.
- 5 While the video call is connecting, you will see your own image; after the other party has answered, their image will be displayed on the screen. Adjust the inner camera position if necessary.
- 6 To end a video call, touch End icon.

### NOTE:

- If you set Use private image in the Video call settings, the person on the video call sees the image you set, not a live image.
- You can show your image through either the front or rear camera.
- The quality of the video call (image and sound) may vary depending on the base station.

## Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call.

## Answering and rejecting a call

When screen locked:

When your phone rings, drag

**Accept** icon  to the right.

Drag **Reject** icon  to the left reject an incoming call.

When screen is unlocked:

When your phone rings, touch

**Accept** icon . Touch **Reject** icon  to reject an incoming call.




### **TIP! Excuse messages**

When you reject a call, you can send a message quickly by touching **Send SMS**. This is useful if you need to reply the message during a meeting.

## Adjusting call volume

To adjust the in-call volume during a call, use volume up & down key on the right side of the phone.

## Making a second call

- 1 During your initial call, touch Add call .
- 2 Dial the number or search your contacts to select the number you want to call.
- 3 Touch **Call** icon  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Touch Swap  to toggle between calls.

# Calls/Contacts

**NOTE:** You can touch Merge calls  to make a conference call.

**6** To end active calls, touch **End icon** .

## Viewing your call logs

On the home screen, touch  and choose **Call log** tab.

View a complete list of all dialled, received and missed calls.

**TIP!** Touch any single call log entry to view the date, time, and duration of the call.

**TIP!** Touch the **Menu** key, then touch **Delete all** to delete all the recorded items.

## Call settings

You can configure phone call settings, such as call forwarding, and other special features offered by your carrier.

- 1** On the home screen, touch the **Applications** tab to open the applications menu.
- 2** Scroll and touch **Settings**.
- 3** Tap **Call settings** and choose options that you want to adjust.

### < Fixed Dialling Numbers >

Select **Fixed Dialling Numbers** to turn on and compile a list of numbers that can be called from your phone. You'll need your PIN 2 code, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

### < Voicemail >

**Voicemail service** – Allows you to select your carrier's voicemail service.

**Voicemail settings** – If you are using your carrier's voicemail service, this option allows you to

enter the phone number to use for listening to and managing your voicemail.

## < **Other call settings** >

**Call forwarding** – Choose whether to divert all calls, when the line is busy, when there is no answer and when you are out of reach.

**Additional settings** – This lets you change the following settings:

- **Caller ID:** Choose whether to display your number on an outgoing call.
- **Call waiting:** If call waiting is activated, the handset will notify you of an incoming call while you are on the phone (depending on your network provider).
- **Select line**

**Call barring** – Select when you would like calls to be barred. Enter

the call barring password. Please check with your network operator about this service.

**Call costs** – View the charges applied to your calls. (This service is network dependent; some operators do not support this function.)

**Call duration** – View the duration of all calls including all, dialled calls, received calls and last call.

**Excuse messages** – When you want to reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

**Video call settings** – Change your video call settings.

# Calls/Contacts



## Contacts


You can add contacts on your phone and synchronise them with the contacts in your Google account or other accounts that support syncing contacts.

## Searching for a contact

- 1 On the home screen, touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keypad.

## Adding a new contact


- 1 On the home screen, touch  and enter the new contact's number. Then touch the **Menu key** and touch Add to contacts and then touch Create new contact.
- 2 If you want to add a picture to the new contact, touch . Choose from **Capture picture** or **Pick from gallery**.

- 3 Select the contact type by touching .
- 4 Touch a text field to open the touch keyboard and enter a new contact's name.
- 5 Touch different category of contact information and enter the details about your contact.
- 6 Touch **Save** to save the contact.

## Favourite contacts

You can classify frequently called contacts as favourites.

### To add a contact to your favourites:

- 1 On the home screen, touch  to open your contacts.
- 2 Touch a contact to view their details.
- 3 Touch the star to the right of the contact's name. The star turns gold.

- 4 The favorites contact will be saved under groups as Favorites

### **To remove a contact from your favourites list:**


- 1 On the home screen, touch  to open your contacts.
- 2 Touch **Groups** tab and select **Favorites**. Touch a contact to view their details.
- 3 Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

# Messaging/E-mail

## Messaging


Your LG-P690g combines SMS and MMS into one intuitive, easy-to-use menu.

## Sending a message

- 1 Touch  icon on the home screen, and touch **New message** to open a blank message.
- 2 Enter a contact name or call number in the **To** field. As you enter the contact name, matching contacts appear. You can touch a suggested recipient. You can add multiple contacts.

**NOTE:** You will be charged for a text message for every person you send the message to.

- 3 Touch **Type to compose** below to start entering your message.
- 4 Touch **Send** to send your message.

**TIP!** You can touch  icon to attach the file you want to share with your message.

- 5 Responses appear on the screen. As you view and send additional messages, a message thread is created.

### **WARNING**

The 160-character limit may vary from country to country depending on how the SMS is coded and the language.

### **WARNING**

If an image, video or audio file is added to an SMS message, it will be automatically converted into an MMS message and you will be charged accordingly.



**NOTE:** If you get an SMS message during a call, there will be beep or vibrate notification as per profile set.

## Changing your message settings

Your LG-P690g message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

Touch **Messaging** icon on the home screen, and touch the **Menu** key, then tap **Settings**.

## Opening your email and email accounts screen

You can use the **Email** application to read email from services like Gmail. The **Email** application supports the following account types: POP3, IMAP and Exchange.

**1** On the home screen, touch

the **Applications** tab and tap **Email** to view the account list.

**TIP!** Select the Email shortcut icon on the home screen to move to the list of email accounts.

**2** The first time you open the **Email** application, a setup wizard opens to help you add an email account.

**3** After initial setup, **Email** displays the contents of your **Inbox** (if you have only one account) or the **Accounts** screen (if you have multiple accounts).

**TIP!**

- If you long-press an account from the list of email accounts, you can select the desired option in the pop-up window. For example, select Add to home screen to create a shortcut icon of the account on the home screen.

# Messaging/E-mail

- Select the Email shortcut icon on the home screen to move to the list of email accounts. Likewise, if you select the shortcut icon of an account on the home screen, you can move to the inbox of the corresponding account.

## The Accounts screen

The **Accounts** screen lists your **Combined inbox** and each of your email accounts.

- 1 Open the **Email** application. If you're not on the email account screen, touch the **Menu** key and touch **New**.
- 2 Select the email service provider.

You can touch an account to view its **Combined inbox**. The account from which you send email by default is indicated with a tick.

## To open your Combined inbox:

If you have configured email to send and receive email from more than one account, you can view all messages sent to all accounts in your **Combined inbox**.

- 1 Open the Email application.
- 2 Touch **Combined inbox** (in the **Accounts** screen). Messages in the **Combined inbox** are colour coded along their left sides, by account, using the same colours that are used for your accounts in the **Accounts** screen.


## Composing and sending email

To compose and send a message:

- 1 While in the **Email** application, touch the **Menu** key and touch **Compose**.
- 2 Enter an address for the message's intended recipient.

As you enter text, matching addresses are offered from your contacts. Separate multiple addresses with commas.

- 3 Touch the **Menu** key and touch **Add CC/BCC** to be able to CC or BCC other contacts/email addresses.
- 4 Enter the text of the message.
- 5 Touch **Attach** to attach the file you want to share with your message.
- 6 Touch **Send**.

If you're not ready to send the message, touch the **Menu** key and touch **Save as Draft** to save it in a **Drafts** folder. Touch a draft message in a **Drafts** folder to resume working on it. Your message will also be saved as a draft if you touch the **Back** key 

and tap on yes in save as draft pop up before sending it. If you aren't connected to a network, for example, if you're working in airplane mode, the messages that you send are stored in your **Outbox** folder until you're connected to a network again. If it contains any pending messages, the **Outbox** is displayed on the **Email\_Accounts** screen.

Please note that messages sent using an Exchange account will not be located on the phone; they will, however, be located on the Exchange server itself.

If you want to see your sent messages in the **Sent** folder (or with the **Sent** label), you will often need to open the **Sent** folder/label and select **Refresh** from the options menu.

# Messaging/E-mail

## Working with account folders

Each account has **Inbox, Outbox, Sent, Drafts, Trash and Junk folders**. Depending on the features supported by your account's service provider, you may have additional folders.

## Adding and editing email accounts

### To add an email account:

- 1 Touch the **Menu** key and touch **New**.
- 2 Select **MS Exchange** or **Others**.
- 3 Enter a name for the account, confirm how you want your name to appear in outgoing mail, then touch **Done**.

### To change account settings:

- 1 Open the **Email-Accounts** screen.
- 2 Touch the Menu key and touch Settings. Touch and hold the account which you want to change the settings of.

### To delete an email account:


- 1 Open the **Accounts** screen.
- 2 Touch and hold the account you want to delete.
- 3 Touch **Delete** in the menu that opens.
- 4 Touch **OK** in the dialog box to confirm that you want to delete the account.

# Camera

## Getting to know the viewfinder

**Brightness** - This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards “-” to lower the brightness of the image or towards “+” to increase it.

**Zoom** - Zoom in or zoom out. Alternatively you can use the side volume keys.

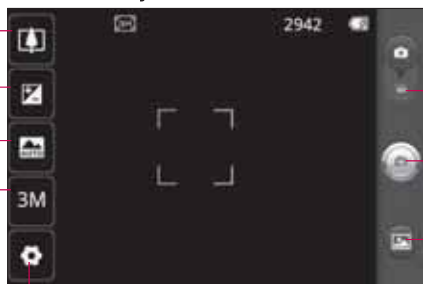

**Video mode** - Slide down this icon to switch to video mode.

**Taking a photo**

**Gallery** - Touch to view the last photo you captured. This enables you to access your gallery and view saved photos from within camera mode.

**Settings** - Touch this icon to open the settings menu. See Using the advanced settings.


**Image size** – Touch to set the size (in pixels) of the picture you take.

**Scene mode** – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night** and **Sunset**.

**TIP!** You can close all the shortcut options to give a clearer viewfinder screen. Just touch the centre of the viewfinder once. To recall the options, touch the screen again.

# Camera

## Taking a quick photo

- 1 Open the **Camera** application.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Touch the shutter icon .
- 4 The camera brings the image into focus. When the image is in focus, the focus indicators in each corner turn green and the camera takes a picture.

**Notice:** A shading issue may occur when you try to take a picture indoors due to the characteristics of camera. (The meaning of shading is a little colour-difference between centre and side.)

## Once you've taken the photo

Your captured photo will appear on the screen.

**Share** Touch to share your photo as **Bluetooth, Email, Facebook for LG, Gmail, Messaging, My Album Online, Myspace for LG, Picasa and Twitter for LG.**

**NOTE:** Additional charges may apply when MMS messages are uploaded and/or downloaded while roaming.

**TIP!** If you have a social networking site account and set it up on your phone, you can share your photos to your community.

**Set as** Touch to set the image as **Contact icon** or **Wallpaper.**

**Rename** Touch to edit the name of the selected picture.



Touch to delete the image.



Touch to take another photo immediately. Your current photo will be saved.