



APPENDIX G
: USER'S MANUAL



LG

Life's Good

Owner's Manual

DLP PROJECTOR

Please read this manual carefully before operating your projector and retain it for future reference.

PB61U

www.lg.com

LICENSES

Supported licenses may differ by model. For more information about licenses, visit www.lg.com.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

"DivX Certified® to play DivX® video up to HD 1080p, including premium content."

"DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license."

"Covered by one or more of the following U.S. patents :
7,295,673; 7,460,668; 7,515,710; 7,519,274"

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

This device meets the EMC requirements for home appliances (Class B) and is intended for home usage. This device can be used in all regions.




NOTE

- Image shown may differ from your projector.
- Your projector's OSD (On Screen Display) may differ slightly from that shown in this manual.


SAFETY INSTRUCTIONS

Please take note of the safety instructions to prevent any potential accident or misuse of the projector.




WARNING / CAUTION
AVERTISSEMENT

RISK OF ELECTRIC SHOCK, DO NOT OPEN.
RISQUE DE CHOC ÉLECTRIQUE, NE PAS OUVRIR.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING/CAUTION

– TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Indoor Installation

WARNING

- Do not place the projector in direct sunlight or near heat sources such as radiators, fires, stoves, etc.
 - This may cause a fire.
- Do not place flammable materials such as aerosols near the projector.
 - This may cause a fire.
- Do not allow your children to cling to or climb up to the projector.
 - The projector may fall down and cause personal injury or death.
- Do not place the projector directly on a carpet, rug or place where ventilation is restricted such as a book shelf or closet.
 - This may cause the projector's internal temperature to rise and cause a fire.
- Do not place the projector close to sources of steam or oil such as a humidifier or kitchen counter.
 - This may cause a fire hazard or an electric shock.
- Do not place the projector where it might be exposed to excessive dust.
 - This may cause a fire.

- Do not use the projector in a damp place such as a bathroom where it is likely to get wet.
 - This may cause a fire or an electric shock.
- Do not allow a tablecloth or curtain to block the vents.
 - This may cause the internal temperature of the projector to rise and cause a fire.
- The distance between the projector and the wall should be more than 30 cm for ventilation purposes.
 - Otherwise, this may cause the internal temperature of the projector to rise and cause a fire.

CAUTION

- When installing the projector on a table, be careful not to place it near the edge.
 - The projector may fall causing injury to persons or damage to the projector. Make sure that you use a stand suitable for the size of projector.
- Turn off the projector, disconnect the power supply and remove all connections before moving the projector.
 - A damaged cord may cause a fire or an electric shock.
- Do not install the projector on an unstable or vibrating surface such as a vibrating shelf or tilted surface.
 - It may fall and cause injury.
- Be careful not to tip the projector over when connecting external devices to the projector.
 - This may cause injury to persons or damage to the projector.

Power

WARNING

- The earth wire should be connected.
 - Inappropriate earth grounding may cause damage to the projector or an electric shock when there is an electrical surge.
If the projector must be installed at a place where earth grounding is not possible, purchase a circuit breaker and connect the projector to its wall outlet.
Do not ground the projector to the gas pipe, water pipe, lightning rod, or telephone line, etc.
- The power plug should be fully inserted into the wall outlet.
 - Unstable connection may cause a fire.
- Do not place heavy objects on the power cord or place the cord underneath the projector.
 - This may cause a fire or an electric shock.
- Never touch the power plug with a wet hand.
 - This may cause an electric shock.
- Do not connect too many devices to the same power extension.
 - Overheating may cause a fire.
- Remove dust or contaminants around power plug pins or wall outlets.
 - This may cause a fire.

⚠ CAUTION

- Hold the plug firmly when unplugging.
 - A broken wire in the cord may cause a fire.
- Ensure the power cord or plug is not damaged, modified, severely bent, twisted, pulled, sandwiched or heated. Do not use a loose wall outlet.
 - This may cause a fire or an electric shock.
- Keep the power cord away from any heating devices.
 - The cord coating may melt and cause an electric shock.
- Place the projector where people will not trip over or tread on the power cord or plug to protect the power cord and plug from any damage.
 - This may cause a fire hazard or an electric shock.
- Do not turn the projector on or off by plugging in the power plug or unplugging it from the wall outlet. (Do not use the power plug as a switch.)
 - This may cause an electric shock or damage to the projector.
- Do not insert a conductor into the other side of the wall outlet while the power plug is inserted into the wall outlet.

In addition, do not touch the power plug immediately after it is disconnected from the wall outlet.

 - This may cause an electric shock.
- Use only the official power cord which is provided by LG Electronics, Inc. Do not use other power cords.
 - This may cause a fire or an electric shock.

When in Use**⚠ WARNING**

- Do not place anything containing liquid, such as a vase, flowerpot, cup, cosmetics, chemicals, decorations or candles, etc., on top of the projector.
 - Possible fire, electric shock, or falling may cause physical injury.
- In the event that there is a big impact to the projector or the cabinet is damaged, switch it off, unplug it from the wall outlet and contact an authorized service center.
 - Otherwise, this may cause a fire or an electric shock.
- Do not insert pieces of metal such as coins, hairpins or metal debris, nor flammable materials such as paper or matches into the projector.
 - This may cause a fire or an electric shock.
- In the event that liquid or a foreign object falls into the projector, please switch it off and unplug it from the wall outlet and contact an LG Electronics Service Center.
 - Otherwise, this may cause a fire or an electric shock.
- When replacing a battery of the remote control, make sure a child does not swallow the battery. Keep the battery out of reach of children.
 - In the case of a battery being swallowed by a child, please consult a doctor immediately.
- Do not remove any covers except for the lens cap. There is a high risk of electric shock.

- Do not look directly into the lens when the projector is in use. The strong light may damage your eyes.
 - When the lamp is on or has just been turned off, avoid touching the air vent or lamp because these will be very hot.
 - If there is a gas leak, do not touch the wall outlet. Open the window for ventilation.
 - A spark may cause a fire or burn.
 - Always open the lens door and remove the lens cap when the projector lamp is on.
 - Never touch the projector or power cord during thunder or lightning.
 - This may cause an electric shock.
 - Do not use the projector near an electronic device which generates a strong magnetic field.
 - Store the vinyl envelope used to pack the projector in a safe place away from children.
 - It could cause suffocation if used improperly.
 - Do not use 3D glasses if you do not watch 3D.
 - Do not keep your hand on the projector for a long time when it is running.
- ⚠ CAUTION**
- Do not place a heavy object on the projector.
 - It may fall down and cause physical injury.
 - Be careful to prevent the lens from heavy impact during transportation.
 - Do not touch the lens.
The lens may be damaged.
 - Do not use any sharp tools on the projector such as a knife or hammer, because this may damage the casing.
 - In the event that no image appears on the screen, switch the projector off, unplug it from the wall outlet and contact an authorized service center.
 - Otherwise, this may cause a fire or an electric shock.
 - Do not drop an object onto the projector or apply heavy pressure to it.
 - This may cause injury to persons or damage to the projector.
 - The distance between your eyes and the screen must be around 5 - 7 times the diagonal length of the screen.
 - If you watch the screen at a close distance for a long time, your eye sight may become worse.

Cleaning

WARNING

- Do not spray the projector with water when cleaning. Do not allow water to go into the projector or do not allow it to get wet.
 - This may cause a fire or an electric shock.
- When there is smoke or a strange smell coming out from the projector or a foreign object falls into the projector, please switch it off and unplug it from the power outlet and contact an LG Electronics Service Center.
 - If not, this may cause a fire or an electric shock.
- Use an air spray or soft cloth or cotton swab moistened with a lens cleaning chemical or alcohol to remove dust or stains on the front projection lens.

CAUTION

- Contact your seller or the Service Center once a year to clean the internal parts of the projector.
 - If you do not clean the contaminated interior of the projector for a long time, there may be a fire or damage to the projector.
- When cleaning plastic parts such as the projector case, unplug the power first and wipe with a soft cloth. Do not spray with water or wipe with a wet cloth. When cleaning the plastic parts, such as the projector case, do not use cleanser, automobile or industrial shiner, abrasive or wax, benzene, alcohol, etc., which can damage the product.
 - This can cause fire, electric shock or product damage (deformation, corrosion and damage).

OTHERS

WARNING

- Only a qualified technician can disassemble or modify the projector. For inspection, adjustment, or repair, contact your seller or the Service Center.
 - Otherwise, this may cause a fire or an electric shock.

CAUTION


- Do not mix new batteries with old batteries.
 - This may cause a fire or an electric shock caused by overheating and leakage.
- Unplug the power cord if the projector is not used for a long period.
 - Accumulated dust may cause overheating, an electric shock from corroded insulation and a fire from an electrical surge.
- Only use the specified type of battery.
 - Otherwise, this may cause an electric shock caused by overheating and leakage.

ANTENNA

Outdoor Antenna Grounding

- If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits as death or serious injury can occur. Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in the U.S.A. provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

Antenna grounding according to the National Electrical Code, ANSI/NFPA 70

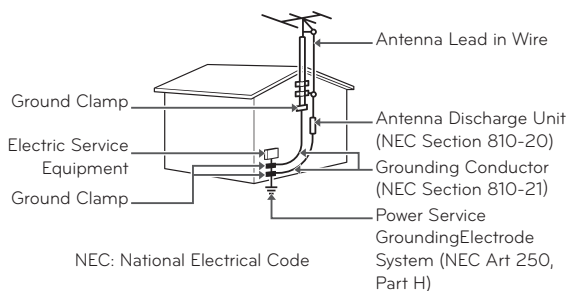

FCC NOTICE

Warning - Class B

(b) For a Class B Digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream through designated collection facilities appointed by your government or your local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Disposal of waste batteries/accumulators

1. When this crossed-out wheeled bin symbol is attached to batteries/accumulators of Your product it means they are covered by European Directive 2006/66/EC.
2. This symbol may be combined with chemical symbols for mercury(Hg), cadmium(Cd) or lead(Pb) if the battery Contains more that 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
3. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
4. The correct disposal of Your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
5. For more detailed information about disposal of Your old batteries/accumulators, please contact Your city office, waste disposal service or the shop where You purchased the product.

For USA**NOTE TO CABLE/TV INSTALLER**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

Contents

LICENSES	2	ENTERTAINMENT	27
SAFETY INSTRUCTIONS	3	MY MEDIA	27
PREPARATION	12	- Connecting USB Storage Devices	27
Accessories	12	- MOVIE LIST	29
Optional Extras	13	- PHOTO LIST	34
Parts and Components	14	- MUSIC LIST	36
Installation	15	- FILE VIEWER	38
- Installation Precautions	15	3D FUNCTION	40
- Projection Distance per Screen Size	16	Before Watching 3D	40
- How to Install the Projector Using a Tripod	17	- While Watching 3D	40
- Kensington Security System	17	Requirements for Watching 3D Images	42
REMOTE CONTROL	18	- To Use DLP-LINK (DLP-Ready) Type Glasses	42
USING THE PROJECTOR	20	Watching 3D Images	43
Connecting to an Antenna or Cable	20	CUSTOMIZING SETTINGS	44
- Connecting an Antenna or Basic Cable	20	SETUP Menu	44
- Connecting a Cable Box	20	PICTURE Settings	45
Watching Projector	21	AUDIO Settings	49
- Turning on the Projector	21	CHANNEL Settings	50
- Focus and Position of the Screen Image	21	TIME Settings	51
- Watching Projector	21	OPTION Settings	52
Managing Channels	22	MAKING CONNECTIONS	54
- Setting Up Channels	22	Connecting to an HD Receiver, DVD, or VCR Player	55
Using Additional Options	24	- HDMI Connection	55
- Adjusting Aspect Ratio	24	Connecting to a PC	55
- Using the Keystone Function	25	- RGB Connection	55
- Using the Input List	25	Connecting to the AV INPUT	56
- Blank Function	26	- Component Connection	57
Using the Quick Menu	26	Connecting to Headphones	57

MAINTENANCE **58**

Cleaning the Projector **58**

- Cleaning the Lens 58

- Cleaning the Projector Case 58

How to Fix the Lens Cap **58**





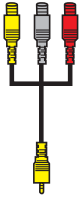

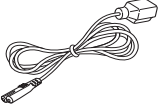
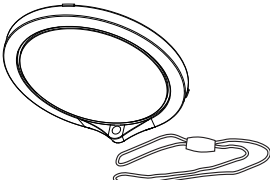
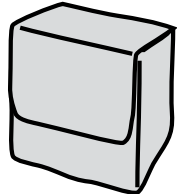
SPECIFICATIONS **59**

PREPARATION


Accessories

Check enclosed accessories.

The picture may be different from an actual product.

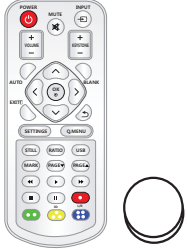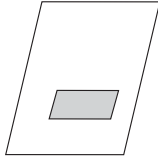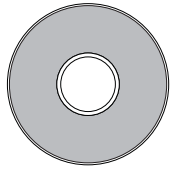		
<p>Remote Control Coin battery</p>	<p>Owner's Manual</p>	<p>CD Owner's manual</p>
		
<p>Computer Cable</p>	<p>Composite Gender</p>	<p>AC-DC Adaptor</p>
		
<p>Power Cord</p>	<p>Lens Cap, Strap</p>	<p>Portable Bag</p>


- When connecting a cable to the HDMI or USB port, it may not be connected properly if the size of jack to the USB/HDMI port is too big. Use a standard sized jack.

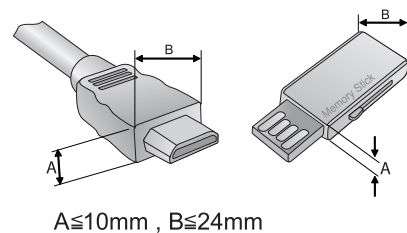


Optional Extras

To purchase optional extras, visit an electronics store or online shopping site or contact the retail store where you purchased the product.

Without prior notice, optional extras are subject to change in order to improve the performance of the product, and new accessories may be added.

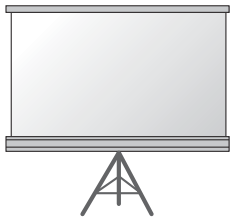

Screen for Projector

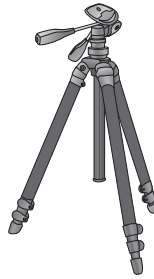

Tripod



HDMI Cable



Video Cable



Audio Cable




3D glasses
(DLP-LINK or DLP-Ready Type)



RGB to Component cable

Parts and Components

* The projector is manufactured using high-precision technology. You may, however, see tiny black dots and/or bright colored dots (red, blue or green) that continuously appear on the projector screen. This is a normal result of the manufacturing process and does not indicate a malfunction.

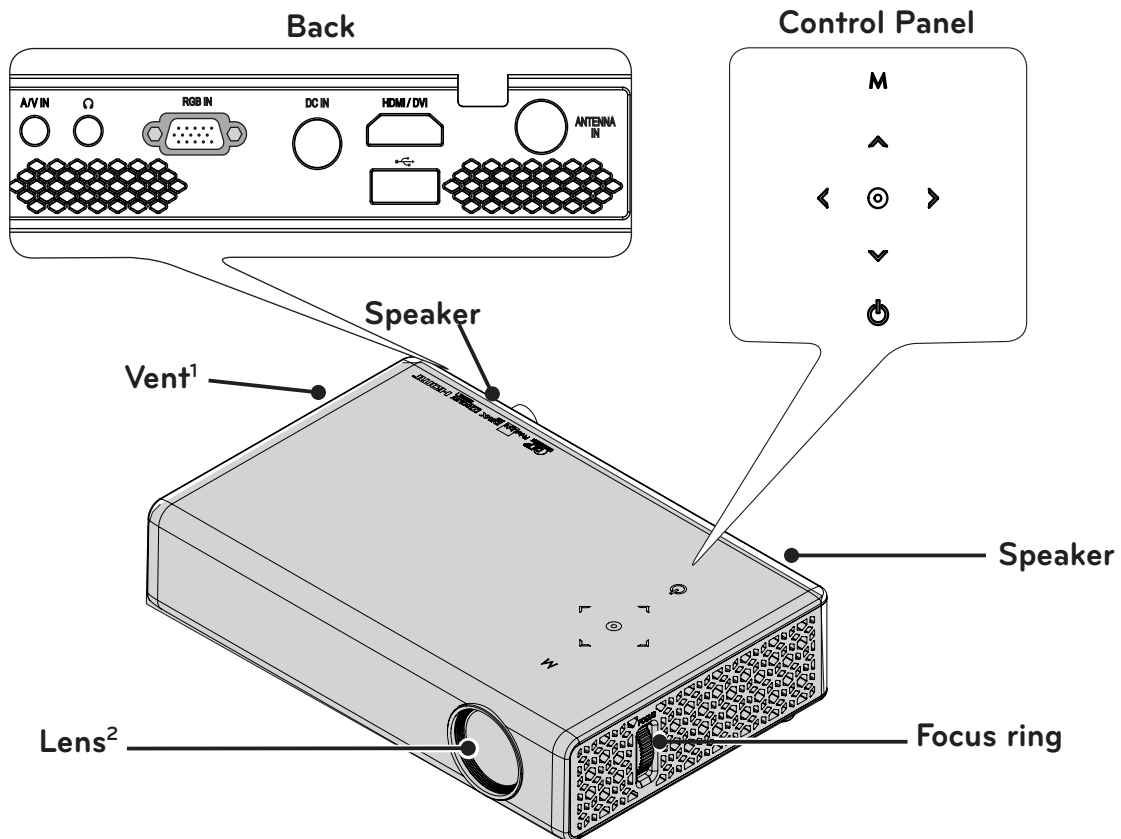

Button	Description
⏻ (Power)	Turns the projector on or off.
M (Menu)	Selects or closes menus.
, , <, >	Adjusts functions of menus.
⊙ (OK)	Checks present mode and saves function changes.

1 Due to the high temperature air coming out of the vents, do not get close to the vents.

2 Do not touch the lens when using the projector or opening the lens cap. The lens may be damaged.


Installation

Installation Precautions


- **Place the projector in a well-ventilated environment.**

- To prevent internal heat from building up, install the projector in a well-ventilated place.

Do not place anything near the projector as this may block its air vents. If the air vents are blocked, the internal temperature will increase.

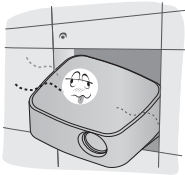


- Do not place the projector on a carpet or rug. If a projector model has its inlet vent on its bottom, do not block the vent and use the projector on a leveled solid surface.

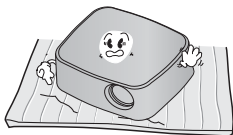

- Be sure to prevent foreign objects such as paper debris from entering the projector.



- Leave an adequate distance (30 cm or more) around the projector.

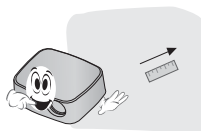


- Do not place the projector in a hot or humid environment.
 - Do not place the projector in a hot, cold, or humid environment. (See 60 Page regarding operating temperature and humidity.)
- Do not place the projector in a place where it will easily attract dust.
 - This may cause a fire.
- Do not remove any covers except for the lens cap. There is a high risk of electric shock.
- The projector is manufactured using high-precision technology. You may, however, see tiny black dots and/or bright colored dots (red, blue or green) that continuously appear on the projector screen. This is a normal result of the manufacturing process and does not indicate a malfunction.
- The remote control may not work in an environment where a lamp equipped with electronic ballasts or a three-wavelength fluorescent lamp is installed. Replace the lamp with an internationally standardized lamp for the remote control to work normally.

Projection Distance per Screen Size

- 1 Place the projector on a sturdy, level surface, together with the PC or audio/video source.
- 2 Place the projector at an appropriate distance from the screen. The distance between the projector and the screen determines the actual size of the image.
- 3 Position the projector so that the lens is set at a right angle to the screen. If the projector is not set at a right angle, the image on the screen will be tilted and the image quality will be poor. If the screen image is crooked, use the Keystone function. (see page26)
- 4 Connect the power cords of the projector and the connected devices to the wall outlet.


Ratio of upward projection: 100%

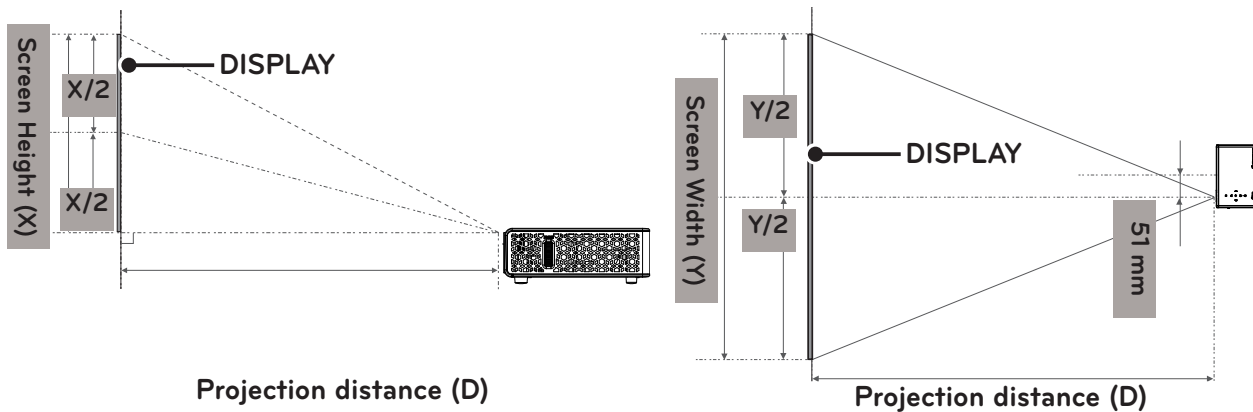

16:10 Screen			
Screen Size (mm)	Screen Width (Y) (mm)	Screen Height (X) (mm)	Projection Distance (D) (mm)
635	538	337	748
762	646	404	902
889	754	471	1056
1016	861	539	1210
1143	969	606	1365
1270	1077	673	1520
1397	1185	741	1674
1524	1292	808	1828
1651	1400	875	1983
1778	1508	943	2137
1905	1615	1010	2291
2032	1723	1077	2445
2159	1831	1145	2600
2286	1938	1212	2755
2413	2046	1279	2909
2540	2154	1347	3063

How to Install the Projector Using a Tripod

- You can install this projector using a camera tripod.
As shown below, you can mount the projector instead of a camera on the tripod.
- When stabilizing the tripod, we recommend using the locking bolt of standard size 4.5 mm or less. The maximum size allowed for the locking bolt is 5.5 mm. (If it is longer than the maximum allowed size, it may damage the projector.)

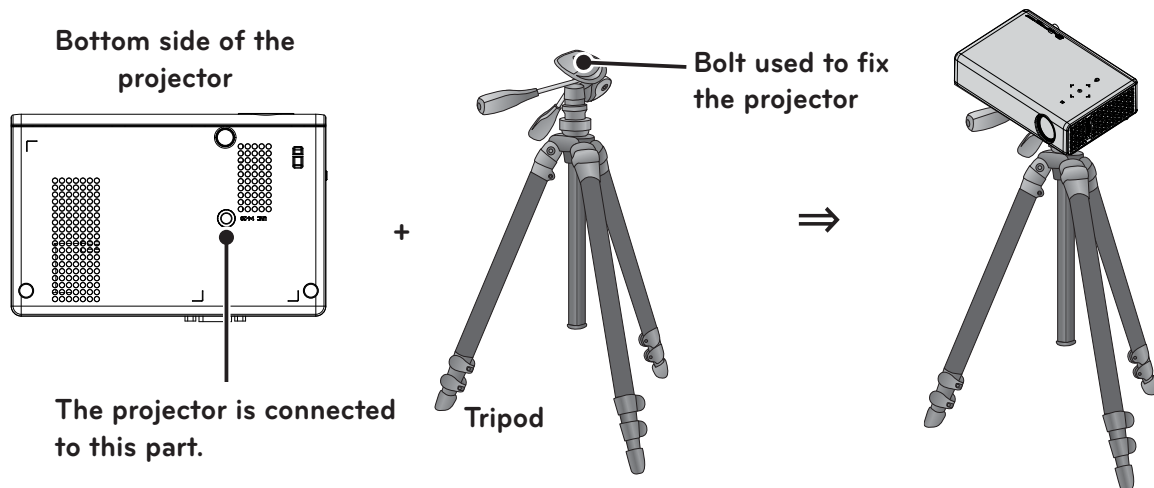


Kensington Security System

- This projector has a Kensington Security System Connector on the panel. Connect a Kensington Security System cable as below.
- For detailed installation and use of the Kensington Security System, refer to the user's guide included with the Kensington Security System set.
- The Kensington Security System is an optional item.
- What is Kensington?


Kensington is a company that sells security systems that prevent expensive electronic equipment such as a computer or laptop from being stolen.

Internet Homepage: <http://www.kensington.com>

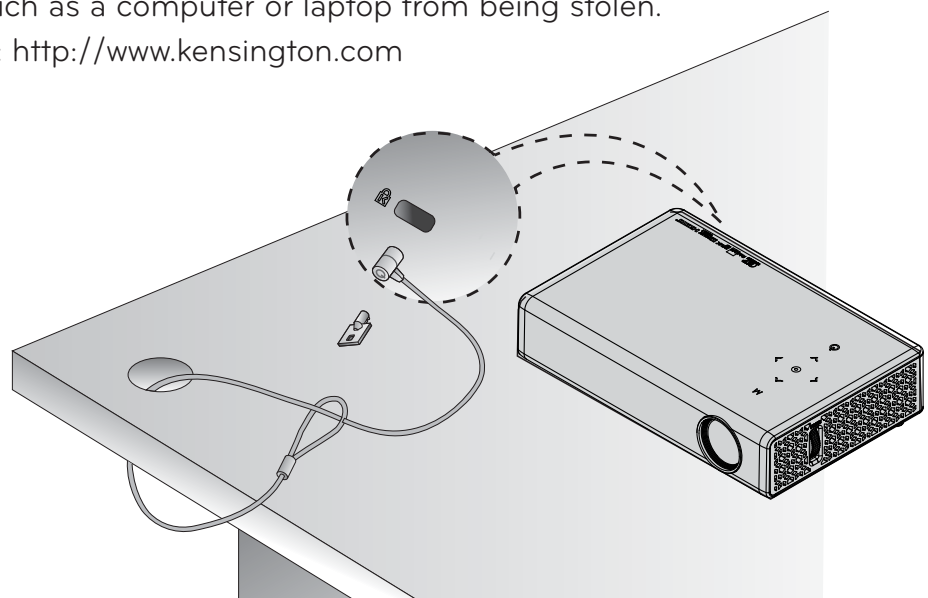

REMOTE CONTROL

Open the battery cover on the back of the remote control and insert the specified batteries as per instructions $\oplus\ominus$. The same type of batteries must be used.

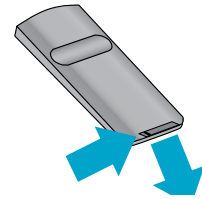

CAUTION

- Do not mix a new battery with an old battery.

POWER
Turns the projector on or off.

INPUT
Changes the input source.

MUTE
Mutes all sounds.

VOLUME
Adjusts the volume level.

KEYSTONE
Adjusts Keystone.

AUTO
Automatically adjusts the PC input image.

BLANK
Turns the projector screen on or off.

Up/Down/Left/Right Buttons
Adjusts functions of menus.


OK
Checks present mode and saves function changes..

EXIT
Clears all on-screen displays and returns to projector viewing.

↶
Returns to the previous level.

SETTINGS
Selects or closes menus.

Q.MENU
Accesses the quick menu.

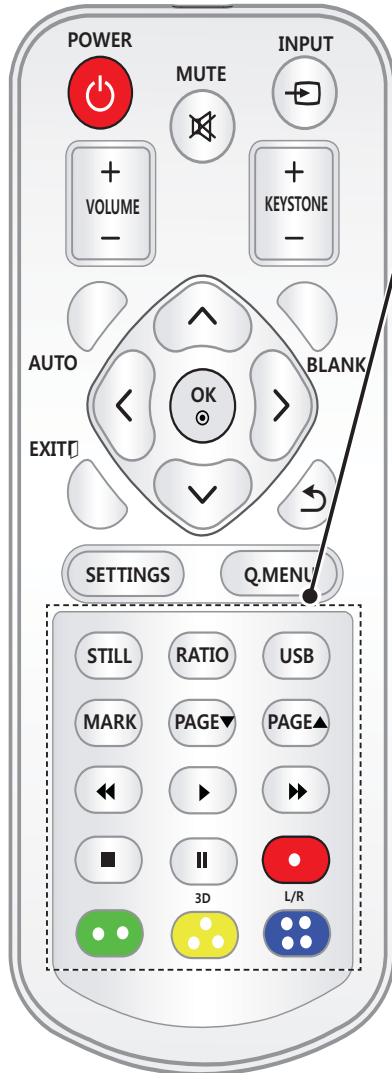

STILL

Freezes the moving image.
(Available in any mode other than DivX)

RATIO

Resizes an image.

USB

Accesses **MY MEDIA**.

MARK

Select menus or options.

PAGE

Moves to the previous or next screen.

Playback Control Buttons

Controls playback of **MY MEDIA**.

3D


Shows 3D images.

L/R

Switches left and right in 3D mode.

NOTE

- When using the remote control, the optimal remote range is less than 3 meters (left/right) and within a 30 degree arc of the IR receiver.
- If cables are connected, the remote range is less than 3 meters (left/right) and within a 30 degree arc of the IR receiver.
- For seamless operation, do not block the IR receiver.
- When you carry the remote control in the portable bag, make sure that the buttons on the remote control are not pressed by the projector, cables, documents or any other accessories in the bag. Otherwise, it may significantly reduce the battery life.

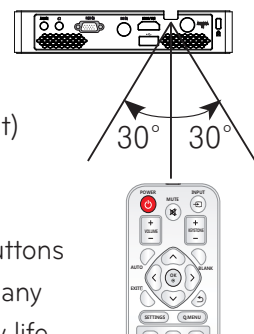


Using the PROJECTOR

Connecting to an Antenna or Cable

Connect an antenna, cable, or cable box to watch TV while referring to the following. The illustrations may differ from the actual items and a RF cable is optional.

Connecting an Antenna or Basic Cable

Connect the projector to a wall antenna socket with an RF cable (75 Ω).

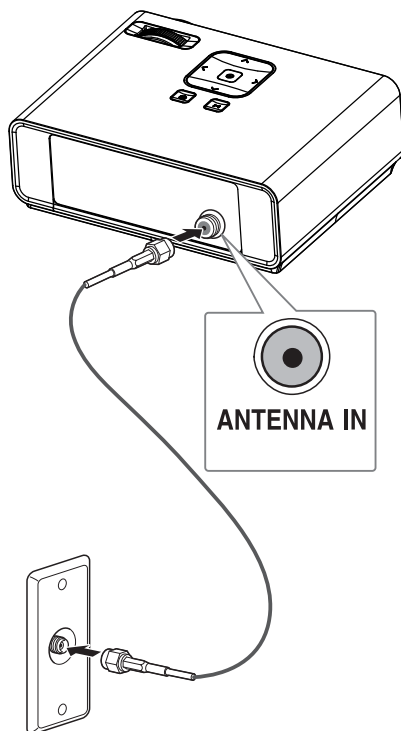


NOTE

- Use a signal splitter to use more than 2 projectors.
- Visit <http://lgknowledgebase.com> for more information about the antenna and cable connection. Search for antenna.

Connecting a Cable Box


Connect the projector to a cable box and the cable box to a wall antenna socket with 2 RF cables (75 Ω).

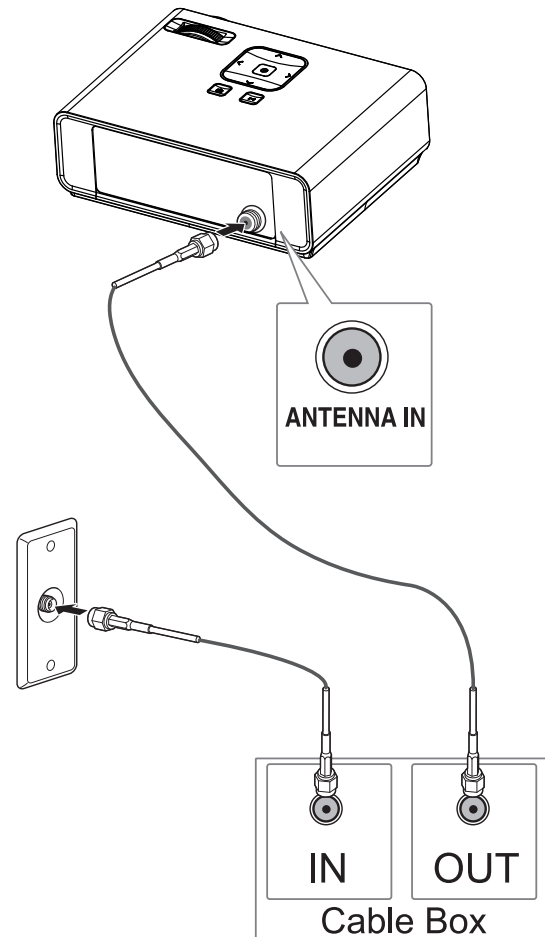

CAUTION

- Make sure not to bend the copper wire of the RF cable.

Copper wire

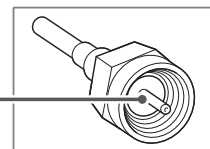

Complete all connections between devices, and then connect the power cord to the power outlet to prevent damage to your projector.


Watching Projector

Turning on the Projector

- 1 Connect the power cord correctly.
 - Check if the lens cap is open before turning on the projector.
- 2 After waiting for a moment, press the **POWER** button on the remote control or the control panel. (The light on the control panel will be turned on.)
 - Select an input signal by using the **INPUT** button on the remote control.
- 3 In the Language Selection screen, select a language.

Focus and Position of the Screen Image

When an image appears on the screen, check if it is in focus and fits the screen properly.

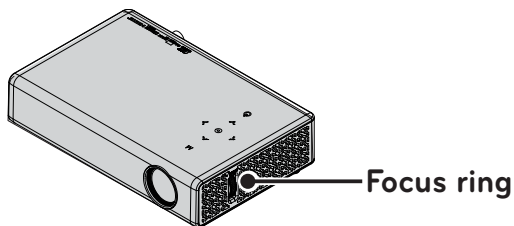

- To adjust the focus of the image, rotate the focus ring.

Watching Projector

- 1 In Standby mode, press the **POWER** button to turn the projector on.
- 2 Press the **INPUT** button and select the input signal you want.
- 3 Control the projector using the following buttons while watching projector.

Button	Description
VOL -, +	Adjusts the volume level.
MUTE	Mutes all sounds.
Q.MENU	Accesses the quick menu. (see page27)
RATIO	Resizes an image.
Key's▲,▼	Adjusts Keystone. (see page26)

- 4 To turn the projector off, press the **POWER** button.

Managing Channels

Setting Up Channels

Storing Channels

To store channels automatically,

- 1 Press **MENU** to access the menu.
- 2 Press the Navigation buttons to scroll to **CHANNEL** and press **OK**.
- 3 Press the Navigation buttons to scroll to **Auto Tuning** and press **OK**.
- 4 Select **Start** to start automatic tuning. The projector scans and saves available channels automatically.
- 5 When you are finished, press **EXIT**.

To store channels manually,

- 1 Press **MENU** to access the menu.
- 2 Press the Navigation buttons to scroll to **CHANNEL** and press **OK**.
- 3 Press the Navigation buttons to scroll to **Manual Tuning** and press **OK**.
- 4 Scroll through the channel types, and then add or delete channels.
- 5 When you are finished, press **EXIT**.




NOTE

- If the projector scans a blocked channel, you will be prompted to enter your password to keep the channel scanned.
- You can store up to 1000 channels. The number of channels that you can store differs depending on the broadcasting signal environment.
- The channels are stored in the order of DTV, TV, Cable DTV and Cable TV.

Editing Your Channel List

- 1 Press **MENU** to access the menu.
- 2 Press the Navigation buttons to scroll to **CHANNEL** and press **OK**.
- 3 Press the Navigation buttons to scroll to **Channel Edit** and press **OK**.
- 4 Edit channels using the following buttons.

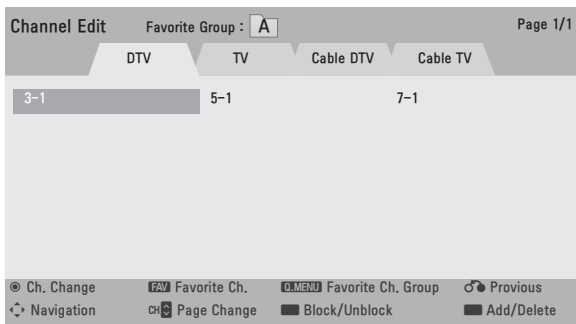

Button	Description
OK	Selects the highlighted channel to view.
, , < , >	Scrolls through channel types or channels.
FAV	Adds a favorite channel list.
CH	Moves to the previous or next page.
Q.MENU	Changes the favorite group.
Yellow	Block or unblock a channel.
Blue	Adds or deletes a channel. The deleted channel displays in blue.

- 5 When you are finished, press **EXIT**.

Favorite Channel Setup

- 1 Press **CH** or Number buttons to access to select your desired channel.
- 2 Press **FAV.** to access the **Favorite List**.
- 3 Press the , buttons to scrolls through channel group.
- 4 Press the **Yellow** button.

Favorite Channel List

- 1 Press **FAV.** to access the **Favorite List**.
- 2 Press the Navigation buttons to scroll to a channel.and press **OK**.



Button	Description
,	Scrolls through channels.
< , >	Scrolls through channel group.
CH	Moves to the previous or next page
Yellow	Register or cancel the current channel in favorite channel list.
Blue	Go to the "CHANNEL menu - Channel Edit".

Using Additional Options

Adjusting Aspect Ratio

Resize an image to view at its optimal size by pressing **RATIO** while you are using the projector.



NOTE

- Some options may not be available depending on input signals.
- You can also change the image size by pressing **Q.MENU** or **SETTINGS**.

- **FULL:** Changes to the full screen regardless of the aspect ratio.



- **16:9:** Resizes images to fit the screen width.



- **Just Scan:** Displays video images in the original size without cutting off the edges.



NOTE

- If you select Just Scan, you may see image noises at the edge or edges of the screen.

- **Set By Program:** Displays images in the same aspect ratio as the original image.



- **4:3:** Resizes images to the 4:3 aspect ratio.



- **Zoom:** Enlarges an image to fit the screen width. The top and bottom of the image may be truncated.
 - Press the or button to zoom in or out of the image.
 - Press the or button to move the image.



- **Cinema Zoom:** Formats an image to the cinemascope ratio, 2.35:1. It ranges from 1 to 16.
 - Press the or button to zoom in or out of the image.
 - Press the or button to move the image.



NOTE

- If you enlarge or reduce an image, the image may be distorted.

Using the Keystone Function

To prevent the screen image from becoming trapezoidal, Keystone adjusts the top and bottom width of the image if the projector is not set at a right angle to the screen.

Because the **Keystone** function may cause inferior screen image quality, use this function only when it is not possible to set up the projector at an optimal angle.




- 1 Press the **Key's +** or **Key's -** button to adjust the screen.
 - **Keystone** can be adjusted from **-40** to **40**.
- 2 Press the **OK** button after adjustment.

Using the Input List

Using the Input List


- 1 Press the **INPUT** button to access the input sources.
 - The connected input mode appears first. However, AV / Component input is always activated.

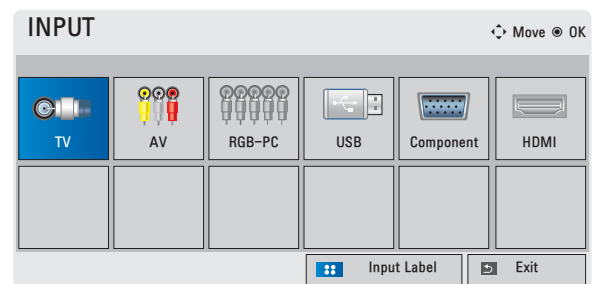

- 2 Select an input signal using the **INPUT** button and the projector is switched only to the connected input mode. You can use the **Left**, **Right**, or **Up** button to switch between all the input modes.

Adding an Input Label

Displays which devices are connected to which input ports.

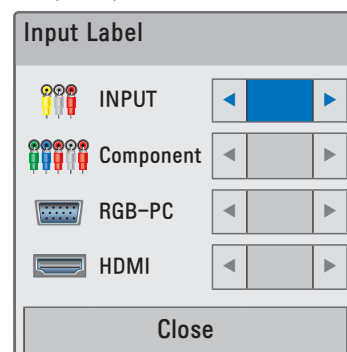

- 1 Press the **INPUT** button to access the input sources.
- 2 Press the **BLUE** button.
- 3 Use the **Left** or **Right** button to scroll to one of the input sources.
- 4 Use the **Left** or **Right** button to select one of the input labels.

Blank Function

Using the Blank Function

This function may be effective when you need to draw attention during a meeting or training.

- 1 Press the **BLANK** button, and the screen is covered by the background color.

You can change the background color by referring to "Selecting a Blank Image".

- 2 Press any button to clear the blank function.

To cover the screen temporarily, press the **BLANK** button on the remote control.

Do not block the lens with any object while the projector is running.

It may become overheated and deformed or even cause a fire.

Selecting a Blank Image

- 1 Press the **SETTINGS** button.
- 2 Press the **←**, **→**, or **⏪** button to select **OPTION** and press the **OK** button.
- 3 Press the **←**, **→**, or **⏪** button to select **Blank Image** and press the **OK** button.
- 4 Use the **←**, **→**, or **⏪** button to move to the setting or option you want and press the **OK** button.

Using the Quick Menu

You can customize frequently used menus.

- 1 Press **Q.MENU** to access the quick menus.
- 2 Press the **←** or **→** button to scroll through the following menus and press **OK**.

Menu	Description
Aspect Ratio	Resizes an image. (see page25)
Picture Mode	Changes the picture mode. (see page46)
Energy Saving	Adjusts brightness.
Clear Voice II	Makes the voice from the projector crisp and clear.
Sound Mode	Set each option as desired.
Sleep Timer	The projector is turned off at the preset time.
PJT Mode	Turns the projected image upside down or flips it horizontally.

- 3 Press the **←**, **→**, **⏪**, or **⏩** button to scroll through the following menus.


ENTERTAINMENT

MY MEDIA

Connecting USB Storage Devices

Connect a USB memory stick as shown below.

When a USB storage device is connected, the USB adjustment screen appears. You cannot write or delete data on the USB storage device.

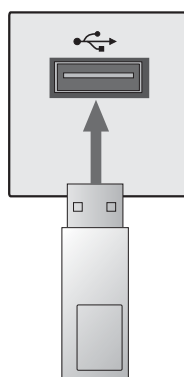

USB memory stick

To disconnect the USB storage device,

- 1 Press the **Q.MENU** button.
- 2 Use the **←** or **→** button to move to **USB Device** and press the **OK** button.
- 3 Remove the **USB device**.

NOTE

- After the USB storage device is disconnected, it cannot be read. Remove the USB storage device and connect it again.

Tips for Using USB Devices

- Only a USB storage device is recognizable.
- USB hubs are not supported.
- A USB storage device which uses its own driver may not be recognized.
- The recognition speed of a USB storage device will depend on each device.
- If a normal USB device does not work, disconnect and reconnect it. Please do not turn off the projector or unplug the USB device when the connected USB device is working. The USB device or stored files may be damaged.
- Please do not connect the USB storage device that has been manipulated on the PC. The projector may not operate properly or fail to play files. Use a USB storage device which contains normal music, photo, video, or document files.
- Please only use a USB storage device formatted as a FAT16, FAT32, or NTFS file system provided by Windows. In case a storage device formatted as a different utility program is not supported by Windows, it may not be recognized.
- Please connect power to a USB storage device which requires an external power supply. If not, the device may not be recognized.
- Please connect a USB storage device with a cable provided by the USB manufacturer. When you use a cable that is not provided by a USB manufacturer or an excessively long cable, the device may not be recognized.
- Some USB devices may not be supported or will not work properly.
- If the length of a folder or file is too long, the folder or file may not be recognized properly.
- The files in a USB storage device are sorted in the same way as Windows XP. Up to 100 English characters for a file name are allowed.
- The data of a USB device may be damaged, so it is recommended to backup any important files. Because a user is responsible for data management, the manufacturer is not responsible.
- It is recommended to use a USB memory stick which is 32 GB or less and a USB hard disk which is 1 TB or less. Any device with more than the recommended capacity may not work properly.
- If a USB storage device is not working properly, disconnect it and connect it again.
- If a USB external hard disk with the power saving function does not work, turn the hard disk off and on again to make it work properly.
- USB storage devices below USB 2.0 are supported as well. However, they may not work properly in the movie list.

MOVIE LIST

In the Movie List, you can watch movies stored on the connected USB device.

Tips for Playing Video Files

- Some subtitles created by a user may not work.
- Some special characters are not supported in subtitles.
- HTML tags are not supported in subtitles.
- Time information in a subtitle file should be arranged in ascending order to play the subtitle properly.
- Changing font and color in subtitles is not supported.
- A language which is not specified in the subtitle languages is not supported. (see page33)
- Subtitle files of 1 MB or larger are not supported.
- The screen may suffer temporary interruptions (image stoppage, faster playback, etc.) when the audio language is changed.
- A damaged video file may not be played properly, or some functions may not be available.
- Video files created with some encoders may not be played properly.
- Either audio or video may only be supported depending on the video or audio packet structure of a video file.
- Video files with higher resolution than the maximum supported for each frame may not be played properly.
- Video files in formats other than the ones specified above may not be played properly.
- Streaming files which include GMC (Global Motion Compensation) or Qpel (Quarterpel Motion Estimation) is not supported.
- Up to 10,000 sync blocks are supported in the subtitle file.
- Seamless playback is not guaranteed for files encoded level 4.1 or higher in H.264/AVC.
- DTS audio codec is not supported.
- Video files larger than 30 GB (Giga-bytes) are not supported.
- Playing a video via a USB connection that does not support high speed may not work properly.
- A video file and its subtitle file must be located in the same folder. A video file name and its subtitle file name must be identical in order to display the subtitle properly.
- While watching a video using the movie list function, you cannot adjust the picture mode.
- Trick Mode does not support other functions than ►► if video files do not have index information.
- When playing a video file using network, the Trick mode is limited to 2X speed.
- Video file names that contain special characters may not be playable.

Supported Files

Extension	Audio/Video	Codec	Profile/Level Support	Description
.asf .wmv	Video	VC-1 Advanced Profile	Advanced Profile @ Level 3 (e.g. 720p 60, 1080i 60, 1080p 30)	Only files compliant with SMPTE 421M VC-1 standard can be streamed.
		VC-1 Simple and Main Profiles	Simple Profile @ Medium Level (e.g. CIF, QVGA) Main Profile @ High Level (e.g. 1080p 30)	
	Audio	WMA Standard		
		WMA 9 Professional		
.divx .avi	Video	DivX3.11		Global motion compensation or quarterpel motion estimation is not supported. Streaming using this syntax is not supported.
		DivX4 DivX5 DivX6 XViD	Advanced Simple Profile (720p/1080i)	
		H.264 / AVC	Main Profile@ Level 4.1 High Profile@ Level 4.1 (e.g. 720p60, 1080i60, 1080p30)	
	Audio	MPEG-1 Layer I, II MPEG-1 Layer III (MP3) Dolby Digital		
.mp4 .m4v	Video	H.264 /AVC	Main Profile @Level 4.1 High Profile @Level 4.1 (e.g. 720p 60, 1080i 60, 1080p 30)	Global motion compensation or quarterpel motion estimation is not supported. Streaming using this syntax is not supported.
		MPEG-4 Part 2	Advanced Simple Profile (e.g. 720p/1080i)	
	Audio	AAC	AAC-LC and HE-AAC	
.mkv	Video	H.264 /AVC	Main Profile @Level 4.1 High Profile @Level 4.1 (e.g. 720p 60, 1080i 60, 1080p 30)	Most of the MKV content available is encoded by the open source x264 codec.
	Audio	HE-AAC	HE-AAC-LC and HE-AAC	
		Dolby Digital		
.ts .trp .tp	Video	H.264 /AVC	Main Profile @Level 4.1 High Profile @Level 4.1 (e.g. 720p 60, 1080i 60, 1080p 30)	Only files compliant with SMPTE 421M VC-1 standard can be streamed.
		MPEG-2	Main Profile @High Level (e.g. 720p 60, 1080i 60)	
		VC-1	Simple Profile @Medium Level (e.g. CIF, QVGA) Main Profile @High Level (e.g. 1080p30) Advanced Profile @Level 3 (e.g. 720p60, 1080i60, 1080p30)	
	Audio	MPEG-1 Layer I, II MPEG-1 Layer III (MP3) Dolby Digital		
		AAC	AAC-LC and HE-AAC	
.vob	Video	MPEG-1		
		MPEG-2	Main Profile @High Level (e.g. 720p 60, 1080i 60)	
	Audio	Dolby Digital MPEG-1 Layer I, II DVD-LPCM		
.mpg .mpeg .mpe	Video	MPEG-1	Main Profile @High Level (e.g. 720p60, 1080i60)	Only files configured properly for TS, PS or ES can be streamed.
	Audio	MPEG-1 Layer I, II		


Bit rate range: within 32 kbps - 320 kbps (MP3)



Subtitle format: *.smi/*srt/*sub (MicroDVD, SubViewer1.0/2.0)/*.ass/*.ssa/*.txt (TMPlayer)/*.psb (PowerDivX)

Browsing Movie List

Play a video file stored in the connected device.

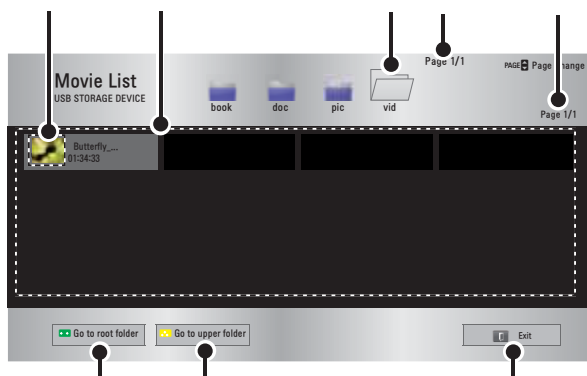
- 1 Connect a USB storage device.
- 2 Press the **USB** button.
- 3 Use the **Left**, **Right**, or **Up** button to select **Movie List** and press the **OK** button.
- 4 If several devices are connected, press the **Left**, **Right**, or **Up** button to select a desired device and press the **OK** button.
- 5 Use the **Left**, **Right**, or **Up** button to select the file you want and press the **OK** button.



	Description
	Thumbnails
	Abnormal file 
	File not supported 
	File List
	Moves to the upper level folder.
	Current page/Total no. of folder pages




 

	Description
	Current page/Total no. of file pages
	Moves to the top level folder.
	Moves to the upper level folder.
	Exit Movie List.

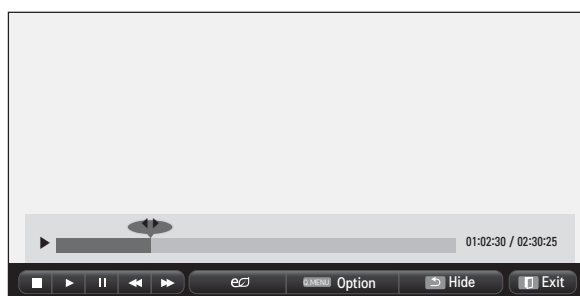6 Control playback by using the following buttons.



Setting	Description
<, >	Shows the current playing position. Use <, > buttons to move forward or backward.
■	Stops playing and returns to Movie List.
▶	Returns to normal playback.
	Pauses the media player. If no button is pressed on the remote control for 10 minutes after pausing, the playback is restarted.
▶▶	Displays in slow motion.
◀▶	Whenever this button is pressed, the playback speed is changed. : x2, x4, x8, x16, x32
Q.MENU	A pop-up window will appear.
Option	
Hide	Hides the playback bar. Press the OK button to make it appear.
Exit	Returns to the Movie List screen.

Options for Movie List

- 1 Press the **Q.MENU** button.
- 2 Use the  or  button to move to a desired option and press the **OK** button.
- 3 Use , , or  button to set up each item.

Set Video Play

Setting	Description
Picture Size	<p>Selects the size of a playback screen.</p> <ul style="list-style-type: none"> • Full: Files are played in full screen mode according to the aspect ratio of video. • 16:9: Displays the video with the aspect ratio of 16:9. • Just Scan: Displays the video in the original aspect ratio.
Audio Language	<p>Allows you to select the language you want for the file with multiple audio tracks. This option is not available if the file has only one audio track.</p>
Subtitle Language	<p>The subtitle can be turned on or off.</p> <ul style="list-style-type: none"> • Language: One of any of the available languages can be selected. • Code Page: A character set used for a subtitle can be selected. <p>By default, the subtitle is displayed in a language configured in OPTION ▢ Menu Language.</p>

Setting	Description
Subtitle Language	<ul style="list-style-type: none"> • Speed: If a subtitle is not synchronized with its video, you can adjust its speed at 0.5 sec unit. • Position: Moves the location of a subtitle. • Size: Changes the subtitle font size.
Repeat	<p>Turns the repeat function on or off.</p> <p>When it is set to off, the next file can be played sequentially if the file name is similar.</p>

• **Subtitle Language**

Subtitle Language	Language
Latin1	French, Spanish, Catalan Basque, Portuguese, Italian, Albanian, Rhaeto-Romanic, Dutch, German, Danish, Swedish, Norwegian, Finnish, Faeroese, Icelandic, Irish, Scottish, English
Korean	English, Korean

PICTURE Settings

You can change video settings. (Refer to "PICTURE Settings" on page 46.)


AUDIO Settings

You can change audio settings. (Refer to "AUDIO Settings" on page 50.)


Registering the DivX code

Please check your DivX code. For more information on the registration process, visit www.divx.com/vod. After registration, you can enjoy DivX VOD content protected by the DivX DRM code.

- 1 In the Home menu, move to **OPTION** and press **DivX(R) VOD**.

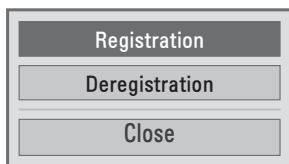

- 2 Press the **Left** or **Right** button to move to **Registration** and press the **OK** button.

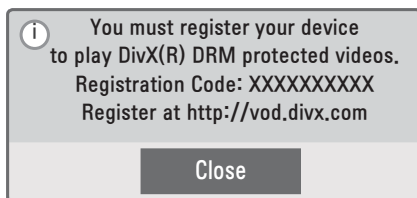

- 3 Check the **DivX registration code**.



! NOTE

- You cannot use DivX registration codes assigned to other devices. Make sure to use the DivX registration code assigned to your device.
- The video or audio files that are not converted by the standard DivX codec may be corrupted or not be played.

To deregister the DivX code

Use the DivX deregistration code to deactivate the DivX DRM function.

- 1 In the Home menu, move to **OPTION** and press **DivX(R) VOD**.
- 2 Use the **Left** or **Right** button to go to **Deregistration** and press the **OK** button.

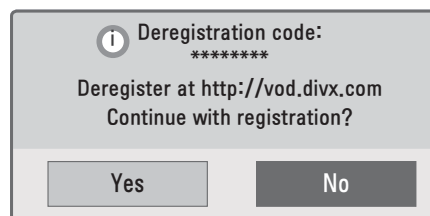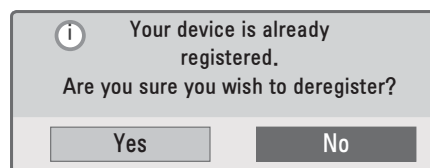

- 3 Select **Yes**.

! NOTE

- What is DRM [Digital Rights Management]? This is a technology and service that prevents the illegal use of digital contents to protect the benefits and rights of the copyright owner. Files can be played after the license is verified through an online method, etc.

PHOTO LIST

You can see the photos stored on a connected device.

Supported Photo Files

PHOTO (*.JPEG)


Baseline: 64-pixel (width) x 64-pixel (height) - 15360-pixel (width) x 8640-pixel (height)



Progressive: 64-pixel (width) x 64-pixel (height) - 1920-pixel (width) x 1440-pixel (height)

- Only JPEG files are supported.
- Non-supported files are displayed in the form of an icon.
- An error message is displayed for corrupted files or file formats that cannot be played.
- Corrupted files may not be displayed properly.
- It may take some time to view high-resolution images in full screen.


Browsing Photo List

- 1 Connect a **USB storage device**.
- 2 Press the **USB** button.
- 3 Use the **Left**, **Right**, or **Up** button to select **Photo List** and press the **OK** button.
- 4 If several devices are connected, press the **Left**, **Right**, or **Up** button to select a desired device and press the **OK** button.
- 5 Use the **Left**, **Right**, or **Up** button to select the file you want and press the **OK** button.

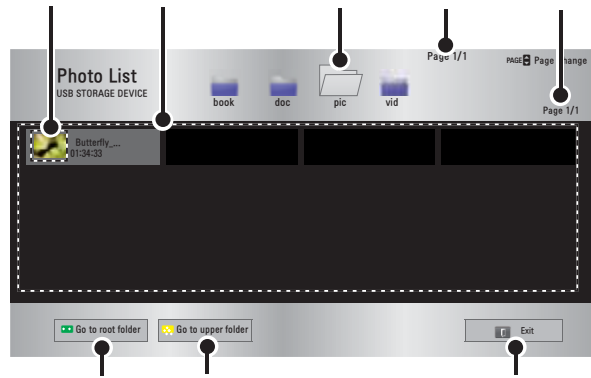

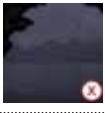Description	
	Thumbnails
	Abnormal file 
	File not supported 
	File List
	Moves to the upper level folder.
	Current page/Total no. of folder pages
	Current page/Total no. of file pages
	Moves to the top level folder.
	Moves to the upper level folder.
	Exit

6 Control playback by using the following buttons.

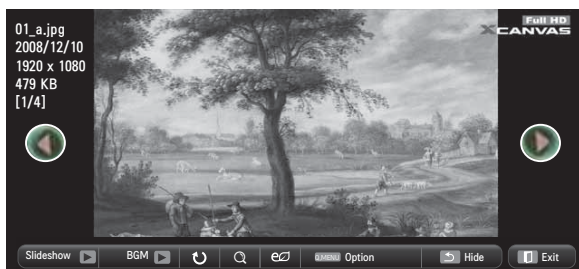

Setting	Description
	Selects the previous or next photo.
Slide-show	If no picture is selected, all photos in the current folder are displayed during the slide show. If some photos are selected, those photos are displayed. <ul style="list-style-type: none"> • Set the time interval of the slide show in Option → Set Photo View menu.
BGM	You can listen to music while viewing photos in full size. <ul style="list-style-type: none"> • Set the BGM in Option → Set Photo View menu.
	Rotates photos. <ul style="list-style-type: none"> • Rotates a photo 90°, 180°, 270°, 360° clockwise. • Photos cannot be rotated if their width is greater than the height of the max. supported resolution.
	Views the photo in full mode or original mode. Use the Up/Down/Left/Right buttons to select a page and press the OK button.

Setting	Description
	You can use the Energy Saving mode.
Option	A pop-up window will appear.
Hide	Hides the menu on the full size screen. <ul style="list-style-type: none"> • To see the menu, press the OK button on the remote control.
Exit	Exit from full screen photo view.

Options for Photo List

- 1 Press the **Q.MENU** button.
- 2 Use the or button to move to a desired option and press the **OK** button.
- 3 Use , , or button to set up each item.

Set Photo View

Setting	Description
Slide speed	Selects a slideshow speed.
BGM (Background Music)	Selects a music folder for the background music. <ul style="list-style-type: none"> • You cannot change the music folder while the background music is playing. • For background music, only the folder from the same device can be selected.

PICTURE Settings

You can change video settings.
 (Refer to "PICTURE Settings" on page 46.)

AUDIO Settings

You can change audio settings.
 (Refer to "AUDIO Settings" on page 50.)

MUSIC LIST


You can play audio files stored on the connected device.



Supported Music Files

- *.MP3
- Bit rate range 32 Kbps - 320 Kbps
 - Sampling rate MPEG1 Layer3: 32kHz, 44.1kHz, 48kHz
 - Sampling rate MPEG2 Layer3: 16kHz, 22.05kHz, 24kHz


Browsing Music List

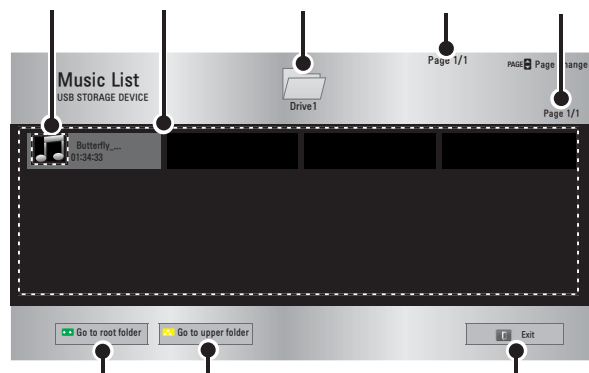- 1 Connect a **USB storage device**.
- 2 Press the **USB** button.
- 3 Use the , , , button to select **Music List** and press the **OK** button.
- 4 If several devices are connected, press the , , or button to select a desired device and press the **OK** button.
- 5 Use the , , or button to select the file you want and press the **OK** button.



	Description
Thumbnails	
Abnormal file	
File not supported	
File List	
	Moves to the upper level folder.
	Current page/Total no. of folder pages
	Current page/Total no. of file pages
	Moves to the top level folder.
	Moves to the upper level folder.
	Exit

6 Control playback by using the following buttons.

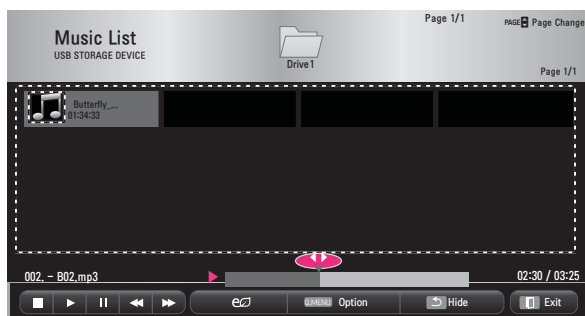

Setting	Description
,	Changes the playing position.
■	Stops playing.
▶	Returns to normal playback.
	Pauses the media player.
◀▶	Plays the previous/next file.
eo	You can use the Energy Saving mode.
Option	Sets up the options of Music List.

Setting	Description
Hide	Hides the playback bar. <ul style="list-style-type: none"> Press the OK button to make the playback bar appear.
Exit	Returns to the Music List screen.

Options for Music List

- 1 Press the **Q.MENU** button.
- 2 Use the or button to move to a desired option and press the **OK** button.
- 3 Use , , or button to set up each item.

AUDIO Settings

You can change audio settings.

(Refer to "AUDIO Settings" on page 50.)

FILE VIEWER

You can see document files stored on a connected device.


Supported File Formats

XLS, DOC, PPT, TXT, XLSX, PPTX, DOCX, PDF, Microsoft Office 97/2000/2002/2003/2007 Adobe PDF 1.0/1.1/1.2/1.3/ 1.4

- File Viewer realigns a document, so it may look different from what is displayed on a PC.
- For documents that include images, the resolution may look lower during the realigning process.
- If the document volume is big or it has many pages, it may take longer to load the document.
- Unsupported fonts may be replaced by other fonts.

Browsing File Viewer

- 1 Connect a **USB storage device**.
- 2 Press the **USB** button.
- 3 Use the **Left**, **Right**, or **Up** button to select **File Viewer** and press the **OK** button.
- 4 If several devices are connected, press the **Left**, **Right**, or **Up** button to select a desired device and press the **OK** button.
- 5 Use the **Left**, **Right**, or **Up** button to select the file you want and press the **OK** button.

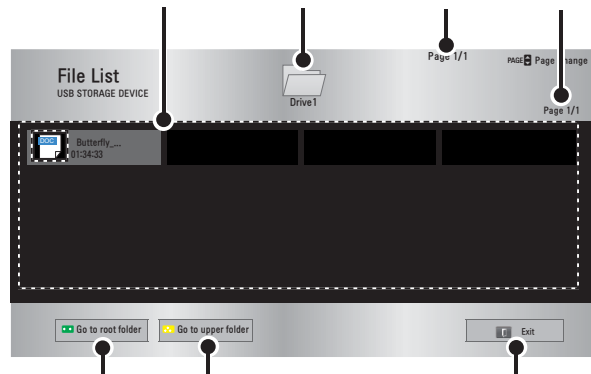


	Description
	File List
	Moves to the upper level folder.
	Current page/Total no. of folder pages
	Current page/Total no. of file pages
	Moves to the top level folder.
	Moves to the upper level folder.
	Exit

6 Control playback by using the following buttons.

- Press the **Go Page** button to move to the previous or next page.
- Press the volume button to zoom in or zoom out.

1. Press **SETTINGS**.

2. Press the **Up/Down/Left/Right** buttons to move to Go Page or Zoom.

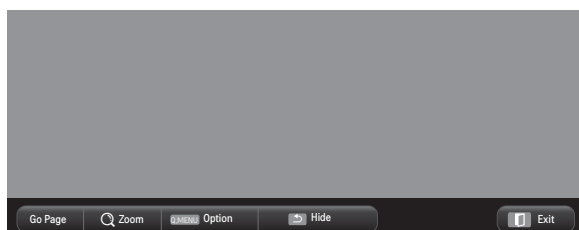

Setting	Description
Go Page	Moves to the page you want. Use the Up/Down/Left/Right buttons to select a page and press the OK button.
Zoom	Views the photo in full mode or original mode. Use the Up/Down/Left/Right buttons to select a page and press the OK button.
Option	Sets up the options of File Viewer.
Hide	Hides the menu. <ul style="list-style-type: none"> • Press the SETTINGS button to make it appear.
Exit	Returns to the File Viewer screen.

3D FUNCTION

3D technology uses different video frames for each eye to add depth to the video.

Before Watching 3D

While Watching 3D

⚠ WARNING

- If you view 3D images too closely for a long period of time, it may cause blurred vision.
 - If you watch the projector or game screen for a long time with 3D glasses on, you may experience dizziness or eye fatigue.
 - If you are pregnant, a senior citizen, intoxicated, have heart problems, or easily feel motion sickness, we recommend that you do not watch 3D images.
 - Because 3D images can be recognized as real, some viewers may get surprised or overexcited.
 - Do not watch 3D images near fragile objects or any objects that can be knocked over easily.
 - Take care not to injure yourself as you may subconsciously try to move away from the life-like 3D images.
 - Prevent children of 5 years or younger from watching a 3D video. It may impair the development of their eyes.
- **Warning about photosensitivity seizures**
 - Some users may experience a seizure or other abnormal symptoms when they are exposed to a flashing light or particular pattern from a video game or movie. If anyone in your family has a history of epilepsy or has ever experienced any kind of seizure, please consult your doctor before viewing 3D images. If you experience one of the following symptoms while watching a 3D video, stop watching the 3D video immediately and take a rest.
 - **Dizziness, twitching of the eye or facial muscles, involuntary movements, cramp, loss of consciousness, confusion, loss of sense of direction, or nausea. If the symptom does not disappear, please consult your doctor.**
 - **You can reduce the risk of photosensitive seizures by taking the following preventive measures.**
 - Take a rest of 5 - 15 mins. for every 1 hour of viewing.
 - If vision varies between each eye, correct the variation before beginning to watch a 3D video.
 - Ensure that the 3D video is directly in front of you, at eye level.
 - You should stop watching if you experience a headache, fatigue or dizziness.
 - Do not view 3D images when you are tired or ill.


⚠ CAUTION

- Extra special care is required for children watching a 3D video.

When Watching 3D Video

- Watch 3D images within the optimum viewing angle and distance.
- If you are outside the viewing angle or distance, you may not be able to watch 3D images. You cannot view 3D images when you lie down.
- You may see left and right images overlapped during projector initialization after it is powered on. It may take some time for optimization.
- It may take some time for the 3D image look normal after you turn your eyes away from the screen and look back at the 3D image.
- It may flicker slightly while watching 3D images under a 3 wavelength lamp fluorescent light (50 Hz - 60 Hz) or near windows. If so, it is recommended to block the sun light with a curtain and to dim the lights.
- The 3D glasses must be DLP-LINK (DLP Ready) type.
- You may not be able to watch 3D properly if there is an obstacle between the projector and 3D glasses.
- Install the 3D projector as far as possible from other devices.

Requirements for Watching 3D Images

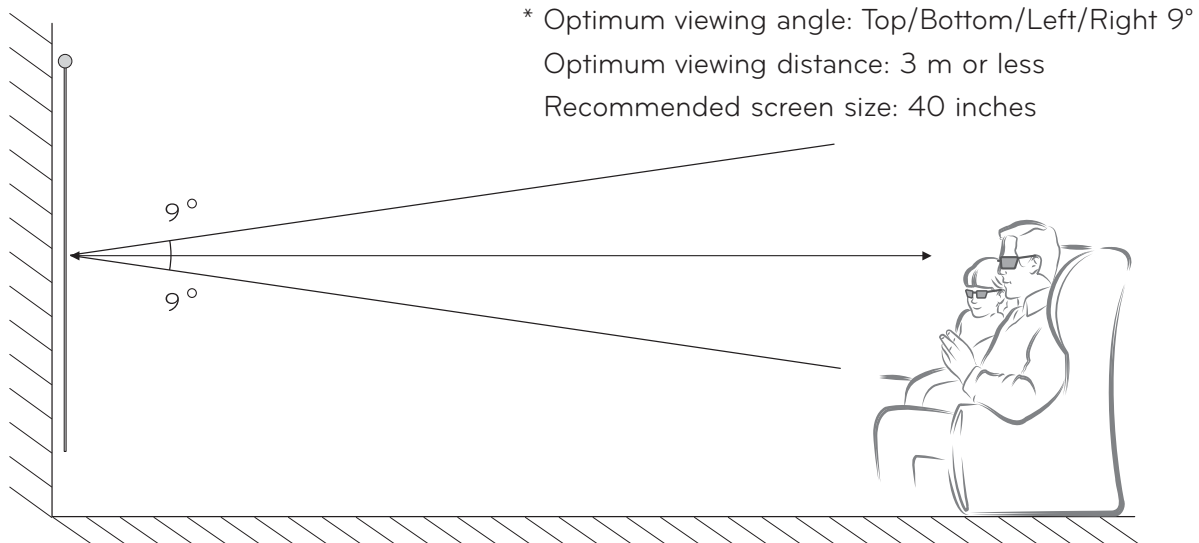

- * Basically, Watching 3D videos should be done in dark room environments only.
- * For 3D watching, set the energy saving mode to Minimum.



NOTE

- The pairing with the DLP-LINK glasses is affected by the intensity of light reflected from the screen. Therefore, the pairing with DLP-LINK glasses may not work properly if the light reflected from the screen is not bright enough, such as when the surrounding area is bright, the screen is big, or the maximum energy saving mode is enabled.
- Some menus may not work while playing a 3D video.
- You can only watch a 3D video properly when the 3D video format option has been selected on the projector.

To Use DLP-LINK (DLP-Ready) Type Glasses

- 1 While watching 3D images from the projector, press buttons on the glasses.
- 2 When you press the button, the glasses flicker to be synchronized with the 3D images.
 (The flickering is a unique operation method of DLP-LINK type glasses. It may be different depending on the glasses type.)
- 3 If the glasses flicker or problems occur while watching 3D, first turn the lights off to make the room darker. Contact your projector seller for queries about the glasses.

Supported 3D input formats

	Signal	Resolution	Vertical Frequency (Hz)	Supported 3D Formats
No sound	XGA	1024x768	120	Frame Sequential / Frame Alternative
RGB-PC	XGA	1024x768	120	Frame Sequential / Frame Alternative

- The resolution supporting 3D mode is 1024x768 for HDMI and RGB input.
- Some menus may not work in 120HZ input.




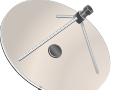




Watching 3D Images

- 1 Play supported 3D video titles.
- 2 For RGB-PC, you must press **"AUTO"** on the remote control before watching 3D.
- 3 Press the **3D** button.
- 4 While watching 3D images from the projector, press buttons on the glasses.
- 5 Press the **L/R** button to switch the playing direction of an image. Select a screen with better 3D display quality.
 - If you press the **3D** button during viewing, it returns to 2D.
- 6 If a 2D image is displayed on the 16:9 screen, a 3D image is also displayed at the aspect ratio of 16:9. For ratios other than 16:9, a 3D image is displayed in 4:3.
 - You cannot change the screen size for 3D images.

CUSTOMIZING SETTINGS


SETUP Menu

- 1 Press the **SETTINGS** button.
- 2 Use the **←**, **→**, or **OK** button to select a desired item and press the **OK** button.
- 3 Use the **←**, **→**, or **OK** button to set up a desired item and press the **OK** button.

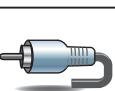Menu		Description
	PICTURE	Adjusts the image quality for optimal viewing.
	AUDIO	Adjusts the sound quality and volume level.
	TIME	Sets the time and time-related features.
	CHANNEL	Sets up and edit channels.
	LOCK	Locks or unlocks channels and programs.
	OPTION	Customizes the general settings.
	INPUT	Selects the desired input source.
	MY MEDIA	Accesses photo, music, movie, and document files.

PICTURE Settings

- 1 Press the **SETTINGS** button.
- 2 Use the **Left**, **Right**, or **Down** button to select **PICTURE** and press the **OK** button.
- 3 Use the **Left**, **Right**, or **Down** button to set up a desired item and press the **OK** button.
 - To return to the previous menu, press the **Left** button.

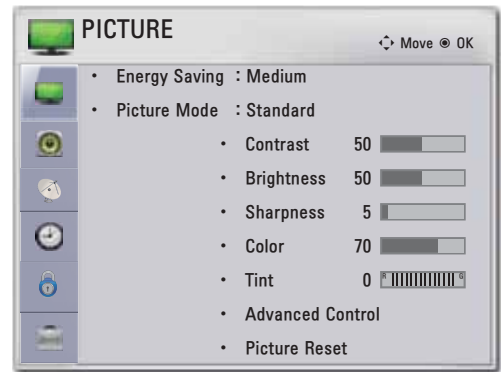

The available picture settings are described as follows.

Setting	Description
Energy Saving	Adjusts brightness.
Picture Mode	Selects one of the preset images or customizes options in each mode for the best screen performance. You are also able to customize advanced options of each mode.
	Mode
	Bright Has the brightness at the highest level with increased noise.
	Vivid Maximizes the visual effect of video. Displays a crystal clear picture by enhancing contrast, brightness, and sharpness.
	Standard Has the contrast, brightness and sharpness at normal levels.
	Movie Optimizes the image for movie.
	Sport Optimizes the image for sports by emphasizing primary colors and dynamic actions.
	GAME Optimizes the image for playing games on fast-moving screens.
Expert Adjusts the detailed image settings.	
CON-TRAST	Increases or decreases the gradient of the video signal.
BRIGHT-NESS	Adjusts the base level of the video signal to make the image brighter or darker.
Horizontal Sharpness	Adjusts the level of sharpness in the edge between the light and dark areas of the picture. The lower the level is, the softer the image looks.
Vertical Sharpness	Adjusts the level of sharpness in the edge between the light and dark areas of the picture. The lower the level is, the softer the image looks.
Color	Adjusts the intensity of all colors.

Setting	Description	
Tint	Adjusts the balance between red and green levels.	
Advanced Settings	Customizes the advanced settings.	
Picture Reset	Restores the options of each mode to the factory default.	
Picture Size	Resizes an image.	
Picture Wizard II	By following the instructions, using the remote control, you can easily adjust the picture quality to technical standards without needing an expensive pattern device or a picture quality expert.	
Screen Display (RGB-PC)	Adjusts the picture quality of RGB-PC input.	
	Option	
	Resolution	Available resolutions are 768 resolution (1024x768/1280x768/1360x768, 60Hz) and 1050 resolution (1400x1050/1680x1050, 60Hz).
	Auto Config.	Provides optimized picture quality by automatically calibrating the mismatch of horizontal width and picture shake caused by clashes between the internal settings of the projector and various PC graphic signals. <ul style="list-style-type: none"> You can also use the AUTO button on the remote control.
	Position	Moves the image up/down/left/right.
	Size	Changes the screen size.
	Phase	Makes the picture look clear by removing horizontal noise.
Initial Setting	Restores all the settings to the factory default.	

Advanced Settings

Setting	Description
Dynamic Contrast	Adjusts the contrast to keep it at the best level according to the brightness of the screen.
Dynamic Color	Adjusts screen colors so that they look natural.
Clear White	Makes the white area of screen look brighter and whiter.
Skin Color	Detects the skin area of image and adjusts it to render a natural skin color.
Noise Reduction	Reduces image noise.
Digital Noise Reduction	This option reduces the noise produced while creating digital video signals.

Setting	Description
GAMMA	Sets a gradation curve between video input and output signal.
Black Level	Compensates the brightness and contrast of a screen to balance with the black level of the video input. Not available for RGB-PC.
Real Cinema	Provides the optimal picture quality for watching a movie.
Color Gamut	Selects the range of colors to display. <ul style="list-style-type: none"> • Standard: Displays the original colors of an input signal regardless of the display features. • Wide: Sets to use the rich colors of the display.
Edge Enhancer	Provides much sharper and clearer edges to the picture.
xvYCC	Displays much richer colors. This function is enabled in Cinema, Expert for HDMI signal.
Expert Pattern	This is a pattern used for expert adjustment.
Color Filter	Accurately adjusts color and tint by filtering a specific color area of RGB space.
Color Temperature	Adjusts the overall color of the screen to suit your preference. Select Warm, Cool or Medium . In Expert mode, you can customize the options of each mode.
	<p>Gamma: Select 1.9, 2.2, or 2.4.</p> <p>a. Method: 2 points</p> <ul style="list-style-type: none"> - Pattern: Inner, Outer - Contrast Red/Green/Blue, Brightness Red/Green/Blue: Adjustable range -50 - +50. <p>b. Method: 10 points IRE</p> <ul style="list-style-type: none"> - Pattern: Inner, Outer - IRE (Institute of Radio Engineers) is the unit that indicates the size of the video signal and can be set as either 10, 20, 30 - 90, or 100. You can fine-tune for each setting as shown below. - Luminance: If you set up luminance for 100 IRE, a luminance value satisfying each gamma is automatically calculated for each step from 10 IRE to 90 IRE. - Red/Green/Blue: The adjustment range is -50 - +50.

Setting	Description
Color Management	<p>Adjusts Red/Green/Blue/Yellow/Cyan/Magenta colors. Allows an expert to adjust the tint using a test pattern. Six colors (Red/Green/Blue/Cyan/Magenta/Yellow) can be selectively adjusted without affecting other colors.</p> <p>You may not see colors change on a normal picture even after adjustment.</p> <p>- Chroma Red/Green/Blue/Yellow/Cyan/Magenta, Tone Red/Green/Blue/Yellow/Cyan, Magenta: The adjustment range is -30 - +30 each.</p>

AUDIO Settings

- 1 Press the **SETTINGS** button.
- 2 Use the **←**, **→**, **↑**, **↓** buttons to select **AUDIO** and press the **OK** button.
- 3 Use the **←**, **→**, **↑**, **↓** or **OK** button to set up a desired item and press the **OK** button.
 - To return to the previous menu, press the **↶** button.



The available audio settings are described as follows.

Setting	Description	
Auto Volume	Automatically adjusts the volume level.	
Clear Voice II	Makes the voice from the projector crisp and clear.	
Balance	Adjusts the balance of the left and right speakers.	
Sound Mode	Adjusts sound.	
	Option	
	Infinite Surround	LG's unique sound option provides 5.1 channel stereo sound from two speakers.
	Treble	Adjusts the treble sound.
	Bass	Adjusts the base sound.
	RESET	Resets all the sound settings to the factory default.

CHANNEL Settings

- 1 Press the **SETTINGS** button.
- 2 Use the **←**, **→**, or **OK** button to select **CHANNEL** and press the **OK** button.
- 3 Use the **←**, **→**, or **OK** button to set up a desired item and press the **OK** button.
 - To return to the previous menu, press the **↶** button.




The available channel settings are described in the following.

Setting	Description
Auto Tuning	Tunes and stores all available channels through antennas or cable inputs. (See p.22)
Manual Tuning	Tunes and stores the channels you want manually.
Channel Edit	Adds or deletes channels. (See p.23)

TIME Settings

- 1 Press the **SETTINGS** button.
- 2 Use the **←**, **→**, or **↑** button to select **TIME** and press the **OK** button.
- 3 Use the **←**, **→**, or **↑** button to set up a desired item and press the **OK** button.
 - To return to the previous menu, press the **↶** button.

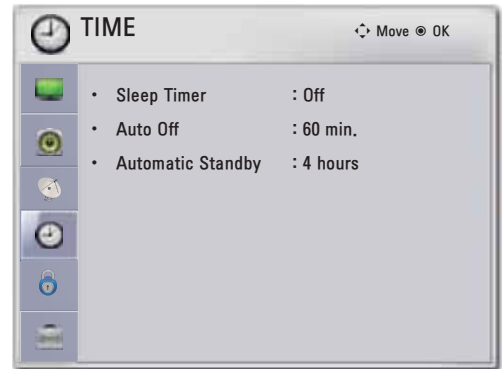


The available time settings are described as follows.

Setting	Description
Sleep Timer	The projector is turned off at the preset time.
Auto Off	If there is no signal, the projector automatically turns off after the preset time has elapsed.
Automatic Standby	If there is no input for the preset time, the projector automatically goes to standby mode.

OPTION Settings

- 1 Press the **SETTINGS** button.
- 2 Use the **←**, **→**, or **↑** button to select **OPTION** and press the **OK** button.
- 3 Use the **←**, **→**, or **↑** button to set up a desired item and press the **OK** button.
 - To return to the previous menu, press the **↶** button.

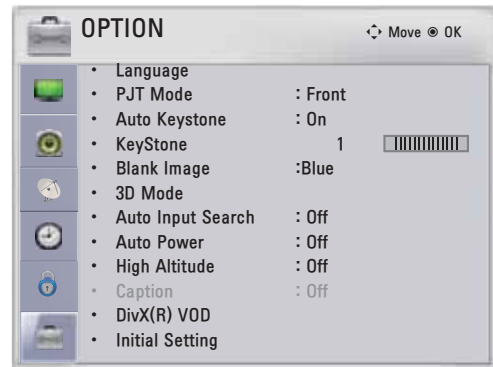


The available option settings are described as follows.

Setting	Description
Language	Selects a desired Menu Language.
PJT Mode	Turns the projected image upside down or flips it horizontally.
Auto Keystone	Auto Keystone provides a rectangular screen image by automatically adjusting the Keystone number when there is a trapezoidal screen image caused by tilting of the projector.
	Option
	ON Automatically adjusts the Keystone number.
	Off Manually adjusts the Keystone number.
Keystone	To prevent the screen image from becoming trapezoidal, Keystone adjusts the top and bottom width of the image if the projector is not set at a right angle to the screen.
Blank Image	Selects a background for blank Image. (see page27)
3D Mode	Selects 3D mode.
Auto Input Search	Automatically searches and displays an input signal type when it is received.
Auto Power	Makes the projector turn on automatically when the adaptor plug is inserted.
	Option
	On When the DC plug is connected to the projector, it turns on automatically.
	Off When the DC plug is connected to the projector, it goes into standby mode.

Setting	Description										
High Altitude	<p>If the projector is used at an altitude higher than 1200 meters, turn this on.</p> <p>Otherwise, the projector may overheat or its protection function may be activated. If this happens, turn the projector off and then on again after waiting for several minutes.</p>										
Caption	<p>You can select a desired language when a broadcasting company sends out digital multilingual signals and the selected language is displayed as a default when the projector is turned on or the channel is changed. If there is no information for a selected foreign language, it is displayed in English instead.</p> <p>Digital Subtitle Settings (For digital broadcasting)</p> <table border="1" data-bbox="360 902 1445 1137"> <tr> <td data-bbox="360 902 671 949">Size</td> <td data-bbox="671 902 1445 949">Selects the size of a subtitle.</td> </tr> <tr> <td data-bbox="360 949 671 996">Text Color</td> <td data-bbox="671 949 1445 996">Selects the color of a subtitle.</td> </tr> <tr> <td data-bbox="360 996 671 1043">Text Opacity</td> <td data-bbox="671 996 1445 1043">Selects the transparency of a subtitle.</td> </tr> <tr> <td data-bbox="360 1043 671 1090">Bg Color</td> <td data-bbox="671 1043 1445 1090">Selects the background color of a subtitle.</td> </tr> <tr> <td data-bbox="360 1090 671 1137">Bg Opacity</td> <td data-bbox="671 1090 1445 1137">Selects the transparency of a subtitle background.</td> </tr> </table>	Size	Selects the size of a subtitle.	Text Color	Selects the color of a subtitle.	Text Opacity	Selects the transparency of a subtitle.	Bg Color	Selects the background color of a subtitle.	Bg Opacity	Selects the transparency of a subtitle background.
Size	Selects the size of a subtitle.										
Text Color	Selects the color of a subtitle.										
Text Opacity	Selects the transparency of a subtitle.										
Bg Color	Selects the background color of a subtitle.										
Bg Opacity	Selects the transparency of a subtitle background.										
DivX(R) VOD	sets DivX related settings.										
Initial Setting	Resets all the projector settings to the factory default.										

MAKING CONNECTIONS

You can connect various external devices to the ports on the projector.

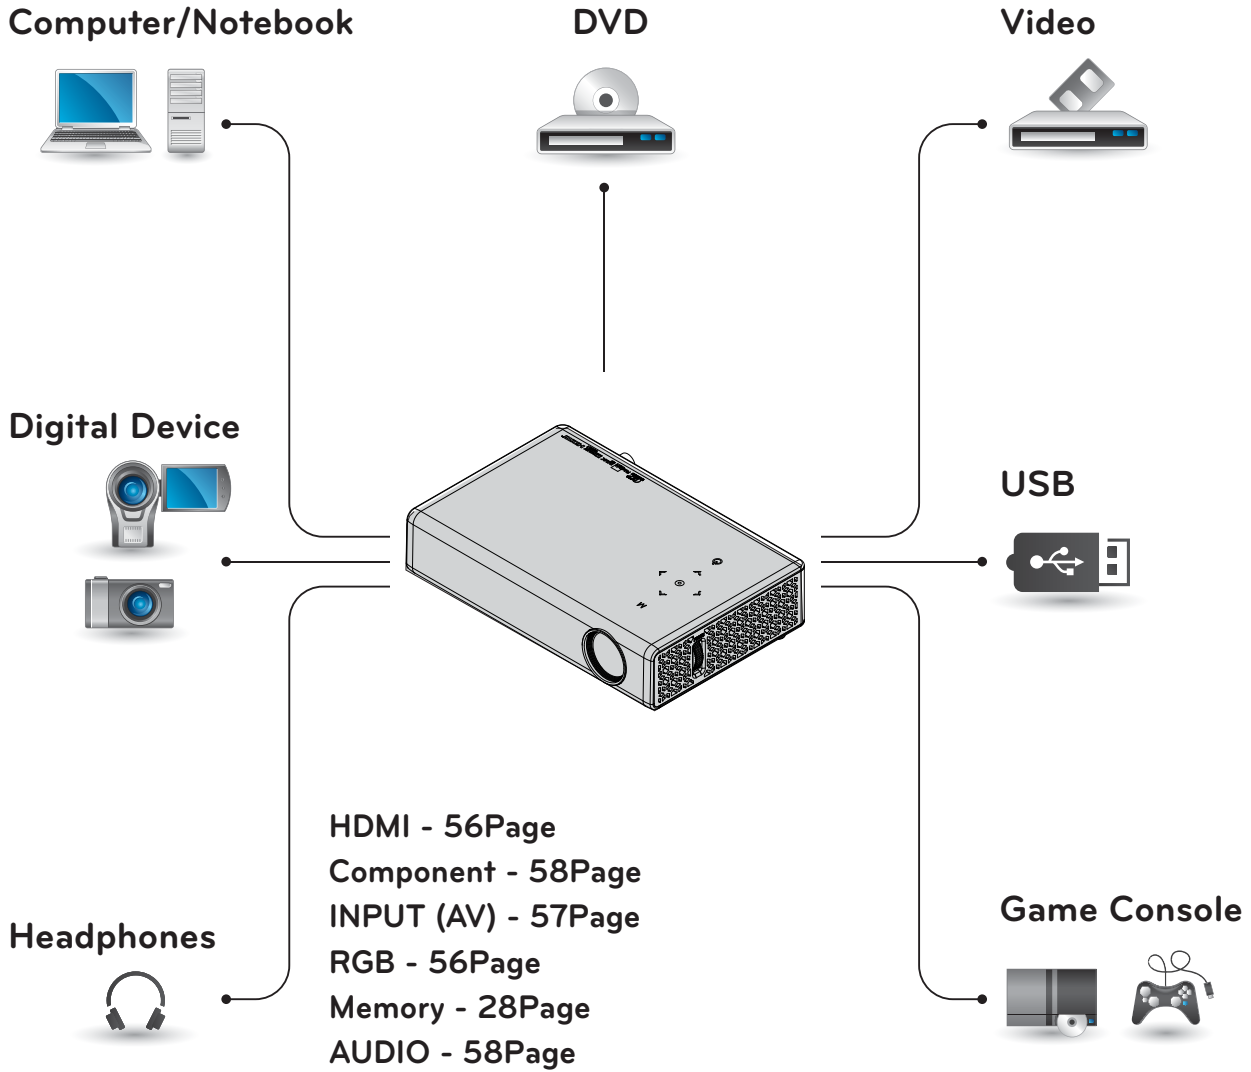


Connecting to an HD Receiver, DVD, or VCR Player

Connect an HD receiver, DVD, or VCR player to the projector and select an appropriate input mode.

HDMI Connection

With an HDMI cable, you can enjoy high quality picture and sound. Press the **INPUT** button on the remote control to select **HDMI**.

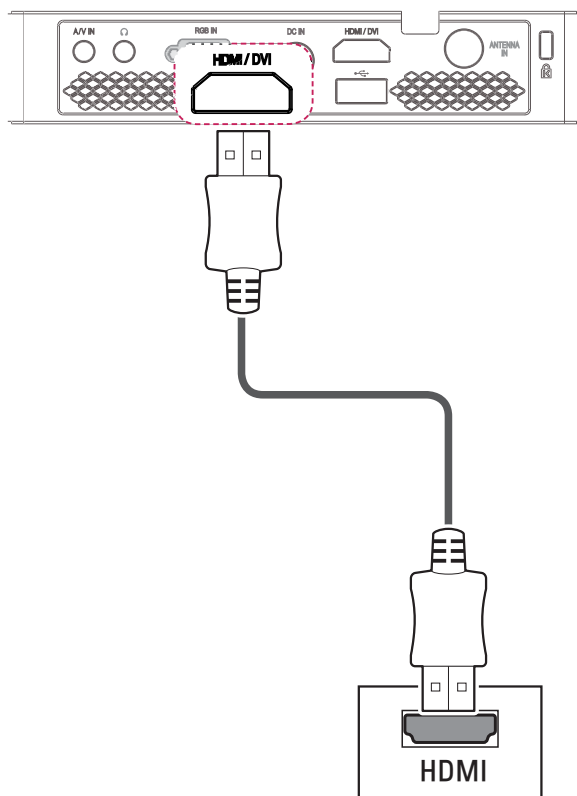


Connecting to a PC


The projector supports Plug & Play. A PC will automatically recognize the projector and requires no driver to be installed.

RGB Connection

Connect the PC output and the PC video input port of the projector with the RGB cable.

For audio signal, connect the PC and the projector with an optional audio cable.

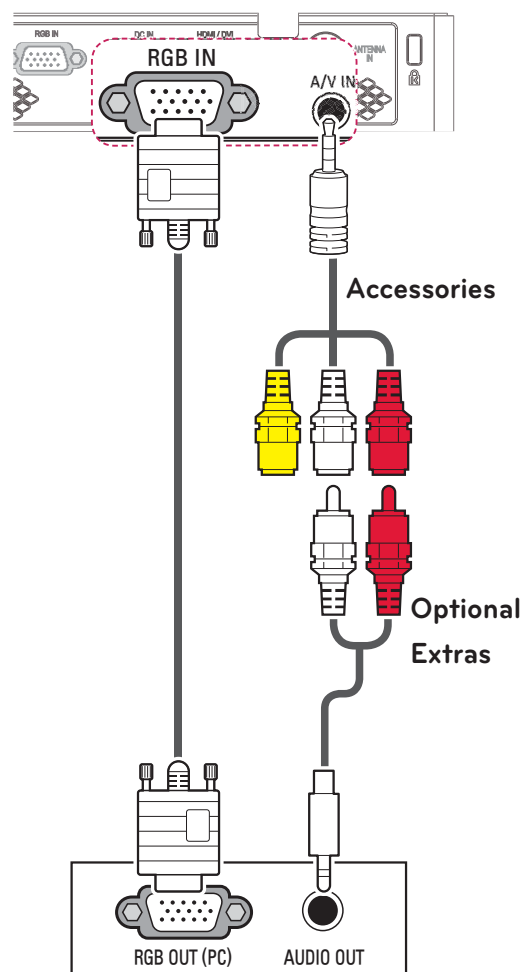


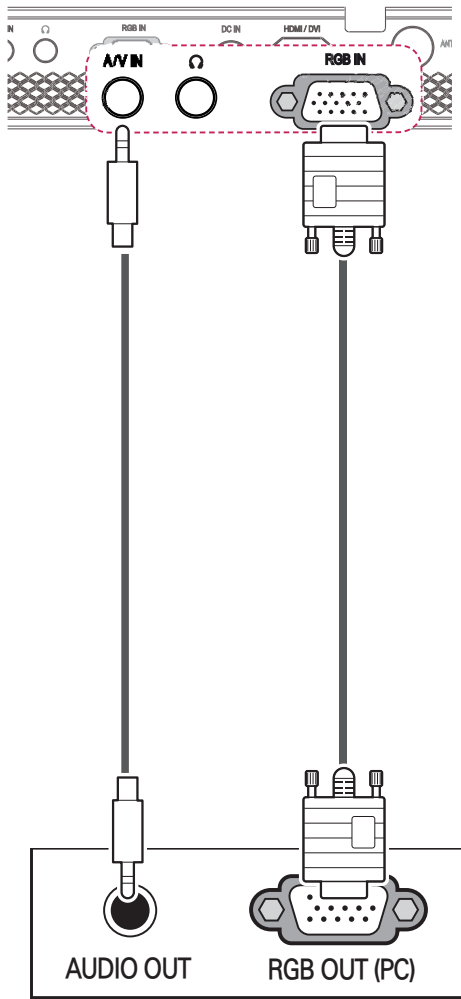

You can connect the audio cable without using a gender as shown in the illustration above.


Connecting to the AV INPUT

Connect the output ports of an external device and the AV INPUT port of the projector. Press the **INPUT** button to select **AV**.

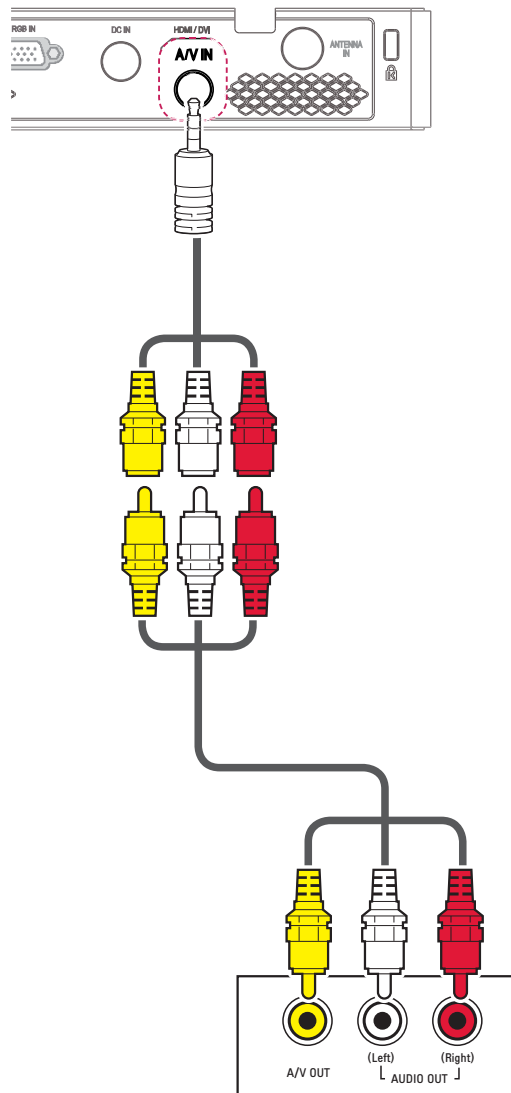


Component Connection

You can enjoy vivid images when you connect an external device with a **RGB IN** port to the component port of the projector. Press the **INPUT** button on the remote control to select **Component**.

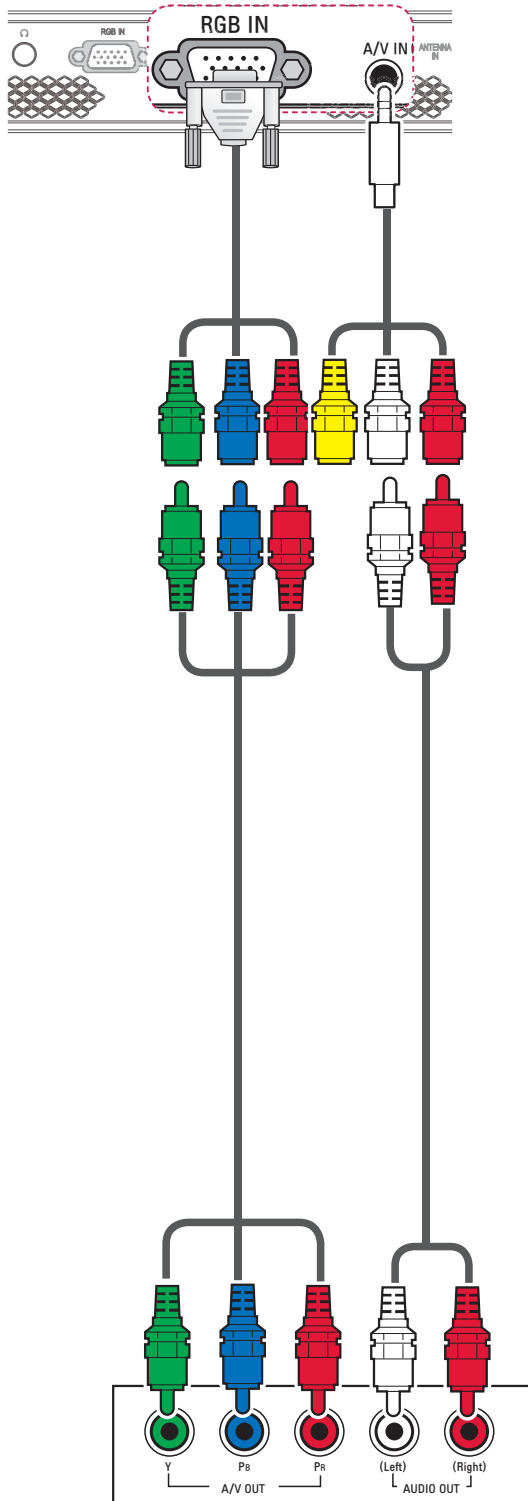

Connecting to Headphones

You can listen to the audio through a headphone.

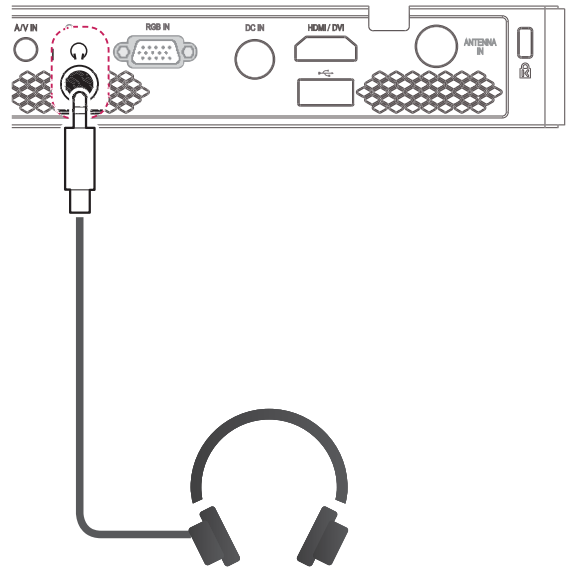

MAINTENANCE

Clean your projector to keep it in optimum condition.

Cleaning the Projector

Cleaning the Lens

If there is any dust or staining on the lens surface, you must clean the lens. Use an air spray or a cleaning cloth to clean the lens.

To remove dust or stains, use an air spray or apply a small amount of cleaning agent onto a swab or soft cloth to lightly rub the lens.

Please be aware that liquid may flow onto the lens if the product is sprayed directly onto the lens.

Cleaning the Projector Case


To clean the projector case, first unplug the power cord.

To remove dust or stains, use only a dry, lint-free, nonabrasive cloth to polish the lens.


Do not use alcohol, benzene, thinners or other chemicals, which may damage the case.

How to Fix the Lens Cap


- 1** Prepare the lens cap and the strap supplied as accessories.
- 2** Insert the end of the strap into the hole at the bottom of the lens section of the projector. Fix the strap to the projector by inserting and pulling the other end of the strap into the other end.

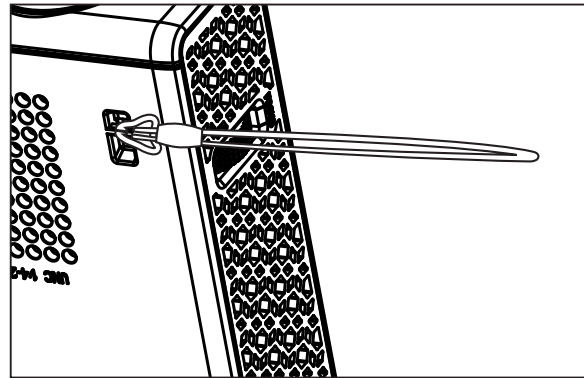

- 3** Insert the other end of strap into the hole of the lens cap, and then pass the lens cap through the strap.

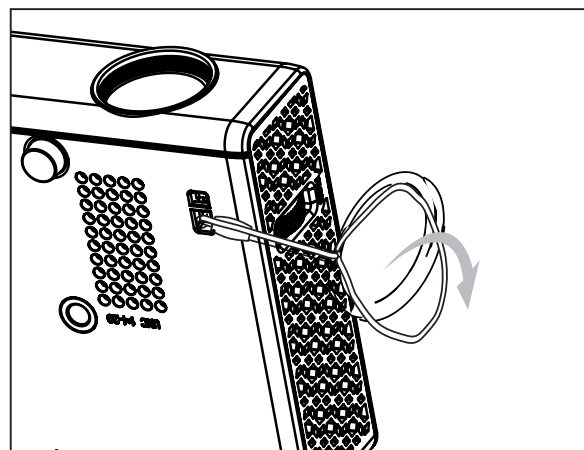

SPECIFICATIONS

MODELS	PB61U (PB61U-JE)	
Resolution (Pixel)	1280 (Horizontal) × 800 (Vertical)	
Aspect ratio	16:10 (Horizontal:Vertical)	
Panel size (mm)	11.623	
Projection distance (Video size)	0.80 m - 3.25 m (63.5 cm - 254.0 cm)	
Ratio of upward projection	100 %	
Working range of the remote control	6 m	
Video input	NTSC M / PAL-B, D, G, H, I / PAL M / PAL N / PAL 60	
AC-DC Adaptor	19.5 V  , 4.62 A	
Audio Output	1W + 1W	
Height (mm)	33.8 (without foot), 38.3 (with foot)	
Width (mm)	158	
Depth (mm)	101.5	
Weight (g)	445	
USB Device	5 V, 0.5 A (Max.)	
Operation environ- ment	Temperature	
	Operation	0°C - 40°C
	Storage	-20°C - 60°C
	Relative Humidity	
	Operation	0 % - 80%
	Storage	0 % - 85%

Supported Monitor Display

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
640*350	31.468	70.09
720*400	31.469	70.08
640*480	31.469	59.94
800*600	37.879	60.31
1024*768	48.363	60.00
1152*864	54.348	60.053
1280*800	49.68	60
1360*768	47.712	60.015
1280*1024	63.981	60.020
1400*1050	65.317	59.979
1680*1050	65.3	60

- If an invalid signal is input into the projector, it will not be displayed properly on the screen or a message such as "No Signal" or "Invalid Mode" will be displayed.
- The projector supports the DDC1/2B type as the Plug & Play function (Auto-recognition of PC monitor).
- PC synchronization signal types supported: Separate type synchronization.
- In PC mode, 1280x800 is recommended for the best picture quality.

Open Source Software Information

To obtain the source code under the GPL, LGPL, MPL and other open source licenses, which is contained in this product, please visit

<http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

If you send an email to opensource@lge.com to request for the software's open source code installed into the projector within three years of purchase, we will send you a CD-ROM. You will only be charged a minimum for packaging and delivery.



The model and serial number of the projector are located on the back or on the side of the projector. Record them below should you ever need service.

MODEL _____

SERIAL _____

■■■ Regulatory Information cont.

:: FCC Compliance Statement

This equipment has been tested and found to comply within the limits of a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment on and off), the user is encouraged to try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's (or your) authority to operate the equipment. Only peripherals (digital input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this monitor. Operation with non-certified peripherals is likely to result in interference to radio and TV reception. Only shielded signal cables may be used with this System.

NOTICE

The regulations are applied only to the products with the ID LABEL indicating specific requirements.

:: Canadian DOC Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations. Cet appareil numérique de la classe B

respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

NOTICE

The regulations are applied only to the products with the ID LABEL indicating specific requirements.

:: CE Conformity Notice (for Europe)

Products with the "CE" Marking comply with the EMC Directive(89/336/EEC) and LOW VOLTAGE Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms :

- EN 55022 ; Radio Frequency Interference
- EN 55024 ; Electromagnetic Immunity
- EN 61000-3-2 ; Power Line Harmonics
- EN 61000-3-3 ; Voltage Fluctuations
- EN 60950-1 ; Product Safety

NOTICE

The regulations are applied only to the products with the ID LABEL indicating specific requirements.