

Important Safety Precautions

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.



Caution

Violation of the instructions may cause serious injury or death.



- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



- Never place your phone in a microwave oven as it will cause the battery to explode.
- Do not dispose of your battery by fire or with hazardous or flammable materials.



 
- Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.



- Store the battery in a place out of reach of children.
- Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.



- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



- When riding in a car, do not leave your phone or set up the hands-free car kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.



- Do not use a hand-held phone while driving.



- Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- Never store your phone in temperatures less than -15°C or greater than 50°C .



Important Safety Precautions



- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.



- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.



- Do not use your phone in high explosive areas as the phone may generate sparks.

- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



- Only use the batteries, antennas, and chargers provided and approved by LG. The warranty will not be applied to products provided by other suppliers.

- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



- Do not hold or let the antenna come in contact with your body during a call.



- 3 emergency calls can be made only within a service area. For emergency call (100, 101, 102), make sure that you are within a service area and that the phone is turned on.

Introduction	3	Call Waiting	19	1.3 Groups	32
Before You Start	4	Mute	19	1.4 Speed Dial	33
Getting Started	8	Redialing Calls	20	1.5 Help	33
Cautions	8	Speed Dialing	20	2. Messages	34
Phone Components	9	Caller ID	20	2.1 Write	35
Phone Overview	10	Entering and Editing		2.2 Inbox	39
Onscreen Icons	11	Information	21	2.3 1234 Services	40
Menu Tree	12	Entering Information Using T9		2.4 Outbox	41
Using the Battery and		Text Input	21	2.5 Voice Mail	42
Charger	14	Examples Using T9 Text Input	22	2.6 Archive	42
Installing and Removing the		Examples Using ABC (Multi-tap)		2.7 Drafts	43
Battery	14	Text input	23	2.8 Templates	43
Charging the Battery	14	Key Mapping For Hindi Entry	24	2.9 Msg Groups	44
Battery Charge Level	15	To Edit in Hindi Mode	25	2.0 Erase Msgs	45
Caring for the Battery	15	Examples Using T9Hin Text Input		2.* Msg Settings	46
Basic Functions	16	for Hindi	25	2.# Help	47
Turning the Phone On and Off	16	Phone Book	26	3. Call History	48
Making a Call	16	Phone Book Features	26	3.1 Missed	48
Receiving Calls	17	Menu Features	30	3.2 Received	48
Signal Strength	17	General Guidelines to Menu		3.3 Dialed	48
About the antenna	17	Access and Settings	30	3.4 In Call Memo	49
Quick Adjust	18	1. Names	30	3.5 Call Duration	49
		1.1 Add Name	30	3.6 Erase History	49
		1.2 Find	32	3.7 Help	49



Contents

4. Profiles	50	7.2 To Do	61	0.5 Help	68
Select Profiles	50	7.3 Memo	61	Functions Used During a Call .69	
Rename Profiles	50	7.4 Reserved Call	61	In Call Memo	69
Customize Profiles	50	7.5 Alarm	62	Mute/Unmute	69
4.7 Help	51	7.6 D-Day Counter	62	Voice Privacy On/Off	69
5. Display	52	7.7 Stopwatch	63	Voice Memo	69
5.1 Language	52	7.8 Calculator	63	Adjusting Speaker Mode On	69
5.2 Service Area	52	7.9 Unit Converter	63	Earpiece/Speaker Volume	69
5.3 Clock	52	7.0 World Clock	64	Accessories	70
5.4 Time & Date	52	7.* Help	64	Frequently Asked Questions .71	
5.5 Wallpaper	52	8. R World	65	Frequently asked questions	71
5.6 Menu Style	53	8.1 R-Menu	65	Before calling for service	75
5.7 Colour Scheme	53	8.2 R-Media	65	Safety Guidelines	77
5.8 Rhythmic Lighting	53	8.3 Reset R-Media	65	TIA Safety Information	77
5.9 Backlight	53	8.4 Games	65	Safety Information	80
5.9 Contrast	54	8.5 Help	65	FDA Consumer Update	83
5.* Help	54	9. Multimedia	66	Service Center List	92
6. Settings	54	9.1 Camera	66		
6.1 My Menu	54	9.2 My Stuff	67		
6.2 Call	55	0. Voice Tools	68		
6.3 Phone	56	0.1 Voice Recorder	68		
6.4 Security	58	0.2 Voice Answering	68		
7. Organiser	60	0.3 Voice Messages	68		
7.1 Scheduler	60	0.4 Voice Dialling	68		

Congratulations on your purchase of the LG-RD6330 cellular phone that has been designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). The CDMA system has greatly enhanced voice clarity and can provide various types of advanced features.

This is an advanced and compact phone which has diverse features as follows :

- Large, easy-to-read, 5 lines display + 1 Icon Line + 1 Menu Line.
- Paging, Messaging, E-mail, Voice mail, and Caller ID.
- 20-key keypad(10 number keys / 2 function keys / 2 Soft keys / 1 clear key / 4 way navigation 1 key / 1 Call key / 1 End key / 1 OK key / 1 Side Camera key).
- Digital Zoom Camera with Flash Light.
- Video recording with Voice.
- Long battery stand-by and talk time.
- 2000 Phonebook entries.
- Choice of 17 ringtones + 5 Animated Ringtones + downloadable ringtones from R World + 5 from MMS.
- Wallpaper : Native 4 (2 still image & 2 animated images), 5 downloadable through R World, and 5 through MMS or Camera.
- Menu-driven interface with prompt for easy operation and configuration.

- Voice privacy inherent with CDMA encoding.
- Any key answer, auto redialing, 99 speed dialing memory locations.
- Optional accessories with greater convenience and enhanced functionality.
- Speaker Phone, In Call Memo.
- Airplane Mode, Rhythmic Lighting.
- SMS, LMS, MMS, Message to E-mail, Group of SMS / E-mail / MMS.
- SMS on Call Reject and Reserved Call.
- Bilingual support (English and Hindi).

Check Accessories

Your mobile phone comes with a AC Adaptor, rechargeable battery, and handstrap. Please verify that these accessories are included.

Important Information

This user's manual provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved change or modification will void your warranty.



Before You Start

Safety Instructions

WARNING! To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Use only LG-approved batteries and travel chargers to avoid the damage to the phone. Using other batteries or chargers voids your warranty and may cause an explosion.

Do not use batteries and travel chargers for the other purposes other than their original purpose of using for the phone.

Always store your phone away from heat. Never store your phone in settings that may expose it to temperatures less than -20°C or greater than 50°C , such as outside during a snowstorm or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Use caution when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby inadequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aids to determine if they are susceptible to interference from your mobile phone. Turn off your phone in a medical facility or at a gas station.

Never place your phone in a microwave oven as it will cause the battery to explode.

IMPORTANT! Please read the TIA Safety Information (on page 78) before using your phone.



FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved accessories. Use of unauthorized accessories or modifications could impair call quality, damage the phone, void your warranty.

Do not use the phone with a damaged accessories. If the damaged accessories come into contact with the skin, a minor burn may result. Contact your local dealer for a replacement of accessories.



Before You Start

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept (1.5cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of (1.5cm) must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain (1.5cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna (optional, if available)

A minimum separation distance of 8 inches (20 cm) must be maintained between the user/ bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

For more information about RF exposure, visit the FCC website at <http://www.fcc.gov/>.



Consumer Information on SAR

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 0.992W/kg, and when worn on the body, as described in this user guide, is 1.24W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJRD6330.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that cause undesired operation.

Cautions for Battery

- Do not disassemble.
- Do not short-circuit.
- Do not expose to high temperature : 60°C (140°F).
- Do not incinerate.

Battery Disposal

- Please dispose of your battery properly.
- Do not dispose of your battery in fire or with hazardous or flammable materials.

Charger Cautions

- Using the wrong battery charger could damage your phone and void your warranty.
- The charger is intended for indoor use only.

Do not expose the battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.



 
Getting Started

Cautions

- Only use the batteries and chargers provided or approved by LG. The warranty will not be applied to products provided by other suppliers.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference in this phone.
- Keep your phone in a safe place when not in use.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- This phone has a built-in antenna. As with any other radio-transmitting device, do not touch the upper part which antenna is mounted while the phone is in use.
- Use only the antenna provided or approved by LG. Unauthorized antennas, modifications or attachments may affect the quality of phone call, damage the phone or result in a violation of FCC regulations.
- Do not use the cellular phone if the antenna is damaged. If the damaged antenna gets in contact with the skin, it may cause a slight burn. Please contact LG Authorized Service Center (ASC) to replace the damaged antenna.
- Do not use the cellular phone in areas where its use is prohibited. (For example: aircrafts).
- Do not expose the cellular phone to high temperature or high humidity conditions.
- Do not expose your cellular phone to water. If this happens, turn it off immediately and remove the battery. If the phone does not work, bring it to an LG Authorized Service Center.
- Avoid shock or impact on the cellular phone.

Phone Components



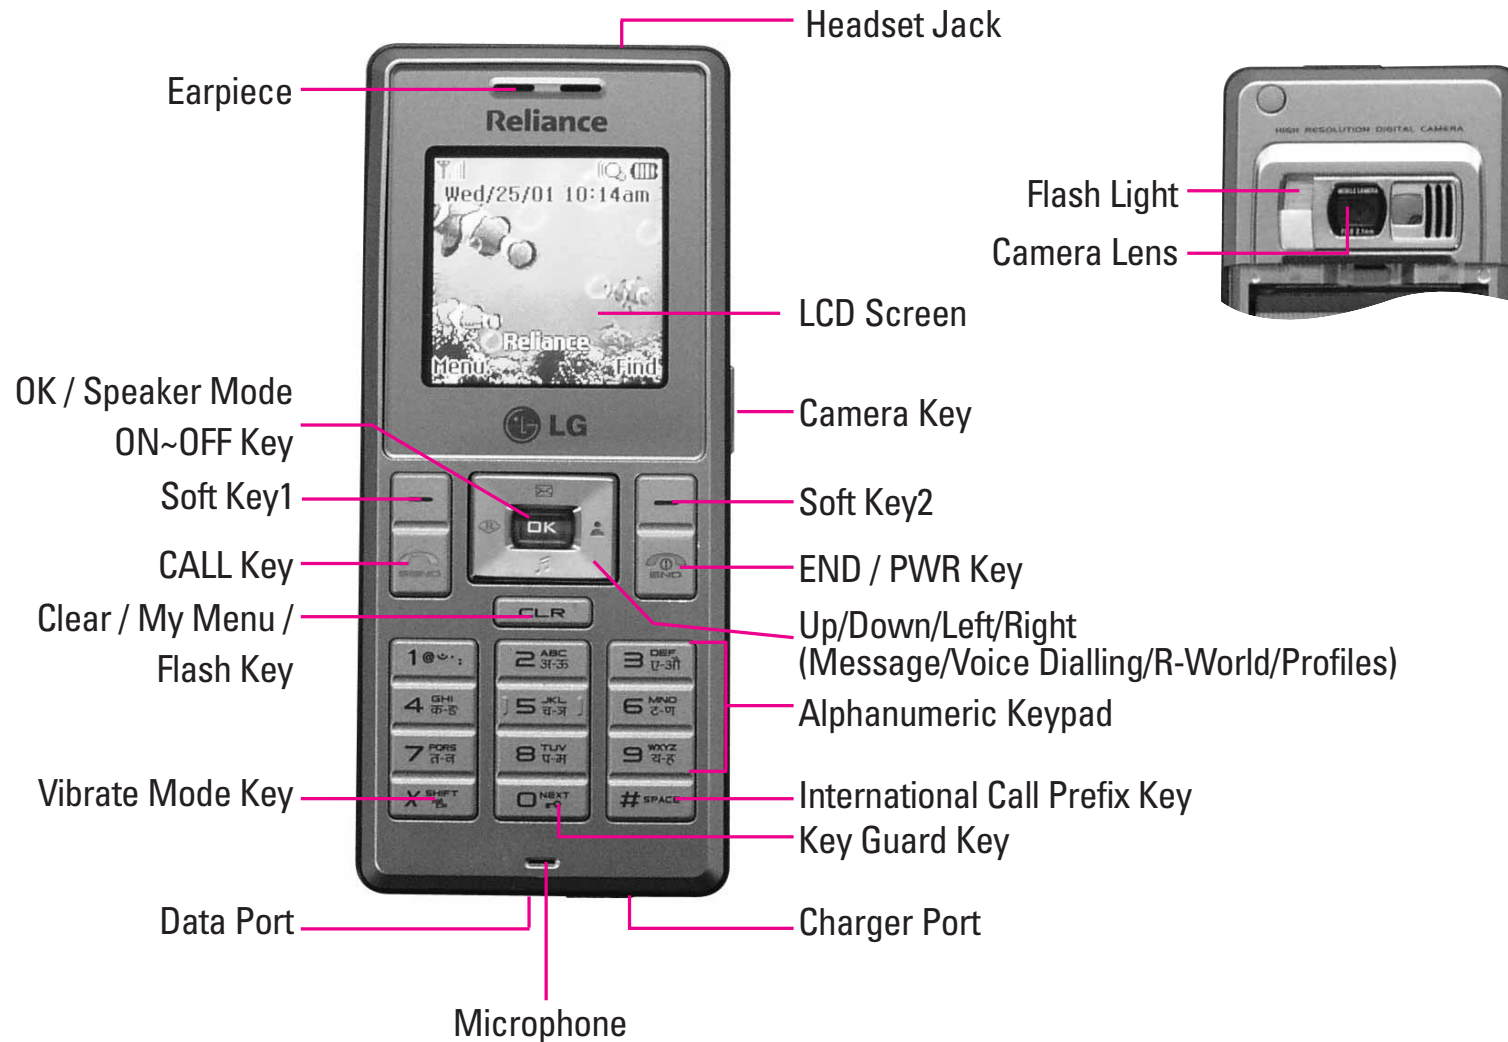






The following shows key components of your mobile phone.














 
Getting Started

Phone Overview

LCD Screen	Displays messages & indicator icons.		
Soft Keys (the names of the functions of these keys appear at the bottom of the screen)	<p>Soft Key 1 </p> <p>Used to display the function setting menu.</p> <p>Soft Key 2 </p> <p>Searches Phone Book, change text input mode, set screen in calculator etc.</p>		
CALL Key	Allows user to place or answer calls.		
END/PWR Key	Used to turn power on/off and to end a call. Using this key, you can return to the main menu display screen. When you press once, when a call is received, the phone stops ringing or vibrating depending on the mode it is in. Press twice to reject the call.		
Alphanumeric Keypad	These keys enable you to enter numbers and characters and choose menu items.		
Up/Down/Left/Right	This Navigation key allows quick access to  Messages and Voice Mail notification messages.  Voice Dialling,  R World,  Profiles.		
		OK / Speaker Mode ON~OFF /	Accepts the highlighted choice when navigating through a menu. When pressed long in idle model, activate speaker mode On/Off.
		Clear Key	Press to delete a single space or character. Press and hold to delete entire words. Press this key once in any menu to go back to the previous menu. In standby mode, press button long to activate flashlight.
		Vibrate Mode Key	In standby mode, set the vibrate mode by pressing and holding the key  about 2 seconds.
		Key Guard Key	In standby mode, set the Key Guard enabled by pressing and holding the key  about 2 seconds.
		Camera Key	Press button shortly to Camera Menu. Press button long to Camera preview.
		International Call Prefix Key	To make an international call, press  key for 2 or 3 seconds. + means international calling code.

Onscreen Icons

The phone screen displays several onscreen icons which appear when the phone is powered on.

Icons	Descriptions
	Displays the strength of the signal received by the phone and current signal strength is indicated by the number of bars displayed on the screen.
	No service The phone is not receiving a system signal.
	In use A call is in progress. * No icon indicates the phone is in standby mode.
	Indicates speaker mode is on.
	Indicates that a Text Message or E-mail Message has been received.
	In Vibrate mode.
	In Alarm mode.
	In Silent mode.
	SMS on Call Reject.
	Indicates battery charge level. When fully charged, battery icon indicates charging by twinkling.



Menu Tree

Press Soft Key 1 **Menu**. Press  to scroll.

Names	Messages	Call History	Profiles	Display
<ol style="list-style-type: none">1. Add Name2. Find3. Groups4. Speed Dial5. Help	<ol style="list-style-type: none">1. Write2. Inbox3. 1234 Services4. Outbox5. Voice Mail6. Archive7. Drafts8. Templates9. Msg Groups0. Erase Msgs*. Msg Settings#. Help	<ol style="list-style-type: none">1. Missed2. Received3. Dialed4. In Call Memo5. Call Duration<ul style="list-style-type: none">• Last Dialed Call• All Dialed Calls• All Calls• Reset Call Duration6. Erase History<ul style="list-style-type: none">• Erase Missed• Erase Received• Erase Dialed7. Help	<ol style="list-style-type: none">1. Vibrate Only2. Silent3. General4. Outdoor5. Headset6. Carkit7. Help	<ol style="list-style-type: none">1. Language<ul style="list-style-type: none">• English• हिन्दी2. Service Area3. Clock<ul style="list-style-type: none">• Off• Small• Big4. Time & Date<ul style="list-style-type: none">• Time• Date5. Wallpaper<ul style="list-style-type: none">• Theme• Profile• Banner6. Menu Style<ul style="list-style-type: none">• Icon• List

Press Soft Key 1 **Menu**. Press  to scroll.

Display	Settings		Organiser	R World
<ul style="list-style-type: none">7. Colour Scheme<ul style="list-style-type: none">• Blue• Green• Violet• Orange8. Rhythmic Lighting<ul style="list-style-type: none">• On• Off9. Backlight<ul style="list-style-type: none">• For 1 min• For 30 secs• For 20 secs• For 10 secs0. Contrast*. Help	<ul style="list-style-type: none">1. My Menu2. Call<ul style="list-style-type: none">• Call Forward• Call Waiting• Any Key Answer• Auto Redial• Voice Privacy• Clear Voice• Call Timer• Call Connect Alert• Edit SMS on Call Reject• Int'l Call Prefix• Help	<ul style="list-style-type: none">3. Phone<ul style="list-style-type: none">• Key Guard• Airplane Mode• Set NAM• Data Settings• Service Alert• Version• Help4. Security<ul style="list-style-type: none">• Lock Mode• Emergency Numbers• Change Lock Code• Clear Memory• Reset Default• Help	<ul style="list-style-type: none">1. Scheduler2. To Do3. Memo4. Reserved Call5. Alarm6. D-Day Counter7. Stopwatch8. Calculator9. Unit Converter0. World Clock*. Help	<ul style="list-style-type: none">1. R-Menu2. R-Media3. Reset R-Media4. Games5. Help <p>Multimedia</p> <ul style="list-style-type: none">1. Camera2. My Stuff <p>Voice Tools</p> <ul style="list-style-type: none">1. Voice Recorder2. Voice Answering3. Voice Messages4. Voice Dialling5. Help

 


Using the Battery and Charger

Charge the battery fully before the initial use of the phone. The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time when using the phone.



Installing and Removing the Battery

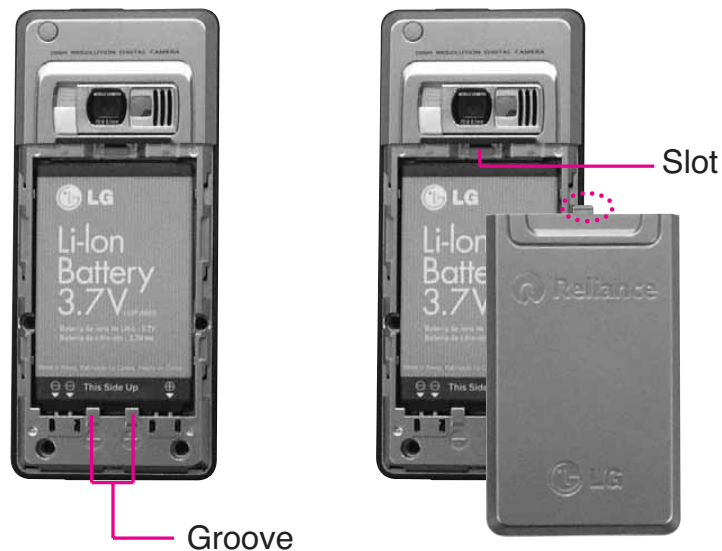- To install, insert the battery into the opening on the back of the phone, and insert the bottom of battery into groove at the bottom of the handset. Gently press down the cover until the latch snaps into place.
- To remove, push the back cover down. Push the tab with one hand and lift the top of the battery to separate.



Charging the Battery

To use the AC adapter charger provided with your phone:

1. Plug the AC adapter into the electrical outlet.
 2. Insert the round end of the adapter into the AC adapter jack on the bottom of the phone. (Make sure the battery is installed.)
- As the phone charges, the battery icon continually displays a progression from empty () to full ().

It takes about three hours to fully recharge a completely rundown battery. When fully charged, battery icon indicates charging by twinkling.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen.



When the battery charge level becomes low, the low battery sensor will alert you in three ways: sounding an audible tone, blinking the battery icon outline, and displaying LOW battery. Recharge soon. If the battery charge level becomes exceedingly low, the phone will automatically switch off and any function in progress will not be saved.

* The colors which are displayed at various stages of charging are different; Blue / Green / Yellow / Red

Caring for the Battery


- 1) If you use the unauthorized battery, it may cause the damage to or explosion of the battery. Therefore, please prohibit using the unauthorized ones.
- 2) You do not need to wait until the battery completely runs down to recharge the battery.

- 3) Use only LG batteries and chargers specific to your model of phone. LG's chargers are designed to maximize battery life.
- 4) Do not disassemble or short-circuit the battery.
- 5) Keep the battery's metal contacts clean.
- 6) Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before it needs replacing.
- 7) Recharge the battery if it has not been used for a long time to maximize battery life.
- 8) Do not expose the battery charger to direct sunlight or use it in areas of high humidity, such as the bathroom.
- 9) Do not leave the battery in hot or cold places as it may deteriorate battery performance.
- 10) Long backlight settings, searching for service, data connectivity, and synchronization all may affect battery life, talk, and standby times.



Turning the Phone On and Off

Turning the Phone On

- 1) Install a charged battery pack or connect the phone to an external power source such as the cigarette lighter charger, car kit or AC Adaptor.
- 2) Hold down the Key  for 2 seconds until the LCD screen flashes.




Note As any other communication device, avoid any unnecessary contact with the antenna while your phone is turned on.


Turning the Phone Off

- 1) Press and hold  until the display turns off.






Making a Call

Every time you make a call, follow these steps:


- 1) Make sure that the phone is turned on. If not, hold down  for 2 seconds.
- 2) Type the phone number and then press  .
 - If the phone is locked, type the lock code (see page 58).
- 3) To end the call press  .

Note In no service area,  appears from the screen. When trying voice call in no service area, “Call couldnot be completed. Please try again” is displayed. It means you are in no service area.

Receiving Calls

- 1) When the phone rings or vibrates (if the Vibrate Mode is enabled), press any key (except ) or  depending on the Call settings.
 - When you press  once, when a call is received, the phone stops ringing or vibrating depending on the mode it is in. Press  twice to disconnect.
- 2) To end an answered call press .
- 3) If you are not in the condition to receive a call, pressing Soft key 2 will send a Preset SMS to Caller. The SMS can be edited using "Edit SMS on Call Reject" function given under Settings.

Signal Strength

If you're inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator () on your phone's display screen.

About the antenna

Your phone has a built-in antenna. As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on.

Contact with the antenna

affects call quality and may cause the phone to operate at a higher power level than needed.

Not touching the antenna during a call optimizes the antenna performance and the talk-time of your phone.

Normal position: Hold the phone as you would any other telephone.






Quick Adjust




Adjusting Vibrate Mode

Use Vibrate Mode in a public place.


- 1) In standby mode, activate Vibrate Mode quickly by pressing the  (for 2 seconds) instead of using the Menu function.
- When Vibrate Mode is set, Key tone does not sound.


Note To cancel Vibrate Mode, press  for 2 seconds.


Select Profiles

- 1) In standby mode, press .
- 2) Select one of four Profiles Vibrate Only, Silent, General and Outdoor with .
- 3) Press  or Soft Key 1 **Select**.


Adjusting Speaker Mode On

During a call, to activate or cancel Speaker quickly, press .




- 1) In standby mode, activate Speaker Mode by pressing the  for 2 seconds.

Note To cancel Speaker Mode On, press  for 2 seconds.



In case speaker is activated on in standby mode, speaker mode is continued even after a call without respect to  adjustment during a call.

Select My Menu

- 1) In standby mode, press  to select My Menu.
- 2) Select the item of choice with  and then press **Select** or  to select the required menu from My Menu under "Settings" menu.
* To add items in My Menu add it from Setting Menu.

Keypad Lock

This function allows you to carry the phone safely without accidentally dialing a number.

When this function is enabled, no call can be made and the access to the Menu will be locked. While the keypad is locked, it is possible to answer a call normally.

To enable the function :

- 1) Press the key  for 2 seconds.



To disable the function :

- 1) Press the key  for 2 seconds.

Note After the call is ended the keypad will get locked after about 2~3 secs.



Call Waiting

Your cellular service may offer a call waiting function. While a call is in progress, you may hear two beeps indicating another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your service provider for information about this function.

- 1) Press  to receive a waiting call.
- 2) Press  again to switch between calls.


Mute

The mute function prevents the other party from hearing your voice, but allows you to hear the other party.

- 1) Press Soft Key 1 Menu and  during a call.
- 2) To cancel Mute, press Soft Key 1 Menu and  again.




Redialing Calls

- 1) Press  twice to redial the last number in Recent Calls.
 - You can also dial any of the last 60 (Missed + Received + Dialed) numbers stored in the Recent Calls. (See the Call History List on page 47~49)

Speed Dialing

Speed dialing is a convenient feature, which allows you to make phone calls quickly and easily. Your phone recalls the phone number from your personal directory, displays it briefly and then dials it. Memory locations 1 through 9 should be used for one-touch dialing for your most frequently used phone numbers.

- 1) Enter memory location number 1 to 9.
- 2) Press .

Dialing Speed Dials from 10 to 99

Press the first digit and then press and hold the key of the last digit.

OR

Enter the first and second digits and press .

Caller ID

Caller ID lets you know who is calling by displaying the number of the person calling when your phone rings. If the caller's name and number are already stored in your phone book, the corresponding name appears with the number.

You should check with your service provider to ensure they offer this feature.


Entering Information Using T9 Text Input



You can edit the Banner, Scheduler, Text Message, Multimedia Message, E-Mail and Phone Book using T9 Text Input.



T9 Text is an easy way to write. In this input method, you only need to press a key once for each letter.


Key Functions


Soft Key 2 : Press to select mode.


- You can select the modes using Soft Key 2:
T9En, Abc, 123, Symbol, Smileys, T9Hin, Hindi
- Shift Key  : Used to change the letter case.


 ~  (Type Text): Press one key per letter to enter text.

 ~  (Type Numbers): In 123 (Numbers) mode, press once to enter numbers.

 (Next): In T9En/Abc/T9Hin/Hindi mode, press to display other matching words.

 (Punctuation): In T9En/Abc mode, press to insert punctuation in a word and complete a sentence.

 (Space): Press to complete a word or insert a space.

 (Clear): Press to delete a single space or character. Press and hold to delete entire words.

Input mode

T9 Text Input provides five modes for entering text, numbers, special characters, and punctuation.

T9En (T9) Mode

Type text using one keystroke per letter. The default is T9 mode.

Abc (Multi-tap) Mode

Use Abc mode to add words to the T9 database.

123 (Numbers) Mode


Type numbers using one keystroke per number.

To change to 123 mode in a text entry field, press Soft Key 2 until 123 mode is displayed.



Entering and Editing Information

Symbol/Smileys Mode

Insert special characters, punctuation, or smileys. You may use any of the special characters. When the cursor is located where you want the special character, switch to Symbol/Smileys mode. If you want to add a smiley, switch to the smileys mode. Press the Navigation Key  to cycle through the desired characters : To select Character, Press the assigned number key.

T9Hin(T9) Mode

Type text using one keystroke per letter in Hindi with the help of T9 Hindi dictionary function.

Hindi(Multi-tap) Mode

Use Hindi mode to input text in Hindi language.

Initial Cap (T9En/Abc)

Only the first letter is capitalized.

Caps Lock (T9EN/ABC)

All subsequent letters are capitalized.
















Lowercase (T9en/abc)

All subsequent letters are lowercase.

Examples Using T9 Text Input


Typing In T9 Mode

When you want to use T9 Mode, check that T9En is shown at the right bottom of the display. To write the desired word, press each key once for one letter. For example, to write "Call the office", follow these steps:






1. Press: Soft Key 2 to change letter case to T9En mode.
2. Press:     .
3. Press:  to complete the word and add a space.
4. Press:        
  .
5. Display: Call the office.

As you can see, the word changes after each key press. Therefore you don't need to pay much attention to what happens on the display before you have keyed in the whole word.

Using the NEXT Key







After you have finished typing a word, if the word displayed is not the word you want, press  to display additional choices.




 

For example, follow these steps :

1. Press:     .
2. Display: **Good**.
3. Press:  .
4. Display: **Home, Gone, Hood.....**

Adding Words to the T9 Database

If a word is not in the T9 database, add it by using **Abc (Multi-tap)** mode text entry. The word is automatically added to the T9 database when you return to T9 mode. For example, follow these steps:


 
 
 
 
1. Press: Soft Key 2 to change letter case to Abc (multi-tap) mode.
2. Press:       .
3. Display: **Hot**.

4. Press: Soft Key 2 to change letter case to T9 mode and then the word lmt will be added to the T9 database.
5. Press:  to erase the existing word.
6. Press:    .
7. Display: **Got**.
8. Press:  .
9. Display: **Hot**.

Examples Using ABC (Multi-tap) Text input

Typing In ABC (Multi-tap) Mode

For example, to type “LG”, follow these steps:

1. Press: Soft Key 2 to change letter case to Abc mode.
2. Press:  to change to ABC Caps Lock mode.
3. Press:     .
4. Display: **LG**.













Entering and Editing Information

Key Mapping For Hindi Entry

In Hindi there are 13 vowels, 44 consonants, 15 matras

Characters in **magenta** are available only in Multitap mode.

The Keys are mapped as follows:

Key	Unshifted and Shifted Characters
	0
	ँ ँ ॊ ् ृ 1
	ा ि िी ु ू ृ अ आ इ ई उ ऊ ऋ 2
	े है ँ ो ौ ँ ए ऐ ँ ओ औ ँ 3
	क ख ग घ ङ 4 क ख ग
	च छ ज झ ञ 5 ज्ञ
	ट ठ ड ढ ण 6 ड ढ
	त थ द ध न 7 न
	प फ ब भ म 8 फ़
	य र ल व श ष स ह 9 क़ र क़ य़

To Edit in Hindi Mode

Press Soft Key 2 and changes to Hindi mode.

Hindi mode Editing








Hindi is a Multi-tap mode.

For example, To type "हिन्दी "

1. Press  2 times.
2. Press  8 times.
3. Press  5 times.
4. Press  4 times.
5. Press  3 times.
6. Press  3 times.

Examples Using T9Hin Text Input for Hindi

For example, To type " भारतीय "

1. Press: Soft Key 2 to change letter case to T9Hin mode.
2. Press:      .
3. Press:  to complete the word and add a space.
4. Display: भारतीय .


Byte Allocation:

In messages : Every character in Hindi takes 3 bytes while it takes 9 bytes for "Ksha" , "Tra" , "Gya".

In all other modules : Every character in Hindi takes 1 byte while "Ksha" , "Tra" , "Gya" takes 3 bytes.

Entering Predicted Words

Sometimes T9 places in the selection list predicted words. Predicted words are words T9 thinks you may want to enter, based on text you've recently entered. Available in both T9 and ABC mode, predicted words are underlined.

If the predicted word you see isn't the one you want, press the Next key to view additional predicted words. When you find the one you want, press the  key to add a space and begin the next word.

If none of the predicted words in the selection list is the word you want, just keep entering letters. T9 will remove the predicted word for you automatically.














Phone Book Features
















You can dynamically store up to 2000 (Number or E-mail id or Memo) entries in your phone book with easy access to your most frequently dialled phone numbers.

Personal Phone Book Memory

The phone has 2000 personal phone book entries and you can dynamically link 4 phone numbers and e-mail and memo with 32 digits capacity for each phone number and 40 for e-mail and 32 for memo.

Saving Numbers in Your Personal Phone Book


1. Press Soft Key 1 **Menu**.
2. Select  **Names**.
3. Select  **Add Name**.
4. Enter the phone numbers.
5. Select the label window using .
6. Select your desired label types, such as Home, Office, Mobile, Other using .
7. Press Soft Key 1 **Select**.
8. Enter a name for the phone number (up to 16 characters). Press Soft Key 1 **Save**.
9. After selecting Home/Office/Mobile/Other using , input phone number with number key.
10. To designate Speed Dial, press Soft Key 2 and select **Speed#** or **Voice Dialling**. Using number key, input Speed Dial or select a desired Speed Dial with . Press  or select Assign by pressing Soft Key 1 **Options**. When select stored speed dial, Replace displays.
11. After selecting E-mail by pressing , to input e-mail address, press Soft Key 2 **Edit**.
12. After inputting E-mail address, press  or select Save by pressing Soft Key 1 **Options**. Select Domains and input e-mail address.
13. After selecting picture by pressing Soft Key 2 **Set**, to set picture, press  or Soft Key 1 **View**.
14. After choose picture, select Select by pressing Soft Key 1.
15. After choosing Animation Ring, select **Set** by pressing Soft Key 2 or .
16. When **Set** is selected, you can see Animation Ring types. With Soft Key 1, **View** the PMD. After

- Viewing PMD, choose a desired PMD using .
17. After selecting No Group by pressing , select a desired group using  or /.
 18. After selecting Memo using , press Soft Key 2 **Edit**. After inputting memo, press Soft Key 1 **Save**.
 19. After selecting Ring Tone by pressing , select a desired Ring Tones using  or /.
 20. After selecting Message Alert tone by pressing , select a desired Message Alert tone using  or /.
 21. Press  or Soft Key 1 **Save**.

Find Name

To search for a phone number by name.


1. Press the Soft Key 2 **Find**.
2. Names saved in the Phone Book will appear in the order of alphabet regardless of type of character, capital or small.

To view the phone number you want, press Soft Key 1 **Options** and select **View** after scrolling to the phone number you want using .

Find Number

To find phone numbers you have stored in the Phone Book.


1. Press the Soft Key 2 **Find**.
2. Press the Soft Key 1 **Options** and select Find Number.
3. The display prompts you to enter the number on the display screen.

Note When Find Number is displayed by pressing Soft Key 2 **Find**, pressing  goes to the Find Name with options.




Find Group

To search for a phone number by group.

1. Press the Soft Key 2 **Find**.
2. Press the Soft Key 1 **Options** and select **Find Group**.
3. Select group using .

Changing Information Stored in the Phone Book

1. Press the Soft Key 2 **Find**.
2. You may view the phone number saved in the Phone book in the real time by entering the search string.

You may view the Phone Book List if you press Soft Key 1 **Options** and select View after scrolling to the name you want using .

To delete or edit the Entry, press the Soft Key 1 **Options**.


Select Edit after scrolling the data using .

A submenu will appear on the screen with the options:

- | | |
|-----------------------|---|
| Edit | Edits information in that memory location. |
| Send MyContact | Sends information stored in Memory Location like Home, Office, Mobile, etc. |
| Reserved Call | Allows you to make a call to designated number at reserved time. |
| Erase | Erase all existing information in that memory location. |

Note By selecting Send MyContact option in the phone book, user can send contact information (Name, 4 Phone Numbers, E-mail ID and Memo).
Message length is limited to 160 characters for English and 46 characters for Hindi.
Extra characters above 160/46 are sent to LMS.
When selected Send MyContact, you can send picture saved in phonebook through MMS.



Making a call from Your Phone Book

You can place a call from any memory location either by using speed dialing or by entering the phone number and pressing .

One-Touch Speed Dialing: This feature enables you to store your nine most frequently used numbers in your Speed Dials memory locations (1 through 9)

- ▶ For locations 1 through 9, you can use one-touch dialing by pressing and holding the corresponding key to the memory location to be dialled.

OR

- ▶ Press a digit, then press .
- ▶ Press  in idle mode and Voice Dialling mode is connected. You can make a call through voice commands.

Two-Touch Speed Dialing: This feature enables you to dial numbers in your Speed Dials through two keys (for locations 10 to 99.)


- 1) Press the first digit.
- 2) Press and hold the key of the second digit.

OR


- 1) Press the first and second digit, then press .

Note To use speed dialing, you first need to assign a number from the phone book to a speed dial location.

Dialing from a Memory List






- 1) Select Find, press the scroll keys to go to the memory location you want.
- 2) Press .


Dialing from a Memory Location


- ▶ While viewing a memory location, press  to call.



General Guidelines to Menu Access and Settings

1. Press Soft Key 1 **Menu**. Ten menu items will appear on the display screen.
2. Press  to go through the list of menu features.
3. Press the corresponding number to the menu item that you want to select. Then the sub-menu list will appear on the screen.
4. Press the appropriate key to select the sub-menu you want to access.
5. Select preferred settings, using the . Press  to go one step backward while accessing menu or selecting settings.
6. Press  to save the settings or  to cancel without saving.

Note  key is equivalent to pressing Soft Key 1, in the case of Soft Key 1 is associated with “**Select**” option.

 key is equivalent to pressing Soft Key + selecting first option of popup menu in the case of Soft Key 1 is associated with “**Options**” option.


 


1. Names




Personal Phone Book Memory




















The phone has 2000 personal phone book entries and you can dynamically link 4 phone numbers and e-mail and memo with 32 digit capacity for each phone number and 40 for e-mail and 32 for memo.

1.1 Add Name

You can save phone numbers, mobile numbers and so on, up to 2000 entries.

1. Press Soft Key 1 **Menu**.
2. Select  **Names**.
3. Select  **Add Name**.
4. Enter the phone numbers.
5. Select the label window using .
6. Select your desired label types, such as Home, Office, Mobile, Other using .
7. Press Soft Key 1 **Select**.
8. Enter a name for the phone number (up to 16



- characters). Press Soft Key 1 **Save**.
9. After selecting Home/Office/Mobile/Other using , input phone number with number key.
 10. To designate Speed Dial, press Soft key2. Select **Speed#** or **Voice Dialling** and save the settings. Using number key, input Speed Dial or select a desired Speed Dial with . Press  or select Assign by pressing Soft Key 1 **Options**. When select stored speed dial, Replace displays.


When selected **Voice Dialling**, you can hear "Name Please" and record voice name and record voice name again. After voice name is saved in phonebook and voice dialling icon appears. You can check Voice Dialling in Menu > 0.Voice Tools > 4.Voice Dialling.
 11. After selecting E-mail by pressing , to input e-mail address, press Soft Key 2 **Edit**.
 12. After inputting e-mail address, press  or select Save by pressing Soft Key 1 **Options**. Select Domains and input e-mail address.
 13. After selecting picture by pressing Soft Key 2 **Set**, to set picture, press  or Soft Key 1 **View**.
 14. After choose picture, select Select by pressing Soft Key 1.
 15. After selecting PMD by pressing Soft Key 2 **Set**, to set PMD, choice using .
 16. After choosing picture by Soft Key 1 **View**, select Select by pressing Soft Key 1 or .
 17. After selecting No Group by pressing , select a desired group using  or /.
 18. After selecting Memo using , press Soft Key 2 **Edit**. After inputting memo, press Soft Key 1 **Save**.
 19. After selecting Ring Tone by pressing , select a desired Ring Tones using  or /.
 20. After selecting Message Alert tone by pressing , select a desired alert tone using  or /.
 21. Press  or Soft Key 1 **Save**.



1.2 Find




To find phone numbers you have stored in the Phone Book.

1. Press Soft Key 1 **Menu**.
2. Select  **Names**.
3. Select  **Find**.
4. Phone numbers saved in the Phone Book will appear in the order of alphabet regardless of type of character, capital or small.

To view the phone number you want, press Soft Key 1 **Options** and select View after scrolling to the phone number you want using .

1.3 Groups

This is a function for changing Group Name and setting Ring tones by Group.

1. Press Soft Key 1 **Menu**.
2. Select  **Names**.
3. Select  **Groups**.
4. Select your desired Group using .
5. Press Soft Key 1 **Options**.

View Members : View the names of members saved in the Group.

Set Ring Tone : Set the Group Ring Tone.



Set Msg Tone : Set the Group Msg Tone.

Press Soft Key 2 **Edit** : Edit the Group Name.

Note The title No Group cannot be changed.

1.4 Speed Dial

Speed Dial allows you to make a call faster by just pressing a corresponding number.

1. Press Soft Key 1 **Menu**.
2. Select  **Names**.
3. Select  **Speed Dial**.
4. To register, use Soft Key 1 Options and select Assign to find information you want, then press Soft Key 1 **Options** and select **Assign**.

Note To delete, select press Soft Key 2 **Remove** and select Yes.

Press Soft Key 1 **Options** and select **Remove All** to delete all stored speed dials. Select **Replace** to change the number assigned to a particular location.


Speed dial is from 01 to 99.


1.5 Help

You can get more information about this menu.



2. Messages

Text message, page, E-mail and Voice Mailbox become available as soon as the power is on. You can access the above types of messages using the Message Key .

In addition, you can make a call to the call back number by pressing  during a message check.

The phone can store up to 31 messages (1 voice message: 30 text messages) with 160 characters per message. Every letter in Hindi is taken as 3 characters (However, ksha, tra, gya accounts for 9 characters each.) So, an SMS message in Hindi can have upto 46 characters only.

Users may read and edit messages, saved in the Outbox during transmission and send them.

However you should check whether your service provider provides the above features.

Phone can store SMS messages each in Inbox(30), Outbox(15 sent/ 15 unsent), Archive(30), Drafts(30) and Templates(10 fixed / 20 editable).

OR Total 120 messages and 1 Voice Mail.

SMS supports 160 characters(160 in English/ about 46 in Hindi). E-Mail subject supports 20 and message

supports 140 characters.

E-Mail is consist of subject + E-Mail address + E-Mail message. E-Mail subject supports up to 20 and E-Mail address supports up to 40.


So, message characters is calculated by 160 - subject character - E-Mail address character.

MMS (Multimedia Message Service)

The Phone can store upto 5 MMS / 15 notifications in MMS inbox, 4 Sent / 4 Unsent in MMS Outbox and 5 in MMS Drafts. 11 fixed / 4 editable Templates available for fast MMS writing.

LG-RD6330 MMS supports upto 1000 characters in English / 330 characters in Hindi. 1 Picture and 1 Sound can be attached in each MMS upto 100 Kbytes size.

The information that is stored in the message is determined by phone mode and service capability.

You can check types of messages by pressing the Message Key .

2.1 Write

LMS(Long Message Service) allows you to send a message upto 460 characters at a time. Before sending LMS message, total number of sms packets formed are intimated to the user and confirmation is taken to send.

Maximum 3 packets for English and 4 for Hindi messages can be sent. Each LMS packet is received as individual message. Every LMS message shows the packet sequence number in the message for ex: In case of 3 packets, <1/3> <2/3> <3/3>.

2.1.1 Write Text

Text messages and page messages are all available.

Text messages: Transmits text.

Page messages: Only numbers without text messages.

Press **Send** in **Options** to send the message.

To send a message enter the destination mobile number in the Send To screen.

There are four optional menus of Send, Templates, Save and Add Sign.


1. Press Soft Key 1 **Menu**,  or .

2. Select  **Write**.

3. Select  **Write Text**.

4. After entering a message to be sent by selecting Send, press Soft Key 1 **Options**.

- ▶ **Send** Use to send the message.
- ▶ **Templates** Select a Templates message.
- ▶ **Save** Save to Drafts message.
- ▶ **Add Sign** You can add signature.

5. After entering the phone number where the message is to be sent, enter the next recipients address by pressing . You can add up to 10 recipients. Press Soft Key 1 **Options**.

- ▶ **Send** Use to send the message.
- ▶ **Last** Select a recent sent number.
- ▶ **SMS Groups** Select SMS Group.
- ▶ **Names** Select a phonebook entry.

6. If you select Send, it notifies you whether the message was sent successfully.

- ▶ **Send** Use to send the message.
- ▶ **Priority** Allows you to give the priority to message. Normal or Urgent.



Menu Features





- ▶ **Delivery Ack** This function allows you to know whether the message is successfully transmitted to other party or not when the transmitted message is received in other party's phone. If you want to activate this function, set to On.
- ▶ **Deferred** Allows you to delay sending the message until the programmed time frame. Immediate/After 30 Minutes/After 1 Hour/After 2 Hours/After 12 Hours/After 1 Day/After 2 Days
- ▶ **Validity** Indicates the validity of message delivery to the Short Message Center (SMC) without being transmitted to the destination address for certain periods of time. Those messages will be deleted within the programmed time frame. Validity time frames are as follows: Default, 30

Minutes, 1 Hour, 2 Hours, 12 Hours, 1 Day and 2 Days.

- ▶ **Save Sent Msg** You can save this message in Outbox.

2.1.2 Write E-mail

Send SMS to E-mail ID.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Write**.
3. Select  **Write E-mail**.

There are four optional menus of Send, Last , E-mail Groups and Names.

- ▶ **Send** Use to send the message.
- ▶ **Last** Select a recent sent E-mail.
- ▶ **E-mail Groups** Select a E-mail Group.
- ▶ **Names** Select a phonebook entry.

4. After entering the e-mail address where the message is to be sent, enter the next recipients address by pressing . You can add up to 10 recipients. Press Soft Key 1 **Options**.

▶ **Send** Use to send the message.

▶ **Domain** Select a domain.

5. After entering a Subject, press Soft Key 1 **Next**.

6. After entering a message to be sent by selecting Send, press Soft Key 1 **Options**.

▶ **Send** Use to send the message.

▶ **Templates** Select a Templates message.

▶ **Save** Save to Drafts message.

▶ **Priority** Allows you to give the priority to message. Normal or Urgent.

▶ **Delivery Ack** This function allows you to know whether the message is successfully transmitted to other party or not when the transmitted message is received in other party's phone. If you want to activate this function, set to On.

▶ **Deferred**

Allows you to delay sending the message until the programmed time frame.

Immediate/After 30 Minutes/
After 1 Hour/After 2

Hours/After 12 Hours/After 1
Day/After 2 Days

▶ **Validity**

Indicates the validity of message delivery to the Short Message Center (SMC)

without being transmitted to the destination address for certain periods of time. Those

messages will be deleted within the programmed time frame. Validity time frames are

as follows: Default, 30 Minutes, 1 Hour, 2 Hours, 12 Hours, 1 Day and 2 Days.

▶ **Save Sent Msg**

You can save this message in Outbox.

▶ **Add Sign**

You can add signature.







2.1.3 Write Multimedia Msg

- You can insert image and sound with your message.
- Send to E-mail id and Phone Number.
- Each message supports upto 1000 characters, 1 image and 1 sound.

Menu


There are eight optional menus of Send, Insert Image, Insert Sound, Templates, Preview, Save, Remove Image, Remove Sound.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Write**.
3. Select  **Write Multimedia Msg**.
4. After entering a message to be sent by selecting Send, press Soft Key 1 **Options**.
 - ▶ **Send** Use to send the message.
 - ▶ **Insert Image** Insert image to editing multimedia msg.
 - ▶ **Insert Sound** Insert sound to editing multimedia msg.
 - ▶ **Templates** Select a Templates message.
 - ▶ **Preview** Preview edited multimedia

msg.

- ▶ **Save** Save to Drafts message.
- ▶ **Remove Image** Remove image from editing multimedia msg.
- ▶ **Remove Sound** Remove sound from editing multimedia msg.

There are four optional menus of Last, Name, Number, MMS Groups.

- ▶ **Last** Select a recent sent Number/ E-mail.
 - ▶ **Name** Select a phonebook entry.
 - ▶ **Number** Select a phonebook number entry.
 - ▶ **MMS Groups** Select a MMS group.
5. After entering the e-mail or phone number where the message is to be sent, enter the next recipients address by pressing . You can add up to 10 recipients. Press Soft Key 1 **Options**.
 - ▶ **Domains** Select a domain.
 - ▶ **Send** Use to send the message.
 - ▶ **Save Sent Msg** Select option whether save or not save sent msg.
 6. If you select Send, it notifies you whether the message was sent successfully.

2.2 Inbox

Received Text messages, Page, E-mail messages, Delivery ack, lists may be searched, and the contents may be viewed. Received messages are sorted in an order of urgent messages, unread messages and read messages. Up to 30 message can be stored.

The phone can store up to Max. 20 MMS(for example, 15 notification messages and 5 MMS).

To view the list of the received messages.

2.2.1 SMS Inbox

1. Press Soft Key 1 **Menu**,  or .



2. Select  **Inbox**.

3. Select  **SMS Inbox**.

- ▶ Messages are saved in order of Unread/Read.
For example, if a New message is read it goes into Read messages.

 : Unread SMS  : Unread E-mail

 : Read SMS  : Read E-mail

4. After selecting the desired message with  ;
press  or Soft Key 1 **Options** and
select View.

- ▶ **View** You can read the selected message.
- ▶ **Erase** Delete the selected message from the SMS Inbox.

5. After viewing the message press Soft Key 1 **Options** or Soft Key 2 **Reply**.

- ▶ **Reply** This function allows you to reply to this message.
- ▶ **Erase** Deletes the selected message from the SMS Inbox.
- ▶ **Forward** Forwards a received message to others. After recipients are entered, the messages can be forwarded.
- ▶ **MovetoArchive** Moves the selected message from the SMS Inbox to the Archive.
- ▶ **Save Address** Stores the sender's number or E-mail address or Other numbers included in the received message into your phone book. When received number information is displayed, the user can store the number in the corresponding number list in the phone book.



Menu Features

- ▶ **Reserved Call** Set the reserved call.
- ▶ **Reply w copy** Allows you to reply the received message and phone numbers.
- ▶ **Add to Template** Allows you to save the received message by adding to template.

2.2.2 MMS Inbox

1. Press Soft Key 1 **Menu**, or .
2. Select **Inbox**.
3. Select **MMS Inbox**.
4. After selecting the desired message with ; press or Soft Key 1 **Options** and select **View**.
 - ▶ **View** You can read the selected message.
 - ▶ **Erase** Delete the selected message from the MMS Inbox.
 or **Connect** or **Reply** with Soft Key 2.
 - ▶ **Connect** Connect the selected message.
 - ▶ **Reply** This function allows you to reply to this message.
5. After viewing the message press Soft Key 1 **Connect** to download message.

2.3 1234 Services

Exciting SMS-based Infotainment services such as News, Jokes, Horoscope, etc. are available to Reliance subscribers. Using the SMS 1234 Services, the user will be able to access interesting information on common subjects through SMS. User needs to select the Menu corresponding to the Service Keyword.

1. Press Soft Key 1 **Menu**, or .
2. Select, **1234 Services**.
3. Place the cursor on the item that you wants to be served, and then press Soft key 1 **Select**. You may select from eleven items. (1.News 2. Cricket 3.Joke of The Day 4.Thought of The Day 5.Contest 6. Beauty Tips 7.Health 8.Horoscope 9.Bill Info 0.Unbilled Info *.Help) You may select the keyword that you want to send in subsequent-Menu.

Example

For example, to receive the "sports news" you can operate the phone as follow;








1. Press Menu +2(Messages) + 3(1234 Services) + 1(News) + 6(NEWS SPORTS)

Display: Sending... To: 1234

2.4 Outbox

Up to 15 sent messages and 15 unsent messages can be stored in the Outbox. Max. 4 sent messages and 4 unsent MMS can be saved in the Outbox. Users may view lists and contents of sent messages or unsent messages in this menu. To save a message in Outbox “Save Sent Messages” should be selected in “Msg Settings”.

2.4.1 SMS Outbox

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Outbox**.
3. Select  **SMS Outbox**.
4. Select  **Sent** or  **Unsent**.
5. After selecting the desired message with ; press Soft Key 1 **Options** and select View/ Erase. Press Soft Key 2 Forward or Resend.

▶ **View** Shows the message currently saved. The view menu has two sub-menus Forward and Erase.

▶ **Erase** Delete a selected message in the SMS Outbox.








▶ **Forward**

You can modify the message you've got. Then follow the process for Write (see page 35).

▶ **Resend**

Use to resend the message.

2.4.2 MMS Outbox

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Outbox**.
3. Select  **MMS Outbox**.
4. Select  **Sent** or  **Unsent**.
5. After selecting the desired message with ; press Soft Key 1 **Options** and select **View/Erase/Forward**. Press Soft Key 2 **Resend**.

▶ **View**

Shows the message currently saved. The view menu has two sub-menus Forward and Erase.

▶ **Erase**

Delete a selected message in the MMS Outbox.

▶ **Forward**

You can modify the message you've got. Then follow the process for Write (see page 35).



2.5 Voice Mail

Allows you to view the new voice messages recorded in the voice mail box. Once you exceed the storage limit, the old messages will be overwritten. When you have a new voice message your phone will alert you.





1. Press Soft Key 1 **Menu**,  or .
2. Select  **Voice Mail**.

- ▶ To delete information press Soft Key 2 **Erase**.
To listen information press Soft Key 1 **Listen**.

While you are answering a call, if you have a new message, the sender's number will be displayed on the screen.


2.6 Archive

Archive stores what is preferred to save among messages received. (30 messages)
And Archive is not available in MMS.






1. Press Soft Key 1 **Menu**,  or .
2. Select  **Archive**.
3. After selecting the desired message with , press Soft Key 1 **Options** and select View/ Erase. Press Soft Key 2 **Forward**.

- ▶ **View** There are three sub-menus Erase, Reply and Save Address.
- ▶ **Erase** Delete a selected message.
- ▶ **Forward** You can modify the message you've got. Then follow the process for Write (see page 35).





2.7 Drafts


The text message is saved in Drafts. A total of upto 30 messages can be saved in Drafts. And 5 MMS can be saved in Drafts. When a user is interrupted by a call while composing a message, messages automatically get saved. If you press  during writing messages, message is automatically saved to Drafts.

2.7.1 SMS Drafts

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Drafts**.
3. Select  **SMS Drafts**.
4. After selecting the desired message with , press Soft Key 1 **View** or press Soft Key 2 **Erase**.
 - ▶ **View** You can view the selected message.
 - ▶ **Erase** Delete a selected message.

2.7.2 MMS Drafts







1. Press Soft Key 1 **Menu**,  or .
2. Select  **Drafts**.
3. Select  **MMS Drafts**.

4. After selecting the desired message with , press Soft Key 1 **View** or press Soft Key 2 **Erase**.
 - ▶ **View** You can view the selected message.
 - ▶ **Erase** Delete a selected message.

2.8 Templates

2.8.1 SMS Templates

There are 10 predefined phrases included in the Templates. You can add up 20 templates more. A total of 30 templates can be saved.







1. Press Soft Key 1 **Menu**,  or .
2. Select  **Templates**.
3. Select  **SMS Templates**.
4. After selecting the desired message with  and press  or Soft Key 1 **View**. Then follow the process for Write (see page 35).

Press Soft Key 2 **Add** to add new template message to the Templates list.









2.8.2 MMS Templates

There are 11 predefined phrases included in the Templates. You can add up 4 templates more. A total of 15 templates can be saved.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Templates**.
3. Select  **MMS Templates**.
4. After selecting the desired message with  and press  or Soft Key 1 **View**. Then follow the process for Write (see page 35).
Press Soft Key 2 **Add** to add new template message to the Templates list.

2.9 Msg Groups

Msg Groups consists of 5 SMS/E-mail/MMS Groups with each group consisting of maximum 10 members. After selecting group and moving input display, send a message to the phone number of the selected group member.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Msg Groups**.
3. Select  **SMS Groups**,  **E-mail Groups** or  **MMS Groups**.

4. After selecting the desired group with , press Soft Key 1 **Options**.

- ▶ **View** Display the selected group's member list. You may add new member.
- ▶ **Rename** Rename the group's title.
- ▶ **Clear Group** Clear the selected group's member.
- ▶ **Clear All** Clear all 5 group's member.


Note To register contact entry in E-mail group, saving e-mail address to contact entry is necessary.


Note Selecting option in View's group member list.

- ▶ **Send** Moves to message input screen and send a message to the selected group member.
- ▶ **Send to All** Moves to message input screen and send a message to the selected group.
- ▶ **Replace** Replace the selected group member.
- ▶ **Remove Member** Remove the selected group member.

2.0 Erase Msgs

2.0.1 Erase SMS Msgs

Text messages, page messages and E-mail are deleted when you select ,  Erase Msgs from the Message Menu screen.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Erase Msgs**.
3. Select  **Erase SMS Msgs**.

2.0.1.1 Inbox

Allows you to delete Read messages, All messages, Delivery Ack messages.

2.0.1.2 Outbox

Allows you to delete Sent messages, Unsent messages, All messages.

2.0.1.3 Archive

Allows you to delete all messages saved in the Archive.



2.0.1.4 Drafts





Allows you to delete all messages saved in the Drafts.

2.0.1.5 All Messages

Allows you to erase all messages stored in the Inbox, Outbox and Drafts items folder.

2.0.2 Erase MMS Msgs

Multimedia messages are deleted when you select ,  Erase Msgs from the Message Menu screen.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Erase Msgs**.
3. Select  **Erase MMS Msgs**.

2.0.2.1 Inbox

Allows you to delete Read messages, Read Noti messages, All messages.

2.0.2.2 Outbox

Allows you to delete all messages saved in the Outbox.

2.0.2.3 Drafts

Allows you to delete all messages saved in the Drafts.



2.0.2.4 All MMS




Allows you to erase all messages stored in the Inbox, Outbox and Drafts items folder.

2.* Msg Settings

Text/E-mail Msg Settings, Multimedia Msg Settings, General Settings, Sent Counter can be configured.

2.*.1 Text/E-mail Msg Settings

Priority, Delivery Ack, Deferred Delivery, Validity Period, Save Sent Messages, Archive Lock, Auto Scroll can be configured for receiving new messages.

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Msg Settings**.
3. Select  **Text/E-mail Msg Settings**.

2.*.1.1 Priority

When sending a message, select Normal or Urgent.

2.*.1.2 Delivery Ack

Allows you to select delivery acknowledgement with your messages.

2.*.1.3 Deferred Delivery

Allows you to delay sending the message until the programmed time frame.

2.*.1.4 Validity Period

Indicates the validity of message delivery to the Short Message Center (SMC) without being transmitted to the destination address for certain periods of time.

2.*.1.5 Save Sent Messages

With this feature on, messages are automatically saved in the Outbox when transmitted.

2.*.1.6 Archive Lock

When access Archive, enter your lock code.

2.*.1.7 Auto Scroll

Allows you to scroll through menus at 2-second intervals.

2.*.2 Multimedia Msg Settings

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Msg Settings**.
3. Select  **Multimedia Msg Settings**.

2.*.2.1 Delivery Ack

Allows you to select delivery acknowledgement with your messages.





2.*.2.2 Save Sent Msg

With this feature on, messages are automatically saved in the Outbox when transmitted.

2.*.2.3 Auto Receiving MMS

Allows you to receive MMS automatically.

2.*.3 General Settings

1. Press Soft Key 1 **Menu**,  or .
2. Select  **Msg Settings**.
3. Select  **General Settings**.

2.*.3.1 Auto Delete Inbox

With this feature on, old messages are automatically deleted when you exceed storage limit.

2.*.3.2 Signature

With this feature custom, add signature to editor when editing is start.

2.*.4 Sent Counter

Allows you to view count of sent Text message, E-mail and MMS.

2.# Help


You can get more information about this menu.




3. Call History

Allows you to view the 60 most recent phone calls. Once you exceed the (total) 60-number storage limit, the oldest Call History record is overwritten. These calls are divided into 4 types of calls.

Note You can view Call History in two ways.




- The  key in idle mode, upto 60 most recent calls including Missed, Received and Dialed are displayed.
- In Call History menu, total 60 numbers are listed under Missed, Dialed, and Received.
- Maximum 20 numbers can be saved in In Call Memo.

Making a Call from Call History

1. From the Call History menu, select Missed, Received, Dialed or In Call Memo and press Soft Key 1 **Select**.
2. Place a call by selecting the desired entry and press  to connect.




3.1 Missed

Allows you to view list of all Missed Calls. Maximum 60 (Missed + Received + Dialed) numbers are possible.

1. Press Soft Key 1 **Menu**, , .
2. Press Soft Key 1 **Options**. View/Edit Number/Save/Reserved Call/Erase appears on the screen. Press Soft Key 2 **Message** to send a message.
3. You may place a call by pressing .

3.2 Received

Allows you to view list of all Received Calls. Maximum 60 (Missed + Received + Dialed) numbers are possible.


1. Press Soft Key 1 **Menu**, , .
2. Press Soft Key 1 **Options**. View/Edit Number/Save/Reserved Call/Erase appears on the screen. Press Soft Key 2 **Message** to send a message.
3. You may place a call by pressing .

3.3 Dialed

Allows you to view list of all Dialed Calls. Maximum 60 (Missed + Received + Dialed) numbers are possible.

1. Press Soft Key 1 **Menu**, , .

2. Press Soft Key 1 **Options**. View/Edit Number/Save/Reserved Call/Erase appears on the screen. Press Soft Key 2 **Message** to send a message.

3. You may place a call by pressing .

3.4 In Call Memo

Save the phone numbers taken while talking and can view the list of numbers present in In Call Memo.

Maximum 20 numbers are possible.

1. Press Soft Key 1 **Menu**, , .

2. Press Soft Key 1 **Options**. View/Save/Erase/ Erase All appears on the screen. Press Soft Key 2 **Message** to send a message.

3. You may place a call by pressing .

3.5 Call Duration

1. Press Soft Key 1 **Menu**, , .

3.5.1. Last Dialed Call

It will store information about the last dialed call and will also display the last dialed number.

3.5.2. All Dialed Calls

Displays total number of dialed calls and total dialed calls duration.

3.5.3. All Calls

Keeps a running count of the time spent making all calls, dialed and received.

3.5.4. Reset Call Duration

To reset the counter, select Yes using  and then Soft Key 1 **Select**.

3.6 Erase History

1. Press Soft Key 1 **Menu**, , .

2. Select the item which it will erase with .

3. Press Soft Key 1 **Select**.

4. Select Yes using  and then Soft Key 1 **Select**.

3.7 Help

You can get more information about this menu.



4. Profiles

Profiles let you set your phone's sound settings to your environment. Each profile contains settings for your phone's Ring Type, Ring Tone, Ringer Volume, Earpiece Volume, Key Volume and Message Alert. Just pick the profile that suits your current environment: Vibrate Only, Silent, General or Outdoor. You can modify the settings in each profile, and (except for the Vibrate Only Profile) you can rename them (except for the Vibrate Only, Headset and Carkit Profiles).

Select Profiles

1. Press Soft Key 1 **Menu**, or quickly press .
2. Select one of four Profiles Vibrate Only, Silent, General and Outdoor with .
3. Press or Soft Key 1 **Options** and then select **Set**.

Note Headset or Carkit Profile is automatically set when headset or carkit is installed in the mobile phone.

Note In standby mode, press long to select Vibrate Only Profile. Press long once again to return to the previous Profile.

Rename Profiles

1. Press Soft Key 1 **Menu**, .
2. Select Silent, General or Outdoor by using .
3. Then press Soft Key 1 **Options** and then select **Rename**.
4. Enter a name for the Profiles (up to 13 characters).
5. Then press Soft Key 1 **Save** or .

Note You cannot rename the Vibrate Only, Headset and Carkit profiles.


Customize Profiles

You can customize any of the Profiles except Vibrate Only.

1. Press Soft Key 1 **Menu**, .
2. Scroll to the profile you wish to customize and press Soft Key 2 **Edit**.

3. Use the scroll keys to display each of the options in the following table:

Ring Type	Select the ring tone style (Ring, Vibrate, Vibrate & Ring, Ring After Vibrate, Ascending, One Beep, Silent, Light).
Ring Tone	Select the ring tone for incoming calls from 17 rings embedded 5 PMD Sounds(Animated Ringtones). Downloadable Ringtones from R World and MMS.
Ringer Volume	Set the volume of your ring tone. - Mute, 1~7 level
Earpiece Volume	Set the volume during a call. - 1~7 level
Key Volume	Set the volume of your keypad tones (or turn them off). - Mute, 1~7 level
Message Alert	Select the tone for received messages (Alert Type, Alert Tone, Message Reminder and Alert Volume).
Auto Answer	Select the auto answer style (Off, After 5 secs, After 10 secs).

- Note**
- When Ring Type is Vibrate, Silent and Light, Ringer Volume can not be adjustable. 'Change Ring type' is displayed. After changing current type to Ring Type, adjust Ringer Volume.
 - When press Soft Key 2 **Edit** in Headset and CarKit Profiles, Auto Answer is displayed additionally. Select Off, After 5 secs or After 10 secs by using .
 - You cannot customize the Vibrate Only Profiles.
 - You are alerted in 3 ways when you received a new message.
By displaying a message on the screen.
By sounding a beep, ring or vibration.
By flashing of Backlight just once.
 - During a Call if the message comes Two Beeps will be heard irrespective of the Message Alert type selection.

4.7 Help

You can get more information about this menu.




5. Display

Lets you personalise your phone's display by selecting different graphics.

5.1 Language

Set the Bilingual feature according to your preference, choose between English and हिन्दी .

1. Press Soft Key 1 **Menu**, , .
2. Set English/ हिन्दी with  and then press Soft Key 1 **Select**.


5.2 Service Area

This menu displays the current SDCA/calling area the user is in.

1. Press Soft Key 1 **Menu**, , .





5.3 Clock

Allows you to select a clock on your mobile phone display.

1. Press Soft Key 1 **Menu**, , .
2. Select Off, Small or Big and press Soft Key 1 **Select**.

5.4 Time & Date

Allows you to choose the kind of Time and Date to be displayed on the LCD screen.

1. Press Soft Key 1 **Menu**, , .
2. Select the item of your choice by using , then press Soft key 1 **Select** or .

5.5 Wallpaper

Enter the string of characters you want to be displayed. You can set up the screen displayed on the LCD screen in the standby mode.

1. Press Soft Key 1 **Menu**, , .

5.5.1 Theme

You can set up the screen displayed on the LCD screen in the standby mode.

- ▶ Used to choose the theme and then press Soft Key 1 **Save**. (Off / Tea / Snow / Fish / Rainbowtown / My Media Img1~5 / Slide Show / R World Img1~5)

5.5.2 Profile

Current profile is saved as wallpaper.

- ▶ Select Show or Hide and press Soft Key 1 **Select**.

5.5.3 Banner

Enter the string of characters you want to be displayed. (up to 13 characters.)

- ▶ Enter a Banner name and then press Soft Key 1 **Save**




5.6 Menu Style

Allows you to select the menu style.

1. Press Soft Key 1 **Menu**,  , .
2. Select Icon or List with  and then press Soft Key 1 **Select**.


5.7 Colour Scheme

Allows you to select the colour scheme.

1. Press Soft Key 1 **Menu**,  , .
2. Select Blue, Green, Violet, Orange with  and then press Soft Key 1 **Select**.



5.8 Rhythmic Lighting

Choose the setting of the rhythmic lighting for an incoming call.

1. Press Soft Key 1 **Menu**,  , .
2. Select On or Off and press Soft Key 1 **Select**.

5.9 Backlight

Choose the settings of the LCD and keypad backlight.




1. Press Soft Key 1 **Menu**,  , .
2. Choose an options and press Soft Key 1 **Select**.
 - ▶ **For 1 min** Backlight will be On for 1 min, after that goes in dimming for 20 secs and then completely turns off till the user presses any key to make Backlight On.
 - ▶ **For 30 secs** Backlight will be On for 30 secs , after that goes in dimming for 20 secs and then completely turns off till the user presses any key to make Backlight On.
 - ▶ **For 20 secs** Backlight will be On for 20 secs, after that goes in dimming for 20 secs and then completely turns off till the user presses any key to make Backlight On.



- ▶ **For 10 secs** Backlight will be On for 10 sec, after that goes in dimming for 20 secs and then completely turns off till the user presses any key to make Backlight On.

5.9 Contrast

Using the Navigation Key, select the contrast setting using the scale of lightest to darkest.

1. Press Soft Key 1 **Menu**, , .
2. Adjust the contrast with .
3. Then press Soft Key 1 **Save** to save the contrast setting.





5.* Help



You can get more information about this menu.




6. Settings

6.1 My Menu

Lets you access to favorite menu quickly by customising my menu. Max 10 items can be stored in My Menu.

1. Press Soft Key 1 **Menu**, , .
2. Select the menu of your choice by using , then press Soft Key 1 **Select**.
3. Select the Menu to add to My Menu with , then press Soft Key 1 **Add**.

Note Select the item of choice with  from the Stand-by screen, then press Soft Key 1 or  to select the required menu from My Menu.

Note Select the item to delete with  from the Stand-by screen, then press Soft Key 2 **Remove**, select Yes with , then press Soft Key 1 **Select** or  to delete from My Menu.

6.2 Call

1. Press Soft Key 1 **Menu**, , .

6.2.1 Call Forward

Call forward lets you forward all your incoming calls to another number or Voice Mail connection.

- ▶ Immediate / When Busy / No Reply/Not Reachable / Disable All

6.2.2 Call Waiting

While a call is in progress, you may hear two beeps indicating another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call.

- ▶ Select **Enable, Disable** or **Edit Feature Code** and press Soft key 1 **Select**.

Note Contact your service provider for more information on Call Forward and Call Waiting.

6.2.3 Any Key Answer

When your phone rings, press any key to answer except .

- ▶ Select On or Off and press Soft Key 1 **Select**.

6.2.4 Auto Redial

Set the length of time the phone waits before automatically redialing a number when the attempted call fails.

- ▶ Off / Every 60 secs / Every 30 secs / Every 10 secs

6.2.5 Voice Privacy

Set the voice privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy. Check with your service provider for availability of the enhanced voice privacy mode.

- ▶ Select Standard or Enhanced and press Soft Key 1 **Select**.

6.2.6 Clear Voice

Enable/Disable the function of Audio AGC(Auto Gain Control) system.

This feature provides a better audio experience by enabling the Audio AGC system to control the dynamic range and volume of the sending and receiving voice across different levels of speaker and environments.

- ▶ Select On or Off and press Soft Key 1 **Select**.



6.2.7 Call Timer

You can set your phone to display the running elapsed time while a call is active.

- ▶ Select Enable or Disable and press Soft Key 1 **Select**.

6.2.8 Call Connect Alert

This is a function to alert you that the call connection has been established.

- ▶ Select On or Off and press Soft Key 1 **Select**.

6.2.9 Edit SMS on Call Reject

You can edit your message which can be sent during Call Reject.

6.2.0 Int'l Call Prefix

Allows you to set international call prefix.

- ▶ After inputting international call prefix, press Softkey 1 **Save**.

6.2.* Help

You can get more information about this menu.


6.3 Phone

1. Press Soft Key 1 **Menu**, , .

6.3.1 Key Guard

Allows you to protect the keypad of your phone from accidental dialing. When this function is enabled, no call can be made and the access to Menu is locked. When the keypad is locked, it is possible to answer a call normally.

- ▶ Select Enable or Disable and press Soft Key 1 **Select**.

To enable quickly : Press the key  for 2 seconds.

To disable quickly : Repeat the procedure.

Note After the call is ended the keypad will get locked after about 2~3 secs.

6.3.2 Airplane Mode

When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. You may use the phone's other features, such as Game, Scheduler, Memo, etc. When Airplane Mode is

enabled, a message "Airplane Mode" is displayed on the screen.

- ▶ Select On or Off and press Soft Key 1 **Select**.

6.3.3 Set NAM

Select the phone's NAM (Number Assignment Module).

Note This option may not be available on your network. Do not change setting and use NAM 1 only.

6.3.4 Data Settings

6.3.4.1 Data In

In Data setting, you can use your phone as a wireless modem to avail high speed data services such as browsing Internet and other dial-up networking functions. The wireless phone supports a maximum data rate of 153.6 kbps on the network side. The speed of your connection depends upon network congestion, signal strength, and other variables.

- ▶ **On** : This setting enables a subscriber to receive data calls.
- ▶ **Off**

Note You need to purchase the Data Kit in order to be able to use the phone as modem. The data kit

includes a suitable cable that has USB interface for connecting the phone to the PC. Please contact your service provider for further information.

6.3.4.2 Data Baud

This setting enables the subscriber terminal to set the baud rate.

- ▶ Data Baud set 19,200/115,200/230,400/USB
By default it is set to USB. If you change this setting on the phone ensure that the PC baud rates are changed to match accordingly.

Note The wireless phone will work with the PC / PDA properly only when the serial port settings on both the PC match with the baud rates set on the phone.

6.3.5 Service Alert

Alerts you when service changes.

- ▶ Select On or Off and press Soft Key 1 **Select**.

6.3.6 Version

View the S/W and PRL version.

6.3.7 Help




You can get more information about this menu.



6.4 Security

6.4.1 Lock Mode




Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode, until the lock code is entered. This will allow you to receive phone calls and still make emergency calls. The lock code/password on your phone is 0000 by default. If you need to modify the lock code, you may modify it using the new lock code within the security set menu.

1. Press Soft Key 1 **Menu**, , , .
2. Enter the four-digit Lock Code.
3. Select an options and press Soft Key 1 **Select**.
 - ▶ **Off** means that the phone is never locked. When locked, you can receive incoming calls or make only emergency calls.
 - ▶ **Now** means that the phone is locked immediately.
 - ▶ **On Power Up** means the phone is locked when it is turned on.

6.4.2 Emergency Numbers




You can call these numbers 100, 101, 102 even when the phone is locked or restricted.

To enter 3 emergency numbers.

1. Press Soft Key 1 **Menu**, , , .
2. Enter the four-digit Lock Code.
3. Press Soft Key 1 **Edit**.
4. Enter an Emergency number.
5. Press Soft Key 1 **Save**.






6.4.3 Change Lock Code

New Lock Code allows you to enter a new four-digit lock code number.

1. Press Soft Key 1 **Menu**, , , .
2. Enter the four-digit Lock Code.
3. Enter the New Lock Code(four-digit).
4. Re-enter Lock Code.
5. For confirmation, it will ask you to enter the New Lock Code again.





6.4.4 Clear Memory

Deletes all information saved in Phone Book.

1. Press Soft Key 1 **Menu**, , , .
2. Enter the four-digit Lock Code.
3. Select  **All Names** or  **All Data**.
4. After clearing memory, phone is reset to defaults.

6.4.5 Reset Default

You can reset some of the menu settings to their original values. When select Reset phone, all settings become reset.

1. Press Soft Key 1 **Menu**, , , .
2. Enter the four-digit Lock Code.
3. Using the  then select **Yes**.
4. Press Soft Key 1 **Select**.

6.4.6 Help

You can get more information about this menu.



7. Organiser

7.1 Scheduler






 

 
 
Scheduler Functions

Scheduler keeps your agenda convenient and easy to access. Simply store your appointments and your phone alerts you with a reminder of your appointment. You can also take advantage of the wake-up feature. Up to 160, can be saved.



Note While transmitting SMS or during a call at the preset time, it does not ring. After exiting, it will ring the reminder.

Note Handset time is taken from Network time settings.

How to use various keys for navigation in Calendar

-  Moves cursor to the left.
-  Moves cursor to the right.
-  Moves to the previous week.
-  Moves to the next week.
-  Moves to the previous year.
-  Moves to the next year.
-  Moves to today.
-  Moves to the previous month.
-  Moves to the next month.

Allows you to input your schedule or erase or view. If you input the time and memo, an alarm rings at the set time.

1. Press Soft Key 1 **Menu**,  , .
2. Select the date using your keypad, then press Soft Key 1 **Options** and select View, Erase To Date, Erase All, Go To Date, or Go To Today or press Soft Key 2 **Add**.

7.2 To Do



Up to 40, can be saved.

1. Press Soft Key 1 **Menu**, , .
2. Press Soft Key 1 **Add** to write a new event.

Note In case there is saved To Do, the function of View, Erase, and Erase All is available with Soft Key 1 Options. Add is available with Soft Key 2.

7.3 Memo

Up to 40, can be saved.

1. Press Soft Key 1 **Menu**, , .
2. Press Soft Key 1 **Add** to write a new memo.
3. After entering characters (For entering characters, refer to pages 21~25) press Soft Key 1 **Save**.

When Memo is not empty

Following Options are available :

View , Erase, Erase All and Add.

View : To display selected memo.

View screen gives 2 options Edit and Erase.

Using Edit user can modify an existing memo.

Erase: Enable user to delete a selected memo.

Erase All: Enable user to delete all the stored memo.








Add : Enable user to add Memo.

When a memo is saved current date is also saved.

In case there is no memo, **Add** is displayed in Soft Key 2.





7.4 Reserved Call

This option allows you to create reserved call with calling time and date. Phone will alert you on set time and date to dial. Upto 5 can be saved.

1. Press Soft Key 1 **Menu**, , .
2. Select Reserved Call 1~5.
3. Enter the phone number, then press . (You must enter any phone number)
4. You can change the mode using . (Off / Once / Daily / Mon-Fri / Mon-Sat / Weekends / Every Sun)
5. After moving with , enter the date with number key.
6. After moving with , enter the time with number key. (Select am/pm with )








Menu Features

7. After moving with , choose melody with .
8. After moving with , enter memo upto 32 characters, then press .

7.5 Alarm

To change an event alarm time.

1. Press Soft Key 1 **Menu**, , .
2. Select Alarm1, Alarm2 or Alarm3.
3. You can change the alarm mode using .
(Off / Once / Daily / Mon-Fri / Mon-Sat / Weekends / Every Sun)
4. Use  to set alarm time, select Ringer and input contents, then press Soft Key 1 **Save**.
 - ▶ am/pm may be selected using .
 - ▶ Ringer volume is controlled according to settings done in Profiles.

Note Alarm is disabled when the mobile is switched off. Any alarms that have passed the set limits will automatically expire.

You can set **Quick Alarm** (10 min later/30 min later/ 1 hour/ 3 hours/Off).

When Quick Alarm is set, the scheduled alarm time is displayed.




How to Set Snooze

Snooze defaults when it is set to alarm.

When no key is input when alarm sounds, Snooze function is set automatically one minute later, and the alarm sounds again ten minutes after set alarm time.

7.6 D-Day Counter

Up to 5, can be saved.

1. Press Soft Key 1 **Menu**, , .
2. Press Soft Key 1 **Add** to write a new event.
3. After entering characters (For entering characters, refer to pages 21~25) press Soft Key 1 **Save**.
4. Use  to set d-day then press Soft Key 1 **Save**.

Note In case there is saved D-Day, the function of View, Show, and Erase is available with Soft Key 1 Options.

7.7 Stopwatch

Stopwatch is available.

1. Press Soft Key 1 **Menu**, , .

7.8 Calculator

Calculate simple mathematical computations.

(Can get result upto second decimal place.)

1. Press Soft Key 1 **Menu**, , .

2. Press  and  in order.

3. Select (multiplication) using  keys.

4. Press ,  in order.

5. Select using Soft Key 1 **Answer**.

You will see the result of the calculation 250.

Note Calculations can be made with up to 50 characters at one time (e.g., 73+01-03 would be 8 characters).


7.9 Unit Converter

Unit Converter provides various conversion unit like Currency, Length, Surface, Mass, Volume, Temperature and Velocity.

1. Press Soft Key 1 **Menu**, , .

7.9.1 Currency





Before you can make currency conversions, you need to choose a base Currency (usually the domestic currency) and add exchange rates.

1. Set the domestic currency and Press  to add exchange rates.
2. Then press Soft Key 1 **Rate** and press Soft Key 1 **Save** to set the currency rates.

Note The base currency determines the conversion rates of the other currency. After you have inserted all the needed exchange rates, you can make currency conversion.






Length, Surface, Mass, Volume, Temperature and Velocity

1. Enter the Input for Source unit and it displays the result in destination unit.
2. Press  or  to select different units of measurement.
3. Press  or  to switch between source and destination units.

7.0 World Clock

Is useful if you need to make a call to another country, and you are not sure about the time difference.

1. Press Soft Key 1 **Menu**, , .
2. Select the city you desire by using .

For faster selection,  can be used to jump 7 cities on the map.

Note With Soft Key 2 **DST**, set the daylight saving time.

7.* Help

You can get more information about this menu.

8. R World

For quick access, press left navigation key in idle mode.



8.1 R-Menu

This connects you to R World Data Services like Ringtones, Cricket, Dating, Contests, News, Astro, City & TV Guides, and more provided by your service provider. 20 downloadable 32 Poly Ringtones through R World.

1. Press Soft Key 1 **Menu**, , .

or

Press  key for 2 seconds.

2. R World logo will be displayed followed by R World Data Services Menu.
3. Scroll through the menu using  and launch any Data Service by clicking on Soft Key 1 **Select**.
4. To exit from Data Services any time, hold down  for a few seconds.

Note All Data Services may not be available to every subscriber. Please contact your service provider for further information.

8.2 R-Media

You can download VOD through R World and play VOD files in downloaded.





1. Press Soft Key 1 **Menu**, , .

8.3 Reset R-Media

You can reset R-Media. When activated, downloaded VOD is reset.

1. Press Soft Key 1 **Menu**, , .

8.4 Games

1. Press Soft Key 1 **Menu**, , .
2. Select **Cricket / Hoops / Tenpin Terror** with  then press .

8.5 Help

You can get more information about this menu.



9. Multimedia

9.1 Camera

Your multimedia phone comes with an easy-to-use built-in camera, which allows you to instantly take, view, and share pictures and videos with your friends and family. Flash option is available with Camera.


Quick Access to Camera Feature

Pressing the Camera Key () from standby mode is a hot key to Camera.

9.1.1 Take Photo

Taking a picture with your camera. Up to 60, can be saved.

1. Press Soft Key 1 **Menu**, , , .

Note Pressing the Camera Key () for 4 seconds from standby mode is a hot key to Take Photo.




2. Set the brightness , zoom , and press Soft Key 1 **Options** to change other settings.

▶ Select the option(s) to customize.

1. **Take** : capture a still image
2. **Resolution** : 640x480 / 320x240 / 160x120 / 128x128
3. **Flash** : Off/On
4. **Self Timer** : Off / 3 seconds / 5 seconds / 10 seconds / 15 seconds
5. **Black/White** : Normal / Black/White
6. **Fun Frames** : Frame 1~15, No Frame
(Allows you to take photos with a pre-made foreground.)
7. **Multishot** : 3/6/9shots available (except for 640x480 mode, 3 shots are possible)

Note Use to adjust the zoom function (x1, x2 and x4 at Low resolution(160x120, 128x128), x1 and x2 at Med resolution(320x240), and only x1 at High resolution (640x480)).

Note When the Flash is On, take a photo within 30 cm.

3. Take a picture by pressing  or .
4. Press . The picture is stored in the Gallery.
 - Press Soft Key 2 **Reject** or retake the photo.
 - Press Soft Key 1 **Options** to select **Save** or **Send**.

Note "XX/XX" on the upper right corner of the LCD screen shows how many photos you have taken and the maximum number you can take.

9.1.2 Take Movie

Capture 15 seconds 128x128 sized movie video with sound. With pictures and videos, max. 5 Mbyte is available.

1. Press Soft Key 1 **Menu**, , , .

9.1.3 My Photo Gallery

Look around your photo saved in the phone.

1. Press Soft Key 1 **Menu**, , , .

9.1.4 My Movie Gallery

Sees the recorded movies.

1. Press Soft Key 1 **Menu**, , , .

9.1.5 Slide Show

1. Press Soft Key 1 **Menu**, , , .

9.1.6 Settings

1. Press Soft Key 1 **Menu**, , , .

9.1.6.1 Auto Saving

1. Press Soft Key 1 **Menu**, , , , .

2. Select **On** or **Off** with  then press .

9.1.6.2 Shutter Sound

Choose a sound in 4.

1. Press Soft Key 1 **Menu**, , , , .
2. Select **Sound 1~4** or **Off** with  then press .

9.1.6 Help

You can get more information about this menu.

9.2 My Stuff




9.2.1 Images

Shows you the images of default, downloaded and camera photos.

1. Press Soft Key 1 **Menu**, , , .

9.2.2 Videos

Shows the videos which you captured or downloaded from R-World.

1. Press Soft Key 1 **Menu**, , , .
2. Select Camera Videos or Downloaded and check it.

9.2.3 Sounds

Show you the list of sounds (Default, Downloaded, Voices), and you can play them.

1. Press Soft Key 1 **Menu**, , , .

9.2.4 Help

You can get more information about this menu.







0. Voice Tools

Allows you to use Voice Recorder, Voice Answering, Voice Messages and Voice Dialling.



0.1 Voice Recorder

Allows you to record voice or check voice records list.

1. Press Soft key 1 **Menu**, , .
2. Select **Record New / Voice Records List** with  then press .

0.2 Voice Answering

Allows you to set voice answering during

1. Press Soft key 1 **Menu**, , .
2. Select **On/Off / Greeting Message / Settings** with  then press .

0.3 Voice Messages

Allows you to listen to, and erase short verbal reminders.

1. Press Soft key 1 **Menu**, , .

0.4 Voice Dialling

Allows you to view the list of numbers programmed with voice dialling or add a Voice Dial command to a number stored in your Contacts.

1. Press Soft key 1 **Menu**, , .



0.5 Help

You can get more information about this menu.


In Call Memo

(During a Call : Menu )

It allows you to note a phone number that the other person provides you during a call. The number will be stored in the Call History. Upto 32 number may be saved.

1. Press the Soft Key 1  during the call.
2. Press  **In Call Memo**.
3. Type the phone number and press the Soft Key 1 **Save**.

Mute/Unmute

(During a Call : Menu )

This function locks the microphone of your telephone and prevent sounds from your end being heard by the person at the other end.

● To enable Mute Function:

1. Press the Soft Key 1  during the call.
2. Press  **Mute**.

● To disable Mute Function:

1. Repeat the procedure.

Voice Privacy On/Off

(During a Call : Menu )


Set the privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy. check with your service provider for availability of the enhanced voice privacy mode.


Voice Memo

(During a Call : Menu )

It allows you to record voice memo.

Adjusting Speaker Mode On

(During a Call : Press )

During a call, to activate or cancel speaker quickly, press  .

Earpiece/Speaker Volume

Adjust the Earpiece/Speaker Volume with  during the call.



Accessories

There are a variety of accessories available for your mobile phone. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Travel Adaptor

This adaptor allows you to charge the battery. It supports AC 100~240 Volt, 50~60 Hz outlets.



Cigarette Lighter Charger

You can operate the phone and trickle charge the phone's battery from your vehicle by using the cigarette lighter charger, model CLC-61W.



Hands-Free Car Kit (Portable)

The hands-free car kit, model PHF-61W, enables you to attach the phone to the car providing you with hands-free operation.



Headset

Connects to your phone, allowing hands-free operation. Includes earpiece, microphone, and integrated call answer /termination button.



USB Convert Cable

Connect your phone to your PC. (LG-USBC1000-X)

USB Data Cable(With Charging)

Connect your phone to your PC. (LG-USB8100-X)

USB Data Cable(Without Charging)

Connect your phone to your PC. (LG-USB5200)

Frequently asked questions

Q : How do I view the list of Dialed calls, Received calls and Missed calls?

A : Press .

Q : How do I clear Call History ?

A : Press  → Press Soft Key 1 **Options** → Select **Erase** or **Erase All** → Press  → Select **Yes** → Press .





Q : How do I view all numbers stored in memory?

A : Press Soft Key 2 **Find**.

Q : How many events can I add to the schedule ?

A : Total of 160 events.

Q : How do I clear past schedule stored in Scheduler?

A : Press Soft Key 1 **Menu** →  **Organiser** →  **Scheduler** → Press Soft Key 1 **Options** →  **Erase To Date** → Select **One week/One month/One day** → Press .





Q : How many Speed Dial numbers can I store?

A : Total of 99 numbers.

Q : How do I send a text message ?

A : Press  →  **Write** →  **Write Text**.

Q : How do I clear the call timer (reset the time used monthly)?

A : Press Soft Key 1 **Menu** →  **Call History** →  **Call Duration** →  **Reset Call Duration** → Select **Yes** → Press .

Q : How do I find out my lock code ?

A : The Lock Code/Password on your phone is **0000** by default.

Q : How many groups are there ?

A : In Groups, there are No Group/Business/Personal/Family/Friends/Workgroup/VIP/School/Club. You can edit Group title except the title of **No Group** cannot be edited. To change Group Name,
1. Select group by pressing Soft Key 1



Frequently Asked Questions

Menu →  Names →  Groups
and .

2. Press Soft Key 2 **Edit**.

Q : Is Group SMS possible ?

A : You can send a message to 10 numbers simultaneously. Each number should be selected or entered individually. There are 5 SMS Groups where you can add 10 members in each group.

Q : Is Group E-mail possible ?

A : You can send a message to 10 address simultaneously. Each address should be selected or entered individually. There are 5 E-mail Groups where you can add 10 members in each group.


Q : How to send SMS/E-mail sending to multiple recipients ?


A : After writing message, select SMS/E-mail Groups in Options. You can add up to 10 recipients.

Q: How to send MMS sending?

A: After writing multimedia message, select Insert Image/Insert Sound in Options. The phone can store up to 5 MMS / 15 notifications in MMS.


Q : What is the significance of key ?



A :  key is equivalent to pressing Soft Key 1, in the case of Soft Key 1 is associated with “**Select**” option.

 key is equivalent to pressing Soft Key + selecting first option of popup menu, in the case of Soft Key 1 is associated with “**Options**” option.

 key for turning the speaker on/off during the call properly.

Q : What is the difference between activating speaker during a call and activating it in Idle mode?

A : If user want to use speaker ON as default always, user can enable the speaker mode by pressing LONG  key.

If user want to use speaker temporarily, he can enable it by pressing  key. User can toggle speaker by pressing the same  key.

Q : What is Airplane Mode?







A : This 'Airplane Mode' function will turn off radio frequency(RF) of mobile, so user can not make the following Incoming/Outgoing Calls, Sending/Receiving SMS and Data Communication etc.

Q : How to send LMS ?

A : With this new feature LMS message, user can compose a message upto 460 characters. To send an LMS message, compose a message in the message editor with more than 160 characters. Title of the message editor is changed to "Write LMS(XXX)" displaying the total number of characters left. On the selection of send option, total number of segments formed are displayed and the confirmation is

taken from the user. User can continue or can cancel. Each segment is sent as a simple SMS message over the network. Messages are stored in the Outbox on the return of acknowledgement. Each LMS packet is received as individual message. Every LMS message shows the packet sequence number in the message body for ex: In case of 3 packets, <1/3>, <2/3>, <3/3>.

Q : Is Group MMS possible?

A : To send MMS to MMS Groups, press Soft Key 1 **Menu** →  **Messages** →  **Msg Groups** →  **MMS Groups** with  . After pressing Soft Key 2 **Send**, compose messages and press  . In **Options**, select **Send** with  .



Frequently Asked Questions

Q : How to send SMS to E-mail and E-mail to SMS ?

A : To send an SMS To E-mail: Go to **Messages → Write → Write E-mail**. On selection of this option, an E-mail editor is displayed where user need to enter the E-mail IDs. Maximum 10 E-mail IDs can be entered each of maximum 40 characters. On the selection of Send option in this screen, Subject editor is enabled. This screen allows user to edit upto 20 characters. On the selection of Next option in the subject editor, message editor is enabled, here user can compose a message upto X characters (X=480-Subject size-Max E-mail ID size in the list - packet formation characters). E-mail message can be an LMS message. To receive an E-mail as SMS: An E-mail can be sent to the mobile device RD6330 as SMS. An received email on the



device can have subject and the email body.

Received email on the mobile device will have different icon in the Inbox list.

For more details. Contact your Service Provider.

Before calling for service

Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.

When showing symptoms like:	Check this!
When “” does not disappear from the screen.	Check whether it is in service area, and if you continue to see “  ” please turn off the power and wait for approximately 2 minutes to turn it back on. If there is no change, check again after relocating to other areas.
When connection is abrupt or is not audible in certain areas.	When frequency environment is unstable in a certain area, connection may be abrupt and not audible. Relocate to other areas and try again.
When connection is not made well or abrupt even when established.	When frequency is unstable or weak, or if there are too many users, connection may be cut off even after it was established. Please try again a little later or try after relocating to other areas.
When LCD does not turn on.	Remove battery and turn on the power after placing it back on. If there is no change even then, sufficiently charge the battery and try again.



Frequently Asked Questions

When showing symptoms like:	Check this!
When it echoes while connection is made with a certain telephone in a certain area.	Called "Echo Phenomenon," it occurs if connection volume is too high or caused by special properties(semielectronic telephone exchange) of the machine on the other end.
When the phone is heated.	If connection is made for a significantly long duration, or game and Internet and others are used for a long time, the phone may become hot. This has no effect upon the life of the product or performance.
When the Ringer does not ring, or when Backlight or LCD blinks only.	Ringer Type may be set as "Silent" or "Light". Please select "Ring".
Standby duration for battery gradually becomes shorter.	Because battery wear out, its life gradually becomes shorter. If its life becomes shorter over half of that at the time of purchase, you must purchase a new one.
When usage time of battery becomes shorter.	If time for use of battery is short, it may be due to the user environment, or large volume of calls, or weak signals.

TIA Safety Information

Provided herein is the complete TIA Safety Information for Wireless Handheld phones. Inclusion of the text covering Pacemakers, Hearing Aids, and Other Medical Devices is required in the owner's manual for CTIA Certification. Use of the remaining TIA language is encouraged when appropriate.

Exposure to Radio Frequency Signal

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific

literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.



Safety Guidelines

Tips on Efficient Operation:

- For your phone to operate most efficiently:
Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.
- American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Driving

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six(6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimize the potential for interference

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult the LG Authorised Service Center to discuss alternatives Optional for each phone manufacturer.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.



Safety Guidelines

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.



Violation of the instructions may cause minor or serious damage to the product.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.

Battery Information and Care

- Please dispose of your battery properly.
- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.

- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.

- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.



Safety Guidelines

- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- The power cord on this product will expose you to lead, a chemical known to the State of California to cause (cancer) birth defects or other reproductive harm. Wash hands after handling.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.)
The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- Do not turn your phone on or off when putting it in your ear.

 **FDA Consumer Update**

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones.

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones



Safety Guidelines

with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones

themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to hand-held wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable radiofrequency energy(RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF

exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between

the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time



Safety Guidelines

tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet

Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and

Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety/>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones ?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists arranging the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy

absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna

Again, the scientific data do not demonstrate that



wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones
(<http://www.fda.gov/cellphones/>)
- Federal Communications Commission(FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety/>)
- International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)
- World Health Organization(WHO) International EMF Project
(<http://www.who.int/peh-emf/en/>)
- National Radiological Protection Board(UK)
(<http://www.hpa.org.uk/radiation/>)



LIMITED WARRANTY STATEMENT

LG ELECTRONICS Inc. represents and warrants that this subscriber unit and its accessories ("PRODUCT") is free from defects in material and workmanship.

This warranty is subject to the following terms and conditions;

1. This warranty of the PRODUCT extends for a period of 12 months commencing from the date of the activation or 16 months from the date of manufacture whichever is less, except for the battery, for which the warranty is 9 months from the date of activation or 12 months from the date of manufacture whichever is less.
2. During the warranty period, LG ELECTRONICS Inc. or its authorized service network will repair or replace, at LG ELECTRONICS Inc.'s option, the PRODUCT or any relevant parts thereof in the event that the PRODUCT is found to be defective. The repaired PRODUCT or the Product/part provided as a replacement for a defective PRODUCT/part, shall be free from defects. The END USER/consumer purchaser of the PRODUCT or his/her assignee ("CONSUMER") shall not be charged (whether for parts, labour or otherwise) for the repair or replacement of a defective PRODUCT during the warranty period. All replaced parts, boards or equipment shall become the property of LG ELECTRONICS Inc.
3. The warranty in respect of a repaired or replaced PRODUCT/part shall extend for the remaining warranty period of the repaired PRODUCT or replacement thereof to the CONSUMER.
4. Upon request from LG ELECTRONICS Inc. , the CONSUMER may be required to provide the purchase receipt or other documentation or information in respect of the date and place of purchase.
5. The CONSUMER shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:
 - (a) The PRODUCT has been subject to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperatures, unauthorized modifications, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accident, Acts of God, spills of food or liquids, improper installation and breakage or damage to antennae (otherwise than by reason of any defects in material or workmanship).
 - (b) LG ELECTRONICS Inc. has not been notified by the CONSUMER of the defects of the PRODUCT during the applicable warranty period.

- (c) The PRODUCT serial number code or the accessory date code has been removed, defaced or altered.
 - (d) The PRODUCT has been used with or connected to an accessory (i) not supplied by LG ELECTRONICS Inc. or its affiliates, (ii) not fit for use with the PRODUCT or (iii) used otherwise than in the manner intended.
 - (e) The seals of the PRODUCT'S battery enclosure have been broken or show evidence of tampering or the PRODUCT'S battery has been used in equipment other than that for which it has been specified usable by LG ELECTRONICS Inc.
 - (f) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
 - (g) Breakage or damage to antenna unless caused by defects in material or workmanship.
6. In order to derive the benefits of this warranty in respect of any defects in the PRODUCT, the CONSUMER shall ship the PRODUCTS or part thereof at its cost to the authorized service center of LG ELECTRONICS Inc. LG ELECTRONICS Inc. shall bear the cost of shipping the PRODUCT or part thereof back to the CONSUMER after the completion of the service under this limited warranty.

NO OTHER EXPRESS WARRANTY IS APPLICABLE TO

THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS Inc. SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER CONSEQUENTIAL DAMAGE, ARISING OUT OF THE USE OF, OR INABILITY OF USE, OF THIS PRODUCT OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS APPLICABLE TO THIS PRODUCT.

THE CONSUMER UNDERSTANDS THAT LG ELECTRONICS INC. HAS EMBEDDED RELIANCE SOFTWARE AND ITS NETWORK PARAMETERS IN THE PRODUCT. IN CASE THE CONSUMER DELETES, REMOVES, ALTERS OR MODIFIES SUCH SOFTWARE AND THE PARAMETERS AND/OR INSTALLS ANY THIRD PARTY SOFTWARE, THE WARRANTY AND REMEDIES HEREUNDER SHALL NOT BE AVAILABLE TO THE CONSUMER.

7. It is hereby expressly clarified that all warranties (express or implied) in respect of the PRODUCT are provided by LG ELECTRONICS Inc. alone.

Service Center List

0	Circle	City	ASC's Name	Address	Contact Person	Phone	Status
1	Andhra Pradesh	Guntur	Vasavi Associates	Door no 6-20-4, Swarnalok complex, 4/1 Arandal Pet, Guntur-522003	MR. Satyam	0863-2233678,9848105789,09394155554	
2	Andhra Pradesh	Hyderabad	Sri Varun Electronics	D.No 5-8-344/1, " DHAN BHAGYA ESTATE ", Chirag Ali Lane, Abids, Next to Raghava Ratna Towers, Hyderabad - 500 001	Mr.Raghavendra	040-55781999,040-55253888,040-56878822,09391001463	
3	Andhra Pradesh	Hyderabad	JVR Infotech Pvt Ltd	Shop No 8 ,Vaniya Vihar,Nalanda Building, Dilsukh Nagar Main Road, Hyderabad-500060	EV Ramakanth	040-24161848,040-55109604,040-56524157,09391131067,040-36060606	
4	Andhra Pradesh	Hyderabad	S V Electronics	Shop No. 41, Nilagiri Block, Aditya Enclave, Ameerpet Main Road, Hyderabad-500038	Mr. Vankteshwara Rao	040-55754477/55343030	
5	Andhra Pradesh	Hyderabad	Reliable Communication	G-8, 3-6-561, AALTO'S A & M Trade Centre, HIMAYATNAGAR, HYDERABAD - 500029	Mr Mahesh Heda	04030913251,09346320705, 09849251173	
6	Andhra Pradesh	Hyderabad	Shweta Communications	Shop No.9, Ground Floor, Pavani Ansuya Complex, Opp. Huda Complex, Tamaka, Hyderabad	Mr. Sandeep Heda	040-55918841,55918842, 09346698606	
7	Andhra Pradesh	Kurnool	R K LG CDMA	#40-37-11, Gandhi Bhavan, Shop No:13, UCON PLAZA,Opp: Indian Bank, Beside ICICI Bank, Ballary Road, Old Navarang Theatre, KURNOOL-2	Mr.G Rama Krishna	08518-220201,09393810688	
8	Andhra Pradesh	Nellore	Siri Enterprises	Opp.Archana Thearter,A C Centre,Nellore PIN-524001	Mr.Paraveen	939,830,957,109,347,000,000	
9	Andhra Pradesh	Rajamundhary	Siri Infotech	Police Welfare Complex,City Hospitals Junction,Danvai Pet Main Road,Rajhamundry-533103	Mr Raghvendra	0883-2421567,09397925799	
10	Andhra Pradesh	Secundrabad	Shweta Computers	# 1-7-69/1 & 2, OPP Aditya Delux Hotel,Near Paradise circl Sarojini Devi Road, Secunderabad - 500003	Mr.Jagdish	040-55334180, 040-27721076,09396532358,09391041673	
11	Andhra Pradesh	Tirupathi	CMT Computer Services	18-1-624 VV Mahal Road,OPP HDFC BANK, Tirupathi,PIN-517501	Mr.K Vasu Naidu	0877-5561979,09393620209	
12	Andhra Pradesh	Vijaywada	K L Computer House	39-9-46 SVS Temple Street,Labbipet,Vijaywada PIN- 520 010	Mr.Kartik	0866-5520461/ 5671461,09392105222	
13	Andhra Pradesh	Visakhapatnam	GVS Enterprises	G5, Ground Floor, Backside of Sangam-Sarat Theatre, 1st Lane, Dwarka Nagar, Visakhapatnam - 530 016.	Mr. Satish Kumar	0891-2598610, 9394206074	
14	Andhra Pradesh	Warrangal	S S Marketers	6-1-73/1,Sai Bhavan, Sridevi Theatre Road, Hanamkonda,Warrangal-506001	Mr.L.Srinivas Rao	0870-2552223,09390100708	
15	Andhra Pradesh	Kakinada	Delta Infotech	Door No. 6-1-29, Opp. Swami Vivekananda Park, Jawahar Street, Surya Rao Pet, Kakinada - 533001	Mr. Shivanand	0884-5593533 9346846009	
16	Bihar	Patna	Infotek Trading Company	1st floor, City Palace, New Dak Bunglow Road, Patna-800001	Sanjay Chowbey	0612-2227166	
17	Bihar	Patna	Competent Mobile Service	Shop 1, Hotel Lalitha Complex, East Bowring Canal Road, Patna	Mohit Ahluwalia	9334022706	
18	Delhi	Delhi	Comhard Systems	D-30,31, First floor, Near Hotel Shipra, Main Vikas Marg, Lakshmi Nagar	Mr Ravi Kant Gupta	011-30955887, 9818867678	
19	Delhi	Delhi	Innovative Telecom	305,Aggarwal Millenium Tower,Netaji Subash Place,Pitam Pura,Delhi-110088	Mr Manoj Garg	011-55154343,9811682453,1130925753	
20	Delhi	Delhi	Sagar Technologies	W-8, First Floor,Main Patel Road,West Patel Nagar,New Delhi- 110008	Mr Deepak/Mr Amit	9810320170,011 55433100	
21	Delhi	Delhi	Sagar Technologies	J-39,Central Mkt, Lajpat Nagar-II, New Delhi-110024	Mr Prabhat	011- 55425644, 011-55425645	
22	Delhi	Delhi	Ucom Technologies Pvt Ltd.	45, 1st Flr, Corner Mrkt, Malviya Nagar, New Delhi - 110017	Bhuwan Chandra	011-26675900, 55655382,09313088818, 011-30977000	
23	Delhi	Delhi	Nice Telecommunication	15/23,First Floor, DDA Complex, Nangal raya, D Block, Janakpuri, Delhi - 110046	Ripul Garg	011-28521044,9810778310	
24	Delhi	Delhi	Touch Tone Telecom	B-52, First Floor,Kalkaji, New Delhi	Ashish Dey	11 30939031	
25	Delhi	Delhi	Cube Engineers and Consultants Pvt Ltd	A-65, Naraina Industrial Area, Phase-1, New Delhi	Atul Gupta	09312224103, 011-55450272,51411623	
26	Delhi	Delhi	Comhard Systems	B-120, Hardev Puri, 100 Feet Main Road, Near MTNL Office, Nathu Colony Chowk,Shahdra, New Delhi - 110 093.	Mr. Ravi Kant Gupta	011-39572430 , 011-39572427	

27	Delhi	Delhi	R K Communications	2516 Hudson Lines , Kingsway Camp-Nr. Kamla Nagar , New Delhi	Mr. Pradeep Aggarwal	011-39508861	
28	Delhi	Delhi	Arham Infotech Services	1/1, Regal Building, Near Malik Sweets, Connaught Place New Delhi - 110 001.	Mr. Anil Surana	9350286361	
29	Gujarat	Ahmedabad	Visual Enterprises	104, Saarthak Complex, behind Urja House, Swastik Char Rasta, Navrangpura, Ahmedabad-380009	Vallabh Patel	079-26463305,9376171851	
30	Gujarat	Ahmedabad	Silicon Valley	F/6,Silver lake,Jagabhai Park,Rambug Road,Maninagar,Ahmedabad-380008	Rajesh Patel	079-25430634, 9824025430	
31	Gujarat	Ahmedabad	Mishree Communication	75,Management Enclave,Opp.Indraprastha Bungalows,Vastrapur,Ahmedabad.	Mitesh Patel	09327037582,079-55314224,9327800611	
32	Gujarat	Ahmedabad	A Com Technologies	Shop No-40, 1st Floor, Shubh Complex,Near Rajasthan Hospital, Camp Road,Shahibaug, Ahmedabad-380004	Vijay.S.Gohel	9824544230, 079-30940560	
33	Gujarat	Bhavnagar	Teletext Gold	G/8,Radheshyam Complex,Radha Mandir,Vaghavadi Road,Bhavnagar-364001	Nilesh Bagadia	0278-2415545,9824497766	
34	Gujarat	Gandhinagar	Creative Communications	Shop No 102,Suman City,Sector 11,Gandhinagar-382011	K.J.Barot	079-23226241,9825059590	
35	Gujarat	Jamnagar	Sudarshan Infosys	3, Prema Building, Cricket Bunglow-3, Indira Nagar, Jamnagar	Amit Unadkat	0288-2552696,9824478203	
36	Gujarat	Rajkot	Roopang infocare	Vinod Nivas,4,Sardarnagar(West),Nr Astron Cinema,Rajkot-360001	Kalpesh Rugani	0281-2464485,9824068880	
37	Gujarat	Surat	Excel Solutions	G-48, Ascon Plaza, Anand Mahal Road, Adajan Surat-395009	Nitesh Jain	0261-5544500,09327344500	
38	Gujarat	Surat	Omsai Services	37,Golden Point,Near Science Laboratory, Ring Road, Surat -3940003	Dharmesh Patel	0261-5593716,9374710610,9825406129	
39	Gujarat	Vadodra	Aashnik Infotech	F 50,National Plaza,R.C.Dutt Road,Alkapuri,Vadodara-390005	Aashish Parmar	0265-3112123,3090969, 9327230793	
40	Gujarat	Vapi	Klassik Statino Products	116,Bhanudarshan Co-Op Society, Koparil Road, Near Gunjan Cinema, GIDC, Vapi	Avishek Suhasaria	0260-3092363, 9377000911	
41	Haryana	Ambala	Bee Ess Aar Communication	92-93, Gandhi market, Ambala Cantt-133001	Rajiv Gupta	0171-2641234,9416021234	
42	Haryana	Faridabad	Hi - Tech Communication	105, Sector 10, Faridabad-121006	Rahul Jindal	0129-2223422,9810456663	
43	Haryana	Gurgaon	Signature Communications	B-100 A , South City -1 , Opposite - Huda Gymkhana Club - Gurgaon 122001	Raj Kumar Garg	0124-3956565, 0124-5102709	
44	Haryana	Karnal	Mass Communication	7, Dayal Singh Colony, Kunj Pura Road, Karnal-132001	Ms.Veena	0184-3090717,9354761148	
45	Haryana	Panipat	INS Telecom	2,Bishan Sarup Colony, Opp Bus Stand, Near Hotel Deep, Panipat	Jagdeep Sachdeva	0180-3091860,5005360	
46	Haryana	Rohtak	Telecentre	Shakti Market, Civil Hospital Road, Near Chhotu Ram Chowk, Rohtak-124001	Mr.Madaan	01262-247242,9896243092,09355671666	
47	Haryana	Sonipat	Teleworld	Ground Floor, Main Market, Main Railway Road, Opp. Old Civil Hospital, Sonipat - 138001.	Vipin Dua	1303090889, 9896052888	
48	Haryana	Yamunanagar	Manish Communications	Shop No.3, Sharma Colony, Near Mahindra Petrol Bunk, Yamunanagar - 135005	Vinod Kumar Mittal	9355327374	
49	Jharkhand	Jamshedpur	Tirupati Teletech	Chakravarti Compound,Near Hotel Castel,Contractors area,Bistupur, Jamshedpur-831001	Abhijeet Mukherjee	9334800350	
50	Jharkhand	Ranchi	Satya Systems & Solutions	158, Opp Hotel Palace, Kadru, Ranchi-834002	Amit Rastogi	0651-2341361,9835167667	
51	Karnataka	Bangalore	Meenakshi Electronics	#129,Lalbagh Main Road, Bangalore-560027	Mr. Ramesh.	080-56992943/30617345,09341210375,51146822	
52	Karnataka	Bangalore	Optima Mobile Services	24/2, Rajkumar Road, Near Subramanyanagar Police Station, 1st Block, Rajajinagar, Bangalore - 560 010	Unni Krishnan	080- 23131953, 080- 57722205, 09341266656	
53	Karnataka	Bangalore	Optima Mobile Services	B-3, Mallikaarjun Complex, Opp R T Nagar Police Station, 80 Feet Road, R T Nagar, Bangalore-560032	Prasad	8030610202	

Service Center List

54	Karnataka	Bangalore	Pranav infocom	91/92 ,Hemachandra complex,Near VGP Show room,4th block,jayanagar,Bangalore-560011	S.V.Sirish	080-56697937, 26552551	
55	Karnataka	Bangalore	Pranav infocom	267/1,1st Main Road,6th Cross, Behind Shanti Sagar,Domlur Layout, Bangalore-560071	S.V.Sirish	80- 56969937, 51256309	
56	Karnataka	Bangalore	Ascent Communication	No:113, St Johns Church road,Bangalore - 5	Naveen	080-30914856	
57	Karnataka	Belgaum	Hello India Telecom	G-4,Maratha Mandir Complex, Khanapur Road, Near Railway Flyover, Belgaum - 590 001.	Sanjay	9845327531/ 09341101800	
58	Karnataka	Hubli	Shruti Services	shop no : B6, Laxmi complex, Court circle , Hubli- 580020	Mr.Mahendar	0836-3090671,98452-54251,0836-3090671	
59	Karnataka	Mangalore	Innovative Infocom	15-10-537/11, Jayavarma Centre, Mallikatte Circle, Kadri, Mangalore - 575002.	SEBASTIAN FERNANDES	0824-56632441	
60	Karnataka	Mysore	K.K.Marketing,	1432/9, Tribhuvan Towers, opp Vetenary Hospital, Dewan's Road, Dhanwantri Road Cross, Mysore -570001	Mr. Karunakaran.	09342115003, 09342120789	
61	Karnataka	Gulbarga	Aishwaraya Communication	G-15, G.R. Complex, Opp Mini Vidhan Soudha Main Road, Gulbarga	Mallikarjun	9342356000, 9342355116	
62	Kerala	Ernakulam	Zenicon Infocom(P) limited	2nd floor, Tharian's Building,opp. Ship Yard, M.G. Road, Ernakulam-682015	Jaimon Joseph	0484-2359511,9349271511	
63	Kerala	Irinjalakuda	Akbar Mobiles	376-44, Near St. Josephs college junction,Irinjalakuda-680121	Mr Sebastian	0480-830796	
64	Kerala	Karunagapally	Supreme Enterprises	Opp to KSRTC Bus stand,Karunagapally-690518	Mr. Ratish	0476-2620282	
65	Kerala	Kollam	Digital Infosystems	MC-3087, New Block, Bishop Jeromi Nagar, Chinnakada, Kollem-691001	Johnson Lawrence	0474-2760647,9846007059	
66	Kerala	Kottayam	SVM Technologies	NSS Building, Near Pallippurathukavu Temple, Kodimapha,Kottayam - 686 002	Rajesh K S	0481-2565303,9847310123	
67	Kerala	Kozhikode	Domain Infosystems	Domain Infosystems, 2nd Floor, Darussalam Complex, Mavoor Road, Kozhikode - 673 004	Mukundan	0495-2722222	
68	Kerala	Manjeri	Integrated Computer Systems	Royal Tower, TB Road, Manjeri - 676121	Mr. Thomas Chacko	0483-3099686	
69	Kerala	Mavellikarra	Ettutharayil Agency	Ettutharayil complex, K P Road,Kayamkulam-690502	Anu T cheriyan	0479-2441760, 09388900025	
70	Kerala	Pallakad	Akbar Mobiles	N.S. Towers,Kalamandapam junction,Palakkad - 678 001	Suresh	0491-2529829,9847086446	
71	Kerala	Thiruvananthapuram	Appolo Systems	TC 20/2392, Kaipalayam, Karamana P.O., Thiruvananthapuram - 695 002.	Santosh	0471-2340523	
72	Kerala	Trichur	Akbar Mobiles	Kadarathodh Building,North Bus stand, Trichur - 680 001	Sojan	0487-2323424	
73	Kerala	Tirur	Telit Telecom Shop	P.T.Building, Thazhepalam, Tirur	Vasan.K.Nair	0494-2423311	telit.tirur@gmobiles.com
74	Madhya Pradesh	Bhopal	Neha Sales Corporation	F-104, Anmol Tower, E-5/14, Commercial Zone, Arera Colony, Bhopal-462016	Ashok Hirwani	0755-5277247/ 2424088 ,9826072327	
75	Madhya Pradesh	Gwalior	Computer Clinic	Global Apartments,City Centre, Opp Income Tax Office, Gwalior.	Rishi Sharma	9329302200	
76	Madhya Pradesh	Indore	Neha Sales Corporation	Shop No.18, Ground Floor, Johani Palace, M.G.Road, Indore - 452001.	Ashok Hirwani	0731-5091833,9826072327	
77	Madhya Pradesh	Jabalpur	S M Shopee	846, Chattarpur Bhavan, Nr. Ashoka Hotel, Wright Town, Jabalpur,Pin 482002	Vikas Jain	0761-5063183	
78	Madhya Pradesh	Raipur	Cybernet Systems	B-2,1st Floor, Garchaz Complex, Jail Road, Raipur - 492001	Anand Singh	0771-2524033,9826132918	

79	Madhya Pradesh	Ujjain	Galaxy Computers & Communication	43/2, Varruchi Marg, Opp Madhav Nagar Police Station, Freeranj, Ujjain	Amitabh Chhajhiani	9893003099	
80	Maharashtra	Amravati	Scorpio Services	Shop No. 84, Ground Floor, Gulshan Towers, Nr. Panchasheel Cinema, Amravati, Pin-444601	Mr. Pramod	0721-2567302, 09370151826, 9422156874	
81	Maharashtra	Aurangabad	Unique Telematics	Shop no.108/B, Behind Sajawat Handloom, Tapdiya Super Market, Nirala Bazar, Aurangabad-431001	Mr. Mahesh	0240-2356447, 9823007730, 09325210364	
82	Maharashtra	Chinchwad (Pimpri)	Ritz Communication	Shop No 22, Gawde Kunal garden, Pimpri-Chinchwad Link Road, Chinchwad, Pune-411033	Mr Reyaz	020-7485613, 020 30961900, 09890339777	
83	Maharashtra	Jaigaon	Saranag Services	B-288, Golani Market, Jaigaon	Mr. P.M.Waghanna	982331703	
84	Maharashtra	Kohlapur	SMS Services	S5, Diwan Tower, Opp. Nutan Marathi School, Near Mirajkar Tikky, Kolhapur, Pin -416005.	Prakash Patil	0231-2541120, 9823026120	
85	Maharashtra	Margoa	Comlink Synergies India Pvt Limited.	Ground Floor, Shop No.i, Garden view building,, Next to UTI Bank , Near Margao Municipal Garden, Margao-403601	Sunil	09326105629, 9822101522, 09326105637	
86	Maharashtra	Nagpur	Spectrum Marketing	Shop No.2, Dharampath Towers, West High Court (WHC) Road, Dharampath , Nagpur - 440010	Sonali	0712-3095700 / 5618186, 2527823	
87	Maharashtra	Nasik	MOBS Associates	SHOP NO. 12, FIRST FLOOR, 'KAPOTE-MEHER' MARKET, RENUKA NAGAR, WADALA NAKA, DAWRKA, NASIK - 422 001.	Girish Bhangre	0253-5623613, 09370291070, 09371531078	
88	Maharashtra	Panjim	Comlink Synergies India Pvt Ltd	Shop No. 5 , Dr Atmaram Borkar Road, Next to RIL Mutual Fund, Panjim, Goa-403001	Sunil	09326105629	
89	Maharashtra	Pune	Mobile World	G-25, AKSHAY COMPLEX, DHOLE PATIL ROAD, PUNE-411 001	Pawan Mantri	30942268, 9325088055	
90	Maharashtra	Pune	Horizon	30, Time Square, Near Hotel Panchami, Pune Satara Road, Pune.	Mr. Nilesh Pundye	39501222 / 9325002399	
91	Maharashtra	Sangli	Ramesh Electronics	Opp. Kanya Purohit prashala, Rajwada, Sangli-416416	Suresh Shegane	0233-2327601, 9823085176, 09372107601	
92	Maharashtra	Solapur	Jawaharlal Radio Service	184, Gold Finch Peth, nr Hotel Ritesh, Solapur - 413007.	Prasanna J Chavan	0217-2725030, 9422458830, 9823317081	
93	Mumbai	Kalyan	Vintech Solutions	SHOP- 14, GROUND FLR, ARCHIES APARTMENT, OAK BAUG, KALYAN-421301	Pawan	9322877555	
94	Mumbai	Vasai	E-Link Solutions	Shop No.5, Type C, Bldg no.5/6, Shanti Vihar, Mira Road -E, Pin Code : 401107.	Kamlesh	022-28552087, 09323182084	
95	Mumbai	Mumbai	Absolute Networks	A007, Vishal Shopping Centre, Next to Vishal Hall, Near Station, M.V.Road, Andheri (E), Mumbai - 400 069	Arun	022 39544800, 9322252390	
96	Mumbai	Mumbai	Bombay Telecom Services	211, 212, Navjeevan Commercial Society. Building No:3., Second Floor, Above Hasmukh Tea, Mumbai Central (E), Mumbai: 400004.	Mr. Tejinder Singh Kalha	9323900612,	
97	Mumbai	Mumbai	Creative Solutions	SHOP NO 6 AMBIKA COOPERATIVE HOUSING SOCIETY, JAWAHAR NAGAR ROAD NO 2 NEAR RAILWAY CROSSING, GOREGAON WEST, MUMBAI 400062	Anand	022-28769003, 022-39533603, 9820188338	
98	Mumbai	Mumbai	Sai Tele Services	A-110, Satyam Commercial Complex, M.G.Road, Ghatkoper (E), Mumbai - 400 077.	Mr. Suresh Kotle	9892549782	
99	Mumbai	Mumbai	LG Service Centre	Third Floor, Trade World, Kamala Mills Compound, Senapati Bapat Marg, Lower Parel, Mumbai-400013	Rajib Saha	022-24947375 , 09323190401	
100	Mumbai	Navi Mumbai	LG Service Centre- DAKC	A Block, Ground Floor, Dhirubhai Ambani Knowledge City, Navi Mumbai-400709	Rajnish	022-30388052, 09323190405	
101	Mumbai	Thane	Vinay Technologies Pvt Ltd	Shop no 3, Minal Chhaya Aptt, Municipal Corporation Road, Panch Pakhadi, Thane (W) - 400601	Vinod Jakotiya	022-25304960, 9821068231, 09322213342	
102	Mumbai	Navi Mumbai	Hello World	Shop No 53, GF, Welfare Chambers, Sector-17, Vashi, Mumbai-400703	Mahesh	022-27657705, 09322641396	
103	Mumbai	Khar(W)	Komplex Telecom Corporation	1, Satguru Shopping Center, IIIrd road, Khar(W), Mumbai	Mr Mohammad	022-26461917, 09323395024	

Service Center List

104	Mumbai	Panvel	Oceanic Tele System	Shop No.10, Prajapati Arcade, Sector 15, New Panvel (E), Dist. Raigad.	Shailash Bobade	022-56104542, 09322217221	
105	Mumbai	Powai	Unicom Infotel Pvt Ltd	C- 413, Solaris, Sakivihar Road, opp. L & T gate No.6, Powai, Mumba-400 079.	Chetan Pawar	022-39411140, 55049776	
106	Mumbai	Dadar	Trident Services	8-A, Vasant Smruti, Dadasaheb Phalke Road, Beside "BharatKhetra Building", Near Dadar station(E), Dadar -East, Mumbai - 400 014.	Mr. Rajesh Sarda	98200 36869	
107	Orissa	Bhubneshwar	S.A.INFOSYS	291.Bomikhal, Opp.Akamra cinema hall, Bhubaneswar-751010	Sarabjeet Singh	0674-2573113/4	
108	Orissa	Cuttack	O.A.INFOTECH	Behind Govt Bus Stand, Badambadi, Cuttack -753012	Manas Mahapatro	0671-2312613	
109	Punjab	Amritsar	Bajaj Telecommunication	87, G Floor, Nehru Complex, Lawrence Road, Amritsar-143001	Suman Bajaj	09356024827,9814650314, 0183-3958859	
110	Punjab	Barnala	Unique Infotech	Mittal Street, Near M C Office, Barnala-148101	Pankaj Goyal	01679- 238007,	
111	Punjab	Bathinda	Lalli's Electronic Gallery	1139-A, First Floor, Amrik Singh Road, Nr Gole Digg, Bhatinda-151005	Ashok Kakria	0164- 2239500/2236337,9814222310	
112	Punjab	Chandigarh	Vignesh Services	S.C.O- 189-90, Sec- 34, Chandigarh	Mukesh Arya	0172-3018028, 09316134655	
113	Punjab	Hoshiarpur	Kuldip's Mobile Care	Dhobian Wali Gali, Phagwara Road, Hoshiarpur-146001	Kuldip	01882-226906,9815073906	
114	Punjab	Jalandhar	Mobile Center	Shop No-7, Gobind Market, Opp-Beri Hospital, Nakodar Road, Jalandhar.	Jogesh Diwan	0181-3092666,9814029696,9815314060	
115	Punjab	Ludhiana	Shahi Communication	Shop No.5, 4X International, 583 L, Model Town, Ludhiana	Amit Shahi	0161-3944190	
116	Punjab	Malerkotla	Prime Infocomm	Opp. Main gate, Govt College, Malerkotla-148023	Raj Verma	01675-253899,9814040066,01675-331979	
117	Punjab	Moga	Super Communication	Pawan Market, Opp shankar Batteries, Court Road, Moga-142001	Jai Deep Mehta	9356314398	
118	Punjab	Patiala	Image Services	84, First Floor, Leela Bhawan, Patiala-147001	Rohit Bansal	0175-2222796, 9815761262.	
119	Rajasthan	Jaipur	Kamakshi Telecom	105, 1st floor, Paradise, C-61(A), Sarojini Marg, C-Scheme, Jaipur-302001	Rahul Bhargav	0141-2365575,09314512863	
120	Rajasthan	Jaipur	Alpha Infotech Systems	F-1, First Floor, Krishna Mall, Lakshmi Mandir Crossing, Tonk Road, Jaipur-302015	Shatrughan Mangal	0141-5106777,9829077136, 0141-3099724	
121	Rajasthan	Jodhpur	Omega Electronics	UG/4, Adeshwar Tower, Main Chopasani Road, Opp.Gehlot Watch Co, Jodhpur-342003	Pratap Singh	0291-3091214, 09314717171	
122	Rajasthan	Kota	Cyber Infosystems	26, Ground floor, Kalawati Paliwal market, Gumanpura, Kota-324007	Shyam Maheshwari	0744-2398153, 09352603354 , 09352620153	
123	Rajasthan	Udaipur	Ficusa Enterprises	13, Darshanpura, Opp.M.B.Commerce College Gate, Nr Computer Zone, Udaipur-313002	Virendra Ranka	0294-2410002,2413002, 09314410002	
124	Tamilnadu	Chennai	Unicare Infocomm Services	No.293, Arcot Road, Next to Indian Overseas Bank, Kodambakkam Chennai - 24	Kartik	044 24724666, 044 52047059, 09382306857	
125	Tamilnadu	Chennai	GS Systems	547/352, F M Towers, Mount Road, Nandanam, Chennai-6000035	Kanirajan	044-24330889,9884160010	
126	Tamilnadu	Chennai	U Com Technologies Pvt. Ltd.	Shop#3, Door # 24, New #30, Balfour Apartments, Balfour Road, Kilpauk. Chennai - 600 010.	Shyam	044-52174656/52175115,9884187800	
127	Tamilnadu	Chennai	Escomm Systems India P Ltd	No 57-7, Arunodaya Apartments Next to Hotel Sindhoori, Near by Everest Bus Stop, Ponnammalai High Road, Chennai-600003	Mrs N S Vijaysri	044-30901688,25612212	
128	Tamilnadu	Chennai	Genesis Communication	63/3, First main road, Gandhi Nagar, Adyar, Chennai-600020	Mr Suresh	044-24401188	
129	Tamilnadu	Coimbatore	Fast Track	Sudera Complex, 354B, 100 Feet Road, COIMBATORE - 641012	Anand Prakash	0422-2490577,9843080040, 09363100080	
130	Tamilnadu	Cuddlore	Kasturi Cellular Service	NO: 37 (2C) BHARATHI ROAD, CUDDALORE. 607 001, CUDDALORE DISTRICT, TAMIL NADU.	Mr Raghupati	04142 - 220183	
131	Tamilnadu	Erode	JANS Electronics	148, Mettur Road, Opposite shakti vinayak temple, Dana Complex, Erode-638011	M Kanan	0424-2258526,9443263508	
132	Tamilnadu	Madurai	Devaa Electronics	No.4, Thirumakulam North Street, Near Ayyappan koil, Thhallakulam, Madurai-625002	Guna	0452-5360995,0452-2526179, 09344107995	
133	Tamilnadu	Pondicherry	Digital Logistics	126/2, Perumal Koil Street (Bharathi Street Cutting), Pondicherry-605001	G Singaravelu	9843093348, 09345455351,0413-5210148	
134	Tamilnadu	Salem	Vishwesh Mobiles	Sixer Complex, 121/19A, Sarada College Road, Next to Abi Medical Centre, Salem - 636007	Vasudev Nayak	0427-3090535	

135	Tamilnadu	Thanjavur	Z M Electronics	33,New Municipal Shopping Complex,Opp LIC,Gandhi ji road,Thanjavur-613001	Ziauddin	04362-272595, 09360313254
136	Tamilnadu	Tirunevelli	Classic Electronic	39, Trivendrum Road, Opposite Kalimark, Welcome Complex, Palayamkottai, Tirunilveli-627002	Erkins	0462-2575801
137	Tamilnadu	Tirupur	Shri Vasavi Electronics	# 155-303, Mangalam Road,Karuvam palayam, Tirupur -641604	MR.U.B. Bala Murali	0421-3091438,98422-74300, 09363005560
138	Tamilnadu	Trichy	S K Electronics	Raj Complex, 9/A EVR Road, Puthur, Trichy- 620017	Krishnan	0431-2771946,9843178104, 09345101502
139	Tamilnadu	Coimbatore	Nucom Services	3/61, Master Building, Kattoor Road, Pappa Naicken, Palayam, Coimbatore - 641037.	Mr.Uthaman	9344862178, 0422-5351569
140	Tamilnadu	Vellore	Matha Communication	4, S.L.N Plaza, Opposite Odai Pilliar Koil, Gandhinagar,Vellore - 632006	Gunaa Shekhar	0416-2240800
141	Uttar pradesh	Agra	NSC Computers	Shop No G-124, Block No- 29, Sanjay Place, Agra - 282 002	Rajiv Singhal	0562-2520032, 09319111350
142	Uttar pradesh	Agra	Space Consultancy & Services	UG 1 & 2, Opp. Jaihind Hotel, Merchant Chamber, Sadar Bazar, Agra-282001.	Tanvir	0562-3957826, 09358504140
143	Uttar pradesh	Aligarh	A V Computer Services	G-1,Ganpati Plaza ,Jha Compound, Marris Rd, Aligarh-202001	Vaibhav	0571-2506148,9412274391
144	Uttar pradesh	Allahbad	B.P.Electronics	G-11, Indira Bhawan, Ground Floor, Civil Lines, Allahbad-211001	Ms Naina Pandey	0532-2608088
145	Uttar pradesh	Bareilly	Sapan Infotech	G - 64 A Kunwar Complex,Near Gupta Watch Co,116 Civil Lines,Bareilly	Sanjeev Singh	9359102467
146	Uttar pradesh	Dehradun	Krishna Communication	Shop No 15A, Meedo Plaza, Rajpur Road, Dehradun,Uttaranchal-248001	Vinod	0135 3090895,09358112922, 09358119696
147	Uttar pradesh	Ghaziabad	Concessionair Documentation India Pvt Ltd (CDIL)	C-83, Rajnagar District Center (RDC), Ghaziabad	Arun Sharma	0120-3092011
148	Uttar pradesh	Gorakhpur	Eternal Electronics	Shop No.11, Pandey Complex, 33, Kasya Road, Opp DIG Bunglow, Gorakhpur - 273001	Ram Pratap	0551-2204520
149	Uttar pradesh	Kanpur	AR Infotech	111/402 Ashok Nagar,Kanpur Pin 208012	Manoj Shukla	0512 3111662,9839068734,0512-3093011
150	Uttar pradesh	Lucknow	NET COM	3 way road, City Point, Opp Krishi Bhawan, Lucknow-226024	Kawaljeet	0522-3094222
151	Uttar pradesh	Meerut	Systech Computers	F-124/125 1st floor Ganga Plaza, Begum Bridge Road, Meerut-250002	Vineet Goyal	0121-2691167, 09358416631
152	Uttar pradesh	Moradabad	Bhavya Technologies	A12, 1st Floor, Rampur Road,Gandhi Nagar, Moradabad	Vivek Kumar Singh	0591-3092318
153	Uttar pradesh	Muzaffarnagar	Jai Computers	Shop No. 4, 1st Floor, Roorkee road, Near Shiv Chowk,Central Bank Mkt, Muzaffarnagar-251001	Manohar Singh	0131-2635483,9412110215
154	Uttar pradesh	Noida	M R Telecom	J-45, First Floor, Sector-18, NOIDA-201301	Kailash Aggarwal	0120-2591440,9871197801
155	Uttar pradesh	Saharanpur	Maharaj Communications	Near Maharaja Palace,Delhi Road, Saharanpur-247001	Pankaj Malhotra	0132-2720881, 09358311202
156	Uttar pradesh	Varanasi	Shivam Mobile Distributers	Shop No.5,B37/115-B-1 Baradari Complex,Rathyatra Crossing,Varansi Pin 221010	Rishi Mohan	9839241003, 9335418998, 9335497424
157	Uttar pradesh	Lucknow	ALFA ELECTRONICS	Shop No.GF20 ABC Complex, Kanpur Road, Lucknow	Harjinder Singh	0522-3948730
158	W Bengal	Assansol	Sky Computer & Telecom	Islam Market, Nuruddin Road, Assansol-713301	Syed Arshad Ali	0341- 2207719 ,9832160886
159	W Bengal	Burdwan	San Infosys	Tikonja Bus Stand, Central Mkt, GT Road, Burdawan-713101	Sanjit Debnath	0342-3090265,9832192170
160	W Bengal	Calcutta	Benma Infosol Pvt Ltd.	P-168/1 CJT Road,Scheme VIIM,KOLKATA 700 067	Arun Surana	033-30943176/7
161	W Bengal	Calcutta	JP Computers	5B Ekdalia Place, Kolkata - 700019	Somim Kabir	033-24401923
162	W Bengal	Calcutta	Jaksom Engineering Pvt Ltd	Block-A, Shop-1, Ambika Vihar,1/1 Harduttrai Chamarua Road,Howrah- 711001	P.Mukherjee	033- 30950383
163	W Bengal	Calcutta	Skylink	8/1A, Little Russel Street, Calcutta-700071	H R Molla	033-30903814,033-32091037
164	W Bengal	Durgapur	Tech International	Red Cross Road, City Centre, Durgapur-713216	Amitava Banerjee	0343-2546893,9434002244
165	W Bengal	Barrackpore	Friends Communication	32(8) Barasat Road,N/L 15 no railgate,PO-nonachandanpukur,PS- Titagarh, Barrackpore, Dist- North 24PGS, PIN-743102	Arup Sarkar & Tarasankar Mukherjee	033-25921263' 9330986253