

6. User Manual

LG-RD6700 User Guide

CDMA PHONE

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. if this equipment does cause harmful interference or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product.
- (2) The limited warranty extends on to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping blown fuses spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) The limited warranty is in lieu of all other warranties, express or implied either in fact or by operations law, statutory or otherwise, including, but limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
3
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT. Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following web address:
www.lgeservice.com

For Your Safety

Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment.

Before You Start

Safety Instructions

WARNING! To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Always store your phone away from heat. Never store your phone in settings that may expose it to temperatures less than 32°F or greater than 104°F, such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby in adequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone.

Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the battery to explode.

IMPORTANT! Please read the TIA SAFETY INFORMATION on page 78 before using your phone.

Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- ▶ Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not dispose of your battery by fire or with hazardous or flammable materials.
- ▶ Make sure that no sharp-edged items come into contact with the battery. There is a risk of this causing a fire.
- ▶ Store the battery in a place out of reach of children.
- ▶ Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.

- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- ▶ Do not use a hand-held phone while driving.
- ▶ Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- ▶ Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- ▶ Never store your phone in temperatures less than -4°F or greater than 122°F.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- ▶ Do not use your phone in high explosive areas as the phone may generate sparks.
- ▶ Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- ▶ Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- ▶ Do not disassemble the phone.
- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- ▶ Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- ▶ Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ▶ Do not hold or let the antenna come in contact with your body during a call.
- ▶ An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

FCC RF Exposure Information

WARNING! Read this information before operating the phone. In August 1996, the Federal Communications (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna (optional, if available)

A minimum separation distance of 8 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Cautions for Battery

- ▶ Do not disassemble.
- ▶ Do not short-circuit.
- ▶ Do not expose to high temperature: 60°C (140°F).]
- ▶ Do not incinerate.

Battery Disposal

- ▶ Please dispose of your battery properly or bring to your local wireless carrier for recycling.
- ▶ Do not dispose in fire or with hazardous or flammable materials.

Adapter (Charger) Cautions

- ▶ Using the wrong battery charger could damage your phone and void your warranty.
- ▶ The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

Memo
New Call
Privacy
Record

Chapter 7. Accessories

Chapter 1. Getting Started

Cautions






- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference.
- Keep your phone in a safe place when not in use.
- Only use the batteries, antennas, and chargers provided by LG. Using the wrong accessories could void your warranty.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Do not hold the antenna while the phone is in use.
- Do not use the phone in designated “no cellular phone use” areas.
- Do not expose the phone to high temperature or humidity.
- Avoid getting your phone wet. If the phone gets wet, turn the power off immediately and remove the battery pack. If the phone is mal-functional, return it to the dealer for service.
- Avoid shock or impact on the phone.

Phone Overview

Function	Key Descriptions
Lamp	The light goes on when you use the power key to turn on the phone and when there are incoming calls and messages.
LCD screen	Displays messages & indicator icons.
END/PWR	Used to turn power on/off. This key disconnects a call. Using this key, you can also exit out of a menu back to the phone's standby display without changing the setting.
SEND	Allows user to place or answer calls.
Mouse Key	This mouse key allows quick access to text and voice mail notification messages. Profiles, Mobile - World, and Ring Tone menu. And these keys are used to scroll through the memory locations and menu items.
Alphanumeric Keypad	These keys enable you to enter numbers and characters and choose menu items.
Soft Keys	The current operation of a soft key is defined by the word at the bottom of the display. Soft Keys 2 : Soft Key 1: If u press this key ,operation defined by the word at the bottom of the display will be done Soft Key 2: If you press this key once in a menu, you can go back one level or operation defined by the word at the bottom of the display will be done
OK Key	This key enables you to choose one item in the menu list. If you hold on this key in idle(for 2 seconds), Speaker ON/OFF will be done
Pound[#] Key	- In the standby status, to dial '+',press [#] button. (for 2 seconds)
Star/*0' Key	- In the standby status, set the manner mode by pressing the [*]button. (for 2 seconds) - In the standby status, set the lock function by pressing the [0]button. (for 2 seconds)
Clear Key	This key enables you to move previous menu or delete on a character in editor -In the standby status ,single press of this key enables to go into Short Cut Menu.
Side UP,DOWN keys	UP Key :In the standby status ,this key enables to increase the key tone volume DOWN Key: In the standby status,this key enables to decrease the keytone volume
Side Camera Key	-In the standby status ,single press of this key enables to go into Camera menu -In the standby status,hold this key(for 2 seconds) to take pictures

On screen Icons

The phone screen displays several onscreen icons and onscreen icons appears when the phone is power on.

Icons	Descriptions
	Displays the strength of the signal received by the phone and current signal strength is indicated as the number of bars displayed on the screen.
	No service The phone is not receiving a system signal.
	In use A call is in progress. No icon indicates the phone is in standby mode.
	Indicates that a text message or voice mail has been received
	Charge level Indicates battery charge level.

Chapter 2. Basic Functions

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery pack or connect the phone to an external power source such as the cigarette lighter adapter or car kit.
2. Press [END/PWR] for a few seconds until the red light on the top of the phone flashes.
 - Fully extend the antenna for the best performance.

<Note> Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

Turning the Phone Off

1. Press and hold until display screen will be turned off, and then release the key.
2. Protect the antenna by pushing it back into the phone, if extended.

Making a Call

When you make a call, follow these simple steps:

1. Make sure the phone is turned on.
 - If not, press [END/PWR].
2. Enter the phone number with area code, if needed.
3. Press [SEND].
 - If the phone is locked, enter the lock code.
 - “Call Failed” indicates that the call did not go through.
4. Press [END/PWR] to disconnect the call.

Correcting Dialing Mistakes

If you make mistakes in dialing a number, press [CLR] key once to erase the last entered digit or hold down [CLR] for at least two second to delete all digits, or simply press END Key to exit dialing state.

Receiving Calls

1. When the phone rings, press any key (except [END/PWR], [^][▼][◀][▶]) to answer.
 - If you press the key [END/PWR] once when you receive a call, you can hold the present call and ring sound or vibration stops. If you press the [END/PWR] key twice, the present call is terminated.
2. Press [END/PWR] to disconnect the call.

In call waiting mode, the present call is on hold as you answer another incoming call.

This service is provided by your service provider.

When the call waiting function is activated, your phone will beep to let you know if you have an incoming call. Your phone may also display the incoming caller's identification.

Dialing a call from Phone Book

You can place a call from any memory location either by speed dialing or by pressing [SEND] while looking up the memory location.

One-Touch Dialing : One-touch dialing is a convenient feature which enables you to dial frequently used numbers in your speed-dial data by pressing a key .

- For locations 1 to 9, you can use one-touch dialing (if enabled, see “One-Touch” on page 6.) by pressing and holding down the key corresponding to the memory location.

OR

- Press digit, then press [SEND].

Two-Touch Dialing (Speed Dialing) : This dialing feature enables you to dial numbers in your phone book through two keys (for locations 10 to 99).

- 1) Press the first digit.
- 2) Press and hold the key of the second digit.

OR

- 1) Press the first and second digits, then press [SEND].

Dialing from a Memory List


 
- 1) From a memory list, press the scroll keys to go to the memory location you want.
- 2) Press [SEND].

Dialing from a Memory Location.

On viewing and checking the memory location to call, press [SEND].

Chapter 3. Menu Features

General Guidelines to MENU Access and Settings

1. Press Soft Key 1 [Menu]. The animation of menu category will appear on the display screen.
2. Press Soft key [Ok]. The menu items will appear on the display screen.
3. Press[] to go through the list of menu features, or use the side keys.
4. Press the corresponding number to the menu item that you want to select. Then the sub-menu list will appear on the screen.
5. Press the appropriate key to select the sub-menu you want to access.
6. Select preferred settings, using the [] keys. Press CLR [Back] to go one step backward while accessing menu or selecting settings.
7. Press Soft Key [Ok] to save the settings or CLR [Back] to cancel without saving.

Messages ([Menu]+[1])

see “Message Feature” on page 13.

Contacts ([Menu]+[2])

see “Contacts Feature” on page 16.

Call Manager([Menu]+[3])

Allows you to view the 120 most recently dialed phone numbers. Once you exceed the 120-number storage limit, the oldest call history record is overwritten. These calls are divided into 4 types of calls

Call History ([Menu]+[3]+ [1])

Dialled Calls ([Menu]+[3] + [1]+ [1])

Allows you to view list of all outgoing calls you made and you may place a call by pressing the [Send].

Received Calls([Menu]+[3] + [1]+ [2])

Allows you to view list of all incoming calls and you may place a call by pressing [Send].

Missed Calls([Menu]+[3] + [1]+ [3])

Allows you to view list of all missed calls and you may place a call by pressing [Send].

Numeric memos ([Menu]+[3] + [1]+ [4])

Allows you to view memo saved in use In Call Memo.

All Calls ([Menu]+[3] + [1]+ [5])

Call Duration ([Menu]+[3]+ [2])

Allows you to view total time of calls(last dialled call, all dialled calls and all calls) and allow you to erase Call Duration informations (Reset Call Duration)

1. Last Dialled Call – Displays the time of last dialed call made.
2. All Dialled Calls - Displays the time of all dialed(outgoing) calls made.
3. All Calls - Displays the time of all calls made.

4. Sent Messages

Call Forward ([Menu]+[3]+ [3])

LCD will display follow option menu list

- 1 Immediate : Enable / Disable / Edit Feature Code(Enable / Disable)
- 2 When busy : Enable / Disable / Edit Feature Code(Enable / Disable)
- 3 No Reply/Not Recharge : Enable / Disable / Edit Feature Code(Enable / Disable)
- 4 Disable All: Yes / No / Edit Feature Code(Disable)

Call Waiting ([Menu]+[3]+ [4])

Set Call Waiting options Enable / Disable / Edit Feature Code(Enable / Disable)

Call Reject ([Menu]+[3]+ [5])

Call Settings ([Menu]+[3]+ [6])

Answer mode ([Menu]+[3]+ [6]+[1])

If incoming call, enabled to call pressing any key or press send key.

Call/Speaker volume ([Menu]+[3]+ [6]+[2])

Connect Alert ([Menu]+[3]+ [6]+[3])

When this menu selected option ON and some times later phone connected call, that time phone beep the alert sound.

Auto Voice Alert ([Menu]+[3]+ [6]+[4])

Out of Service Alert ([Menu]+[3]+ [6]+[5])

Minute minder ([Menu]+[3]+ [6]+[6])

Voice Privacy ([Menu]+[3]+ [6]+[7])

Set the voice privacy feature for CDMA calls as “Standard” or “Enhanced”: CDMA offers inherent voice privacy. Check with your service provider for availability of the enhanced voice privacy mode

Edit SMS on Call Reject ([Menu]+[3]+ [6]+[8])

Int'l Call Prefix ([Menu]+[3]+ [6]+[9])

. My stuff ([Menu]+[4])

Images ([Menu]+[4]+[1])
Movies ([Menu]+[4]+[2])
Sounds ([Menu]+[4]+[3])
VCards ([Menu]+[4]+[4])
External memory ([Menu]+[4]+[5])

. Mobile World ([Menu]+[5])

R-Menu ([Menu]+[5]+[1])
Mobile TV ([Menu]+[5]+[2])
Play N shop ([Menu]+[5]+[3])
Reset R-Menu ([Menu]+[5]+[4])
Games ([Menu]+[5]+[5])

. MP3 ([Menu]+[6])

All Songs ([Menu]+[6]+[1])
My Playlist ([Menu]+[6]+[2])
Artist ([Menu]+[6]+[3])
Album ([Menu]+[6]+[4])
Genre ([Menu]+[6]+[5])
Shuffle All Songs ([Menu]+[6]+[6])

. Multimedia ([Menu]+[7])

Camera ([Menu]+[7]+[1])
FM Radio ([Menu]+[7]+[2])
Voice Recorder ([Menu]+[7]+[3]) There are Voice Recorder, Answering machine, Etc

. Premium Service ([Menu]+[8])

SMS 51234 Services ([Menu]+[8]+[1])
Dial 51234 Services ([Menu]+[8]+[2])
Reliance Caller Tunes ([Menu]+[8]+[3])

Org&Tools ([Menu]+[9])

There are Organizer utils and tools.

- Bluetooth** ([Menu]+[9]+[1])
- Scheduler** ([Menu]+[9]+[2])
- Alarm** ([Menu]+[9]+[3])
- Memo** ([Menu]+[9]+[4])
- Calculator** ([Menu]+[9]+[5])
- Unit Converter** ([Menu]+[9]+[6])
- D-day counter** ([Menu]+[9]+[7])
- To do** ([Menu]+[9]+[8])
- Stopwatch** ([Menu]+[9]+[9])
- Timer** ([Menu]+[9]+[0])
- World Clock** ([Menu]+[9]+[*])

Sound ([Menu]+[*])

- Alerts** ([Menu]+[*]+[1])
- Tones** ([Menu]+[*]+[2])
- Get Ringtones** ([Menu]+[*]+[3])
- Effect tone** ([Menu]+[*]+[4])
- System tone** ([Menu]+[*]+[5])

Display ([Menu]+[0])

Allows to control your handset's display settings. There are Wallpaper, Time & Date, etc..

- Mainscreen** ([Menu]+[0]+[1]) **You can set up the screen displayed on the LCD screen in the standby mode.**
- Colour Scheme** ([Menu]+[0]+[2])
- Menu Style** ([Menu]+[0]+[3])
 - Grid : LCD will display animation menu and you can select menu with [◀ ▶] key.
 - List : LCD will display listed menu and you can select menu with [▲] [▼] or [◆] key.
- Backlight** ([Menu]+[0]+[4])
 - Allows you to select how long or when the display screen and keypad are backlit. The backlight is turned off 10 seconds/20 seconds/30 seconds/1min/3min after the last key is pushed.
- Dialing number** ([Menu]+[0]+[5])
- Notification box** ([Menu]+[0]+[6]) **N/A for CDG Test**

Settings ([Menu]+[#])

- Power Save Mode**([Menu]+[#]+[1])
- Security** ([Menu]+ [#]+[2])

- 1. PIN code request** ([Menu]+[#]+[2]+[1])

2. Phone lock ([Menu]+[#]+[2]+[2])

Helps you to protect your phone from unauthorized use and once the phone is locked, the phone is restricted from making calls until the lock code is entered.

However you can still receive phone calls and make emergency calls while your phone is locked. “Never” means that the phone is never locked (Lock mode can be used). When locked, you can only make emergency calls or receive incoming calls. “On power up” means that locked the phone when the phone is turned on. “Always” means that the phone is always locked.

3. Auto Key lock ([Menu]+[#]+[2]+[3])

4. Application lock([Menu]+[#]+[2]+[4])

5. Emergency numbers ([Menu]+[#]+[2]+[5])

6. Premium Serv Number([Menu]+[#]+[2]+[6])

7. Change codes ([Menu]+[#]+[2]+[7])

New Lock Code allows you to enter a new four-digit lock code number. For confirmation, it will ask you to enter the new lock code twice. This is the same number as the pin code

8. Reset Phone ([Menu]+[#]+[2]+[7])

Reset to default settings

Entry Type([Menu]+[#]+ [3])

Airplane Mode ([Menu]+[#]+ [4]) On/Off

Line Speed ([Menu]+[#]+ [5])

USB Connection Mode ([Menu]+[#]+ [6])

Memory ([Menu]+[#]+ [7])

Version information ([Menu]+[#]+ [8])

Chapter 4. Message Features

Text message, page and voice mailbox become available as soon as the power is on. You can access the above types of messages pressing the message key ([▲]) long. In addition, you can make a call to the call back number by pressing the [Send] during a message check.

The phone can store up to 201 messages (Voice message : 1, Text messages 200) with 140 characters per message. However, you should check whether your carrier provides the above features.

The information that is stored on the message is determined by phone mode and service capability. You can check types of messages by pressing the message key ([▲]).

Message Service

This service supports reception of the text message, alerting, and the voice mailbox. It is possible to access the above functions with the text message key .

It is possible to store up to total 201(new+old+voice) messages. It is recommended to check the number of character receivable because the capacity depends on the system service provider.

<Type of Menu>

- Reliance Mail : Exciting SMS-based infotainment services
- Write message: Menu to send message
- Inbox : Menu to check a new incoming, stored text message
- Outbox : Menu to check the message user have sent and was saved.
- Drafts : Saved message in Write message
- Voice : Menu to check the number of voice messages in the voice mailbox
- Archive in SIM : Saved message in Inbox
- Templates : Predefined Messages by user.
- Delete Messages : Menu to erase all the stored messages
- Messages Settings : Menu to set the SMS priority or Delivery ack and so on.

- Move the cursor with the upside and downside keys [◆], and press Okey Key [Select] for the menu requested..

1. Reliance Mail ([▲]+[1])

2. Write Message ([▲]+[2])

- A. Press [ok] Once
- B. Enter Phone Number. If you want to send to number saved in book, press [1 Search contacts of Options]
- C. Enter Message and press OK

3. Inbox ([▲]+[3])

- A. Press [ok] twice
- B. Press [ok] : you can view the received message
- C. You can choose below function using soft 1 key [option]
 - Reply
 - Forward
 - Copy Text
 - Save number
 - Extract
 - Delete
 - To Archive
 - SMS Chat

4. Outbox ([^]+[4])

- A. Press [ok] twice
- B. Press [view] : you can view the outbox message
- C. You can choose below function using soft 1 key [option]
 - Forward
 - Copy text
 - Save number
 - Extract
 - Delete
 - To Archive
 - Receivers list

5. Draft ([^]+[5])

- A. Press [ok]
- B. Press [Edit] : you can edit the draft message
- C. You can choose below function using soft 1 key [option]
 - Insert
 - Send
 - Save to draft
 - Add signature
 - Exit

6. Voice ([^]+[6])

- 1) Press [ok]

7. Archive in SIM ([^]+[7])

- A. Press [ok]
- B. Press [view] : you can view the saved message in SIM
- C. You can choose below function using soft 1 key [option]
 - Reply
 - Forward
 - Copy text
 - Save number
 - Extract
 - Delete

- To Inbox/Outbox

8. Templates ([^]+[8])

- 1) Press [OK] to view.

9. Delete Message ([^]+[9])

- 1) Press [ok] twice
- 2) Choose the deleting type (all inbox, all outbox, all drafts, all archive, all messages)
- 3) Press [ok]

10.Messages Settings ([^]+[0])

- 1) Press [ok] twice
- 2) Choose menu item, Press [Select]
 - Priority : You can select Priority (Normal/Hurry/Urgent)
 - Deferred Delivery : You can select Deferred delievery (Immediate, After 30 mins etc)
 - Validity Peroid : You can select Validity Period (Default, 1 Hour, 2 Hours Etc)

=====
<SMS SERVICE PROGRAM>

####->[1. CDG Test]->[Up key]

Select <L3 Ack >

1. Off : SO, Select 8K or 13K
2. On : L3ACK, Select ON/OFF

Chapter 5. Contacts Features

Contacts ([Menu]+[2])

Add new ([Menu]+[2]+[1])

1. Press Ok
2. Select number's destination (SIM, Phone or Both)
3. Enter name
4. Enter the phone number you want to add.
5. Press OK Key [Save]

Search ([Menu]+[2]+[2])

1. Enter the name you want to find.
2. You can go another find menu using with [◆]

Speed dial ([Menu]+[2]+[3])

1. LCD will display matrix, and you can select a address with [Navigation] key.
2. If a address you selected is empty, press Soft Key 1 [Assign]
3. In Assign menu, you can select a name saved in phonebook data.
4. In Replace menu, you can replace another name saved in phonebook data.
5. In Remove menu, you can erase name selected.

Group Manager ([Menu]+[2]+[4])

2. Select group you want with [◆] key.
3. Press Soft 1 key and 4 key to edit.
4. You can change group name

Copy & Move ([Menu]+[2]+ [5])

COPY phonebook data phone to SIM or SIM to phone.

My Phone number ([Menu]+[2]+ [6])

Contacts settings ([Menu]+[2]+ [7])

Chapter 6. Functions used during a call

Send My Number (During a call : [Options]+[1])

Search contact & Schedule (During a call : [Options]+[2])

Mute / Unmute (During a call : [Menu]+[4])

Sometimes it is necessary to mute a call so that caller does not hear you or certain background noise.

Memo (During a call : [[Options]+[5]])

Write some memo in call

Record (During a call : [Soft2 key])

New Call (During a call : [Options]+[6])

Privacy On / Off (During a call : [Options]+[7])

Set the voice privacy feature for CDMA calls as “Enhanced” or “Standard” :

CDMA offers inherent voice privacy. Check with your service provider for availability of the enhanced voice privacy mode.

Speaker On/Off (During a call : [OK Key])

Chapter 7. Accessories

There are a variety of accessories available for the phone. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Travel Charger

This charger, model TC-10W, allows you to charge the battery pack. It supports standard U.S. 120Volt 60Hz outlets. While an orange light indicates that it is charging, a green light indicates charging is complete. It takes 5 hours to charge a completely discharged battery.

Battery (LGLi-AAEM)

Standard battery is available.

Desktop Charger

The desktop charger, model DC-41W, allows you to place the phone for charging the stand. It can charge a completely discharged battery in 3 hours.

Cigar Lighter Charger

You can operate the phone and trickle charge the phone's battery from your vehicle by using the cigarette lighter charger, model CLC-11W. It takes 5 hours to charge a completely discharged battery.

Hands-Free Car Kit (Portable)

The hands-free car kit, model PHF-30W, enables you to attach the phone to the car providing you with hands-free operation. It will also charge a completely discharged battery in 5 hours.

Hands-Free Car kit(Install)

The installed hands-free car kit model IHF-51W is permanently installed in your car, and provides you with hands-free operation. It will also charge a completely discharged battery is shows.

Data Cable Kit

Connects your phone to your PC.(Model KW-a)

Headset

Connects to your phone, allowing hands free operation. Includes earpiece, microphone and mute key. (Model Headset 1000)

Hand strap

AC Adaptor