



LG-S300

Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.

This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Part 15 Class B Compliance

This device and its accessories comply with part15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received,
including interference that may cause undesired operation.

Body-worn Operation

This device has been tested for typical body-worn operations

with the distance of 0.79inches (2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79inches(2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain metallic components.

LG-S300 User Guide — English

Congratulations on your purchase of the advanced and compact LG-S300 phone by LG, designed to operate with the latest digital mobile communication technology.


This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Getting to Know Your Phone

Main screen —————•

•——— Charger,
Cable slot,
Hands-free
connector

Call key  —————•
Dials a phone
number and
answers
incoming calls.

•——— End/Power key 
Ends or rejects a call.
Turns the phone
on/off. Returns to the
standby screen when
you use the menu.

Installing a Memory Card


Lift the memory card cover and insert a microSD card with the gold contact area facing downward. Close the memory card cover so that it clicks shut.

To remove the memory card, gently push it as shown in the diagram.

Formatting the Memory Card

Press **Menu** and select **Settings**.

Choose **Memory manager**, select **External memory**, press **Format**, and then insert the security code.

 **WARNING:** When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Note: A memory card is an optional accessory.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The plug-in SIM card can be easily damaged by scratches

or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open the battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert your battery
- 5 Close the battery cover
- 6 Charge your battery



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Menu map

Messaging

- Create message
- Inbox
- My mailbox
- Drafts
- Outbox
- Sent items
- Saved items
- Emoticons
- Message settings

Contacts

- Names
- Settings
- Groups
- Speed dials
- Service dial numbers
- Own number
- My business card

Call log

- Call log
- Missed calls
- Received calls
- Dialled numbers
- Call duration
- Packet data counter
- Call costs

Settings

- Profiles
- Display
- Date & Time
- Connectivity
- Call
- Phone
- Network
- Internet profiles
- Access points
- Packet data conn.
- Security
- Memory manager
- Restore factory settings

Gallery

- My memory card
- My images
- My sounds
- My videos
- My games & apps
- Others

Media

- Camera
- Video
- Music
- FM radio
- Voice recorder

Menu map

Organiser

Alarm clock
Calendar
To-do list
Notes
Secret notes
Calculator
Stopwatch
Date finder
Converter
World time
Go to
Settings

Applications



My games & apps
Settings

Web

Home
Bookmarks
Last web address
Settings
Go to address
Saved pages


Calls

Making a Call


- 1 Key in the number using the keypad. To delete a digit, press **CLR**.
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold **0**.


Making a Call from Your Contacts

- 1 To access **Names** press on the down navigation key.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for **Office**, press "6" three times to select the first character, "O"
- 3 Select **Call** or press  to initiate the call.

Answering and Rejecting a Call

When your phone rings, press  to answer the call.

You can control the volume by pressing the Up and Down Navigation keys.

Press  or select **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Press send key**, **Slide up** and **Press any key**.

Speed Dialing

You can assign a speed dial number to a contact you call frequently.

Viewing your Call History

You can only check the log of missed, received and dialed calls if the network supports Calling Line Identification (CLI) within the service area.

Changing the call settings

You can set call-specific functions. Press **Menu**, select **Settings** and choose **Call**.

- **Call divert** - Choose whether to divert your calls.
- **Call barring** - Select when you would like calls to be barred.
- **Fixed dial numbers** - Choose a list of numbers that can be called from your phone. You will need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.
- **Call waiting** - Be alerted when you have a call waiting. This depends on your network provider.
- **Call reject** - Set the rejected call list.
- **Send my number** - Choose whether your number will be displayed when you call someone. This depends on your network provider.
- **Auto redial** - Choose **On** or **Off**.
- **Answer mode** - Choose whether to answer the phone using Any key, Send key only or Slide up.
- **Free call timer** - Choose whether or not to display the call time.
- **Minute minder** - Select **On** to hear a tone every minute during a call.
- **BT answer mode** - Set to Hands-free or Handset.

- **Save new number** - Choose **Yes** or **No**.
- **Slide close setting** - Choose **End call** or **Continue call**.

Contacts

Searching for a Contact

- 1 To access **Names** press on the down navigation key.
- 2 Using the keypad, enter the first letter of the contact you want to call.
- 3 To scroll through the contacts, use the up and down arrows.

Adding a New Contact

- 1 Press **Menu**, then select **Contacts** and choose **Names**. Then press **Options** - Add new contact.
- 2 Enter all the information you have in the fields provided and select **Options-Done**.

Adding a Contact to a Group

You can save your contacts in groups; for example, to keep your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleagues**, **School** and **VIP** already set up on the phone.

Messaging

Your LG-S300 includes text messaging, multimedia messaging and E-mail functions, and can also receive network service messages.

Sending a Message

- 1 Press **Menu**, select **Messaging** and choose **Create message**.
- 2 A new message editor will open. The message editor combines **Text message** and **Multimedia messages** into one intuitive and easy-to-switch-between editor. The default setting for the message editor is text messages.
- 3 Enter your message.
- 4 Choose **Options - Insert** to add an **Image**, **Video clip**, **Sound clip**, **Schedule**, **Business card**, **Note**, **Text field**, **To-do** or **Text template**.
- 5 Press **Options - Send**.

Setting up Your E-mail

You can stay in touch on the move using email on your LG-S300. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Press **Menu**, select **Messaging**, and choose **Message Settings**.
- 2 Select **E-mail** then **E-mail accounts**.
- 3 Press **Add** then set the **E-mail account**.

Sending an E-mail Using your New Account

To send/receive an email, you should set up an email account.

- 1 Select **Menu**, select **Messaging** and choose **Create message**.
- 2 Choose **E-mail** and a new email will open.
- 3 Enter a subject.
- 4 Enter your message.
- 5 Press Options and select Insert to add an **Image**, **Video Clip**, **Sound Clip**, **Business card**, **Schedule** or **Note**.
- 6 Press **Send** to and enter the recipient's address, or press **Options** and select **Insert - Contact Details to open your contacts list**.
- 7 Press **Send** and your email will be sent.

Entering Text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available on the phone: T9 predictive mode, ABC manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone numbers in the address book fields).

T9 Predictive Mode

T9 predictive mode uses a built-in dictionary to recognize the words you are writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognize the word once all the letters are entered.

ABC Manual Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Message Folders

Press **Menu** and select **Messaging**. The folder structure used on your LG-S300 is fairly self-explanatory.

Create message - Allows you to create new messages.

Inbox - All the messages you receive are placed in your Inbox.

My mailbox - Contains all your email messages.

Drafts - If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox - This is a temporary storage folder while messages are being sent. It also stores any messages that have failed to send.

Sent items - All the messages you send are placed in your Sent folder.

Saved Items - You can access your saved messages, text templates and multimedia templates here.




Emoticons - A list of useful pre-written emoticons that can be used for a quick reply.

Media

Music


Your LG-S300 has a built-in **Music** player so you can play all your favorite music.

Playing a Song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All tracks** then select the song you want to play.
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select **Back** to stop the music and return to the music player menu.


Creating a Playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Press **Menu** and select **Media**.
- 2 Choose **Music**, then select **Playlists**.
- 3 Press **Options** and select **Add new playlist**, then enter the playlist name and press **Save**.
- 4 The **All tracks** folder will be displayed. Select all of the songs that you would like to include in your playlist by scrolling to them and selecting .
- 5 Select **Done** to store the playlist.


Camera

Taking a Quick Photo

- 1 Select **Menu** and select **Media**. Select **Camera** to open the viewfinder.
- 2 Holding the phone, point the lens toward the subject of the photo.
- 3 Position the phone so you can see the subject of your photo.
- 4 Press the **Center**  key to take a photo.

Video Camera

Shooting a Quick Video

- 1 In the standby screen, select **Menu** and select **Media**.
- 2 Choose **Video**.
- 3 Point the camera lens toward the subject of the video.
- 4 Press  to start recording.

- 5 "Rec" will appear in the bottom-left corner of the viewfinder and a timer will show the length of your video.
- 6 Select **Stop** to stop recording.

FM Radio


Using the FM Radio

Your LG LG-S300 has an **FM radio** feature so you can tune into your favorite stations and listen on the move.

Listening to the Radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Recording the Radio

- 1 Press the **center key** while listening to the **radio**.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press the . When a recording has been made, the recorded contents will be saved in the **Gallery** as an mp3 file.
- 3 When the recording is done, select **Option** and then choose from **Play**, **Delete**, **Sound edit**, **File**, **Use as** or **Send via**.

Note: If you are in an area with bad radio reception, you may have difficulty listening to the **radio**.

It is recommended that you insert headphones into the hands-free connector when listening to the **radio** to ensure good radio reception.

Voice Recorder

Use your **Voice recorder** to record voice memos or other sounds.

Gallery

You can store any kind of **Media file** on your phone's memory to give you easy access to all of your images, sounds, videos, games etc. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in the **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

My Memory Card

If you have inserted a memory card, it will be displayed as a folder in the **Gallery**.

My Images

The **Images folder** contains a folder of default images on your phone, images downloaded by you, and images taken on your phone's camera.

My Sounds

The **Sounds folder** contains default sounds, your voice recordings, radio recordings and sound files downloaded by you. From here you can manage and send sounds, or set them as ringtones.

My Videos

The **Videos folder** shows the list of downloaded videos and videos you have recorded on your phone.

Others

In the **Others folder**, you can view files that are not saved in the **Images**, **Sounds** or **Videos folders**.

My Games & Apps

Your LG-S300 comes with preloaded games to keep you amused in your spare time. If you choose to download any additional games or applications they will be saved in this folder.

Organiser

Setting your Alarm

You can set up to five alarms to go off at a specified time

Using the Calendar

When you enter this menu, a calendar appears. A square cursor is located on the current date.

You can move the cursor to another date using the navigation keys.

Adding an Item to Your To-Do List

You can view, edit and add tasks to do.

Using the Calculator

The calculator provides the basic arithmetic functions—addition, subtraction, multiplication and division—as well as scientific functions.

Using the Stopwatch

This option allows you to use stopwatch functions.

Converting Units

This can convert many measurements into the unit you want.

Adding a City to Your World Time

You can add a required city to the list of world clocks. You can also check the current Greenwich Mean Time (GMT) and the time in major cities around the world.

Go To

This helps you go to the menu you are searching for. You can set an item as Go to.