

Technical Details

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and those international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.39 inches (1.0cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.39 inches (1.0cm) must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.39 inches (1.0cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

HAC statement

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses.

However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids.

It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise.

Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility.

If you have questions about return or exchange policies, consult your service provider or phone retailer.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules.

Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.21 statement

Changes or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Technical Details

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you experience interference with reception (e.g., television), determine if this equipment is causing the harmful interference by turning the equipment off and then back on to see if the interference is affected. If necessary, try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The VS920 operates on Verizon's 4G network, based on Long Term Evolution (LTE) technology and Mobile Broadband 4G networks in the United States*.

 
Now you can connect easily at high speeds to the Internet, your corporate Intranet, and your email while you're away from the office.

* Service not available everywhere. Visit website (verizonwireless.com/4G) for a complete list of available areas.

* Information subject to change.

Phone Overview

Front View

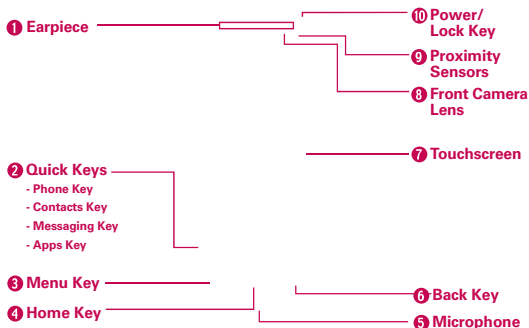

NOTES All screen shots in this guide are simulated. Actual displays may vary.

Instructions to perform tasks in this guide are based on the default phone settings and may change depending on the software version on your phone.

1. **Earpiece** Lets you hear callers and automated prompts.
2. **Quick Keys**
 - **Phone Key** Opens the **Phone** application for access to the dialpad, Call log, Contacts, and Groups.
 - **Contacts Key** Opens the **Contacts** application.
 - **Messaging Key** Opens the **Messaging** application.
 - **Apps Key** Opens the Apps screen, where you can view all your installed applications.
3. **Menu Key** Opens an options menu with options that affect the current screen or application.
4. **Home Key** Returns to the Home screen. If you're already viewing one of the Home screen extension panes, it navigates you to the central Home screen pane. Touch and hold to view the most recently used applications.

The Basics

5. **Microphone** Transmits your voice to the other caller and for Voice-activated functions.
6. **Back Key** Returns to the previous screen. Also closes pop-up display items, such as menus and dialog boxes.
7. **Touchscreen** Displays all the information needed to operate your phone, such as applications, call status, date, time, signal status, and battery strength.
8. **Front Camera Lens** Use to take pictures and video. Keep clean for optimal performance.
9. **Proximity Sensors** Senses proximity towards other objects (such as your head) so that touch commands are not accidentally activated during a call.
 - NOTES**
 - Do not block the sensor or near sensor to avoid problems with the touch operations.
 - The use of a film cover produced by manufacturers other than LG can cause a disturbance in touch operation, the display, etc.
10. **Power/Lock Key** Locks the screen with a single press. Press and hold to open the phone options menu for the following options: Silent mode, Airplane mode, and Power off.

 
Rear View

① Camera Lens

② Back Cover

11. **Camera Lens** Use for taking pictures and recording videos. Keep clean for optimal performance.
12. **Back Cover** Encloses the battery compartment.

Side View

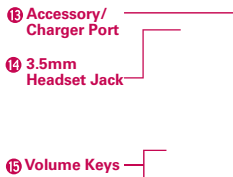

13. **Accessory/Charger Port** Allows you to connect the phone charger, USB cable, or other compatible accessories.
14. **3.5mm Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations. You can also plug in headphones to listen to music.
15. **Volume Keys** Allow you to adjust the ringer, media volumes, or the in-call volume during a call.

Installing the Battery and microSD Card

NOTE It is important to fully charge the battery before initial use of the phone.

Installing the battery

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk, use, and standby time. The battery charge level is shown at the top right corner of the screen.



1 Hold the phone with both hands, with the microphone facing upward. Then use the fingertip cutout to pull open the back cover (as shown above).



2 Align the battery contacts with the terminals at the bottom of the battery compartment, then press the battery into place.



3 Replace the battery cover over the back of the phone (as demonstrated). Apply a steady downward pressure until the back cover clicks into place.

Removing the battery

Turn the power off. Remove the battery cover (as demonstrated in the previous instructions). Then flip the phone to its normal position and use the fingertip cutout at the top left corner of the battery compartment to lift the battery out.



Inserting a microSD card

Turn the power off. Remove the battery cover and the battery (as demonstrated in the previous instructions). Locate the microSD card slot (microSD is inscribed near the slot opening). Position the microSD card with the label side facing up and slide it into place until it is fully inserted and locked in place.



NOTE The microSD card can be easily damaged by improper operation. Please be careful when inserting, removing or handling it.



To remove the microSD card

Turn the power off. Remove the battery cover and take the battery out. Locate the microSD card slot. Gently push the exposed edge of the microSD card to release it. Then gently pull it out to remove it.



To unmount the microSD card

It is important to unmount the card to avoid damage to the card or data saved on the card.

1. Touch the **Apps Key** .
2. Touch **Settings**  > **SD card & phone storage**.
3. Touch **Unmount External SD card**.

Installing the 4G SIM card

Turn the power off. Remove the battery cover and the battery (as demonstrated in the previous instructions). Locate the 4G SIM card slot (a SIM card graphic is inscribed near the slot opening). Position the 4G SIM card with the label side facing up and slide it into place until it is fully inserted and locked in place.



Removing the 4G SIM card

Turn the power off. Remove the battery cover and take the battery out. Locate the 4G SIM card slot. Gently slide the 4G SIM card out to remove it.



Charging the Phone

Your VS920 comes with a wall/USB charger and a USB cable which connect together to charge your phone. To charge your phone:

NOTICE

Please use only an approved charging accessory to charge your LG phone. Improper handling of the accessory/charger port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Connect the USB cable into the wall/USB charger. When connecting, as shown below, the LG logo on the USB cable should face toward you.

2. Plug the USB cable (as shown below) into the phone's accessory/charger port.

NOTE

Make sure the 'B' side is facing toward you when inserting the USB cable into the phone.



Charging with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you need to have the necessary USB drivers installed on your PC first. Connect one end of the USB cable to the charger port on your phone and connect the other end to a USB port on your PC. It is best to use the rear USB port when connecting to a desktop PC. The USB hub should be powered by an external power source.



Optimizing Battery Life

You can extend your battery's life between charges by turning off features that run in the background. You can also monitor how applications and system resources consume battery power.

Tips to extend the life of your battery



- ▶ Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, use the Settings menu to turn them off (Note that the GPS receiver is only turned on when you're using an application that makes use of it).
- ▶ Turn down screen brightness and set a shorter screen timeout.
- ▶ Turn off automatic syncing for Gmail, Calendar, Contacts, and other applications if you don't need it.
- ▶ Use the Power Control widget to control the wireless connections, GPS connection, Bluetooth power, display brightness, and syncing activity.

To check the battery charge level

- ▶ Touch the **Apps Key**  > **Settings**  > **About phone** > **Status**.
The battery status (Charging or Discharging) and level (as a percentage of fully charged) will be displayed at the top of the screen.

To monitor and control what uses the battery

The Battery use screen allows you to see which applications are consuming the most battery power. Information on this screen allows you to identify downloaded applications you may want to turn off when not being used, so you can get the most out of your battery power.

- ▶ Touch the **Apps Key**  > **Settings**  > **About phone** > **Battery use**.
The screen will display battery usage time. Either how long since last connected to a power source, if connected to a power source, and how long you were last running on battery power.
The list of applications or services using battery power are displayed in order of energy used, from greatest amount to least.

The Basics



- ▶ Touch an application in the Battery use screen to see the details about its power consumption.
Different applications offer different kinds of information, and they may even include options to modify the settings so you can reduce power consumption by that application.

Setup Wizard

The first time you turn on your phone, the Setup Wizard guides you through signing in to your Google Account. If you don't have one, don't worry, the Setup Wizard will help you create one.

You can also set up social networking accounts, such as Facebook for LG or Twitter for LG.


NOTE This phone supports several applications and services. It is recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

1. Press and hold the **Power/Lock Key**  on the top edge of your phone to turn it on. 
2. Select a language and touch **Next**.
3. Follow the Setup Wizard to configure your phone set up including creating or logging in to your Gmail Account.


NOTE If you have an existing Google Account, your contacts from that account are synced to your phone.

Turning the Phone On and Off

Turning the phone on


- ▶ Press and hold the **Power/Lock Key**  for a couple of seconds until the screen turns on.

Turning the phone off

1. Press and hold the **Power/Lock Key**  until the pop-up menu appears.
2. Touch **Power off** in the pop-up menu.
3. Touch **OK** to confirm that you want to turn off the phone.

To unlock the phone

If you don't use the phone for a while, the screen and backlight will shut off to conserve battery power. To unlock the phone:

1. Press the **Power/Lock Key** .
Your Lock Screen will appear.
2. Slide the screen up to unlock.



The last screen you were working on opens.

NOTE This is the default Lock Screen. If you've set up an Unlock Pattern, use your fingertip to draw the pattern.




To turn the phone sounds off

If you're in a place where your phone sounds may disturb others, you can quickly silence your phone from the Home screen.

1. Press the **Power/Lock Key** , then unlock the screen.
2. Press and hold the **Power/Lock Key** , then touch **Silent mode**.

OR

Press the down **Volume Key** on the side of the phone  until all sounds are turned off or vibration is set.

NOTE The Vibration setting in the Sound menu affects this mode. If the Vibration setting is set to **Only when not in Silent mode** (or **Never**), then the down **Volume Key** turns all sounds off. If the Vibration setting is set to **Only in Silent mode** (or **Always**), the down **Volume Key** will set the phone to vibrate.

Setting Up Your Device

When you turn on your wireless device for the first time, you have the option to quickly set up various accounts. Simply follow the on-screen instructions to complete the initial setup of your wireless device.

To set up your device, follow the steps below:

1. Select your language and touch **Next**.
2. Select whether to **Skip** or **Start** the Backup Assistant application.
3. Select whether to **Skip** or **Start** the Google Account setup. With a Google Account, Google applications are automatically synced between your phone and computer regardless of where you make an update.
4. Select the other accounts you want to set up. (**Email, Facebook for LG, Twitter for LG**, etc.).
5. Select the Location Consent (**Verizon Location Services/ Standalone GPS Services/ Google Location Services**).

NOTE A successful set up message is displayed. You can choose to view options that teach you about your new phone including **Watch & Learn / My Verizon Mobile / Guided Tours**. These options can be viewed later by accessing the Tools section of the Apps screen.

7. Touch **Done** to start using the phone.

For more information on how to set up your email, visit **smartphones.verizonwireless.com/**. Click on the **Smartphone Support** tab and select your phone.

Setting up your Google Account

1. At the setup screen, touch **Create** or **Sign in**.
2. Enter your username and password.

NOTE Touch the **Back Key**  to close the keyboard.

3. Touch **Sign in**.

Now your Gmail, Google Contacts, and Google Calendar events will all be loaded to your phone automatically.

You can use the area below to record your Google Account information for future reference.

Username: _____@gmail.com

Password: _____

Your Google Account

You must sign into a Google Account to use Gmail, Google Talk, Google Calendar, and other Google Apps; to download applications from Android Market; to back up your settings to Google servers; and to take advantage of other Google services on your phone.

IMPORTANT

 
- If you want to restore your settings to this phone, from another phone that was running Android release 2.0 or later, you must sign into your Google Account now, during setup. If you wait until after setup is complete, your settings are not restored.
- If you don't have a Google Account, you're prompted to create one.
- If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.
- When you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web are synchronized with your phone.
- If you don't sign into a Google Account during setup, you are prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Android Market.
- When you sign in, you're prompted to enter your username and password, using the on-screen keyboard.

Phone's Status Icons


The Status Bar appears at the top of every screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time.



Notification icons




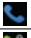




Status icons

If you have more notifications than can fit in the Status Bar, a plus icon  prompts you to open the Notifications panel to view them all.

The following icons indicate the status of your phone.









Call icons

	Microphone muted during a call		Missed call notification
	In call		In call using Bluetooth device
	Speaker on		Privacy call




Calendar & Alarm icons

	Calendar event notification		Alarm set
---	-----------------------------	---	-----------








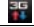









Email and Messaging icons

	Verizon email received		Verizon email sending failed
	New message received		Sending message failed
	High priority message received		New Gmail message received
	Google Talk message received		New voice mail received

Sound icons

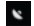	Music currently playing		Silent mode
	Vibrate mode		Wired headset connected












Network icons

	4G network connected		Download through 4G network
	Using 4G network		Upload through 4G network
	Connected to a 3G network		3G network is in use
	Downloading data		Uploading data
	GPS on		No service
	Acquiring GPS access		Strong network signal
	Airplane mode is on		Weak network signal
	Roaming		Location service on
	Location service off		

The Basics















Connectivity icons

The following icons indicate the status of your phone.



	Wi-Fi connection detected		Android debugger connected
	Bluetooth on		Bluetooth device connected
	USB connected		USB tethering on
	No Wi-Fi signal		Strong Wi-Fi signal
	HDMI cable connected		HDMI cable disconnected
	SmartShare on		SmartShare sharing request

System icons

The following icons indicate the status of your phone.

	More notifications		System secure
	Internal memory full		System alert
	SD card inserted		No SD card inserted
	Google sync started		Error during Google sync
	Battery empty		Battery full
	Battery charging		Battery status unknown(error)
	No SIM card		Unknown SIM card

Getting answers about how to use VS920

Touch the **Apps Key**  > **Guided tours**  to get information about using VS920, including the user guide and video tutorials.

Getting to Know the Home Screen

The Home screen is your starting point to access all the features on your phone. It displays application shortcuts, icons, widgets, and other features.

Status Bar

Shows device status information, including the time, signal strength, battery status, and notification icons.

Application Icon

Touch an icon (application, folder, etc.) to open the application and use it.

Quick Keys





Provide easy, one-touch access to the functions you use the most.

Apps Key


Touch to open the Apps screen to view all of your installed applications.

Quick Keys

The Quick Keys are located at the bottom of the Home screen and Apps screen.

- : Opens the **Phone** application which displays the dialpad so you can dial an unsaved number. It also provides additional tabs to access the Call log, Contacts, and your Groups.
- : Opens your Contacts list. You can also access the **Phone** application, Call log, and your Groups by touching the tabs across the top of the screen.
- : Opens the **Messaging** application.
- : Opens the Apps screen and displays phone options and applications.

To return to the Home screen

- ▶ Touch the **Home Key**  at any time, from any application.

To view other Home screen panes

- ▶ Slide your finger left or right across the Home screen. The Home screen spans seven screen widths, allowing more space for icons, widgets, shortcuts, and other items.

The Basics

Home Screen Pane Indicator
The dots indicate which Home screen pane you are viewing.



Touchscreen

Your touchscreen provides an excellent way to interact with and use your Android phone. With the touch of your finger, you can download and use available applications, make menu selections, and access data saved to your phone.

The following terms are used for describing the different available actions using the touchscreen:

Touch A single finger touch selects items. For example, touch an icon (e.g., application or menu item), touch words (e.g., menu selection or to answer onscreen question), or touch letters and numbers to type.

Touch and hold Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a pop-up menu for customizing the Home screen, touch an empty area on the Home screen until the menu pops up.

 
Drag Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can drag or slide the screen up or down to scroll a list, or browse through the different Home screens by swiping from left to right (and vice versa).

Double-tap Double-tap to zoom a web page or a map. For example, quickly double-tap a section of a web page to zoom that section to fit the width of the screen. You can also double-tap to control the zoom in Bing Maps and in other applications.

Pinch-to-Zoom Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the browser, a map, or pictures.

Rotate the screen From many applications, the orientation of the screen rotates with the phone as you turn it from upright to sideways and back again.

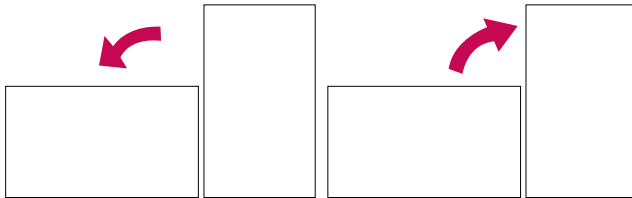

Rotate the phone counter-clockwise for landscape orientation.

 
Rotate the phone clockwise for portrait orientation.

The Basics

Text Input Methods

On-screen Keyboard

You can easily enter text using the on-screen keyboard. The on-screen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

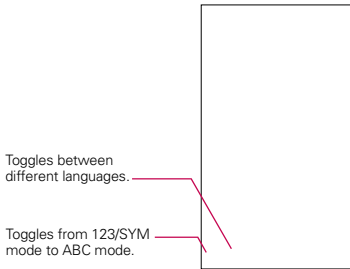

Typing tips	
Enter other characters	From the numbers keyboard, touch . Touch to return to the numbers keyboard.
Enter one capital letter	Touch Shift .
Enter all capital letters	Touch Shift twice. Touch again to revert to lowercase.
Cut or copy selected text	Tap the text to highlight it. Then touch and hold the text, then touch Cut or Copy .
Paste cut or copied text	Touch and hold the location to paste the text, then touch Paste .
Delete a character (hold to delete faster)	Touch Delete .

 
Text input settings

To change your text entry settings and see the dictionary of terms you've used, from the Home screen, touch the **Apps Key** > **Settings** > **Language & keyboard**.

- To change the default language, touch **Select language**.


Applications: How to View, Open and Switch

All of the applications on your phone, including any applications that you downloaded and installed from Android Market™ or other sources, are grouped together on the Apps screen, which you access from your Home screen. If you have more applications than can fit on the Apps screen, you can slide the screen up or down to view more.

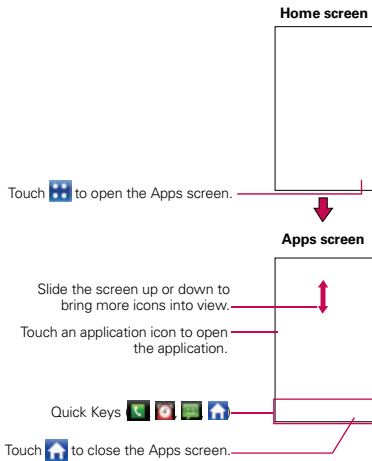



Opening and Closing the Apps screen

Opening the Apps screen

With your VS920, it's easy to access the Apps screen no matter what feature you're currently using. Simply touch the **Apps Key** .

Closing the Apps screen



To manually close the Apps screen, touch the **Home Key**  or touch Home .

NOTE The Apps screen closes automatically when you touch an icon to open its application. Dragging an icon onto your Home screen also closes the Apps screen automatically.



Customizing the Apps screen

The items on the Apps screen are listed alphabetically within each application category. You can customize the Apps screen by moving the position of applications so that you don't have to scroll the screen up to access the applications you use most often. You can also add additional categories to the screen to organize your files.

Moving application positions

1. From the Home screen, touch the **Apps Key** .
2. Touch the **Menu Key**  > **Manage app**.
3. Touch and hold the application icon and drag it to the position you want, then lift your finger. Application icons to the right of the position shift accordingly.

Adding a category

1. From the Home screen, touch the **Apps Key** .
2. Touch the **Menu Key**  > **Manage category** > **Add**.
3. Enter the category name, then touch **Save**.

Opening and Switching Applications


Multi-tasking is easy with Android™ because open applications keep running even when you open another application. There's no need to quit an application before opening another. You can use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

Opening an application


- ▶ Open an application simply by touching its icon on the screen.

TIP! You can customize your Home screen with the application icons you use most often. Applications are located on the Apps screen, but you can copy any application icon to your Home screen for faster access. No matter where the icon is, on the Apps screen or your Home screen, just touch it to open and use it.



Opening multiple applications

1. Touch an application icon to open it.
2. Touch the **Home Key** .

NOTE If the application icon you want is on your Home screen, simply touch the icon to open and use it.

3. Touch the **Apps Key** .
4. Touch the icon for the other application you want to open.

Switching between multiple applications

1. Touch and hold the **Home Key** .
A screen with the icons of applications that you've used recently will appear.
2. Touch the application icon you want to open or touch the **Back Key**  to return to the current screen.

The Basics

— Touch an icon to open an application you've used recently.

Adding application icons to the Home screen



Customize your Home screen with the applications you use most often.

1. Open the Apps screen.
2. Touch and hold the application icon you want to add to your Home screen. Your Apps screen will close so that you can place the icon on the Home screen.
3. Lift your finger to place it or drag the icon to where you want it on the screen, then lift your finger.

Working with Menus

There are two kinds of Android menus: Options menus and Context menus.

Options menus

Options menus contain tools that apply to the activities of the current screen or application, not to any specific item on the screen. To open the available options menu, touch the **Menu Key** . Not all applications have Options menus; if you touch the **Menu Key**  on a screen that has no Options menu, nothing will happen.

Some applications have more Options menu items than can fit in the options menu. To view the additional menu items, touch **More**.

— Touch **More** to view additional menu items.

Context menus

Context menus contain options that apply to a specific item on the screen. To open a Context menu, touch and hold an item on the screen. Not all items have Context menus. If you touch and hold an item that has no Context menu, nothing will happen.

When you touch and hold certain items on a screen, a Context menu opens.




Managing Notifications

Notification icons report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are in a call. When you receive a notification, the notification icon will be displayed in the Status Bar. You can open the Notifications panel to view a list of all recent notifications. Depending on your settings, you may hear a notification sound and/or the phone may vibrate.

 
To open the Notifications panel

- ▶ Touch and drag the Status Bar to the bottom of the screen.

OR

- ▶ From the Home screen, touch the **Menu Key**  > **Notifications**.

The Notifications panel displays your wireless provider and a list of your current notifications, organized into ongoing and event-based notifications.



— Touch a notification to open it.

To respond to a notification

1. Open the Notifications panel. Your current notifications are listed in the panel, each with a brief description.
2. Touch a notification to view it.


The Notifications panel will close and the application that corresponds to your response will open. For example, new voicemail notifications dial your voicemail box, and Gmail notifications open the Gmail application so you can read your new messages.

To clear all notifications

1. Open the Notifications panel.
2. Touch the **Clear** button.

All event-based notifications will be cleared; ongoing notifications will remain in the list.

To close the Notifications panel

Touch and drag the tab at the bottom of the Notifications panel to the top of the screen or just press the **Back Key** .

The panel will also close when you touch a notification.

Searching Your Phone and the Web


You can search for information on your phone and on the web by using the Bing search application.

 
Some applications, such as Gmail, Contacts, and Browser have the ability to search contents within those specific applications.


You can conduct the search by typing in the search terms or saying what you're looking for. Typing can be useful because the search application can provide suggestions so you don't necessarily have to type out your full request.


Phone and Web search using text entry

1. Touch the **Search Key** .

When you touch the **Search Key**  on the Home screen or in other applications that support this, the Quick Search Box will open automatically.





In some applications, such as Gmail, Contacts, and Browser, the application's own search box opens when you touch the **Search Key** . This is indicated by the application's icon on the left side of the search box.

No matter what application you're working in (except for Camera), touching the **Search Key**  will open the Quick Search Box.

2. Enter the text you're searching for in the Quick Search Box.

—As you type, search results from your phone, previous search terms, and web search suggestions appear. Touch an item to activate that search result.



You can use the Search preferences to configure some aspects of Bing web search (for example, whether it makes suggestions below the Quick Search Box as you type), and what phone features you want to include in searches. To access Bing settings, open the Bing application and touch the **Menu Key**  > **Settings**.

3. Touch  to search for the entered terms.

Locking the Screen

You can lock your screen so that only you can unlock it to make calls, access your data, buy applications, and so on.

Setting an Unlock Pattern, PIN, or Password for the First Time

1. Touch the **Apps Key**  > **Settings**  > **Location & security**.
2. Touch **Set up screen lock** (under the **Screen unlock** section of the settings).
3. Touch **Pattern, PIN, or Password**.



Pattern: The first time you set an unlock pattern, you will see a tutorial with instructions on how to create it. Read the tutorial and touch **Next** (twice). Draw your pattern (connect at least 4 dots) and touch **Continue**. Then redraw your pattern and touch **Confirm**.

PIN: Enter a PIN (at least 4 digits) and touch **Continue**. Reenter your PIN and touch **OK** to confirm it.



Password: Enter a password (at least 4 characters) and touch **Continue**. Reenter your password and touch **OK** to confirm it.

From then on, any time you wish to turn the phone on or unlock the screen, you will need to draw your unlock pattern or enter your PIN or password to unlock the screen.

Changing Your Unlock Pattern

1. Touch the **Apps Key**  > **Settings**  > **Location & security**.
2. Touch **Change screen lock** (under the **Screen unlock** section).
3. Draw your current unlock pattern.
4. Touch **Pattern** to change it (or touch **None** to remove it).
5. You're prompted to draw and redraw your new pattern.

Using a PIN or Password to Lock the Screen

1. Touch the **Apps Key**  > **Settings**  > **Location & security**.
2. Touch **Set up screen lock** (under the **Screen** unlock section).
3. Touch **PIN** to lock the screen with a number sequence or touch **Password** for an alphanumeric lock sequence.
4. You're prompted to enter and reenter the lock sequence.


From then on, you will need to enter the sequence and touch **OK** to unlock the screen.

- NOTES**
- You have 5 opportunities to enter your unlock pattern, PIN or password. If you used all the 5 opportunities, you can try again after 30 seconds.
 - When you can't recall your unlock pattern:
 - If you've created a Google Account on the phone, touch **Forgot pattern?**. Then you are required to sign in with your Google Account to unlock your phone.
 - If you haven't created a Google Account on the phone, you need to perform a factory reset (Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset).
1. Turn the power off.
 2. Touch and hold the following keys at the same time for 12 seconds: **Power/Lock Key** + the down **Volume Key**.
 3. Release the keys when you see the screen message "Permanently Erase User Data & Reset Settings? Press the Power key to confirm and any other key to cancel."
 4. Press the **Power/Lock Key** to confirm (or press any other key to cancel).
When you press the **Power/Lock Key** to confirm, a pop-up appears asking "Are you sure you want to continue with erase?".
 5. Press the **Power/Lock Key** and your phone will be restored to the factory settings.
To cancel, press any other key.

Customizing the Home Screen

You can personalize your Home screen by adding application icons, shortcuts, widgets, and other items to any Home screen pane. You can also change the wallpaper.

To add an item to the Home screen

1. Go to the Home screen pane where you want to add the item.
2. Touch the **Menu Key**  and touch **Add**. Or, just touch and hold an empty spot on the Home screen pane.

NOTE If there is no available space on a particular Home screen pane, **Add** will not be available; you must delete or remove an item before you can add another item. In this case, you have the option of switching to another Home screen pane.

3. In the menu that opens, touch the type of item to add.

You can add the following types of items to the Home screen:

Widgets Add any of a variety of widget applications to your Home screen, including a clock, a music player, a picture frame, Bing search bar, a power manager, a calendar of upcoming appointments, a News and Weather widget, and more. Note that more widgets can also be found on Android Market™.

Shortcuts Add shortcuts to applications, a bookmarked web page, a favorite contact, a destination in Bing Maps, a Gmail label, a music playlist, and more. The shortcuts available depend on the applications you have installed.

Folders Add a folder where you can organize other Home screen shortcuts and icons, or folders that contain all your contacts, contacts with phone numbers, or starred contacts. Your folders' contents are kept up-to-date automatically.


To move an item on the Home screen

1. Touch and hold the item.
2. Drag the item to a new location on the screen.
Pause at the left or right edge of the screen to drag the item onto the next available Home screen pane.
3. When the item is where you want it, lift your finger.

To remove an item from the Home screen

1. Touch and hold the item (note that the Quick Keys change to an icon of a trash can).
2. Drag the item to the trash can icon.
3. When the icon turns red, lift your finger.

To change the Home screen wallpaper

1. From the Home screen, touch the **Menu Key**  > **Wallpaper**.
You can also touch and hold an empty spot on the Home screen and then touch **Wallpapers** in the menu that opens.
2. Touch **Wallpapers** or any wallpaper that is displayed.
 - ▶ Touch **Gallery** to use a picture you've taken with your camera as a wallpaper. You can crop the picture before setting it as your wallpaper.
 - ▶ Touch **Live Wallpapers** to open a list of animated wallpapers installed on your phone.
Live wallpapers can change according to the time of day, respond to touching the screen, tell the time, or offer other information.
 - ▶ Touch any available wallpaper and it will automatically be applied to your phone.
3. Touch **Set wallpaper** or **Save** (if necessary).

To rename a folder

1. Touch the folder icon to open it.
2. Touch and hold the folder window's title bar.
3. Enter the new folder name.
4. Touch **OK**.

Connecting Quickly With Your Contacts

As you build up your list of contacts on your phone, you can use Quick Contact for Android to quickly chat, email, text message, place a call, or to locate your contacts. Quick Contact for Android is a special set of icons that you can use to quickly and easily connect to a contact.

- ▶ Open your Contacts list and touch the contact's picture. A bubble will open with the available options, displayed as icons. This is the Quick Contact bubble. Depending on the contact information saved, the available actions will be displayed above the name.

- ▶ Touch a Quick Contact icon to communicate with the contact. Depending on the icon you've touched, a different application will open.






If you add a shortcut for a contact to your Home screen, you will be able to use it to open Quick Contact for that contact.

Connecting to Mobile Networks

When you buy your phone and sign up for service, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data.

Different locations may have different mobile networks available.

Initially, your phone is configured to use the fastest mobile network available for data. You can also configure your phone to access a different set of networks entirely, or to behave in specific ways when roaming.



	Connected to the 4G network (LTE)
	Connected to the 3G network (EVDO revA)
	Connected to a 2G network (1x)
	The more bars that are lit, the stronger the wireless signal
	Connected to another wireless service provider's network (roaming)

The icons in the Status Bar indicate which kind of data network you're connected to and the network signal strength.

When connected to slower networks, you may want to postpone using your phone for data-intensive tasks until you are connected to a faster network again or find a Wi-Fi network to connect to.

To disable data when roaming

You can prevent your phone from transmitting data over other carriers' mobile networks when you leave an area that is covered by your carrier's networks. This is useful for controlling expenses if your cell plan doesn't include data roaming.

1. Touch the **Apps Key**  > **Settings**  > **Wireless & networks** > **Mobile networks** > **Global data roaming access**.
2. Touch **Global data roaming** to remove the checkmark from the box. With **Global data roaming** unchecked, you can still transmit data with a Wi-Fi connection.

 
Connecting to Wi-Fi Networks


Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

To use Wi-Fi on your phone, you must connect to a wireless access point, or “hotspot.” Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.



Turn off Wi-Fi when you’re not using it, to extend the life of your battery.

The following Status Bar icons indicate your Wi-Fi status.



When you connect to a Wi-Fi network, the phone obtains a network address and other information it needs from the network, using the DHCP protocol. To configure the phone with a static IP address and other advanced settings, from **Wi-Fi settings** touch the **Menu Key**  > **Advanced**.

To turn Wi-Fi on and connect to a Wi-Fi network

1. Touch the **Apps Key**  > **Settings**  > **Wireless & networks** > **Wi-Fi settings**.
2. If the Wi-Fi box is not checkmarked, touch **Wi-Fi** to turn it on and scan for available Wi-Fi networks.
3. Touch a network to connect to it.
 - If the network is open, you will be prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you will be prompted to enter a password (Ask your network administrator for details).

- When you're connected to a network, you can touch the network name in the Wi-Fi settings screen for details about the speed, security, address, and related settings.

To receive notifications when open networks are in range

By default, when Wi-Fi is on, you receive notifications in the Status Bar when your phone detects an open Wi-Fi network.

1. Turn on Wi-Fi, if it's not already on.
2. From the Wi-Fi settings screen, touch **Network notification** to checkmark the box. Touch again to remove the checkmark and stop receiving notifications.

To add a Wi-Fi network

You can add a Wi-Fi network so the phone will remember it, along with any security credentials, and connect to it automatically when it is in range. You can also add a Wi-Fi network manually if it does not broadcast its name (SSID) or if you want to add a Wi-Fi network when you are out of its range. To add a secured network, you need to contact the network's administrator to obtain the password or other required security credentials.

1. Turn on Wi-Fi, if it's not already on.
2. From the Wi-Fi settings screen, touch **Add Wi-Fi network**.
3. Enter the **Network SSID** (name) of the network.
If the network is secured, touch **Security** and touch the type of security deployed on the network.
4. Enter the required passwords and security credentials.
5. Touch **Save**.

The phone will connect to the wireless network. Any credentials that you entered are saved, so you are connected automatically the next time you come within range of this network.

Connecting to Networks and Devices

To forget a Wi-Fi network



You can make the phone forget about the details of a Wi-Fi network that you added. For example, if you don't want the phone to connect to it automatically or if it's a network that you no longer use.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, touch and hold the name of the network that you want to forget.
3. Touch **Forget network**.

Media Sync

By using programs like Windows Media Player, you can easily sync multimedia files from the PC to the phone.

Follow the process below to connect to Media Sync:

1. Connect the USB cable and touch the **Apps Key**  > **Music** > **Menu Key**  > **More** > **Sync**.

OR

From the Home screen, drag the Notifications panel down and touch **USB connected** > **Media Sync** > **Done**.

Follow the process below to disconnect from Media Sync:

1. Drag the Notifications panel down and touch **USB Connected** > **Internet connection** or **Charge Only**.
2. Touch **Done** to confirm the mode you want to use.

3. Disconnect the USB cable from the phone.

NOTE The microSD card must be inserted in the phone and it's recommended to use the USB cable that is supplied by LG. If the microSD card is from another device, it's recommended to format it before using it (but it's not necessary).

USB Autorun


USB Autorun is a feature that allows your VS920 to connect to a PC using a USB cable and set it up on a PC without a physical CD-ROM.

- ▶ Automatically installs the LG USB Modem driver.
- ▶ Allows the phone to be used as Mass Storage when a microSD card is present in the VS920. It allows transfer of unprotected content from the phone to the PC and vice versa.

NOTE The VS920 has an internal memory and can use a removable microSD card to store user content, such as photos, videos, and voice recordings.

If the USB connection mode is set to Mass Storage when connecting the phone to a PC via USB cable, two removable disk drives will be displayed on your PC, one for the internal memory and another for the microSD card (if installed). You can copy files to and from both disk drives.

To select USB mode for Autorun

1. Touch the **Apps Key**  > **Settings** > **Connectivity** > **Default connection mode**.
2. Touch **Mass Storage** to connect to the PC for Autorun.
3. Touch **Charge Only** to use only the charging function and not the USB function.

- NOTES**
- USB Autorun only works with Windows® XP, Windows 7, and Vista™ operating systems.
 - Log on to the PC as Administrator. Non-Administrator accounts have insufficient privilege to install the USB Modem driver and don't run the Autorun feature.
 - Do not unplug the USB cable during Autorun.
 - If Autorun doesn't function properly, unplug and plug the USB cable to set Mass Storage mode.

Autorun automatically installs the USB device driver for every USB mode.

Connecting to Networks and Devices

Internet Connection Mode

Autorun may automatically use Internet Connection mode in certain circumstances.

- ▶ Autorun automatically switches to Internet Connection mode if the connection fails while syncing or connecting.

Always ask


You can choose to be asked to confirm the USB connection when connecting to a computer.

When **Always ask** is checkmarked, the USB selection window is displayed.

Autorun is not available when:

- ▶ Phone is booting (powering up).
- ▶ PC operating system is not set to Autorun (automatic execute command).

To change the setting while Autorun is running:

You can change the settings while Autorun is running. Touch the **Apps Key**  > **Settings** > **Connectivity** > **Default connection mode** > **Mass Storage**.

NOTE Be sure to checkmark the box **Always ask** if you want to be asked to confirm the USB connection mode when the phone is connected to a computer.

Using the Status Bar to change the settings

The Status Bar shows the current USB connection mode so you can easily open the Status Bar and change the settings as needed.

When connected via USB, the current USB connection mode also appears on the Notifications panel. Touch the connection setting to display a screen where you can change the USB connection mode.

NOTE If the **Always ask** checkbox is marked, the screen is only provided during USB connection, but is not provided in the notification area.

If the default sync mode is Media Sync, the sync connection is listed separately in the Notifications panel. Select it to display a screen that asks if you want to disconnect. If you choose to disconnect, the connection changes to Internet Connection mode.

Step 1. Connecting the phone to PC

- ▶ Connect your phone to your PC with a compatible USB cable (supplied). LG Autorun starts automatically.
- ▶ Click 'I accept the terms in the agreement' and 'Yes'.

- NOTES**
- Autorun is only supported for Windows® XP, Windows® Vista, Windows®7, Mac OS X® above v10.5.
 - The USB Autorun feature works only under an Administrator account. The installer has insufficient privileges under a Non-Administrator account. Log on as Administrator. The device is switched back to the user set mode within 30 seconds.

Step 2. Downloading the LG USB Modem Driver.

- NOTES**
- If a previous version of the LG USB Modem driver is installed in the computer, it will automatically be updated to the recent version.
 - If a recent version of the LG USB Modem driver is installed in the computer, LG Autorun skips 'Step 2.'

Connecting to Networks and Devices

Step 3. Installing the LG USB Modem Driver.

Step 4. Installing the Utility Application.

Launching V Cast Media Manager

After installing the utility application, you will see the tray icon “VZW Utility Application - LG” on your PC. If you right click on the tray icon with the mouse, you will see the following:



When my phone is in any mode
Only when my phone is in V Cast Media Manager Compatible Mode

- ▶ Downloading or running V Cast Media Manager works in any of the connection modes if **When my phone is in any mode** is selected.
- ▶ Downloading or running V Cast Media Manager works only in Mass Storage mode when **Only when my phone is in V Cast Media Manager Compatible Mode** is selected.
- ▶ Downloading or running V Cast Media Manager will not work if **Do not launch V Cast Media Manager when I connect my phone** is selected.

Make Your Device a 4G Mobile Hotspot

4G Mobile Hotspot can share the phone's 4G data connection with any Wi-Fi capable devices.

WARNING!

 
There are security risks associated with creating a Wi-Fi network open to the public. It is highly recommended that you take steps to protect your Wi-Fi network from unauthorized access. To add encryption to your Wi-Fi hotspot:

1. Touch the Apps Key  > 4G Mobile Hotspot 

Connecting to Networks and Devices

2. Touch the **4G Mobile Hotspot** checkbox to enable this feature.

3. Read the disclaimers and Help information, then touch **OK**.



4. Your portable hotspot is now created.

You can use this menu to enable and disable the connection. Once the connection is active, go to the device you wish to connect and configure its wireless connection to the Network SSID for your Android device and input the password (if you are using WPA2 PSK). You will now have wireless access on your device.

NOTE WEP is the weakest option because it's highly vulnerable to hacking. WPA2 is recommended by the IEEE.



microSD Card

Unmounting and removing the microSD Card

To safely remove the microSD card from your device, first you need to unmount the microSD card before removing it from the phone.

WARNING!



On the Android OS 2.2, you can download applications from Android Market and can store them on the microSD card as well as on the device. Therefore, skipping the unmount procedure can cause a serious error between the microSD card and the device. In the worst case, the microSD card can become corrupted or damaged.

1. Touch the **Apps Key**  > **Settings**  > **SD card & phone storage** > **Unmount External SD card**. Now you can safely remove the microSD card.
2. Turn off the phone, remove the back cover, and remove the battery.
3. Gently push the exposed edge of the microSD card in with your fingertip to release it from the slot.
4. Carefully pull the microSD card out of the slot.

NOTE You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing, or handling them.



microSD Card Settings

Viewing Memory in the microSD Card

1. Touch the **Apps Key**  > **Settings**  > **SD card & phone storage**.
2. Review the available information.
 - The storage capacity page is divided into three sections: SD card, Internal Memory, and Internal phone storage.

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Touch the **Apps Key**  > **Settings**  > **SD card & phone storage**.
2. Touch **Unmount External SD card** to release the microSD card from device use. The icon appears within the Notifications panel to indicate an unmounted microSD card.
3. Once released, touch **Format External SD card** > **Format SD card** > **Erase everything**.

microSD Card

- Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).

NOTE The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Connecting Your Device to Your Computer


Before using your device's mass storage capabilities, you need to prepare your device's data services to synchronize with your desktop or laptop computer. Once you have connected the device to the computer, you can transfer your data to or from the device memory.

To connect your device to a computer via USB:

1. Use the USB cable that came with your phone to connect the phone to a USB port on your computer.
2. Open the Notifications panel and then touch **USB connected**.
3. Touch the connection mode you want to use to connect to the PC. Choose from the following options: **Charge Only**, **Mass Storage**, **Media Sync**, or **Internet Connection**.

Device memory

The VS920 has 12GB of internal memory where you can store user content such as photos, videos, voice recordings, etc. In addition, it also has removable memory in the form of a 16GB microSD card. Most applications allow you to choose where the user content will be saved either in the internal memory or to the removable microSD card.

For example, in the **Camera** application, touch the **Settings icon**  > **SD card & phone storage** > **Internal memory** or **SD card**. When viewing the **Gallery** application, photos saved in the internal memory are stacked separately from those saved to the SD card.


Using Mass Storage mode

When you connect the phone and PC using a USB cable and set your device's USB connection mode to Mass Storage, you will see two removable disks on the PC. You can copy files to/from both the internal memory and the removable SD card.

Placing and Ending Calls

 
You can place calls using the **Phone** application. Calls can be manually dialed using the **Phone** tab. You can also dial from your phone's memory using the **Call log** tab, the **Contacts** tab, or the **Groups** tab.




To open the Phone application

- ▶ From the Home screen, touch the **Phone Key**  in the Quick Keys bar.

To place a call by dialing

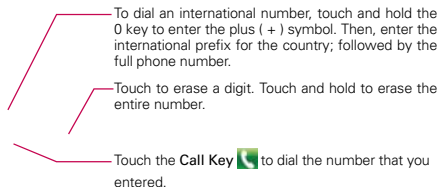

1. Open the **Phone** application.



2. Touch the keys on the dialpad to manually enter a phone number.
 - If you enter a wrong number, touch the **Delete Key**  to erase digits one by one.
 - To erase the entire number, touch and hold the **Delete Key** .
 - To dial an international number, touch and hold the **0** key to enter the plus (+) symbol. Then, enter the international prefix for the country; followed by the full phone number.
3. Touch the **Call Key**  to dial the number that you entered.


Calls

- You can use other phone features while the call is underway. If you open another application, the Call icon appears in the Status Bar for the duration of the call.
- Press the **Volume Keys** to adjust the call volume.
- Use the on-screen buttons to enter additional numbers, place the call on hold and take an incoming call, add another call, use the speakerphone, end the call, and other options.

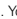NOTE If you opened other applications while on a call, you'll need to return to the Call screen to end the call. You can touch the **Home Key** , then the **Phone Key**  or drag the Notifications panel down and touch the Call icon.

Airplane mode

Some locations may require you to turn off your phone's wireless connections by placing your phone in Airplane mode.


1. Press and hold the **Power/Lock Key** .
2. Touch **Airplane mode**.

NOTE The Wireless & networks setting also has a checkbox to enable or disable Airplane mode.

Answering or Rejecting Calls

When you receive a phone call, the Incoming call screen opens with the caller ID and any additional information about the caller that you have saved in the Contacts list. All incoming calls are recorded in the Call log.

To answer a call

- ▶ If the screen is unlocked, simply touch the **Answer Key** .
- ▶ If the screen is locked, slide the screen up to answer.
- ▶ If you were already on a call, the first call is placed on hold while you answer the new call.
- ▶ To silence the incoming call ringer, press the **Volume Keys**.

Unlocked Screen

Locked Screen

Touch the **Send msg** key to send a quick message to the caller and forward them to your voicemail.



Touch the **Answer Key** to answer the call.

Touch the **Ignore Key** to send the caller directly to your voicemail.



Calls

To decline a call and divert it to voicemail

- ▶ If the screen is unlocked, simply touch the **Ignore Key** .
- ▶ If the screen is locked, slide the **Ignore Key**  to the left.
- ▶ The caller is sent directly to your voicemail box to leave a message.

Unlocked Screen

Locked Screen





Touch the **Ignore Key** to decline the call and send the caller directly to your voicemail box to leave a message.

- ▶ To silence the ringer, press the **Volume Keys**.

Working with the Call Log


The Call log is a list of all the calls you've dialed, received, or missed. It offers a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the Call log

- ▶ Touch the **Phone Key**  (from the Quick Keys bar) > the **Call log** tab  at the top of the screen.

Calls are listed in the **Call log** tab. The most recent calls are located at the top of the list. Scroll down to see older entries.

To dial a number in the Call log

- ▶ From the Call log, touch the **Call Key**  at the right of the call entry. You can also touch and hold the entry to open a menu with more options to communicate with that contact in other ways.

To add an entry's number to your Contacts




1. Touch and hold the call entry.
2. Touch **Add to contacts**.
3. Touch **Create new contact** or touch **Add to the existing** and choose an existing contact to add the new number to.

To take other actions on a Call log entry

- ▶ Touch a Call log entry to open a screen from where you can call the contact, send the contact a message, add the number to your Contacts list, and learn more about the original call.
- ▶ Touch and hold a Call log entry to open a menu where you can call the contact, view contact information, edit the number before you redial, and more.

Calls

To clear the Call log

- ▶ Touch the **Phone Key**  (from the Quick Keys bar) > the **Call log** tab  at the top of the screen. Touch the **Menu Key**  > **Delete all**. Or touch **Multiselect**, choose the call entries you wish to delete, then touch **Delete** > **OK**.

You can also touch and hold an entry in the log. In the menu that opens, touch **Remove from call log** > **OK**.


Calling Your Contacts

Instead of manually dialing phone numbers using the dialpad, you can use your Contacts list to dial quickly and easily.


You can also quickly call a contact by using Quick Contact.

If you have contacts on the web, they're synchronized with your phone when you first synchronize to your Google™ Account.

To call a contact

1. Touch the **Contacts Key**  from the Quick Keys bar.
2. Touch the contact you wish to call.
3. Touch the contact's phone number you want to call.

To call a favorite contact

1. Touch the **Contacts Key**  from the Quick Keys bar, then touch the **Groups** tab.
2. Touch **Favorites** and then touch the contact you wish to call.
3. Touch the contact's phone number you want to call.

Voice Dialer

You can use the Voice Dialer application to place a phone call by speaking the name of a contact or a phone number.

To place a call by speaking

1. Touch **Voice Dialer**  in the Apps screen or on the Home screen.

If you have a Bluetooth headset that supports “voice-recognition” or “voice dialing,” you may be able to open Voice Dialer by pressing your headset’s main button or in some other way, and dial by voice using your headset. For details, see the documentation that came with your headset.

2. Say “Call” followed by the name of the contact or say “Dial” followed by a phone number.

Options During a Call

Touch to turn the speakerphone on or off. The Speaker Key lights up to indicate that the speakerphone is on.

WARNING!

To avoid damage to your hearing, do not hold the phone against your ear when the speakerphone is turned on.

Touch to mute the microphone during a call. The Mute Key lights up to indicate that the microphone is muted.

Touch to switch between a Bluetooth headset and the phone.

To mute the microphone during a call

- ▶ Touch the **Mute Key**.

The **Mute Key** lights up to indicate that the microphone is muted. The Mute icon will appear in the Status Bar to remind you that the microphone is turned off.

When viewing the in-call screen, you can unmute the microphone by touching the **Mute Key** again.

The microphone is unmuted automatically when the call ends.

To turn the speakerphone on or off

- ▶ Touch the **Speaker Key**.

The **Speaker Key** lights up to indicate that the speakerphone is on. The Speaker icon will appear in the Status Bar and the sound from your call is played through the phone's speaker.

When viewing the in-call screen, you can turn the speakerphone off by touching the **Speaker Key** again.

The speaker is turned off automatically when the call ends.

WARNING!

To avoid damage to your hearing, do not hold the phone against your ear when the speakerphone is turned on.

To switch between a Bluetooth headset and the phone

When a Bluetooth headset is paired and connected to your phone, you can conduct calls on the headset for hands-free conversation. During a call, you can opt to use the Bluetooth headset or just the phone.

When using the Bluetooth headset during a call, the Ongoing Call notification icon is blue in the Status Bar (the icon is green when using the phone).

- ▶ Touch the **Bluetooth Key** to switch the call from the headset to the phone, or vice versa.

Managing Multiple Calls


Contact your wireless service provider to learn whether they support conference calls and how many participants you can include.

To switch between current calls

- ▶ Touch the **Swap Key** .

The current call will be placed on hold and you will be connected with the other call.




Calls




Touch to swap calls.
The current call will be
placed on hold and you
will be connected with the
other call.

To set up a conference call

Contact your wireless service provider to learn whether they support conference calls and how many participants you can include.

1. Place a call to the first participant.
2. When you're connected, touch **Contacts**  or **Dialpad** .
3. Choose a contact to call from your Contact list or enter the number on the dialpad.
4. After you're connected, touch the **Merge calls Key** . The participant is added to the conference call.




Listening to Your Voicemail

When you have a new voicemail message, the **Voicemail notification** icon  appears in the Status Bar. If you have not set up your voicemail number, or if you need to change it, you can do that in the Call settings.



To listen to your Voicemail

- ▶ Open the Notifications panel and touch **New voicemail**.



OR

- ▶ Touch the **Home Key** , touch the **Phone Key**  from the Quick Keys bar, then touch the **Voicemail Key** . Typically, your carrier's voicemail system guides you through the process of listening to and managing your voicemail. The first time you call your voicemail, it also guides you through the process of recording greetings, setting a password, etc.

To set up your Voicemail

1. Touch the **Phone Key**  from the Quick Keys bar on the Home screen or Apps screen.
2. Touch  to dial your voice mailbox.
3. If you hear a system greeting, touch # to interrupt it, if applicable.
4. Follow the setup tutorial.
5. Select a password.
6. Record a voice signature and greetings for your voice mailbox.

To access your voice mail from your wireless device


1. Touch the **Phone Key**  from the Quick Keys bar on the Home screen or Apps screen.
2. Touch  to dial your voice mailbox. If you hear a system greeting or your own greeting, touch # immediately to interrupt the system greeting and follow the prompts.
3. Follow the prompts to enter your password and retrieve your messages.

Search

Bing Search

With Bing Search, you get one-touch access to Bing's search, maps, news, images, and videos, all in one package. The image search, for example, features endless scrolling — no more clicking through multiple pages of images to find what you want. The **Movies** tab displays all the movies playing near you, along with their play times and reviews.

Setting Web and Quick Search Box Options

To change the settings for Bing Search, from the **Bing** application, touch the **Menu Key**  > **Settings** for the following options:

SafeSearch Filter sexually explicit images, but not text, from your search result.

Distance Show distance in miles or kilometers.

Daily image Show the daily image on the homepage.

Location Use your location to find results that are close by.

Search suggestions Show search suggestions as you type.

Bing suggestion providers Show suggestions from Bing providers.

Widget searchable items Show suggestions from searchable items installed on your phone.

Clear history Removes any recent searches and locations.

Restore defaults Restores all Bing settings to the default values.

Reset This allows you to remove recent searches, favorites, locations and changes to Bing settings.

Browser


The Browser feature allows you to access the internet from your Verizon Wireless device. Access and selections within this feature are dependent upon your service provider. For specific information on Browser access through your phone, contact your service provider.


Internet


Learn to access and bookmark your favorite web pages.

- NOTES**
- You may incur additional charges for accessing the web and downloading media. For details, contact your service provider.
 - Available icons may vary depending on your region.




Browse web pages

1. Touch the **Apps Key**  > **Browser** . To access a specific web page, touch the URL input field, enter the web address (URL) of the web page, and touch .
2. Navigate web pages using the following:
















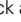








URL Input Field 
Touch here to enter a web address for the web page you wish to access.



 **Voice Search**
Touch here to search by voice.

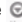While browsing the web page, use the following options:

- ▶ To zoom in or out, double-tap the screen. You can also use the pinch-to-zoom method. Place your two fingers on the screen and slowly pinch or spread them apart.
- ▶ To open a new window, touch the **Menu Key**  > **New window** .
- ▶ To view the list of bookmarks, touch **Bookmarks**  next to the URL field. You can also add, edit, or delete a bookmark from this menu.




Web

- ▶ To bookmark the current web page, touch **Bookmarks**  > **Add**. Enter the name for the bookmark and touch **OK**.
 - ▶ When a web page finishes loading, the RSS Indicator will appear if an RSS feed is available. Touch the **Menu Key**  > **Add RSS Feed**  and select the feed you want to save.
 - ▶ To view the currently active windows, touch the **Menu Key**  > **Windows** . You can open multiple pages and switch back and forth between them.
 - ▶ To reload the current web page, touch the **Menu Key**  > **Refresh** . The Refresh menu appears after the web page finishes loading.
 - ▶ To stop loading a web page, touch the **Menu Key**  > **Stop** . The Stop menu appears while a web page is loading.
 - ▶ To go to previous page, touch the **Back Key** .
 - ▶ To go to a next page in history, touch the **Menu Key**  > **Forward** .
 - ▶ To search for text on the web page, touch the **Menu Key**  > **More**  > **Find on page**.
 - ▶ To select text on the web page, touch the **Menu Key**  > **More**  > **Select text**. Highlight the text you want with your finger. The highlighted text is copied to the clipboard and you can paste it anywhere that allows text to be entered.
 - ▶ To view the web page details, touch the **Menu Key**  > **More**  > **Page info**.
 - ▶ To set homepage, touch the **Menu Key**  > **More**  > **Set home page**.
- NOTE** When you are in a secure page, you can see the certificate of the current page by touching the **View certificate** button on Page info.
- ▶ To send the web address (URL) of the web page to others, touch the **Menu Key**  > **More**  > **Share page**.
 - ▶ To view the download history, touch the **Menu Key**  > **More**  > **Downloads**.

- ▶ To customize the Browser settings, touch the **Menu Key**  > **More**  > **Settings**.

Bookmark your favorite web pages

If you know the web address of the web page, you can manually add a bookmark. To add a bookmark:




1. Touch the **Apps Key**  > **Browser** .
2. Touch **Bookmarks**  next to the URL field.
3. Touch **Add**.
4. Enter a page title and a web address (URL).
5. Touch **OK**.

From the bookmark list, touch and hold a bookmark and use the following options:

- ▶ To open the web page in the current window, touch **Open**.
- ▶ To open the web page in a new window, touch **Open in new window**.
- ▶ To edit the bookmark details, touch **Edit bookmark**.
- ▶ To add the bookmark shortcut to one of the Home screen panes, touch **Add shortcut to Home**.
- ▶ To send the web address (URL) of the web page to others, touch **Share link**.
- ▶ To copy the web address (URL) of the web page, touch **Copy link URL**.
- ▶ To delete the bookmark, touch **Delete bookmark**.
- ▶ To use the web page as your Browser homepage, touch **Set as homepage**.

Bing Maps









To search for a location

1. Touch the **Apps Key**  > **Bing**  > **Maps**.
2. Touch the search box at the top of the screen.
3. In the search box, enter the place you're looking for. You can enter an address, a city, or a type of business or establishment. For example, "theater in New York".
4. Touch the **Search Key** .

Orange markers indicate search matches on the map.

You can touch a marker to open a balloon that contains a label. Touch the balloon to open a screen with more information about the location, as well as options for obtaining directions.

To get directions

1. Touch the **Apps Key**  > **Bing**  > **Maps**.
2. Touch the **Menu Key**  > **Directions**.
3. Enter a starting point in the first text box and your destination in the second text box. You can also select an address from your Favorites, contacts or history.
To reverse directions, touch the **Reverse icon** .
4. Touch the **Car icon**  for driving directions or the **Walking icon**  for walking directions.
5. Touch **Go**.
6. Choose how to view directions on **Bing** from the Directions pop-up menu that is displayed.
Your route is displayed on a map.
7. To view the directions in a list format, touch the **Menu Key**  > **List view**.
To switch back to your map route from List view, touch the **Menu Key**  > **Map view**.

 
Checking the weather

The **Weather** application provides weather forecasts. You can place a Weather widget on your Home screen for a summary of your local weather. Access the **Weather** application for more detailed weather information.

To get details about the weather

Touch the Weather widget on the Home screen to open the **Weather** application to view summarized and detailed weather information.

- ▶ Touch a tab at the top of the screen to view the weather forecast for different times.




- ▶ Touch the **Hourly** or **15 Days** tab for a more detailed forecast. Tap the **Weather** application screen to access the Accuweather website.
- ▶ Touch a time on the weather graph for a detailed, hour-by-hour forecast.

Changing Weather Settings

You can configure a number of settings for the **Weather** application.

The location and related settings also affect the display of the Weather widget application.

- ▶ To open the Weather settings screen, touch the **Menu Key**  > **Settings**.

Weather settings

City list You can add, edit, or remove a city from your list.

Refresh interval

These settings control how frequently the information on the Weather widget is updated and the temperature unit to use.




Refresh interval Allows you to set how often to update the weather. More frequent updates trade the convenience of current information for increased data use and decreased battery life between charges.

Temperature unit Allows you to use Fahrenheit or Celsius.



Backup Assistant

How to Access and Register Backup Assistant


If you didn't set up Backup Assistant when you turned on your phone for the first time, you can enable it in Settings.

1. Touch the Apps Key  > Settings  > Accounts & sync.
2. Touch Backup Assistant .
3. Read the information provided on the screen and touch **Start**.
4. Enter your PIN code and confirm it, then touch **Submit**.
5. The Registration complete screen appears and your first back-up process begins. Touch **Next** > **Done**.

You can launch Backup Assistant from the Apps screen.

1. Touch the Apps Key .
2. Touch Backup Assistant .

Backup Assistant can be accessed directly from the Contacts application.




1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **Back up now**.

If you've already registered your Backup Assistant account, a background backup will be performed. If not, the Backup Assistant registration screen will be displayed for you to complete registration then back up your files.




Using Backup Assistant

On the schedule you selected, the **Backup Assistant** application checks with your phone's address book to see if any changes have occurred since the last Backup. If changes are detected, the application will launch and the Backup process will start. If no changes are detected, Backup Assistant sleeps until the next daily automatic backup is triggered.




Manually backing up your contacts

1. Touch the **Apps Key**  > **Settings**  > **Accounts & sync**.
2. Touch **Backup Assistant** .
3. Touch **Backup now** at the bottom of the Settings screen or Last backup status screen.

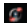Changing the backup schedule

1. Touch the **Apps Key**  > **Settings**  > **Accounts & sync**.
2. Touch **Backup Assistant** .
3. Touch **Backup time** and touch the timeframe you want. For example, **Every late night (12am-6am)**.

Change your PIN code

1. Touch the **Apps Key**  > **Settings**  > **Accounts & sync**.
2. Touch **Backup Assistant** .
3. Touch **Change PIN code** on the Backup Assistant settings screen.
4. Enter your current PIN and touch **Next**.
5. Enter your new PIN. Then reenter it for confirmation and touch **Next**.

Communication

Mobile IM

Mobile IM allows you to send and receive an Instant Message at any time.

1. Touch the **Apps Key** .
2. Touch **Mobile IM** .

NOTE The first time you use the **Mobile IM** application, you will need to touch **Accept** to accept the terms and conditions of use.

3. Choose a Mobile IM community to sign in to.
4. Enter your user name and password and touch **Sign In**.

NOTE Mobile IM only operates over the Verizon Wireless network.

Contacts

The **Contacts** application allows you to store names, phone numbers and other information in your phone's memory.

Using Your Contacts

Use the **Contacts** application to add, view, and communicate with your friends and acquaintances.

To open your **Contacts** application

- ▶ Touch the **Apps Key**  > the **Contacts icon** .

OR

Touch the **Home Key**  > the **Contacts Key**  in the Quick Keys bar.

All of your contacts are displayed alphabetically in a list. If you have a new phone and haven't added any contacts yet, the **Contacts** application will display hints on how to start adding contacts to your phone.

To open a list of your favorite contacts






- ▶ Open your **Contacts** application and touch the **Groups** tab at the top of the screen. Then touch **Favorites**.


Favorites lists the contacts you've added to the list, followed by a list of your most frequently called contacts.

To view details about a contact

1. Open your **Contacts** application.
2. Touch the contact whose details you want to view.

Touch an icon to call, message, or open other applications.

- ▶ The **Dial icon**  places a call to the number.
- ▶ The **Message icon**  starts a message.
- ▶ The **Mail icon**  starts an email.
- ▶ The **Chat icon**  starts a chat.
- ▶ The **Facebook icon**  opens the Facebook application and displays the contact's profile page.




Touch the **Menu Key**  for the following menu options: **Edit contact**, **Share**, **Delete contact**, **Add to home screen**, **Options**, and **More (Export and Speed dials)**.

Adding Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google™ Account, Microsoft Exchange account, or other accounts that support syncing contacts.

The **Contacts** application tries to join new addresses with existing contacts, to create a single entry. You can also manage that process manually.

To add a new contact

1. Open the **Contacts** application.
2. Touch the the **Menu Key**  > **New contact**.
3. If you have more than one account with contacts, touch **Contact type** at the top of the screen and choose the account to which you want to add the contact.
4. Enter the contact's name.
5. Touch a category of contact information, such as phone number and email address, to enter that kind of information about your contact.
6. Touch a category's plus button  to add more than one entry for that category. For example, in the phone number category, add a work number and a home number. Touch the label button to the left of the entry item information to open a drop-down menu of preset labels. For example, **Mobile** and **Work** for a phone number.
7. Touch the **Picture Frame** icon  to select a picture to display next to the name in your list of contacts and in other applications.
8. When you're finished, touch **Save**.


Importing, Exporting, and Sharing Contacts

If you have contacts stored in vCard format on a microSD card you can import them into your Contacts application on your phone. You can also export contacts in vCard format onto a microSD card.

Export to back them up to a computer or other device or so you can send a contact via email.


To import contacts from your microSD card

You can copy contacts, in vCard format, onto your microSD card then import them into your phone.

1. Insert the memory card (that contains the vCard files) into your phone.
2. Open the **Contacts** application.
3. Touch the **Menu Key**  > **More** > **Import/Export**.
4. Touch **Import from SD card**.
5. When the pop-up appears, select the storage type.
6. If you have more than one account on your phone, touch the account into which you want to import the contacts.
7. Touch the contacts you want to import to the microSD card. Then touch **Done** and **OK** to confirm.

To export contacts to your microSD card


You can export all of the contacts on your phone to your microSD card, as vCard files. You can then copy this file to a computer or another device that is compatible with this format, such as an address book application.

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **More** > **Import/Export**.
3. Touch **Export to SD card**.
4. When the pop-up appears, select the storage type.
5. Touch the contacts you wish to export to the SD card. To export all contacts, touch **Select All** in the top left corner of the screen. Then touch **Export** and **OK**.

Communication

To share a contact

You can share a contact with someone by sending it to them as a vCard file.

1. Open the **Contacts** application.
2. Touch the contact you want to share to view the contact details.
3. Touch the **Menu Key**  > **Share**.
4. Choose the method for sending.
5. Enter the necessary information and share it.

Adding a Contact to Your Favorites

The **Favorites** section contains a short list of the contacts you communicate with most often.

To add a contact to your favorites list

1. Open the **Contacts** application.
2. Touch a contact to view its details.
3. Touch the star to the right of the contact's name.
When the contact is added to your favorites list, the star will be blue-colored.


To remove a contact from your favorites list

1. Open the **Contacts** application and touch the **Groups** tab.
2. Touch **Favorites** then touch a contact entry to view its details.
3. Touch the blue star to the right of the contact's name.
The grey-colored star will indicate that the contact was removed from your Favorites list.

Searching for a Contact

It's easy to search for a contact by name.

To search for a contact

1. Open the **Contacts** application.
2. Touch the search box or touch the **Search Key** .
3. Start entering the name of the contact you're searching for. As you type, contacts with matching names will appear below the search box.
4. Touch a matching contact in the list to view its details.
You can also search by nickname, email, organization and number.

Editing Contact Details

You can change or add details saved in your contact entries. You can also set specific ringtones to specific contacts or determine whether calls from specific contacts are diverted to your voicemail.

Some contact entries contain information from multiple sources: information that you added manually, information that Contacts joined from multiple accounts to consolidate duplicates, etc.

If you find duplicate entries in Contacts, you can join them into a single entry.

Changes made to information from one source do not automatically change the information on the other sources. For example, if you have information about a contact from a Google Account and an Exchange account and both are configured to sync contacts, changes to the contact from the Google Account are synced to that account on the web, but the information from the Exchange account will remain unchanged.

Communication

To edit contact details



1. Open the **Contacts** application.
2. Touch and hold the contact whose details you want to edit. In the menu that opens, touch **Edit contact**.
3. Edit the contact information.
4. Touch **Save** to save the changes.

To change a contact's default phone number

The default phone number is used when you initiate a call or send a text message using the context menu (by touching and holding a contact).


1. Open the **Contacts** application.
2. Touch the name of a contact in the list to view its details.
3. Touch and hold the phone number to use as the contact's default phone number.
4. Touch **Make default number** in the menu that opens.
The default phone number is indicated by a checkmark.

To divert calls from a contact to your voicemail


1. Open the **Contacts** application.
2. Touch the name of a contact in the list to view its details.
3. Touch the **Menu Key**  > **Options**.
4. Touch **Incoming calls** to checkmark the option and enable it.
5. Touch the **Back Key** .

When this contact calls you, your phone will not ring and the caller will be forwarded directly to your voicemail.

To set a ringtone for a contact

1. Open the **Contacts** application.
2. Touch the name of a contact in the list to view its details.
3. Touch the **Menu Key**  > **Options**.
4. Touch **Ringtone** then touch a ringtone to select it.
5. Touch **OK** to save the ringtone to the contact.

To delete a contact

1. Open your **Contacts** list or **Favorites** list.
2. Touch the name of a contact in the list to view its details.
3. Touch the **Menu Key**  > **Delete contact**.
 - ▶ If you delete a contact from Google Contacts (or another account with editable contacts), the contact is also deleted from Contacts on the web the next time you sync your phone.
 - ▶ You can't delete contacts from a read-only account, such as Facebook. Instead, a dialog box informs you that the contact will be hidden.
 - ▶ If the contact contains information from both editable accounts (such as Contacts) and from a read-only account (such as Facebook), a dialog box informs you that the information from the read-only account will be hidden, not deleted.
4. Touch **OK** to confirm that you want to delete the contact.

Communicating with Your Contacts

From the **Contacts** or **Groups** tab, you can quickly call or send a text (SMS) or multimedia message (MMS) to a contact's default phone number. You can also open a list of all the ways you can communicate with that contact.

This section describes ways to initiate communication when viewing your list of contacts. The **Contacts** application shares your contacts with many other applications, such as Gmail™ and Messaging.

Communication

To connect by using Quick Contact for Android™

1. Touch a contact's picture to open Quick Contact for Android.






Touch a contact's picture. —


2. Touch the icon corresponding to the type of communication you want to start.

The communication icons displayed depend on the types of information you saved in the contact information.

To communicate with a contact

1. Open the **Contacts** application.
2. Touch the contact with whom you want to communicate.
3. In the contact's details screen, touch the way to start communicating with the contact.

- ▶ The **Dial icon**  places a call to the number.
- ▶ The **Message icon**  starts a message.
- ▶ The **Mail icon**  starts an email.
- ▶ The **Chat icon**  starts a chat.
- ▶ The **Facebook icon**  opens the **Facebook** application and displays the contact's profile page.

NOTE Anytime you see the **Dial icon**  next to a number, such as in your Favorites or Call log, just touch it to call that number.

To call a contact's default number

1. Open the **Contacts** application.
2. Touch and hold the contact you wish to call.
3. Touch **Call contact** in the menu that opens.

To send a text or multimedia message to a contact's default number


1. Open the **Contacts** application.
2. Touch and hold the contact you wish to message.
3. Touch **Text contact** in the menu that opens.

Selecting Which Contacts are Displayed

You can hide contacts that don't have phone numbers. You can also configure which groups of contacts you want to display in the Contacts list.

To set whether contacts without phone numbers are displayed


If you use your list of contacts only to call people, you can hide any contacts that don't have phone numbers.

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **More** > **Display options**.
3. Touch **Only contacts with phones** to select or deselect this option.
When selected, a checkmark will appear.
4. Touch **Apply** to save the settings.

- NOTES**
- You can sort the Contact list by Given name or Family name.
 - You can also view contact names as Given name first or Family name first.

Communication



To change which groups are displayed

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **More** > **Display options**.
3. Touch an account to open its list of available groups.
4. Touch each group whose contacts you want to view in your Contacts application. Contact types with a checkmark will appear in your contacts list.
This action affects only which contacts are displayed. Your sync settings will not be affected.
5. Touch **Apply** to save your settings.

Joining Contacts

When you add an account or add contacts in other ways, such as by exchanging emails, the **Contacts** application attempts to avoid duplication by joining contact information automatically. You can also join contacts manually.

To join contacts



1. Open the **Contacts** application.
2. Touch the contact entry to which you want to add information. The contact name for this entry will remain unchanged after you join with another contact.
3. Touch the **Menu Key**  > **Edit contact**.
4. Touch the **Menu Key**  > **Join**.
5. Touch the contact whose information you want to join with the first contact. The information from the two contacts will be merged and displayed under the name from the first contact.
6. Touch **Save** to confirm you want to join the entries. The contact information will be displayed in one contact entry.

Separating Contact Information

Each contact entry on your phone may contain 'joined' information from a variety of sources.

If contact information from different sources was joined in error, you can separate the information back into individual contact entries on your phone.

To separate contact information

1. Open the **Contacts** application.
2. Touch the contact entry whose information you want to separate.
3. Touch the **Menu Key**  > **Edit contact**.
4. Touch the **Menu Key**  > **Separate**.
5. Touch the **OK** button to confirm you want to separate the entries. The contact information will be separated into individual contact entries in the **Contacts** list.

Email

Opening Email and the Accounts Screen

You can use the **Email** application to read email from services other than Gmail™. The **Email** application supports the following account types: Microsoft Exchange, Windows Live Hotmail, Yahoo! Mail, Gmail, AOL Mail, Verizon and other accounts.

To open the Email application


- ▶ Touch the **Apps Key**  > **Email** .

The first time you open the **Email** application, a setup wizard opens to help you add an email account.

After the initial setup, Email displays the contents of your Inbox.

The Accounts screen

The Accounts screen lists all your accounts.

- ▶ Open the **Email** application. If you're not on the Account screen, touch the **Menu Key**  > **Accounts**.

Each folder and account on the Accounts screen displays the number of unread messages in green, or will display the number of messages in Starred, Drafts and Outbox in gray.

You can touch an account to view its Inbox.


The account from which you send email by default is indicated with a checkmark.

Reading Your Messages

You can read messages from the Inbox, or from other folders from the individual accounts.

To read a message

From the Accounts screen, simply touch any account to display it.


You can also go to the folder list of the account by touching the **Menu Key**  > **Folders** from the Inbox.

NOTE When new email arrives, a notification appears in the Status Bar. Drag the Notifications panel downward and touch the email notification.

Responding to a Message

There are many options how you can respond to a received email message. You can reply to it, forward it, or even just delete it.

To reply to or forward a message

- ▶ While reading a message, touch **Reply** or **Reply all** (available at the bottom of the screen).
- ▶ While reading a message, touch the **Menu Key**  > **Forward** to forward the message.

To mark a message as unread

You can set a message to appear as though it has not been read – for example, to remind yourself to read it again later.

- ▶ From the Inbox, touch and hold the desired message, then touch **Mark as unread** in the dialog box that opens.

To delete a message

There are a few easy ways to delete a message.

- ▶ While reading a message, touch **Delete** at the bottom of the screen.
- ▶ From the Inbox, touch the checkbox next to one or more messages, then touch **Delete** at the bottom of the screen.

For many types of accounts, deleted messages are moved to a Trash folder, so you can retrieve them in case they were deleted by mistake.

Facebook for LG




The **Facebook for LG** application on your phone lets you keep up and stay close with your friends in Facebook. It offers most of the features that you are familiar with when using Facebook on your computer.


NOTE If you have more than one Facebook account, you can sign in to the **Facebook for LG** application using either Facebook account.

With the Facebook for LG application you can:

- ▶ Share your thoughts and check other people's status updates.
- ▶ View your friends list and write on someone's wall.
- ▶ Comment on and like a friend's post.
- ▶ View someone's personal information, including photo albums.
- ▶ Take a photo and upload it straight to your Facebook account.

Using the Facebook for LG application

1. Touch the **Apps Key**  > **Facebook for LG** .
2. If this is your first time to use Facebook for LG, follow the on-screen instructions to sign in to your Facebook account.
3. On the News Feed screen, touch the **Menu Key**  > **Home** to access other functions.

- NOTES**
- While on the Facebook for LG home screen, touch the **Menu Key**  > **Settings** to set refresh and notification options.
 - On some screens, you can touch and hold an item to open an Options menu.

 
Adding a Facebook widget

Add the My status or Social Feeds widget to a Home screen pane to let you quickly share your thoughts and view your friends' status updates.

NOTE The widget will only link to the Facebook account that you logged into on the Facebook for LG application as the main account.

To add the My status and Social Feeds widgets, touch and hold a spot on a Home screen pane where you want to place the widget, then touch **Widgets > My status** or **Social Feeds**.

Facebook for LG Home screen

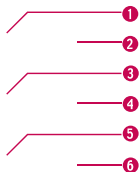



1. Shows all updates from your friends. Touch and hold an update and touch **Like** in the dialog box that appears if you want to mark it. Touch the username or thumbnail image to view your friend's profile.
2. Touch to view your Facebook profile. This shows you all the updates, private information and photos on your wall and profile.
3. Shows a list of all your friends and their status.
4. Shows all Facebook messages you have received and sent out.
5. Touch to view your Facebook photo albums.
6. Shows people who you choose as your favorite friends.

Communication

Share a status message


1. On the News Feed screen, touch the text field with the words “**What’s on your mind?**”.
2. Enter your status message, then touch **Share**.
3. Touch the Photo icon to the right of the status field to share a picture from Gallery or Camera.


Searching for Facebook users to add to your friends

1. While on the Facebook for LG home screen, touch **Friends list**.
2. Touch the **Menu Key**  > **New**.
3. Enter the user you are looking for in the search field and touch .
4. On the search results screen, touch **Add** next to each person you want to send a friend request to.

Sending a Facebook message

You can only send a Facebook message to your friends.

1. Make sure you are on the Facebook for LG home screen. If you’re not, touch the **Menu Key**  > **Home**.
2. Touch **Inbox** > **New message**.

You can also send a Facebook message from your friend’s profile screen. Touch the **Menu Key**  > **Write** > **Facebook message**.


3. Touch the **To** field and enter the name of your friend. As you enter characters, the names of the Facebook users that match the characters you enter will appear. Touch the name when you see it.

OR

Touch the icon to the right of the **To** field and you can choose recipients on your friends list.

4. Enter your message, then touch **Send**.

Setting Facebook for LG options

1. Touch the **Menu Key**  from any of the Facebook screens.
2. Touch **Settings**.

Auto refresh Sets the frequency to receive updated information.



Notification Establish if you want to be notified of new Facebook messages and/or friend requests.

Visual Voice Mail

Visual Voice Mail allows the management of voicemail directly from the device rather than accessing voicemail via traditional methods.


Visual Voice Mail displays a list of messages and allows the user to choose which message to listen to or delete, without having to dial into their mailbox, listen to voice instructions, or prior messages.


To able to use Visual Voice Mail

1. Touch the **Apps Key**  > **Voicemail** .
2. If it is your first visit, you will have to subscribe to Visual Voice Mail.
3. After subscription, you are required to enter the password. You are only allowed to change the password by calling voicemail (dial *86).

Communication


4. After entering the password, you are allowed to see voice mail entries in your Inbox.

While viewing the voicemail list, you can select an entry (see step 5). For additional options, touch the **Menu Key**  > **New, Delete, Save as, Set as Heard, Sort by, or More (Saved messages, Refresh, Settings)**.

5. Touch a voicemail entry to listen to it. Then you can touch **Call back, Save, or Erase**. To forward or reply to a message, touch the **Menu Key**  > **Forward or Reply**.

6. If you decide to reply with a voicemail or forward it, record a message.
The buttons at the bottom of the screen allow you to play, stop, or cancel the message.

NOTE To send a voice message to a number in your Contacts list, use the **To:** field to search for it.

If you'd like to cancel Voicemail Subscription, touch the **Menu Key**  **> More > Settings > Cancel VVM service.**

Gmail

Gmail is Different

Gmail is web-based: Your messages are stored on-line, on Google™ servers but you can read, write, and organize messages by using the **Gmail** application on your phone or by using a web browser on a computer. Because your mail is stored on Google servers, you can search your entire message history, backed by the speed and power of Google search.

Actions that you take in one place are reflected everywhere. For example, if you read a message in Gmail on your phone, it will be marked as read in a web browser. And a message that you send using a browser, or even a draft of a message, is visible in Gmail on the phone.

Gmail is conversation-based: Each message and all replies to it are grouped in your Inbox as a single conversation. In other email applications, replies to messages are spread across your Inbox, typically by date received, so a message and the replies to it are separated by other messages. Gmail makes it easy to follow the thread of a conversation.

Gmail is organized by labels, not by folders: By tagging messages with labels, you can organize your conversations in many different ways. Whereas in other email applications, each message can only be located in one folder. For example, with Gmail you can label a conversation with your mother about your brother's birthday present with both "Mom" and "Dave." Later, you can look for all the messages containing either label. Using folders, you'd have to store the message in the "Mom" folder or the "Dave" folder, not both.

Gmail for the phone is optimized for mobile use: Some features are only accessible on your computer browser. The best place to organize and learn about Gmail is the web. For example, you can't use the **Gmail** application on the phone to create the labels and filters that you use to organize your messages, but you can label a message. Gmail on the web offers complete information about the service, so it's the best place to learn about all of the features of Gmail.

Gmail is for Gmail: Of course you can use Gmail to send email to any email address, and anyone can send email to you at your Gmail address. But if you want to read messages from another email service provider (using your AOL, Yahoo!, or other email account), you must use the **Email** application.

Opening Gmail and Your Inbox

When you open the **Gmail** application, the most recent conversations are displayed in your Inbox.

To open the Gmail application

Touch the **Apps Key**  > **Gmail** .

All of your conversations are displayed in your Inbox unless you delete, archive, or filter them.

The current Google Account is displayed at the top right of the Inbox. If you have more than one account, you can switch accounts to view the messages in each Inbox.

Conversations with new messages are displayed with bold subject lines. To read a message in a conversation, touch its subject line text.


> indicates that this message was sent directly to you.

>> indicates that you were CC'd on this message.


No indicator indicates that this message was sent to a group that includes you.

Communication


To open your Inbox when Gmail is running

If you are viewing a message or another label, touch the **Back Key**  until you return to your Inbox.

OR


- ▶ When reading a message, touch the **Menu Key**  > **Go to Inbox**.

OR

- ▶ When viewing a list of labeled conversations, touch the **Menu Key**  > **More** > **Go to Inbox**.

To switch accounts

Gmail displays conversations and messages from one Google Account at a time. If you have more than one account, you can open the Accounts screen to view how many unread messages you have in each account and to switch accounts.

1. From your Gmail Inbox, touch the **Menu Key**  > **Accounts**.

2. Touch the account that contains the email you want to read.

Reading Your Messages

When viewing a list of conversations in your Inbox or in any list of labeled conversations, you can open a conversation to read its messages.

To read a message


- ▶ Touch a conversation that contains the message you want to read.

A conversation opens to the first new (unread) message, or to the first starred message, if you've previously starred a message in the conversation.

The Google Talk online status will appear next to the name of the sender of each message if the sender has a Google Account. Touch the contact's picture to open Quick Contact.

When reading messages in a conversation, you can use the buttons at the bottom of the screen to archive the entire conversation or delete it. After you delete a conversation, you can touch **Undo** in the green bar that appears at the top of the screen to undo the last action and restore the message to its previous location.



You can also touch the arrow buttons to read the next, oldest, unread message in a conversation in your Inbox (or the conversation list you're working in).

Touch  on the message header to access options for replying or forwarding the message.


Communication

To reread a message

When you open a conversation, messages that you've already read are minimized into a tab that indicates the number of hidden messages.

1. Touch the **Apps Key**  > **Gmail** . Then touch the conversation you want to view and the tab indicating minimized messages.







2. Touch the contact name to open that message.


When reading a message you can touch the **Menu Key**  > **Mark unread** to return a read message to the unread state. For example, to remind yourself to read it again later.


Composing and Sending a Message

You can compose and send a message to people or groups with Gmail addresses or other email addresses.

To compose and send a message

1. Touch the **Apps Key**  > **Gmail**  > the **Menu Key**  > **Compose**.
2. Enter a recipient's address.
As you enter text, matching addresses are offered from your Contacts list. You can touch a suggested address or continue entering text to enter a new one.
3. Touch the **Menu Key**  > **Add Cc/Bcc** to Cc or Bcc recipients, if necessary.
4. Enter a subject for the message in the Subject field.
5. Continue into the next field to enter your email message.
6. Touch the **Menu Key**  > **Attach** to add an attachment to the email.
7. Touch **Send**  to send your message.

If you're not ready to send the message, touch  to save the message as a Draft. You can read your drafts by opening messages with the Draft label.


To erase the message, touch the **Menu Key**  > **Discard** (including any saved drafts).

If you aren't connected to a network – for example, if you're working in Airplane mode – the messages that you send are stored on your phone with the Outbox label until you connect to a network again.

Replying to or Forwarding a Message

You can continue an email conversation by replying to a message or by forwarding it.

To reply to or forward a message

1. Touch  on the message header to access options for replying or forwarding the message.
2. Touch **Reply**, **Reply all**, or **Forward**.


Replying to or forwarding messages without changing the subject adds your reply to the current conversation.

Changing the subject starts a new conversation.

The message will open in a new screen where you can add or remove addresses, edit the subject, and add or remove text or attachments.

You can add one or more people to an ongoing conversation by replying to all and then adding the new person's address(es) to the reply.

Note that the conversation text and previous messages are also included in your reply (or forward).


3. Touch **Send**  to send your message.

Working with Conversations in Batches

You can archive, label, delete, or perform other actions on a batch of conversations at once, in your Inbox or in another label.

1. From the Inbox, or a folder with another label, touch the checkbox for all the messages you want to include in the batch.

When you checkmark a conversation, the **Archive**, **Labels**, and **Delete** buttons appear at the bottom of the screen.

2. Touch **Archive**, **Delete**, or **Labels** or touch the **Menu Key**  > **Add star**, **Report spam**, **Mute**, **Mark unread**, or **Deselect all**.


Your action affects the selected batch of messages.

If you accidentally delete a batch of conversations, you can touch **Undo** in the green bar (that appears briefly after the action) at the top of the screen to undo the action and restore the message(s) to the previous location. You can also use Undo after muting, archiving, and reporting spam.

Labeling a Conversation

As mentioned previously, conversations are organized by labels. Gmail has several default labels, but you can also add your own through Gmail on the web.

To label a conversation

1. When reading a conversation's messages, touch the **Menu Key**  > **Change labels**.
2. In the dialog box that opens, check the labels you want to assign to the conversation and touch **OK**.

To label a batch of conversations at once


You can assign or change the labels of one or more conversations at once.

1. From your Inbox, or a folder with another label, checkmark the conversations to select a batch.
2. Touch **Labels** at the bottom of the screen.
3. In the dialog box that opens, check the labels you want to assign to the conversation.
4. Touch **OK**.


Starring a Message

You can star an important message or conversation to make it easy to locate again.

To star a message

- ▶ When reading a message, touch the star  in its header.

OR

- ▶ When viewing a list of conversations, touch its star  to star the newest message in the conversation.

To unstar a message


- ▶ Touch its star again.

To star or unstar all messages in a conversation

- ▶ When viewing the Inbox, or another label, touch a conversation's star.

Viewing Conversations by Label

You can view a list of the conversations that have the same label, including conversations with starred messages.

1. When viewing your Inbox, or a folder with another label, touch the **Menu** Key  > **Go to labels**.

2. Touch a label to view a list of conversations with that label.


Communication

NOTE The conversation list will resemble your Inbox. Most of the options available while using your Inbox will also be available while viewing these lists of labeled messages.


Reporting Spam

The Gmail service is quite effective at preventing spam (junk mail) from reaching your Inbox. But when spam does make it through, you can help improve the Gmail service by reporting the conversation as spam.

To report a conversation as spam

- ▶ When reading the email, touch the **Menu Key**  > **More** > **Report spam**.

OR

- ▶ From the Inbox, touch the checkmark box to select the messages you want to report as spam > **Menu Key**  > **Report spam**.

When you report a conversation as spam, the conversation (and all its messages) are removed from your Inbox. You can view the messages you've marked as spam by viewing messages with the Spam label.

Synchronizing Your Messages

The Gmail service has the resources to store all the messages you've ever sent or received; your phone does not. To save space, Gmail downloads only some of your messages to your phone. Use the **Settings** application to control how and when applications synchronize their data.

To select which conversations to synchronize

1. Touch the **Apps Key**  > **Gmail** .
2. Touch the **Menu Key**  > **More** > **Settings** > **Labels**.

The Synchronization screen opens, displaying a list of your Gmail labels. Below each label is its current synchronization setting:




Sync all, **Sync 4 days**, or **Sync none** (If Sync none is selected, the labeled conversation is not synchronized).

3. Touch a conversation label whose synchronization settings you want to change.

A dialog box for that conversation label opens, with three options:




- **Sync none** Don't download any conversations that have only this label.
- **Sync 4 days** Download the previous 4 days (or number of days you set) of conversations.
- **Sync all** Download all conversations with this label.

To set how many days of conversations to synchronize

1. Touch the **Apps Key**  > **Gmail** .
2. Touch the **Menu Key**  > **More** > **Settings** > **Labels**.
3. Touch **Number of days to Sync**.
4. Enter the number of days and touch **OK**.

Appending a Signature to Your Messages

You can add information to every email you send, such as your name, contact information, or even "Sent from my Android™ phone".

1. Touch the **Apps Key**  > **Gmail** .
2. Touch the **Menu Key**  > **More** > **Settings** > **Signature**.

3. Enter a signature or other information.
4. Touch **OK**.

Communication

Changing Gmail Settings

You can change a number of settings for Gmail. Each Google Account has its own settings, so your changes affect only the current account. Notification volumes and some synchronization settings can also be changed in the **Settings** application.

- ▶ Touch the **Apps Key**  > **Gmail**  > the **Menu Key**  > **More** > **Settings**.

General settings

Signature To add a signature or other information to outgoing email.

Confirm actions Allows you to choose which actions will display a dialog box asking you to confirm whenever you want to archive, delete, or send a message.

Reply all Checkmark this setting to make 'Reply all' the default action for responding to messages.

Auto-advance Allows you to choose what screen to display after you delete or archive a conversation.

Message text size Allows you choose the size of the text in a message for easier viewing.

Batch operations Checkmark this setting to allow batch operations.

Clear search history Removes the search history for searches performed on your Gmail account.

Labels Allows you to manage which conversations are synchronized and how often.

Notification settings

Email notifications Checkmark this setting to receive a notification whenever you receive new email.

Select ringtone Opens a dialog box to select the ringtone to sound when you receive a new email notification.



Vibrate Allows you to set the phone to vibrate when you receive a new email notification.

Notify once Checkmark this setting so that the phone will only notify you once when you receive new email, not for every message.

Messaging

Opening Messaging

To open Messaging

- ▶ Touch the **Home Key** , then touch **Messaging Key**  in the Quick Keys bar.

The Messaging screen will open, where you can create a new message or open an ongoing message thread.

- ▶ Touch **New message** to start a new text or multimedia message.
- ▶ Touch an existing message thread to open it.

To delete a message thread from the Messaging window

1. Touch and hold the message thread.
2. Touch **Delete thread** in the menu that opens.
3. Touch **OK** to confirm you want to delete the message thread.

Exchanging Messages

You can send text messages (SMS) of up to 160 characters to another mobile phone. If you keep typing after the limit, your message is delivered as a series of messages.

Multimedia messages (MMS) can contain text and a picture, a recorded voice, an audio file, a video, or a picture slideshow.

The **Messaging** application automatically converts a message into a multimedia message if you send it to an email address instead of a phone number, add a subject, or attach a media file.

Communication

To send a text message


1. On the Messaging screen, touch **New message**.
2. Enter a mobile phone number in the **To** field.

As you enter the mobile phone number, matching contacts appear. You can touch a suggested recipient or continue entering the phone number.

3. Touch the text field to start entering your message.



— **Character counter**
Displays number of characters entered and amount remaining.

A counter is displayed in the top right corner of the text field to tell you how many characters are left.

If you touch the **Back Key**  while composing a message, it's saved as a draft in your **Messaging** application. Touch the message to resume composing it.

4. Touch **Send** to send the message.
Your message is displayed and responses appear in the same window, creating a message thread with that contact.

To create and send a multimedia message

1. On the Messaging screen, touch **New message**.
2. Enter a mobile phone number or email address in the **To** field. As you type, matching contacts appear. You can touch a suggested contact or continue typing.
3. Touch the text field to start entering your message.
4. Touch the **Menu Key**  > **Add subject** to add a message subject.
5. Touch  to open a menu where you can choose the type of media file to attach to the message.
 - ▶ If you touch **Pictures**, you're prompted to select a picture from your Gallery.
 - ▶ If you touch **Capture picture**, the **Camera** application opens so you can take a picture and attach it.
 - ▶ If you touch **Videos**, you're prompted to select a video from your Gallery.
 - ▶ If you touch **Capture video**, the **Camcorder** application opens so you can record a video and attach it.
 - ▶ If you touch **Audio**, you're prompted to select an audio file from your microSD card.
 - ▶ If you touch **Record audio**, the voice recording function opens and allows you to record a spoken message and attach it to your message.
 - ▶ If you touch **Slideshow**, a menu opens and allows you to assemble photos into a slideshow (up to 10 slides) to attach to the message. Use the buttons in the Compose Message screen to preview the message, replace a picture, or remove a slide. Touch **Done** when you finish editing the slideshow.
 - ▶ If you touch **Contact(vCard)**, you're prompted to select the contacts you wish to send as vCard files.
6. Touch **Send MMS** to send the message.

Communication

To respond to messages you receive

If you're working in a message window, messages that you receive from that contact are displayed. Otherwise, you receive a new message notification and a new message icon appears in the Status Bar. When you touch the new message notification, the Message screen opens where you can reply to the message.

If Auto-retrieve is uncheckmarked, you must touch **Download** to view the message.


If the message contains a media file, touch **Play** to view, watch, or listen to it. Touch and hold the media file to open a menu with additional options.

To view details about a message

1. Touch and hold a message in a message window.
2. Touch **View message details** in the menu that opens.

Changing Messaging Settings

You can change a number of Messaging settings.

- ▶ To change Messaging settings, open the **Messaging** application, touch the **Menu Key**  > **Settings**.

Storage settings

Delete old messages Checkmark this setting to allow the phone to delete older messages in a thread when the **Text message limit** or **Multimedia message limit** is reached. Uncheckmark this setting to keep all messages.

Text message limit Touch to set the number of text messages to save per thread.

Multimedia message limit Touch to set the number of multimedia messages to save per thread.

Signature Opens a dialog box to enter a signature to automatically send with your messages. Checkmark appears after a signature is entered.

Callback number Opens a dialog box to view or edit the callback number sent with your messages. Checkmark appears after dialog box is closed.

Text message (SMS) settings

Delivery reports Checkmark this setting to allow your phone to receive delivery reports for the messages you send.

Manage SIM card messages Allows you to manage messages stored on your SIM card.

Set priority Opens a dialog box that allows you to set the default priority for your text messages.

Multimedia message (MMS) settings

Delivery reports Checkmark this setting to allow your phone to receive delivery reports for the messages you send.

Auto-retrieve Uncheckmark this setting to download only the heading of multimedia messages, allowing you to manually download the whole message when you're ready. This is useful for controlling how much data you download.

Roaming auto-retrieve Uncheckmark this setting to download only the heading of multimedia messages when connected to other carrier's data networks. This is useful for avoiding unexpected charges if your contract has limits on data roaming.

Set priority Opens a dialog box that allows you to set the default priority for your multimedia messages.

Notification settings

Notifications Checkmark this setting to allow your phone to receive a notification in the Status Bar whenever you receive a new message.

Select ringtone Opens a dialog box where you can select the ringtone to sound when you receive new message notifications.

 
Vibrate Opens a dialog box to set the phone vibration setting when you receive a new message notification.

Communication

How to select the type of keyboard you want

1. Touch and hold a text field.
2. Touch **Input method**.
3. Choose between **Swype** and **LG Keyboard**.

You will now be able to enter text using the new keyboard.

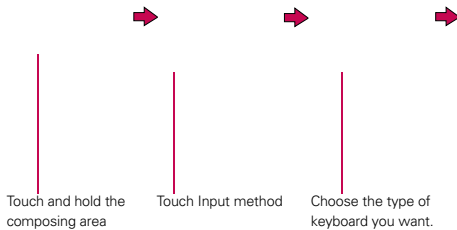

Talk

To open Google Talk and sign in

- ▶ Touch the **Apps Key**  > **Talk** .

When you first open Google Talk, your Friends list will be displayed. This list includes all of the friends you've added by using Google Talk on the web or on the phone.


To return to your Friends list

You can return to your Friends list while chatting with a friend so that you can invite another friend to chat, add a friend, etc.

- ▶ Touch the **Menu Key**  > **Friends list**.

To sign out of Google Talk

You can sign out of Google Talk. For example, if you want to limit Google Talk conversations to your computer. Also, signing out can extend your battery life.


- ▶ From your Friends list, touch the **Menu Key**  > **Sign out**.

You will no longer receive chat notifications or see others' Google Talk status in other applications, such as Gmail™.

Chatting with Friends

To chat with a friend


1. Touch the **Apps Key**  > **Talk** .

If you're already chatting with someone, you can touch the **Menu Key**  > **Friends list** to return to the Friends list.

2. Touch the friend you want to chat with.
3. Enter your message then touch **Send**.

The messages that you exchange are displayed on the screen and include information about the chat, such as whether it's on-the-record, the time a message was sent (if there's no response after a short while), etc.

Communication

To enter an emoticon (smiley), just touch the **Menu Key**  > **More** > **Insert smiley** to open a list of emoticons.

Your chat session will remain open until you end it.

Friends you're chatting with are displayed at the top of your Friends list, with the most recent message displayed in a black-on-white balloon.

To accept an invitation to chat

When a friend sends you a Google Talk message, you will receive a notification. The friend's name in the Friends list turns white and displays the message.

- ▶ Touch the friend in your Friends list.

OR


- ▶ Open the Notifications panel then touch the chat notification.
A chat window will open where you can exchange messages with your friend.

To switch between active chats

If you have more than one chat going, you can switch between chats.

- ▶ From the Friends list, touch the name of the person you want to chat with.

OR


- ▶ From a chat screen, touch the **Menu Key**  > **Switch chats** and then the friend you want to chat with.

OR

- ▶ While chatting with a friend, swipe left or right across the screen.

To invite a friend to join a group chat

While you're chatting, you can invite additional friends to join a group chat.


1. On a chat screen, touch the **Menu Key**  > **Add to chat**.
2. Touch the name of the friend to invite.

The friend you invited and the current participants will receive an invitation to a group chat. Each one who accepts the invitation will join the group chat. In a group chat, everyone can see everyone else's messages. Group chats appear at the top of your Friends list, with a group chat icon.

To chat on or off-the-record

Your Google Talk messages are stored, so you can review them later and even search for them, in the Chats folder in Gmail. If you'd rather not store the messages in a chat, you can chat off-the-record.

- ▶ While chatting, touch the **Menu Key**  > **Chat off record**.


To return to on-the-record chatting, touch the **Menu Key**  > **Chat on record**.

To end a chat

When you've finished your conversation, it's easy to end a chat session.

- ▶ From your Friends list, touch and hold the friend you want to stop chatting with. In the menu that opens, touch **End chat**.



OR

- ▶ From a chat screen, touch the **Menu Key**  > **End chat**.


Changing and Monitoring Online Status

Google Talk allows you to change how you appear to others; you can change your online status and status messages, as well as the picture that appears next to your name on your friends' list.

To change your online status

1. Touch the **Apps Key**  > **Talk** .
2. Touch your email address at the top of your Friends list.
3. In the screen that opens, touch the drop-down status menu and choose an option.






Communication

In addition to the standard status settings described in the table on the following page, you can also select a message that you've entered previously or touch the **Menu Key**  > **Clear custom messages** to erase them and start over.



Your status and any message you've entered appear in your friends' lists and in other locations where your status or status message are displayed.

Status Icons

Icons in Google Talk, Gmail, and other applications indicate your and your friends' Google Talk status.

	Available: Signed into Google Talk and available to chat
	Away: Signed into Google Talk but not active
	Busy: Signed into Google Talk but too busy to chat
	Signed out of Google Talk
	Invisible: Signed into Google Talk but appear signed out to others

To change your status message

1. Touch the **Apps Key**  > **Talk** .
2. Touch your email address at the top of your Friends list.
3. Enter a new status message in the Status message field.
4. Touch **Done** to save your status message.

To change your picture

1. Touch your email address the top of your Friends list.
2. Touch your picture at the top left of the screen.
3. Touch **Remove** to remove your picture or **Change** to change it.
4. Choose an image from your Gallery.
5. Crop the picture and touch **Save**.


Managing Your Friends List

Your Google Talk Friends list contains the friends you've invited to become friends or whose invitations you've accepted in Google Talk. Friends can invite each other to chat in Google Talk and see each others' online status in Google Talk and other applications, such as in Gmail.

The Google Talk Friends list is sorted by your friends' online status: active chats, online, busy, away, and offline. Within each grouping, friends are listed alphabetically.

To add a friend to your Friends list

You can invite anyone with a Google Account to become your friend in Google Talk, so you can chat with each other and stay up-to-date with each others' online status.

1. From the Friends list, touch the **Menu Key**  > **Add friend**.
2. Enter your friend's Gmail address and touch **Send invitation**.

To view and accept an invitation to become a friend

When a contact invites you to become a friend in Google Talk, you receive a notification in the Status Bar and the invitation appears in your Friends list.

1. Touch the invitation from either the Status Bar or the Friends list.
2. Touch **Accept** to chat with the contact or **Cancel**, if you don't want to chat with and share your Google Talk status with the sender.

To view a list of pending invitations to friends

- ▶ From the Friends list, touch the **Menu Key**  > **More** > **Invites**.

All the friends to whom you've extended invitations to become friends on Google Talk appear in the list until they accept or cancel your invitation.

To view all friends or only those most popular with you

By default, only the friends that you frequently chat with (the most popular) are shown in the Friends list. But you can view all friends instead.

Communication


- ▶ In the Friends list, touch the **Menu Key**  > **All friends**.

To switch back to just the friends with whom you chat most frequently, touch **Most popular** in the menu.

To add a friend to the 'Most popular' group

You can set a friend to always appear in your Most popular Friends list.

1. From the Friends list, touch and hold a friend's name.

If you don't see the friend's name, touch the **Menu Key**  > **All friends**.


2. Touch **Always show friend** in the menu that opens.

To remove a friend from this list, touch and hold the friend's name from the Friends list. In the menu that opens, touch **Hide friend**.

To block a friend

You can block a friend from sending you messages. When blocked, your friend will be removed from your Friends list.

1. From the Friends list, touch and hold the friend's name.

If you don't see the friend, touch the **Menu Key**  > **All friends**.

2. Touch **Block friend** in the menu that opens.


You can view a list of your blocked friends by opening your Friends list and touching the **Menu Key**  > **More** > **Blocked**. You can unblock a friend by touching the friend's name in the blocked list then touching **OK** in the dialog box that opens.

Changing Google Talk Settings


You can configure Google Talk to send you a notification with the contents of each message that you receive in a chat, and also to sound a ringtone or vibrate the phone.

You can also configure Google Talk to sign you in automatically when you turn on your phone, and you can set whether the mobile indicator is displayed next to your name in other people's Friends lists.

To configure notifications for new Google Talk messages


1. From the Friends list, touch the **Menu Key**  > **Settings**.
2. Checkmark **IM notifications** to receive a notification in the Status Bar when a new chat message arrives.
3. Touch **Select ringtone** to open a list of the ringtones that will ring to notify you of a new chat.
4. Touch **Vibrate** to choose the vibration setting when you receive notification of a new chat.

To show or hide the mobile indicator to friends


1. From the Friends list, touch the **Menu Key**  > **Settings**.
2. Checkmark or uncheckmark **Mobile indicator**.

If **Mobile indicator** is checkmarked, your friends see an outline of an Android™ next to your name in their Friends list when you're signed into Google Talk on an Android phone.

To set whether you sign into Google Talk automatically

1. From the Friends list, touch the **Menu Key**  > **Settings**.
2. Checkmark or uncheckmark **Automatically sign in**.
When **Automatically sign in** is checkmarked, you are signed into Google Talk when you turn on your phone.


To set Google Talk to change your status

1. From the Friends list, touch the **Menu Key**  > **Settings**.
2. Checkmark or uncheckmark **Automatic away-status**.
When **Automatic away-status** is checkmarked, your status will automatically be changed to Away when the screen is turned off.

Twitter for LG

Tweeting on your phone

Use the **Twitter for LG** application to send out tweets, read and receive tweets from people, search for new Twitter users to follow and more.

1. To open the **Twitter for LG** application, touch the **Apps Key**  > **Twitter for LG**.

If you did not sign in to your Twitter account when you first turned on the phone, follow the on-screen instructions to sign into your Twitter account.

2. Twitter for LG opens in the You + Friends screen.

Twitter for LG home screen

The Twitter for LG home screen displays all of the Twitter for LG features.





1. Shows tweets by people that you follow.
2. Shows all tweets that mentions your username using the “@[your username]” convention.
3. Touch to view your Twitter profile.
4. Shows people who are marked as favorites.
5. Shows all the people you follow.
6. Shows all direct messages you have received.

Sending a tweet

1. On the You + Friends screen, touch the text field with the words “**What’s happening?**”.
2. Enter your tweet and touch **Update**.
 - ▶ Touch the Photo icon to the right of the status field to post a picture from Gallery or Camera and add the picture link into the tweet.

Searching for Twitter users to follow


1. While on the Twitter for LG home screen, touch **People you follow**.
2. Touch the **Menu Key**  > **New**.
3. Enter the user you want to search for in the **Search Contacts** text field and touch .
4. On the Search result screen, touch **Add** next to the one(s) you want to follow.

Communication

Sending a direct message


You can only send a direct message to someone who is following you.

1. Touch the **Menu Key**  > **Home**.
2. Touch **Directed messages** > **New Direct Message**.

You can also send a direct message from your follower's profile screen. Touch the **Menu Key**  > **Write**.

3. Touch the **To** field, then enter the name. As you enter characters, the names of the Twitter users that match the characters you enter will appear. Touch the name when you see it.
4. Enter your message and touch **Send**.

Setting Twitter for LG options

1. From the Twitter for LG home screen, touch the **Menu Key**  > **Settings**.
2. The following settings are available:



General Settings Sets the frequency to run auto refresh for new tweets and messages and set notifications on/off.

Auto refresh Sets the frequency to receive updated information.

Notification Allows you to set if you want to be notified when you receive a direct message or a message that mentions you (@me message) by checkmarking the corresponding boxes.

The Phone application

The phone features of your device include many ways to make calls.


- ▶ Touch the **Home Key**  and then the **Phone Key**  in the Quick Keys bar at the bottom of the screen.

The **Phone** application has four tabs across the top of the screen: **Phone**, **Call log**, **Contacts**, and **Groups**. Using these tabs, you can dial manually or make calls automatically from information you've stored in your phone.


Phone

This tab allows you to dial a phone number manually. You can also call voicemail using this keypad.

Call log


This tab displays the history of all your calls. From here you can call or contact any of the entries. To delete an entry, touch and hold the entry and then touch **Remove from call log**. To delete your Call log, touch the **Menu Key**  > **Delete all** or **Multiselect** > **Delete**.

Contacts

This tab displays your Contacts list. From here you can call or contact any of the entries based on the saved information or manage your Contacts list. Touch the **Menu Key**  to select **New contact**, **Delete**, **Send**, **Share**, **Back up now**, or **More** (**Display options**, **Speed dials**, **Accounts**, **Import/Export**, **My profile**).

Communication

Groups

This tab displays your contacts by group for each account type you have set up, starting with Favorites, followed by a list of recent frequent contact. From here you can call or contact any of the entries based on the saved information or manage your list. For additional options, touch the **Menu Key**  to select **New group**, **Send**, **Share**, or **Delete**.

To add a Contact to your list of favorites:



1. Touch the **Contacts** tab and then the Contact entry you want to add to your Favorites.
2. Touch the grey star next to the Contact's name. The star turns blue and the entry is added to your Favorites.

To remove a Favorite, touch the blue star in either the Contacts list or Favorites list. The star turns grey and the entry is removed from your Favorites.



Voice Dialer

Call a Contact by Voice Dialing



You can call numbers directly by saying the contact's name or number.

1. Touch the **Apps Key**  > **Voice Dialer** .
2. Say "Call" or "Dial" then a name or a phone number.
Or, you can say "Redial" to redial the last number dialed.
3. If a list of results is displayed, touch the one you want to use.

Open an Application using Voice Dialer

1. Touch the **Apps Key**  > **Voice Dialer** .
2. Say "Open" and then an application name.
3. If a list of results is displayed, touch the one you want to use.
The device opens the corresponding application.

Camera

To open the **Camera** application, touch the **Apps Key**  > **Camera** .

Getting to know the viewfinder

- Brightness** – Defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar, toward “-” for a lower brightness image, or toward “+” for a higher brightness image.
- Zoom** – Zoom in or zoom out. The **Volume Keys** will also adjust the zoom.
- Swap Camera** – Allows you to swap between the back camera and the front-facing camera.
- Video mode** – Slide this icon to down to switch to video mode.
- Capture** – Takes a photo.
- Gallery** – Accesses your saved photos from within camera mode. Simply touch this icon and your Gallery will appear on the screen.
- Settings** – Opens the settings menu. See “Photo options”.
- Flash Mode** – Allows you to set the flash mode.

NOTE Default resolution is **5M(2592X1944)**.

Entertainment

Photo options

You can make adjustments to optimize your shot. The following options are available:

- **Image size:** 5M(2592X1944), 3M(2048X1536), 2M(1600X1200), 1M(1280X960), VGA(640X480), QVGA(320X240).
- **Scene mode:** Adjust for better image capture in different environments. Choose from Auto, Portrait, Landscape, Sports, Night, and Sunset.
- **ISO:** Controls the camera's sensitivity to light. Choose from Auto, 400, 200, 100.
- **White balance:** Improves color qualities under different lighting conditions. Choose from Auto, Incandescent, Sunny, Fluorescent, and Cloudy.
- **Color effect:** Applies artistic effects to pictures. Choose from Off, Mono, Negative, Solarize, Sepia, or Blue.
- **Timer:** Off, 3 secs., 5 secs., or 10 secs.
- **Shot mode:** Normal, Continuous shot, Smile shot, Beauty shot, Art shot, Panorama, Face effect, or Cartoon.
- **Focus:** Auto, Macro, Face tracking, or Manual.
- **Image Quality:** Super fine, Fine, or Normal.
- **Auto review:** On or Off.
- **Shutter sound:** Tone 1~ 4, Off.
- **Tag location:** Off or On.
- **SD card & phone storage:** Determines where the file is saved. Choose from Internal memory or SD card.

TIP! You can close all the setting icons to give a clearer viewfinder screen. Just touch the center of the viewfinder once. To recall the options, touch the screen again.

Using the focus mode

You can select from the following focus options:


Auto Sets the camera to focus automatically.

Macro Sets the camera to be able to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the Macro mode on.

Face tracking Sets the camera to detect and focus on human faces automatically.

Manual Sets the camera to focus manually.

Taking a quick photo

1. Open the **Camera** application.
2. Holding the phone horizontally, point the lens toward the subject you want to photograph.
3. Touch and hold the **Capture** button lightly and a focus box will appear in the center of the viewfinder screen.
4. Position the phone so you can see the subject in the focus box.
5. When the focus box turns green, the camera has focused on your subject.
6. Take your finger off the **Capture** button .

Once you've taken the photo

Your captured photo will appear on the screen until you touch an option or icon to proceed.

NOTE Simply touch the screen to redisplay photo options if they recede from the screen.

Entertainment


The following options are available after taking a photo:

Share Touch to share your photo using **Bluetooth, Email, Facebook for LG, Gmail, Messaging, Picasa, Twitter for LG**, or any other application you've downloaded that supports this feature.

Set as Touch to use the image as a **Contact icon** or **Wallpaper**.


Rename Touch to edit the name of the selected picture.

 Touch to delete the image, then touch **OK** to confirm.

 Touch to take another photo immediately. Your current photo will be saved to your Gallery.

 Touch to view the Gallery of your saved photos.

Viewing your saved photos

1. You can access your saved photos from camera mode. Just touch **Gallery** , then touch a photo to display it.

TIP! Slide your finger left or right to view other photos or videos.

While viewing a photo, touch the screen to access the following options:

Slideshow Touch to see your photos played in a slideshow.

Menu Touch to open a menu of options including **Share, Delete, or More**. **More** provides the following additional options:

Details Touch to display information about the selected photo (e.g., file type, file size, etc.).

Set as Sets the photo as the icon identifying a contact or sets it as your phone wallpaper.

Crop Allows you to manually crop the photo. Use your finger to move or resize the cropping box to encompass only the part of the photo you want to see, then touch **Save**.

Rotate Touch one of the rotation icons to rotate the photo clockwise or counter-clockwise.

Edit Touch to access ImageEditor, which allows you to edit the image using various tools.

Video Camera

To open the Video Camera, touch the **Apps Key**  > **Camera** . Slide the Camera mode icon down for Video mode.

Getting to know the viewfinder

Brightness – Defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar, toward “-” for a lower brightness video, or toward “+” for a higher brightness Video.

Zoom – Zoom in or zoom out. The **Volume Keys** will also set the zoom. Set the zoom before starting a video. You cannot change the zoom setting during recording.

Swap Camera – Allows you to swap between the back camera and the front-facing camera.

Camera mode – Switches between Camera and Video. Slide up for Camera mode and slide down for Video mode.

Capture – Starts video recording.






Gallery – Accesses your saved photos and videos from video camera mode.

Settings – Opens settings options.

Flash Mode – Allows you to set the flash mode.

Entertainment

Recording a quick video

1. Open the **Camera** application.
2. Slide the Camera mode icon  down to change to Video mode. The Camera mode icon changes to  and the Capture button changes to .
3. The Video camera's viewfinder will appear on the screen.
4. Holding the phone horizontally, point the lens toward the subject of the video.
5. Touch the **Capture** button  once to start recording.
6. REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
7. Touch  on the screen to stop recording.

After recording a video

A still image representing your video will appear on the screen until you touch an option or icon to proceed.

NOTE Simply touch the screen to redisplay video options if they recede from the screen.




The following options are available:

Play Touch to play the video you just recorded.


Share Touch to share your video using Bluetooth, Email, Gmail, Messaging, YouTube, or any other compatible applications you have downloaded.

NOTE Additional charges may apply when MMS messages are downloaded while roaming.

Rename Touch to edit the name of the selected video.

-  Touch to delete the video you just made, and confirm by touching **OK**. The viewfinder will reappear.
-  Touch to shoot another video right away. Your current video will be saved in your Gallery.
-  Touch to view the Gallery of your saved videos.

Watching your saved videos

1. In the viewfinder, touch **Gallery** .
2. Your Gallery will appear on the screen.
3. Touch a video to play it automatically.

Your Photos and Videos

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the **Volume Keys** on the right side of the phone.

Setting a photo as wallpaper


1. Touch the photo you want to set as wallpaper to open it.
2. Touch **Menu** at the bottom of the screen to open the Options menu. If **Menu** disappears, touch the screen to redisplay it.
3. Touch **More > Set as > Wallpaper**.
4. Crop the photo, if necessary, then touch **Save**.

Gallery


Opening Gallery and Viewing Your Albums

Open the **Gallery** application to view albums of your pictures and videos.

To open Gallery and view your albums


- ▶ Touch the **Apps Key**  > **Gallery** .

OR

- ▶ Open Gallery from the **Camera** application by touching **Gallery** .
- The **Gallery** application presents the pictures and videos saved in your phone (internal and external memory), including those you've taken with the **Camera** application and those you downloaded from the web or other locations.

If you have a Picasa™ account synchronized with one of your phone's Google™ Accounts, you'll also see your Picasa web albums in Gallery.



Entertainment

- ▶ Touch an album to open it and view its contents.
The pictures and videos in the album are displayed in chronological order (except from Camera).
- ▶ Touch a picture or video in an album to view it.
- ▶ Return to the main Gallery screen at any time by touching  at the top left of the screen.

Working with Albums

Albums are groups of images and videos in folders on your microSD card and internal memory or in Picasa web albums.


To open an album and view its contents


- ▶ Touch the **Apps Key**  > **Gallery**  and touch the album whose contents you want to view.

- ▶ Use the slider bar at the bottom of the screen to scroll horizontally through your pictures and videos.

- ▶ The date of the images in view is displayed, so you can scroll by date.
- ▶ You can also scroll through an album by swiping the screen left or right.

To change how the contents of an album are displayed

You can view the images and videos in your albums in a chronological grid (except from Camera) or in stacks, sorted by the date and the location where they were taken. You switch album views with the Album View switch  at the top right of the screen.

- ▶ Drag the Album View switch  to the right to view the contents of the album in stacks.




- ▶ Drag the Album View switch  to the left to view the album contents in a chronological grid (except from Camera) again.

Pinch peek

When browsing your images in stacks, you can use a spread gesture to open up the contents of an image stack. Photos contained within that stack are then smoothly cycled between your two fingertips.




To Work with Batches of Pictures or Videos

In addition to working with whole albums and with individual pictures, you can select one or more pictures or videos in an album to work on them in batches. For example, to send a few pictures from an album to a friend.




1. Touch the **Apps Key**  > **Gallery** .
2. Open the album that contains the pictures and videos you want to work with as a batch.
3. Touch the **Menu Key** .
4. Touch the pictures you want to work with to checkmark them. Touch a checkmarked item to remove the checkmark.
You can checkmark all items or remove all checkmarks, by touching **Select All** or **Deselect All** at the top of the screen.
5. Use the control buttons at the bottom of the screen to perform actions on the checkmarked items. The control buttons available depend on the mix of items you've selected.

To share an album

You can share the entire contents of one or more albums or individual images or videos from an album.




1. Touch the **Apps Key**  > **Gallery** .
2. Touch the **Menu Key** .
3. Checkmark or uncheckmark the album(s) you want to share.
4. Touch **Share** at the bottom left of the screen and touch the application you would like to use to share the selected albums.
5. Enter the necessary information and share it.

To get details about an album

1. Touch the **Apps Key**  > **Gallery** .
2. Touch the **Menu Key** .
3. Checkmark or uncheckmark the album(s) you want to see details about.
4. Touch **More** at the bottom right of the screen, then touch **Details** from the pop-up menu.

To delete an album



You can delete an album and its contents from your microSD card and internal memory.

1. Touch the **Apps Key**  > **Gallery** .
2. Touch the **Menu Key** .
3. Checkmark or uncheckmark the album(s) you want to delete.
4. Touch **Delete** at the bottom center of the screen. Touch **Confirm Delete** in the pop-up menu.

Working with Pictures

Use Gallery to view pictures that you've taken with the **Camera** application, downloaded, copied onto your microSD card and internal memory, or that are stored in Picasa web albums.


To view and browse pictures

1. Touch the **Apps Key**  > **Gallery**  > touch a picture.
 - ▶ Turn the phone to view the picture in vertical (portrait) or horizontal (landscape) orientation. The picture is displayed (but not saved) in the new orientation.
 - ▶ Touch the picture to view navigation, zoom, and other control buttons.
 - ▶ To zoom, touch a zoom icon (+ or -), use the pinch-to-zoom method, or just double-tap the screen.
 - ▶ When the picture is zoomed in, drag the picture to view parts that are not in view.

Entertainment

- ▶ When the picture is zoomed to fit in the window, drag left or right to view the next or previous picture in the album.

To watch a slideshow of your pictures

- ▶ When viewing a picture, touch the screen to view the control buttons then touch **Slideshow**.
- ▶ Touch the screen, or touch the **Back Key** , to end the slideshow.

To rotate a picture

1. Touch a picture you want to rotate then touch **Menu**.
2. Touch **More**. A menu opens with tools for working with the picture.

3. Touch **Rotate Left** or **Rotate Right**.
The picture is saved with the new orientation.

To use a picture as a contact icon or as Home screen wallpaper

1. Touch the picture you want to use then touch **Menu**.
2. Touch **More**.
3. Touch **Set as**.
4. Touch **Contact icon** to set the picture to identify a Contact entry or touch **Wallpaper** to set the picture as your wallpaper.
5. If you choose to set as a contact icon, the **Contacts** application will open. Touch the contact that you want to identify with the picture. If you decide to set the picture as your wallpaper, crop it, if necessary then touch **Save**.

To crop a picture

You can crop and save pictures that are stored on your microSD card and internal memory.

1. Touch the picture you want to crop then touch **Menu**.
2. Touch **More**.
3. Touch **Crop**.

The cropping box appears on top of the picture.

4. Use the cropping box to select the portion of the picture to keep; the rest of the photo will be discarded.
 - ▶ Drag from the inside of the cropping box to move it.
 - ▶ Drag an edge of the cropping box to resize it to any proportion.
 - ▶ Drag a corner of the cropping box to resize it with fixed proportions.

5. Touch **Save** to save a copy of the picture as you cropped it. The original uncropped version remains in your phone's memory.

To get details about a picture

1. Touch the picture you want then touch **Menu**.
2. Touch **More**.
3. Touch **Details**.

Entertainment

To share a picture

You can share a picture by sending it to friends or posting it in a Picasa web album.

1. Touch the picture you want to share then touch **Menu**.
2. Touch **Share**.
3. In the menu that opens, touch the application to use to share the selected picture.
4. Enter the necessary information and share it.

To delete a picture

You can delete a picture from your microSD card and internal memory.

1. Touch the picture you want to delete then touch **Menu**.
2. Touch **Delete**, then touch **Confirm Delete** in the dialog box that opens.

Working with Videos

Use the **Gallery** application to play videos that you've taken with the **Camera** application and to share them with friends.




To play videos

- ▶ Open a Gallery album then touch a video.
The video plays in the orientation you recorded it in.




- ▶ Touch the screen while the video is playing to view the playback controls.

To share a video

You can share your videos in a variety of ways, including sending it by email or multimedia message (MMS), or via a Bluetooth device. You even have the option to share your videos publicly by uploading it to the YouTube™ website.

1. Touch the **Apps Key**  > **Gallery** , then touch an album.
2. While viewing an album, touch the **Menu Key** .
3. Touch to checkmark the videos you wish to share.
4. Touch **Share**.
5. In the menu that opens, touch the application you would like to use to share the selected videos.
6. Enter the necessary information and share it.

To delete a video

1. Touch the **Apps Key**  > **Gallery** , then select an album.
2. While viewing an album, touch the **Menu Key** .
3. Touch to checkmark the videos you want to delete.
4. Touch **Delete**.
5. Touch **Confirm Delete**.

Market

Opening Android Market and Finding Applications

Open Android Market to browse and search for free and paid applications.


To open the Android Market application

- ▶ Touch the **Apps Key**  > **Market** .

When you open **Android Market** application for the first time, you must read and accept the terms of service to continue.

To get help with Android Market

Android Market Help webpages are available from all Android Market screens.

- ▶ Touch the **Menu Key**  > **Help**.

The **Browser** application opens to the Android Market Help page, with links to many help topics.

To browse for applications

You can browse applications by category and sort them in different ways.

1. On the Android Market home page, touch a top-level category. These are displayed as tab buttons near the top of the screen and include **Apps**, **Games**, and **Verizon**.
2. Scroll to view subcategories and touch the one you want to explore.
3. Touch an application to open its details screen, or further sort the subcategory by touching **Top paid**, **Top free**, or **Just in**.





Entertainment

To open a screen with details about an application

- ▶ At any time while browsing Android Market, touch an application to open its details screen.

The Application details screens include a description, ratings, comments, and related information about the application. From this screen, you can download, install, uninstall, and rate the application, and more.

To search for applications

1. Touch  at the top right of the screen or touch the **Search Key** .
2. Enter all or part of an application's name or description, or the developer's name you want to search for then touch  or  on the keypad.
3. Touch a search result to open that application's details screen.

To return to the Android Market home screen

You can return directly to the Android Market home screen from most other screens in Android Market.

- ▶ Touch the **Market icon**  at the top left of the screen.

OR

- ▶ Touch the **Menu Key**  > Home.

Downloading and Installing Applications


When you find an application you want, you can install it on your phone.

To download and install an application

NOTE Before you can download a paid application, you must set up a billing arrangement.

1. Find an application you want and open its details screen.

In the application's details screen, you can read more about the application, including its cost, overall rating, and comments by users. Scroll down to the Developer Info section to view more applications by this developer, visit the developer's website, or send the developer an email message.

2. Touch the **Menu Key**  > **Security** to preview the functions and data the application can access on your phone if you install it.

If you're not comfortable with the access the application requires, don't continue.

3. Touch **Free** (for free applications) or **Buy** (for paid applications).

If the application requires access to your data or control of any functions on your phone, Market tells you what the application can access.

WARNING!

Read this screen carefully. Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you touch **OK** on this screen, you are responsible for the results of using this item on your phone.

4. If you agree to the application's access requirements, touch **OK**.
 - ▶ If you selected a paid application, you're redirected to the Google™ Checkout screen to pay for the application before it's downloaded to your phone.
 - ▶ If you selected a free application (or after touching **Buy now** in Google Checkout), you receive a series of notifications as the application is downloaded and then installed on your phone.

When the application is installed, you can touch the notification to open the application or open it by touching its icon in the Apps screen.

You have 24 hours to try out an application and, if you decide you don't want it, to uninstall it for a refund.

Entertainment

If you have another Android™ phone, you can download a paid application to that phone using the same Android Market account, at no additional charge.

To create a Google Checkout account

You must have a Google Checkout account associated with your Google Account to purchase items from Android Market.

- ▶ On your computer, go to <http://checkout.google.com> to establish a Google Checkout account.

OR

- ▶ The first time you use your phone to buy an item from Android Market, you're prompted to enter your billing information to set up a Google Checkout account.

WARNING!

When you've used Google Checkout once to purchase an application from Android Market, the phone remembers your password, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission.

Music

Transferring Music Files to Your Phone

The **Music** application plays audio files that are stored on your phone's microSD card. Copy audio files from your computer onto the microSD card before you open the **Music** application. The **Music** application supports audio files in numerous formats, including MP3, M4A (DRM-free AAC files, from iTunes®), AMR, MIDI, and OGG Vorbis.

NOTE The LG USB driver needs to be installed on your PC before connecting your phone to transfer music.

To copy music files onto the phone's microSD card

1. Connect the phone to your computer with a USB cable. If the default connection mode is not set to Mass Storage, open the Notifications panel and touch **USB connected > Mass Storage**. Your computer will prompt you with different actions to take. Choose to open the folder to view files.
 - ▶ Use the computer to organize your audio files then create a music folder at the top level of the microSD card.
- NOTE** The VS920 has an internal memory and can use a removable microSD card to store user content, such as photos, videos, and voice recordings.
- If the USB connection mode is set to Mass Storage when connecting the phone to a PC via USB cable, two removable disk drives will be displayed on your PC, one for the internal memory and another for the microSD card (if installed). You can copy files to and from both disk drives."
2. Use the computer to copy music and other audio files into the folder that you created on the microSD card.
 - ▶ You can use subfolders on the microSD card to organize your music files or you can simply copy the audio files to the top level of the microSD card.
 3. Open the Notifications panel and touch **USB connected > Charge Only**. Then disconnect the USB cable from the phone.

Opening Music and Working with Your Library


After you've copied some music onto your microSD card you can open the **Music** application and see your library of music files, sorted in one of four ways.

To open Music and view your music library


- ▶ Touch the **Apps Key**  > **Music** .

The **Music** application searches the microSD card for music files you copied to your card, then builds a catalog of your music based on the information contained in each music file. This can take from a few seconds to several minutes, depending on how many files you have copied onto the microSD card.

When the catalog is complete, the Music library screen opens with tabs that you can touch to view your music library organized by Artists, Albums, Songs, or Playlists.

You can return to the main Library screen from most other screens in the **Music** application by touching the **Menu Key**  > **Library**.

To search for music in your library

1. Open the main Library screen then touch the **Search Key** .
2. Start typing the name of the artist, album, or track you're looking for. Matching songs are displayed in the list below the search box.
3. Touch a matching song to play it or touch a matching album or artist to view a list of associated songs.

To delete a song from the microSD card

You can delete music from the storage card.

- ▶ Touch and hold a song in a library list. In the menu that opens, touch **Delete**.

OR

- ▶ On the Playback screen, touch the **Menu Key**  > **Delete**.

You can also delete music files from the microSD card when your phone is connected to the computer. To do this, browse for the music files you wish to delete and delete them from the folder.


Playing Music

You can listen to music using the phone's built-in speaker, through a wired headset, or through a wireless Bluetooth stereo headset that supports the A2DP profile.

To play music

- ▶ Touch a song in your library to listen to it.

OR

- ▶ While viewing a list of tracks in an album, touch the **Menu Key**  > **Play all**.

The Playback screen opens and the song you touched or the first song in the album or other playlist starts to play. Your music continues to play even when you switch applications or receive a phone call. The tracks in the current playlist play in order until it reaches the end, then stops. If you choose a repeat option, playback only stops when you stop it.









Entertainment

You can return to the Playback screen from most other screens in the **Music** application by touching the currently playing song at the bottom of the screen.

You can return to the Playback screen from any other application by opening the Notifications panel and touching the ongoing music notification.

To control playback

The Playback screen contains several icons that you can touch to control the playback of songs, albums, and playlists:

	Touch to pause playback.
	Touch to resume playback.
	Touch to skip to the next track in the album, playlist, or shuffle.
	Touch to restart the current track or skip to the previous track in the album, playlist, or shuffle.
	Touch to open the current playlist.
	Touch to play the current playlist in shuffle mode (tracks are played in random order).
	Touch to set repeat mode to repeating all songs, repeat current song, or repeat off.
	Touch to activate or deactivate the Dolby Mobile setting, which enhances your music listening.

To control playback volume

In addition to the techniques for setting media volume, you can control the volume of music in the **Music** application.

- ▶ Press the phone's up/down **Volume Keys**.
A panel opens to show the current media volume.
Some headsets include their own volume controls or ways to pause and resume playback or to skip tracks.

To play your tracks in a party shuffle

When you turn on Party Shuffle, the **Music** application plays tracks from your microSD card in random order until Party Shuffle is turned off.

- ▶ In a Library screen, touch the **Menu Key**  > **Party shuffle**.
The **Music** application creates a playlist of tracks selected randomly from your microSD card and starts playing them.
- ▶ View the current playlist that Party Shuffle is playing by touching the **Playlist icon**  on the Playback screen.
- ▶ Add a track to the end of the Party Shuffle playlist by touching and holding the name of a track in your library. In the menu that opens, touch **Add to playlist** > **Current playlist**.
- ▶ Stop Party Shuffle by touching the **Menu Key**  > **Party shuffle off**.

To customize settings in the Playback or a Library screen

 
Touch the **Menu Key**  > **More** > **Settings**.

- ▶ **Show notification** Shows the controller on the notification bar.
- ▶ **Sleep timer** Turns off the player automatically. Touch the following options to apply sleep timer: **Off**, **After 10 minutes**, **After 20 minutes**, **After 30 minutes**, **After 1 hour**, **After 2 hours**
- ▶ **Dolby Mobile** Applies the following sound effect (Dolby) options: **Off**, **Neutral**, **Expansive**, **Bass Boost**, **Treble Boost**, **Vocal Boost**

Entertainment

Landscape view

When holding the phone in landscape orientation, the **Music** application screen changes to fit the screen as shown below:




To use a song as a ringtone

You can use a song as your phone ringtone, in place of one of the ringtones that come with the phone.

- ▶ Touch and hold a song in a Library list. In the menu that opens, touch **Use as ringtone**.

OR

- ▶ On the Playback screen, touch the **Menu Key**  > **More** > **Use as ringtone**.


Working with Playlists

You can create playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle.


To create a playlist

1. When viewing a list of songs in the Library, touch and hold the first song you want to add to the new playlist.
2. Touch **Add to playlist**.
3. Touch **New**.
4. Enter a name for the playlist and touch **Save**.

The new playlist is added to the Playlist library.

You can also add the song that is playing in the Playback screen as the first song in a playlist by touching the **Menu Key**  > **Add to playlist** or touching **Save as playlist** to save all the songs in the current playlist as a playlist.

To add a song to a playlist

1. While viewing a list of tracks in the Library, touch and hold a song to display an Options menu.
2. Touch **Add to playlist**.
3. Touch the name of the playlist to add the song to.
You can also add the song that is playing in the Playback screen to a playlist by pressing the **Menu Key**  > **Add to playlist**.


To remove a song from a playlist

1. Open a playlist.
2. Touch and hold the song you want to remove then touch **Remove from list**.

To delete or rename a playlist

1. Open the Playlist library.
2. Touch and hold the playlist to display the Options menu then touch **Delete** or **Rename**.



To sync from your phone

To sync your phone from the **Music** application, touch the **Menu Key**  > **More** > **Sync** to connect with Windows Media Player or V CAST Music Rhapsody.

SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.



To turn SmartShare on and allow sharing contents

1. Touch the **Apps Key**  > **Settings**  > **Wireless & networks** > **SmartShare settings**.
2. Touch **SmartShare** to checkmark and turn the function on.
 - ▶ Touch **Always allow requests** if you would like to automatically accept sharing requests from other devices.
3. Under the Sharing contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos**, and **Music**.
4. SmartShare is now activated and ready to share contents.

To control your renderer devices

Let your renderer device (e.g., TV) play multimedia contents from your remote content library (e.g., PC).

NOTE Make sure that the DLNA functionality of your devices is properly configured (e.g., TV and PC).

1. Touch the **Apps Key**  > **SmartShare** .
2. Touch the top right button to select the device from renderer lists.
3. Touch the top left button and select the device of the remote content library.
4. You can browse the content library.
5. Touch and hold a content thumbnail and flick them to the top area with your finger or touch the play button.

To share contents from your phone to your renderer device (e.g., TV)

NOTE Make sure that your renderer device is properly configured.

1. While browsing your pictures or videos using the **Gallery** application, touch and hold to select files. Then you will be able to select multiple files to be shared.
2. Touch **Share** on the menu and select **SmartShare**.
3. **SmartShare** is automatically launched with the selected files.
4. Touch the top right button to select the device from renderer lists.
5. Touch the play button to let your renderer device play the files.

NOTE Follow the same steps to use the Music player to share music files.



- NOTICE**
- Check that your device is connected with your home network using a Wi-Fi connection to use this application.
 - Some DLNA enabled device devices (e.g., TV) support only the Digital Media Player (DMP) feature of DLNA and will not appear in the renderer device list.
 - Your device might not be able to play some contents.

Video player

You can play a wide variety of videos using the Video player. The video player supports the following file formats: 3gp, mp4, avi, wmv, mov, mkv (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1, DivX/XviD).






- Supported file formats are dependent on the software version of the phone.

To open the Video player application

1. Touch the **Apps Key**  > **Video player** .
2. Touch the video you want to play.


Playback controls

Touch the screen to display the playback controls. The following options allow you to control the video playback:

	Pause playback.
	Play a video file.
	Touch and hold to fast-forward playback.
	Touch to start playing the video from the beginning. Touch and hold to rewind playback.
	Touch to activate or deactivate the Dolby Mobile setting, which enhances your music listening.

Video player list options

The following options are available from the Video player list screen:

- ▶ **Delete** Touch the **Menu Key**  > **Delete**, then touch each video to delete. When all files to be deleted have been checkmarked, touch **Delete** > **OK** to confirm.
- ▶ **Sync** Touch the **Sync** button at the bottom of the screen (after connecting your phone to your computer via USB cable) to connect to Windows Media Player to synchronize your video files.

YouTube™

Opening YouTube and Watching Videos

You can browse, search for, view, upload, and rank YouTube videos on your phone with the **YouTube** application.

To open the YouTube application



- ▶ Touch the **Apps Key**  > **YouTube** .

Touch a video to watch it or touch to take other actions on the video.





Entertainment

To watch and interact with YouTube videos

- ▶ Touch a video to play it.

- ▶ Touch the screen to view the Playback controls. You can pause and play the video or drag the slider to the point in the video you want to watch.
- ▶ Touch the **Back Key**  to stop playback and return to the videos list.
- ▶ Touch the **Menu Key**  for the following options: **Home**, **Browse**, **Search**, **My Channel**, **Upload**, and **Settings**.
For details about these features, visit the YouTube website.





To search for videos

1. At the top of the main YouTube screen, touch  or the **Search Key** .
2. Enter the text to search for or touch the **Microphone icon**  to search by voice.
3. Touch a suggestion below the search box or touch the **Search icon** .
4. Scroll through the search results and touch a video to watch it.

To share your videos on YouTube

You can record and share a video using the **YouTube** application. First, you must create a YouTube account and sign into it on your phone.

You can also share the videos you record with the **Camera** application by uploading them to YouTube.

1. Touch  at the top right of main YouTube screen.
2. If you want to set any configurations manually, touch the screen to open the video camera settings.
3. Point the lens to frame the scene where you want to start.
4. Touch  to start recording.
5. Touch  to stop recording.
6. Touch .



The YouTube Upload details screen is displayed.

7. Touch **More details** to enter a title, description, and tags for your video.
8. If you want to share the video with everyone, checkmark **Public**. If not touch **Private**.
9. Touch **Upload**.

Voice Recorder

The **Voice Recorder** application records audible files for you to use in a variety of ways. Use them simply to remind you about something you don't want to forget (like a grocery list) or record sound effects that you can attach to a message or set as a ringtone for calls.



Record a Voice Memo

1. Touch the **Apps Key**  > **Voice Recorder** .
2. Touch **Record** to start recording.
3. Speak into the microphone.
4. When you're finished, touch **Stop**.

The recording is automatically saved to your recordings list.




- ▶ Touch **Play** to listen to your recording.
- ▶ Touch **Record** to record a new voice memo.
- ▶ Touch **List** to view your list of recordings.

Play a Voice Memo

1. Touch the **Apps Key**  > **Voice Recorder** .
2. Touch **List**.
3. Touch the voice memo you wish to play.

NOTE You can send the voice memo to others by touching and holding a voice memo and touching **Share**.

Managing your Voice Memos

1. Touch the **Apps Key**  > **Voice Recorder** .
2. Touch **List**.
3. Touch the **Menu Key**  > **Share** or **Sort by**.
 - ▶ Touch **Share** to send via Bluetooth, Email, Gmail, Messaging, or other compatible applications you have downloaded.
 - ▶ Touch **Sort by** to choose how to display the list, either by date or by name.

Calendar

Viewing Your Calendar and Events

Open the **Calendar** application to view events you've created or that others have invited you to.

When you first set up your phone, you configured it to use an existing Google Account or you created a new account. The first time you open the **Calendar** application on your phone, it displays any existing calendar events from your Google Account on the web.

You can add additional accounts with Google Calendar or Microsoft Exchange calendars to your phone, and configure them to display in Calendar.

When you first set up Calendar to synchronize events on your phone, it includes events from the previous month through one year in the future. Subsequently, Calendar keeps a year's worth of future events synchronized between your phone and the web, plus any later events that you add to your calendar using Calendar on your phone.

To open the Calendar application

- ▶ Touch the **Apps Key**  > **Calendar** .

Events from each account you've added to your phone and configured to synchronize calendars is displayed in Calendar.

Events from each calendar are displayed in a different color.

To change your calendar view

- ▶ Touch the **Agenda**, **Day**, **Week**, or **Month** tabs above the calendar.
Each view displays the events in your calendar for the period of time specified.
- ▶ To view more information about an event in Agenda, Day, or Week view, touch the event.
- ▶ To view the events of a day in Month view, touch a day. The event will be displayed below the calendar. Touch the event to view its details.

Working in Agenda View

Agenda view is a list of your events in chronological order. All-day and multi-day events are listed at the start of each day.

To switch to Agenda view

- ▶ Touch the **Agenda** tab above the calendar.

To learn more about events in Agenda view

- ▶ Touch an event.

A screen with details about the event opens.

Working in Day View

Day view displays a chart of the events of one day, in a table of one-hour rows. The current time will be highlighted. All-day and multi-day events are displayed at the top. Part of the title of each event is displayed in the rows that correspond to when it occurs.

To switch to Day view

- ▶ Touch the **Day** tab above the calendar.

To learn more about events in Day view

- ▶ Touch an event to view its details.
- ▶ Touch and hold an event to open an Options menu to view, edit, or delete the event. Also allows you to create another new event in the same time slot for juggling multiple events.

To add an event in Day view

- ▶ Touch and hold an empty spot or an event in the day to open an options menu then touch **New event** to create a new event at that time.

Tools

Working in Week View

Week view displays a chart of the events of one week. All-day and multi-day events are displayed at the top.

To switch to Week view

- ▶ Touch the **Week** tab above the calendar.

To learn more about events in Week view

- ▶ Touch an event to view its details.
- ▶ Touch and hold an event to open an options menu to view, edit, or delete the event. Also allows you to create another new event in the same time slot for juggling multiple events.

To add an event in Week view

- ▶ Touch and hold an empty spot or an event in the week to open an options menu then touch **New event** to create a new event at that time.

Working in Month View

Month view displays a chart of the events of the month. Segments of each day with scheduled events are green in the day's vertical bar.

To switch to Month view

- ▶ Touch the **Month** tab above the calendar.

To view more information about events in Month view

- ▶ Touch a day to display the events below the calendar. You can then touch the event to view more information about it.

Tools

Viewing Event Details


You can view more information about an event in a number of ways, depending on the current view.


To view information about an event

- ▶ In Agenda, Day, or Week view, touch an event to view its details.
- ▶ In Month view, touch a day to display the events below the calendar. Then touch an event to view its details.

Touch the **Attending** field to set or change whether you'll attend the event.

Other attendees' status is displayed below your own.


Touch the **Reminders** field to change reminder settings, or touch  to add a reminder.

If you have permission to change events, you can touch the **Menu Key**  to edit or delete the event.

Creating an Event

You can use the **Calendar** application on your phone to create events that appear on your phone and in Google Calendar on the web.

To create an event


1. In any Calendar view, touch the **Menu Key**  > **New event** to open an Event details screen for a new event.

You can also touch and hold a spot in Day, Week, or Month view. In the menu that opens, touch **New event** to open the Event details screen with that day and time already entered.

2. Add details about the event.



Enter a name, time, and optional additional details about the event.

If you have more than one calendar, you can choose the calendar to which to add the event.

Touch  to add more reminders.

3. Invite guests to the event.

In the **Guests** field, enter the email addresses of everyone you want to invite to the event. Separate multiple addresses with commas (,). If the people to whom you send invitations use Google Calendar, they'll receive an invitation in Calendar and by email.


4. Touch the **Menu Key**  > **Show extra options**  to add details about the event.
5. Touch **Save** to save the event.

The event is added to your calendar.



Editing or deleting an event

You can edit or delete an event that you created on the phone or on the web. You can also edit or delete events created by others, if they have given you permission.

To edit an event

1. Touch an event to view its details.
2. Touch the **Menu Key**  > **Edit event**.


The Event Details screen opens.

Touch the **Menu Key**  > **Show extra options**  to add or edit additional event details.

3. Make your changes to the event.
4. Touch **Save** to save the event.

To delete an event

There are a number of ways to delete an event.


- ▶ In Agenda view, touch an event to view its details. Then touch the **Menu Key**  > **Delete event** > **OK**.
- ▶ In Day or Week view, touch and hold the event > **Delete event** > **OK**.


If the event repeats, you're asked whether you want to delete just that occurrence, this and all future occurrences, or all past and future occurrences in your Calendar.

Setting an Event Reminder

You can set one or more reminders for an event, whether or not you created the event or have permission to edit its other details.

To set an event reminder

1. Touch an event to view its details.
2. If no reminder is set, touch  to automatically add a reminder for 10 minutes before the event.


If a reminder is already set, you can add an additional reminder by touching .

3. Touch the reminder field and, in the dialog box that opens, touch the length of time before the event that you want to be reminded of it.

When the time comes, you receive a notification about the event.

You can use Google Calendar on the web to configure additional reminder settings.



To delete an event reminder

1. Touch an event to view its details.
2. Touch .

Calculator

Allows you to perform simple mathematical calculations.

To open and use the Calculator

- ▶ Touch the **Apps Key**  > **Calculator** .

- ▶ Enter numbers and arithmetic operators on the Basic panel.
- ▶ Drag the Basic panel to the left to open the Advanced panel.
- ▶ Touch and hold the Calculator's display to open a menu where you can copy what you've entered and access other tools.
- ▶ Touch **Clear** to delete the last number or operator you entered. Touch and hold **Clear** to delete all of the entered information.

Tools

6. Touch **Alarm tone** to select a ringtone for the alarm, then touch **OK**. The ringtone plays briefly when you select it.
7. Touch **Puzzle lock on** to checkmark the setting, which requires you to wake up enough to solve a simple puzzle to dismiss the alarm.
8. Touch **Label** to enter a name for the alarm.
9. When you're finished, touch **Save**.

Setting Timer

The Timer can be used to alert you with an audible signal when a set amount of time has passed.

1. Open the **Clock** application and touch the **Timer** tab.
2. Set the time by scrolling Hour, Minute or Second fields.
3. Touch **Vibrate** to checkmark the setting and have the phone vibrate when the set time expires.
4. Touch **Alert Tone** to select an alert tone for the timer, then touch **OK**.
5. Touch **Start** to begin the time countdown.

Setting World clock

Allows you to determine the current time in another time zone or city.

1. Open the **Clock** application and touch the **World Clock** tab.
2. Touch **New City** and search through the available cities for the one you want.

Using Stopwatch

This feature allows you to use your phone as a Stopwatch.


1. Open the **Clock** application and touch the **Stopwatch** tab.
2. Touch **Start** to start timing and touch **Stop** to stop the time.
You can use the Lap function by touching **Lap** to record lap times.
3. Touch **Reset** or **Resume**.

DeskHome application

The **DeskHome** application displays a Digital clock, Calendar, and a Slideshow of your saved photos in the Gallery. You can also access the **Music** application.

HDMI

NOTE You can only view your own photos and recorded videos without WM DRM and DivX DRM. You cannot view VZW streaming contents.

1. To select an HDMI format, touch the **Menu Key**  > **Settings** > **Connectivity** > **Resolution**. To set HDMI to automatically start when the HDMI cable is connected, touch **HDMI** to checkmark the option.
2. Connect an HDMI cable to the HDMI port on your phone and set an external input port on your TV monitor to HDMI.
3. You can view contents on the TV monitor via HDMI when the HDMI cable is connected.

Polaris Office

Polaris Office 3.0 is a professional Mobile Office Solution which enables users to conveniently view or edit various types of office documents including Word, Excel, and PowerPoint file extensions anywhere, anytime, using their mobile device.

Managing Files

Polaris Office 3.0 provides mobile users with the convenience of managing files including copying, moving, and deleting files and folders right on the device.

Viewing Files

Mobile users now have the convenience of being able to view a wide variety of file types including Microsoft Office documents, Adobe PDF and images right on their mobile device. When viewing these documents using Polaris Office 3.0, the objects and layout remain unchanged from their original documents.

Editing Microsoft Office Files



Mobile users also have the convenience of being able to create, edit, and save Word, Excel and PowerPoint documents on their mobile device. Saved Documents generated or modified using Polaris Office 3.0, are not distorted from the originals.

Settings

Opening Settings

The **Settings** application contains most of the tools for customizing and configuring your phone. All of the settings in the **Settings** application are described in this section.

To open Settings


- ▶ From the Home screen, touch the **Menu Key**  > **Settings** .

OR

- ▶ Touch the **Apps Key**  > **Settings** .

Changing Browser settings

You can configure a number of Browser settings, including several that you can use to manage your privacy.

- ▶ To open the Browser settings screen, touch the **Menu Key**  from the Browser and touch **More > Settings**.

Page content settings

Text size Opens a dialog box where you can increase or decrease the size of the text that Browser uses when displaying webpages.

Default zoom Opens a dialog box where you can increase or decrease the magnification level that Browser uses when first opening a webpage.

Open pages in overview Checkmark to open webpages zoomed out, in an overview. Uncheckmark to open webpages at 100% size, displaying the top-left corner of the page.

Text encoding Opens a dialog box where you can change the character-encoding standard that Browser uses when displaying text on a webpage.

Block pop-up windows Checkmark to prevent websites from opening windows unless you request it.

Settings


Load images Uncheckmark to omit images when Browser displays a webpage. This speeds webpage loading, which can be useful if you have a slow connection.

Auto-fit pages Checkmark to have Browser optimize the presentation of text and other elements of webpages to fit your phone's screen. Checkmarking this option also causes the Browser to reflow a column of text to fit the screen if you double-tap the screen directly after zooming with your fingers. Uncheckmark to view pages as designed for a computer screen so that double-tapping simply switches between zoomed-in and default view.

Landscape-only display Checkmark to display pages in landscape (horizontal) orientation on your screen, regardless of how you are holding the phone.

Enable JavaScript Uncheckmark to prevent JavaScript from running on webpages. Many webpages function correctly only if they can run JavaScript features on your phone.

Enable plug-ins Uncheckmark to disable plug-ins from webpages.

Open in background Checkmark to open new windows in the background when you touch and hold a link and touch **Open in new window**. This is useful when you are working with windows that take a long time to download and display. Touch the **Menu Key**  > **Windows** and then touch the new window to view it. Uncheckmark if you prefer new windows that you open in this way to open in place of the current window.

Set home page Opens a dialog box where you can enter the URL of a page that you want to access whenever you open a new Browser window. If you prefer to open new Browser windows more quickly, by not opening any page by default, leave the dialog box blank.

Invert color Checkmark to display websites in inverted colors.

Storage Opens a dialog box that allows you to manage the storage location for your pictures between the internal memory and the microSD card.

Privacy settings

Clear cache Allows you to clear locally cached content and databases.

Clear History Allows you to clear the Browser history.

Accept cookies Checkmark to allow websites to save and read cookie data.

Clear all cookie data Allows you to clear all Browser cookie data.

Remember form data Checkmark to allow the Browser to remember data entered into forms for later use.

Clear form data Allows you to clear all saved form data.

Enable location Checkmark to allow sites to request access to your location.

Clear location access Allows you to clear location access for all websites.

Security settings

Remember passwords Checkmark to allow the Browser to save user names and passwords for websites.

Clear passwords Allows you to clear all saved passwords.

Show security warnings Checkmark to show a warning if there is a problem with a site's security.

Advanced settings

Website settings Allows you to manage advanced settings for individual websites.

Reset to default Allows you to restore the Browser settings to default.

Wireless & networks

The Wireless & networks setting allows you to configure and manage wireless radio communications. These settings include Airplane mode.

Airplane mode Checkmark indicates all wireless radio communications are turned off.

Settings

Wi-Fi Checkmark to turn on Wi-Fi functionality to connect to available Wi-Fi networks.

Wi-Fi settings

▶ **Wi-Fi settings screen**

The Wi-Fi settings menu allows you to set up and manage wireless access points.


Wi-Fi Checkmark to turn on Wi-Fi so you can connect to Wi-Fi networks.

Network notification Checkmark to receive a notification when an open Wi-Fi network becomes available.

Wi-Fi networks Displays a list of Wi-Fi networks you've previously configured and those detected when the phone last scanned for Wi-Fi networks.

Add Wi-Fi network Allows you to add a Wi-Fi network by entering its Network SSID (the name it broadcasts) and security type.

▶ **Advanced Wi-Fi settings screen**

The Advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Touch the **Menu Key**  > **Advanced**.

Regulatory domain Sets the number of channels to use.

Wi-Fi sleep policy Opens a dialog box to specify when to switch from Wi-Fi to mobile data. Disabling sleep uses more battery power.

MAC address Displays the Media Access Control (MAC) address of your phone when connecting to Wi-Fi networks.

IP settings If you checkmark **Use static IP**, you can use IP settings to enter an **IP address** and other network settings for your phone manually, rather than using the DHCP protocol to obtain network settings from the Wi-Fi network itself.

SmartShare settings

▶ SmartShare settings screen

The SmartShare settings menu allows you to set up and manage SmartShare.

SmartShare Checkmark to turn on SmartShare and make shared contents discoverable by other devices.

Always allow request Checkmark to allow you to always accept sharing requests automatically.

Device name Allows you to view and edit the name your phone displays to other devices when trying to share contents.

▶ Sharing contents

Pictures Checkmark to share all image contents.

Videos Checkmark to share all video contents.

Music Checkmark to share your music library.

Bluetooth Checkmark to turn on Bluetooth functionality to connect to Bluetooth devices. **Bluetooth QD ID: B017359**

Bluetooth settings

▶ Bluetooth settings screen

Bluetooth Checkmark to turn on Bluetooth so you can connect to Bluetooth devices.

Device name Allows you to view and edit the name your phone displays to other Bluetooth devices when trying to pair.

Discoverable Checkmark to make your phone discoverable to other Bluetooth devices for 120 seconds.

Scan for devices Touch to search for and display information about nearby Bluetooth devices.

Settings

Bluetooth devices Displays a list of Bluetooth devices that you've previously configured and those detected when the phone last scanned for Bluetooth devices.

Tethering Allows you to configure your phone's mobile data connection to share it via USB.

VPN settings

▶ VPN settings screen

Add VPN Allows you to add different types of Virtual Private Networks (VPNs).

VPNs Displays the list of VPNs that you've previously configured.

Mobile networks

▶ Mobile networks settings screen

Data enabled Uncheckmark to prevent your phone from transmitting data on any mobile network. This is useful if you are traveling in an area where you do not have a mobile data plan and want to avoid charges for data use on local carriers' mobile networks. Disabling this setting does not prevent your phone transmitting data on other wireless networks, such as Wi-Fi or Bluetooth.

Global data roaming access Allows you to set up data services while roaming.

System select Allows you to change CDMA roaming mode between LTE/CDMA or CDMA Only.

Network type and strength Allows you to see the current network type and the signal strength.

Call settings

Use Call settings to configure phone call settings.

Voicemail

Voicemail service Allows you to select your carrier's voicemail service or another service, such as Google Voice™.

Voicemail settings If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail. You can enter a comma (,) to insert a pause into the number. For example, to add a password after the phone number. If you are using Google Voice, this opens a screen where you can view the Google Voice number or sign out of Google Voice.

Other call settings

Call forwarding Allows you to enable and disable call forwarding and enter the phone number you wish to forward calls to.

Quick text Checkmark to enable or disable the Quick text messages used when you want to ignore a call and send the caller a specified text message response instead.

Quick text settings Allows you to edit, add, and delete the Quick text messages used in place of answering a call.

Show dialpad Allows you to select which type of calls to display the dialpad on.

Auto Retry Opens a dialog box to enable or disable Auto Retry mode. You can configure the phone to automatically redial a number after a certain amount of time.

TTY mode Opens a dialog box to set TTY mode to communicate with other TTY devices.

DTMF Tones Opens a dialog box to set the length of DTMF tones.

Voice Privacy Checkmark enables enhanced privacy mode.

Assisted dialing Allows you to configure the Assisted dialing options when you are traveling outside your home country.

Auto Answer Checkmark enables Auto Answer with Handsfree.

Settings

Sound

Use the Sound settings to configure how and at what volume the phone rings and vibrates when the phone rings, you receive a notification, an alarm sounds, or when you play music or other media with audio, as well as other related settings.

General

Silent mode Checkmark to silence all sounds (including call and notification ringtones) except the audio from music, videos, and other media and any alarms you have set. (You must silence media and alarms in their own applications.)

Vibrate Opens a dialog box where you can configure when you want the phone to vibrate when you receive a phone call or notification. Choose from Always, Never, Only in Silent mode, or Only when not in Silent mode.

Volume Opens a dialog box where you can set the volume of ringtones that sound when you receive a phone call or notification, media (music, videos, and so on), and alarms. If you uncheckmark the option to use the same volume for both calls and notifications, you can set the notification ringtone volume independently.

Incoming calls

Phone ringtone Opens a dialog box where you can select the ringtone to sound when you receive a phone call. Touch a ringtone to listen to it.

Notifications

Notification ringtone Opens a dialog box where you can select the ringtone to sound when you receive a notification. Touch a ringtone to listen to it.

ERI sound Checkmark to enable ERI Alert sound.

Feedback

Audible touch tones Checkmark to hear tones when you use the dialpad to dial a number.

Audible selection Checkmark to play a sound when you touch buttons, icons, and other on-screen items that react to your touch.

Screen lock sounds Checkmark to play a sound when the screen is locked or unlocked.

Haptic feedback Checkmark to have the phone vibrate briefly when you touch onscreen buttons and perform other actions.

Emergency tone Opens a dialog box where you can configure how the phone reacts when you place an emergency call.

Display

Use the Display settings to configure brightness and other screen settings.

Brightness Opens a dialog box for adjusting the brightness of the screen. For the best battery performance, use the dimmest comfortable brightness.

Auto-rotate screen Checkmark to automatically switch the orientation of the screen as you turn the phone sideways.

Animation Opens a dialog box where you can set whether you want to enjoy animated transitions for some effects (such as opening menus), for all supported effects (including when navigating from screen to screen), or to enjoy a phone without any optional animation effects (this setting does not control animation in all applications).

Screen timeout Opens a dialog box to set how long to wait after you touch the screen or press a key before the screen darkens. For the best battery performance, use the shortest convenient timeout.

Settings

Location & security

Use the Location & security settings to set your preferences for using and sharing your location when you search for information and use location-aware applications, such as Bing Maps. You can also configure settings that help secure your phone and its data.

Location Settings

E911 E911 Location cannot be turned off on any mobile phone. Intended for personal safety in urgent situations, this setting cannot be altered by the user.

Verizon Location Services Checkmark to enable Verizon Wireless and third party authenticated and validated location services to access certain location information available through this and/or the network.

Standalone GPS Services Checkmark to enable your phone's standalone global positioning system (GPS) satellite receiver to pinpoint your location to within an accuracy as close as several meters ("street level"). Actual GPS accuracy depends on a clear view of the sky and other factors.

Google Location Services Checkmark to use information from Wi-Fi and mobile networks to determine your approximate location, used while searching in Google Maps and other applications. When you checkmark this option, you're asked whether you consent to sharing your location anonymously with Google's location service.

Screen unlock

Set up screen lock Opens a set of screens that guide you through drawing a screen unlock pattern or setting a PIN or password.

Security lock timer Sets the delay before the security lock automatically turns on.

Use visible pattern Checkmark to show the pattern as you enter it so that you can see what you enter.

Use tactile feedback Checkmark to receive a vibrating feedback when entering your unlock information.

SIM/RUIM card lock

Set up SIM/RUIM card lock Allows you to set if you want to require a PIN to use the phone.

Passwords

Visible passwords Checkmark to briefly show each character of passwords as you enter them so that you can see what you enter.

Device administration

Select device administrators Add or remove device administrators.

Credential storage

Use secure credentials Checkmark to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the credential storage, this setting is dimmed.

Install from SD card Touch to install a secure certificate from an SD card.

Set password Opens a dialog box where you can set or change the password for your secure credential storage. Your password must have at least 8 characters.

Clear storage Deletes all secure certificates and related credentials and erases the secure storage's own password, after prompting you to confirm that you want to do this.

Settings


Applications

You use the Applications settings menu to view details about the applications installed on your phone, manage their data, force them to stop, and to set whether you want to permit installation of applications that you obtain from websites and email.

Unknown sources Checkmark to permit installation of applications that you obtain from websites, email, or other locations other than Android Market™.

WARNING!

To protect your phone and personal data, download applications only from trusted sources, such as Android Market.

Manage applications Opens a list of all the applications and other software installed on your phone, along with their sizes. Touch the **Menu Key**  and touch **Sort by size** to display applications in order by size. Touch an application to open its Application Info screen.

Running services Allows you to view and control currently running services and applications. This option displays what processes each running service needs and how much memory it's using.

Development Allows you to set options for application development.

▶ **Development screen**

The Development screen contains settings that are useful for developing Android™ applications. For full information, including documentation of the Android APIs and development tools, see the Android developer web site (<http://developer.android.com>).

USB debugging Checkmark to permit debugging tools on a computer to communicate with your phone via a USB connection.

Stay awake Checkmark to prevent the screen from dimming and locking when it is connected to a charger or to a USB device that provides power. Don't use this setting with a static image on the phone for long periods of time, or the screen may be marked with that image.

Allow mock locations Checkmark to permit a development tool on a computer to control where the phone believes it is located, rather than using the phone's own internal tools for this purpose.


Accounts & sync

Use the Accounts & sync settings menu to add, remove, and manage your Google™ and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules and whether all applications can synchronize user data automatically.

Gmail™, Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

General sync settings

Background data Checkmark to permit applications to synchronize data in the background, whether or not you're actively working in them. Removing the checkmark can save battery power and lowers (but does not eliminate) data use.


Auto-sync Checkmark to permit applications to synchronize, send, and receive data on their own schedule. If you remove the checkmark, you must touch an account in the list on this screen and touch the **Menu Key**  > **Sync now** to synchronize data for that account. Synchronizing data automatically is disabled if **Background data** is unchecked.

Manage accounts

List of all Google Accounts and other accounts you've added to the phone. If you touch an account in this screen, its account screen opens.

▸ Account screen

This screen contains different options, depending on the kind of account.

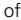For Google Accounts, it lists the kinds of data you can synchronize to the phone, with checkboxes so you can turn synchronizing on and off for each kind. You can also touch the **Menu Key**  > **Sync now**

Settings

to synchronize data. Touch **Remove Account** to remove the account along with all its data (contacts, mail, settings, and so on). You can't remove the first Google Account you added to your phone except by resetting your phone to the factory defaults and erasing all of your user data.

Privacy

Personal data

Factory data reset Erases all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application data and settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to reenter the same kind of information as when you first started Android.

SD card & phone storage

Use the SD card & phone storage settings to monitor the used and available space on your phone and on your microSD card, to manage your microSD card, and if necessary, to reset the phone, erasing all of your personal information.

SD card

Total space and Available space Lists the amount of space on any microSD card installed in your phone and the amount you have available.

Unmount External SD card Unmounts the external microSD card from your phone so that you can format the card or safely remove. This setting is dimmed if there's no external microSD card installed, if you've already unmounted it, or if you've mounted the external microSD card on your computer.

Format External SD card Permanently erases everything on the external microSD card and prepares it for use with your phone. You must unmount the external microSD card before you can format it.

Internal Memory

Total space and Available space Lists the amount of internal memory you have available.

Format Internal Memory Permanently erases everything on the internal SD card in the phone.

Internal phone storage

Available space Lists the amount of internal phone storage available.

Language & keyboard

Use the Language & keyboard settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words that you've added to its dictionary.

Select language Opens a dialog box to choose a language to use on your phone.

Input method Opens a dialog box to choose the text input method.

Swype Swype is a word-based text entry method on a standard keyboard. Touch to access settings and read the User Manual for Swype.

Language Opens a dialog box to select available languages.

Word prediction Checkmark to enable Swype to predict words as you enter characters.

Audio feedback Checkmark to enable keyboard sounds.

Vibrate on keypress Checkmark to vibrate each time you touch the keyboard.

Enable tip indicator Checkmark to enable quick help.

Auto-spacing Checkmark to automatically insert a space between words.

Auto-capitalization Checkmark to automatically capitalize words.

Show complete trace Checkmark to show the swype path.

Word choice window Opens a dialog box for displaying word choices.

Settings

Speed vs. accuracy Opens a dialog box to balance response versus error tolerance.

Swype help Opens user manual for Swype.

Tutorial Learn about Swype.

LG Keyboard Allows you to use the on-screen touch keyboard and adjust its settings.

The LG Keyboard settings apply to the on-screen keyboard that is included with your phone. The correction and capitalization features affect only the English version of the keyboard.

Keyboard layout Opens a dialog box to choose the default type of keyboard.

Writing language Opens a dialog box to choose a language to use on your phone.

Word suggestion

Prediction Checkmark to enable word predictions while typing.

Spell correction Checkmark to check spelling before suggesting words.


Auto punctuation Checkmark to automatically insert a period when the space key is tapped twice.

Voice Input Checkmark to allow you to enter text by voice.

Sound feedback Checkmark to enable the phone to play a brief sound each time you touch a key on the on-screen keyboard.

Vibrate feedback Checkmark to enable vibration when keys are touched.

LGIME User dictionary Allows you to view and edit your user dictionary.

User dictionary Allows you to view, add, and remove words from your user dictionary. Touch a word to edit or delete it. Touch the **Menu Key**  > **Add** to add a word.

Voice input & output

Voice output

▶ Text-to-speech settings

You use the Text-to-Speech settings to configure the Android text-to-speech synthesizer for applications that can take advantage of it, such as TalkBack. If you don't have speech synthesizer data installed, only the **Install voice data** setting is available.

Listen to an example Plays a brief sample of the speech synthesizer, using your current settings.

Always use my settings Allows the phone to use your default settings and override the application settings.

▶ Default settings

Default Engine Allows you to set the default speech synthesis engine to be used for spoken text.

Install voice data If your phone does not have speech synthesizer data installed, this option connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.

Speech rate Allows you to select how quickly you want the synthesizer to speak.

Language Allows you to select the language of the text you want the synthesizer to read. This is particularly useful in combination with the **Always use my settings** option to ensure that text is spoken correctly in a variety of applications.

Settings

▸ Engines

Pico TTS Allows you to view and configure the settings for the Pico TTS engine.

Connectivity

Default connection mode Opens a dialog box to choose the default connection mode when connecting your phone to a PC via USB. Choose from Charge Only, Mass Storage, Media Sync, or Internet Connection.

Always ask Checkmark to have the phone ask you to choose what USB connection mode it should connect with to a PC.

HDMI Checkmark to automatically start HDMI when the USB cable is connected.

Resolution Allows you to select the HDMI output resolution. Choose between 720p, 480p, or Automatic.

Accessibility

You use the Accessibility settings menu to configure any accessibility plug-ins you have installed on your phone.

Accessibility Allows you to enable all installed accessibility plug-ins.

Date & time

Use Date & time settings menu to set your preferences for how dates are displayed.

Use 24-hour format Checkmark to display the time using 24-hour time format — for example, 13:00 rather than 1:00 pm.

Select date format Opens a dialog box to select the format for displaying dates.

About phone

About phone includes information about your phone.

Software Update Allows you to check for Android system software updates.

Status Allows to view a list of information about your battery, mobile network connection, and other details.

Battery use Opens a list of the applications and operating system components that have used and are currently using battery power. Touch an application in the list to view details about its power use and, if available, touch a button to open a settings or information screen for that component or application.

Legal information Allows you to view legal information about the software included with your phone.

Version information Lists details about the model numbers and versions of your phone's hardware and operating system software. This information is useful if you need to work with your carrier's support team.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely

Safety

to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the example to the left, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that's acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you're talking on a cell phone, it's recommended that you turn the BT (Bluetooth) mode off for HAC.

For information about hearing aids and digital wireless phones

Wireless Phones and Hearing Aid Accessibility

<http://www.accesswireless.org/Home.aspx>

FCC Hearing Aid Compatibility and Volume Control

http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html