

- ▶ **Add Sign** Allows you to insert a pre-programmed signature with your message.
- ▶ **Callback #** Allows you to insert a pre-programmed callback number with your message.
- ▶ **Deferred** Allows you to delay sending the message until the programmed time frame.
- ▶ **Validity** Indicates the validity of message delivery to the Short Message Center (SMC) without being transmitted to the destination address for certain periods of time. Those messages will be deleted within the programmed time frame. Validity time frames are as follows: Default, 30 minutes, 1 hour, 2 hours, 12 hours, 1 day, 2 days, and 3 days.



If you select Send, it notifies you that the message was sent successfully.

**NOTE** If you send a SMS message to a phone without SMS, you will still be notified that the message was sent, however the message will not be received.

## Inbox (Menu , )

Received text messages, page messages, and e-mail lists may be searched and the contents may be viewed. Received messages are displayed from newest to oldest.

To view the list of the received messages:

1. Press Soft Key 1 **Menu**.
2. Press .
3. Select  **Inbox**.
4. **Erase/Lock** pop up is displayed by pressing Soft Key 2.

- ▶ **Reply with copy** Replies to the SMS with the original message attached.
- ▶ **Forward** Forwards a received message to others. After recipients are entered, the message can be forwarded.
- ▶ **Erase** Deletes the selected message from the Inbox.
- ▶ **Save addr** Stores the callback number, e-mail address, and numbers in user data included in the received message into your Phone Book. You can store the received number information in the corresponding number

list in the Phone Book. For an e-mail address, select the option **New Entry** and **Old Entry**. The new e-mail address may overwrite an old address entry. For new entries, an e-mail address may be stored with the new memory number.

- ▶ **Save object** Service is currently unavailable.
- ▶ **Save quick text** Save the message into the Canned message list.
- ▶ **Save Message** Save Inbox message into the Saved Folder.
- ▶ **Block Sender** Service is currently unavailable.
- ▶ **Lock/Unlock** Locks or unlocks the selected message. Locked messages will not be deleted by Erase Inbox and Erase All functions of Erase Msgs Menu.

## Out of Memory Warning

When your messages exceed the maximum, no more messages can be received until enough memory space becomes available.

At this time, the message *NOT ENOUGH MEMORY* will be displayed on the screen and new messages will not be accepted.



## Info Alerts (Menu , )

This service option is currently not available.

## Outbox (Menu , )

Up to 50 sent messages can be stored in the Outbox.





 
You may view lists and contents of sent messages in this menu and may also verify if the transmission was successful or not.

1. Press Soft Key 1 **Menu**.
2. Press .
3. Select  **Outbox**.
4. **Erase/Lock** pop up is displayed by pressing Soft Key 2.

- ▶ **Erase** Deletes a selected message from the Outbox.
- ▶ **Save Addr** Saves the address.
- ▶ **Save Quick-text** Saves the drafted message in Canned Msg.
- ▶ **Save Message** Saves Outbox message into the saved folder.
- ▶ **Lock/Unlock** Locks or unlocks the selected message. Locked messages may not be deleted by Erase Inbox and Erase All functions of Erase Msgs Menu.
- ▶ **Cancel** Cancels the transmitted message.

- ▶ **Status Code** Checks the sent message information (MSG ID/Err Class/Cause Code).

## Status

		Descriptions
	Sent	Messages saved in Short Message Center (SMC) have been transmitted.
	Fail	Indicates a failed message transmission.
	Delivery	Message has been delivered.
	Cancel	After transmission to message center has occurred, messages that have not been delivered may be canceled by transmitting cancel message.
	Pending	Transmission is unavailable in analog mode or in a no service area. Messages are pending transmission. Pending messages are transmitted automatically when digital mode becomes available.
	Multi-sending	Indicates more than one designated recipient.

**Saved (Menu , )**

Displays all the saved and draft messages.

**Draft Message:** Displays the list of messages which received *failed to send* notifications.

**Saved Message:** Displays the list of saved messages in **Inbox/Outbox**.

**Msg Settings (Menu , )**

Alert, default CB# (callback number), Auto Save, and Auto Delete may be configured for receiving new messages.

You are alerted in 3 ways when you receive a new message:

- By displaying a message on the screen.
- By sounding a beep or vibration.
- By the flashing red lamp.

**Auto Save (Menu , , )**

With this feature on, messages are automatically saved in the Outbox when transmitted.

**Auto Delete (Menu , , )**

With this feature on, old read messages are automatically deleted when you exceed storage limit.

**Callback # (Menu , , )**

Allows you to automatically send a designated callback number when you send a message.

**Msg Alerts (Menu , , )**

Allows you to select the alert type for a new message. Alert types are **Voice Mail Alert, Text Msg Alert, Email Alert, Page Alert, and Info Alert**.

**Signature (Menu , , )**

Allows you to edit the signature you want to automatically send with your messages.

**Direct View (Menu , , )**

Allows you to directly display the content when receiving a message.

**Entry Mode (Menu , , )**

Allows you to select the default input method including **T9Word, ABC, 123**.

**Block List (Menu , , )**

This service option is currently not available.

**Read Ack (Menu , , )**

This service option is currently not available.

**Font Size (Menu , , )**

Allows you to determine the font to use when entering message content or reading the texts in Inbox, Outbox, and Saved.

**Edit Voicemail Number (Menu , , )**

Allows you to manually enter the access number for Voice Mail Service. This number should be only used when VMS access number is not provided from the network.

**Erase All (Menu , )**

All the text messages and pages are deleted when you select Erase All from the Message Menu screen. Protected messages are not erased.

**Inbox (Menu , , )**

Deletes all messages from your Inbox except those messages which are locked.

**Info Alerts (Menu , , )**

This service option is currently not available.

**Outbox (Menu , , )**

Deletes messages from your Outbox except those messages which are locked.

**Saved (Menu , , )**

Deletes all messages from your Saved folder except those messages which are locked.

**All (Menu , , )**

Deletes only unlocked messages from Inbox, Outbox, and Saved. Protected messages are not deleted.

**My Folder (Menu , )**

Personalized features for your phone.

**Small Pictures (Menu , , )**

This service option is currently not available.

**Large Pictures (Menu , , )**

This service option is currently not available.

**My Pictures (Menu , , )**

This service option is currently not available.

**Sounds (Menu , , )**

This service option is currently not available.

**My Melodies (Menu , , )**

This service option is currently not available.

**Animations (Menu , , )**

This service option is currently not available.

**My Animations (Menu , , )**

This service option is currently not available.

**Canned Msgs (Menu , , )**

Display, edit, and add Canned Messages.

## 5 Get It Now

Get It Now allows you to do more than just talk on your phone. Get It Now is a technology and service that allows you to download and use applications on your phone.

With Get It Now, it is quick and easy to personalize your phone to your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from instant messaging to games to office applications, you can be assured that you can find something useful, practical, or down right entertaining. Plus, there are constantly new applications being created for your use.

### Some examples of available application types:

- ▶ Communication programs which allow you to send instant messages and e-mail.
- ▶ Productivity programs which allow you to synchronize with applications in your office, home, or PDA for more efficiency and better time management.
- ▶ Entertainment programs which allow you to play single-player games, multi-player games, listen to music, watch videos, download custom ringtones and screens for your display.

- ▶ Mobile Commerce programs which allow you to do financial transactions (such as checking your account balance, trade stocks, etc.).
- ▶ General Information programs which allow you to get current news, weather, sports, or traffic.

You can download and use Get It Now anywhere on the Verizon Wireless network, as long as your handset has a digital signal available. Application download time will vary, but most applications will take approximately 1 minute to download. If your currently installed Get It Now application does not need a network connection, it can be used anywhere.

The time you spend browsing in Get It Now for an application, and while downloading applications, is deducted from your monthly airtime allowance.

Most applications do not use a network connection while in use. However, there are some applications that will and these will incur airtime charges while in use.

While downloading an application, any incoming calls will automatically be sent to your voicemail, if available. If you do not have voicemail, downloading will not be interrupted by an incoming call, however the caller will receive a busy signal.

When using an application that does not require a network connection, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.

You can personalize your phone by adding new applications and by removing old ones, at any time. However, unused application usage will be lost.

If you need more memory, but still want to be able to access the application later, try using Disable.

Disabling keeps the application usage and purchase information, but removes it from memory.

To restore an application, go to Options, select the application and click on Restore. If you have subscribed to an application, you will still be charged even when an application is disabled.

Only removing an application deletes it completely from the memory of the phone. To restore an application once it has been removed will require that you pay and download it again.

Airtime charges do apply when removing a subscription application.

There is no monthly usage fee for Get It Now. Rather, you pay for each application when you download.

Applications are priced individually, please see the Verizon Wireless website for a list of currently available applications and pricing.

This function allows you to download some great mobile phone programs (such as securities, chatting, and thematic displays to your mobile phones), whenever you like.

## Get Apps (Menu , )

1. Press Soft Key 1 **Menu**.
2. Press  **Get It Now**.
3. Press  **Get Apps** and press  .  
Main display of Get It Now will appear.
4. Select [Get It Now] Icon and press  .

- ▶ **Start:** allows you to download selected applications while displaying the Get It Now application list relayed from the Get It Now server in connection.
- ▶ **Options:** allows you to display download log and the current memory capacity of your mobile phone.
  - Information: displays usable capacity for your mobile phone and the memory capacity in use.
  - View Log: displays Get It Now version, MSM Chip, and downloading record.

## Get Info (Menu , )

This submenu gives you information about the Get It Now selection key.

**NOTE** Pressing the down arrow key () will start Get It Now.




## 6 Mobile Web

The MiniBrowser feature allows you to view internet content especially designed for the mobile phone interface. Access and selections within this feature are service provider dependent.

For specific information on MiniBrowser access through your phone, contact your service provider.

### Start Browser (Menu , )

- 1) A reminder of the charge will appear; press  **Yes** to launch MiniBrowser, if required.
- 2) After a few seconds, you will see the Home Page.

## Ending MiniBrowser Session

You can end a MiniBrowser session by pressing .

If the prompt **To end** or **Both** option is set in the MiniBrowser Setup, you will be prompted whether you want to end the browser call.

(Press Soft Key 1 **Menu**  Mobile Web → )

Web Settings →  Prompt.)

## Navigating through the Browser



While using MiniBrowser, you will find that onscreen items may be presented in one of the following ways:

- ▶ numbered options (some options may not be numbered).
- ▶ links (embedded in content).
- ▶ text or numeric input.
- ▶ simple text.


You can act on the options or the links by using the Soft Keys just below the display screen.

## Navigation keys

Scrolling Up/Down by Item

You can use  to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a ▶ cursor on the screen and  will also move the cursor.


Fast Scrolling Up/Down

Press and hold  to quickly move the cursor up and down on the current screen.


Scrolling Up/Down by page

Press Side Keys to move up and down a whole screen page.



Go to Home Page

Press and hold  to go back to the Home Page.

## View Browser Menu

Press and hold  to use the browser menu when using the MiniBrowser.

Clearing out text/number entered

When entering text or numbers, press  to clear the last number, letter, or symbol. Press and hold  to clear the input field completely.

Selecting and activating items using Soft Keys and/or digits

If the items on a page are numbered, you can use your keypad (numeric), or you can select the items by moving the cursor and pressing the appropriate Soft Keys.

### Soft Keys

To navigate to different screens or select special functions, use the Soft Keys just below the display screen. Note that the function associated with the Soft Keys can change for each page and will depend on each highlighted item.

#### Soft Key 1

Soft Key 1 is used primarily for first options or selecting an item. But its function may change, depending on the content displayed.


#### Soft Key 2


Soft Key 2 is used primarily for secondary options or a menu of secondary options.

### Entering Text, Numbers, or Symbols

When you are prompted to enter text, the current text entry method will appear on Soft Key 2 as Alpha, Symbol, Number, Word, or Smart (exact label depends on implementation).

To change the input mode, use Soft Key 2.

To create an uppercase character, use . The current text method will appear on the Soft Key 2 as ALPHA or SMART.

 shifts to text input between cases (uppercase and lowercase).

### Initiating a phone call from MiniBrowser


You can make a phone call from MiniBrowser if the site you are using supports the feature (the phone number may be highlighted and Soft Key 1 will appear as **Call**).

The browser connection will be terminated when you initiate the call. After you end the call, your phone will return to the screen from which you initiated the call.

### Using Bookmarks

You can bookmark many individual pages for easy access at a later time. Bookmarks save you time by reducing the number of steps it takes to access a desired page.

## To create a bookmark


Go to the page that you want to mark. On the browser menu, select **Mark Site** or press and hold .

If the page has a title, it will automatically be used for the name of the bookmark. When the bookmark is saved, you can change the bookmark name if you choose. Selecting **Save** will save the name and add the page to the bottom of your list of bookmarks.

A message will appear confirming that the bookmark was added to the list. Select Soft Key 1 **OK** to return to the screen that you marked to resume navigation within MiniBrowser.

This function is dependent upon the html coding of the page being read and determined by the website.

## Finding a bookmark

From the Home Page, press and hold , then select the bookmark you want.

Or

From the Home Page, press and hold the number associated with the bookmark in the bookmark list.

## Web Messages (Menu , )


If there are any browser alerting messages, then the list will be displayed.

## Web Settings (Menu , )

### 1. Prompt (Menu , , )

You can set the function of whether or not to see the information messages when you start up.

Prior to making a MiniBrowser call, the user is informed that there is a charge and asks if they still want to launch the browser. This step is used to prevent accidental activation of the browser since all subscribers will be provided with the browser automatically.

A message is also available to ask the user if they want to exit the browser, after they press . Users can disable this extra step (or enable if it is disabled) through a menu option.

- ▶ **To Start:** You only see the message asking whether or not to start up.
- ▶ **To End:** You only see the message asking whether or not to end the browser session.
- ▶ **Both:** You see the messages asking whether to start up or end the browser session.
- ▶ **None:** You will not see the information messages.

### 2. Alert (Menu , , )

There are 3 alert options. **Mute**, **2 alerts**, and **4 alerts** options are provided in this menu. The user may select a browser alert sound.




## 8 Tools

### Scheduler Functions





Scheduler keeps your agenda convenient and easy to access. Simply store your appointments and your phone alerts you with a reminder of your appointment. You can also take advantage of the **Alarm Clock** feature.

**NOTE** Scheduler will not alert you during a call, when transmitting SMS, or when connecting up. After exiting, it will sound the reminder.

### General Guidelines to Scheduler Access and Settings

1. Press Soft Key 1 **Menu**.
2. Scroll through the menu list using .
3. To make a selection, press  or press the number corresponding to the menu you want to access.
4. Move between entries on the menu using .



### ✓ How to use buttons


-  Moves cursor to the left.
-  Moves cursor to the right.
-  Moves to the previous week.
-  Moves to the next week.

### Schedule (Menu , )

Allows you to input your schedule.

If you input the time and memo, an alarm rings at the set time.

1. Press Soft Key 1 **Menu**.
2. Press  **Tools**.
3. Press  **Schedule**.



**NOTE** Pressing the Navigation key (  ) to the left from Standby mode is a hot key to Schedule.

### Alarm Clock (Menu , )

1. Press Soft Key 1 **Menu**.
2. Press  **Tools**.
3. Press  **Alarm Clock**.
4. Select the alarm you want to edit.
5. Set the time for alarm and press Soft Key 1 **Save**.
  - ▶ The current time will be displayed in the upper portion of the screen.
6. You can change the alarm mode and alarm ringer type using .
7. At the alarm time, “*Alarm x*” will be displayed on the LCD screen and the alarm will sound.

### Voice Memo (Menu , )


 
Allows you to listen to, add, and erase short verbal reminders.

1. Press Soft Key 1 **Menu**.
2. Press  **Tools**.
3. Press  **Voice Memo**.
4. Press Soft Key 1 **New** to record a new voice memo

### My Shortcut (Menu , )

### Notepad (Menu , )

Allows you to read, add, edit, and erase notes to yourself.

1. Press Soft Key 1 **Menu**.
2. Press  **Tools**.
3. Press  **Notepad**.
4. Press Soft Key 1 **Add** to write a new note.



**EZ Tip calc (Menu , )**

1. Press Soft Key 1 **Menu**.
2. Press  **Tools**.
3. Press  **EZ Tip calc**.

**Calculator (Menu , )**

Calculate simple mathematical computations.


(Can enter numbers up to the second decimal place.)

1. Press Soft Key 1 **Menu**.
2. Press  **Tools**.
3. Press  **Calculator**.

**NOTE** Calculation should be 32 characters (for example, 32+14...).

**World Clock (Menu , )**






Is useful if you need to make a call to another country and you are not sure about the time difference.

1. Press Soft Key 1 **Menu**.
2. Press  **Tools**.
3. Press  **World Clock**.

**9 Settings****Sounds (Menu , )****Ringers (Menu , , )**

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **Caller ID** , **No Caller ID** , or **Restrict** .
4. Press  until you find the sound you desire.
5. Then press  to save the sound.

**Key Tone (Menu , , )**

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Set **Normal/Long** with  and then press .

- ▶ **Normal** Sends out a tone for a fixed period of time even if you keep the key pressed.
- ▶ **Long** Sends out a continuous tone for as long as you keep the key pressed.

**NOTE** Dual-Tone Multi Frequency (DTMF) Signaling by the simultaneous transmission of two tones, one from a group of low frequencies and another from a group of high frequencies. Each group of frequencies consists of four frequencies. Setting Key Beep length to Long will extend the DTMF tone. Press **Menu**, then press **9**, **1**, **3** **Key Tones** using **OK** then select **Long**. Press **OK**.

### Volume (Menu **9**, **1**, **3**)

1. Press Soft Key 1 **Menu**.
2. Press **9**, **1**, **3**.
3. Select **Ringer** **1**, **Earpiece** **2**, or **Key Beep** **3**.
4. Adjust the volume of the ringer with **Up/Down**.
5. Then press **OK** to save the volume.

### Alerts (Menu **9**, **1**, **4**)






Allows you to set the 4 Alert options on or off.

1. Press Soft Key 1 **Menu**.
2. Press **9**, **1**, **4**.
  - ▶ Check each option and turn it off if not desired.
- 1) **Service Change** (Menu **9**, **1**, **4**, **1**)  
Alerts you when service changes. When you enter a service area, the phone displays *Entering Service Area* message. When you leave a service area, the phone displays *Leaving Service Area* message.
- 2) **Minute Beep** (Menu **9**, **1**, **4**, **2**)  
Alerts you 10 seconds before the end of every minute during a call.
- 3) **Call Connect** (Menu **9**, **1**, **4**, **3**)  
Alerts you when the call is connected.
- 4) **Back To Top** (Menu **9**, **1**, **4**, **4**)  
Alerts you when you scroll through the end of a menu list.

  3. Select an option and press **OK**.
  4. Set **On/Off** with **Up/Down** and then press **OK**.



### Power On/Off Tone (Menu , )

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Set **On/Off** with  and then press .

### Display (Menu , )

#### Banner (Menu , , )






Allows you to enter a string of characters (up to 16) to be displayed on the LCD screen.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Enter a Banner and then press .

### Backlight (Menu , , )

#### 1. Timer ( , , , )

Allows you to set the duration the backlight is to be on.

1. Press Soft Key 1 **Menu**.
2. Press , , , .
3. Choose an option and press .

- ▶ **7 seconds** turns the backlight off 7 seconds after the last key was pressed.
- ▶ **15 seconds** turns the backlight off 15 seconds after the last key was pressed.
- ▶ **30 seconds** turns the backlight off 30 seconds after the last key was pressed.
- ▶ **Always off** means that the backlight is never on.
- ▶ **On flip open** means that the backlight is always on while flip (cellcase) is open.







## 2. Brightness ( , , , )

Allows you to set the brightness level of the backlight.

1. Press Soft Key 1 **Menu**.
2. Press  ,  ,  ,  .
3. Adjust the Brightness with  .
4. Then press  to save the Brightness setting.

## Screens (Menu , , )

Allows you to choose the kind of background to be displayed on the phone.

1. Press Soft Key 1 **Menu**.
2. Press  ,  ,  .
3. Select **Wallpaper**  , **Power On**  , or **Power Off**  .
4. Select from 5 different screens and press Soft Key 1 **Save**.




## Key Light (Menu , , )

Allows you to set the duration that you wish the Key Light to be on.

1. Press Soft Key 1 **Menu**.
2. Press  ,  ,  .
3. Choose an option and press  .
  - ▶ **7 seconds** turns the Key Light off 7 seconds after the last key was pressed.
  - ▶ **15 seconds** turns the Key Light off 15 seconds after the last key was pressed.
  - ▶ **Always off** means that the Key Light is never on.
  - ▶ **On flip open** means that the Key Light is always on while flip (cellcase) is open.

## Contrast (Menu , , )

Allows you to set the contrast of the Main and Sub LCD.

1. Press Soft Key 1 **Menu**.
2. Press  ,  ,  .
3. Select **Main LCD**  , **Sub LCD**  .
4. Adjust the contrast with  .
5. Press  to save the Contrast setting.




**Menu Style (Menu , , )**

Allows you to choose whether you want the menu to show as a list or as icons.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **Icon** or **List** and press .




**Clocks (Menu , , )**

Allows you to choose the kind of clock to be displayed on the LCD screen.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **Normal**, **Analog**, or **Digital** and press Soft Key 1 **Save**.

**Theme Colors (Menu , , )**

Allows you to choose the color of the background screen.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .
  - ▶ Default/Green/Pink/Orange

**Sub EL pattern (Menu , , )**

Allows you to choose different colors for the Sub LCD screens. Sub LCD color is always green while charging the battery.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **Incoming Calls** , **Missed Calls** , **New SMS Alert** , **Reminders** , or **Standby** .
4. Press  until you find the pattern you desire.
5. Press  to save the pattern.

**Number Font (Menu  , )**

Allows you to choose the size and color of the number font.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **Size** , **Color** .
4. Press  until you find the size or the color you desire.
5. Press  to save.

**Text Input Font (Menu , , )**

Allows you to choose the size and color of the text input font.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **Size** , **Color** .
4. Press  until you find the size or the color you desire.
5. Press  to save.





**System (Menu , )****Select System (Menu , , )**

This function enables set up of the user's mobile phone producer's management environment. Leave this setting as the default unless you want to alter the system selection (as instructed by your service provider).

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .
  - ▶ Home Only/Automatic A/Automatic B.

**Set NAM (Menu , , )**

Select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **NAM1** or **NAM2** and press .

### Auto NAM (Menu , , )

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **On** or **Off** and press .

### Serving System (Menu , , )





You can identify the channel number of the System which is served and the SID Number.

This information is only for technical support.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Press .

### TTY (Menu , , )

Users can attach a TTY device and communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.





1. Press Soft Key 1 **Menu**.
2. Press , , .
3. TTY info displays.
4. Select an option and press .

▶ TTY users must have a TTY/TDD device.






## Security (Menu , )

### Lock Phone (Menu , , lock code, )

Protects your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. This will allow you to receive phone calls and still make emergency calls. The lock code is commonly the last 4 digits of your phone number. If you need to modify the lock code, you may modify it using the Change Code within the Security menu.

1. Press Soft Key 1 **Menu**.
2. Press , .
3. Enter the four-digit lock code.
4. Press  **Lock Phone**.
5. Select an option and press .
  - ▶ **Unlock** means that the phone is never locked (Lock mode can be used).
  - ▶ **Lock** means that the phone is always locked. When locked, you can receive incoming calls or make only emergency calls.
  - ▶ **On Power Up** means the phone is locked when it is turned on.






## Restrict (Menu , , lock code, )

1. Press Soft Key 1 **Menu**.
2. Press , .
3. Enter the four-digit lock code.
4. Press  **Restrict**.
5. Select **On** or **Off** with  then press .

If you set it to **On**, you can only place calls to emergency numbers and phone numbers stored in the Phone Book. You can still receive calls in the Restrict Mode.




## Emergency #s (Menu , , lock code, )

You can call these designated emergency numbers, and 911, even when the phone is locked or restricted. To enter 3 emergency numbers:

1. Press Soft Key 1 **Menu**.
2. Press , .
3. Enter the four-digit lock code.
4. Press  **Emergency #s**.
5. Select emergency number 1, 2, or 3 using .
6. Enter an emergency number.
7. Press .

**Change Code (Menu , , lock code, )**

Allows you to enter a new four-digit lock code number.

1. Press Soft Key 1 **Menu**.
2. Press , .
3. Enter the four-digit lock code.
4. Press  **Change Code**.
5. Enter the new four-digit lock code.
6. For confirmation, it will ask you to enter the new lock code again.

**Erase Phonebook (Menu , , lock code, )**

Allows you to erase all entries in your Phone Book.

1. Press Soft Key 1 **Menu**.
2. Press , .
3. Enter the four-digit lock code.
4. Press  **Erase Phonebook**.
5. Select **Erase all #s** and press .

**Reset default (Menu , , lock code, )**

1. Press Soft Key 1 **Menu**.
2. Press , .
3. Enter the four-digit lock code.
4. Press  **Reset default**.
5. Press , select **Revert** and press .

**Call Setup (Menu , )****Shortcut (Menu , , )**

1. Press Soft Key 1 **Menu**.
2. Press , , .

**Auto Retry (Menu , , )**

Allows you to set the length of time the phone waits before automatically redialing a number when an attempted call fails.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .
  - ▶ Off/Every 10 seconds/Every 30 seconds/Every 60 seconds.

### Answer Call (Menu , , )

Allows you to determine when to answer the phone.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .
  - ▶ Flip Open/Any Key/SEND Only.

### Auto-Answer (Menu , , )

Allows you to select the number of rings before the phone automatically answers a call. This feature is used only with the car kit.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .
  - ▶ **Off**
  - ▶ **After 1 ring**  
When you have an incoming call, the phone automatically responds after 1 ring.
  - ▶ **After 3 rings**  
When you have an incoming call, the phone automatically responds after 3 rings.

### ▶ Answering Machine

The phone automatically responds with the answering machine.




### One-Touch Dial (Menu , , )

Allows you to enable/disable one-touch dialing.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **Enable** or **Disable** and press .

### Voice Privacy (Menu , , )

Set the voice privacy feature for CDMA calls as **Enhanced** or **Standard**. CDMA offers inherent voice privacy. Check with your service provider for availability of the enhanced voice privacy mode.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **Enhanced** or **Standard** and press .



**Auto Volume (Menu , , )**

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **On** or **Off** and press .

**Language (Menu , , )**

Set the bilingual feature according to your preference. Choose between English and Spanish.


1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Set **English/Spanish** with  then press .

**1x Data (Menu , )**

**Data/Fax (Menu , , )**

In **Data/Fax** setting, you can use your phone to transmit data and faxes.

Wireless data communication services refer to utilization of subscriber terminals for access to Internet with personal computer or laptops at 19.2 Kbps or at maximum of 230.4 Kbps. Speed of connection depends on carrier's network and other variables. Contact communication information specifications must match network.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .

▶ Off/Fax In Once/Fax In Always/Data In Once/Data In Always

**NOTE** Data Connection Kit - Your wireless connection to the Internet and other dial-up networking functions. This Kit allows you to connect your PC or PDA to your LG wireless phone, freeing you from having to locate a telephone outlet. You can send or receive an e-mail, a fax, or access the Internet anytime, anywhere.

### Select Port (Menu , , )

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .
  - ▶ USB/RS-232C (COM Port)/Closed

### Port Speed (Menu , , )

This setting enables the subscriber terminal to set the port speed.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .
  - ▶ 19200/115200/230400





Port Speed needs to be set properly based on carrier's network. Contact carrier for the maximum available speed.

**NOTE** When using 1X HSPD data service by means of an RS-232C data cable, port speed shall be set to 115,200 (230,400 shall not be supported). When using 1X HSPD data service by means of USB data cable, you may get better port speed if the port speed is set to 230,400 rather than 115,200.





### Voice Services (Menu , )

#### Voice Dial Prompt (Menu , , )

Allows you to set the command for voice dialing.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .
  - ▶ Key press/Flip open/Disable

### Answering Machine (Menu , , )

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select an option and press .
  - ▶ **Speaker on:** You can hear the other party during the recording of the answering machine.
  - ▶ **Speaker off:** You cannot hear the other party during the recording of the answering machine.

### Train Words (Menu , , )

Allows you to help your phone to distinguish your voice when using voice commands.

In case you have to use words such as Yes or No during the voice recognition process, if you cannot clearly recognize the words Yes or No, you can clearly recognize them by recording your own voice while using this feature.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Select **Yes** or **No** and press .
4. If you have selected Yes, you can record Yes according to the message of the phone.
5. Select **Train** or **Un-train** and press .
6. If you chose **Train**, press 1 **Ok** and follow the voice prompts.  
**or**  
If you chose **Un-train**, press 1 **Un-train**.

### Location (Menu , )

Allows you to adjust your GPS setting to always on or only for 911 calls.

1. Press Soft Key 1 **Menu**.
2. Press , .
3. Select an option and press .  
▶ Location On/E911 Only

### Phone Info (Menu , )

#### My Phone Number (Menu , , )

Allows you to display your phone number on the screen.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Press  to exit.

### S/W Version (Menu , , )

Allows you to view the software, PRL, ERI, and Browser version.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Press  to exit.

### Icon Glossary (Menu , , )


Allows you to view all the icons and their meanings.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Press  to exit.

### Shortcut Help (Menu , , )

Allows you to view condensed information about using the phone.

1. Press Soft Key 1 **Menu**.
2. Press , , .
3. Press  to exit.

Or from the Standby screen, press .

## Chapter 4. Functions Used During a Call

### Mute (During a call: Menu)

- ▶ Sometimes it may be necessary to mute a call. To use this function during a call, press Soft Key 1 **Menu**.
- ▶ If you need to cancel the mute feature, press Soft Key 1 **Menu**.

\* Even when the telephone is set to mute, if you press the key, the other party can hear Dual Tone Multi Frequency.

