

User Manual

VX8575

Ver. 1.0
2009. 4. 9

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Part 15 Class B Compliance

This device and its accessories comply with part15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received,
including interference that may cause undesired operation.

Body-worn Operation

This device has been tested for typical body-worn operations
with the distance of 0.79inches (2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance
of 0.79inches(2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain
metallic components.

Getting Started



Unlocking Your Phone

If you received your VX8575 in the mail, you may need to unlock it before making calls.

1. Press the END/PWR Switch for 2~3 seconds.
2. Press soft key **Unlock**.
3. Enter your four-digit lock code. For security purposes, the code will not be visible as you type.

Note: If you can't recall your lock code, try using the last four digits of your Social Security number, the last four digits of your Phone Number or 0000.

View of Phone

1.  key : Lets you power the phone on or off.
2. **Antenna:** Internal antenna provides optimum reception for 800 MHz & 1900 MHz frequencies.
3. **Power On Indicator:** Illuminates red when the phone powers on with power on sound indicator.
4. **Headset Jack:** Provides connection for an optional headset.
5. **Volume Control Keys:** Adjust the Ring Volume in the Main Menu or the Voice Volume during a call. The keys also scroll through months in the Calendar or pages in the Mini Browser.
6. **OK:** select menu options.
7.  : Lets you clear an entry or back-up in the menu.

Installing and Removing the Battery


To install the battery, insert the bottom of the battery into the back of the phone. Then, push the battery down until the latch clicks.

To remove the battery, press up on the latch and remove the battery from the phone.

Turning Your Phone On and Off

To turn your phone on, push the On/Off Switch  for 2 ~3 seconds. Your phone performs a short self-test before letting you know it is operational.

If your phone does not turn on, make sure the battery is installed correctly and is adequately charged or has external power (via the AC Adapter, Cigarette Lighter Adapter).

To turn your phone off, push the On/Off Switch  for 2 ~3 seconds.

Main Menu

When your phone acquires Service, the Greeting (a banner of text), the current time and date and the Main Menu are displayed. If you are in authorized cellular provider's service area, you are ready to send and receive calls.

Power Save Mode

When the phone is in an area without service for 15 minutes, it stops searching for service and enters into the power Save Mode. When your phone activates this feature, **Power Save** is displayed on your screen. The phone automatically checks for service periodically or you can check manually by pressing any key.

Menu Navigation

By touching LCD, you can scroll circularly through menus quickly and easily.




As you navigate through a menu, the options are not highlighted. Just touch it to select. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

For example, if you want to view your last incoming call:

1. From the Main Menu, select **RECENT CALLS** and touch “2. Received”.
2. Touch **Received**.

If you have received any calls, they are displayed on the screen.

Entering Characters Using the Keypad(T9)



To enter number at idle, touch .

To enter a letter, punctuation or number when creating Phone Book or Scheduler entries, press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase. Characters in the following order:

1 	1 . ? , ' & . @ () / ~	7 	P Q R S 7 p q r s
2 abc	A B C 2 a b c 2	8 	T U V 8 t u v 8
3 	D E F 3 d e f 3	9 	W X Y Z 9 w x y z 9
4 	G H I 4 g h i 4	0	Next 0
5 	J K L 5 j k l 5	Shift	Shift
6 	M N O 6 m n o 6	Space	Space
















After a character is entered, the cursor automatically advances to the next space after two seconds. You

can also advance the cursor by pressing  or entering a character not on the same key.

If you make a mistake, touch  to erase a character. To clear the entire entry, press and hold  for two seconds.

Display Icons

Display icons are the symbols your phone uses to communicate important information. They are as follows:

ICON	DESCRIPTION
	3G send
	3G receive
	3G send receive
	Alarm
	Battery
	Antenna
	In use
	No service
	Location
	Location out
	Voice
	Voice Privacy
	Vibrate
	Roaming
	TTY
	SSI
	Ringer
	Ringer off
	Text + voice

Antenna

The antenna on your VX8575 provides maximum reception by holding the phone upper position.

Signal Strength

The quality of each call you make or receive depends on the signal strength on your area. The number of bars in the Signal Strength icon informs you of the current strength. The more bars, the stronger the signal.

Battery Capacity

Your VX8575 is equipped with a Lithium Polymer battery. It allows you to recharge your battery before it is fully drained. The battery provides approximately 180 minutes of continuous digital talk time or approximately 110 hours of continuous digital standby time.

Note: Long backlight settings affect the battery's talk and standby times.

When the battery reaches 5% of its capacity, the battery icon blinks. When there is about one minute of talk time left, the phone sounds an audible alert every 30 seconds and then powers down.

If the battery's charge is completely run down, it takes 2 to 3 hours to fully recharge. It is not necessary to let the battery completely run down before recharging.

To charge your batteries, use only approved charging accessories.

Using the AC Adapter




To charge the battery, plug the AC Adapter into a standard wall outlet and connect it to the phone via the I/O Connector on the bottom of the phone. Alternatively, you can place the phone in the charging cradle provided with your phone and connect the AC Adapter to the back of the cradle.

The battery Charge Status icon flashes during charging. When the battery is fully charged, the battery icon stops flashing.

Using Your Phone

Placing a Call

When the phone is turned on, check the Signal Strength icon to see if you are in a Service Area or authorized PCS CDMA provider's service area.

1. Touch  to enter number.
2. Enter the phone number and press [SEND] .
Tip! When dialing long distance, it is not necessary to dial a "1" before the area code.
3. When you are finished with your call and press [END] .

Roaming With Your Phone

Your Phone is you can use it to make and receive calls in many places.

Setting Your Phone's Mode

Your Phone allows you to control your ability to roam. (See "Set Mode")

Calling Experience

When you use your phone on other PCS CDMA networks, your calling experience and call quality will be quite similar to what you experience when making calls within the Network. Although certain calling features may not be available, your phone calls are still private and secure.

Correcting Dialing Mistakes

To delete one digit at a time, press . To delete all digits, press and hold .



Redialing Last Outgoing Number


Press and hold [SEND]  for 2 seconds.

Dialing Options (phone book – Not Functioning)

When you enter numbers in the Main Menu, dialing options are displayed. To display a Phone Book entry, enter its entry number.

To select an option, touch it. (Menu display only, phone book – Not Functioning)

- Call – Dials the phone number.
- Save – Saves the phone number in your Phone Book. (See “Saving a Phone Number” on the following page.)
- Wait – Inserts a Hard Pause. (See “Dialing and Saving Phone Numbers With Pauses”)
- 2- Second pause – Inserts a two-second pause. (See “Dialing and Saving Phone Numbers With Pauses”)
- End Key Press – Returns to the Main Menu.
- A Phone Book Entry – Displays the Phone Book entry. To dial the entry’s speed-dealing number, press and hold [SEND] . To dial an alternate number, touch it and press and hold [SEND] .

 Tip! To speed dial a Phone Book entry from the Main Menu, press and hold the entry's number. If the entry number is two digits, enter the first digit, then press and hold the second digit. (This feature will not work when the Roam Confirm option is enabled.)

In Call Options

During a call, your phone displays menu options in addition to the Main Menu.

To select an option, touch it. (functions 'Send' and 'End' only)

- End Call - Ends the call
- Send Tones - Sends the next set of numbers after a Hard Pause. (See "Dialing and Saving Phone Numbers With Pauses" on the previous page.)
- Mute or Unmute – Select Mute to mute your phone's microphone. Select Unmute to reactivate the microphone.
- Dial 3-Way Call – Lets you dial another phone number.
- Flash – Answers an incoming Call Waiting call or connects the third party for Three-Way Calling..

Incoming Call Notification

Depending on your settings, your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates
- The backlight illuminates
- The screen displays an incoming call message
- The phone number of the caller is displayed if the phone number is available
- The caller's name is displayed if the phone number is in your Phone Book


The following options are also displayed. To select an option, touch it.

- Send Key Press – answers the call.
- Silent Ringer – Mutes the ringer.

Note: You can also mute the ringer by pressing the up or down Volume Control key or [END]



Answering Calls

To answer incoming calls, press [SEND] .

Displaying Your Phone Number(phone book – not functioning)

To display your phone number:


1. From the Main Menu, select SETTINGS & TOOLS.
2. And go to 11.Phone Info and select 1.My Number.

Setting the Ring Volume to Vibrate

To set the phone to Vibrate Mode, press the down Volume Control key until Vibrate Only is displayed. The phone will vibrate and – Vibrate On- is displayed above the Main Menu.

To set the phone to Vibrate Mode using the Main Menu, see “Adjusting the Volume” .

Getting the Most From Service

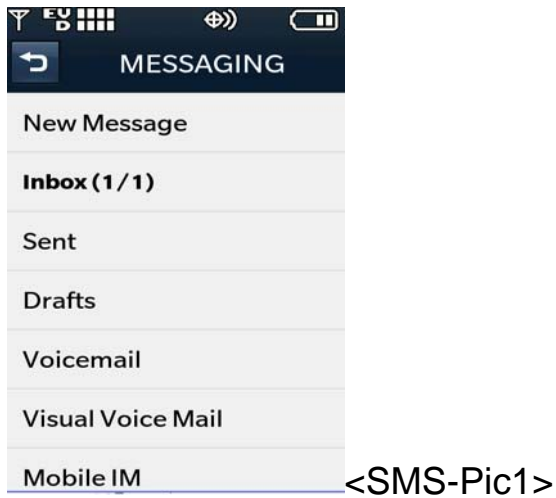

Retrieving Page/Text Messages

To retrieve page/text messages:

1. From the **Messaging**
2. Touch **Inbox**.

Touch the message you want to display.

To select an option, touch it.

Text Message options:

- Reply
- Erase
- Forward
- Reply with Copy
- Save Quick Text
- Lock
- Add To Contacts
- Message Info.


Erasing All Page/Text Messages

1. From the **Messages** Menu, Press [Erase Options]
2. Touch **Erase All**.
3. Touch **Yes**.

Page/Text Message Storage

Your VX8575 can store up to 100 page/text messages. When the message memory is 100% full, a warning message prompts you to erase messages to obtain more memory space.

Roaming on to Other Service Providers

Roaming occurs when you are in an area serviced by another authorized service provider. When this situation occurs, the **R** icon and Digital Roam of Analog Roam are displayed. If there is no service available, the  icon is displayed.

Page/Text Messages

For information on page/text messages, see “Retrieving Page/Text Messages” .

Sounds

Adjusting the Volume

1. From the **SETTINGS & TOOLS** , touch **Sounds Settings**.
2. Touch Master Volume.
3. Touch Ringer or Key Beep.

Tip! You can use the Volume Control keys to adjust the Ring Volume in the Main Menu or the Voice Volume during a call.

4. Highlight **High**, **Medium High**, **Medium**, **Medium Low**, **Low**, **Vibrate Only**, **Alarm Only** or **All Sounds Off** (for Ringer only) and press [SET].

Note: When the phone is in Vibrate On Mode and attached to an accessory (Desktop Charger, Hands-Free Car Kit, etc.), it uses the Standard Ring Type to alert you of incoming calls, alarms or messages.

Selecting Ring Types for Voice Calls

To Select a Ring Type for Voice Calls:

1. From the Main Menu, touch SETTINGS & TOOLS/Sounds Settings.
2. Touch **Call Sounds**.
3. Touch **Call Ringtone**.
4. Highlight a Ring Type and press [SET]. You will hear a preview of the Ring Type when you highlight it.

Tip! You can also assign different Ring Types to individual Phone Book entries.

Selecting Ring Types for Messages

To select a Ring Type for Messages:

1. From the SETTINGS & TOOLS menu, touch **Sounds Settings**.
2. Touch **Alert Sounds**.
3. Touch **TEXT Message**, **Multimedia Message**, **Voicemail**, **Emergency Tone**, **Missed Call**

4. Highlight a Ring Type and press [SET].

Service Alert Notification

To enable or disable alert sounds:

1. From the SETTINGS & TOOLS menu, touch Sounds Settings.
2. Touch Service Alerts.
3. Touch an alert.
 - ERI Sounds.
 - Minute Beep – Your phone beeps once a minute when you are on a call. (The beep is not audible to the other party.)
 - Call Connect
 - Charge Complete
4. Touch ON or Off.

Display

For information on changing Backlight or Banner, Greeting or Contrast settings, see **Handy Tips**.

Display Menu

Security

Accessing the Security Menu

You must enter your lock code to view the Security menu. If you forget your lock code, try using the last

four digits of your Social Security number, the last four digits of your Phone Number or 0000.

Security Menu

To access the Security menu:

1. From the **SETTINGS & TOOLS**, select **Phone Settings** and touch **Security**.
2. Enter your lock code.

Locking Your Phone

When your phone is locked, you can only make calls to 911, Customer Care and Special Numbers or receive incoming calls.

To lock your phone:

1. From the Security menu, touch **Phone Lock**.
2. Touch **On Power up**. If you select On Power Up, the phone will be locked each time it power up.

Unlocking Your Phone

1. Touch **Phone Lock**.
2. Touch **Unlocked**.

Changing the Lock Code

To change your lock code:

1. From the Security menu, touch **Edit Codes**.
2. From the Edit Codes , touch **Phone Only**.

3. Enter your new lock code.
4. Reenter your new lock code.

Selecting Answer Option

You can select different answering options.

To answer calls automatically or by pressing any key:

1. From the **SETTINGS & TOOLS**, select **Call Settings** and touch **Answer Options**.

To select an option, touch it and press [Done].

- Flip Open – You can answer incoming calls by flip open



Safety

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.


The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

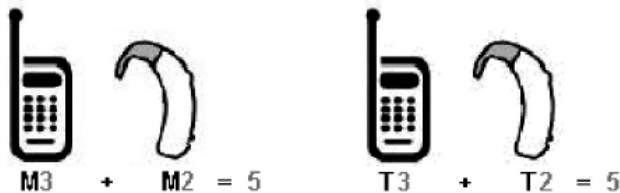

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

To ensure that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth

and WLAN components must be disabled during a call. See Page for instructions to disable these components.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

Hearing Loss Association of America [HLAA]

<http://www.hearingloss.org/learn/cellphonetech.asp>

The Hearing Aid Compatibility FCC Order

http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf