

# **Nexus 4 Wireless Charger**

## Quick Start Guide

**WARNING :**

This product contains chemicals known to the State of California to cause cancer and birth defects or reproductive harm.

**ADVERTENCIA:**

Este producto contiene químicos que, a saber del Estado de California, pueden provocar cáncer y defectos congénitos o daños al sistema reproductor.

**AVERTISSEMENT :**

Ce produit contient des produits chimiques reconnus par l'État de Californie comme une cause de cancer, d'anomalies congénitales et d'autres problèmes liés à la reproduction.

---

**Copyright © 2012 LG Electronics Inc. All rights reserved.**

Note: For best results, please read these instructions completely before using the Nexus 4 Wireless Charger. Failure to follow the instructions can lead to product damage.

The Nexus 4 Wireless Charger is certified by LG electronics under the name WCP-400.

## What's in the box



Nexus 4 Wireless  
Charger



Micro USB Cable



Power Adapter



Warranty Card



Quick Start Guide



Alcohol Pad

## Your Nexus 4 Wireless Charger



Charging  
area



USB port

## Charge your phone

First, connect your Nexus 4 Wireless Charger to a power outlet:

1. Connect the small end of the Micro USB cable to the Micro USB port on the back of the Nexus 4 Wireless Charger.
2. Connect the larger end of the Micro USB cable to the power adapter.
3. Connect the power adapter to a power outlet.

The Wireless Charger is turned on whenever it's plugged in to a power supply. There's no separate on-off switch.

Whenever you want to charge your phone, position it on top of the connected charger like this:



When your Nexus 4 is placed in the correct position, it starts charging.

To check charging status, look at your phone. For example, if the phone's asleep, touch the Power/Lock key to wake it up. Then look at the lock screen:



### **IMPORTANT**

Use only the power adapter and Micro USB cable that come with your Nexus 4 Wireless Charger. Using a different power adapter may damage your phone.

## To prevent damage to your Nexus 4 Wireless Charger:

- Do not drop it or knock it off an elevated surface.
- Do not modify, repair, or take it apart.
- Do not clean with water, alcohol, or benzene.
- Keep it away from humidity and dust.
- Do not place heavy objects on it.
- Use the included alcohol pad to wipe surface clean if necessary.

ITEM	Description
Input / Output	DC 5V, 1800mA / DC 5V, 1000mA
Charging time	< 4 hours (Based on 2150mAh Battery)
Operation temperature	-10°C ~ 60°C
Dimension / Weight	76pi x 53.05(T) (mm)/130g

## Declaration of confirmation

FCC NOTICE TO USERS: This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC and other rf exposure requirements please maintain a distance of 10cm between the charger and your body when in use.

FCC ID: BEJWCP400



## Safety Instructions

- When disconnecting the power supply, always pull on the plug, never on the wire itself.
- Never handle the power plug with wet hands. Doing so can lead to fire or electric shock.
- Use certified technicians to service or repair your product.



- Do not open the housing of the device.
- Do not twist or pinch the power supply cord. If the plug or power supply cord need to be replaced, ensure that they meet the manufacturer's specifications.
- Unplug the device during lighting storms and when unused for extended periods of time.
- Wash hands after handling.

**When using an electrical device, especially when children are present, take basic safety precautions, including the following :**

**DANGER: To reduce the risk of electric shock**

- Always unplug the device from the electrical outlet before cleaning.
- Do not reach for a device that has fallen into water. Unplug it immediately.
- Do not place or store a device where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.

**WARNING: To reduce the risk of burns, fire, electric shock or injury to persons**

- Do not plug into an extension cord.
- Supervise children closely. Do not let them play with the device.

- Use this device only for its intended use as described in this manual. Do not use with unauthorized accessories or devices.
- Never operate this device if it has a damaged cord, plug, cable, or housing. If it is not working properly or has been dropped or damaged, return it to the LG Service Center for examination and repair.
- Keep cord away from heated surfaces.
- This device is designed for indoor use only. Do not use outdoors.
- Place the device on dry surfaces only. After washing the surface, make sure that it is completely dry before replacing the device.
- Do not place metal objects, such as coins or paper clips, on the charger. They can lead to overheating, product damage, or fire.