

English
Español

LG Electronics

Wireless Charging Pad

WCP-500 User Manual



Rev1.0 US

All rights reserved.
LG Electronics inc., 2012

Note: For optimal performance and to prevent any damage to, or misuse of the WCP-500, please read all the information carefully before using the WCP-500.

Any modifications or changes to this manual due to typographical errors or inaccuracies of stated information shall only be made by LG Electronics Inc..

English
Español

LG Electronics

Wireless Charging Pad

WCP-500 User Manual



All rights reserved.
LG Electronics inc., 2012

Note: For optimal performance and to prevent any damage to, or misuse of the WCP-500, please read all the information carefully before using the WCP-500.

Any modifications or changes to this manual due to typographical errors or inaccuracies of stated information shall only be made by LG Electronics Inc..

Included in Package



WCP-500
(Wireless Charging Pad)



Power Supply




Warranty Card



User Manual

Description of parts

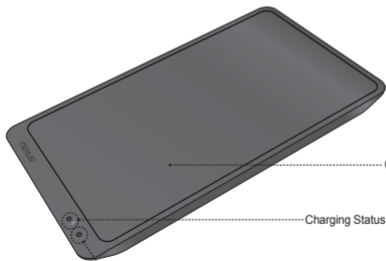

Charging Area

Charging Status LED Indicator

Power LED Indicator

Charging



- When the power supply is connected, the wireless charging pad (WCP-500) will turn on. The power Indicator will show a solid blue light.
- When a Wireless Charging Enabled Device is placed in the correct position, the Charging status LED indicator will change from solid orange to flickering green.
- When charging is completed, the Charging status LED indicator will show a solid green light.

LED display

Function	WCP-500 Status	Action	
		Power LED	Charging status LED
Operating	Power supply disconnected	Off	Off
	Power supply connected	Solid Blue	Solid Orange
Charging	Charging	Solid Blue	Flickering Green
	Charging complete	Solid Blue	Solid Green
	Charging Stopped (Wired phone charger is attached at the same time)	Solid Blue	Solid Orange
Error	If the internal temperature of the charger exceeds 80 degrees (°C)	Solid Blue	Solid Red
	Other Fault States (WCP-500 or Phone)		

Precautions

- Do not drop the Wireless charging pad from high places.
- Do not modify, repair, or take the Wireless charging pad apart.
- Do not clean with water alcohol or benzene.
- Keep the Wireless charging pad away from humidity & dust.
- Do not place heavy objects on the Wireless charging pad.

ITEM	Description
Input / Output	DC 5.2V, 2000mA / DC 5V, 1000mA
Charging time	< 4 hours (Based on 2150mAh Battery)
Operation temperature	-10°C ~ 60°C
Dimension / Weight	170 (L) x 94 (W) x 11.5 (T) (mm)/136g

Declaration of confirmation

FCC NOTICE TO USERS: This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: BEJWCP500



Any changed or modifications not expressly approved by the party responsible for compliance could void the user`s authority to operate this device.

Safety Instructions

- When disconnecting the power supply, always remove with the plug, do not pull the wire by itself.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Refer servicing to qualified personnel only.
- Do not open the housing
- Do not twist or pinch the power supply cord. If the plugs or power supply cords need to be replaced, ensure that they comply with the manufacturer's recommendation.
- Unplug the device during lightning storms and when unused for extended periods of time.

When using an electrical device, especially when children are present, basic safety precautions should always be followed, including the following:

DANGER to reduce the risk of electric shock

- Always unplug the device from the electrical outlet before cleaning.
- Do not reach for a device that has fallen into water. Unplug it immediately.
- Do not place or store device where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.

WARNING to reduce the risk of burns, fire, electric shock or injury to persons

- Do not use with extension cord.
- Children should be closely supervised to ensure that they do not play with the device.
- Use this device only for its intended use as described in this manual. Do not use with unauthorized accessories of devices.
- Never operate this device if it has a damaged cord, plug, cable or housing. If it is not working properly, if it has been dropped or damaged, return it to the LG Service Center for examination and repair.
- Keep cord away from heated surfaces.
- This device is designed for indoor use only. Do not use outdoors.
- Only set on dry surfaces. Do not place on surface wet from water or cleaning solvents.

