



ENGLISH  
ESPAÑOL

OWNER'S MANUAL LG ENVOY™ III



OWNER'S MANUAL  
**LG ENVOY™ III**

LG Electronics

Printed in China

MFL68721201 (1.1)



[www.lg.com](http://www.lg.com)

*Copyright ©2014 LG Electronics, Inc. **All rights reserved.**  
LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.*

*Copyright ©2014 LG Electronics, Inc. **Todos los derechos reservados.**  
LG y el logotipo de LG son marcas registradas de LG Group y sus entidades relacionadas. Todas las demás marcas son propiedad de sus respectivos titulares.*

# Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

## Warning

Violation of the instructions may cause serious injury or death.

**WARNING!** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

*Wash hands after handling.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.

3. Do not dispose of your battery by fire or with hazardous or flammable materials.



4. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



5. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

6. Do not use your device for long periods of time while a part of your body is making direct contact with it. The temperature of the product may increase during normal operation and this may result in harming or burning your skin.



7. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

## Important Safety Precautions



8. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



9. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



10. Do not use your phone in high explosive areas as the phone may generate sparks.



11. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause electric shock or fire.

12. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

13. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



14. Do not disassemble the phone.

15. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



16. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

17. Store the battery out of reach of children.



18. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



19. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.

## Important Safety Precautions



20. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.

21. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



22. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

23. Use and store your phone in temperatures between 0°C/32°F and 45°C/113°F, if possible. Exposing your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

# Table of Contents

---

**Important Safety Precautions 1**

---

**Table of Contents 4**

---

**Welcome 9**

---

**Technical Details 10**

Important Information.....	10
Technical Details.....	10
FCC RF Exposure Information.....	12
Bodily Contact During Operation.....	12
Vehicle-Mounted External Antenna (Optional, if available.).....	12
Caution.....	12
Part 15.19 statement.....	13
Part 15.21 statement.....	13
Part 15.105 statement.....	13
HAC.....	14

---

**Phone Overview 15**

---

**Menus Overview 17**

Menu Access.....	17
------------------	----

---

**Getting Started with Your Phone 20**

The Battery.....	20
Installing the Battery.....	20
Removing the Battery.....	20

Charging the Battery.....	21
Charging with USB.....	21
Battery Temperature Protection.....	21
Battery Charge Level.....	21
Signal Strength.....	22
Turning the Phone On and Off.....	22
Turning the Phone On.....	22
Turning the Phone Off.....	22
Making Calls.....	22
Correcting Dialing Mistakes.....	22
Redialing Calls.....	23
Receiving Calls.....	23
Screen Icons.....	23

---

**Quick Access to Convenient Features 24**

Vibrate Mode.....	24
Sounds Off.....	24
Mute Function.....	24
Quick Volume Adjustments.....	24
Quick Font Resize.....	24
Call Waiting.....	24
3-way call.....	25
Caller ID.....	25
Voice Commands.....	25

# Table of Contents

---

## Entering and Editing Information 27

Text Input.....	27
Key Functions.....	27
Text Input Modes .....	27

---

## Contacts in Your Phone's Memory 28

Storing Basics.....	28
Customizing Individual Entries.....	28
Speed Dial.....	28
Storing a Number with Pauses .....	29
Adding a Pause to an Existing Contact Entry .....	29
Adding Another Phone Number... 30	
From standby mode.....	30
From the Contact List Screen.....	30
Changing Saved Information.....	30
Changing the Default Number .....	31
Deleting .....	31
Deleting a Contact Entry .....	31
Removing a Speed Dial .....	31
Speed Dialing .....	32
Single Digit Speed Dials.....	32
Multiple Digit Speed Dials.....	32

---

## Contacts 33

1. New Contact.....	33
2. Contact List.....	33
3. Favorites.....	34
4. Groups .....	34
5. Speed Dials .....	35
6. My vCard.....	35

---

## Messaging 36

1. New Message.....	36
2. Messages.....	38
3. Drafts .....	40
4. Voicemail.....	40
5. Templates.....	41
Messaging Settings .....	41
Erasing Messages .....	43

---

## Call History 44

1. Missed Calls .....	44
2. Received Calls.....	44
3. Dialed Calls .....	45
4. All Calls.....	45
5. Call Timer .....	45
6. Data Counter.....	46

# Table of Contents

---

## Multimedia 47

- 1. Take Picture ..... 47
- 2. Record Voice ..... 48
- 3. Pictures ..... 48
  - 3.1 My Pictures ..... 48
  - 3.2 Default Pictures ..... 49
- 4. Ringtones ..... 49
  - 4.1 My Sounds ..... 49
  - 4.2 Default Ringtones ..... 50

---

## easysedge<sup>SM</sup> 51

- 1. City ID ..... 51
- 2. Tone Room Deluxe ..... 51
- 3. UNO ..... 51
- 4. Settings ..... 51
- 5. Help ..... 51

---

## My Schedule 52

- 1. Calendar ..... 52
- 2. Alarm Clock ..... 52

---

## Browser 54

---

## Tools 55

- 1. Voice Commands ..... 55
  - 1.1 Start Command ..... 55
- 2. Calculator ..... 57

- 3. Ez Tip Calculator ..... 57
- 4. Eco-Calculator ..... 57
- 5. Info Search ..... 58
- 6. Stopwatch ..... 59
- 7. World Clock ..... 59
- 8. Notepad ..... 59
- 9. Unit Converter ..... 60

---

## Settings 61

- 1. Accessibility ..... 61
  - 1.1 Readout ..... 61
  - 1.2. Invert Color ..... 62
  - 1.3. Large Text ..... 63
  - 1.4. Mono Audio ..... 63
  - 1.5. Turn Off All Sounds ..... 63
- 2. Sounds Settings ..... 63
  - 2.1 Master Volume ..... 63
  - 2.2 Call Sounds ..... 63
  - 2.3 Alert Sounds ..... 64
  - 2.4 Keypad Volume ..... 65
  - 2.5 Service Alerts ..... 65
  - 2.6 Power On/Off ..... 65
  - 2.7 Hearing Assist ..... 66
- 3. Display Settings ..... 66
  - 3.1 Banner ..... 66
  - 3.2 Backlight ..... 67
  - 3.3 Brightness ..... 67

# Table of Contents

3.4 Wallpaper .....	67
3.5 Menu Style.....	67
3.6 Font Type .....	68
3.7 Font Size .....	68
3.8 Clock Format.....	68
3.9 Name Match for Dialing.....	69
<b>4. Phone Settings .....</b>	<b>69</b>
4.1 Airplane Mode .....	69
4.2 Set Shortcut Keys.....	69
4.3 Voice Commands.....	70
4.4 Language .....	70
4.5 Location .....	70
4.6 Security .....	71
4.7 System Select .....	73
4.8 NAM Select.....	74
<b>5. Call Settings.....</b>	<b>74</b>
5.1 Answer Options .....	74
5.2 Auto Retry.....	74
5.3 TTY Mode .....	75
5.4 One Touch Dial .....	76
5.5 Voice Privacy .....	76
5.6 DTMF Tones.....	77
<b>6. Web Access Prompt.....</b>	<b>77</b>
<b>7. Memory .....</b>	<b>77</b>
<b>8. Phone Info.....</b>	<b>77</b>
8.1 My Number.....	77
8.2 ESN/MEID .....	78

8.3 Icon Glossary.....	78
8.4 SW/HW Version.....	78
8.5 Software Update.....	78

---

## **Tone Room Deluxe 80**

---

## **Bluetooth 81**

1. Add New Device .....	81
My Phone Info .....	83
Discovery Mode.....	84
Supported Profiles.....	84

---

## **UNO 85**

---

## **Safety 86**

Consumer Information About Radio Frequency Emissions .....	88
Consumer Information on SAR .....	92
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices.....	94
<b>Caution:</b> Avoid potential hearing loss.....	96
<b>TIA Safety Information.....</b>	<b>97</b>
Exposure to Radio Frequency Signal.....	97
Antenna Care.....	98
Phone Operation.....	98
Tips on Efficient Operation.....	98
Electronic Devices.....	98
Pacemakers.....	98

# Table of Contents

Hearing Aids.....	99
Other Medical Devices .....	99
Health Care Facilities.....	99
Vehicles .....	99
Posted Facilities .....	100
Aircraft.....	100
Blasting Areas.....	100
Potentially Explosive Atmosphere.....	100
For Vehicles Equipped with an Air Bag .....	100
<b>Safety Information .....</b>	<b>100</b>
Charger and Adapter Safety .....	102
Battery Information and Care.....	102
Explosion, Shock, and Fire Hazards .....	104
General Notice.....	105
<b>FDA Consumer Update.....</b>	<b>106</b>
Driving .....	114
10 Driver Safety Tips.....	114

---

## Limited Warranty Statement 118

---

## Glossary 122

Terminology .....	122
Acronyms and Abbreviations.....	122

---

## Index 124

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

Thank you for choosing the **LG ENVOY III** cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, this compact phone offers:

- Significantly enhanced voice clarity.
  - Slim and sleek design with internal antenna.
  - Large, easy-to-read, backlit LCD with status icons.
  - Messaging, voicemail, and caller ID capabilities.
  - 25-key keypad.
  - Speakerphone feature.
  - Menu-driven interface with prompts for easy operation and configuration.
  - Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
  - Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.

**Note**

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

# Technical Details

## Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

## Technical Details

The phone is a trimode phone that operates on among (Code Division Multiple Access CDMA) frequencies: cellular services at 800 MHz, (Personal Communication Services PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

CDMA Standard	Designator	Description
<b>Basic Air Interface</b>	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface
<b>Network</b>	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
<b>Service</b>	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
<b>Performance</b>	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), MS (Mobile Station).

\* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The table on the following page lists some major CDMA standards.

## Technical Details

### FCC RF Exposure Information

**WARNING!** Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

### Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.59 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether

extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.59 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

### Vehicle-Mounted External Antenna (Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

### Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a

damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

### **Part 15.19 statement**

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **Part 15.21 statement**

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### **Part 15.105 statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection

against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Technical Details

### HAC

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses.

However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids.

It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise.

Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility.

If you have questions about return or exchange policies, consult your service provider or phone retailer.

### Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>. All referred licence terms, disclaimers and notices are available for download with the source code.

## Phone Overview

 


- 1. Earpiece** Lets you hear the caller and automated prompts.
- 2. LCD Screen** Displays messages and status icons. When the phone is turned on, Power Save mode automatically dims the screen and then darkens it if no keys are pressed.
- 3. Left Selection Key** Performs functions identified on the bottom-left corner of the screen.
- 4. Message Key** Quickly and easily opens a new text message.
- 5. SEND Key** Use to make and answer calls. Press to access the All Calls list.
- 6. Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
- 7. Vibrate Mode Key** Use to set Vibrate mode (from standby mode press and hold for about 3 seconds).
- 8. Lock Mode Key** Use to lock the phone from standby mode, press and hold for about 2 seconds.
- 9. CLR/Record Voice Key** Deletes single spaces or characters with a quick press, or press and hold to delete entire words in text entry screens. Press to back out of menus, one level at a time. Press once from the standby screen for quick access to the Help screen. Press and hold from the standby screen to access the Voice Recorder.
- 10. PWR / END Key** Use to turn the power on/off and to end a call. Also returns to standby mode.
- 11. Speakerphone Key** Use to change to speakerphone mode.
- 12. OK Key / Directional Key** Use the OK Key to select the function displayed at the bottom of the LCD between the Left and Right Selection Key functions. Use the Directional Key to scroll through the menu items and highlight a specific field or object by moving up, down, left or right. You can also use the Directional Key to access shortcuts from the standby screen.

## Phone Overview

13. **Right Selection Key** Performs functions identified on the bottom-right corner of the screen.

14. **Alarm Clock Key** Use to access the Alarm Clock menu.

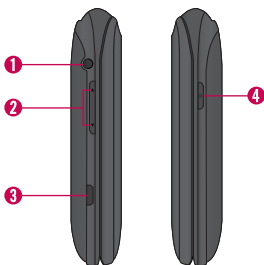

1. **Headset Jack** Allows you to plug in an optional 3.5mm headset for convenient, hands-free conversations.

2. **Volume Keys** Use to adjust the Master Volume in standby mode\* and the Earpiece Volume during a call. Use to adjust font sizes when viewing messages, entering phone numbers (in standby mode) or browsing menus (except for the Main menu).

3. **Charger/Accessory Port** Connects the phone to the charger or other compatible accessories.

### Charging with PC USB

You can use your computer to charge your phone. Connect one end of a USB cable to the Charger/Accessory Port on your phone and the other end to a high-power USB port on your PC (commonly located on the front panel of the computer).

4. **Camera Key** Use to take photos. Keep it clean for optimal photo quality.

5. **Camera Lens** Lets you take pictures.



# Menus Overview

## Menu Access

While in the home screen, press **OK** **MENU** to access the phone's main menu. There are two methods of accessing menus and submenus:

- Use the Directional Key **OK** to highlight a menu/option and press **OK** to select it.
- Press the number key on the keypad that to activate the corresponding menu/option.

---

### Contacts

1. New Contact
2. Contact List
3. Favorites
4. Groups
5. Speed Dials
6. My vCard

---

### Messaging

1. New Message
2. Messages
3. Drafts
4. Voicemail
5. Templates

---

### Call History

1. Missed Calls
2. Received Calls
3. Dialed Calls

---

### 4. All Calls

5. Call Timers
6. Data Counter

---

### Multimedia

1. Take Picture
2. Record Voice
3. Pictures
  1. My Pictures
  2. Default Pictures
4. Ringtones
  1. My Sounds
  2. Default Ringtones

---

### easyedge

---

### My Schedule

1. Calendar
2. Alarm Clock

---

### Browser

---

### Tools

1. Voice Commands
  1. Call <Name or Number>
  2. Send Msg to <Name or Number or Group>
  3. Go to <Menu>
  4. Check <Item>
  5. Contacts <Name>
  6. Redial
  7. Help
2. Calculator
3. Ez Tip Calculator
4. Eco-Calculator
5. Info Search
6. Stopwatch

# Menus Overview

- 7. World Clock
- 8. Notepad
- 9. Unit Converter
  - 1. Currency
  - 2. Area
  - 3. Length
  - 4. Mass
  - 5. Temperature
  - 6. Volume
  - 7. Velocity

## Settings

- 1. Accessibility
  - 1. Readout
    - 1. Full Readout
  - 2. Menu Readout
  - 3. Digit Dial Readout
  - 4. Caller ID Readout
  - 5. Passwords Readout
  - 6. Speech Rate
- 2. Invert Color
- 3. Large Text
- 4. Mono Audio
- 5. Turn Off All Sounds

- 2. Sounds Settings
  - 1. Master Volume
  - 2. Call Sounds
    - 1. Call Ringtone
    - 2. Call Vibrate
  - 3. Caller ID Readout
  - 3. Alert Sounds
    - 1. TXT Message
    - 2. Multimedia Message
    - 3. Voice mail
    - 4. Emergency Tone
    - 5. Missed Call
  - 4. Keypad Volume
  - 5. Service Alerts
    - 1. Minute Beep
    - 2. Call Connect
    - 3. Call Disconnet
    - 4. Charge Complete
    - 5. Software Update
  - 6. Power On/Off
    - 1. Power On
    - 2. Power Off
  - 7. Hearing Assist
- 3. Display Settings
  - 1. Banner

- 2. Backlight
    - 1. Display Backlight
    - 2. Keypad Backlight
  - 3. Brightness
  - 4. Wallpaper
    - 1. My Pictures
    - 2. Slide Show
  - 5. Menu Style
  - 6. Font Type
  - 7. Font Size
  - 8. Clock Format
  - 9. Name Match for Dialing
- 4. Phone Settings
    - 1. Airplane Mode
    - 2. Set Shortcut Keys
      - 1. Set My Shortcuts
      - 2. Set Directional Keys
    - 3. Voice Commands
      - 1. Confirm Choices
      - 2. Sensitivity
      - 3. Train Voice
      - 4. Prompts
    - 4. Language
    - 5. Location
    - 6. Security

- 7. System Select
- 8. NAM Select
- 5. Call Settings
  - 1. Answer Options
  - 2. Auto Retry
  - 3. TTY Mode
  - 4. One Touch Dial
  - 5. Voice Privacy
  - 6. DTMF Tones
- 6. Web Access Prompt
- 7. Memory
  - 1. Memory Usage
  - 2. My Pictures
  - 3. My Sounds
  - 4. My Contacts
- 8. Phone Info
  - 1. My Number
  - 2. ESN/MEID
  - 3. Icon Glossary
  - 4. SW/HW Version
  - 5. Software Update
    - 1. Status
    - 2. Check for Update

---

### Tone Room Deluxe

---

### Bluetooth

- 1. Bluetooth Menu
  - 1. Add New Device

---

### UNO

- 1. UNO

# Getting Started with Your Phone

## The Battery

 
### Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. The battery charge level is shown at the top right corner of the LCD screen.

## Installing the Battery

1. Insert your thumbnail into the cutout located at the bottom of the back cover and lift it to remove it.

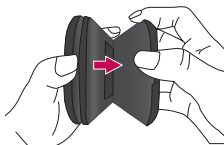

2. Align the battery contacts with the terminals near the top of the battery compartment and press until you hear the "click".

 


3. Align the battery cover and press it downward until it clicks into place.



## Removing the Battery

1. Turn the phone off.
2. Insert your thumbnail into the cutout located at the bottom of the back cover and lift it to remove it.

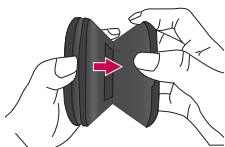

3. Use the fingertip opening near the bottom of the battery compartment to lift the battery out.



# Getting Started with Your Phone

## Charging the Battery

Use the charger provided with your phone.

### Warning!

Use only the charger provided with the phone. Using any charger other than the one included with the phone may damage your phone or battery.



### Notice

Please make sure that the 'B' side faces up before inserting a charger or USB cable into the Charger/Accessory Port of your phone.

Plug one end of the charging adapter into the phone's Charger/Accessory Port and the other end into an electrical outlet.

The charge time varies depending upon the battery level.

## Charging with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you may need to have the necessary USB Driver installed on your PC first. Connect one end of the USB cable to the Charger/Accessory Port on your phone and the other end to the USB port on your PC.


### Note

Low-power USB ports are not supported, such as the USB ports on your keyboard or bus-powered USB hub.

## Battery Temperature Protection

If the battery gets overheated, the phone will automatically turn off. When you turn the phone back on, a message pops up alerting you that the phone was powered off for your safety.


## Battery Charge Level

You can find the battery charge level  at the top right corner of the LCD screen. When the charge level becomes low, the battery sensor sounds a warning tone, blinks the battery icon, and/or displays a warning message.

## Getting Started with Your Phone


As the charge level approaches empty, the phone automatically switches off without saving.

### Signal Strength


Call quality depends on the signal strength in your area. You can tell how much signal strength you have by the number of bars next to the signal strength icon : the more bars, the stronger the signal. If you're having problems with signal quality, move to an open area or, when inside a building, try moving near a window.

### Turning the Phone On and Off




#### Turning the Phone On

1. Insert the battery and connect the phone to an external power source if the battery level is low.
2. With the flip open, press the **PWR/END Key**  until the LCD screen lights up.

#### Turning the Phone Off

With the flip open, press and hold the **PWR/END Key**  until the LCD screen turns off.


### Making Calls

1. Make sure the phone is turned on.  
If not, open the flip and press the **PWR/END Key**  for about three seconds.  
If necessary, enter the lock code.
2. Enter the phone number.
3. Press the **SEND Key**  to dial the call.
4. Press the **PWR/END Key**  to end the call.

#### Note


Your phone has a Voice Commands feature that also lets you make calls by saying a phone number or Contact name.

### Correcting Dialing Mistakes

While entering a phone number, press the **CLR Key**  once to erase the last digit entered, or hold it down for at least two seconds to delete all the digits.

# Getting Started with Your Phone

## Redialing Calls




With the flip open, press the **SEND Key**  twice to redial the last number dialed.


## Receiving Calls

1. When the phone rings or vibrates, you can answer the call by simply opening the flip.

### Note

If the 'Flip Open' (MENU > Settings > Call Settings > Answer Options) answer option is NOT MARKED, you can:

- Open the flip and press the Left Selection Key  [**Quiet**] to mute the ringing or vibration for that call.
- Open the flip and press the Right Selection Key  [**Ignore**] to end the call or send it directly to Voice mail.
- Open the flip and press  [**TEXT**] to end the call and send a quick text message.

2. Press the **PWR/END Key**  to end the call, or simply close the flip.




## Screen Icons

When the phone is on, the top line of the LCD screen displays phone status icons.

To see the icon glossary, with the flip open, go to **MENU > Settings > Phone Info > Icon Glossary** on your phone. Then select a submenu.

## Quick Access to Convenient Features

### Vibrate Mode



Sets the phone to vibrate instead of ringing ( is displayed). To set Vibrate Mode, with the flip open, press and hold . To return to Normal Mode, press and hold  again.

### Sounds Off


Quickly deactivate your phone's sounds when you're in a place where phone sounds would be disruptive.

From standby mode with the flip open, press and hold the lower volume key for 3 seconds. To return to normal sounds mode, press and hold the upper volume key.

### Mute Function

The Mute Function prevents the transmission of your voice to the caller. To quickly activate Mute while on a call, press the Left Selection Key  [Mute], then to unmute press the Left Selection Key  [Unmute] again.


### Quick Volume Adjustments

Quickly adjust ringer and earpiece volumes by pressing the Volume Keys  on the left side of the phone. Press the upper volume key to increase and lower volume key to decrease the volume.

#### Note

The earpiece volume can only be adjusted during a call and Keypad Volume can only be adjusted through the Sounds Settings menu.



### Quick Font Resize

When you view messages, enter phone numbers, or view sub-menus, press the Volume Keys  up or down to quickly adjust the font size. 3 levels (small, medium, large) of font sizes are available.

#### Note

Not supported on the Main menu.





### Call Waiting

1. During a call, one beep indicates another incoming call. Press the **SEND Key**  to answer it and put the first call on hold. Press the **SEND Key**  again to return to the first call.

## Quick Access to Convenient Features

### 3-way call



You can talk with two people at the same time with a three-way conversation on your wireless phone. Airtime and other charges, which may include toll or long distance charges, will apply for all simultaneous calls until you end one call.

1. While on the first call, dial the 10-digit number of the second person.
2. Press the **SEND Key** . The first person is automatically put on hold while the call is made.
3. When the second person answers, press the **SEND Key**  to create a conference call.
4. If the second person does not answer, press the **SEND Key**  once to end the connection and go back to the first person.
5. To end both conversations completely, press the **PWR/END Key** .

### Caller ID

Caller ID displays the number and/or name and picture (if applicable) of the person calling when your phone rings.

### Voice Commands

Voice Commands allow you to do things by verbal command (e.g., make calls, check Voice mail, etc.). With the flip open, press the Right Directional Key  and  **Voice Commands** in the MY SHORTCUTS pop-up menu.

1. **Call <Name or Number>**  
Say "Call" and then call someone simply by saying the name or phone number.
2. **Send Msg to <Name or Number or Group>** Say "Send Message" and the command will prompt you for the type of message.
3. **Go to <Menu>** This allows you to access a menu within the phone.
4. **Check <Item>** This allows you to check out a wide range of items such as **Phone Status, Voicemail, Messages, Missed Calls, Time, Signal Strength,**

## Quick Access to Convenient Features

### Battery Level, Volume and My Number.

5. **Contacts <Name>** You can look up names in your Contacts as well as manage your Contact List including creating, erasing or modifying.
6. **Redial** Say "Redial" and the phone will redial the last phone number.
7. **Help** Provides a general guideline to using Voice Commands.

#### **Note**







Voice Commands can also be started with the designated key on your Bluetooth® device. Please check the user manual of the Bluetooth® device for further instructions.

# Entering and Editing Information


## Text Input

The following key functions are available to help with text entry:

### Key Functions

-  **Left Selection Key:** Press to change the text input mode.
-  **Shift:** Press to change capitalization (initial cap, caps lock, lowercase).
-  **Next:** Press to display other matching words in the database in T9 word mode.
-  **Space:** Press to complete a word and insert a space.
-  **Clear:** Press to delete a single space or character. Hold to delete words.
-  **Punctuation:** Press to insert punctuation symbols.

## Text Input Modes

In a text field, press the Left Selection Key  to select a text input mode:







T9 Word/ Abc/ ABC/ 123/  
T9 Palabra/ Symbols/  
Templates

### Note

- T9 Palabra is the Spanish counterpart of T9 Word which utilizes accents, tildas, etc. for correct Spanish word spelling.

# Contacts in Your Phone's Memory






## Storing Basics

1. With the flip open, enter a number (max. 49 digits), then press the Left Selection Key  [Save].
2. Use the Directional Key  to highlight **Add New Contact/Update Existing**, then press .
3. Use the Directional Key  to highlight **Mobile 1/ Home/Business/ Mobile 2/ Fax**, then press .
4. Enter a name (max. 32 characters), and any additional information, then press  [SAVE].

### Note











If you selected **Update Existing** after you select the number type, the contact information is automatically updated.

## Customizing Individual Entries



1. With the flip open, press the Right Selection Key  [Contacts], then use the Directional Key  to highlight an entry.
2. Press the Left Selection Key  [Edit].
3. Use the Directional Key  to highlight the information to customize.
4. Change the entry as you want, then press  [SAVE] to save your changes.

## Speed Dial

Allows you to set up your Speed Dials.


1. With the flip open, press the Right Selection Key  [Contacts], then use the Directional Key  to highlight an entry.
2. Press the Left Selection Key  [Edit].
3. Use the Directional Key  to highlight a phone number, then press the Right Selection Key  [Options].
4. Use the Directional Key  to highlight **Set Speed Dial**, then press .
5. Select a Speed Dial digit.
  - Enter a digit using the keypad, then press  [SET].
  - Use the Directional Key  to highlight the Speed Dial digit, then press  [SET].

## Contacts in Your Phone's Memory





6. Press  [Yes] to confirm, then press  [SAVE] to update your contact entry.

### Storing a Number with Pauses

Pauses allow you to enter additional series of numbers to access automated systems such as Voice mail or credit billing numbers. Pause types are:

**Wait (W)** The phone stops dialing until you press the Left Selection Key  [Release] to advance to the following series of numbers.

**2-Sec Pause (P)** The phone waits two seconds before dialing the next string of digits.

1. With the flip open, enter the phone number, then press the Right Selection Key  [Options].
2. Use the Directional Key  to highlight **Add 2-Sec Pause or Add Wait**, then press .
3. Enter the additional number(s) (e.g., pin number, credit card number, etc.).
4. Press the Left Selection Key  [Save].






 
5. Choose **Add New Contact/ Update Existing**.
6. Choose **Mobile 1/ Home/ Business/ Mobile 2/ Fax**.
7. Continue entering information for the Contact entry as necessary.

#### Note

If you selected **Update Existing** after you select the number type, the contact information is automatically updated. You do not have the option to enter additional information.


8. Press  [SAVE] to update your contact entry.

### Adding a Pause to an Existing Contact Entry

1. With the flip open, press the Right Selection Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry, then press the Left Selection Key  [Edit].
3. Use the Directional Key  to highlight the number, then press the Right Selection Key  [Options].
4. Press  **Add 2-Sec Pause**








## Contacts in Your Phone's Memory

or  **Add Wait**.



5. Enter the additional number(s), then press  [SAVE] to update your contact entry.


### Adding Another Phone Number



#### From standby mode

1. With the flip open, enter a phone number, then press the Left Selection Key  [Save].
2. Use the Directional Key  to highlight **Update Existing**, then press .
3. Use the Directional Key  to highlight an existing entry then press  to update your contact entry.
4. Use the Directional Key  to highlight **Mobile 1/ Home/ Business/ Mobile 2/ Fax**, then press  to update your contact entry.

#### From the Contact List Screen






1. With the flip open, press the Right Selection Key  [Contacts].
2. Use the Directional Key  to highlight an entry, then press

the Left Selection Key  [Edit].

3. Use the Directional Key  to highlight the phone number field you wish to add. Then enter the number and press  [SAVE] to update your contact entry.







 


### Changing Saved Information

To edit any information you stored, access the Edit Contact screen:

1. With the flip open, press the Right Selection Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry, then press the Left Selection Key  [Edit].
3. Use the Directional Key  to highlight the field you want to change.
4. Make the changes, then press  [SAVE] to update your contact entry.





### Changing the Default Number

The Default Number is the phone number you first entered when you created the Contact. However, another number can be saved as the Default Number.









1. With the flip open, press the Right Selection Key  [Contacts].
2. Use the Directional Key  to highlight an entry.
3. Press the Left Selection Key  [Edit].
4. Use the Directional Key  to highlight a phone number, then press the Right Selection Key  [Options].
5. Use the Directional Key  to highlight **Set As Default**, then press .
6. Press  [Yes] to confirm the new number as the default. A confirmation message is displayed.
7. Press  [SAVE] to update your contact entry.

### Deleting

#### Deleting a Contact Entry

1. With the flip open, press the Right Selection Key  [Contacts].
2. Use the Directional Key  to highlight an entry.
3. Press the Right Selection Key  [Options].
4. Press  Erase.
5. Press  [Yes] to confirm.

#### Removing a Speed Dial

1. With the flip open, press the Right Selection Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry to edit and press  [VIEW].
3. Highlight the phone number with the Speed Dial, then press  [EDIT].
4. Press the Right Selection Key  [Options].
5. Press  Remove Speed Dial.
6. Press  [Yes] to confirm.
7. Press  [SAVE] to update your contact entry.

# Contacts in Your Phone's Memory

## Speed Dialing

Allows you to make phone calls quickly and easily to numbers stored in Contacts.

### Note

Speed Dial 1 is reserved for Voice mail.

## Single Digit Speed Dials

Press and hold the Speed Dial digit. Your phone recalls the phone number from your Contacts, displays it, and dials it for you.

## Multiple Digit Speed Dials

When you press and hold a number key, it signals the phone to call a Speed Dial. To dial Speed Dials with multiple digits, press the first digit(s), then press and hold the last digit. For example, to call Speed Dial 25, press **2** abc, then press and hold **5** kl.


### Note

You can also enter the Speed Dial digit(s) and press the **SEND Key** SEND.

## Contacts

The Contacts menu allows you to store names, phone numbers and other information in your phone's memory.

### Shortcut






The Right Selection Key  is a shortcut key to the Contact List.

### 1. New Contact

Allows you to add a new contact to your Contact List.

#### Note

Using this submenu, the number is saved as a new Contact, not into an existing Contact.








1. Open the flip and press  [MENU].
2. Press  **Contacts**.
3. Press  **New Contact**.
4. Enter the name and press the Directional Key  downward until the phone number type you want is highlighted.
5. Enter the number and any additional contact information and press  [SAVE] to update your contact entry.

#### Note

For more detailed information, see page 28.

### 2. Contact List

Allows you to view your Contact List.

1. Open the flip and press  [MENU].
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Use the Directional Key  to scroll through your Contacts alphabetically.
  - Press the Right Selection Key  [Options] to select one of the following:
    - New Contact/ Erase/ New Message/ Call/ Manage Contacts/ Set As Favorite/ Search Entry Mode**
  - Press the Left Selection Key  [Edit] to edit.
  - Press  [VIEW] to view the entry details.





#### TIP

Use the Go To field, for quick access to an entry without scrolling. For example, to go to "Vet", enter the letter V.

# Contacts






## 3. Favorites


Allows you to add Contact entries or Contact groups to your list of Favorites to easily view, call, or send messages.

1. Open the flip and press  [MENU].
2. Press  **Contacts**.
3. Press  **Favorites**.
4. Press  [ADD].

### TIP

You can add up to 10 Contacts and/or Contact groups as Favorites to easily make calls, send messages, and view messages.




5. Select whether you want to add a favorite from your **Contacts** or **Group**.
6. Use the Directional Key  to scroll through your Contacts or Groups alphabetically and press  [MARK].
7. Press the Left Selection Key  [Done]. Once you have added Contacts to the Favorites list, the following options will become available in the Favorites menu:  
Left Selection Key : **View**  
OK Key : **New Message/View Messages**



Right Selection Key :  
**Options**

**Move Position/ Remove/  
Remove All**



## 4. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group.


1. Open the flip and press  [MENU].
2. Press  **Contacts**.
3. Press  **Groups**.
4. **View a Group**

Use the Directional Key  to highlight a group, then press  [VIEW].

### Add a New Group

Press the Left Selection Key  [New] to add a new group to the list. Select **Enter new name/Picture** and press  [SAVE].

### Group's options

Press the Right Selection Key  [Options] to select one of the following:

**New Message/ Edit Group**

Name & ID/ Edit Members/  
Erase Group/ Set As  
Favorite/ Search Entry  
Mode

## Adding Contacts to a Group

1. From Groups submenu, press **OK** [VIEW] and press **OK** [ADD].
2. Highlight a desired contact list and press **OK** [MARK].
3. Press Left Selection Key **←** [Done] to add contact to a group.

## 5. Speed Dials

Allows you to view your list of Speed Dials or designate Speed Dials for numbers entered in your Contacts.

1. Open the flip and press **OK** [MENU].
2. Press **1** **☰** **Contacts**.
3. Press **5** **☰** **Speed Dials**.
4. Use the Directional Key **⬇** to highlight the Speed Dial position, or enter the Speed Dial digit and press **OK** [SET].
5. Use the Directional Key **⬇** to highlight the Contact then press **OK** [SET]. (For Contacts

with multiple numbers, highlight the number for the Speed Dial, then press **OK**.)

6. Press **OK** [Yes] to confirm. A confirmation message is displayed.

## 6. My vCard

Allows you to create, edit, and view your own personal Contact information including name, phone numbers, and email address in one entry.


1. Open the flip and press **OK** [MENU].
2. Press **1** **☰** **Contacts**.
3. Press **5** **☰** **My vCard**.
4. Press **OK** [EDIT] to enter your personal Contact information.
5. Use the Directional Key **⬇** to scroll to the information you want to enter.
6. Enter your information as necessary, then press **OK** [SAVE].

### Note


Press the Right Selection Key **→** [Send] to send your name card.

## Messaging

### SHORTCUT

From standby mode, pressing the Left Selection Key  is a shortcut to Messaging.



Depending on the content and size of your messages, the phone can store up to 790 messages (including a max. of 300 text messages, 100 emergency alerts, 100 multimedia message notifications, and 100 multimedia messages in the Inbox; 100 text messages and 50 multimedia messages in the Outbox; 20 text messages and 20 multimedia messages in Drafts). Content stored in the message may be limited by phone model and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

- When viewing a received message, you can call the sender back by pressing the SEND Key .

## New Message Alert

Your phone can alert you when you have new messages.




Options include:


1. The phone displays a message on the screen.
2. The message icon () is displayed on the screen. In the case of a high priority message, the icon () will flash.

## 1. New Message

Allows you to send messages (Text, Picture and Voice). Depending on the type of message you choose to send, you can also attach files to your messages including pictures, sounds, voice recordings and name cards.


 
## The Basics of Sending a Text Message

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  New Message.

 



 
To access this feature, you can press the Left Selection Key  [Message] from standby mode.

4. Enter a phone number or a recipient's name in the **To** field.

As you enter the phone number or a recipient's name, matching contacts appear. You can choose a suggested recipient or continue entering the phone number.

5. Press  to access the text field.
6. Use the keypad to enter your message.
7. Press  [SEND].

## Select Recipient(s) Using Add


1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press  **New Message**.
4. With the **To** field highlighted, press the Right Selection Key  **Add**.
5. Select an option and press .

**From Contacts** To select a recipient from your Contact List.

**From Recent Calls** To select a recipient from Recent Calls.

 


 


**Favorites** To select a recipient from Favorites.

**Groups** To select a recipient from your Groups.

6. Use the keypad to enter your message.
7. Press  [SEND].












## Multimedia Message Using Options

Allows you send messages with text, picture, sound and name card attachments.

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press  **New Message**.
4. Enter a phone number or a recipient's name in the **To** field.
5. Press  to access the text field.
6. Use the keypad to enter your message.
7. Press the Right Selection Key  [Options].
8. Select an option and press .

# Messaging

## 1. Attach

1. **Picture** Highlight a picture, then press .
2. **Take Picture** Take a picture of the subject and press .
3. **Sound** Highlight a sound, then press .
4. **Record Voice** Press  to start recording and then press  to **STOP**.
5. **Name Card**
  1. **My vCard** Press  to add.
  2. **From Contacts** Press  [MARK] to mark the name cards and press  [Done].
2. **Insert Templates** Highlight the text and press .
3. **Save As Draft** Press  to save as draft.
4. **Priority Level** Choose from **High** or **Normal** and press  [SET].
5. **Cancel Message** Select **Yes** to save the message in drafts or **No** to cancel the message without saving the message in drafts.

9. Use the keypad to enter your subject in the subject field.






10. Press  **Send**.


## 2. Messages

The phone alerts you in up to 3 ways when you receive a new message:

- By displaying a notification message on the screen.
- By sounding a tone or vibration, if set.
- By displaying (The icon will be when you get a high priority message.)

### Viewing Your Inbox

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press  **Message**.
4. Open a message thread and highlight a message. The following options are available.
  - Press  [OPEN] to view the message.
  - Press the Left Selection Key  [Erase] to erase the highlighted message.

- Press the Right Selection Key  [Options] to access the following options:

**Reply** Replies to the sender's address of the received message.

**Reply With Copy** Replies to the sender's address with a copy of the original message text included.

**Forward** Forwards the message to other destination address(es).




















**Add To Contacts** Stores the callback number, email address, and numbers from the address of the received message into your Contacts.

**Extract Addresses** Allows you to extract addresses.

**Manage Messages** Allows you to manage (lock, erase and more) multiple messages.

**Message Info** Allows you to check the received message information.

## Message Icon Reference

-  New Text Message
-  Read Text Message
-  New Media Message Received
-  Unread Multimedia Message
-  Read Multimedia Message
-  Message Delivered
-  Message Failed
-  Pending Message
-  Message Sent
-  Webmail Read
-  Multiple Messages Delivered
-  Multiple Messages Failed
-  Multiple Message Delivery Incomplete
-  Multiple Pending Messages
-  Multiple Messages Sent
-  Text Message Draft
-  Media Message Draft
-  Namecard
-  High Priority

# Messaging




 Lock




 Unlock

\* Multimedia Message indicates Picture/  
Voice Message.

## 3. Drafts

Saved message drafts are stored here.

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press  **Drafts**.
4. Highlight a message. The following options are available.

- Press  [EDIT] to continue editing the message.
- Press the Left Selection Key  [Erase] to erase the message.
- Press the Right Selection Key  [Options] for the following options.

**Send** Sends the selected message.

**Add To Contacts** Stores the number, email address, and numbers from the address included in the message into your Contacts.

**Manage Drafts** Allows you to manage (erase or lock) messages.

## Message Icon Reference








 Text Message Draft

 Media Message Draft


## 4. Voicemail

Allows you to view the number of new voice messages recorded in the Voice mail box. Once you exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone will alert you.


### Checking Your Voice mail Box



1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press  **Voicemail**.
4. The following options are available.
  - Press the Left Selection Key  [Clear] to clear the Voice mail Counter, then then press  [Yes].
  - Press the **Send Key**  or  [CALL] to listen to the message(s).

OR

1. Enter your phone number and press the **Send Key**  from your phone or dial your wireless phone number from any touch-tone phone.





OR

Press and hold  from your phone, as a speed dial to your voice mail.

2. When the recorded announcement begins, press  to interrupt (if applicable).
3. When prompted, enter your password, then .






## 5. Templates

Allows you to manage your Templates entries.

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press  **Templates**.
4. Select a message to view its content and edit it. Press  [SAVE] to save it.

## Messaging Settings

Allows you to configure settings for your messages.

1. With the flip open, press  [MENU].
2. Press  **Messaging**.
3. Press the Left Selection Key  [Settings].
4. Use the Directional Key  to highlight one of the settings and press  to select it.

## Message Settings Sub-Menu Descriptions

### 1. Inbox View

Select **Time** to display messages chronologically in Inbox and Sent folders. Select **Contact** to sort all messages alphabetically by Contact in one message folder.

#### Note

By default, Contact is set as the Inbox View setting. If changed to Time, the Messaging menu will appear differently.

### 2. Entry Mode

Select **T9 Word**, **Abc**, **ABC**, **123**, **T9 Palabra** to be your default input method.

### 3. Auto Save Sent

Select **On** to automatically save your Sent messages.

# Messaging

Select **Off** if you don't want to save automatically.

Select **Prompt** to be asked to save.

## 4. Auto Erase Inbox

Select **On** to automatically delete read messages when you exceed the storage limit. Or, select **Off**.

## 5. Messaging Font Size

Select **Small**, **Normal** or **Large** for the size of the Messaging characters.

## 6. TXT Auto View

Select **On** to automatically display message content on the screen.

Select **On + Readout** to automatically display content and read it aloud.

Select **Off** for more security and privacy by requiring the message to be opened to view it.

## 7. TXT Instant Reply

Select **On** to text a reply instantly. Or, select **Off**.

## 8. TXT Auto Scroll

Select **On** to automatically scroll text down while viewing messages. Or, select **Off**.

## 9. Multimedia Auto Receive

Select **On** to automatically download attachments to Multimedia messages. Or, select **Off**.

## 10. CMAS Alert

Set your configuration for receiving emergency alerts. This menu has three options :

**Receive Alerts/ Alert Reminder/ Alert Tone/ Alert Vibrate.**

## 11. Voicemail #

Allows you to manually enter the access number for Voice mail Service. This number should be only used when a VMS (Voice mail Service) access number is not provided by the network.

## 12. Callback #

Select **On** to automatically send a designated callback number with your messages. Or, select **Off**.

## 13. Signature

Select **Custom** to create/edit a signature to automatically send with your messages. Select **None** for no signature.

## 14. Delivery Receipt

 


When Delivery Receipt is set to **On**, you can see if your sent messages have been delivered. Or select **Off**.

## 15. TXT-Media Msg Notification

 
Displays pop-up notification when switching message types between text and media.

## Erasing Messages

You can erase messages stored in your Inbox, Sent, or Drafts folders. You can also erase all messages at the same time.

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press the Right Selection Key  [Options] then select one of the following:

Erase Sent/Received/ Erase Drafts/ Erase All Messages

4. Press  [Yes] to confirm the deletion or select which messages you want to delete.

A confirmation message is displayed.

## Call History

The Call History menu has lists of phone numbers and/or Contacts entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

### 1. Missed Calls

Allows you to view the list of missed calls; up to 90 entries.

1. Open the flip and press **OK** [MENU].
2. Press **dir** Call History.
3. Press **1** Missed Calls.
4. Use the Directional Key **dir** to highlight an entry, then
  - Press **OK** [OPEN] to open the entry.
  - Press the **SEND Key** **SEND** to place a call to the number.
  - Press the Right Selection Key **dir** [Options] to select:  
**Save To Contacts**  
(Contact Info)/ Erase/  
Lock(Unlock)/ Erase All/

### Call Timer/ Data Counter

- Press the Left Selection Key **dir** [Message] to send a message to the number.

### 2. Received Calls

Allows you to view the list of incoming calls; up to 90 entries.

1. Open the flip and press **OK** [MENU].
2. Press **dir** Call History.
3. Press **2** Received Calls.
4. Use the Directional Key **dir** to highlight an entry, then
  - Press **OK** [OPEN] to open the entry.
  - Press the **SEND Key** **SEND** to place a call to the number.
  - Press the Right Selection Key **dir** [Options] to select:  
**Save To Contacts**  
(Contact Info)/ Erase/  
Lock(Unlock)/ Erase All/  
Call Timer/ Data Counter
  - Press the Left Selection Key **dir** [Message] to send a message to the number.

### 3. Dialed Calls

Allows you to view the list of outgoing calls; up to 90 entries.

1. Open the flip and press **OK** [MENU].
2. Press **Call History**.
3. Press **Dialed Calls**.
4. Use the Directional Key to highlight an entry, then
  - Press **[OPEN]** to open the entry.
  - Press the **SEND Key** to place a call to the number.
  - Press the Right Selection Key **[Options]** to select:
 

**Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ Call Timer/ Data Counter**
  - Press the Left Selection Key **[Message]** to send a message to the number.

### 4. All Calls

Allows you to view the list of all calls; up to 270 entries.

1. Open the flip and press **OK** [MENU].

2. Press **Call History**.
3. Press **All Calls**.
4. Use the Directional Key to highlight an entry, then
  - Press **[OPEN]** to open the entry.
  - Press the **SEND Key** to place a call to the number.
  - Press the Right Selection Key **[Options]** to select:
 

**Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ Call Timer/ Data Counter**
  - Press the Left Selection Key **[Message]** to send a message to the number.

#### Shortcut




To view a quick list of all your recent calls, press the **SEND Key** from standby mode.

### 5. Call Timer

Allows you to view the duration of selected call types.

1. Open the flip and press **OK** [MENU].
2. Press **Call History**.
3. Press **Call Timer**.

## Call History





4. Use the Directional Key  to highlight a call list.  
**Last Call/ All Calls/  
Received Calls/ Dialed Calls/  
Roaming Calls/ Last Reset/  
Lifetime Calls**
5. Press the Left Selection Key  [**Reset**] to reset the highlighted data counter.
6. Reset all the recorded timers by pressing the Right Selection Key  [**Reset All**].

### Note

Lifetime Calls cannot be reset.

## 6. Data Counter

Allows you to view the data counter.

1. Open the flip and press  [**MENU**].
2. Press  **Call History**.
3. Press  **Data Counter**.
4. Use the Directional Key  to highlight a data list. The counters available are:  
**Transmit Data/ Received Data/Total Data**

### Note

Total Data cannot be reset.

## Multimedia







Everything you need to know while you're on the go.

### 1. Take Picture

Lets you to take digital pictures.

#### Shortcut

Press the Camera Key from the Home screen to open the camera function.

1. Open the flip and press  [MENU].
2. Press  **Multimedia**.
3. Press  **Take Picture**.
4. Set the brightness by pressing the Directional Key  up and down, zoom by pressing the Directional Key  left and right, and press the Right Selection Key  [Options] to change other settings.

#### Note

Zooming is not available on the highest resolution.

- Select the option(s) to customize.

**RESOLUTION** 1280X960/  
640X480/ 320X240

**SELF TIMER** Off/ 3 Seconds/  
5 Seconds/ 10 Seconds

**WHITE BALANCE** Auto/  
Sunny/ Cloudy/ Fluorescent/  
Glow

**SHUTTER SOUND** Shutter/  
No Sound / Say "Cheese" /  
Ready! 1 2 3



**COLOR EFFECTS** Normal/  
Negative/ Aqua/ Sepia/  
Black&White

**NIGHT MODE** On/ Off



**NOISE REDUCTION** On/ Off  
Turning this setting on  
provides improved picture  
quality in low-lighting shots.

**AUTO SAVE** On/ Off

**PREVIEW** Actual view/ Full  
screen




5. Take a picture by pressing  [TAKE].
6. Press the Left Selection Key  [Save]. The picture is stored in My Pictures.

## 2. Record Voice

Record Voice Press  to start recording and then press  to STOP.






## 3. Pictures

View, take, and share digital pictures right from your wireless phone.




1. Open the flip and press  [MENU].
2. Press  **Multimedia**.
3. Press  **Pictures**.
4. Browse the submenus.

### 3.1 My Pictures

Allows you to view and manage photos stored in the phone.

1. Open the flip and press  [MENU].
2. Press  **Multimedia**.
3. Press  **Pictures**.
4. Press  **My Pictures**.
5. Highlight a picture with the Directional Key .

The following options are available:

- Press  [VIEW] to view it.
- Press the Left Selection Key  [Erase] to delete it.
- Press the Right Selection Key  [Options] to select one of the following options:

**Send** New Message /  
Via Bluetooth

**Set As** Wallpaper/ Picture ID

**Take Picture** Turns on the camera function.

**Slide Show** Plays all pictures as a slide show.


 

**Manage Pictures** Allows you to mark multiple pictures to be erased, sent or locked/unlocked.

**Rename** Allows you to change the file name.

**Lock (Unlock)** Allows you to lock or unlock. Locked files can't be erased accidentally.

**File Info** Name/ Date/ Time/ Resolution/ Size






## Editing a Picture

Access My Pictures, then use the Directional Key  to highlight a picture. Press  [VIEW] and then press the Right Selection Key  [Options] to access:


**Edit** Allows you to zoom, rotate and crop the photo.

## 3.2 Default Pictures

Allows you to view and manage default photos stored in the phone.

1. Open the flip and press  [MENU].
2. Press  Multimedia.
3. Press  Pictures.
4. Press  Default Pictures.
5. Highlight a picture with the Directional Key .

The following options are available:

- Press  [VIEW] to view it.
- Press the Right Selection Key  [Options] to set the image as your Wallpaper.








## 4. Ringtones

Personalize your phone with ringtones. A wide variety of choices are available, such as current hits, pop, hip-hop, and more.



 


### 4.1 My Sounds

Allows you to record a new sound or select a desired sound.




#### How to record a new sound



1. Open the flip and press  [MENU].
2. Press  Multimedia.
3. Press  Ringtones.
4. Press  My Sounds.
5. Press  Record New and press  to start recording, then press  [STOP] to end recording.

#### How to select a sound

1. Open the flip and press  [MENU].
2. Press  Multimedia.
3. Press  Ringtones.
4. Press  My Sounds.
5. Use the Directional Key  to scroll and highlight a preloaded sound.

 







### Options with a sound file highlighted:

- Press the Left Selection Key  [Set As] to set it as the Ringtone, Contact ID or Alert Sounds.
- Press  [PLAY].
- Press the Right Selection Key  [Options] to select:  
Send Via Bluetooth/  
Rename/ Lock(Unlock)/  
Erase/ Erase All/ File Info.

-  **Contact ID:** Highlight and select the Contact to be identified by the ringtone you selected.
-  **Alert Sounds:** Press the corresponding number key to set the ringtone for one of the following: **All Messages/ TXT Message/ Multimedia Message/ Voicemail**

## 4.2 Default Ringtones

Allows you to record a new sound or select a desired sound.

1. Open the flip and press  [MENU].
2. Press  **Multimedia.**
3. Press  **Ringtones.**
4. Press  **Default Ringtones.**
5. Use the Directional Key  to highlight a ringtone and press  [PLAY] to play the ringtone or the Left Selection Key  [Set As] to set the ringtone as:
  -  **Ringtone:** Sets the ringtone for your incoming calls.

## easyedge<sup>SM</sup>

easyedge<sup>SM</sup> allows you to do more than just talk on your phone. easyedge<sup>SM</sup> is a technology and service that allows you to download and use applications on your phone. With easyedge<sup>SM</sup>, it is quick and easy to personalize your phone to suit your lifestyle and tastes. Just download the applications that appeal to you. From ringtones and wallpapers to games and productivity tools, you can be assured you will find something useful, practical, or downright entertaining. There are new applications constantly available for your use.




### Downloading Applications

You can download applications and use easyedge<sup>SM</sup> where service is available.




### Incoming Calls

When using applications, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.



## 1. City ID

1. Open the flip and press  [MENU].
2. Press  easyedge.
3. Access **City ID**, then use the Directional Key  to select the desired menu(s).




## 2. Tone Room Deluxe

1. Open the flip and press  [MENU].
2. Press  easyedge.
3. Access **Tone Room Deluxe**, then use the Directional Key  to navigate.




## 3. UNO

1. Open the flip and press  [MENU].
2. Press  easyedge.
3. Access **UNO**.

## 4. Settings

1. Open the flip and press  [MENU].
2. Press  easyedge.
3. Access **Settings**, then use the Directional Key  to navigate through the menu.

## 5. Help

1. Open the flip and press  [MENU].
2. Press  easyedge.
3. Access **Help**, then use the Directional Key  to navigate through the menu.






# My Schedule


## My Schedule

Allows you to keep your agenda convenient and easy to access. Simply store your appointments and your phone will alert you with a reminder you set.




### 1. Calendar

Allows you to keep your agenda convenient and easy to access. Simply store your appointments and your phone will alert you with a reminder you set.




1. Open the flip and press  [MENU].
2. Press  My Schedule.
3. Press  Calendar.
4. Use the Directional Key  to highlight the scheduled day.  
Left: Previous Day  
Right: Next Day  
Up: Previous Week  
Down: Next Week
5. Press the Left Selection Key  [Add].
6. Enter the Subject, then scroll down to set the remaining settings.

7. Highlight a Calendar setting field, then press the Left Selection Key  [Set]. For each Calendar event you can set:

- Start Date
- Start Time
- End Date
- End Time
- Repeat
- Until
- Alerts
- Tones
- Vibrate

8. Use the Directional Key  to highlight the setting you want, then press .
9. Press  [SAVE] when Calendar information is complete.







### Editing and Deleting calendar entries

1. From the calendar entry list, press  [VIEW].
2. Press  [EDIT] to edit the calendar entry or press the Left Selection Key  [Erase] to delete the calendar entry.


### 2. Alarm Clock

Allows you to set up to 10 alarms. At the alarm time, your alarm will be displayed on the

LCD screen and the alarm will sound.

1. Open the flip and press  [MENU].
2. Press  My Schedule.
3. Press  Alarm Clock.
4. Press the Left Selection Key  [Add].
5. Use the Directional Key  to highlight the information you want to set, then press the Left Selection Key  [Set] to view your setting choices.

Enter the alarm information including:

- Turn On/Off
  - Set Time
  - Repeat
  - Ringtone
6. Press  [SAVE] after setting all of the Alarm fields as necessary.

### Note

Snooze or Dismiss the alarm using the Selection Keys (flip open).

### How to delete alarms

1. From the Alarm Clock list, press the Right Selection Key  [Options] to view the available options.
2. Press  Erase to delete an alarm or  Erase All to delete all alarm entries.
3. Press  [Yes].

 

### How to edit alarms

1. From the Alarm Clock list, press  [VIEW] and then press  [EDIT].

## Browser



### Browser

Allows you to access news, sports, weather, and email from your device. Accessibility and selections within this feature are dependent upon your service provider. For specific information on Internet access through your phone, contact your service provider.


1. Open the flip and press  [MENU].
2. Press  **Browser**.




## Tools

Your phone tools include Voice Commands, Calculator, Ez Tip Calculator, Eco-Calculator, Info Search, Stopwatch, World Clock, Notepad, and Unit Converter.



1. Open the flip and press  [MENU].
2. Press  Tools.


### 1. Voice Commands

This feature provides you with the following options equipped with AVR (Advanced Voice Recognition) technology. Each option has its detailed information on the phone and you can check it out by pressing the Left Selection Key  [Info].

1. Open the flip and press  [MENU].
2. Press  Tools.
3. Press  Voice Commands.

### Access and Options

With the flip open, press the Right Directional Key  and select  Voice Commands in the MY SHORTCUTS pop-up menu.

The Voice Commands feature has several settings which allow you to customize how you want to use it. Access Voice Commands, then press the Right Selection Key  [Settings].

**Confirm Choices** Automatic/ Always Confirm/ Never Confirm


**Sensitivity** Set the sensitivity as More Sensitive/ Automatic/ Less Sensitive.

**Train Voice** If the phone often asks you to repeat voice command, train the phone to recognize your voice patterns.  
**Train Words/ Train Digits**

**Prompts** Mode/ Audio Playback/ Timeout

- For Mode, set Prompts/ Readout + Alerts/ Readout/ Tones Only.
- For Audio Playback, set Speakerphone or Earpiece.
- For Timeout, set 5 Seconds or 10 Seconds.

### 1.1 Start Command

1. Open the flip and press  [MENU].

2. Press **B** Tools.
3. Press **1** Voice Commands.

### 1.1.1 Call <Name or Number>

Say "Call" and then call someone simply by saying the name or phone number. Please speak clearly and say the name or number exactly as it is entered in your Contact List. When you have more than one contact number, you can state the name and number type of the contact (for example, 'Call John Work').

### 1.1.2 Send Msg to <Name or Number or Group>

Say "Send Message" and the command will prompt you for the type of message. After choosing the message type, you will be prompted for the contact name, number or group. It will automatically start a message. If you say a full-sentence command, such as 'Send Message to Bob', it will automatically start a text message without asking for the message type. When using 'Send Message' command, speak clearly and say the name, number or group exactly as it is

entered in your Contact List.

### 1.1.3 Go to <Menu>

The 'Go to' command allows you to access a menu within the phone (for example, 'Go to Calendar').

If no menu option is stated, a list of options will be provided.

### 1.1.4 Check <Item>

The 'Check' command allows you to check out a wide range of items such as Phone Status, Voice mail, Messages, Missed Calls, Time, Signal Strength, Battery Level, Volume and My Number.

### 1.1.5 Contacts <Name>

You can look up names in your Contacts (for example, 'Contacts John') as well as manage your Contact List including creating, erasing or modifying. Call/ Read out/ Create New/ Modify/ Erase

### 1.1.6 Redial








Say "Redial" and the phone will redial the last phone number.

### 1.1.7 Help



Provides a general guideline to using Voice Commands.



## 2. Calculator



Allows you to perform simple mathematical calculations.

1. Open the flip and press  [MENU].
2. Press  Tools.
3. Press  Calculator.
4. Enter the numbers to get the value you want. To clear entered items, press the Left Selection Key  [Clear].
5. Use the Right Selection Key  [Operators] to add other operators.
6. Use the Directional Key  to enter an operation between numbers and press  [=] for the result.

#### Note





To insert a decimal, press . To insert + and -, press .

- Press the Directional Key  Up for + (addition).
- Press the Directional Key  Down for - (subtraction).

- Press the Directional Key  Left for ÷ (division).
- Press the Directional Key  Right for x (multiplication).

## 3. Ez Tip Calculator

Allows you to quickly and easily calculate bill amounts using the bill total, tip % and number of people as variables.

1. Open the flip and press  [MENU].
2. Press  Tools.
3. Press  Ez Tip Calculator.
4. Enter the variable fields (Total Bill, Tip (%), Split) and the corresponding calculation fields (tip and total for each person) appear automatically.
5. Press the Left Selection Key  [Reset] for another calculation.

## 4. Eco-Calculator

Allows you to keep track of your walking and cycling distances. The amount of CO<sub>2</sub> that is decreased by walking and cycling is displayed for you to see.

1. Open the flip and press 

[MENU].

2. Press **B** **Tools**.
3. Press **4** **Eco-Calculator**.
4. Select the **Walking** or **Cycling** fields to edit the hours and miles.

### Note

The decreasing CO<sub>2</sub> amount is automatically updated when you enter the hour or mile amounts.

 



5. Press the Left Selection Key **←** [Settings] to set the following settings.
  - **Mode** Allows you to switch the Eco-Calculator home screen animation to **Person** or **Tree**. Depending on what information you entered last (Walking or Cycling) an animation will appear. The number of trees in the animation is calculated depending on the amount of CO<sub>2</sub> decreased.
  - **Character** Allows you to change the character to **Man**, **Woman**, or **Man & Woman**. This option is unavailable when Tree is set as the Mode.

- **Unit** Allows you to change the unit amount to **Hour** or **Mile**.
- **My Car** Allows you to select the type of fuel your car uses and the Fuel Efficiency (mpg) of your car to measure the amount of CO<sub>2</sub> discharged.

## 5. Info Search

Allows you to search items stored on the phone.

 





1. Open the flip and press **OK** [MENU].
2. Press **B** **Tools**.
3. Press **5** **Info Search**.
4. Enter two or more characters in the search field and press **OK** [SEARCH].
5. By default, the phone will search all the categories. To specify the categories, highlight **All** and press the Left Selection Key **←** [Set]. Use the Directional Key **↑** to highlight a category and press **OK** [MARK] to mark/unmark the category. After specifying the categories, press the Left Selection Key **←** [DONE].
6. To view a search result,

highlight the desired results and press  [VIEW]. If you want to retry the search, press the Right Selection Key  [Retry]. If you want to start a new search, press the Left Selection Key  [Search], enter your key word, then press .

- If no results are found, you will be prompted to try again. Choose **Yes** to try again or **No** to return to the Tools menu.

 





## 6. Stopwatch

Allows you to use your phone as a typical stopwatch.


 
- Open the flip and press  [MENU].
- Press  **Tools**.
- Press  **Stopwatch**.
- Press  [START].
- Pressing  [STOP] will stop or resume Stopwatch time.
- While measuring time, press the Left Selection Key  [Lap] to record a lap.
- After time has stopped, press the Right Selection Key  [Reset].

## 7. World Clock

Allows you to determine the current time in another time zone or country.

 
- Open the flip and press  [MENU].
- Press  **Tools**.
- Press  **World Clock**.
- Press the Right Selection Key  [Cities] for a list of available cities.
- Highlight a city from the list, then press .
- The display shows the position of the city on a global map.
- Press  again to zoom in on the city and view its date and time information.

### Note







Press the Left Selection Key  [Set DST], to set daylight saving time. Select **Yes** and press  to set DST.

## 8. Notepad

Allows you to add, read, edit, and erase notes to yourself.




- Open the flip and press  [MENU].

## Tools

2. Press  **Tools**.
3. Press  **Notepad**.
4. Press the Left Selection Key  **[Add]** to write a new note.
5. Press the Left Selection Key  to change the entry mode.  
Or press the Right Selection Key  **[Options]** to Copy Text and Paste or to Cancel the notepad entry.
6. After filling in the note, press  **[SAVE]** to save it.

### 9. Unit Converter

Allows you to add, read, edit, and erase notes to yourself.




1. Open the flip and press  **[MENU]**.
2. Press  **Tools**.
3. Press  **Unit Converter**.  
You can change the  
**Currency/ Area/ Length/  
Mass/ Temperature/  
Volume/ Velocity.**

## Settings

Your phone settings include Accessibility, Sounds Settings, Display Settings, Phone Settings, Call Settings, Web Access Prompt, Memory and Phone Info.





### 1. Accessibility

Allows you to set the Accessibility settings.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Accessibility.

#### 1.1 Readout

Allows you to set the readout settings.







1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Accessibility.
4. Press  Readout.

##### 1.1.1 Full Readout

This feature reads the screens out loud for blind and low-vision users or when your eyes are busy.








1. Open the flip and press  [MENU].

[MENU].

2. Press  Settings.
3. Press  Accessibility.
4. Press  Readout.
5. Press  Full Readout.
6. Use the Directional Key  to highlight a setting, then press  [SET].




##### 1.1.2 Menu Readout

Allows the phone to read menus out loud.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Accessibility.
4. Press  Readout.
5. Press  Menu Readout.
6. Use the Directional Key  to highlight a setting, then press  [SET].

##### 1.1.3 Digit Dial Readout

Allows the phone to read the digits you dial out loud.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Accessibility.

# Settings

4. Press **1** **Readout**.
5. Press **3** **Digit Dial Readout**.
6. Use the Directional Key to highlight a setting, then press **OK** [SET].

## 1.1.4 Caller ID Readout

Allows you to set how you want the Caller ID to be read out.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **1** **Accessibility**.
4. Press **1** **Readout**.
5. Press **4** **Caller ID Readout**.
6. Use the Directional Key to highlight a setting, then press **OK** [SET].

## 1.1.5 Passwords Readout

Allows the phone to read the password.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **1** **Accessibility**.
4. Press **1** **Readout**.
5. Press **5** **Passwords Readout**.

6. Use the Directional Key to highlight a setting, then press **OK** [SET].

## 1.1.6 Speech Rate

Allows you to set the menu readout speech rate.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **1** **Accessibility**.
4. Press **1** **Readout**.
5. Press **6** **Speech Rate**.
6. Use the Directional Key to highlight a setting, then press **OK** [SET].







## 1.2. Invert Color

Allows you to invert the color theme.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **1** **Accessibility**.
4. Press **2** **Invert Color**.
5. Use the Directional Key to highlight a setting, then press **OK** [SET].







### 1.3. Large Text

Allows you to use larger font for menus.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Accessibility.
4. Press  Large Text.
5. Use the Directional Key  to highlight a setting, then press  [SET].


### 1.4. Mono Audio






Plays the same sounds to both earpieces so you can hear everything with just one ear.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Accessibility.
4. Press  Mono Audio.
5. Use the Directional Key  to highlight a setting, then press  [SET].

### 1.5. Turn Off All Sounds

This menu turns off all of device's sounds.

1. Open the flip and press  [MENU].







2. Press  Settings.
3. Press  Accessibility.
4. Press  Turn Off All Sounds.
5. Use the Directional Key  to highlight a setting, then press  [SET].

## 2. Sounds Settings

Provides options to customize the phone's sounds.


### 2.1 Master Volume

Allows you to set the Master Volume settings.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Master Volume.
5. Adjust the volume with the Directional Key  and press  [SET] to save the setting.

### 2.2 Call Sounds

Allows you to set how the phone alerts you for types of incoming calls.

1. Open the flip and press  [MENU].

# Settings

2. Press **9** **Settings**.
3. Press **2** **Sounds Settings**.
4. Press **2** **Call Sounds**.

## 2.2.1 Call Ringtone

Allows you to select the ringtone for incoming calls.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **2** **Sounds Settings**.
4. Press **2** **Call Sounds**.
5. Press **1** **Call Ringtone**.
6. Use the Directional Key **↔** to highlight a ringtone then press **OK** [SET] to save the sound.

### TIP

To hear a ringtone before you set it, press the Left Selection Key **←** [Play].

## 2.2.2 Call Vibrate

Allows you to select if you want vibration for incoming calls.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **2** **Sounds Settings**.
4. Press **2** **Call Sounds**.

5. Press **2** **Call Vibrate**.
6. Use the Directional Key **↔** to highlight a setting, then press **OK** [SET].

## 2.2.3 Caller ID Readout

Allows you to set how you want the Caller ID to be read out.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **2** **Sounds Settings**.
4. Press **2** **Call Sounds**.
5. Press **3** **Caller ID Readout**.
6. Use the Directional Key **↔** to highlight a setting, then press **OK** [SET].

## 2.3 Alert Sounds

Allows you to select the alert type sounds.







1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **2** **Sounds Settings**.
4. Press **3** **Alert Sounds**.
5. Select **TXT Message/ Multimedia Message/ Voicemail/ Emergency**

### Tone/ Missed Call

- The Alert Sounds menu has these options:  
**Tone/ Vibrate/ Reminder**  
 The exception for this is the Emergency Tone menu. This menu has these options:  
**Vibrate Only/ Alert & Vibrate**




 
## 2.4 Keypad Volume

Allows you to set the keypad volume.

- Open the flip and press  [MENU].
- Press  Settings.
- Press  Sounds Settings.
- Press  Keypad Volume.
- Adjust the volume with the Directional Key  and press  [SET] to save the setting.

## 2.5 Service Alerts

Allows you to set any of the five Alert options to either On or Off.

- Open the flip and press  [MENU].
- Press  Settings.
- Press  Sounds Settings.
- Press  Service Alerts.

- Select an alert option.



**Minute Beep** Alerts you 10 seconds before the end of every minute during a call.

**Call Connect** Alerts you when the call is connected.


**Call Disconnect** Alerts you when the call is disconnected.

**Charge Complete** Alerts you when the battery is completely charged.

**Software Update** Alerts you of an OTA software update to the device.





- Use the Directional Key  to highlight a setting, then press  [SET].

### Note

When highlighting On, you can play the alert option by pressing the Left Selection Key  [Play].

## 2.6 Power On/Off

Allows you to select the power on/off type sounds.

- Open the flip and press  [MENU].
- Press  Settings.
- Press  Sounds Settings.
- Press  Power On/Off.

# Settings

5. Press **1** **Power On** or **2** **Power Off**.
6. Use the Directional Key **⬇️** to highlight a setting, then press **OK** [SET].

## 2.7 Hearing Assist

Allows you to set the phone to automatically adapt to noisy environments by adjusting the listening level and improving speech intelligibility.

### Note

The Hearing Assist feature is automatically disabled when you use the speakerphone or the hands-free devices.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **2** **Sounds Settings**.
4. Press **7** **Hearing Assist**.
5. Use the Directional Key **⬇️** to highlight a setting, then press **OK** [SET].

## 3. Display Settings

Provides options to customize the phone's display screen.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **3** **Display Settings**.

### 3.1 Banner

Allows you to enter a string of up to 18 characters which displays on the LCD screen.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **3** **Display Settings**.
4. Press **1** **Banner**.
5. Enter your own banner text.






### Note

Press the Directional Key **⬇️** to change the color of the text. Use the Directional Key **⬅️** to select the color you want.

6. Press **OK** [SET] to save the setting.







### 3.2 Backlight

Allows you to set the duration for illuminating the backlight for the main display, front display, and keypad. Each is set separately.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Backlight.
5. Highlight a Backlight submenu and press .
  - **Display Backlight:**  
7 Seconds/ 15 Seconds/  
30 Seconds/ Always Off
  - **Keypad Backlight:**  
7 Seconds/ 15 Seconds/  
30 Seconds/ Always Off

### 3.3 Brightness

Allows you to set the backlight levels.






 
1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Brightness.
5. Use the Directional Key  to highlight a setting, then press  [SET].

#### Note

Brightness level can be 1 to 7.







### 3.4 Wallpaper

Allows you to choose the kind of background to be displayed on the phone's LCD in standby mode.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Wallpaper.
5. Highlight a Wallpaper submenu and press .
6. Press  [SET] to set.


### 3.5 Menu Style

Allows you to choose between the different themes for the phone's menus.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Menu Style.
5. Use the Directional Key  to highlight a setting, then press  [SET].







# Settings

## Note


Press the Left Selection Key  to preview the selected display theme. Default setting is Grid.

## 3.6 Font Type


Allows you to set the font type.








1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Font Type.
5. Use the Directional Key  to highlight a setting, then press  [SET].

## Note

Press the Left Selection Key  [Preview] to preview the selected font type.

## 3.7 Font Size

Allows you to set the font size for Dial Digits, Menu & List and Message. Plus, the Volume Key Resize setting allows you to use the side Volume Keys  to instantly scale screen fonts. This setting is helpful for those who need the text to display a little bit larger.


1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Font Size.
5. Use the Directional Key  to highlight Dial Digits/ Menu & List/ Message.
6. Use the Directional Key  to highlight a setting, then press  [SET].

Dial Digits: Resizable/ Small/ Normal/ Large

Menu & Lists: Resizable/ Small/ Normal/ Large

Message: Resizable/ Small/ Normal/ Large





## Note

Press the Left Selection Key  [Preview] to preview the selected font size.


## 3.8 Clock Format

Allows you to choose the kind of clock to be displayed on the front and main LCD screens.

1. Open the flip and press  [MENU].
2. Press  Settings.







3. Press  **Display Settings**.
4. Press  **Clock Format**.
5. Use the Directional Key  to highlight a setting, then press  [SET].

**Note**

Press the Left Selection Key  [Preview] to preview the selected clock format.

### 3.9 Name Match for Dialing

Allows you to display names when entering matching phone numbers to dial.







1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Display Settings**.
4. Press  **Name Match for Dialing**.
5. Use the Directional Key  to highlight a setting, then press  [SET].

## 4. Phone Settings

The Phone Settings menu allows you to designate specific settings to customize how you use your phone.

### 4.1 Airplane Mode

Turning on Airplane Mode will disable all wireless communications.


1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **Airplane Mode**.
5. Use the Directional Key  to highlight a setting, then press  [SET].






### 4.2 Set Shortcut Keys

Allows you to set shortcuts to phone menus using the down, up, left and right Directional Keys.





#### 4.2.1 Set My Shortcuts

**Note**

To access these shortcuts, press the Right Directional Key  from standby mode (by default) to display My Shortcuts.


1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **Set Shortcut Keys**.
5. Press  **Set My Shortcuts**.










# Settings

- Use the Directional Key  to highlight a shortcut key you want to set.
- Press  [SET] to display the available shortcuts. Use the Directional Key  to highlight one, then press  [SET].

## 4.2.2 Set Directional Keys

### Note

To access these shortcuts open the flip, then press the Directional Key  in the direction (up, left) set from standby mode for the Shortcut you want to access.







- Open the flip and press  [MENU].
- Press  Settings.
- Press  Phone Settings.
- Press  Set Shortcut Keys.
- Press  Set Directional Keys.
- Use the Directional Key  to highlight a shortcut key you want to set.
- Press  [SET] to display the available shortcuts. Use the Directional Key  to highlight one, then press  [SET].

## 4.3 Voice Commands

Please refer to page 55 for details.






## 4.4 Language

Allows you to set the Multi-language (English, Spanish) feature according to your preference.



- Open the flip and press  [MENU].
- Press  Settings.
- Press  Phone Settings.
- Press  Language.
- Use the Directional Key  to highlight a setting, then
- Press  [SET].

## 4.5 Location

Allows you to set GPS (Global Positioning System: Satellite assisted location information system) mode.

- Open the flip and press  [MENU].
- Press  Settings.
- Press  Phone Settings.
- Press  Location.
- Read the disclaimer and press the Right Selection Key  [Next] until you get to the

end. Then press the Right Selection Key  [OK].





- Use the Directional Key  to highlight a setting, then press  [SET].

#### Note

- GPS satellite signals are not always received by the phone, especially under bad atmospheric and environmental conditions, indoors, etc.
- When a Location Setting Restriction is activated in the Security Menu, the lock code is required when you enter location menu. The lock code is the same 4 digits you use as your device lock code; initially the last 4 digits of your phone number.
- When in Airplane Mode, services supporting Location On functionality will be suspended.

## 4.6 Security






The Security menu allows you to secure the phone electronically.

- Open the flip and press  [MENU].
- Press  Settings.
- Press  Phone Settings.
- Press  Security.
- Enter the four-digit lock code.

The lock code is the last 4 digits of your mobile phone number if it is set. The lock code is the last 4 digits of your MEID if your mobile phone number is not set.

### 4.6.1 Edit Codes

Allows you to enter a new four-digit lock code.

- Open the flip and press  [MENU].
- Press  Settings.
- Press  Phone Settings.
- Press  Security.
- Enter the four-digit lock code.
- Press  Edit Codes.
- Select **Phone Only** or **Calls & Services**.
- Enter your new four-digit lock code.
- For confirmation, it will ask you to enter the new lock code again.

### 4.6.2 Restrictions

Allows you to set separate restrictions for Location Setting, Calls and Messages.

- Open the flip and press 

# Settings

[MENU].

2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.
4. Press **6** **Security**.
5. Enter the four-digit lock code.
6. Press **2** **Restrictions**.
7. Enter the four-digit service code.
8. Select a Restrictions menu then press **OK**.
9. Use the Directional Key **↑** to highlight the restriction then press **OK**.

**Calls : Incoming Calls** Allow All/ Contacts Only/ Block All

**Calls : Outgoing Calls** Allow All/ Contacts Only/ Block All

**Text Msgs : Incoming Messages** Allow All/ Contacts Only/ Block All

**Text Msgs : Outgoing Messages** Allow All/ Contacts Only/ Block All

**Multimedia Msgs : Incoming Messages** Allow All/ Contacts Only/ Block All

**Multimedia Msgs : Outgoing Messages** Allow

All/ Contacts Only/ Block All

**Data** Allow All/ Block All

## 4.6.3 Emergency #S

This menu allows you to edit your emergency numbers.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.
4. Press **6** **Security**.
5. Enter the four-digit lock code.
6. Press **3** **Emergency #S**.
7. To edit a number, select an emergency number from the list, then press **OK**.

## 4.6.4 Phone Lock Setting

Keeps your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code using Edit Codes submenu within the Security menu.

1. Open the flip and press **OK** [MENU].

2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.
4. Press **6** **Security**.
5. Enter the four-digit lock code.
6. Press **4** **Phone Lock Setting**.
7. Highlight an option and press **OK** [SET].

**Unlocked** remains unlocked, by default.

**On Power Up** The phone is locked when it is turned on.

#### 4.6.5 Lock Phone Now

Selecting this menu immediately locks the phone and requires you to enter your security lock code to access it.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.
4. Press **6** **Security**.
5. Enter the four-digit lock code.
6. Press **5** **Lock Phone Now**.

#### Note

To unlock the phone from standby mode, press the Right Selection Key **↩** [Unlock] and enter the four-digit lock code.

#### 4.6.6 Reset Default

Allows you to reset your phone to the factory default settings.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.
4. Press **6** **Security**.
5. Enter the four-digit lock code.
6. Press **6** **Reset Default**.
7. Press **OK** after reading the warning message.
8. Highlight **Revert** and press **OK**.

A confirmation message is displayed briefly before the phone resets itself.

#### 4.7 System Select

Allows you to set up the phone management environment.

Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.

# Settings

4. Press **7** **System Select**.
5. Use the Directional Key **↔** to highlight a setting, then press **OK** [SET].

## 4.8 NAM Select

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.
4. Press **8** **NAM Select**.
5. Use the Directional Key **↔** to highlight a setting, then press **OK** [SET].

## 5. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

### 5.1 Answer Options

Allows you to determine how the phone will answer an incoming call.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **5** **Call Settings**.
4. Press **1** **Answer Options**.
5. Use the Directional Key **↔** to select the setting(s) you want to use, then press **OK** [MARK].
6. Press the Left Selection Key **←** [Done] when you have marked the setting(s) you want.


 
### Note

Auto with Handsfree is available when any external device is connected to your phone or speaker is set to on.

### 5.2 Auto Retry


Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Open the flip and press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **5** **Call Settings**.
4. Press **2** **Auto Retry**.

5. Use the Directional Key  to highlight a setting, then press  [SET].

### 5.3 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Open the flip and press  [MENU].



2. Press  Settings.

3. Press  Call Settings.

4. Press  TTY Mode.

5. An explanation message is displayed.

6. Press  to continue.

7. Use the Directional Key  to highlight a setting, then press  [SET].

**TTY Full:** Users who cannot talk or hear send and receive a text message through TTY equipment.

**TTY + Talk:** Users who can

### TTY Mode (Tele Type writer)

Menu	User	Menu	Transmission/ Receiving Mode	When making communications with a non-TTY terminal
TTY Full	For hearing/ verbally- impaired		Text message transmission, text message receiving	Operator required
TTY + Talk	For hearing- impaired	Able to talk	Voice transmission, text message receiving	Operator required
TTY + Hear	For verbally- impaired	Audible	Text message transmission, voice receiving	Operator required
TTY Off			Voice transmission, voice receiving	

# Settings

talk but cannot hear receive a text message and send voice through TTY equipment.

**TTY + Hear:** Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

**TTY Off:** Users send and receive without TTY equipment.

 




 
## Connecting TTY Equipment and a Terminal

1. Connect a TTY cable to TTY connection on the terminal (TTY connection location is the same as a headset jack).
2. Enter the phone menu and set the desired TTY mode.
3. After setting a TTY mode, check the LCD screen of the phone for the TTY icon.
4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.

7. The voice or text message from the receiver end displays on the TTY equipment display.

 



## 5.4 One Touch Dial



Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  One Touch Dial.
5. Use the Directional Key  to highlight a setting, then press  [SET].

## 5.5 Voice Privacy






 
Allows you to set the voice privacy feature for CDMA calls. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  Voice Privacy.

5. Use the Directional Key  to highlight a setting, then press  [SET].






## 5.6 DTMF Tones

Allows you to set the DTMF tone length.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  DTMF Tones.
5. Use the Directional Key  to highlight a setting, then press  [SET].






## 6. Web Access Prompt

Allows you to turn the Web Access Prompt on or off to elect if you want to be prompted when accessing the web.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Web Access Prompt.
4. Use the Directional Key  to highlight a setting, then press  [SET].




## 7. Memory

Allows you to check your internal phone memory. Shows the memory information saved in your phone.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Memory.
4. Use the Directional Key  to select file storage type in the phone, then press  to view the memory used.

## 8. Phone Info

Allows you to view the information specific to your phone and software.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Info.

## 8.1 My Number

Allows you to view your phone number.

1. Open the flip and press  [MENU].
2. Press  Settings.

# Settings

3. Press **B** Phone Info.
4. Press **1** My Number.

## 8.2 ESN/MEID

Allows you to view your phone's ESN/ MEID number.

1. Open the flip and press **OK** [MENU].
2. Press **S** Settings.
3. Press **B** Phone Info.
4. Press **2** ESN/MEID.

## 8.3 Icon Glossary

Allows you to view all the icons and their meanings.

1. Open the flip and press **OK** [MENU].
2. Press **S** Settings.
3. Press **B** Phone Info.
4. Press **B** Icon Glossary.
5. Select a submenu to view that category's available icons.

## 8.4 SW/HW Version

Allows you to view the versions of various applications such as SW, PRL, Browser, easyedge, AVR, MMS, Bluetooth, OTADM Version, HW Version and Operating System.

1. Open the flip and press **OK** [MENU].
2. Press **S** Settings.
3. Press **B** Phone Info.
4. Press **4** SW/HW Version.

## 8.5 Software Update

This feature gives your device the ability to upgrade to the latest software and keeps it operating with the latest features.





### Automatic Update

Your phone will receive a notification that there is an updated version of software available to be downloaded. You can press the OK key **OK** when notified that a download is available. Once the download is complete you may, depending on the nature of the update, have three options available: Accept the update, Defer the update, or Reject the update.


#### Note

During the update you cannot make or receive phone calls, including 911 calls, or text messages.

## Manual Update

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Info**.
4. Press  **Software Update**.

The two options shown will be Status and Check New.



Press  **Status** to see the status of a download or update and see information on the last successful update. If updates have not yet been performed, status information will be unavailable.

Press  **Check for Update** to check if any new software updates are available to download. If a newer software version is available, you can begin the download by pressing the OK key .

## Tone Room Deluxe

### Tone Room Deluxe

The Tone Room Deluxe application allows you to browse and download ringtones.

1. Open the flip and press  [MENU].
2. Press  **Tone Room Deluxe**.
3. Read the terms of service and touch Accept if you accept them.
4. Browse for ringtones and download the desired ones.

## Bluetooth

Your phone is compatible with devices that support the Headset, Handsfree, Phonebook Access, Object Push for vCard and vCalendar, File Transfer, and Message Access profiles.

You may create and store 20 pairings within the phone and connect to one device.

The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

### Note

Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

 



### Note

Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology.

Phone does not support ALL Bluetooth® OBEX Profiles.

## Turn On Bluetooth

Allows you to set the phone's Bluetooth® power On/Off.

1. Open the flip and press  [MENU].
2. Press  Bluetooth.
3. Press  Bluetooth Menu.
4. Press the Left Selection Key  [Turn On].





### Note

By default, your device's Bluetooth® functionality is turned off.

## 1. Add New Device

Pairing is the process that allows the handset to locate, establish, and register 1-to-1 connection with the target device.

### For pairing with a new Bluetooth® device

1. Follow the Bluetooth® accessory instructions to set the device to pairing mode.
2. Open the flip and press  [MENU].
3. Press  Bluetooth.
4. Press  Bluetooth Menu.
5. Press  Add New Device.







# Bluetooth

6. Press **OK**.
7. Set the desired device to discovery mode.
8. The device will appear in Add New Device menu once it has been located. Highlight the device and press **OK** [**PAIR**].
9. The handset will prompt you for the passcode. Consult the Bluetooth® accessory instructions for the appropriate passcode (typically "0000" - 4 zeroes). Enter the passcode and press **OK**. When Auto Pair Handsfree is set to On, the device will try to autopair for headsets.
10. When pairing with the PC or PDA is successful, highlight either **Always Ask** or **Always Connect** and press **OK** to connect with the device.
11. Once connected, you will see the device listed in the Bluetooth® Menu and when the pair is transferring information the Bluetooth® indicator will show up on your screen.

## Icon Reference in Adding New Device

When the Bluetooth® wireless connection is built and paired devices are found, the following icons are displayed.

## Icon References When a Bluetooth® Wireless Connection is Searched (neither connected nor paired).



	When a carkit device is found by your device
	When an audio device is found by your device
	When a PC is found by your device
	When a PDA is found by your device
	When another phone device is found by your device
	When other undefined devices are found by your device

## Icon References When Successfully Connected

The following options are available in the paired device.

1. **Remove Device:** You can remove the device from the pairing list.
2. **Rename Device:** You can rename the paired device.
3. **Incoming Security:** Allows you to set permission before connecting an incoming device.
4. **Service Discovery:** Allows you to search for the services that the selected device supports.
5. **Device Info:** Shows the device information.




### Note

While in the Bluetooth Menu, you can turn the Bluetooth functionality off by pressing the Left Selection Key  [Turn Off]. Reversely, you can turn it on by pressing the Left Selection Key  [Turn On] again. When connected with a phone or PC supporting OPP, the following menus are possible:





- Send Name Card: Allows my contact data to send other device up to 999 Contacts.
- Get Name Card: Allows you to pull name card of other device.
- Exchange Name Card: Allows you to exchange the handset's name card with other device.
- Send Calendar Event: Allows you to send Calendar events to other devices.
- Send Picture: Allows you to send pictures to other devices.
- Send Sound: Allows you to send sound files to other devices.

## My Phone Info

Allows you to view and/ or edit the name of the Bluetooth® device.







 
1. Open the flip and press  [MENU].
2. Press  Bluetooth.
3. Press  Bluetooth Menu.

# Bluetooth

4. Press the Right Selection Key  [Options].
5. Press  My Phone Info.
6. Press  to clear the existing name.
7. Use the keypad to enter a new custom name.
8. Press  [SET] to save and exit.

## Discovery Mode

Allows you to set whether your device is able to be discovered/ found by other Bluetooth® devices in the area.






1. Open the flip and press  [MENU].
2. Press  Bluetooth.
3. Press  Bluetooth Menu.
4. Press the Right Selection Key  [Options].
5. Press  Discovery Mode.
6. Use the Directional Key  to highlight a setting, then press  [SET].

### Note

If you choose On for Discovery Mode, your device is able to be searched by other in-range Bluetooth® devices.



## Supported Profiles

Allows you to see profiles that your phone can support.

1. Open the flip and press  [MENU].
2. Press  Bluetooth.
3. Press  Bluetooth Menu.
4. Press the Right Selection Key  [Options].
5. Press  Supported Profiles.

## UNO

Allows you to use the preloaded UNO application. User charges may apply.

1. Open the flip and press  [MENU].
2. Press  UNO.
3. Follow the on-screen instructions to start playing UNO.

# Safety

## HAC

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

## FCC RF Exposure Information

**WARNING! Read this information before operating the phone.**

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted

an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

## Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.59 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone. Any belt-clips, holsters, and similar accessories containing metallic components may not be used. Avoid the use of accessories that cannot maintain 0.59 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with

FCC RF exposure limits.

## Caution

Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

## Part 15.19 statement

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Part 15.21 statement

Changes or modifications that are not expressly approved by the manufacturer could void the

user's authority to operate the equipment.

## Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation

## Safety

between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Consumer Information About Radio Frequency Emissions

Your wireless phone, which contains a radio transmitter and receiver, emits radio frequency energy during use. The following consumer information addresses commonly asked questions about the health effects of wireless phones.

#### Are wireless phones safe?

Scientific research on the subject of wireless phones and radio frequency ("RF") energy has been conducted worldwide for many years, and continues. In the United States, the Food and Drug Administration ("FDA") and

the Federal Communications Commission ("FCC") set policies and procedures for wireless phones. The FDA issued a website publication on health issues related to cell phone usage where it states, "The scientific community at large ... believes that the weight of scientific evidence does not show an association between exposure to radiofrequency (RF) from cell phones and adverse health outcomes. Still the scientific community does recommend conducting additional research to address gaps in knowledge. That research is being conducted around the world and FDA continues to monitor developments in this field. You can access the joint FDA/FCC website at <http://www.fda.gov> (under "c" in the subject index, select Cell Phones > Research). You can also contact the FDA toll-free at (888) 463-6332 or (888) INFO-FDA. In June 2000, the FDA entered into a cooperative research and development agreement through which additional scientific research is being conducted.

The FCC issued its own website publication stating that “there is no scientific evidence that proves that wireless phone usage can lead to cancer or a variety of other problems, including headaches, dizziness or memory loss.” This publication is available at <http://www.fcc.gov/cgb/cellular.html> or through the FCC at (888) 225-5322 or (888) CALL-FCC.

### **What does “SAR” mean?**

In 1996, the FCC, working with the FDA, the U.S. Environmental Protection Agency, and other agencies, established RF exposure safety guidelines for wireless phones in the United States. Before a wireless phone model is available for sale to the public, it must be tested by the manufacturer and certified to the FCC that it does not exceed limits established by the FCC. One of these limits is expressed as a Specific Absorption Rate, or “SAR.” SAR is a measure of the rate of absorption of RF energy in the body. Tests for SAR are conducted with the phone transmitting at its highest power

level in all tested frequency bands. Since 1996, the FCC has required that the SAR of handheld wireless phones not exceed 1.6 watts per kilogram, averaged over one gram of tissue.

Although the SAR is determined at the highest power level, the actual SAR value of a wireless phone while operating can be less than the reported SAR value. This is because the SAR value may vary from call to call, depending on factors such as proximity to a cell site, the proximity of the phone to the body while in use, and the use of hands-free devices. For more information about SARs, see the FCC’s OET Bulletins 56 and 65 at [http://www.fcc.gov/Bureaus/Engineering\\_Technology/Documents/bulletins](http://www.fcc.gov/Bureaus/Engineering_Technology/Documents/bulletins) or visit the Cellular Telecommunications Industry Association website at [http://www.ctia.org/consumer\\_info/index.cfm/AID/10371](http://www.ctia.org/consumer_info/index.cfm/AID/10371). You may also wish to contact the manufacturer of your phone.

### **Can I minimize my RF exposure?**

If you are concerned about RF, there are several simple steps you can take to minimize your RF exposure. You can, of course, reduce your talk time. You can place more distance between your body and the source of the RF, as the exposure level drops off dramatically with distance. The FDA/FCC website states that “hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.” Also, if you use your wireless phone while in a

car, you can use a phone with an antenna on the outside of the vehicle. You should also read and follow your wireless phone manufacturer’s instructions for the safe operation of your phone.

### **Do wireless phones pose any special risks to children?**

The FDA/FCC website states that “the scientific evidence does not show a danger to users of wireless communication devices, including children.” The FDA/FCC website further states that “some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all”. For example, the Stewart Report from the United Kingdom [“UK”] made such a recommendation in December 2000. In this report a group of independent experts noted that no evidence exists that using a cell phone causes brain tumors or other ill effects. [The UK’s] recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists. A copy

of the UK's leaflet is available at <http://www.dh.gov.uk> (search "mobile"), or you can write to: NRPB, Chilton, Didcot, Oxon OX11 0RQ, United Kingdom. Copies of the UK's annual reports on mobile phones and RF are available online at [www.iegmp.org.uk](http://www.iegmp.org.uk) and <http://www.hpa.org.uk/radiation/> (search "mobile"). Parents who wish to reduce their children's RF exposure may choose to restrict their children's wireless phone use.

### **Where can I get further information about RF emissions?**

For further information, see the following additional resources (websites current as of April 2005):

#### **U.S. Food and Drug Administration**

FDA Consumer magazine  
November-December 2000  
Telephone: (888) INFO-FDA

<http://www.fda.gov> (Under "c" in the subject index, select Cell Phones > Research.)

#### **U.S. Federal Communications Commission**

445 12th Street, S.W.  
Washington, D.C. 20554  
Telephone: (888) 225-5322  
<http://www.fcc.gov/oet/rfsafety>

#### **Independent Expert Group on Mobile Phones**

<http://www.iegmp.org.uk>

#### **Royal Society of Canada Expert Panels on Potential Health Risks of Radio Frequency Fields from Wireless Telecommunication Devices**

283 Sparks Street  
Ottawa, Ontario K1R 7X9  
Canada  
Telephone: (613) 991-6990  
[http://www.rsc.ca/index.php?page=Expert\\_Panels\\_RF&Lang\\_id=120](http://www.rsc.ca/index.php?page=Expert_Panels_RF&Lang_id=120)

#### **World Health Organization**

Avenue Appia 20 1211 Geneva 27  
Switzerland

## Safety

Telephone: 011 41 22 791 21 11

<http://www.who.int/mediacentre/factsheets/fs193/en/>

### **International Commission on Non-Ionizing Radiation Protection**

c/o Bundesamt für  
Strahlenschutz

Ingolstaedter Landstr. 1  
85764 Oberschleissheim  
Germany

Telephone: 011 49 1888 333  
2156

<http://www.icnirp.de>

### **American National Standards Institute**

1819 L Street, N.W., 6th Floor  
Washington, D.C. 20036

Telephone: (202) 293-8020

<http://www.ansi.org>

### **National Council on Radiation Protection and Measurements**

7910 Woodmont Avenue, Suite  
800

Bethesda, MD 20814-3095

Telephone: (301) 657-2652

<http://www.ncrponline.org>

### **Engineering in Medicine and Biology Society, Committee on Man and Radiation (COMAR) of the Institute of Electrical and Electronics Engineers**

<http://ewh.ieee.org/soc/embs/comar/>

## **Consumer Information on SAR**

### **(Specific Absorption Rate)**

This model phone meets the government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic

and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC

that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.18 W/kg and when worn on the body, as described in this user guide, is 0.79 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://>

[www.fcc.gov/oet/fccid](http://www.fcc.gov/oet/fccid) after searching on FCC ID ZNFVN170. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

### **FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices**

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act

of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

 
The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not

be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/ higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you're talking over the cell phone, it's recommended you'd

## Safety

turn the BT (Bluetooth) mode off for HAC.

**For information about hearing aids and digital wireless phones**

**Wireless Phones and Hearing Aid Accessibility**

<http://www.accesswireless.org/>

**Gallaudet University, RERC**

<http://tap.gallaudet.edu/Voice/>

**FCC Hearing Aid Compatibility and Volume Control**

<http://www.fcc.gov/cgb/dro/hearing.html>

**The Hearing Aid Compatibility FCC Order**

[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)

**Hearing Loss Association of America [HLAA]**

<http://hearingloss.org/content/telephones-and-mobile-devices>

### **Caution:**

### **Avoid potential hearing loss.**

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should

follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as concerts, that might cause temporary hearing loss. Temporary

hearing loss might cause unsafe volumes to sound normal.

- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

### TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

#### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously

## Safety

set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

\* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and

may violate FCC regulations.

### Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

### Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

### Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be

maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

### Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

# Safety

## Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

## Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

## Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

## Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas

(such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

## For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage.



### **Violation of the instructions may cause minor or serious damage to the product.**

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard. Such conditions may present the risk of fire or explosion.
- Only use the battery with a charging system that has been approved and qualified with the system per IEEE-Std-1725-2006. Use of an unqualified and non-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been approved and qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified and non-approved battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone, battery or exposing the phone or battery to a liquid. If the phone or battery is dropped, especially on a hard surface, or is exposed to a liquid or comes into contact with a sharp object take it to a service center for inspection.
- At least, one of the Authentication methods may be implemented. (e.g. H/W, S/W, Mechanical, Hologram, etc.)
- Improper battery use may result in a fire, explosion or other hazard.

# Safety

## Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

## Battery Information and Care

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Please read the user guide of proper installation and removal of the battery.
- Please read the manual of specified charger about charging method.
- Do not damage the power cord by bending, twisting, or heating. Do not use the plug if it is loose as it may cause

electric shock or fire.

- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty. When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire. If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Recharge the battery after long periods of non-use to maximize battery life. Battery life will vary due to usage pattern and environmental conditions.
- Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging

port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

- Charging temperature range is regulated between 32°F (0°C) and 113°F (45°C). Do not charge the battery out of recommended temperature range. Charging out of recommended range might cause the generating heat or serious damage of battery. And also, it might cause the deterioration of battery's characteristics and cycle life.
- Do not use or leave the battery under the blazing sun or in heated car by sunshine. The battery may generate heat, smoke or flame. And also, it might cause the deterioration of battery's characteristics or cycle life.
- The battery pack has protection circuit to avoid the danger. Do not use nearby the place where generates static electricity more than 100V which gives damage to the protection circuit. If the protection circuit were broken, the battery would generate smoke, rupture or flame.
- When there is rust on the battery or if it gives off a bad or unusual odor the first time you use it, do not use the equipment and bring the battery to the shop where it was purchased.
- In case younger children use the battery, their parents should teach them how to use batteries according to the manual with care.
- If the skin or cloth is smeared with liquid from the battery, wash with fresh water. It may cause the skin inflammation. Remove and do not use the battery.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- The charger and adapter are intended for indoor use only.

## Safety

- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone and risk of overheating, fire or explosion may occur.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire. Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage

the battery and cause an explosion.

- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

### Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly

connected. If not, it may cause excessive heat or fire.

- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone and may cause an explosion. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag or contact with sharp objects including animal bites may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

### General Notice

- Using a damaged battery or placing a battery in your mouth or animal's mouth may cause serious injury including a fire or explosion.
- Do not place items containing

magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water, liquid, or expose to high humidity. If this happens, turn it off immediately and remove the battery. Immediately, take

it to an LG Authorized Service Center.

- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, and pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

### FDA Consumer Update



The U.S. Food and Drug Administration's

Center for Devices and Radiological Health Consumer Update on Mobile Phones:

#### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining

the reasons for inconsistent results.

## 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices.

However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by

wireless phones;

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency



working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### **3. What kinds of phones are the subject of this update?**

The term “wireless phone” refers here to handheld wireless phones with built-in antennas,

often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments

investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer,

glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

### **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations,

but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

### **6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?**

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading

participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of

the latest research developments around the world.

## **7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have

effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## **8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test

methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

## **9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?**

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to

Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## **10. What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including

children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

## **11. What about wireless phone interference with medical equipment?**

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard

specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

### 12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones  
(<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety Program  
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection

(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project  
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)  
(<http://www.hpa.org.uk/radiation/>)

### Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

### 10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important

responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a

## Safety

dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip – dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you

encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

# Limited Warranty Statement

## 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.

- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## 2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized

## Limited Warranty Statement

- repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### 3. WHAT LG WILL DO:

“LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.”

## Limited Warranty Statement

### 4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### 5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

### **DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.**

Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims

## Limited Warranty Statement

### 7.11 Warranty Laws

The following laws govern warranties that arise in retail sales of consumer goods:

- The California Song-Beverly Consumer Warranty Act [CC §§1790 et seq],
- The California Uniform Commercial Code, Division Two [Com C §§2101 et seq], and
- The federal Magnuson-Moss Warranty Federal Trade Commission Improvement Act [15 USC §§2301 et seq; 16 CFR Parts 701– 703]. A typical Magnuson-Moss Act warranty is a written promise that the product is free of defects or a written promise to refund, repair, or replace defective goods. [See 15 USC §2301(6).] Remedies include damages for failing to honor a written warranty or service contract or for violating disclosure provisions. [See 15 USC §2310(d).] Except for some labeling and disclosure requirements, the federal Act does not preempt state law. [See 15 USC §2311.]

The Consumer Warranty Act does not affect the rights and obligations of parties under the state Uniform Commercial Code, except the provisions of the Act prevail over provisions of the Commercial Code when they conflict. [CC §1790.3.]

For purposes of small claims actions, this course will focus on rights and duties under the state laws.

# Glossary

## Terminology

### Ez Tip Calculator

Feature for easy bill calculation using the total cost, tip, and number of people as variables.

### Voice Commands

Feature that allows you to perform a wide range of verbal commands by training the phone to recognize your individual speech patterns.

### Bluetooth® wireless technology

Technology used to allow mobile phones, computers, and other personal devices to be easily coordinated and interconnected using a short-range wireless connection.

## Acronyms and Abbreviations

### DTMF

Dual-Tone Multi Frequency (or “touch-tone”) is a method used to communicate keys pressed on the phone. Pressing a key generates two simultaneous tones, one for the row and one for the column to determine which key was pressed.

### GPS

Global Positioning System is a system of satellites, computers, and receivers able to determine the latitude and longitude of a specific receiver on Earth. Position is calculated using time and distance.

### IS 2000

Type of digital signaling. It's the second generation of CDMA digital cellular, an extension of IS-95. Differences between signaling types have to do with pilot signal and links to provide more traffic channels, and control protocols.

### **NAM**

**Number Assignment Module** is how the phone stores the phone number and its electronic serial number.

### **SSL**

**Secure Sockets Layer Protocol** is used to encrypt data sent over the air.

### **TTY**

**Teletypewriter.** An electromechanical typewriter that either transmits or receives messages coded in electrical signals. A phone with TTY support is able to translate typed characters to voice or translate voice into characters to display on the TTY.

# Index

---

## Numbers

---

- 3-way call 25
- 10 Driver Safety Tips 114

---

## A

---

- Accessibility 61
- Acronyms and Abbreviations 122
- Adding Another Phone Number 30
- Add New Device 81
- Airplane Mode 69
- Alarm Clock 52
- Alert Sounds 64
- Answer Options 74
- Auto Retry 74
- Avoid potential hearing loss. 96

---

## B

---

- Backlight 67
- Banner 66
- Battery Charge Level 21
- Battery Temperature Protection 21
- Brightness 67

---

## C

---

- Calculator 57
- Calendar 52
- Caller ID 25
- Call History 44
- Call Settings 74

- Call Sounds 63
- Call Timer 45
- Call Waiting 24
- Changing Saved Information 30
- Changing the Default Number 31
- Charging the Battery 21
- Charging with USB 21
- Clock Format 68
- Consumer Information About Radio Frequency Emissions 88
- Consumer Information on SAR 92
- Contact List 33
- Contacts 33
- Correcting Dialing Mistakes 22
- Customizing Individual Entries 28

---

## D

---

- Data Counter 46
- Default Pictures 49
- Default Ringtones 50
- Deleting 31
- Dialed Calls 45
- Discovery Mode 84
- Display Settings 66
- Drafts 40
- Driving 114
- DTMF Tones 77

---

## E

---

- Eco-Calculator 57
- Erasing Messages 43
- Ez Tip Calculator 57

---

## F

---

- Favorites 34
- FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 94
- FDA Consumer Update 106
- Font Size 68
- Font Type 68

---

## G

---

- Groups 34

---

## H

---

- Hearing Assist 66

---

## I

---

- Icon Glossary 78
- Important Safety Precautions 1
- Info Search 58

---

## K

---

- Keypad Volume 65

---

## L

---

- Language 70
- Location 70

---

## M

---

- Making Calls 22
- Master Volume 63
- Memory 77
- Menu Access 17
- Menu Style 67
- Messages 38
- Messaging 36
- Messaging Settings 41
- Missed Calls 44
- Multimedia 47
- Mute Function 24
- My Number 77
- My Phone Info 83
- My Pictures 48
- My Schedule 52
- My Sounds 49
- My vCard 35

---

## N

---

- Name Match for Dialing 69
- NAM Select 74
- New Contact 33
- New Text Message 36
- Notepad 59

# Index

---

## O

---

One Touch Dial 76

---

## P

---

Phone Info 77

Phone Settings 69

Pictures 48

Power On/Off 65

---

## Q

---

Quick Font Resize 24

Quick Volume Adjustments 24

---

## R

---

Received Calls 44

Receiving Calls 23

Record Voice 48

Redialing Calls 23

Ringtones 49

---

## S

---

Safety Information 100

Screen Icons 23

Security 71

Service Alerts 65

Set Shortcut Keys 69

Settings 61

Signal Strength 22

Software Update 78

Sounds Off 24

Sounds Settings 63

Speed Dial 28

Speed Dialing 32

Speed Dials 35

Stopwatch 59

Storing a Number with Pauses 29

Storing Basics 28

Supported Profiles 84

SW/HW Version 78

System Select 73

---

## T

---

Take Picture 47

Templates 41

Terminology 122

Text Input 27

The Battery 20

TIA Safety Information 97

Tone Room Deluxe 80

TTY Mode 75

Turning the Phone On and Off 22

---

## U

---

Unit Converter 60

---

## V

---

Vibrate Mode 24

Voice Commands 25, 55, 70

Voicemail 40

Voice Privacy 76

---

## W

---

Wallpaper 67

Web Access Prompt 77

World Clock 59