

# LG BANTER™ TOUCH



## QUICK START GUIDE



QWERTY Keyboard



Customize the  
Home Screens



Use the  
Camera/Camcorder



Send Text and  
Picture Messages



Browse the Web



Shop **easyedge**™



Use *Bluetooth*®

[www.lgusa.com/bantertouch](http://www.lgusa.com/bantertouch)

# Getting to Know Your Phone



FRONT



BACK



SIDES

- |                            |                                      |                          |
|----------------------------|--------------------------------------|--------------------------|
| 1. Status Light            | 7. Clear & Back/<br>Speakerphone Key | 12. Camera Key           |
| 2. Touch Screen            | 8. Earpiece                          | 13. microSD™ Memory Slot |
| 3. Talk Key                | 9. Speaker                           | 14. Power/Lock Key       |
| 4. Micro USB Charging Port | 10. Camera Lens                      | 15. Headset Jack         |
| 5. Microphone              | 11. Volume Up/Down Keys              |                          |
| 6. End Key                 |                                      |                          |

# QWERTY Keyboard



1. Shift Key  
Change capitalization:  
Abc (sentence case)  
ABC (ALL UPPERCASE)  
abc (all lowercase)
2. Function Key  
To enter alternative characters  
(press twice to lock)
3. Messaging Key
4. Symbols Key
5. Space Key
6. Arrow Keys
7. Enter Key
8. Clear & Back Key

Add images, songs, or videos to your Multimedia screen, favorite contacts to your Contact screen, and application shortcuts to your Shortcut screen.

## Shortcut

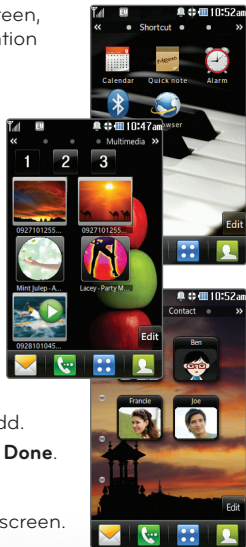
1. Swipe left from home to reach the Shortcut screen.
2. Touch **Edit** and then **Add** to add shortcuts.
3. Touch items you'd like to add, and then touch **Done**.
4. Touch **Done** when you are finished.

## Multimedia

1. Swipe right from home to reach the Multimedia screen.
2. Touch **Edit** and then **Add** to add items.
3. Touch the type of multimedia item you'd like to add.
4. Touch each item you wish to add, and then touch **Done**.



## Contacts

1. Swipe left twice from home to reach the Contact screen.
2. Touch **Edit** and then **Add** to add contacts.
3. Touch each contact you'd like to add, and then touch **Done**.





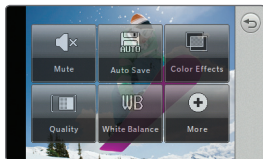
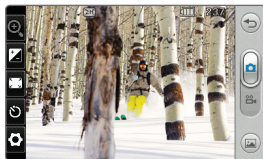
Capture every moment with Banter Touch's 2 megapixel camera and camcorder.

## Take a Picture

1. From standby mode, press and *hold* the **Camera Key** .
2. Touch the icons along the left side of the viewfinder to view and adjust settings.
3. Line up your shot and press the **Camera Key**  to take the photo.


## Record a Video

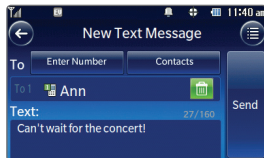
1. From standby mode, press the **Camera Key** .
2. Touch **Record Video**.
3. Touch the icons along the left side of the viewfinder to view and adjust settings.
4. Press the **Camera Key**  to begin recording. Press it again to stop.





Stay in touch without placing a call with convenient text messaging.

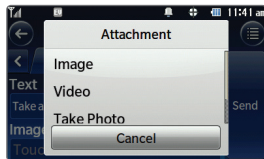
### Send a Text Message

1. With the slide open, touch **New Text Message** .
2. Touch **Contacts** to select a recipient from your contact list.
3. Touch the **Text field**, enter your message with the keyboard, and touch **Done**.
4. Touch **Send**.






### Send a Picture Message

1. With the slide open, touch the **Messaging icon**  > **New Picture Message**.
2. Touch **Contacts** to select a recipient.
3. Touch the **Text field**, enter your message with the keyboard, and touch **Done**.
4. Touch the **Image/Video field** and select the attachment type.
  - If you select **Image** or **Video**, touch the image or video thumbnail and then touch **Select**.
  - If you select **Take Photo** or **Record Video**, create the photo or video and then touch .
5. Touch **Send**.





## Browse the Web

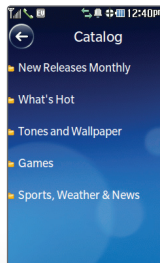
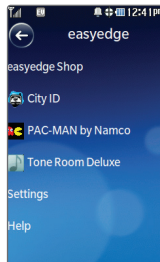
Check your favorite websites while on the go with Banter Touch!

1. From standby mode, touch the **Menu icon** .
2. Touch the **Browser icon**  > **Browser**.
3. Read the notice and touch **Yes** to continue.
4. Touch the shortcuts on the homepage to visit popular sites, or touch the **Menu icon**  in the bottom right corner of the screen for more options.





Download games, ringtones, and more from **easyedge**.

1. From standby mode, touch the **Menu icon** .
2. Touch the **easyedge icon** .
3. From here, you can access previously downloaded applications, games, and more. To find more, touch **easyedge Shop**.
4. Touch **Catalog** to browse the shop.
5. Touch a category to view its contents, and touch an item to see details.
6. Touch a purchase option to download the item to your phone.



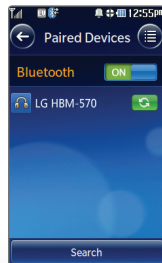
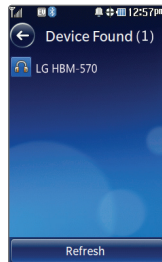


Ready to go wireless? With *Bluetooth* wireless technology, you can pair your Banter Touch with headsets, speakers, printers, and much more.

1. From standby mode and with the device you wish to pair with in pairing mode,\* touch the **Menu icon** .
2. Touch the **Bluetooth icon** .
3. Touch **Search**, and then select **Yes** to turn *Bluetooth* power on.
4. Touch the name of the device to pair. You may be asked to enter a passcode.\*
5. Select **Yes** to connect.

\*Refer to your *Bluetooth* accessory's user guide for information about initiating pairing mode and the passcode, if asked (typically 0000).

**Note:** *Bluetooth* accessories sold separately.





*Bluetooth Headset*  
(HBM-235)



*Bluetooth Headset with Vehicle Power Charger* (HBM-585)



*Bluetooth Headset with Speakerphone/Solar Charging Cradle* (HBM-810)



*Bluetooth Stereo Headset*  
(HBS-700)



Vehicle Power Charger



Maximize your phone with these cutting-edge accessories at  
[www.lgusa.com/bantertouch](http://www.lgusa.com/bantertouch)

All materials in this guide including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. Copyright © 2010 LG Electronics, Inc. ALL RIGHTS RESERVED. LG is a registered trademark of LG Electronics, Inc. Features and specifications are subject to change without prior notice. Banter™ is an LG Electronics, Inc. trademark. easyedge™ is a service mark of U.S. Cellular®. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics MobileComm, U.S.A., Inc. is under license. microSD™ is a trademark of SanDisk. Other trademarks and trade names are those of their respective owners. Unless otherwise specified herein, all accessories referenced herein are sold separately.



**Mixed Sources**  
Product group well-managed  
forests, controlled sources and  
recycled wood or fiber  
www.fsc.org Cert no. XXX-XXX-XXX  
© 1996 Forest Stewardship Council

