



LG

Life's Good

LG Rumor²

SERIOUS SOCIAL CONNECTOR

User Guide



Please read this manual carefully before operating your mobile phone. Retain it for future reference.

P/N : MMBB0340501(1.0) 

*Copyright ©2009 LG Electronics, Inc. **All rights reserved.**
LG and the LG logo are registered trademarks of LG
Group and its related entities. All other trademarks are the
property of their respective owners.*

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.

3. Never store your phone in temperatures less than -4°F or greater than 122°F.

4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.

7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



2. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



3. Store the battery out of reach of children.

4. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



5. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



6. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



7. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

8. Program one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Table of Contents

Important Safety Precautions 1

Table of Contents 4

Important Information 10

FCC Part 15 Class B Compliance 10

Technical Details 11

Technical Details 11

FCC RF Exposure Information 12

Bodily Contact During Operation 13

Vehicle-Mounted External Antenna
(Optional, if available.) 13

FCC Notice and Cautions 14

Part 15.105 statement 14

Phone Overview 16

Entering Text With the QWERTY Keyboard 18

Menus Overview 20

Getting Started with Your Phone 23

The Battery 23

Installing the Battery 23

Removing the Battery 23

Charging the Battery 23

How to Install Your microSD™ Card 24

How to Remove Your microSD™ Card 24

Battery Charge Level 24

Turning the Phone On and Off 25

Turning the Phone On 25

Turning the Phone Off 25

Signal Strength 25

Screen Icons 25

Making Calls 25

Correcting Dialing Mistakes 26

Redialing Calls 26

Receiving Calls 26

Quick Access to Convenient Features 27

Call Waiting 27

Caller ID 27

Speed Numbers 27

Entering and Editing Information 28

Text Input	28	1. Take a Picture	37
Key Functions	28	2. My Pictures	37
Text Input Examples	29	3. MyPix Web Album	38
Using Phone Menus	31	4. Settings	38
Menu Access	31	5. Help	38
My Stuff	32	Downloads	39
1. Ringtones	32	Messaging	41
2. Games	32	1. Messages	42
3. Graphics	33	2. Send Message	42
4. Apps	33	3. Email + IM	43
5. Music	33	4. Virgin Alerts	44
5.1 Play All	33	5. Voicemail	44
5.2 Playlist	34	5.1 Call Voicemail	44
5.3 Artists	34	5.2 Voicemail Details	44
5.4 Albums	34	5.3 Clear Icon	44
5.5 Genres	34	6. Msg Settings	44
6. Themes	34	6.1 Notification	44
My Account	35	6.2 Signature	45
Pictures	37	6.3 Auto Text	45
		6.4 Text Entry	45

Table of Contents

6.5 Auto Download	45	1.2.3 Power	54
6.6 Message Sounds	46	1.2.4 My Visibility	54
Contacts	47	1.2.5 My Bluetooth Name	54
1. Add New	47	1.2.6 My Bluetooth Info	54
2. Emergency	48	1.3 Calculator	55
3. Information	48	1.3.1 Calculator	55
4. My Number	48	1.3.2 Ez Tip Calculator	55
5. Song ID	48	1.4 Calendar	55
6. Voicemail	48	1.5 World Clock	56
Surf the Web	49	1.6 Voice Control	56
Missed Alerts	51	1.7 Voice Memo	56
Connect	51	1.8 Notepad	57
Tools + Settings	52	1.9 Utilities	57
1. Tools	52	1.9.1 Event Counter	57
1.1 Alarm Clock	52	1.9.2 Unit Converter	58
1.2 Bluetooth	53	2. Settings	58
1.2.1 Add New Device	53	1. Display	58
1.2.2 Paired Devices	54	1.1 Main Screen	58
		1.1.1 Wallpaper	58
		1.1.2 Screensaver	59
		1.1.3 Backlight	59

1.1.4 Menu Styles	59	4.4 Word Prediction (On/ Off)	62
1.1.5 Themes	59	4.5 Word Completion (On/ Off)	63
1.1.6 Foregrounds	59	4.6 Use My Words (On/ Off)	63
1.1.7 Picture ID	60	4.7 My Words (Add)	63
1.2 Font Size	60	4.8 Help	63
1.3 Keypad Light	60	5. Keyguard	63
1.4 Language (Idioma)	60	6. Airplane/Music Mode	63
1.5 Status Light	60	7. Phone Information	63
2. Sounds	60	7.1 My Number	64
2.1 Volume	61	7.2 Icon Glossary	64
2.2 Ringtone Type	61	7.3 Version	64
2.3 Vibrate Type	61	7.4 Call Timer	64
2.4 Alerts	61	7.5 Advanced	64
2.5 Keytones	62	8. More...	64
2.5.1 Tone Length	62	8.1 Accessibility	64
2.5.2 Tone Volume	62	8.1.1 TTY	64
3. Messaging	62	8.1.2 Font Size	65
4. Text Entry	62	8.2 Call Setup	65
4.1 Auto-Capital (On/ Off)	62	8.2.1 Auto-Answer	65
4.2 Auto-Space (On/ Off)	62	8.2.2 Abbreviated Dialing	65
4.3 Word Choice List (On/ Off)	62	8.2.3 Call Answer	65

Table of Contents

8.2.4 Contacts Match	65	Antenna Care	72
8.3 Contacts Settings	66	Phone Operation	72
8.4 Headset Mode	66	Tips on Efficient Operation	72
8.5 Location	66	Driving	73
8.6 Navigation Keys	66	Electronic Devices	73
8.7 Restrict and lock	67	Pacemakers	73
8.7.1 Restrict voice	67	Persons with pacemakers	73
8.7.2 Lock Pictures	67	Hearing Aids	74
8.7.3 Lock My Phone	67	Other Medical Devices	74
8.8 Security	68	Health Care Facilities	74
8.8.1 Lock My Phone	68	Vehicles	74
8.8.2 Change Lock Code	68	Posted Facilities	74
8.8.3 Special Numbers	68	Aircraft	74
8.8.4 Edit Contacts List	69	Blasting Areas	74
8.8.5 Erase/Reset	69	Potentially Explosive Atmosphere	75
Apps	71	For Vehicles Equipped with an Air Bag	75
Media Player	71	Safety Information	76
Safety	72	Charger and Adapter Safety	76
TIA Safety Information	72	Battery Information and Care	76
Exposure to Radio Frequency Signal	72	Explosion, Shock, and Fire Hazards	77
		General Notice	77

Warning! Important safety information	78
Avoiding hearing damage	78
Using your phone safely	79
Using headsets safely	79
FDA Consumer Update	79
10 Driver Safety Tips	87
Consumer Information on SAR	89
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	92
Accessories	95
Limited Warranty Statement	96
Index	99

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

Welcome

Thank you for choosing the Rumor2 cellular phone designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, this compact phone offers:

- Significantly enhanced voice clarity.
- Slim and sleek design with internal antenna (Internal antenna described as antenna throughout this user guide).
- Large, easy-to-read, backlit LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 28-Key external keypad and QWERTY internal keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.

Note

The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

VIRGIN and the Virgin signature logo are registered trademarks of Virgin Enterprises Limited and are used under license to Virgin Mobile USA, L.P.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference

Technical Details

received, including interference that causes undesired operation.

Technical Details

The **Rumor2** operates on Code Division Multiple Access frequencies (Personal Communications Services PCS) at 1.9 Ghz.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Single Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41 -C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-99 TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Async Data and Fax Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

Technical Details

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The PCS CDMA Networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

The following table lists some major CDMA standards.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna (Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and the vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Technical Details

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations. Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.


Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipments does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.


- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 Phone Overview

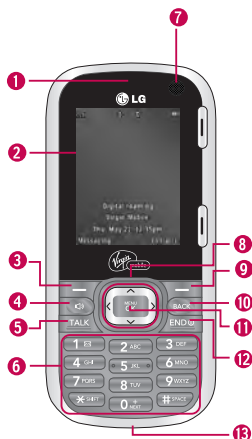

1. **Earpiece** Lets you hear the caller.
2. **LCD Screen** Displays messages and indicator icons. When the phone is turned on, power save mode automatically dims the screen if no keys are pressed.
3. **Left Option Key** When in Standby mode, use to display the Messaging Menu. Performs the function indicated by the text, on the display, directly above it.
4. **Speakerphone Key** When in Standby mode, use to activate Voice Control. Press during a call, to activate/deactivate the Speakerphone function.
5. **TALK Key** Use to place or answer calls.
6. **Alphanumeric Keypad** Use to enter numbers, characters and to select menu items.
7. **Status Light** Indicates incoming calls, new messages, or other events by blinking. It is red while charging and turns green when charging is completed.
8. **Navigation Key** Use to navigate menus. Also, use for quick access to My Account (up), Missed Alerts (down), Downloads (left) and Pictures (right) when in Standby mode.
9. **Right Option Key** When in the Standby mode, use to display your Contacts list. Performs the function indicated by the text, on the display, directly above it.
10. **BACK Key** Deletes single spaces or characters with a quick press, but press and hold to delete entire words. Will also back you out of menus, one level at a time. When in Standby mode, hold down to lock the phone.

 Note This User Manual gives navigation instructions according to the default Menu Layout in the Main menu. If other options are set, navigating the phone's menus may be different.

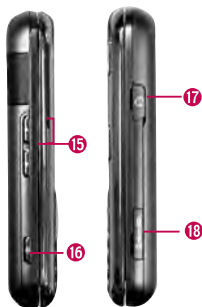

11. **Menu/OK Key** When in Standby mode, this key opens up the Main menu. It selects highlighted options and also selects the function displayed at the bottom of the LCD between the Left and Right Option Key functions.
12. **PWR/END Key** Use to turn the power on/off or press once during a call to end a call. Also returns to the Standby mode screen.
13. **Charger Port** Connects the phone to the battery charger or other available accessories.
14. **Camera Lens** Use to take photos.
Keep it clean for optimal photo quality.
15. **Side Volume Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
16. **Side Camera Key** Use for quick access to Camera functions.
17. **Earphone Jack** Allows the use of a headset to hear caller's voice and playback music using a wired headset.
18. **microSD™ card slot** Insert microSD™ card for external memory. Use LG-approved microSD™ cards. Supports up to 16 GB MicroSDHC.



 
Available shortcuts when in Standby mode:

-  **My Account Key** Use to access My Account
-  **Missed Alerts Key** Use to access Missed Alerts
-  **Downloads Key** Use to launch Downloads.
-  **Pictures Key** Use to access Pictures.

Phone Overview

Entering Text With the QWERTY Keyboard

Your phone features a slide-out QWERTY keyboard, specifically designed for easy and comfortable text entry. The QWERTY keyboard uses the same layout and works just like the keyboard on your computer. The easiest way to enter text is using your thumbs to type on the QWERTY keyboard.

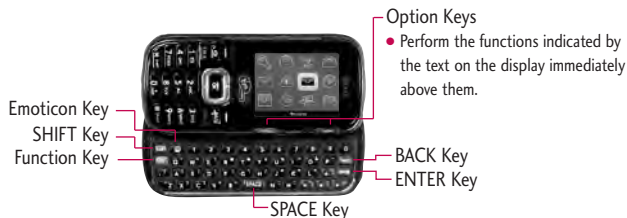

Function Key:

Press **FN** one time (while entering text):

 is displayed on the bottom-right of the screen. This function key allows you to enter the alternate character on the QWERTY key once.

Press **FN** two times (while entering text):

 is displayed at the bottom-left of the screen. This function key allows you to enter the alternate character on the QWERTY key until unlocked.

To enter text with the QWERTY keyboard:

1. In any text entry screen, slide open the QWERTY keyboard.
(The display automatically adjusts to landscape mode.)
2. Use your thumbs to enter text.
 - To change capitalization, press .
 - To enter symbols, press the Right Option Key  **Options**, select **Text Mode**, select **Symbols**. Highlight your choice and then press  to select a symbol.
 - For additional text entry mode options, including Symbols and 123, press the Right Option Key  **Options** and select **Text Mode**.

Menus Overview

Menu Access

Press  **Menu** to access the twelve phone menus. There are two methods of accessing menus and sub-menus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds with the menu (or sub-menus).

My Stuff

1. Ringtones
2. Games
3. Graphics
4. Apps
5. Music
6. Themes

My Account

1. Launch

Pictures

1. Take a Picture
2. My Pictures
3. MyPix Web Album

4. Settings

5. Help

Downloads

1. Launch

Messaging

1. Messages
2. Send Message
3. Email + IM
4. Virgin Alerts
5. Voicemail
 1. Call Voicemail
 2. Voicemail Details
 3. Clear Icon

6. Msg Settings

1. Notification
2. Signature
3. Auto Text
4. Text Entry
5. Auto Download
6. Message Sounds

Contacts

1. Contacts Listing

Surf the Web

1. Launch

Missed Alerts

1. Missed Events List

Connect

1. Launch

Tools + Settings

1. Tools

1. Alarm Clock

2. Bluetooth

3. Calculator

4. Calendar

5. World Clock

6. Voice Control

7. Voice Memo

8. Notepad

9. Utilities

2. Settings

1. Display

1. Main Screen

2. Font Size

3. Keypad Light

4. Language (Idioma)

5. Status Light

2. Sounds

1. Volume

2. Ringtone Type

3. Vibrate Type

4. Alerts

5. Keytones

3. Messaging

1. Notification

2. Signature

3. Auto Text

4. Text Entry

5. Auto Download

6. Message Sounds

4. Text Entry

1. Auto-Capital

2. Auto-Space

3. Word Choice List

4. Word Prediction

5. Word Completion

6. Use My Words

7. My Words

8. Help

5. Keyguard

6. Airplane/ Music Mode

7. Phone Information

1. My Number

2. Icon Glossary

3. Version

4. Call Timer

5. Advanced

8. More...

1. Accessibility

2. Call Setup

3. Contacts Settings

4. Headset Mode

5. Location

6. Navigation Keys

7. Restrict and Lock

8. Security

Menus Overview

Apps

1. Get More Apps

Email + IM

Google Maps™

Opera Mini

Media Player

1. Play All

2. Playlist

3. Artists

4. Albums

5. Genres

Getting Started with Your Phone

The Battery

Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

Remove the battery cover by sliding it upward. Align the battery with the terminals near the bottom of the phone and push the top of the battery into the compartment. Align the battery cover then slide it downward until it clicks into place.

Removing the Battery

1. Turn off the phone, then push the battery cover upwards, as shown in the image below:



2. While holding the battery cover, lift and remove the battery cover.
3. Lift the top of the battery out using your fingertip, then remove it.

Charging the Battery

To use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the **Rumor2** may damage your phone or battery.



Note

Please make sure the 'B' side of the connector is facing up.



1. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level.

Getting Started with Your Phone

How to Install Your microSD™ Card



1. Locate the microSD™ slot on the right side of the phone and gently uncover the slot opening (microSD™ slot cover stays attached to the phone so it is not lost).



2. Insert the microSD™ card facing up and push in until it clicks into the slot. If you insert the card in the wrong direction, it may damage your phone or your card.

How to Remove Your microSD™ Card

1. Remove the cover. Then push the microSD™ card in until it clicks, this will eject it.
2. Remove the microSD™ card from the slot and replace the cover.

Note

Do not attempt to remove the microSD™ card while reading or writing to the card.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in up to three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to an external power source if the battery is not charged.
2. Press  for about 3 seconds until the LCD screen lights up.

Turning the Phone Off

1. With the phone unlocked, press and hold  until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars on the signal strength icon . The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Note

The call quality is also affected by environmental factors such as weather conditions.

Screen Icons

To see the icon glossary, go to **Menu -> Tools + Settings -> Settings -> Phone Information**

-> **Icon Glossary** on your phone.

Making Calls

1. Unlock the phone.
2. Enter the phone number (include the area code if needed).
3. Press .
4. Press  to end the call.

Getting Started with Your Phone

Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for about 2 seconds to go to the standby mode.

Redialing Calls

1. Press  to open the Recent Calls list. Then highlight the number you wish to redial and press  again. The last 60 calls (missed, received, dialed) are stored in the Recent Calls list.

Receiving Calls

1. When the phone rings or vibrates, press  to answer.

Note

If you press  or  (the side keys), while the phone is ringing, the ringing or vibration is muted for that call.

2. Press  to end the call.

Quick Access to Convenient Features

Call Waiting

Your cellular service may offer call waiting. While a call is in progress one beep indicates an incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with to ensure they offer this feature.

Speed Numbers

Speed Numbers is a convenient feature that allows you to make phone calls quickly. A **Speed Number** can be assigned to a specific phone number. By pressing and holding down a number key, your

phone will recall the phone number associated from the Contact List and display it while simultaneously dialing that phone number for you. Speed Number 1 is set to Voice Mailbox by default and is unchangeable.

Speed Number dialing using Single Digits (from 2 to 9)

Press and hold the Speed Number.

OR

Enter the Speed Number and press .

Speed Number dialing using Double Digits (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press .

Entering and Editing Information

Text Input

You can input and edit your Banner, Calendar, Contacts, Alarm Clock, Notepad, and Messages plus much more.

Entering Text Without the QWERTY:

Key Functions



Right Option Key:

Press to scroll through the following options: **Text Mode/ Add Auto Text/ Add/Change Recipients/ Save as Draft**



Shift: Press to change the capitalization.

For example, in ABC text entry mode: **Abc -> ABC -> abc**



Next: When in Predictive Text mode, press to display the next matching word.



Space: Press to complete a word if text is in Predictive text mode or insert a space.



Clear: Press to delete a single space or character. Hold to delete the message one word at a time.



Punctuation: Press to insert punctuation in a the text.

Predictive Text Mode

It allows words to be entered by a single keypress for each letter. It reduces the number of keypresses when typing in text.

Abc (Multi-tap) Mode

Use to enter text. Press the corresponding key until the desired letter appears.

123 (Numbers) Mode

Use to type numbers using one keystroke per number.

Symbols Mode

Use to insert special characters or punctuation. There are 35 special characters that can be added using Symbols mode.

Emoticons Mode

Use to insert Emoticon graphics. There are 36 emotions characters.

Changing Letter Capitalization

Using Predictive text and Abc text input modes you can set the capitalization. Press

 to cycle through the following.

Initial Cap (Predictive text / Abc)

Only the first letter is capitalized. All subsequent letters are lower case.

Caps Lock (PREDICTIVE TEXT / ABC)

All letters are capitalized.

Lower Case (predictive text / abc)

All letters are in lower case.

Text Input Examples

Display the text modes and select a text mode:

1. In a text entry field, press the Right Option Key  **Options** and select **Text Mode** to display the available text entry.
2. Press  to highlight the text input mode you want to use.
3. Press  to select the highlighted text input mode.

Example Using Abc (Multi-tap) Text Mode

1. Press the Right Option Key  **Options**,

select **Text Mode** and then select **Abc**.

2. Press  to change to ABC Caps Lock.

3. Press    .

"LG" is displayed.

Example Using Predictive Text Mode

1. Press the Right Option Key  **Options**, select **Text Mode** and then select **Predictive Text**.

2. Press      .

3. Press  to complete the word and add a space.

4. Press        .

"Please call me" is displayed.

Using the NEXT Key

After you have finished entering a word using **Predictive Text** mode, if the word displayed is not the one you want, press  to display additional choices of words from the database.

1. Press    .
- "Good" is displayed.

Entering and Editing Information

2. Press .

The display gives you additional choices such as: Home, Gone, Hoof, etc.

Adding Words to the (T9) Predictive Text Database

If a word is not in the Predictive database, add it by using Abc (Multi-tap) text entry mode.

1. While in Predictive Text mode, press   . A scroll down list will appear. Scroll to and select **Add Word?**

2. Delete the text in the field, then press

     .

"Bop" is displayed.

3. Press the Left Option Key  **Save** to save the word into the database and return to the text field.

The added word will now be available whenever you use Predictive Text mode.

Using Phone Menus

Menu Access

Press  or to have access to 12 phone menus. There are two methods to access menus and sub-menus:

- Use the navigation key to highlight and select a Menu.

Or

- Press the key that corresponds to the menu or sub-menus.

For example:

1. Press . 12 menu items are displayed.
2. Use  to scroll through the menus.
Press .

Or

2. Press the appropriate number key corresponding to the menu item you want to select.
The sub-menu list will be displayed.
3. Use  to highlight your preferred option and press  to select it.

My Stuff

My Stuff

My Stuff lets you preview, assign & download graphics, ringtones, and more. Charges apply for most downloads.

Access and Options

1. Press  **Menu**.



2. Press  **My Stuff**.



3. Select a sub-menu.

1. Ringtones
2. Games
3. Graphics

4. Apps
5. Music
6. Themes

1. Ringtones

The My ringtones folder stores your preloaded and downloaded ringtones. You can download the latest ringtones at www.virginmobileusa.com or directly from your phone using Get More Ringtones.

1. Press , , .
2. Highlight **Get More Ringtones**, and press  (the web browser will launch and take you to the Tones download site).

2. Games

You can play preloaded games and download available games for your phone.

1. Press , , .
2. Highlight **Get More Games** and press  (the web browser will launch and take you to the Games download site).

3. Graphics

The Graphics folder stores your preloaded and downloaded graphics. Download the latest wallpapers and screensavers at www.virginmobileusa.com or directly from your phone using Get More Graphics.

1. Press , , .
2. Highlight **Get More Graphics** and press  (the web browser will launch and take you to the Graphics download site).

4. Apps

Download the latest applications at www.virginmobileusa.com or directly from your phone using Get More Apps.

1. Press , , .
2. Use  to highlight an application, then press .

Get More Apps

Email + IM

Google Maps™

Opera Mini

5. Music

The **Rumor2** comes equipped with a Music Player with many features. This menu allows you to play music from your memory card. For the availability of this feature, there should be music already in your memory card.

Note

Avoid Hearing Damage

Warning: Permanent hearing loss may occur if speakerphone, earphones or headphones are used at high volume over a long period of time. You can adapt over time to a higher volume of sound, which may sound normal but can be damaging to your hearing. We, therefore, recommend that you DO NOT turn on the phone in close proximity of your ears or if the earphones are plugged in. Please set your music and call volume to a safe level.

5.1 Play All

1. Press , , , .
2. Use  to select the music file and press the Left Option Key  **Play** to play or the Right Option Key  **Options**:

Repeat + Shuffle/ Add to Playlist/ File Info/ Memory Info/ Erase/ Keyguard On or (When playing music)

My Stuff

Full Player/ Repeat + Shuffle/ Add to Playlist/ File Info/ Memory Info/ Keyguard On

5.2 Playlist

1. Press , , , .
2. Press the Left Option Key  **Play** to play the highlighted song in the playlist or press the Right Option Key  **OPTIONS** for the following options:

Repeat + Shuffle/ Memory info/ Keyguard On

or (when playing music)

Full Player/ Repeat + Shuffle/ File Info/ Memory Info/ Keyguard On

5.3 Artists

Allows you to view and listen to your music by Artists.

1. Press , , , .
2. Use  to select the artist to view and press  to view the songs in your collection by that Artist.

5.4 Albums

Allows you to view and listen to your music by Album.

1. Press , , , .
2. Use  to select the Album and press  to view the songs from that Album.

5.5 Genres

Allows you to view and listen to your music by Genre.

1. Press , , , .
2. Use  to select the genre to view and press  to view the songs in your collection in that Genre.

6. Themes

You can customize the theme displayed on the LCD screen.

1. Press , , .

Core/ Neutral/ Black

2. Use  to highlight a theme, then press .

My Account

The My Account menu allows you to manage your services. Check your balance and Top-Up here. Additional charges may apply for multiple balance checks in one day. See www.virginmobileusa.com for pricing details.

Access and Options

1. Press .
2. Press  **My Account**.



Shortcut

When in standby mode, press  to access My Account.

Top-Up

Top-Up is how you add money to your account. You can Top-Up your account right from your phone. First, buy a Top-Up card at the thousands of retailers that carry them; or register your debit card, credit card, or PayPal account at www.virginmobileusa.com.

When your balance is low, you can Top-Up your account from your phone.

Top-Up with a Top-Up card

1. Press the  from standby mode.
2. Using the Navigation key, scroll to **My Account** and press .
3. Scroll down to select the **Top-Up Now** link and press .
4. Enter your Top-Up PIN.
5. Scroll down to **Top-Up Now** and press .
6. That's it. Your phone will announce that "You Added [dollar amount]".
7. Press  to exit.

My Account

Top-Up with a Debit Card, Credit Card, or PayPal account

Before you can Top-Up from your phone with a debit card, credit card, or PayPal account, you need to register the card or PayPal account at www.virginmobileusa.com.

1. Press the  from standby mode.
2. Using the Navigation key, scroll to **My Account** and press .
3. Scroll down to select the **Top-Up Now** link and press .
4. Scroll down to select **Credit/Debit Card or PayPal** and press .
5. Enter the Account PIN and select **Login** and press .
6. Enter the amount for Top-Up and press .
7. Scroll down to select **Top-Up Now** and press .
8. Your phone will validate the amount you want to Top-Up. Scroll down to select **Yes** and press .

9. That's it. Your phone will announce that "You Added [dollar amount]".

10. Press  to exit.

You can also Top-Up on the web at www.virginmobileusa.com.

Pictures

View, take, and upload your digital pictures right from your wireless phone.

1. Take a Picture

1. Press **NEW**, **3 DEF**, **1**.



2. Press **⏏** to customize camera settings.
The following menu pops up:



**Zoom/ Self Timer/ Capture/ Color
Tone/ Fun Frame**

Or the Right Option Key **⏏** **Options**
for the following options:

Self Timer Off/ 5 Seconds/ 10 Seconds

Color Tone Normal/ Black & White/

Negative/ Sepia

**Image Controls Brightness/ White
Balance**

Fun Frames Select the desired fun
frame.

Review/ Send Media Opens the images
folder.

Settings:

- Resolution(1.3M/ Med/ Low)
- Quality(Fine/ Normal/ Economy)
- Shutter Sound(Default/ Say Cheese/
Ready 1,2,3/ Smile/ Off)
- Status Bar(On/ Off)
- Night Mode(On/ Off)

3. Take a picture by pressing Left Option
Key **⏏** **Capture**.

2. My Pictures

Allows you to view and manage photos
stored in the phone (and memory card, if
applicable).

Pictures

1. Press **MENU** **OK** , **3 DEF** , **2 ABC** .
2. Select **In Phone** or **Memory Card**.
3. Highlight the image and press the Right Option Key **⏏** **Options**.
Upload/Publish/ Select Multiple/ Expand (Thumbnail)/ Assign/ Erase/ Details/Edit/ Move/Copy/ Album List/ Camera Mode/ Other Options
4. Upload a picture with MyPix Uploader

Allows you to share your pictures with friends or a number of social networking and media sites from your phone and computer. These sites include MySpace, Facebook, Flickr, Photobucket and more.

1. Take a picture.
2. Press Right Option Key **⏏** **Options**.
3. Select **Upload/Publish**.
4. Enter a title, description, tags, or your location and select **Upload**.

3. MyPix Web Album

Use to access MyPix on your phone. View your photos, create and manage albums, or share with friends or social sites like MySpace, Facebook, Flickr and more.

1. Press **MENU** **OK** , **3 DEF** , **3 DEF** .
2. Login with your phone number and password, as applicable.

4. Settings

Use to customize the Pictures menu settings.

1. Press **MENU** **OK** , **3 DEF** , **4 OH** .
2. Select the sub-menu.

Auto-Save to/ Status Bar/ Location

5. Help

Allows you to check the information for Pictures.

1. Press **MENU** **OK** , **3 DEF** , **5 XL** .

Downloads

Everything you need to know while you're on the go.

1. Press , .



2. After a few seconds, you will see the Home page.

Ending a Web Session

End a Web session by pressing .

Navigating Through the Browser

On-screen items may be presented in one of the following ways:

- **Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Option Key(s).

- **Links embedded in content**

You can act on the options or the links by using the Option Keys at the bottom of the display screen.

- **Text or numbers**

You can select the items by moving the cursor and pressing the appropriate Option Keys or .

Scrolling

Use  to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a cursor on the screen.

Fast Scrolling

Press and hold  to quickly move the cursor up and down on the current screen.

Scrolling by Page

Use the Side Volume Keys to move up or down one page at a time.

Downloads

Option Keys

To navigate to different screens or select special functions, use the Option Keys. The function associated with the Option Keys can change for each page and depends on each highlighted item.

Clearing Out Text/Number Entered

When entering text or numbers, press  to clear the last number, letter, or symbol. Press and hold  to clear the input field completely.

Initiating a Phone Call From Mobile Web

You can make a phone call from Mobile Web if the site you are using supports the feature.

The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

Messaging

Messaging

Access and Options

1. Press .
2. Press  **Messaging**.



Shortcut

When in standby mode, press  **Messaging** to access the Messaging menu.

3. Select a sub-menu.
 1. Messages
 2. Send Message
 3. Email + IM
 4. Virgin Alerts
 5. Voicemail
 6. Msg Settings

Text messages and new voicemail messages become available as soon as the phone is powered on.

- Make a call to the callback number by pressing  when viewing a message.
- Read and edit messages saved in the Messages folder after transmission and resend them. The phone can store up to 1050 messages (including a maximum of 1000 sent, received and draft SMS and 50 Virgin Alerts messages). Memory available for messages depends on the message size and content. Other limits, such as available characters per message, may exist. Please check with Virgin Mobile for system features and capabilities.

New Message Alert

There are up to three ways your phone alerts you to new messages.

1. The phone displays a message on the screen.
2. The phone makes a sound, if the Master Volume settings allow it.
3. The message icon () is displayed on the status icon bar.

Messaging

1. Messages

Allows you to send text messages, Instant Messages, and Emails.

Message Icon Reference

Inbox

  Unread Text/Notification Picture message

  Read Text/Retrieved Picture message

Sent

  Failed Text/Picture message

  Sent or Draft Text/Picture message

 Canceled Text message

 Sent Message Pending

Drafts

 Draft Text Message

 Draft Picture Message

2. Send Message

Allows you to send text messages and emails. Each text and picture message can be sent to up to 25 recipients.

Sending a Text Message

1. Press , , , .

Or

Press Left Option Key  **Messaging** and press , .

2. Highlight a Contact and then press  to select it or press the Right Option Key  **New Addr** and enter phone number or email address.
3. Press Left Option Key  **Continue** (if necessary) to access the message screen.
4. Type your message.
5. Press Left Option Key  **Send**.

Sending a Picture Message

1. Press , , , .

Or

Press the Left Option Key  **Messaging** and press , .

2. Highlight a Contact and then press  to select it or press the Right Option

- Key  **New Addr** and enter phone number or email address.
- Press Left Option Key  **Continue** (if necessary) to access the message screen.
 - Type your message.
 - Press Left Option Key  **Send**.

Customize Your Text Message Using Options

While you are composing the text of a message you can customize the message.

- Press , , , .
- Or
- Press Left Option Key  **Messaging** and press , .
- Highlight a Contact and then press  to select it or press the Right Option Key  **New Addr** and enter phone number or email address.
 - Press Left Option Key  **Continue** (if necessary) to access the message screen.
 - In the text entry field, press Right Option Key  **Options**.

- Use  to highlight an option and press .

The options available to customize your text message are:

Text Mode Abc/ Predictive Text/ 123/ Symbols/ Emoticons/ Settings

Add Auto Text

Add/Change Recipients

Save as Draft

- Complete your message and press Left Option Key  **Send** to send.

3. Email + IM

Allows you to receive and send Email and IM messages from the most popular portals (Yahoo!, AOL, and Google). Please note that you may need to download a Mobile Email application first.

- Press , , .
- Follow the directions on the screen to setup your Email or IM provider (Yahoo!, AOL/AIM, and Gmail).

Messaging

4. Virgin Alerts

Virgin Alerts are free system messages that provide information from time to time to let you know about your account.

1. Press , , .

5. Voicemail

Allows you to view new voice messages recorded in the voicemail box. Your phone will alert you when you receive a new voice message.

1. Press , , .

5.1 Call Voicemail

Checking your voicemail box.

1. Press , , , .

5.2 Voicemail Details

Allows you to check voicemail details.

1. Press , , , .

5.3 Clear Icon

Allows you to clear the voicemail icon from your screen.

1. Press , , , .

6. Msg Settings

Allows you to configure settings for the Messaging menu.

1. Press , , .

6.1 Notification

When you receive a text message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a larger pop-up message on your display screen.

1. Press , , , .
2. Use  to select a setting, then press .

Message + icon/ Icon only

6.2 Signature

Each message you send can have a customized signature to reflect your personality.

1. Press , , , .
2. Select **Custom** and press .
(If you do not wish to attach a signature to your outgoing messages, select None.)
3. Enter your signature and press .

6.3 Auto Text

Your phone is loaded with 20 Auto Text messages to help make sending text messages faster and easier.

1. Press , , , .
The list of Auto Text messages is displayed.
2. To edit or delete an Auto Text message, highlight it and press **Right Option Key** **Options**.

Options available:

Edit/ Send Message/ Erase/ Erase All

To add a new Auto Text message:

1. Press , , , .
2. To add a new Auto Text message, press the **Left Option Key** **Add**.
3. Enter your message and press **Left Option Key** **Save**. Your new message will be added to the beginning of the list.

6.4 Text Entry

Allows you to select the default input method.

1. Press , , , .
2. Use to select a setting, then press .

Predictive Text/ Abc/ 123

6.5 Auto Download

Allows you to automatically download picture messages when the messages are received.

1. Press , , , .
2. Use to select a setting, then press .

Messaging

On/ Off

6.6 Message Sounds

Allows you to customize the way in which your phone alerts you for incoming messages and voicemails.

1. Press , **5** , **6** , **6**  .
2. Use  to select a setting,
then press  .

**Volume/ Ringtone Type/ Vibrate Type/
Message Reminder**

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 600).

Access and Options

1. Press  **Menu**.
2. Press  **Contacts**.



3. Select one of the options available by default:

Add New/ Emergency/ Information/
My Number/ Song ID/ Voicemail

1. Add New

Your phone can store up to 600 Contacts entries. Contacts entries can store up to a total of 7 phone numbers. Each entry's name can contain 64 characters.

1. Press  , .
2. Press  then select  **New Contact**.
3. Enter a name for the new entry and press .
4. Scroll to **[Add Number]**, enter the phone number, and then press  to select a phone label (from the options below):

Mobile/ Home/ Work/ Pager/ Fax/ Other
5. Continue to edit the following fields as necessary:

Add Number/ Add Email/ IM/ Default Ringtone/ Default Text Tone/ Default Vibrate Type/ URL/ Memo/ No Secret
6. To save, press the Left Option Key  **Done**.

Contacts

2. Emergency

Use this contact in case of emergencies, it dials 911.

1. Press  ,  .
2. Highlight **Emergency** and press  .

3. Information

Allows you to connect to the 411 information line.

1. Press  ,  .
2. Highlight **Information** and press  .

4. My Number

Shows your phone number.

1. Press  ,  .
2. Select **My Number**.

5. Song ID

Hear a song that you like but don't know the title? ID it! SongID will listen to virtually any recorded music and give you back the title, artist and album. ID millions of tracks from hip hop to jazz, rock to alternative, latin to

house and everything in between. Don't just listen to music, be a music hunter with SongID. Your account will be billed additional charges for the use of Song ID, ringtone and ringback tone downloads. Song identification results are not guaranteed.

1. Press  ,  .
2. Select **Song ID**.
3. Press  to connect Song ID(*43).
4. At the prompt, hold the phone close to the sound source for best song identification.

Note

The first time you call SongID, you will need to listen to the automated message. However, you will not need to listen to this message the next time you use SongID.

6. Voicemail

Allows you to hear new voice messages recorded in your Voicemail box. Your phone will alert you when you receive a new voice message.

1. Press  ,  .
2. Highlight **Voicemail** and press  .

Surf the Web

Access your favorite sites right from phone. Click on one of our featured links, do a quick search, or enter a URL of your own.

Access and Options

1. Press .
2. Select **Surf the Web** by pressing .



3. A notification about air time charges prompt may appear, if the setting is enabled.
4. After a few seconds, you will see the home page.

Ending an Web Session

End an Web session by pressing .

Navigating Through the Browser

On-screen items may be presented in one of the following ways:

- **Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Option Key(s).

- **Links embedded in content**

You can act on the options or the links by using the Option Keys at the bottom of the display screen.

- **Text or numbers**

You can select the items by moving the cursor and pressing the appropriate Option Keys.

Scrolling

Use  to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a cursor on the screen.

Surf the Web

Fast Scrolling

Press and hold  to quickly move the cursor up and down on the current screen.

Clearing Out Text/Numbers Entered

When entering text or numbers, press  to clear the last number, letter, or symbol.

Press and hold  to clear the input field completely.

Initiating a Phone Call From Web

You can make a phone call from Web if the site you are using supports the feature.

The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

Missed Alerts/ Connect

Missed Alerts

Access and Options

1. Press **MENU OK** .
2. Highlight and select **Missed Events** or press **8 TUV** .



Connect

Link to popular networking sites right from your Virgin Mobile phone. Connect with friends on Facebook, MySpace, YouTube, Flickr, Twitter, and more. Get updates, alerts, comments, and invites delivered to your phone. It's all of your social connections, all in one place.

Access and Options

1. Press **MENU OK** .
2. Highlight and select **Connect** or press **9 WXYZ** .



Tools + Settings

Tools + Settings

1. Tools

Your phone is equipped with helpful tools, including: Alarm Clock, Bluetooth, Calculator, Calendar, World Clock, Voice Control, Voice Memo, Notepad, Utilities.



1.1 Alarm Clock

Allows you to set up to seven alarms. At the alarm time, any set alarm can sound the tone of your choice, depending on your Master Volume settings, and an alarm message will be displayed on the screen.

1. Press , , , .

2. Select the alarm you want to edit.
Alarm 1~5/ Walk the Dog/ Quick Alarm

3. Use to highlight the alarm time then press .

4. Set the time for the alarm and press .

5. Use to highlight Once (the recurrence setting) and press .

6. Use to select one of the following and press .

Once/ Daily/ Mon-Fri/ Weekends/
Select Days

7. Use to select the snooze interval.
Options are:

5 Min Later/ 10 Min Later/ 15 Min
Later/ 20 Min Later

8. Use to highlight the tone option and press .

9. Use to select one of the available ringtones and press .

10. Press left option button Save.

For Quick Alarm, the options are:

set Off/ 5 Min Later/ 10 Min Later/ 15 Min Later/ 20 Min Later

1.2 Bluetooth

The **Rumor2** is compatible with devices that support the Bluetooth® headset, stereo and handsfree profile(s)*. You may create and store 20 pairings within the **Rumor2** and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B014503

Note*

- Read user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.
- The Bluetooth® features available on this phone may not be compatible with all Bluetooth® enabled devices. LG cannot be held responsible for compatibility issues with devices not sold by LG.

1.2.1 Add New Device

Pairing is the process that allows a handset

to locate, establish, and register 1-to-1 connection with a target device.

1. Press , , , , .
2. If Bluetooth® power is set to off, you will be prompted to turn power on. Select Yes.
3. The device will appear in Add New Device menu once it has been located. Highlight the device and press .
4. The handset will prompt you for the passkey in BT. Consult the Bluetooth® accessory instructions for the appropriate passkey in BT (typically “0000” - 4 zeroes). Enter the passkey in BT and press .
5. Once pairing is successful, paired device is displayed and can be edited with new name. Press Left Option Key  Save to save.
6. Once connected, you will see the device listed in the Bluetooth® Menu and the Bluetooth® connected icon  will show up on your enunciator when connected to the Bluetooth® device.

Tools + Settings

1.2.2 Paired Devices

Allows you to view a list of your paired devices.

1. Press **VIEW OK**, **✱ SHIFT**, **1** **ES**, **2** **ABC**, **2** **ABC**.

1.2.3 Power

Allows you to set the power On/Off.

1. Press **VIEW OK**, **✱ SHIFT**, **1** **ES**, **2** **ABC**, **3** **DEF**.

2. Use **↕** to select a setting, then press **VIEW OK**.

On/ Off

Note

By default, your device's Bluetooth® functionality is turned off.

1.2.4 My Visibility

Allows you to set the visibility of your Bluetooth® device.

1. Press **VIEW OK**, **✱ SHIFT**, **1** **ES**, **2** **ABC**, **4** **GHI**.

2. Use **↕** to select a setting, then press **VIEW OK**.

Hidden/ Visible for 3Min/ Always Visible

Note

If you turn on My Visibility, your device is able to be discovered by other in-range Bluetooth® devices.

1.2.5 My Bluetooth Name

Allows you to edit the name of the Bluetooth® device.

1. Press **VIEW OK**, **✱ SHIFT**, **1** **ES**, **2** **ABC**, **5** **JKL**.
2. Hold down **BACK** to clear the existing name.
3. Use the alphanumeric keypad or slide out QWERTY keyboard to enter a new alias.
4. Press **VIEW OK** to save and exit, or **ENDQ** to cancel editing.

1.2.6 My Bluetooth Info

Allows you to view the information of the Bluetooth® function.

1. Press **VIEW OK**, **✱ SHIFT**, **1** **ES**, **2** **ABC**, **6** **MNO**.

1.3 Calculator

1.3.1 Calculator

Allows you to perform simple mathematical calculations.

1. Press , , , , .

2. Enter data.

- Use keypad to enter numbers.
- Use or qwerty to enter decimals.
- Press Left Option Key Clear to clear the entry.
- Press Right Option Key Close to exit menu.
- Use Navigation Keys to enter functions.
- Press to complete equation.

1.3.2 Ez Tip Calculator

Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number

of people paying.

1. Press , , , , .

1.4 Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone will alert you with a reminder at the designated time.

1. Press , , , .

2. Use to highlight the scheduled day.

Moves cursor to the previous day.

Moves cursor to the next day.

Moves to the previous week.

Moves to the next week.

3. Press Left Option Key New.

4. Enter your schedule information including:

- | | |
|---------------|------------|
| • Set Time | • Content |
| • Repeat Type | • Alarm |
| • Ringtone | • Location |

5. Press the Left Option Key Save.

Tools + Settings

1.5 World Clock

Allows you to determine the current time in another time zone or country.

1. Press , , , .
2. Press Right Option Key **Cities** to select a specific city and display the date/time in that location.
3. Use to scroll through all available cities.
4. Press to select the highlighted city.
5. Press , then press Left Option Key **Set DST** to set Daylight Savings Time.

1.6 Voice Control

Allows you to make phone calls quickly and easily by voice. Say a new phone number, or the name of a saved contact. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. This menu includes features for those who are driving or who may be blind. It announces information by voice that allows

you to check missed calls, send messages, and call voicemail.

1. Press , , , .
2. When prompted, say “Call”.
3. When prompted, say the name or phone number of the Contact you want to call. The phone will ask you to confirm the name or phone number before dialing.
 - Call [Name] [Type]/ [Number]
 - Send Msg to [Name] [Type]/ [Number]
 - Find[Name] [Type]
 - Missed Alerts
 - Voice Guide
 - Phone status
 - Traning
 - Help
 - Exit Voice Control
4. Follow the prompts to complete the desired function/command.

1.7 Voice Memo

Allows you to add, listen to, and erase short verbal reminders. The recorded voice memos are listed in the Voice memo folder. You can select Record new, Erase all,

Memory info.

1. Press **MEMO OK**, **✖ SHFT**, **1 ER**, **7 PGR**.
2. Press Left Option Key **⇐** **Record**.
3. Talk into the receiver after the tone, then press Left Option Key **⇐** **Stop**.
The default memo title is the date and time of recording.

Voice Memo Playback and Options

1. Press **MEMO OK**, **✖ SHFT**, **1 ER**, **7 PGR**.
2. Highlight a Voice Memo, the following options are available:
 - **Send Picture Message** Send the selected voice memo as a picture message.
 - **View Details** Title/ Recorded On/ Play Time
 - **Edit Title** Edit the title of the selected Voice memo.
 - **Erase This** Allows you to erase the current memo.
 - **Erase Multiple** Allows you to erase multiple memos.
 - **Erase All**
 - **Memory Info**

1.8 Notepad

Allows you to add, read, edit, and erase notes to yourself.

1. Press **MEMO OK**, **✖ SHFT**, **1 ER**, **8 TUV**.
2. Press Left Option Key **⇐** **Add** to write a new note.
3. Type the note, then press the Left Option Key **⇐** **Save** to save.

A confirmation message displays briefly, then displays your list of notes.

Viewing/Editing a Notepad Entry

1. Access Notepad and highlight the entry.
2. To edit, press Right Option Key **⇒** **Options** for the following options:
Erase/ Erase All/ Send Message

1.9 Utilities

1. Press **MEMO OK**, **✖ SHFT**, **1 ER**, **9 WXYZ**.
2. Select **Event Counter/ Unit Converter**.

1.9.1 Event Counter

Allows you to set a countdown time for an upcoming event.

Tools + Settings

1. Press Left Option Key  **Add**.
2. Select a day for the event by highlighting the date field and pressing . Use  to set a date, then press  to save.
3. Type a title for the event by highlighting **[Content]** and press .
4. Enter the event title and press .
5. Choose whether to display the Event Counter on the home screen by highlighting the display field. Use  to make a selection.
6. Press the Left Option Key  **Save** to save.

1.9.2 Unit Converter

Allows you to convert units of Length, Area, Mass, Volume, Temperature.

 
1. Select **Length, Area, Mass, Volume, or Temperature**.
2. Highlight the known unit type and enter the value.

The conversion is displayed automatically.

Tip

When converting temperature, the minus sign “-” can be found in the options menu.

2. Settings

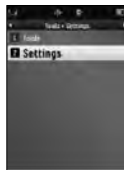

1. Display

Options to customize your phone's display screen.

1.1 Main Screen

1.1.1 Wallpaper

Allows you to choose the kind of background to be displayed on the phone.

1. Press , , **2.ARC**, , , .
2. Select **My Graphics, My Pictures, or Assigned Media**, then press .

- Highlight the image and press the Left Option Key  **Assign**.

1.1.2 Screensaver

Allows you to use a picture as a screensaver.

- Press , , , , , .
- Select **On/ Off** and press .
- Select **My Graphics, My Pictures, or Assigned Media**, then press .
- Highlight the image and press the Left Option Key  **Assign**.

1.1.3 Backlight

Allows you to set the duration for illuminating the backlight.

- Press , , , , , .
- Choose an Option (options below), then press .
Dim Only/ 8 Seconds/ 15 Seconds/ Always On

1.1.4 Menu Styles

Allows you to view the main Menu items as icons or on a list.

- Press , , , , , .
- Use  to select **Icon** or **List** and press .

1.1.5 Themes

Allows you to choose a theme for the phone menus and display.

- Press , , , , , .
- Choose an option (options below), then press .

Core/ Neutral/ Black

1.1.6 Foregrounds

Allows you to customize Clock + Calendar and Greeting Banner.

- Press , , , , , .
- Choose a sub-menu (options below), then press .

Clock + Calendar/ Greeting Banner

Tools + Settings

- Use  to select an option to customize, then press .

1.1.7 Picture ID

Allows you to set Picture IDs for your contacts.

- Press , , , , , .
- Choose a sub-menu (options below), then press .

All Contacts/ One Contact/ Unknown Numbers

- Use  to select type to configure, then press .

1.2 Font Size

Allows you to set the font size for your Messages and Notepad.

- Press , , , , .
- Choose a sub-menu and press .

Options for Messages/ Notepad are:
Small/ Medium/ Large/

1.3 Keypad Light

Allows you to set the keypad and QWERTY backlight On or Off.

- Press , , , , .
- Select **On/ Off** and press .

1.4 Language (Idioma)

Allows you to use the bilingual feature according to your preference. Choose between English and Spanish.

- Press , , , , .
- Use  to select **English** or **Español**, then press .

1.5 Status Light

Allows you to turn the Status Light On or Off.

- Press , , , , .
- Select **On/ Off** and press .

2. Sounds

Options to customize your phone's sounds:

2.1 Volume

Allows you to set various volume settings.

1. Press , , , , .
2. Select **Ringtone/ Earpiece/ Speakerphone/ Keytones/ Alarm + Calendar/ Applications/ Alerts/ Power On/Off.**
3. Use  to adjust the volume of the function, then press  to save the setting.

2.2 Ringtone Type

Allows you to assign a Ringtone Type for incoming calls.

1. Press , , , , .
2. Select **All Contacts/ One Contact/ Unknown Numbers.**
3. Use  to select a ringtone type and press Left Option Key  OK to set the ringtone to your phone.

2.3 Vibrate Type

Allows you to select the Vibrate Type for incoming calls or alarm and calendar notifications.

1. Press , , , , .
2. Select **Incoming Calls/ Alarm + Calendar.**
3. Use  to select a setting, then press .

2.4 Alerts

Allows you to select the alert.

1. Press , , , , .
2. Use  to highlight the alert you wish to edit and press .

Beep Each Minute/ Out Of Service/ Connect/ Signal Fade/Call Drop

For alert info, highlight the alert type and press the Right Option Key  Info.

3. Use  to scroll through the alert types.
On/ Off.

Tools + Settings

4. Press  to save.

2.5 Keytones

2.5.1 Tone Length

Allows you to set the tone length.

1. Press , , , , , .
2. Choose a setting (options below), then press .

Short Tones/ Long Tones

3. Use  to select a setting, then press .

2.5.2 Tone Volume

Allows you to set the tone volume.

1. Press , , , , , .
2. Use  to select a volume level and press .

3. Messaging

Allows you to configure 6 settings for messages.

See Msg Settings on page 44.

4. Text Entry

Allows you to configure settings for text entry.

1. Press , , , .
2. Use  to highlight one of the settings and press  to select it.

4.1 Auto-Capital (On/ Off)

Allows you to automatically capitalize letters when necessary.

4.2 Auto-Space (On/ Off)

Automatically creates a space after a word is selected while typing in Predictive Text mode.

4.3 Word Choice List (On/ Off)

Allows you to view the list of recommended word choices while entering text in Predictive Text mode.

4.4 Word Prediction (On/ Off)

Allows you to set your phone to predict

the word you are going to type when entering text.

4.5 Word Completion (On/ Off)

Allows you to set your phone to automatically complete words for you when entering text.

4.6 Use My Words (On/ Off)

Allows you to get word recommendations from your My Words database.

4.7 My Words (Add)

Allows you to store your words in a database for future use.

4.8 Help

Brief explanation of this menu.

5. Keyguard

Allows you to turn the phone's keyguard On or Off.

1. Press , , , .
2. Read the notification and press .

3. Select between On/ Off

6. Airplane/Music Mode

Allows you to use many of your phone's features, such as Games, Notepad, and Voice Memo, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane/Music Mode, it cannot send or receive any calls or access online information.

1. Press , , , .
2. Read the displayed message and press  to continue.
3. Use  to select a setting, then press .

On/ Off/ On Power Up

7. Phone Information

The Phone info Menu provides you with specific information pertaining to your Rumor2.

Tools + Settings

7.1 My Number

Allows you to view your phone number, MSID and MEID.

1. Press , , , , .

7.2 Icon Glossary

Allows you to view all the icons and their meanings.

1. Press , , , , .

7.3 Version

Allows you to view the versions of the S/W, H/W, PRL, MMS and Browser.

1. Press , , , , .

7.4 Call Timer

Allows you to view how long the last call lasted and the cumulative duration of all calls.

1. Press , , , , .

7.5 Advanced

Allows you to view information about your phone's SID, Channel, Frequency, and Technology.

1. Press , , , , .

8. More...

8.1 Accessibility

Allows you to enable/disable TTY and set the font size for Messages and Notepad.

8.1.1 TTY

The **Rumor2** allows you to attach a TTY (Teletype Writer) device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press , , , , , .
2. Read the disclaimer, then press .
3. Use to select a setting, then press .

Enable TTY/Disable TTY

8.1.2 Font Size

See Font Size on page 60.

8.2 Call Setup

8.2.1 Auto-Answer

Allows you to automatically answer a call when your phone is connected to a hands-free device. This feature is intended for use with hands-free devices only.

1. Press , , , , , .
2. Use to select a setting, then press .

- **Off**
- **Headset** When your phone is connected to a headset, the phone automatically answers a call.

8.2.2 Abbreviated Dialing

If set to On, you will set up a prefix that will be automatically attached to any 4-5 digit number you dial.

1. Press , , , , , .

2. Select **On** and enter a five- or six-digit number (for example, area code and prefix) and press .

8.2.3 Call Answer

Allows you to customize how you answer incoming calls.

1. Press , , , , , .
2. Use to select a setting, then press .

Any Key/ TALK Only

8.2.4 Contacts Match

Contacts Match compares numbers entered on the dialpad with saved Contacts, which can then be selected and dialed.

1. Press , , , , , .
2. Use to select a setting, then press .

On/ Off

Tools + Settings

8.3 Contacts Settings

Allows you to assign Speed Numbers or determine whether to Hide or Show your phone numbers designated as Secret.

1. Press , , , , .
 2. Select **Speed Numbers** to view, assign or delete contacts from the list.
- Or
2. Select **Hide/Show Secret** to hide or show the phone numbers (in your Contacts list) designated as Secret.

8.4 Headset Mode

Allows you to customize headset mode. In Normal mode, calls transmit through the headset or the phone speaker. In Headset Only mode, calls only transmit through the headset.

1. Press , , , , .
2. Use  to select a setting, then press .

Normal/ Headset Only

8.5 Location

Your phone is equipped with a Location feature for use in connection with location-based services. The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

1. Press , , , , .

The Location disclaimer is displayed.

2. Read the disclaimer and press .
3. Use  to select a setting, then press .

On/ Off

Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

8.6 Navigation Keys

Assign navigation keys to your favorite and most frequently used functions. Select it from the list, then access it directly by pressing the navigation key in standby mode.

1. Press , , , , .
2. Read the disclaimer and press .
3. Assign the navigation keys by pressing and then selecting a function from the list.

8.7 Restrict and lock

8.7.1 Restrict voice

Allows you to restrict incoming and/or outgoing calls.

1. Press , , , , .
2. Enter the four-digit lock code.

The default lock code is commonly the last 4 digits of your phone number.

3. Press **Restrict Voice**.
4. Select **Incoming Calls** or **Outgoing Calls** and press .
5. Select one of the options below:

- **Contacts Only** allows you to call only the entries saved in the Contacts list.
- **Special Numbers Only** allows you to call only the 10 numbers stored in the

Special Number section in the Security Menu.

- **Unlock** allows all calls to be made without any restrictions (default setting).

8.7.2 Lock Pictures

Allows you to lock your pictures to prevent unauthorized picture taking or viewing.

1. Press , , , , .
2. Enter the four-digit lock code.

The default lock code is commonly the last 4 digits of your phone number.

3. Press **Lock Pictures**.
4. Select **Unlock** or **Lock** and press .

8.7.3 Lock My Phone

Protects your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls.

You can modify the lock code by using the **Change Lock Code** code feature in the Security menu.

Tools + Settings

1. Press **VIEW OK**, ***HFT**, **2 ABC**, **8 TUV**, **7 PQRS**.
2. Enter the four-digit lock code.
3. Press **3 DEF** **Lock my phone**.
4. Use **↕** to select an option, then press **VIEW OK**.

Unlock The phone remains unlocked, by default.

Lock Now The phone is always locked. When locked, you can receive incoming calls and only make emergency calls.

On Power Up The phone is locked when it is turned on.

8.8 Security

The Security Menu allows you to secure the phone electronically.

8.8.1 Lock My Phone

See “Lock My Phone” on page 67.

8.8.2 Change Lock Code

Allows you to change your lock code. To enter this menu, you're asked to enter a

new lock code. Then you will be asked to enter the new code once more to confirm it.

IMPORTANT: Be sure to write down your lock code if you change it. The phone cannot be unlocked without it.

1. Press **VIEW OK**, ***HFT**, **2 ABC**, **8 TUV**, **8 TUV**.
2. Enter the four-digit lock code.
3. Press **2 ABC** **Change Lock Code**.
4. Enter a new lock code.
5. Enter the new lock code once more to confirm it.

8.8.3 Special Numbers

Allows you to designate special phone numbers.

1. Press **VIEW OK**, ***HFT**, **2 ABC**, **8 TUV**, **8 TUV**.
2. Enter the four-digit lock code.
3. Press **3 DEF** **Special Numbers**.
4. Select a location for your entry.
5. Enter a phone number then press **VIEW OK**.

8.8.4 Edit Contacts List

Allows you to edit your contacts list.

1. Press , , , , .
2. Enter the four-digit lock code.
3. Press Edit contacts list.
4. Existing contacts will be displayed.
Select the contact you wish to edit, then press . The 5 preloaded contacts cannot be edited.
5. Press the Right Option Key Options, then select Edit.

8.8.5 Erase/Reset

8.8.5.1 Erase Contacts

Allows you to erase all of your contacts at once.

1. Press , , , , .
2. Enter the four-digit lock code.
3. Press Erase/Reset.
4. Press Erase Contacts.
5. Select Yes or No.

8.8.5.2 Erase My Stuff

This will delete all data in My stuff.

1. Press , , , , .
2. Enter the four-digit lock code.
3. Press Erase/Reset.
4. Press Erase My Stuff.
5. Read the disclaimer and press .
6. Select Yes or No.

8.8.5.3 Erase Pictures

Allows you to erase all of your pictures at once. (Does not apply to online pictures in MyPix.)

1. Press , , , , .
2. Enter the four-digit lock code.
3. Press Erase/Reset.
4. Press Erase Pictures.
5. Select Yes or No.

8.8.5.4 Erase Messages

Allows you to erase all of your messages at once.

Tools + Settings

1. Press , , , , .
2. Enter the four-digit lock code.
3. Press  **Erase/Reset.**
4. Press  **Erase Messages.**
5. Select **Yes** or **No**.

8.8.5.5 Erase Voice Memo

Allows you to erase all of your voice memos at once.

1. Press , , , , .
2. Enter the four-digit lock code.
3. Press  **Erase/Reset.**
4. Press  **Erase Voice Memo.**
5. Select **Yes** or **No**.

8.8.5.6 Reset All Settings

Resetting the current default settings restores all the factory defaults, including the ringtone types and display settings. The Contacts, Call History, Scheduler, and Messaging are not affected.

1. Press , , , , .

2. Enter the four-digit lock code.

3. Press  **Erase/Reset.**

4. Press  **Reset All Settings.**

5. Read the disclaimer and press .

6. If you are certain that you would like to restore all the factory settings, select **Yes**.

8.8.5.7 Reset Phone

Resetting the phone resets all settings and erases all data on your phone.

1. Press , , , , .

2. Enter the four-digit lock code.

3. Press  **Erase/Reset.**

 
4. Press  **Reset phone.**

5. Read the disclaimer and press .

6. If you are certain that you would like to erase all the data and reset your settings, select **Yes**.

Apps

Download the latest applications at www.virginmobileusa.com or directly from your phone using Get More Apps.

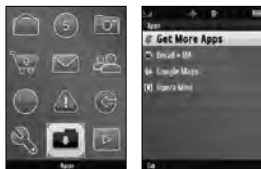

1. Press **MENU OK** , **0** .
2. Use **↑** to highlight an option/application, then press **MENU OK** .
Get More Apps/ Email + IM/ Google Maps™/ Opera Mini

Media Player

Refer to the Music section on page 33.

1. Press **MENU OK** , **#** .



Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded

against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimize the potential for interference
- Should turn the phone OFF immediately

Safety

if there is any reason to suspect that interference is taking place

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Caution! *Violation of the instructions may cause minor or serious damage to the product.*

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier

for recycling.

- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

- Do not disassemble or crush the battery. It may cause a fire.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period of time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service

Center to replace the damaged antenna.

- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, and pictures could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Warning! Important safety information

Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

Using your phone safely

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Using headsets safely

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.



FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other

researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of the type of RF emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of

the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A

few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies

can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is

hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public

information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in

consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic

Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless phones with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF

exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described before would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on

scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard

specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO)

International EMF Project

(<http://www.who.int/emf>)

National Radiological Protection Board

(UK)

(<http://www.hpa.org.uk/radiation/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you

can use the speed dial function without taking your attention off the road.

2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

Safety

5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special

wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR (Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or

Safety

SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and

certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment

Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.1 W/kg and when worn on the body, as described in this user's manual, is 0.636 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR

for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been

rated. Phones that are rated have the rating on their box or a label located on the box.

 
The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and

wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

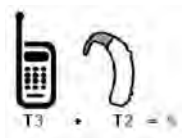

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

To ensure that the Hearing Aid Compatibility for your phone is maintained, secondary transmitters such as Bluetooth and WLAN (this phone does not have WLAN) components must be disabled during a call. See page 79 for the instructions to disable these components.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

Hearing Loss Association of America [HLAA]

<http://www.hearingloss.org/learn/cellphonetech.asp>

The Hearing Aid Compatibility FCC Order

http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

Battery Charger

The battery charger allows you to charge your phone.



Battery

Standard battery is available.



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and charge the phone's battery from your vehicle.



Limited Warranty Statement

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or

dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular

use.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

“LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up

Limited Warranty Statement

any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.”

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT. Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you

specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>.

Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

I

10 Driver Safety Tips 87

A

Accessibility 64
Accessories 95
Add New 47
Advanced 64
Airplane/Music Mode 63
Alarm Clock 52
Albums 34
Alerts 61
Apps 33
Artists 34
Auto Download 45
Auto text 45

B

Battery Charge Level 24
Bluetooth 53

C

Calculator 55

Calendar 55
Call setup 65
Call Timer 64
Call voicemail 44
Call Waiting 27
Caller ID 27
Charging the Battery 23
Clear icon 44
Connect 51
Consumer Information on SAR 89
Contacts 47
Contacts Settings 66
Correcting Dialing Mistakes 26

D

Display 58
Downloads 39

E

Email+IM 43
Emergency 48
Entering and Editing Information 28

Entering Text With the QWERTY Keyboard 18

F

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 92
FDA Consumer Update 79
Font Size 60

G

Games 32
Genres 34
Getting Started with Your Phone 23
Graphics 33

H

Headset Mode 66
Help 38
How to Install Your microSD™ Card 24
How to Remove Your microSD™ Card 24

I

Icon Glossary 25, 64
Important Safety Precautions 1
Index 99
Information 48

K

Keyguard 63
Keypad Light 60
Keytones 62

L

Language (Idioma) 60
Limited Warranty Statement 96
Location 66

M

Main Screen 58
Making Calls 25
Media Player 71
Menu Access 31
Menus Overview 20
Message Sounds 46
Messages 42

Index

Messaging 41, 62
Missed Alerts 51
More... 64
Msg Settings 44
Music 33
My Account 35
My Number 48, 64
My Pictures 37
My Stuff 32
MyPix Web Album 38

N

Navigation Keys 66
Notepad 57
Notification 44

P

Phone information 63
Phone Overview 16
Pictures 37
Play All 33
Playlist 34

Q

Quick Access to
Convenient Features
27

R

Receiving Calls 26
Redialing Calls 26
Restrict and lock 67
Ringtone Type 61
Ringtones 32

S

Safety 72
Safety Information 76
Screen Icons 25
Security 68
Send Message 42
Settings 38, 58
Signal Strength 25
Signature 45
Song ID 48
Sounds 60
Speed Numbers 27
Status Light 60
Surf The Web 49

T

Table of Contents 4
Take a Picture 37
Technical Details 11
Text Entry 45, 62
Text Input 28
Text Input Examples
29
The Battery 23
Themes 34
TIA Safety
Information 72
Tools 52
Tools + Settings 52
Turning the Phone On
and Off 25

U

Using Phone Menus
31
Utilities 57

V

Version 64
Vibrate Type 61
Virgin Alerts 44
Voice Control 56

Voice memo 56
Voicemail 44, 48
Voicemail details 44
Volume 61

W

Warning! Important
safety information 78
Welcome 10
World Clock 56