

USER GUIDE



*Copyright©2010 LG Electronics, Inc. **All rights reserved.**
LG OCTANE™ is registered trademark of Verizon Wireless
and its related entities. All other trademarks are the property
of their respective owners.*

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

Warning

Violation of the instructions may cause serious injury or death.



- Never use an unapproved battery since this could damage the phone and/or the battery and could cause the battery to explode.
- Never place your phone in a microwave oven as it will cause the battery to explode.



- Never store your phone in temperatures lower than -4°F or higher than 122°F.
- Do not dispose of your battery near fire or with hazardous or flammable materials.



- When riding in a car, do not leave your phone or set up the hands-free kit near the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



- Do not use a hand-held phone while driving.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions



- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



- Do not use harsh chemicals (such as alcohol, benzene, thinner, etc.) or detergent to clean your phone. This could cause a fire.



- Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.
- Do not use your phone in highly explosive areas as the phone may generate sparks.



- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause electric shock or fire.



- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.



- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not disassemble the phone.



- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



- Make sure that no sharp-edged items, such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



- Store the battery out of reach of children.
- Be careful that children do not swallow any parts (such as earphone, connection parts of the phone, etc). This could cause asphyxiation or suffocation resulting in serious injury or death.

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



- Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



- Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstance, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Table of Contents

Important Safety Precautions 1

Table of Contents4

Technical Details9

Important Information9

Phone Overview13

Using the Qwerty Keypad: Messaging15

Menu Tree on the Internal Screen16

Getting Started with Your Phone21

The Battery21

Installing the Battery21

Removing the Battery21

Charging the Battery21

Charging with USB22

How to Install Your microSD™ Card ..23

How to Remove Your microSD™
Card23

Battery Temperature Protection24

Battery Charge Level24

Using the phone without battery24

Turning the Phone On and Off24

Turning the Phone On24

Turning the Phone Off24

Signal Strength25

Screen Icons25

Making Calls25

Redialing Calls26

Receiving Calls26

Quick Access to Convenient Features27

Vibrate Mode27

Mute Function27

Quick Volume Adjustment27

Call Waiting27

Shortcuts28

Voice Commands28

Contacts in Your Phone's Memory31

New Contact Basics31

Customizing Individual Entries32

Speed Dial32

Storing a Number with Pauses33

Adding Additional Phone
Number(s) to an Existing Contact ..34

Changing the Default Number34

Deleting35

Speed Dialing36

SEARCH37

MESSAGING38

1. New Message38

1.1 TXT Message38

1.2 Picture Message	40
1.3 Video Message	42
1.4 Voice Message	44
2. Messages	46
3. Drafts	49
4. Voicemail	50
5. Social Beat	50
6. Visual Voice Mail	51
7. Mobile IM	52
8. Mobile Email	52
9. Chat	53
Message Settings	53
1. Messages View	53
2. Entry Mode	53
3. Auto Save Sent	53
4. Auto Erase Inbox	53
5. Messaging Font Size	53
6. TXT Auto View	54
7. TXT Instant Reply	54
8. TXT Auto Scroll	54
9. Multimedia Auto Receive	54
10. Quick Text	54
11. Voicemail #	54
12. Callback #	54
13. Signature	54
14. Delivery Receipt	54
Erasing Messages	55

RECENT CALLS56

1. Missed	56
2. Received	56
3. Dialed	57
4. All	57
5. View Timers	58

CONTACTS59

1. New Contact	59
2. Contact List	59
3. Backup Assistant	60
4. Favorites	60
5. Groups	61
6. Speed Dials	62
7. In Case of Emergency (ICE)	62
8. My Name Card	63

MEDIA CENTER64

1. Search	64
2. Music & Tones	64
2.1 V CAST Music Rhapsody®	65
2.2 Get New Ringtones	65
2.3 Get Ringback Tones	66
2.4 My Ringtones	66
2.5 My Music	67
2.6 My Sounds	70
2.7 Sync Music	71
3. Picture & Video	72
3.1 V CAST Videos	73
3.2 Get New Pictures	75
3.3 My Pictures	75

Table of Contents

3.4 My Videos	76	3.3 Ez Tip Calculator	90
3.5 Take Picture	77	3.4 Calendar	91
3.6 Record Video	79	3.5 To Do List	92
3.7 Online Album	79	3.6 Alarm Clock	93
4. Games	80	3.7 Info Search	93
5. Mobile Web	80	3.8 Stopwatch	94
6. Browse & Download	83	3.9 World Clock	94
7. Extras	85	3.10 Notepad	95
		3.11 Document Viewer	95
MOBILE EMAIL	86	3.12 USB Mass Storage	95
		4. Bluetooth® Menu	96
VZ NAVIGATOR	86	4.1 Add New Device	97
		5. Keyguard Settings	101
SOCIAL BEAT	86	6. Sounds Settings	101
		6.1 Easy Set-up	101
SETTINGS & TOOLS	87	6.2 Call Sounds	101
1. My Verizon	87	6.2.1 Call Ringtone	102
2. Master Volume	87	6.2.2 Call Vibrate	102
3. Tools	87	6.2.3 Caller ID Readout	102
3.1 Voice Commands	87	6.3 Alert Sounds	102
3.1.1 Call <Name or Number>	88	6.4 Keypad Volume	103
3.1.2 Send Msg to <Name or Number or Group>	89	6.5 Digit Dial Readout	103
3.1.3 Go to <Menu>	89	6.6 Service Alerts	103
3.1.4 Check <Item>	89	6.7 Power On/Off	104
3.1.5 Contacts <Name>	89	6.8 Voice Clarity	104
3.1.6 Search	89	7. Display Settings	105
3.1.7 Redial	89	7.1 Easy Set-up	105
3.1.8 Play	90	7.2 Banner	106
3.1.9 My Verizon	90	7.2.1 Personal Banner	106
3.1.10 Help	90		
3.2 Calculator	90		

7.2.2 ERI Banner	106	8.7 Security	116
7.3 Backlight	106	8.7.1 Edit Codes	116
7.4 Brightness	107	8.7.2 Restrictions	117
7.5 Wallpaper	107	8.7.3 Phone Lock Setting	117
7.6 Charging Screen	108	8.7.4 Lock Phone Now	118
7.7 Display Themes	108	8.7.5 Reset Default	118
7.8 Main Menu Settings	109	8.7.6 Restore Phone	119
7.8.1 Menu Layout	109	8.8 System Select	119
7.8.2 Replace Menu Items	109	8.9 NAM Select	119
7.8.3 Position Menu Items	110	9. Call Settings	120
7.8.4 Reset Menu Settings	110	9.1 Answer Options	120
7.9 Font Type	110	9.2 End Call Options	120
7.10 Font Size	111	9.3 Call Forwarding	120
7.11 Clock Format	111	9.4 Auto Retry	121
8. Phone Settings	112	9.5 TTY Mode	121
8.1 Airplane Mode	112	9.6 One Touch Dial	123
8.2 Set Shortcuts	112	9.7 Voice Privacy	123
8.2.1 Set My Shortcuts	112	9.8 DTMF Tones	123
8.2.2 Set Directional Keys	113	9.9 Assisted Dialing	124
8.2.3 Set QwertyShortcut	113	10. USB Mode	124
8.3 Voice Commands	113	11. Memory	125
8.3.1 Confirm Choices	113	11.1 Save Options	125
8.3.2 Sensitivity	114	11.2 Phone Memory	125
8.3.3 Adapt Voice	114	11.3 Card Memory	125
8.3.4 Prompts	114	12. Phone Info	126
8.3.5 CLR Key Activation	115	12.1 My Number	126
8.4 Language	115	12.2 SW/HW Version	126
8.5 Location	115	12.3 Icon Glossary	127
8.6 Current Country	116	12.4 Software Update	127

Table of Contents

13. Set-up Wizard	128
Troubleshooting	130
Safety	132
TIA Safety Information	132
Exposure to Radio Frequency Signal	132
Antenna Care	132
Phone Operation	132
Tips on Efficient Operation	133
Driving	133
Electronic Devices	133
Pacemakers	133
Hearing Aids	134
Other Medical Devices and Health Care Facilities	134
Vehicles	134
Aircraft	134
Blasting Areas	134
Potentially Explosive Atmosphere	134
For Vehicles Equipped with an Air Bag	135
Safety Information	135
Charger and Adapter Safety	136
Battery Information and Care	136
Explosion, Shock, and Fire Hazards	138
General Notice	139
Caution: Avoid potential hearing loss.	140
FDA Consumer Update	142
10 Driver Safety Tips	149
Consumer Information on SAR	152

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	154
--	-----

LIMITED WARRANTY STATEMENT	157
---	------------

Glossary	160
-----------------------	------------

Terminology	160
-------------------	-----

Acronyms and Abbreviations	160
----------------------------------	-----

Index	162
--------------------	------------

TIP

Find the interactive user guide on the web for your convenience where you can freely surf and interactively learn how to use your phone step-by-step.

1. Go to <http://www.verizonwireless.com>
2. Hover over the Support tab, click on Wireless Support (under Phones & Devices).
3. Select LG from the Phone/Device manufacturer drop-down menu.
4. Select this device from the Model drop-down menu and click on Go.
5. Click on Interactive User Guide to start the interactive Guide.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read this guide carefully prior to using the phone to be able to use your phone to its greatest advantage and to prevent any accidental damage or misuse. Any unapproved changes or modifications will void your warranty.

Technical Details

The LG Octane™ is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft/softer handoff, hard

handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible. EV-DO system is optimized for data service and is much faster than 1xRTT system in applicable area.

The table on the following page lists some major CDMA standards.

Technical Details

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps Radio Link Protocol and Inter-Band Operations IS-95 Adapted for PCS Frequency Band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem Operations Non-Signaling Data Communications.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
1x EV-DO Related Interface	TIA/EIA/IS-856 TIA/EIA/IS-878 TIA/EIA/IS-866 TIA/EIA/IS-890	CDMA2000 High Rate Packet Data Air Interface 1x EV-DO Inter-Operability Specification for HRPD Access Network Interfaces Recommended Minimum Performance Standards for HRPD High Rate Packet Data Access Terminal Test Application Specification (TAS) for High Rate Packet Data Air Interface

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic

energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or

Technical Details

violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



- 1. Earpiece** Lets you hear the caller.
- 2. CONTACTS Key** Press to access the Contact List.
- 3. Camera/Video Key** Press to access the Camera. Press and hold to access the Camcorder.
- 4. Volume Keys** Press up or down to adjust the Master Volume in idle mode* and the Earpiece Volume during a call.
- 5. SEND Key** Use to make and answer calls. Press to access the All Calls list from idle mode*.
- 6. Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
- 7. Vibrate Mode Key** From idle mode*, press and hold for about 3 seconds to activate Vibrate Mode.
- 8. Accessory/Charger Port** Connects the phone to the battery charger, or other compatible accessories.
- 9. PWR/END Key** Use to turn the power on/off and to end a call. When in a menu or application, press to return to idle mode*.
- 10. CLR Key/Voice Commands Key** Press to delete a single space or character, or press and hold to delete entire words. Press once in a menu to go back one level. In idle mode*, press to start Voice Commands or press and hold to start recording a new sound or voice memo.

- 11. OK Key/Directional Key** With the flip closed, press the OK Key to unlock the screen, access the Main Menu, and accept entered or highlighted information. Use the Directional Key for quick, convenient navigation to scroll to choices and settings. From idle mode, in the closed position, press to access My Music (by pressing Up), Messaging (Left), Events (Down), and the Bluetooth Menu (Right). You can view more information on page 27.
- 12. microSD™ Slot** Accommodates an optional microSD™ card (sold separately).
- 13. Headset Jack** The 2.5mm jack allows you to plug in an optional accessory or headset for convenient, hands-free conversations.
- 14. External LCD Screen** Allows you to view incoming calls, messages and status icons as well as a wide variety of content you can select to view.
- 15. Camera Lens** Used for taking pictures and recording video. Keep it clean for optimal image quality.

* Idle mode is when the phone is waiting for input from you. No menu is displayed and the phone isn't performing any action. It's the starting point for all of the instruction steps.

Note: This User Manual gives navigation instructions according to the default "Grid" Menu Layout in the Display Settings menu. If other themes or menus are set, navigating the phone's menus may be different.

Phone Overview



 
1. **Left Soft Key** Press to access the Message menu when in idle mode, or select the option displayed at the bottom left of the LCD.
2. **Social Beat Key** Press to connect to Facebook, MySpace and Twitter.
3. **New TXT Message Key** Use for quick access to create a New TXT Message.
4. **Favorites/ SHIFT Key** Use to access your favorite contacts (when pressed in idle mode) or to change text entry capitalization (when pressed in a text entry field).
5. **Function Key** Press this key first and then any key with a symbol on it to insert that symbol.
6. **Game Directional Keys** Use as the Directional Keys for games.
7. **Space/ Voice Commands Key** Press to enter a space while editing. From idle mode, TTS (Text to Speech) function is available by pressing and holding . Press to activate Voice Commands in idle mode. Press and hold to record sounds or voice memos in idle mode.
8. **Enter Key** Press to enter a carriage return.
9. **CLR Key** Press to delete a single space or character, or press and hold to delete entire words. Press once in a menu to go back one level.
10. **Speakerphone Key** Use to activate Speakerphone Mode.
11. **Directional Key** Use for quick, convenient navigation. From idle mode, press to access Mobile Web (by pressing Up), My Verizon (Left), Events (Down), and My Shortcuts (Right). In menu use to scroll to choices and settings.
12. **OK Key** Press to accept entered or highlighted information.
13. **PWR/END Key** Use to turn the power on/off and to end a call. When in a menu or application, press to return to idle mode.
14. **SEND Key** Use to make or answer calls. Press to access the All Calls list from idle mode.
15. **Right Soft Key** Press to access the Contact List when in idle mode, or select the option displayed at the bottom right of the LCD.
16. **LCD Screen** Displays incoming calls, messages and status icons as well as a wide variety of content you can select to view.
17. **Speakers** Lets you hear the caller's voice, music or video in stereo via speakerphone mode.

Using the Qwerty Keypad: Messaging

Your device has a built-in QWERTY Keyboard, specifically designed for easy and comfortable text entry. Use the QWERTY Keyboard when creating Text, Picture, Video or Instant Messages.

From Idle mode, press this key to access your Favorites contact list. From here you can easily make calls, and send messages to your 10 favorite contacts.

Use the Directional Key to navigate menus and highlight different menu options. Press the **OK** Key to accept entered or highlighted information.

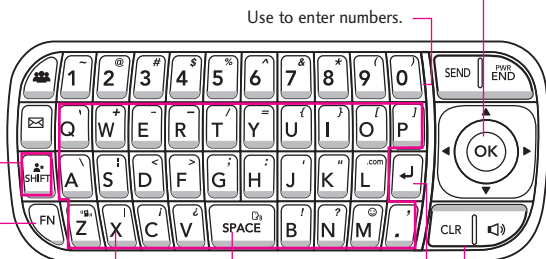

Use to enter numbers.

Use to enter letters.

Use to insert a space.

Press to enter a carriage return.

Use to delete a letter, words or sentences. Press once in a menu to go back one level.

Press this key first and then any key with a symbol on it to insert that symbol.

Menu Tree on the Internal Screen



Search



Messaging

1. New Message
 1. TXT Message
 2. Picture Message
 3. Video Message
 4. Voice Message
2. Messages
3. Drafts
4. Voicemail
5. Social Beat
6. Visual Voice Mail
7. Mobile IM
8. Mobile Email
9. Chat



Recent Calls

1. Missed
2. Received
3. Dialed
4. All
5. View Timers



Contacts

1. New Contact
2. Contact List
3. Backup Assistant
4. Favorites
5. Groups
6. Speed Dials
7. In Case of Emergency
8. My Name Card



Media Center

1. Search
2. Music & Tones
 1. V CAST Music I Rhapsody
 2. Get New Ringtones
 1. Get New Applications
 3. Get Ringback Tones
 4. My Ringtones
 5. My Music
 - Play All Songs
 1. All Songs
 2. Playlists
 3. Artists
 4. Genres
 5. Albums
 6. Manage My Music
 1. Erase
 2. Move To Card

- 3. Move To Phone
- 4. Lock
- 5. Unlock
- 7. Music Settings
 - 1. Repeat
 - 2. Shuffle
 - 3. Music Only
- 8. Music Alerts
- 6. My Sounds
 - 1. Record New
- 7. Sync Music
- 3. **Picture & Video**
 - 1. V CAST Videos
 - 2. Get New Pictures
 - 1. Get New Applications
 - 3. My Pictures
 - 4. My Videos
 - 5. Take Picture
 - 6. Record Video
 - 7. Online Album
- 4. **Games**
 - 1. Get New Applications
- 5. **Mobile Web**
- 6. **Browse & Download**
 - 1. Get New Applications
- 7. **Extras**
 - 1. Get New Applications



Mobile Email



VZ Navigator



Social Beat



Settings & Tools

- 1. My Verizon
- 2. Master Volume
- 3. **Tools**
 - 1. Voice Commands
 - 2. Calculator
 - 3. Ez Tip Calculator
 - 4. Calendar
 - 5. To Do List
 - 6. Alarm Clock
 - 7. Info Search
 - 8. Stopwatch
 - 9. World Clock
 - 10. Notepad
 - 11. Document Viewer

Menu Tree on the Internal Screen

- 12. USB Mass Storage
- 4. Bluetooth Menu**
 - 1. Add New Device
- 5. Keyguard Settings**
 - 1. Keyguard Timer
 - 2. Unlock Options
 - 3. Lock Option
- 6. Sounds Settings**
 - 1. Easy Set-up
 - 2. Call Sounds
 - 1. Call Ringtone
 - 2. Call Vibrate
 - 3. Caller ID Readout
 - 3. Alert Sounds
 - 1. TXT Message
 - 1. Tone
 - 2. Vibrate
 - 3. Reminder
 - 2. Multimedia Message
 - 1. Tone
 - 2. Vibrate
 - 3. Reminder
 - 3. Voicemail
 - 1. Tone
 - 2. Vibrate
 - 3. Reminder
 - 4. Emergency Tone
 - 1. Alert
 - 2. Vibrate
 - 3. Off
 - 5. Missed Call
 - 1. Tone
 - 2. Vibrate
 - 3. Reminder
- 4. Keypad Volume
- 5. Digit Dial Readout
- 6. Service Alerts
 - 1. ERI
 - 2. Minute Beep
 - 3. Call Connect
 - 4. Charge Complete
 - 5. Software Update
- 7. Power On/Off
 - 1. Power On
 - 2. Power Off
- 8. Voice Clarity
- 7. Display Settings**
 - 1. Easy Set-up
 - 2. Banner
 - 1. Personal Banner
 - 2. ERI Banner
 - 3. Backlight
 - 1. Internal Backlight
 - 2. External Backlight
 - 3. Keypad Backlight
 - 4. Brightness
 - 1. Internal Brightness
 - 2. External Brightness
 - 5. Wallpaper
 - 1. Internal Wallpaper
 - 2. External Wallpaper
 - 6. Charging Screen
 - 7. Display Themes
 - 1. Internal Themes
 - 2. External Themes
 - 8. Main Menu Settings
 - 1. Menu Layout
 - 2. Replace Menu Items

- 3. Position Menu Items
- 4. Reset Menu Settings
 - 1. Menu Layout
 - 2. Menu Items
 - 3. Item Positions
 - 4. All
- 9. Font Type
- 10. Font Size
 - 1. Internal Font Size
 - 2. External Font Size
- 11. Clock Format
 - 1. Internal Clock
 - 2. External Clock
- 8. Phone Settings**
 - 1. Airplane Mode
 - 2. Set Shortcuts
 - 1. Set My Shortcuts
 - 2. Set Directional Keys
 - 3. Set Qwerty Shortcut
 - 3. Voice Commands
 - 1. Confirm Choices
 - 2. Sensitivity
 - 3. Adapt Voice
 - 4. Prompts
 - 1. Mode
 - 2. Audio Playback
 - 3. Timeout
 - 5. CLR Key Activation
 - 4. Language
 - 5. Location
 - 6. Current Country
 - 7. Security
 - 1. Edit Codes
 - 1. Phone Only
- 2. Calls & Services
- 2. Restrictions
 - 1. Location Setting
 - 2. Calls
 - 1. Incoming Calls
 - 2. Outgoing Calls
 - 3. Messages
 - 1. Incoming Messages
 - 2. Outgoing Messages
 - 4. Dial-up Modem
 - 3. Phone Lock Setting
 - 4. Lock Phone Now
 - 5. Reset Default
 - 6. Restore Phone
- 8. System Select
- 9. NAM Select
- 9. Call Settings**
 - 1. Answer Options
 - 2. End Call Options
 - 3. Call Forwarding
 - 1. Forward Call
 - 2. Cancel Forwarding
 - 4. Auto Retry
 - 5. TTY Mode
 - 6. One Touch Dial
 - 7. Voice Privacy
 - 7. DTMF Tones
 - 8. Assisted Dialing
- 10. USB Mode**
- 11. Memory**
 - 1. Save Options
 - 1. Pictures
 - 2. Videos
 - 3. Sounds

Menu Tree on the Internal Screen

- 4. Ringtones
- 2. Phone Memory
 - 1. Memory Usage
 - 2. My Pictures
 - 3. My Videos
 - 4. My Ringtones
 - 5. My Music
 - 6. My Sounds
 - 7. My Contacts
 - 8. Move All To Card
- 3. Card Memory
 - 1. Memory Usage
 - 2. My Pictures
 - 3. My Videos
 - 4. My Ringtones
 - 5. My Music
 - 6. My Sounds
 - 7. My Contacts
 - 8. Move All To Phone
- 12. Phone Info
 - 1. My Number
 - 2. SW/HW Version
 - 3. Icon Glossary
 - 1. Status
 - 2. Home Screen
 - 3. Media Center
 - 4. Messaging
 - 5. Contacts
 - 6. Recent Calls
 - 7. Settings & Tools
 - 4. Software Update
 - 1. Status
 - 2. Check New
- 13. Set-up Wizard

NOTE Keyguard Settings are available for the external screen.

- 1. Unlock the screen.
- 2. Press the **OK** Key [MENU].
- 3. Press the Directional Key **< >** left or right to scroll to **SETTINGS**, then select **Keyguard** and press the **OK** Key.
- 4. Select **Keyguard Timer** and press the **OK** Key for the following options:
Always Off/ 7 Seconds/ 15 Seconds/ 30 Seconds
or **Unlock Options** and press the **OK** Key for the following options:
Press Once/ Press Twice
- 5. Select the desired option and press the **OK** Key to set.

Getting Started with Your Phone

The Battery

NOTE It is important to fully charge the battery before initial use of the phone.

Your phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and idle time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

1. Hold the phone securely with both hands (as demonstrated).
2. Push down on the center notch (1) and slide the cover downwards.



3. Align the gold contacts on the battery with the contacts on the phone, and push the other end of the battery down.

Removing the Battery

1. Turn power off.
2. Remove the battery cover.
3. Use the fingernail cutout to lift the battery from the phone (see the images below).



Charging the Battery

Your LG Octane™ comes with a cableless travel adapter and a USB data cable which connect together to charge your phone.

NOTICE

 
Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

Getting Started with Your Phone

NOTE

Using the phone with the adapter may cause an abrupt reset if the phone does NOT have the battery inserted.

1. Connect the cableless wall adapter and USB data cable. When connecting as shown below, the LG logo on the USB cable should face toward you.

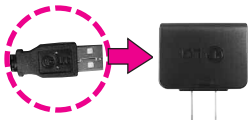

2. Gently uncover the Accessory/Charger Port, then plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.



NOTICE

Please make sure that the 'B' Side faces up before inserting a charger or data cable into the charger port of your phone.

3. The charge time varies depending upon the battery level.

Charging with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you may need to have the necessary USB drivers installed on your PC first. Connect one end of the USB cable to the Accessory/Charger Port on your phone and the other end to a powered USB port on your PC (commonly located on the front panel of the computer). It is best to use the rear USB port when connecting to a desktop PC. A USB Hub should be powered by an external power source (see Note below).

NOTE • Low-power USB ports are not supported, such as the USB port on your keyboard or bus-powered USB hub.

How to Install Your microSD™ Card



1. Locate the microSD slot on the right side of the phone and gently uncover the slot (the slot cover stays attached to the phone so it doesn't become lost).



2. Insert the microSD™ card with the gold contacts facing down and push in until it clicks into place. If you insert the card in the wrong direction, it may damage your phone or your card.

How to Remove Your microSD™ Card

1. Push the card in to release the exposed edge of the microSD™ card, to eject it.
2. Remove the microSD™ card from the slot and replace the cover.

NOTE • Do not attempt to remove the microSD™ card while reading or writing to the card.

- Users wishing to transfer or download music onto a microSD™ card inserted into this phone (through either MTP Sync or Over the Air) should format the microSD™ card on this handset before using it through (MENU -> Settings & Tools -> Memory -> Card Memory -> Format).

Warning: Formatting the microSD™ card will erase all content on the card. In the event the microSD™ card is used on this phone without first formatting it, the phone may display the "License acquisition failed" error message while downloading or syncing. Song files downloaded or otherwise purchased from third party providers and stored on a microSD™ card inserted into this device may be protected or encrypted by such providers and cannot be played on this device.

Getting Started with Your Phone

Battery Temperature Protection

Though extremely rare, if the battery becomes overheated, the phone will automatically turn off. When you turn the phone back on, a message pops up alerting you that the phone was powered off for your safety.

Battery Charge Level

You can find the battery charge level at the top right of the LCD screen. When the charge level becomes low, the battery sensor sounds a warning tone, blinks the battery icon, and displays a warning message. As the charge level approaches empty, the phone automatically turns off without saving.

Using the phone without battery

It is possible to use the phone without the battery. Connect the charger to the phone and plug the charger into a wall. After doing this, you can turn the phone on and place calls.

NOTE Using the phone without a battery may cause the phone to turn off unexpectedly if the supply of power is interrupted.

Turning the Phone On and Off

Turning the Phone On

Using the Internal Power Key

1. Install a charged battery or connect the phone to external power source.
2. Open the flip and press the  Key for a few seconds until the LCD screen lights up.

Using the External Power Key

1. Install a charged battery or connect the phone to external power source.
2. Press the  Key for a few seconds until the LCD screen lights up.

Turning the Phone Off

Using the Internal Power Key

1. Press and hold the  Key until the display turns off.

Using the External Power Key

1. Unlock the screen by pressing the  Key twice.
2. Press and hold the  Key until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. You can tell how much signal strength you have by the number of bars next to the signal strength icon: the more bars, the stronger the signal. If you're having problems with signal quality, move to an open area or, when inside a building, try moving towards a nearby window.

Screen Icons

When the phone is on, the top line of the LCD screen displays phone status icons.

To see the icon glossary, open the flip and go to **MENU → Settings & Tools → Phone Info → Icon Glossary**.

Making Calls

Make sure the phone is turned on. If necessary, enter the lock code.

NOTE To activate speakerphone during a call, simply open the flip.

Using the External Keypad

1. Unlock the screen by pressing the  Key twice.
2. Enter the phone number (include the area code, if needed).
3. Press the  Key.
4. Press the  Key to end the call.

Using the Internal Keypad

1. Open the flip and enter the phone number (include the area code, if needed).
2. Press the  Key.
3. Press the  Key to end the call.

Correcting Dialing Mistakes

If you make a mistake while dialing a number, press the  Key once to erase the last digit entered, or press and hold the  Key to delete all digits. When using the external keypad, use :  .

Redialing Calls

Press and hold the external  Key or the internal  Key to redial the last number you dialed, received or missed in call history. The last 270 numbers are stored in the All Calls list and you can select any of these to redial.

Receiving Calls

Using the External Keypad

1. When the phone rings or vibrates, press the  Key to answer.
2. Press the  Key to end the call.

NOTE Simply press the  Key to immediately silence the ringtone or vibration for that call. Or, you can press the  Key three times, then select **Quiet**. To ignore the incoming call, press the  Key twice to immediately end the call. Or, you can press the  Key three times, then select **Ignore**.

Using the Internal Keypad

1. There are several ways of answering a call, depending on your selected Answer Options (for instructions on how to set your preferences, see page 110):

- **Flip Open:** Open the flip.
- **Any Key:** Press the  Key or, with the phone unlocked, press any other key except the  Key.
- **Auto with Handsfree:** The call automatically connects when connected to a handsfree device.

NOTE If you press the Left Soft Key  **[Quiet]** while the phone is ringing and the flip is open, the ringing or vibration is muted for that call.

If you press the Right Soft Key  **[Ignore]** while the phone is ringing and the flip is open, the call will end or go to voicemail.

If you press the  Key while the phone is ringing and the flip is already open, the call will end and you will be able to select a **Quick Text** to send to the caller via TXT Message.

Vibrate Mode

Sets the phone to vibrate instead of ringing (📞 is displayed on the Status bar). To set Vibrate Mode, press and hold the  Key on the internal keypad, or the  Key on the external keypad (after unlocking the phone, if locked). To return to Normal Mode, press and hold the  Key again on the internal keypad, or the  Key on the external keypad.

Mute Function

The Mute Function prevents the transmission of your voice during a call. To quickly activate Mute using the internal keypad, press the Left Soft Key  [Mute]. To unmute press the Left Soft Key  [Unmute] again.

When the flip is closed, press the  Key [OPTIONS], then press the  Key [Mute]. To unmute, press the  Key [OPTIONS], then press the  Key [Unmute].

Quick Volume Adjustment

Quickly adjust ringer and earpiece volumes by pressing the volume keys up or down to increase or decrease the volume.

NOTE The earpiece volume can only be adjusted during a call.

Call Waiting

During a call, one beep indicates that you have another incoming call.

Ignoring a Call Waiting

If you don't want to answer the incoming call, press the Right Soft Key  [Ignore] when the flip is open. When the flip is closed, you can ignore the call by pressing the  Key [OPTIONS] and selecting Ignore.

Quick Access to Convenient Features

Answering a Call Waiting

1. Press the internal the  Key/ the external the  Key whether the flip is open or closed to automatically put the first call on hold and answer the new call.
2. Press the internal the  Key/ the external the  Key again to put the second call on hold and return to the first call.

NOTE If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three calls will be disconnected.

Shortcuts

Your LG Octane™ device has shortcut keys built in to allow quick and convenient access to phone features.

NOTE The preset shortcuts for the internal keypad can be changed to suit your needs.

Shortcut Access with the External Directional Key

1. Unlock the screen by pressing the  Key twice.
2. Press the Directional Key:
 - Up  accesses **My Music**
 - Down  accesses **Events**
 - Left  accesses **Messaging**
 - Right  accesses **Bluetooth Menu**

Shortcut Access with the Internal Directional Key

1. Open the flip.
2. Press the Directional Key:
 - Up  accesses **Mobile Web**
 - Down  accesses **Events**
 - Left  accesses **My Verizon**
 - Right  accesses **My Shortcuts**

Voice Commands

Voice Commands allow you to do things by verbal command (e.g., make calls, check Voicemail, etc.).

1. Access the Voice Commands feature:

- With the flip open, press the  Key.
- With the flip closed, unlock the screen and give the  Key a quick press (an extended press activates the Voice Recorder feature instead).

2. Follow the prompts to use your voice command(s).

NOTE Voice Commands can also be started with the designated key on your Bluetooth® device. Please check the manual of the Bluetooth® device for further instructions.

1. Call <Name or Number>

Say "Call" and then call someone simply by saying the phone number or name. Please speak clearly and exactly as entered in your Contacts list. When you have more than one contact number, you can state the name and number type for the contact (for example, 'Call John Work').

2. Send Msg to <Name or Number>

Say 'Send Message' and the voice command will prompt you for the type of message. After choosing the message type, the system will ask you for the contact name, number or group. It will automatically start a message. If you say a full-sentence command, such as 'Send Message to Bob', it would automatically start a text message without asking for the message type. When using the 'Send Message' command, speak clearly and say the number, group name, or name exactly as it is entered in your Contact list.

3. Go to <Menu>

The 'Go to' command allows you to access a menu within the phone (for example, 'Go to Calendar'). If no menu option is stated, a list of options will be provided.

4. Check <Item>

The "Check" command allows you to check out a wide range of items from the **Phone Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery Level, Volume, Balance, Minutes, Payment and My Number.**

Quick Access to Convenient Features

5. Contacts <Name>

You can look up names in your Contacts (for example, 'Lookup John'): **Call/ Read out/ Create New/ Modify/ Erase**

6. Search

Allows you to use the Search application.

7. Redial

Allows you to automatically redial the last number called.

8. Play

After stating playlist, say the desired playlist to play. Then songs in that list play.

9. My Verizon

The "My Verizon" command provides you with direct access to your Verizon Wireless account information.

10. Help

Provides a general guideline to using Voice Commands.

Press the Right Soft Key 

[Settings].

Confirm Choices:

Automatic/Always Confirm/ Never Confirm

Sensitivity: Adjust the sensitivity as **More Sensitive / Automatic/ Less Sensitive**.

Adapt Voice: If the phone asks you to repeat your voice command too often, train the phone to recognize your voice patterns. **Train Digits/Train Words**

Prompts: Mode/ Audio Playback/Timeout For Mode, set **Prompts/Readout + Alerts/ Readout/ Tones Only**. For Audio Playback, set **Speakerphone or Earpiece**. For Timeout, set **5 seconds or 10seconds**.

CLR Key Activation: Select **On** or **Off**. If set to **On**, this setting allows you to activate Voice Command using the external .

Contacts in Your Phone's Memory

New Contact Basics

Using the Internal Keypad

1. Open the flip.
2. Enter a number (max. 48 digits), then press the Left Soft Key  [Save].
3. Use the Directional Key  to scroll to **Add New**, then press the  Key.
4. Use the Directional Key  to scroll to **Mobile 1/ Home/ Business/ Mobile 2/ Fax**, then press the  Key.
5. Enter a name (max. 32 characters) and any additional information, then press the  Key [SAVE] to create the contact entry.
6. The number will appear highlighted in your Contact List. Press the  Key to exit or press the  Key to call the number.

Using the External Keypad

1. Unlock the screen by pressing the  Key twice.
2. Enter a number (max. 48 digits), then press the  Key [OPTIONS].
3. With Save highlighted, press the  Key to select.
4. Use the Directional Key  to scroll to **Add New**, then press the  Key.
5. Use the Directional Key  to scroll to **Mobile 1/ Home/ Work/ Mobile 2/ Fax**, then press the  Key.
6. Enter a name (max. 32 characters) and any additional information, then press the  Key [SAVE] to create the contact entry.

Using the External Keypad and the Contacts Menu

1. Unlock the screen by pressing the  Key twice.
2. Press the  Key [MENU].
3. Press the Directional Key right  to scroll to **Contacts**.

Contacts in Your Phone's Memory

4. Press  **New Contact**.
5. Enter the contact name, then using the Directional Key , scroll down and enter the contact's information in the desired fields.
6. Press the  Key [**SAVE**] to create the contact entry.

Customizing Individual Entries

Using the Internal Keypad

1. Press the Right Soft Key  [**Contacts**], then use the Directional Key  to highlight an entry.
2. Press the Left Soft Key  [**Edit**].
3. Use the Directional Key  to scroll to the information to customize.
4. Change the entry as you want, then press the  Key [**SAVE**] to save your changes.

NOTE The external keypad cannot be used to customize an existing Contact entry.

Speed Dial

Use the contacts saved in your Contact List to set up your Speed Dials.

Using the Internal Keypad

1. Press the Right Soft Key  [**Contacts**], then use the Directional Key  to highlight an entry.
2. Press the Left Soft Key  [**Edit**].
3. Use the Directional Key  to scroll to a phone number, then press the Right Soft Key  [**Options**].
4. Use the Directional Key  to scroll to **Set Speed Dial**, then press the  Key.
5. To select a Speed Dial digit:
 - Enter the Speed Dial number with the keypad, then press the  Key [**SET**] to set.
 - You can also use the Directional Key  to scroll to the Speed Dial digit, then press the  Key [**SET**] to set.

- When prompted "Assign Speed Dial to Contact?", press the  Key to select **Yes**, then press the  Key [**SAVE**] to save the changes.

Storing a Number with Pauses

Pauses allow you to enter additional sets of numbers to access automated systems, such as Voicemail or credit billing numbers. Pause types are: **Wait (W)** – the phone stops dialing until you press the Left Soft Key  [**Release**] to advance to the next number. **2-Sec Pause (P)** – the phone waits two seconds before sending the next string of digits.

Using the Internal Keypad

- Enter a number, then press the Right Soft Key  [**Options**].
- Use the Directional Key  to scroll to **Add 2-Sec Pause** or **Add Wait**, then press the  Key.
- Enter additional number(s) (e.g., pin number, credit card number, etc.).
- Press the  Key [**OPTIONS**] and select **Save**.
- Complete saving the Contact entry as necessary.

- Press the Left Soft Key  [**Save**].

- Complete saving the Contact entry as necessary.

Using the External Keypad

- Unlock the screen by pressing the  Key twice.
- Enter a number, then press the  Key [**OPTIONS**].
- Use the Directional Key  to scroll to **Add 2-Sec Pause** or **Add Wait**, then press the  Key.
- Enter additional number(s) (e.g., pin number, credit card number, etc.).
- Press the  Key [**OPTIONS**] and select **Save**.
- Complete saving the Contact entry as necessary.

Contacts in Your Phone's Memory

Adding Additional Phone Number(s) to an Existing Contact

Using the Internal Keypad

1. Enter a phone number, then press the Left Soft Key  [Save].
2. Use the Directional Key  to scroll to **Update Existing**, then press the  Key.
3. Use the Directional Key  to scroll to an existing entry, then press the  Key.
4. Use the Directional Key  to scroll to **Mobile 1/ Home/ Business/ Mobile 2/ Fax**, then press the  Key to save.

Adding a Number from the Contact List Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to an entry, then press the Left Soft Key  [Edit].

3. Use the Directional Key  to scroll to the phone number field to add, then enter the number and press the  Key [SAVE] to save.

Changing a Number Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to a Contact entry, then press the Left Soft Key  [Edit].
3. Use the Directional Key  to scroll to the field you want to change.
4. Make the changes, then press the  Key [SAVE] to save.

Changing the Default Number

The Default Number is the number that is called when you initiate a call from the Contact List. By default, it is the first number you entered when saving the contact. If you wish to set up another number as the default, follow the instructions below.

Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to an entry.
3. Press the Left Soft Key  [Edit].
4. Use the Directional Key  to highlight a phone number, then press the Right Soft Key  [Options].
5. Use the Directional Key  to highlight **Set As Default**, then press the  Key.
6. A confirmation message is displayed. Select **Yes** and press the  Key to set the new number as the default.
7. Press the  Key [SAVE] again to save.

Deleting

Deleting a Phone Number Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to an entry.
3. Press the Left Soft Key  [Edit].
4. Use the Directional Key  to scroll to a phone number.
5. Press and hold the  Key to delete it.
6. Press the  Key [SAVE] to save.

NOTE This will only work when you have more than one number listed per contact.

Deleting a Contact Entry Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to scroll to an entry.
3. Press the Right Soft Key  [Options], then press  Erase.

Contacts in Your Phone's Memory

4. Press the  Key [Yes] to erase the entry.

Removing a Speed Dial Using the Internal Keypad

1. Press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry to edit and press the  Key [VIEW].
3. Select the phone number with the Speed Dial, then press the  Key [EDIT].
4. Press the Right Soft Key  [Options].
5. Press  Remove Speed Dial.
6. Press the  Key [Yes] to remove the speed dial.
7. Press the  Key [SAVE] to save.

Speed Dialing

Allows you to make phone calls quickly and easily to numbers stored in Contacts. You need to set Speed Dials in your Contacts before using this feature.

NOTE Speed Dial 1 is for Voicemail.

Single Digit Speed Dials

From the idle screen, press and hold the Speed Dial digit. Your phone recalls the phone number from your Contacts, and dials it for you.

Multiple Digit Speed Dials

To dial Speed Dials with multiple digits, press the first digit(s) then press and hold the last digit. For example, to Speed Dial 25, press , then press and hold .

NOTE You can also enter the Speed Dial digit(s), then press the internal  Key / external  Key.

Account Information Speed Dials

Speed Dials 95-99 are preset to access certain phone account information for your convenience: 95 (Warranty Center), 96 (#DATA), 97 (#BAL), 98 (#MIN), 99 (#PMT) and 411 (Directory Assistance).

Unlike Speed Dial 1, you can delete and/or change these.

SEARCH

The Search (Bing™) application provides Verizon Wireless subscribers with a superior, comprehensive mobile search experience that results highly relevant search results using the Web and local points of interest.

When available, your GPS location will be used for Local searches; for example, to find the nearest restaurant. Search can even provide Directions to your results!

Access and Options

1. Open the flip and press the  Key [MENU].
2. Press  Search.

You may need to download and install the Search application the first time you access Bing™.

NOTE Standard mobile and data rates may apply. Check with your service provider for details.

MESSAGING

MESSAGING

The phone can store over 690 messages. The actual number of messages may vary, depending on memory availability. Other limits, including available characters per message, may exist. Please check with your service provider for system features and capabilities.

SHORTCUT

From idle mode with the flip open, pressing the Message Key  is a shortcut key to NEW TXT MESSAGE.

When in Idle mode, with the flip open, you can open the Messaging Menu by pressing the Left Soft Key  [Message].

When you receive a message, you can call the person that sent you a message by simply pressing the internal Send Key  or the external Send Key  when the message is highlighted.

New Message Alert

Your phone will alert you when you have new messages.

1. The phone displays a message on the screen and the message alert ringtone sounds.
2. The message icon () will be displayed on the screen. In the case of a high priority message, the icon () is displayed on the screen.

1. New Message

Allows you to send messages (Text, Picture, Video, and Voice). Each message requires a destination (Address) and information (Message).

1.1 TXT Message

The Basics of Sending a Message Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.
3. Press  New Message.
4. Press  TXT Message.
5. Enter the phone number of the recipient or the email address for an email message. You can enter up to 20 addresses for a single message.

6. Press the **OK** Key.
7. Type your message.
8. Press the **OK** Key **[SEND]**.

Customizing the Message Using Options

1. Follow steps 1-7 (from the previous section) to create a new Text Message.
- **Editing the To field**
2. Highlight the **To** field and press the Right Soft Key **[Add]**.
3. Select an option(s).
From Contacts/ From Recent Calls/ Favorites/ Groups
4. Press the **OK** Key.

● **Editing the Text field**

5. Highlight the **Text** field and press the Right Soft Key **[Options]**.
6. Select the option(s) to customize.

Insert Quick Text Allows you to insert a Quick Text saved on the phone.

Save As Draft Saves the message into the Drafts folder.

Add Allows you to add Graphic, Animation, Sound, Signature, Name Card, or Contact Number/Email.

Copy Text Allows you to copy text you highlight to paste it into a text field.

Paste Will paste the copied text.

Format Text Allows you to change the look of the text.
Alignment/ Font Size/ Font Style/ Text Color/ Background

Priority Level Gives priority to the message.
High/ Normal

Callback # Inserts a pre-programmed callback number with your message.
On/ Off/ Edit

Save as Quick Text Allows you to save your message as Quick Text for future use.

Cancel Message Cancels message editing and select **Yes** or **No** to save the message in the Drafts Folder.

7. Complete and send by pressing , or the  Key [SEND].

Using the External Keypad

1. Unlock the screen by pressing the  Key twice.
2. Press the  Key [MENU].
3. Use the Directional Key  to scroll to **Messaging**.
4. Press  **New TXT Message**.
5. Enter the phone number of the recipient or the email address for an email address. You can enter up to 20 addresses for a single message.

NOTE Press the  Key [OPTIONS] to change the entry mode or enter the address from your Contacts or Groups.

6. Press the Directional Key down .
7. Type your message (text or email).
8. Press the  Key [OPTIONS] Key and press  **Send**.

1.2 Picture Message

The Basics of Sending a Message

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Messaging**.
3. Press  **New Message**.
4. Press  **Picture Message**.
5. Enter the phone number or email address of the recipient.
6. Press the  Key.
7. Type your message.
8. Use the Directional Key  to highlight the **Picture** field and press the Left Soft Key  [My Pics]. Use the Directional Key  to highlight the image you want to send, then press the  Key.
9. Use the Directional Key  to highlight the **Sound** field, then press the Left Soft Key  [Sounds]. Use the Directional Key  to highlight the audio file you want to send then press the  Key.

10. Use the Directional Key  to highlight **Name Card** field, then press the Left Soft Key  [Add]. Use the Directional Key  to highlight **My Name Card/ From Contacts**, and press the  Key.

11. Use the Directional Key  to highlight the **Subject** field and enter the subject.

12. Press the  Key [SEND].

Available Message Options

1. Create a new Picture Message.

- **Editing the To field**

2. With the To field highlighted, press the Right Soft Key  [Add] .

3. Use the following options to edit the message:
From Contacts/ From Recent Calls/ Favorites/ Groups/ To Online Album

- **Editing the Text or Subject fields**

4. With the Text or Subject field highlighted, press the Right Soft Key  [Options].

5. Use the following options to edit the message:

Preview Displays the Picture message as it would be seen by the recipient.

Save As Draft Saves the message into the Drafts folder.

Insert Quick Text Allows you to insert quick text customized on your phone.

Copy Text Allows you to copy text you highlight to paste it into a text field.

Paste Will paste the copied text into a text field.

Add Slide Insert multiple pictures into a picture message.

Priority Level Gives priority to the message.
High/ Normal

Callback # Inserts a pre-programmed callback number with your message.
On/ Off/ Edit

Cancel Message Cancels message editing. Select either **Yes** or **No** to save to the Drafts Folder and return to the New Message menu.

- **Editing the Picture, Sound, and Name Card fields**

6. With the Picture, Sound or Name Card field highlighted, press the Right Soft Key  [Options].
7. Use the following options to edit the message:
Preview/ Save As Draft/ Add Slide*/ Priority Level/ Remove Picture(Sound, or Name Card)/ Cancel Message
8. Complete and send by pressing  or by pressing the  Key [SEND].

* Add Slides to Your Picture Message

When you want to send multiple pictures, use the Add Slide option. This allows you to create one picture message with multiple pictures attached to it.

Using the Internal Screen

1. Create a picture message.
2. Add a picture to your message.
3. Press the Right Soft Key  [Options].
4. Press  Add Slide (numbers

at the top left of the screen indicate the current slide / total number of slides).

5. Enter text (if necessary), then press the Directional Key up or down  to edit the slide.
6. Continue adding slides and text as desired. Use the Directional Key  to scroll through the attached slides.
7. Complete and send by pressing , or by pressing the  Key [SEND].

1.3 Video Message

The Basics of Sending a Message Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.
3. Press  New Message.
4. Press  Video Message.
5. Enter the phone number or email address of the recipient.
6. Press the  Key.
7. Type your message.

8. Use the Directional Key  to highlight the **Video** field and press the Left Soft Key  [**Videos**].
9. Use the Directional Key  to scroll to the video file you want to send, then press the  Key.
10. Complete the other fields as necessary.
11. Press the  Key [**SEND**].

Customizing the Message Using Options

1. Create a new video message.

• Editing the To field

2. With the To field highlighted, press the Right Soft Key  [**Add**].
3. Use the following options to edit the message:
From Contacts/ From Recent Calls/ Favorites/ Groups/ To Online Album/ To Contacts

• Editing the Text field

4. With the Text field highlighted, press the Right Soft Key  [**Options**].

5. Use the following options to edit the message:

Preview Displays the Video message as it would be seen by the recipient.

Save As Draft Saves the message into the Drafts folder.

Insert Quick Text Allows you to insert quick text customized on your phone.

Copy Text Allows you to copy text you highlight to paste it into a text field.

Paste Will paste the copied text into a text field.

Priority Level Gives priority to the message.

High/ Normal

Callback # Inserts a preprogrammed callback number with your message.

On/ Off/ Edit

Cancel Message Cancels message editing. Select either **Yes** or **No** to save to the Drafts Folder and return to the New Message menu.

- **Editing the Video and Name Card fields**

6. With the Video or Name Card field highlighted, press the Right Soft Key  [Options].
7. Use the following options to edit the message:
Preview/ Save As Draft/ Priority Level/ Remove Video(Name Card)/ Cancel Message

- **Editing the Subject field**

8. With the Subject field highlighted, press the Right Soft Key  [Options].
9. Use the following options to edit the message:
Preview/ Save As Draft/ Insert Quick Text/ Copy Text/ Paste/ Priority Level/ Cancel Message
10. Complete and send by pressing , or by pressing the  Key [SEND].

1.4 Voice Message

The Basics of Sending a Message Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.
3. Press  New Message.
4. Press  Voice Message.
5. Press the  Key [RECORD] to start recording.
6. Record your voice message.
7. Press the  Key [STOP] to end recording.
8. Enter the phone number or email address of the recipient.
9. Press the Directional Key downward  to highlight the Text field.
10. Type your message (text or email).
11. Complete the other fields as necessary.
12. Press the  Key [SEND].

Customizing the Message Using Options

1. Create a new voice message.

- **Editing the To field**

2. With the To field highlighted, press the Right Soft Key  [Add].
3. Use the following options to edit the message:
From Contacts/ From Recent Calls/ Favorites/ Groups/
To Online Album/ To Contacts

- **Editing the Text field**

4. With the Text field highlighted, press the Right Soft Key  [Options].
5. Use the following options to edit the message:

Review Displays the Voice message as it would be heard by the recipient.

Save As Draft Saves the message into the Drafts folder.

Insert Quick Text Allows you to insert quick text customized on your phone.

Copy Text Allows you to copy text you highlight to paste it into a text field.

Paste Will paste the copied text into a text field.

Priority Level Gives priority to the message.
High/ Normal

Callback # Inserts a preprogrammed callback number with your message.
On/ Off/ Edit

Cancel Message Cancels message editing. Select either **Yes** or **No** to save to the Drafts Folder and return to the New Message menu.

- **Editing the Voice and Name Card fields**

6. With the Voice or Name Card field highlighted, press the Right Soft Key  [Options].
7. Use the following options to edit the message:
Review/ Save As Draft/ Priority Level/ Remove Recording(Name Card)/ Cancel Message

Important Safety Precautions

- **Editing the Subject field**

8. With the Subject field highlighted, press the Right Soft Key  [Options].

9. Use the following options to edit the message:
Review/ Save As Draft/ Insert Quick Text/ Copy Text/ Paste/ Priority Level/ Cancel Message

10. Complete and send by pressing , or by pressing the  Key [SEND].

2. Messages

The phone can store up to 650 sent and received messages (a maximum of 150 MMS, 100 MMS notifications, and 400 SMS).

Memory limitations may reduce the number of saved messages. Please check with your service provider for system features and capabilities.

When your phone receives a message, you are alerted by:

- A notification message on the screen.
- An alert tone or vibration, depending on your personal settings.

Sorting Your Messages

You can choose to view your messages by Time (sorted into Inbox and Sent folders) or by Contact (all messages in one folder sorted by address).

To change the message view:

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.
3. Press the Left Soft Key  [Settings].
4. Press  Messages View, then choose:

- Time - to view messages separated into Inbox and Sent folders.
- Contact - will group all messages sent to or received from a contact in the combined messages folder. Messages are displayed alphabetically.

Viewing Your Messages

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].

2. Press  **Messaging**.
3. Press  **Messages**.
4. Use the Directional Key  to highlight a message entry.
5. Options from here:
 - Press the Left Soft Key  [Reply].
 - Press the  Key [OPEN] to open the message.
 - Press the Right Soft Key  [Options].

Erase/ Add To Contacts/
Manage Messages/
Sort Alphabetically/
Messaging Menu/
Messages View

Options (Messages View set to Contact)

Erase Erases a message thread(all the messages received from / sent to the address).

Add To Contacts Stores the address into your Contacts.

Manage Messages Allows you to Erase, lock, or unlock your message threads.

Sort Alphabetically Allows you to sort the conversations alphabetically.

Messaging Menu Returns to the Messaging screen.

Message View Allows you to switch message view from Contact to Time.

Inbox Options (Messages View set to Time)

Reply Replies to the message sender.

Reply With Copy Replies to the message sender with a copy of their message included.

Forward Forwards a received message to other destination address(es).

Add To Contacts Stores the callback number, email address, and numbers from the address of the received message into your Contacts.

Extract Addresses Allows the address(es) included in the message to be extracted for viewing.

Sort By Sender Sorts Inbox messages by sender.

Messages View Allows you to switch message view from Contact to Time.

Manage Inbox Allows you to erase, lock, or unlock your Inbox messages.

Message Info Displays information about the selected Inbox message.

Sent Options (Messages View set to Time)

Forward Forwards a sent message to other destination address(es).

Reply To All Allows you to compose a new message to the same destination address(es).

Send Allows you to retransmit the selected message. For multimedia messages, 'Resend' is displayed.

Add To Contacts Stores the callback number, email address, and numbers from the address of the received message into your Contacts.

Sort By Recipient Sorts Sent messages by recipient.

Messages View Allows you to switch message view from Time to Contact.

Manage Sent Allows you to erase, lock, or unlock your Sent messages.

Message Info Displays information about the selected Sent message.

NOTE Options may vary depending on the type of message.

Messaging Icon Reference

	New TXT Message
	TXT Message Read
	New Media Message
	New Media Message Received
	Media Message Unread
	Media Message Read
	Message Delivered
	Message Failed
	Pending Message
	Message Sent
	New Webmail

-  Webmail Read
-  Multiple Messages Delivered
-  Multiple Messages Failed
-  Multiple Messages Delivery Incomplete
-  Multiple Pending Messages
-  Multiple Messages Sent
-  TXT Message Draft
-  Media Message Draft
-  Namecard
-  High Priority
-  Lock
-  Unlock
-  Mobile Web Mail

3. Drafts

Displays messages started, but not yet sent.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.

3. Press  Drafts.

4. Use the Directional Key  to highlight a message entry.

5. Options from here:

- Press the Left Soft Key  [Erase].
- Press the  Key [EDIT].
- Press the Right Soft Key  [Options].

Send Sends the selected message to the recipient.

Add To Contacts Stores the callback number, email address, and numbers from the address included in the Draft message into your Contacts.

Manage Drafts Allows you to erase, lock, or unlock your Draft messages.

Message Icon Reference

-  TXT Message Draft
-  Multimedia Message Draft

4. Voicemail

Allows you to view the number of new voice messages recorded in the Voicemail box. When you have a new voice message, your phone will alert you.

Checking Your Voicemail Box Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.
3. Press  Voicemail.
4. Options from here:
 - Press the Left Soft Key  [Clear] to clear the Voicemail counter, and then select Yes and press the  Key.
 - Press  or the  Key [CALL] to listen to the message(s).

OR

1. Dial *86 (*VM) then press  from your phone or dial your wireless phone number from any touch-tone phone.
2. Enter your password. Once entered, you will be able to access your voicemail box.

OR

1. Press and hold the  Key as a speed dial to your voicemail.

5. Social Beat

Allows you to access the most popular social networking sites, including Facebook, MySpace, and Twitter.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.
3. Press  Social Beat.

You may need to download each application the first time you access Social Beat. Follow the on-screen prompts.

6. Visual Voice Mail

Visual Voice Mail allows the management of voicemail directly from the device rather than accessing voice mail via traditional methods. Visual Voice Mail displays a list of messages and allows the user to choose which message to listen to or delete, without having to dial into their mailbox, listen to voice instructions, or prior messages.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.
3. Press  Visual Voice Mail.
4. Upon opening the link to Visual Voice Mail, a message will be played promoting the benefits of Visual Voice Mail.
5. Press the  Key to accept the Terms and Conditions.
6. Select "Download" and press the  Key to download the application.
7. When prompted, enter your basic voice mail password that was previously established.*
8. Continue to follow the prompts and instructions to complete the download and activation of Visual Voice Mail.
9. Once the activation steps are completed, exit the application and return after 5 minutes to begin using Visual Voice Mail.

* Please note that storing a voice mail password is required to use Visual Voice Mail. This application may store voice mail messages in electronic format on this device.

Anyone in possession of this device can access the voice mail. To limit unauthorized access to the voice mail, consider locking the phone when not in use. Cancellation of Visual Voice Mail cannot be completed via the device. Please contact Customer Service or go to My Verizon at verizonwireless.com if you need to cancel your Visual Voice mail service. Visual Voice Mail and traditional Voice Mail may not always be synchronized and if you cancel Visual Voice Mail you may lose all stored voice mails and information. To avoid losing all stored voice mails and information, save the Voice Mail in an audio format onto phone's internal

memory, removable memory or send the audio file as a message using picture messaging or email. Once you have registered for My Verizon, you will have the ability to reset your Voice Mail password online or via your Web capable wireless device.

NOTE Voice Mail may not be available in some areas. Voice Mailboxes not set up within 45 days will be cancelled. Your Verizon Wireless Voice Mailbox is not password protected until you create a password by following the setup tutorial. Airtime and other charges will be incurred when using Voice Mail from your wireless phone. IN Calling minutes do not apply to Voice Mail retrievals; you will be charged to maintain your connection to Voice Mail. Verizon Wireless is not liable for missed messages, or deletions of messages from your Voice Mailbox, even if you have saved them.

7. Mobile IM

Allows you to send and receive Instant Messages at any time.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.
3. Press  Mobile IM.
4. Use the Directional Key  to highlight your IM service provider, then press the  Key. Follow the on-screen prompts.

8. Mobile Email

Allows you to send and receive emails at any time.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Messaging.
3. Press  Mobile Email. Follow the on-screen prompts.

9. Chat

Connects you with the Chat page.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Messaging**.
3. Press  **Chat**.
4. Use the Directional Key to highlight your Chat service provider, then press the  Key. Follow the on-screen prompts.

Message Settings

Allows you to configure settings for your messages.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Messaging**.
3. Press the Left Soft Key  [Settings].
4. Use the Directional Key  to scroll to one of the settings and press the  Key to select it.

Message Settings Sub-Menu Descriptions

1. Messages View

Select **Time** to display messages chronologically in the Inbox and Outbox. Select **Contact** to display messages by contact, in threads.

2. Entry Mode

Select **T9Word**, **Abc**, **ABC**, **123** or **T9 Palabra** as your default input method.

3. Auto Save Sent

Select **On** to automatically save your sent messages. Select **Off** if you don't want to save them. Select **Prompt** to be asked to save each sent message.

4. Auto Erase Inbox

Select **On** to automatically delete read messages when you exceed the storage limit. Or, select **Off**.

5. Messaging Font Size

Select **Internal Font Size** or **External Font Size** and then select **Resizable**, **Small**, **Normal** or **Large** as the font size for received messages.

Important Safety Precautions

6. TXT Auto View

Select **On** to automatically display message content on the screen.

Select **On+Readout** to automatically display content and read it aloud.

Select **Off** for more privacy by requiring the message to be opened to view it.

7. TXT Instant Reply

Select **On** to automatically start a reply message when you read a message. Or, select **Off**.

8. TXT Auto Scroll

Select **On** to automatically scroll message text down while viewing messages. Or, select **Off**.

9. Multimedia Auto Receive

Select **On** to automatically download attachments to Picture/Video messages. Or, select **Off**.

10. Quick Text

Displays your list of text phrases to help you to reduce manual input into messages. Use this menu to edit and add text.

11. Voicemail

Allows you to manually enter the access number for Voicemail Service. This number should be only used when a VMS (Voicemail Service) access number is not provided from the network.

12. Callback

Select **On** to automatically send a designated callback number with your messages. Or, select **Off**.

13. Signature

Select **Custom** to create/edit a signature to automatically send with your messages. Select **None** for no signature.

14. Delivery Receipt

Select **On** to automatically update the sent message's status to delivered if the message is delivered to the destination address, if supported by network. Select **Off** for no status update.

Erasing Messages

You can erase messages stored in your Inbox, Sent, or Drafts folders. You can also erase all messages at the same time.

NOTE Message View setting (**Time** or **Contact**), affects the Erase Message submenu names, but nonetheless they function the same.

Deleting Messages (Messages View set to Contact)

1. Open the flip and press the  Key [MENU].
2. Press  **Messaging**.
3. Press the Right Soft Key  [Options].
 - Press  **Erase Sent/Received** to erase all (sent and received) Messages in the box.
 - Press  **Erase Drafts** to erase all unlocked messages stored in the Drafts folder.
 - Press  **Erase All Messages** to erase all unlocked messages from the Inbox, Sent, and Drafts. You can choose whether or not unread messages will be erased.

4. Select **Yes** and press the  Key to erase the messages selected.

Deleting Messages (Messages View set to Time)

1. Open the flip and press the  Key [MENU].
2. Press  **Messaging**.
3. Press the Right Soft Key  [Options].
 - Press  **Erase Inbox** to erase All (read and unread) Messages or Only read Messages in the Inbox.
 - Press  **Erase Sent Messages** to erase all unlocked messages stored in the Sent folder.
 - Press  **Erase Drafts** to erase all unlocked messages stored in the Drafts folder.
 - Press  **Erase All** to erase all messages from the Inbox, Sent, and Drafts folders (except locked messages). You can choose whether or not unread messages will be erased.
4. Select **Yes** and press the  Key to erase the messages selected.

RECENT CALLS

RECENT CALLS

The Recent Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It's continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

1. Missed

Allows you to view the list of missed calls; up to 90 entries.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Recent Calls.
3. Press  Missed.
4. Use the Directional Key  to scroll to an entry, then
 - Press the  Key [OPEN] to view the entry.
 - Press  to place a call to the number.

- Press the Right Soft Key  [Options] to select: Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
- Press the Left Soft Key  [Message] to send this contact one of the following: TXT Message/ Picture Message/ Video Message/ Voice Message

2. Received

Allows you to view the list of incoming calls; up to 90 entries.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Recent Calls.
3. Press  Received.
4. Use the Directional Key  to scroll to an entry, then
 - Press the  Key [OPEN] to view the entry.
 - Press  to place a call to the number.

- Press the Right Soft Key  [Options] to select: Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
- Press the Left Soft Key  [Message] to send this contact one of the following: TXT Message/ Picture Message/ Video Message/ Voice Message

3. Dialed

Allows you to view the list of outgoing calls; up to 90 entries.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Recent Calls.
3. Press  Dialed.
4. Use the Directional Key  to scroll to an entry, then
 - Press the  Key [OPEN] to view the entry.
 - Press  to place a call to the number.

- Press the Right Soft Key  [Options] to select: Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
- Press the Left Soft Key  [Message] to send this contact one of the following: TXT Message/ Picture Message/ Video Message/ Voice Message

4. All

Allows you to view the list of all calls; up to 270 entries.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Recent Calls.
3. Press  All.
4. Use the Directional Key  to scroll to an entry, then
 - Press the  Key [OPEN] to view the entry.
 - Press  to place a call to the number.

RECENT CALLS

- Press the Right Soft Key  [Options] to select:
Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ View Timers
- Press the Left Soft Key  [Message] to send this contact one of the following:
TXT Message/ Picture Message/ Video Message/ Voice Message

SHORTCUT

To view a quick list of your recent calls, press the internal  Key or the external  Key from idle mode.

5. View Timers

Allows you to view the duration of calls made, received, and in roaming. You can also see the data counter.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Recent Calls.
3. Press  View Timers.

4. Use the Directional Key  to scroll to a counter.

Last Call/ All Calls/ Received Calls/ Dialed Calls/ Roaming Calls/ Transmit Data/ Received Data/ Total Data/ Last Reset/ Lifetime Calls/ Lifetime Data Counter

5. Reset the selected call list timer by pressing the Left Soft Key  [Reset], or reset all the timers by pressing the Right Soft Key  [Reset All] if you want to reset all the timers at once.

NOTE Last Reset, Lifetime Calls, and Lifetime Data Counter cannot be reset.

CONTACTS

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory.

SHORTCUT

With the flip open, the Right Soft Key  is a shortcut key to the Contact List. Pressing the Favorites Key  is a shortcut key to the Favorites menu.

1. New Contact

Allows you to add a new entry to your Contact List.

NOTE Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Contacts.
3. Press  New Contact.
4. Enter the name.
5. Use the Directional Key  to scroll to the phone number type.
6. Enter the number and press the  Key [SAVE] to save.

NOTE For more detailed information, see page 28.

2. Contact List

Allows you to view your Contact List.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
 2. Press  Contacts.
 3. Press  Contact List.
 4. Press the Directional Key  to scroll through your Contacts.
- Press the Right Soft Key  [Options] to select one of the following:
New Contact/ Erase/ New TXT Message/ New Picture Message/ New Video Message/ New Voice Message/ Set As ICE Contact/ Call/ Manage Contacts/ Set As Favorite
 - Press the Left Soft Key  [Edit] to edit the entry.
 - Press the  Key [VIEW] to view the entry.

NOTE You can also use the External Keypad to access your Contact List:

First, unlock the screen by pressing  twice --> press  [MENU] --> press the Directional Key right  to scroll to  [CONTACTS] --> press  Contact List.

3. Backup Assistant

Backup Assistant safeguards your mobile phone's address book and automatically saves a copy of the names, phone numbers, and email addresses stored in your phone. You can also view, print, add, delete, and edit your contacts online. If you lose, damage, or upgrade your phone, Backup Assistant will restore your contact list to a new or replacement phone. Additional fees may apply.

NOTE To use the Backup Assistant service, you are required to activate the service from your phone.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Contacts**.
3. Press  **Backup Assistant**.
4. Follow the on-screen prompts.

4. Favorites

Allows you to create and view your Favorites contact list.

SHORTCUT

From idle mode with the flip open, pressing  is a shortcut key to the Favorites menu.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Contacts**.
3. Press  **Favorites**.

TIP

You can add up to 10 contacts and/or contact groups as Favorites to easily make calls, send messages, and view messages.

4. With the **ADD** frame selected, press the  Key to add a Favorite.
5. Select whether you want to add a favorite from your **Contacts / Group**.
6. Use the Directional Key  to scroll through your Contacts or Groups alphabetically and press the  Key [MARK].
7. Press the Left Soft Key  [Done].
Once you have added Contacts to the Favorites list, the following options will become available in the Favorites menu:

- Left Soft Key  : [View]
- Right Soft Key  :
[Options]
Move Position/ Remove/
Remove All/ Set As ICE
Contact

Using the Directional Key , scroll down for the following options, and press the  Key to select:

New Message

View Messages

Send Email

NOTE You can also use the External Keypad to access your Favorites: First, unlock the screen by pressing the  Key twice (to unlock the screen) --> press the  Key [MENU] --> use the Directional Key  to scroll to  [CONTACTS] --> press  Favorites.

5. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Contacts.
3. Press  Groups.
4. Use the Directional Key  to highlight a group.
 - Press the Left Soft Key  [New] to add a new group to the list. In the Enter new name field, type the name of the group and press the  Key [SAVE]. You can add a picture by scrolling to the Picture field and pressing the Left Soft Key  [Set]. Use the Directional Key  to select a picture and then press the  Key.
 - Press the Right Soft Key  [Options] to select one of the following:
New TXT Message/ New Picture Message/ New Video Message/ New Voice Message/ Edit Group/ Erase Group / Edit Members/ Set As Favorite
 - Press the  Key [VIEW] to view the Group information.

NOTE You can also use the External Keypad to access your Groups: First, unlock the screen by pressing the  Key twice (to unlock the screen) --> press the  Key [MENU] --> use the Directional Key  to scroll to  [CONTACTS] --> press  Groups.

6. Speed Dials

Allows you to view your list of Speed Dials or designate Speed Dials for numbers entered in your Contacts.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Contacts.
3. Press  Speed Dials.
4. Use the Directional Key  to scroll to a Speed Dial position, or enter the Speed Dial digit(s) and press the  Key [SET].
5. Use the Directional Key  to scroll to a Contact entry, then press the  Key. If the contact has more than one phone number saved, you will need to highlight the number you want to set as a Speed Dial and press the  Key.

6. Select Yes and press the  Key.

NOTE You can refer to page 33 for more information.

7. In Case of Emergency (ICE)

This menu allows you to store names, phone numbers and other information, which could be very helpful in an emergency situation. It also allows you to read, add, edit, and erase notes that provide important information about yourself in case an emergency situation arises.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Contacts.
3. Press  In Case of Emergency.
4. Use the Directional Key  to scroll to Contact 1, 2, or 3, then press the  Key [ADD].
5. Press  [From Contacts] to add a Contact from your Contact List.

OR

Press **[2^d]** **[From Favorites]** to add a Contact from your Favorites.

OR

Press **[3rd]** **[New Contact]** to enter information not stored in your Contact List.

6. Scroll to the Contact or enter the New Contact information, then press the **[OK]** Key.

The generic ICE contact label changes to the specified name.

Entering Your ICE Personal Info Using the Internal Keypad

1. Open the flip and press the **[OK]** Key **[MENU]**.
2. Press **[4^s]** **Contacts**.
3. Press **[7^a]** **In Case of Emergency**.
4. Scroll to **Personal Info**, then press the **[OK]** Key **[VIEW]**.
5. Scroll to one of the Note entries, then press the **[OK]** Key **[ADD]**.
6. Enter information that would be helpful in an emergency (e.g., your medical record number), then press the **[OK]** Key **[SAVE]**.

The generic Note label changes to the entered information.

TIP

When you've assigned ICE Contacts and your phone is locked for security, the Left Soft Key **[≡]** appears as **[ICE]** allowing the emergency information to be viewed without unlocking the phone.

8. My Name Card

Allows you to view and edit your own Contact information including name, phone numbers, and email address.

Edit Using the Internal Keypad

1. Open the flip and press the **[OK]** Key **[MENU]**.
2. Press **[4^s]** **Contacts**.
3. Press **[8^a]** **My Name Card**.
4. Press the **[OK]** Key **[EDIT]**.
5. Use the Directional Key **[↕]** to scroll to information fields, enter your information as necessary, then press the **[OK]** Key **[SAVE]**.

TIP

You may send your name card using the Right Soft Key **[≡]** **[Send]**.

MEDIA CENTER

Media Center allows you to do more than just talk on your phone.

Media Center is a service that allows you to download and use media and applications on your phone.

With Media Center, it's quick and easy to use your phone to suit your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from ringtones and wallpapers, to games and productivity tools, you can be assured that you will find something useful, practical, or entertaining.

NOTE Do not insert or remove the microSD card while playing, deleting or downloading Pictures/ Videos/ Music/ Sounds.

Anything Unclear?

From the Media Center menu, press the Right Soft Key  [Info] to see your **Memory**, **Multimedia Memory**, **View Log**, **Help** and **About**. Use the Help option to view information on how to use Media Center, everything from buying new applications to expired applications.

1. Search

Refer to page 37 for more information on how to use Bing.

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Search.

2. Music & Tones

Personalize your phone with ringtones. A wide variety of choices are available, such as current hits, pop, hip-hop, and more.

Access Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Music & Tones.
4. Use the Directional Key  to highlight an option and press the  Key, or press the corresponding number key.

V CAST Music | Rhapsody/
Get New Ringtones/ Get
Ringback Tones/ My
Ringtones/ My Music/ My
Sounds/ Sync Music

TIP

Your LG Octane™ device can be used as an MP3 player when you connect your Stereo Bluetooth headset and set Music Only Mode to On. Listen exclusively to your music without being interrupted by calls.

MUSIC ONLY MODE

Using the Internal Keypad

Open the flip --> press the  Key [MENU]. --> press  [Media Center]. --> press  [Music & Tones]. --> press  [My Music]. --> press  [Music Settings]. --> press  [Music Only]. --> select **On** and press the  Key.

Using the External Keypad

Unlock the screen by pressing the  Key twice --> press the Directional Key up  [My Music] --> press  [Music Settings] --> press  [Music Only] --> Select **On** and press the  Key.

2.1 V CAST Music I Rhapsody®

Transform your wireless device into a portable music player. Download new songs from the music catalog right onto your wireless device or a PC. Then you can sync your music between your PC and phone.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Music & Tones.
4. Press  V CAST Music I Rhapsody.

NOTE Additional charges for music may apply. V CAST Music I Rhapsody service is not available in all areas. Check www.verizonwireless.com/music website for details.

2.2 Get New Ringtones

Allows you to connect to Media Center and download various ringtones.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Music & Tones.
4. Press  Get New Ringtones.
5. Press  Get New Applications to shop for ringtones and ringtone applications.

- **Playing the ringtone**

Press the Left Soft Key  **[Play]** you can listen to the tone prior to selecting.

- **Removing the ringtone**

1. Highlight the ringtone you would like to delete.
2. Press the Right Soft Key  **[Options]**.
3. Highlight **Erase** or **Cancel** and press the  Key.
4. Highlight **Yes** and press the  Key to delete the ringtone.

2.3 Get Ringback Tones

Allows you to select a desired ringback tone or download a new ringback tone.

Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Media Center**.
3. Press  **Music & Tones**.
4. Press  **Get Ringback Tones**. Follow the on-screen prompts.

2.4 My Ringtones

Allows you to set a ringtone as your phone's ringer or alert sound, and download new ringtones.

Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
 2. Press  **Media Center**.
 3. Press  **Music & Tones**.
 4. Press  **My Ringtones**.
 5. Use the Directional Key  to scroll to a ringtone and press the  Key **[PLAY]** to preview the ringtone. Press the Left Soft Key **[Set As]** to set the ringtone as one of the following:
-  **Ringtone:** Sets the selected ringtone as your phone's default ringtone.
 -  **Contact ID:** Scroll to and select the Contact to be identified by the ringtone you selected.
 -  **Alert Sounds:** Press the corresponding number key to set the ringtone for one of the following:

All Messages/ TXT Message/ Multimedia Message/ Voicemail

Get New Applications

Allows you to download new ringtones.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Music & Tones.
4. Press  My Ringtones.
5. Press  Get New Applications, then press  Get New Applications again to connect and download ringtone(s).

2.5 My Music

Allows you to listen to music stored on your phone or, if applicable, memory card. Connect to V CAST to download a variety of music, transfer music between your phone and your PC, manage and organize your music files, and more.

SHORTCUT

Unlock the exterior screen, then press the Directional Key up  to access the Music shortcut.

NOTE File storage varies according to the size of each file as well as memory allocation of other applications.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Music & Tones.
4. Press  My Music.
5. Use the Directional Key  to scroll to a category, then press the  Key.

All Songs/ Playlists/ Artists/ Genres/ Albums

Playing Your Music

It's easy to find and play the music you've stored in your phone.

Access My Music

Using the External Keypad

1. Unlock the screen by pressing the  Key twice, then press the  Key [MENU], and scroll to MY MUSIC using the Directional Key .

2. Press the Directional Key  to select **All Songs/ Playlists/ Artists/ Genres/ Albums/ Music Settings** and then press the  Key.
3. Use the Directional Key  to scroll through the menus and songs and press  to play a song.

While playing music

Press Right on the Directional Key  to skip to the next song or press and hold the same Directional Key to fast forward.

Press Left on the Directional Key  to go back to the previous song(s) or press and hold the same Directional Key to rewind.

4. Press the  Key to pause the song.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Music & Tones.
4. Press  My Music.

5. Scroll to one of the following options, then press the  Key.
Play All Songs/ All Songs/Playlists/ Artists/ Genres/Albums/ Manage My Music/Music Settings/ Music Alerts
- Left Soft Key  [Shop] in **All Songs, Playlists, Artists, Genres and Albums** to purchase additional music.
- Right Soft Key  [Sync] in **Genres and Albums** to select to sync your phone to your PC.
6. Use the Directional Key  to scroll through the menus and songs and press the  Key to start the Music Player.

Create playlists on your wireless device

1. Open the flip and press the  Key [MENU], press  Media Center, press  Music & Tones, and then press  My Music.
2. Press  Playlists.

3. “No Playlists Available. Create New?” appears on the display. Highlight Yes and press the  Key. Use the keypad to enter the name of your playlist, then press the  Key [SAVE].
4. Highlight the playlist, press the Left Soft Key  [View] and then press the Left Soft Key  [Add Songs].
5. Use the Directional Key  to scroll through your songs and press the  Key [MARK] to mark the songs you want to add to the playlist.
6. After selecting songs to add to the playlist, press Left Soft Key  [Done].

Controlling the Music Player

If you keep the flip open while listening to your music, use the following to control the Music Player:

- Left Soft Key  [Mute/Unmute] to Mute or unmute the song.
- Right Soft Key  [Options] Allows you to choose:

Exit Player: Exits from the music player.

Get V CAST Music:

Download music files from Get V CAST Music.

Music Only Mode: Allows you to listen exclusively to your music without being interrupted by calls.

Add To Playlist: Allows you to add playlist.

Song Info: Allows you to check song info.

Home Screen: Allows you to move the Music Player to the background of the idle mode screen.

Sound Effect: Allows you to customize sound effects, by selecting one of the following options using the Directional Key  and pressing the  Key [SET]: Flat, Concert Hall, Classical, Bass Booster, Vocal Booster, or Treble Booster.

Repeat: Allows you to set one of the following modes. Repeat All/ Repeat One/ Repeat Off

Shuffle: Shuffles music files in the song list and plays them in random order.

- Side Volume Keys : Adjust the volume.
- Press the Directional Key up or down  /  to scroll through the menu or song list.
-  Play / Pause the current song.
-  Press Left on the Directional Key to go back to the previous song(s) or press and hold the same Directional Key to rewind.
-  Press Right on the Directional Key to skip to the next song or press and hold the same Directional Key to fast forward.

2.6 My Sounds

Allows you to select a desired sound or record a new sound.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].

2. Press  Media Center.
3. Press  Music & Tones.
4. Press  My Sounds.
5. Press  Record New or scroll to and select a sound using the Directional Key .

Options with a sound file highlighted:

- Press the Left Soft Key  [Set As].
- 1. **Ringtone:** Sets the selected ringtone as your phone's default ringtone.
- 2. **Contact ID:** Scroll to and select the Contact to be identified by the ringtone you selected.
- 3. **Alert Sounds:** Press the corresponding number key to set the ringtone for one of the following: All Messages/ TXT Message/ Multimedia Message/ Voicemail
- Press the  Key [PLAY].
- Press the Right Soft Key  [Options] to scroll to: Send/ To Online Album/ Rename/ Move/ Lock(Unlock)/ Erase/ Erase All/ File Info

2.7 Sync Music

V CAST Music with Rhapsody® is a digital music service that lets you listen to millions of songs from thousands of artists. Discover new and old favorites with the extensive music catalog. Download V CAST Music with Rhapsody® to sync tracks, albums, and playlists to your new compatible phone, while managing your existing PC music library all in one place.

Purchase songs on your wireless device*

When you purchase music from your wireless device, you also get a second copy that can be downloaded to your PC from the V CAST with Rhapsody software.

*Per-song charges apply.

System Requirements: Windows Vista, or XP

V CAST Music with Rhapsody will work with Windows Vista, XP, or 2000 (Only 32-bit versions of Windows are supported.) Not available for Mac or Linux.

Download music to your PC

1. Open V CAST Music with Rhapsody. Don't have V CAST Music with Rhapsody? Download it for free at verizonwireless.com/music.
2. Go to **MENU > Settings & Tools > USB Mode** and select **Media Sync Mode**.
3. Use the USB cable to connect your phone with your PC (through an available USB port).
4. On the external screen on your phone, the Sync Music display will appear. Your phone will display "Connected".
5. On the Rhapsody screen, locate the Sources panel. Click on your phone's **Tracks** subfolder.
6. Drag and drop the song(s) you want to sync from from your PC into the Tracks panel.

Once synchronization is complete, press the  Key and disconnect the USB cable.

NOTE A compatible USB cable is required for syncing.

To download PC copy:

NOTE For each V CAST Music with Rhapsody track you've downloaded to your phone, you can download a copy to your computer at no additional charge.

- a. Song tracks available for download will pop-up upon log in completion.
- b. Check the boxes of songs you wish to download.
- c. Select "Download Tracks".

To purchase music:

- a. Browse the catalog and select the track or album you wish to purchase.
- b. Re-enter your password.
- c. Confirm the purchase and the download will begin shortly.

To add subscription music:

NOTE V CAST Music with Rhapsody monthly subscription required.

- a. Add music to your collection by simply dragging and dropping it to My Library or, if connected, your V CAST Music with Rhapsody subscription capable device (both found under Sources).

This can also easily be done by clicking on the Add button next to each song.

4. To play the song or album, you can find it by selecting the My Library tab.

3. Picture & Video

View, take, and share your digital pictures and videos right from your wireless phone.

Access and Options

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Use the Directional Key  to highlight an option and press the  Key, or press the corresponding number key.

V CAST Videos/ Get New Pictures/ My Pictures/ My Videos/ Take Picture/ Record Video/ Online Album

3.1 V CAST Videos

V CAST brings the world to your mobile phone with full-motion video and sound. Catch up with what's happening with video clips from various Categories, including: Entertainment, Kids, Music, Sports, Comedy, News and more. (Must be in a V CAST coverage area. Additional fees may apply.)

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  V CAST Videos. Highlight **Accept** and press the  Key to accept the terms & conditions.
5. Press the Directional Key  to view video clip categories and press the  Key to select a category.
6. Select the video clip you want to view by pressing the  Key.

Browsing, Selecting, and Playing Video Clips

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  V CAST Videos to open the Video Clips Catalog.
5. Use the Directional Key  to browse the various Video Clip categories.
6. Select a category, then press the  Key.
7. Select the clip you want to view (depending on the clips available, you may need to select a sub-category first), then press the  Key.

To download a Video Clip Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  V CAST Videos.

5. Navigate thru the sub-categories and find a video you can download. (not all videos are available for downloading).
6. Use the Directional Key to find the video clip you want, then read the description of the video clip and press the Right Soft Key  [Options].
7. Press  Save Video.
8. Select **Yes** to accept the charges and then press the  Key. Highlight **Phone Memory** or **Memory Card** and press the  Key. The video clip will begin downloading.
9. Once the video is finished downloading, a message will appear on your phone.
10. Select **Yes** and press the  Key to view video.
11. The video clip will be automatically saved in My Videos.

NOTE Not all videos are downloadable. Only videos that have the option to save can be downloaded. Additional charges for each video clip viewed may apply. Video Clips service is not available in all areas. Check the www.verizonwireless.com website for details.

Deleting Video Clips Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  My Videos.
5. Select the video to delete using the Directional Key.
6. Press the Left Soft Key  [Erase]. Select **Yes** and press the  Key to erase the video.

Configure Alerts for New Video Clips Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.

4. Press  V CAST Videos.
5. From the Video Clips Catalog, select a category.
6. Select a Content Provider.
7. Press the Right Soft Key  [Options].
8. Highlight Alerts and press the  Key.
9. Highlight Configure Alerts and press the  Key.
10. Select content for the desired alerts. Highlight Save and press the  Key.

3.2 Get New Pictures

Allows you to download a variety of images for My Pictures.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  Get New Pictures.
5. Press  Get New Applications.
6. Select the Application you wish to use to download new pictures and press the  Key. Follow the on-screen prompts.

3.3 My Pictures

Allows you to view and manage the pictures stored in your phone. You can also take new photos and download new pictures.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  My Pictures.
5. Use the Directional Key  to highlight a picture and press the Left Soft Key  [Erase] to erase the selected picture. Press the  Key [VIEW] to view the selected picture. Press the Right Soft Key  [Options].
6. Select one of the available options:
Send Picture Message/ To Online Album/ Via Bluetooth

Set As Internal Wallpaper/ External Wallpaper/ Picture ID

Take Picture Turns the camera function on.

Get New Pictures To download new pictures.

Slide Show Allows you to play pictures as a slide show.

Manage Pictures Allows you to Erase, Lock, Unlock, Move To Phone, Move To Card, or Send the selected picture.

Rename Allows you to rename the selected picture.

Lock (Unlock) Allows you to lock or unlock images. Locked pictures can't be erased accidentally.

File Info Name/ Date/ Time/ Resolution/ Size

NOTE You can still access Options by pressing the Right Soft Key  [Options] while viewing a picture in full screen.

NOTE The 'Via Bluetooth' option is not available when you select pictures protected by DRM (Digital Rights Management). Also, the option is available only when you select a Bluetooth device that supports receiving pictures.

3.4 My Videos

Allows you to view and manage the videos stored in your phone. You can also record and download new videos.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  My Videos.
5. Use the Directional Key  to highlight a video and press the Left Soft Key  [Erase] to erase the selected video. Press the  Key [VIEW] to view the selected video. Select the Right Soft Key  [Options] to select from the following: (Options are dependent on file types):

Send Send a Video Message, To Online Album or Via Bluetooth.

Record Video Turns on the video camera function.

V CAST Videos Accesses the V CAST Videos feature.

Manage My Videos Allows you to Erase, Lock, Unlock, Move To Phone, Move To Card, or Send the selected video.

Set As Wallpaper Displays the selected video file as the background for your phone.

Rename Allows you to rename the selected video.

File Info Name/ Date/ Time/ Resolution/ Duration/ Size

6. Press the **OK** Key [PLAY] to play the video.

NOTE File storage varies according to the size of each file as well as memory allocation of other applications.

NOTE The 'Via Bluetooth' option is not available when you select pictures protected by DRM (Digital Rights Management). Also, the option is available only when you select a Bluetooth device that supports receiving pictures.

While playing, the following options are available:

-  : Adjust the volume.
- Left Soft Key  : Mute/

Unmute.

- **OK** : Pause/ Play.
- Press the Directional Key up  : Shows the full screen.
- Press the Directional Key down  : Stop
- Press and hold the Directional Key right  : Fast Forward
- Press and hold the Directional Key left  : Rewind

3.5 Take Picture



TIPS

- To take a clear picture, press the Directional Key up or down to set the proper brightness level before taking the picture.
- To set the zoom level before taking a picture, open the flip completely to reveal the volume keys and use them to zoom. Keep in mind that **Zoom is not available when the camera is set to the highest resolution.** You can also

press the Directional Key left or right to zoom.

- Avoid jolting the camera.
- Clean the camera lens with a soft cloth.
- Do not cover the lens with your finger.

SHORTCUT

Pressing the Camera  Key to access the picture taking mode.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  Take Picture.
5. Hold the phone horizontally to take pictures.
6. Set the brightness by pressing the Directional Key , zoom (not available at the highest resolution) by pressing the Directional Key , and press the Right Soft Key  [Options] to change other settings.

- Available settings:

RESOLUTION 2048X1536/
1600X1200/ 1280X960/
640X480/ 320X240

FLASH On/ Off

SELF TIMER Off/ 3 Seconds/
5 Seconds/ 10 Seconds

SHOT MODE Off/ Smile Shot/
Panorama/ Intelligent Shot/
Dual Display

WHITE BALANCE Auto/ Sunny/
Cloudy/ Fluorescent/ Glow

COLOR EFFECTS Normal/
Negative/ Aqua/ Sepia/
Black&White

SHUTTER SOUND Shutter/ No
Sound /Say "Cheese"/ Ready! 1 2 3

SAVE OPTION Internal/
External

CAPTURE Camera/ Video

7. Take a picture by pressing the  Key [TAKE] or by pressing the Camera Key .
8. To save, send, or erase the picture, please select one of the following options:
 - Press the Left Soft Key  [Save] to store it in My Pictures.
 - Press the  Key [SEND] to send a picture message.

- Press the Right Soft Key  [Erase] to delete it.

3.6 Record Video

Lets you record a video message with sound.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Picture & Video.
4. Press  Record Video.
5. Hold the phone horizontally to record videos.
6. Set the brightness by pressing the Directional Key , zoom by pressing the Directional Key  or press the Right Soft Key  [Options] to change other settings.
- Available settings:

RECORDING TIME For Send/
For Save

RESOLUTION 320X240/
176X144

FLASH On/ Off

SAVE OPTION Internal/
External

COLOR EFFECTS Normal/
Negative/ Aqua/ Sepia/
Black&White

WHITE BALANCE Auto/
Sunny/ Cloudy/ Fluorescent/
Glow

CAPTURE Camera/ Video

7. Press the  Key [RECORD] to begin recording, and again [STOP] to finish recording.
8. To save, send, or erase the video, please select one of the following options:
 - Press the Left Soft Key  [Save] to store it in My Videos.
 - Press the  Key [SEND] to send a video message.
 - Press the Right Soft Key  [Erase] to delete it.

3.7 Online Album

You can access your Online Album, and upload your pictures and videos.

Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Media Center**.
3. Press  **Picture & Video**.
4. Press  **Online Album**. Follow the on-screen prompts.

4. Games

Allows you to download games and applications. Games already on your phone are listed in this menu.

Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Media Center**.
3. Press  **Games**.
4. Press  **Get New Applications**. Follow the on-screen prompts.

Removing a download application or game

1. Highlight the application or game you would like to delete.
2. Press the Right Soft Key  **[Options]**.
3. Highlight **Remove** and press the

 Key.

4. Highlight **Yes** and press the  Key to delete the application or game.

5. Mobile Web

Mobile Web

Allows you to access news, sports, weather, and email from your Verizon Wireless device.

Accessibility and selections within this feature are dependent upon your service provider. For specific information on Mobile Web access through your phone, contact your service provider.

SHORTCUTS

Pressing the Directional Key  up is the shortcut to accessing the Browser when the flip is open.

Launching the Browser Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Media Center**.
3. Press  **Mobile Web**.

Navigating Through the Browser

On-screen items may be presented in one of the following ways:

- **Numbered options**

You can use your numeric keypad or you can select the items by pressing the Directional Key  and pressing the appropriate Soft Keys.

- **Links**

Use the Directional Key  to select items and press the  Key to select them.

Scrolling

Use the Directional Key  to scroll through the content if the page does not fit on the screen.

Browser Navigating

Press the Right Soft Key  [Back] to return to the previous page or press the Left Soft Key  [Menu] to access the navigation options:

- **URL Address Field**

Allows you to enter a URL address.

- **Enter Search Field**

Allows you to search the web.

- **Home**

Returns to the Home Page.

- **Options**

Allows you to return to the next page (Forward), access RSS feeds, send the current URL, or access the browser's settings menu.

- **Favorites**

Allows you to add the current page or to view your saved bookmarks.

- **History**

Allows you to see a list of recently viewed web pages.

Home Page

To go to the Home Page, press and hold the  Key.

 
Browser Menu Items

To go to the Browser Menu, press the Right Soft Key  [Menu].

RSS

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favorite web sites in an automated manner that is easier than checking them manually.

To add an RSS feed, you must first be on a website that supports RSS. When there are supported sites, the Available Feeds menu bar is activated.

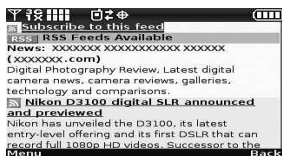

[ADD NEW FEEDS]

Select "Subscribe to this feed" link and press  Key [Save].



[RSS FEEDS]

After adding the Bookmark, registered FEEDS are displayed.

Soft Keys

To navigate to different screens or select special functions, use the Soft Keys. The function associated with the Soft Keys can change for each page and depends on each highlighted item.

Entering Text, Numbers, or Symbols

To input Symbols, press the FN Key  then press the key that has the desired symbol on it. To create an upper case character, use the Shift Key .

Deleting Text/Number Entered

When entering text or numbers, press the  Key to clear the last number, letter, or symbol. Press and hold the  Key to clear the input field completely.

Initiating a Phone Call from the Browser

You can make a phone call from the Browser if the site you are using supports the feature (the phone number may be highlighted, then press the  Key). The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

Ending a Browser Session

End a Browser session by pressing the  Key.

6. Browse & Download

Browse & Download allows you to find applications for your phone. It also allows you to use Mobile Email, VZ Navigator, and any other downloaded applications.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Browse & Download.

4. Select one of the applications already on your phone.

OR

Press  **Get New Applications** and follow the on-screen prompts.

City ID

City ID is an enhanced Caller ID feature on select Verizon Wireless handsets that automatically displays the city and state of every wireless call received. City ID reads the area code and local exchange of an incoming call and displays the location associated with that number. City ID includes over 20,000 cities, towns and neighborhoods in North America and over 200 country codes from around the world - providing mobile subscribers with a remarkably accurate tool to help identify incoming callers.

After the free trial period, subscribers will receive a message to purchase the application. Subscribers are then presented with the available purchase options. If after purchasing City ID a subscriber decides to cancel the

application, the subscriber can follow the standard Media Center process to cancel a subscription.

VZ Navigator®

Now you can find the address of a great restaurant or the nearest ATM. Check movie times. Discover the latest hot spots. And know exactly how to get to where you're going. VZ Navigator® puts all the advanced features of the latest GPS devices and systems on your wireless device — at a fraction of the price.

NOTES

- To use VZ NavigatorSM, you must turn Location On (see page 115)
- Download and subscription required for use only in National Enhanced Service Coverage Area: accuracy and completeness of information is not guaranteed; information about the location of the device will be used to deliver service. Additional fees may apply.
See brochure for details or visit www.verizonwireless.com.

Visual Voice Mail

Visual Voice Mail allows the management of voice mail directly from the device rather than accessing voice mail via traditional methods. Visual Voice Mail displays a list of messages and allows the user to choose which message to listen to or delete, without having to dial into their mailbox, listen to voice instructions, or prior messages.

NOTE Refer to page 51 for more information.

Corporate mail

The Corporate Mail Service is a pre-paid service provided by RemoSync, offering convenience and flexibility to customers who frequently deal in bulk mail.

Additional fees may apply. See the brochure for details or visit www.verizonwireless.com.

Mobile Email

Mobile Email is an application downloadable from the Browse & Download Menu. Don't miss an important email. Thanks to Mobile Email, you can get your emails on your phone, while you're on the go. Get alerts from your LG Octane™ when new email has arrived. Additional fees may apply. See brochure for details or visit www.verizonwireless.com.

7. Extras

Allows you to access extra applications.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Media Center.
3. Press  Extras.
4. Press  Get New Applications. Follow the on-screen prompts.

EMAIL/ VZ NAVIGATOR/ SOCIAL BEAT

MOBILE EMAIL

The Email Menu allows you to set up your email account and conveniently exchange emails wirelessly using your device. To use this feature, you may need to download the application first; read the instructions on your device and follow them.

1. Open the flip and press the  Key [MENU].
2. Press  **Mobile Email**. Follow the on-screen prompts.

VZ NAVIGATOR

The VZ Navigator Menu allows you to get directions to locations when you're out and about.

- Voice-prompted turn-by-turn directions with auto-rerouting, if you miss a turn
- View detailed color maps that can be navigated with ease
- Find points of interest

1. Open the flip and press the  Key [MENU].

2. Press  **VZ Navigator**. Follow the on-screen prompts.

SOCIAL BEAT

Social Beat on Verizon Wireless keeps you connected to Facebook, MySpace and Twitter.

Get up-to-date status updates, tweets and posts. Now with Social Beat's new photo upload feature, you can also share photos on your phone with friends on Facebook, MySpace and Twitter.

1. Open the flip and press the  Key [MENU].
2. Press  **SOCIAL BEAT**.
3. Select the desired social networking site and press the  Key. Follow the on-screen prompts.

SETTINGS & TOOLS

1. My Verizon

Allows you to check your account information, ranging from your payment plan to other available services.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  My Verizon.

SHORTCUT

Opening the flip and pressing the Directional Key  left to access My Verizon is a shortcut key.

2. Master Volume

Allows you to set volume settings.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Master Volume.
4. Adjust the volume with the Directional Key  then press  [SET] to save the setting.

- You can test the volume at each master volume level by pressing the Left Soft Key  [Play].

Using the External Keypad

1. Unlock the screen by pressing the  Key twice.
2. Press the Volume Keys  up or down to increase or decrease the volume as desired.
3. Press the  Key [SET].

3. Tools

Your phone tools include Voice Commands, Calculator, Ez Tip Calculator, Calendar, To Do List, Alarm Clock, Info Search, Stopwatch, World Clock, Notepad, Document Viewer, and USB Mass Storage.

3.1 Voice Commands

This feature provides you with the following options equipped with AVC (Advanced Voice Commands) technology. Each option has helpful information available on the phone and you can check it out by pressing the Left Soft Key  [Info].

SHORTCUT

With the flip closed, press the CLR Key  to access Voice Commands.

Access and Options Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Voice Commands.
5. Press the Right Soft Key  [Settings] to access the available settings for Voice Commands:

Confirm Choices Automatic/
Always Confirm/ Never Confirm

Sensitivity Adjust the sensitivity
as More Sensitive / Automatic/
Less Sensitive.

Adapt Voice If the phone asks
you to repeat your voice
commands too often, train the
phone to recognize your voice
patterns. **Train Words/ Train
Digits**

Prompts Mode/ Audio Playback/
Timeout

For Mode, set to Prompts/
Readout + Alerts/ Readout/
Tones Only.

For Audio Playback,
set to Speakerphone or Earpiece.

For Timeout, set to 5 seconds or
10 seconds.

CLR Key Activation If set to On,
this setting allows you to activate
the Voice Command feature with
the CLR  Key from external
screen.

3.1.1 Call <Name or Number>

Say "Call" and then call someone
simply by saying the phone
number or name. Please say the
contact name exactly as it is saved
in your Contact List. When you
have more than one contact
number, you can state the name
and the number type of the
contact (for example, 'Call John
Mobile').

NOTE When saying phone numbers in a
Voice Command menu, say the
numbers continuously (e.g.,
avoid pausing between numbers).

3.1.2 Send Msg to <Name or Number or Group>

Say 'Send Message' and the voice command will prompt you for the type of message. After choosing the message type, you will be asked for the contact name, number or group. It will automatically start a message. If you say a full-sentence command, such as 'Send Picture Message to Bob', it will automatically start a picture message. When using the 'Send Message' command, speak clearly and say the number, group name, or name exactly as it is entered in your Contact List.

3.1.3 Go to <Menu>

The 'Go to' command allows you to access a menu within the phone (for example, 'Go to Calendar').

If no menu option is stated, a list of options will be provided.

Please note that the options available with the Flip closed are different from those available with the Flip open. Not all menus are available.

3.1.4 Check <Item>

The "Check" command allows you to check out a wide range of items such as Phone Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery Level, Volume, Balance, Minutes, Payment and My Number.

3.1.5 Contacts <Name>

You can look up names in your Contacts (for example, 'Contacts John') as well as manage your Contact List by calling, creating, erasing or modifying.

Call/ Read out/ Create New/ Modify/ Erase

3.1.6 Search

The "Search" command starts an application that allows you to search for information over the internet.

3.1.7 Redial

To make a call to the number from the last call placed, missed, or received list.

SETTINGS & TOOLS

3.1.8 Play

State a playlist name (saved in **My Music**) which you want to play.

3.1.9 My Verizon

The 'My Verizon' command provides you with direct access to your Verizon Wireless account information.

3.1.10 Help

Provides a general guideline for using Voice Commands.

NOTE When saying phone numbers in a Voice Command menu, say the numbers continuously (e.g., avoid pausing between numbers).

3.2 Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to eight digits and the sixth decimal place. Calculations can be made with up to 4 lines of input at one time.

Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Settings & Tools**.

3. Press  **Tools**.

4. Press  **Calculator**.

5. Enter numbers and appropriate operation key(s) to perform desired calculations. To cancel a calculation, press the Left Soft Key  **[Clear]**.

6. Press the Right Soft Key  **[Operators]** to add parenthesis or power for exponential numbers.

Operators for the Directional Key:

Up  : +

Right  : x

Left  : division

Down  : -

OK Key  : =

Example

To calculate 345×56 ,
input $345 \times$ ,
input 56 and press the  Key.

3.3 Ez Tip Calculator

Allows you to quickly and easily calculate bill amount(s) using the bill total, tip % and number of people as variables.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Ez Tip Calculator.
5. Enter values for all variable fields (Total Bill, Tip (%), Split) and the corresponding calculation fields (tip and total for each person) are updated automatically. Use the Directional Key  to change the Tip and Split amounts.
6. Press the Left Soft Key  [Reset] for another calculation.

3.4 Calendar

Allows you to keep your agenda convenient and easy to access. Simply store your appointments, and your phone will alert you with reminders.

SHORTCUT

With the flip open, pressing the Directional Key down  is a shortcut to Events. From Events, you can open the Calendar.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Calendar.
5. Use the Directional Key  to jump to the desired day.
 - Left  jumps cursor to the previous day.
 - Right  jumps cursor to the next day.
 - Up  jumps to the previous week.
 - Down  jumps to the next week.
6. With the date highlighted, press the Left Soft Key  [Add].
7. Enter a subject.
8. Scroll to the other fields and then press the Left Soft Key  [Set]. Select the desired setting and press the  Key. For each Calendar event you can set:

- Subject
- Start Date
- Start Time
- End Date
- End Time
- Repeat
- Until
- Alerts
- Tones
- Vibrate

9. Press the  Key [SAVE] when the Calendar information is complete.

Editing a calendar event

1. In event screen, highlight the date of the event and press the  Key [VIEW]. Press the Right Soft Key  [Options].
2. Press  [Edit].
3. Scroll to the field to edit and update event.
4. Press the  Key [SAVE].

Erasing a calendar event

1. In event screen, highlight the date of the event and press the  Key [VIEW]. Press the Right Soft Key  [Options].
2. Press  [Erase] and press the  Key to delete the calendar event.
3. Select Yes and press the  Key to delete the calendar event.

3.5 To Do List

Allows you to create a To Do list.

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  To Do List.
5. Press the Left Soft Key  [Add].
6. Enter a subject.
7. Highlight the Due Date field, then press the Left Soft Key  [Date]. Use the keypad to enter the date (for example, press  to select June). Press the Right Soft Key  [More] for the following options:
 - Start Date
 - Priority
 - Alert
 - Alert Date
 - Alert Time
 - Tones
8. Press the  Key [SAVE].
9. After creating an item,
 - Press the Left Soft Key  [Add] to add new task.
 - Press the  Key [VIEW] to view the task.

- Press the Right Soft Key  [Options] for : Edit/ Mark as Done/ By Due Date/ Erase/Erase Done/ Erase All

3.6 Alarm Clock

Allows you to set up to ten alarms. At the alarm time, an alarm notification will be displayed on the LCD screen and the alarm will sound (depending on your Master Sound settings).

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Alarm Clock.
5. Press the Left Soft Key  [Add].
6. Enter the alarm information including:
 - Turn On/Off • Set Time
 - Repeat • Ringtone

Use the Directional Key  to scroll to the information you want to set, then press the Left

Soft Key  [Set] to view settings and select your choices and press the  Key.

7. Press the  Key [SAVE] after setting all of the Alarm fields.

Once the alarm is set, you will notice that the Alarm Clock icon will appear on your Notifications bar. When the alarm sound goes off, the popup message will appear letting you know that it is your alarm. When your device is closed, you can press the  Key [Snooze] or press the  Key [Dismiss]. When you open your device, you can press the  Key to either Snooze or Dismiss your alarm by selecting your option and pressing the  Key.

3.7 Info Search

You can search saved items stored on the phone, including Contact entries, Missed Calls, Notepad notes, Calendar events and more.

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.

3. Press **Tools**.
4. Press **Info Search**.
5. Enter the text you want to find in your phone, then press the Key **[SEARCH]**.

3.8 Stopwatch

Allows you to use your phone as a stopwatch.

Using the Internal Keypad

1. Open the flip and press the Key **[MENU]**.
2. Press **Settings & Tools**.
3. Press **Tools**.
4. Press **Stopwatch**.
5. Press the Key **[START]**, then options from here:
 - Press the Left Soft Key **[Lap]**.
 - Press the Key **[STOP]** to stop. Press the Key **[RESUME]** to continue this counter.
6. Press the Right Soft Key **[Reset]** to reset the stopwatch. Press the Key **[Record]** to see the reset recorded times.

3.9 World Clock

Allows you to determine the current time in another time zone or country by navigating with the Directional Key.

Using the Internal Keypad

1. Open the flip and press the Key **[MENU]**.
2. Press **Settings & Tools**.
3. Press **Tools**.
4. Press **World Clock**.
5. Press the Right Soft Key **[Cities]** to choose from a list of available cities.
6. Highlight a city from the list, then press the Key. The display shows the position of the city on a global map.
7. Press the Key again to zoom in on the city and view its date and time information.

NOTE Set Daylight Savings Time by pressing the Left Soft Key **[Set DST]**. Select **Yes** and press the Key.

3.10 Notepad

Allows you to add, read, edit, and erase notes to yourself.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Tools.
4. Press  Notepad.
5. Press the Left Soft Key  [Add] to write a new note.
6. After creating the note, press the  Key [SAVE] to save it.

3.11 Document Viewer

You can view all various document types, such as: Word, Power Point, Excel and PDF.

(Compatible file extensions are doc, docx, ppt, pptx, xls, pdf and txt.)

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Tools.

4. Use the Directional Key  to scroll to **Document Viewer** and press the  Key.

5. Follow the on-screen prompts.

3.12 USB Mass Storage

This menu allows you to use your phone as a Mass Storage device with your Windows® XP or Windows Vista™ PC when your phone is connected to the PC with a compatible USB cable. Mac OS operating system is not supported.

NOTE Do not insert or remove the microSD™ card while playing, deleting or downloading Pictures/Videos/Music/Sounds.

NOTE

If your memory card formatting is not compatible with the phone, you may need to format it first.

Please back your memory card data up through other means before you do so. Formatting your card will delete all saved data in the memory card.

- Not all files types are compatible with your phone. Please refer to page 113 for compatible file types.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Use the Directional Key  to scroll to **USB Mass Storage** and press .
4. Connect the phone to your PC using the USB cable.
5. Drag the PC file to transfer and drop it in your phone directory.

Disable the USB Mass Storage feature

1. While in the USB Mass Storage feature, press the  Key [EXIT].

4. Bluetooth® Menu

The LG Octane™ is compatible with devices that support the Bluetooth® Headset, Handsfree, Dial Up Networking, Stereo, Phonebook Access, Basic Printing, Object Push for vCard & vCalendar, File Transfer, Basic Imaging, Human Interface and Message Access profiles. You may create and store 20

pairings within the LG Octane™ and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth QD ID B016828

NOTE Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

NOTE Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology. Phone does not support ALL Bluetooth® OBEX Profiles.

* For vehicle/accessory compatibility go to www.verizonwireless.com/bluetoothchart

Turn On/Off

Allows you to set the phone's Bluetooth® power On/Off.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.

3. Press  **Bluetooth Menu.**

4. Press the Left Soft Key  **[Turn On]/ [Turn Off].**

NOTE By default, your device's Bluetooth® functionality is turned off.

4.1 Add New Device

Pairing is the process that allows a handset to locate, establish, and register 1-to-1 connection with a target device.

To Pair with a New Bluetooth® Device Using the Internal Keypad

1. Follow the Bluetooth® accessory instructions to set the device to pairing mode.

2. Open the flip and press the  Key **[MENU].**

3. Press  **Settings & Tools.**

4. Press  **Bluetooth Menu.**

5. Press  **Add New Device** and press the  Key to begin searching.

If Bluetooth power on your phone is set to off, it will automatically be turned on, for your convenience.

6. The device will appear in **Add New Device** menu once it has been located. Highlight the device and press the  Key **[PAIR].**

7. The handset may prompt you for the passkey. Consult the Bluetooth® accessory instructions for the appropriate passkey (typically "0000" - 4 zeroes). Enter the passkey and press the  Key.

NOTE You do not need to input the passkey for pairing when the passkey of the Bluetooth® Headset or hands-free kit is 0000.

8. Once pairing is successful, you may be prompted to select either **Always Ask** or **Always Connect** (this option does not apply to all Bluetooth audio devices) and press the  Key.

9. Once connected, you will see the device listed in the Bluetooth® Menu and the Bluetooth® device connected icon  will show up on the top of the LCD screen when connected to the Bluetooth® device.

Icon Reference in Adding New Device

When the Bluetooth® wireless connection is started and paired devices are found, the following icons will display to demonstrate the type of device found (see below).

• Icon References for Bluetooth Devices Found

	When an audio device is found by your LG Octane™ device
	When a PC is found by your LG Octane™ device
	When a PDA is found by your LG Octane™ device
	When another phone device is found by your LG Octane™ device
	When a printer is found by your LG Octane™ device
	When other undefined devices are found by your LG Octane™ device
	When a keyboard is found by your LG Octane™ device
	When Car kit or Handsfree device is found by your LG Octane™ device

My Phone Name

Allows you to edit the name of the Bluetooth® device when **Add New Device** menu is highlighted.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Settings & Tools**.
3. Press  **Bluetooth Menu**.
4. Press the Right Soft Key  [Options].
5. Press  **My Device Info**.
6. Press  to clear the existing name.
7. Use the keypad to enter a new custom name.
8. Press the  Key to save and exit.

TIP

Bluetooth® wireless connection is dependent on your Bluetooth® stereo device. Even though you want to connect with a headset that supports both HFP and A2DP, you may only be able to connect with one.

Discovery Mode

Allows you to set whether your device is able to be found when searched by other Bluetooth® devices in the area.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Bluetooth Menu.
4. Press the Right Soft Key  [Options].
5. Press  Discovery Mode.
6. Use the Directional Key  to scroll to a setting, then select **On** or **Off** and press the  Key.

Supported Profiles

Allows you to see profiles that your LG Octane™ phone can support.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Bluetooth Menu.

4. Press the Right Soft Key  [Options].

5. Press  Supported Profiles.

NOTE To pair with a new Bluetooth device, refer to page 99.

For a device paired to your phone, press the Right Soft Key  [Options] to select from the following:

Remove Device/ Rename Device/ Incoming Security/ Service Discovery / Device Info

TIPS

- The Human Interface profile is supported only for keyboard input and available when the flip is open or closed.
- Headset and handsfree profiles support voice calls with a compatible Bluetooth® headset or car kit.
- The Stereo profile supported by LG Octane™ provides you with the ability to use the integrated music player (and optional Bluetooth® stereo headset) to listen to music, providing you with lots of listening enjoyment.
- Object Push Profile allows you to transfer a contact entry (vCard) and/or transfer a calendar event (vCal) to another OPP-enabled Bluetooth® device.
- The Basic Imaging profile allows sending of non-protected images to a

compatible device for storing and printing.

- Phonebook Access Profile allows your car kit and your phone to share information. By pairing the devices and connecting with this profile, you can access and use your phone book data while in your vehicle.
- File Transfer allows sending or receiving non-protected data files to a compatible Bluetooth® device.
- Basic Printing Profile is a profile to transfer user-generated images to a printer to print them out.
- Message Access Profile allows for the exchange of SMS messages between Bluetooth capable devices.
- Bluetooth Printing
 1. Open the flip and press the  Key **[MENU]**.
 2. Press  **Media Center**.
 3. Press  **Picture & Video**.
 4. Press  **My Pictures** and highlight the picture you want to print and press the Right Soft Key .
 - [Options]**.
 5. Use the Directional Key  to scroll to **Send** and press the  Key.
 6. Press  **Via Bluetooth**.
 7. Set your printer to pairing mode, select **Search New Device** and press the  Key and complete the pairing process.
 8. Once the phone and printer are paired, highlight the printer and press the  Key **[PRINT]**.

Send Contact via Bluetooth

NOTE Follow steps 1 - 9 on page 97.

10. Select the Bluetooth device then press the  Key.
11. Press  **Send Name Card**.
12. Select the contact(s) by pressing the  Key **[MARK]** at each one then press the Left Soft Key  **[Done]**.

5. Keypard Settings

Allows you to lock the keypad only or keypad & phone for security.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Keypard Settings.
- **Keypard Timer:** Always Off/ 7 Seconds/ 15 Seconds/ 30 Seconds
- **Unlock Options:** Press Once/ Press Twice
- **Lock Option:** Keypad Only/ Keypad & Phone

6. Sounds Settings

Provides options to customize the phone's sounds.

6.1 Easy Set-up

Allows you to quickly set the main Sounds Settings.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].

2. Press  Settings & Tools.

3. Press  Sounds Settings.

4. Press  Easy Set-up.

5. Quickly and easily set your phone sounds settings for keypad volume as well as incoming calls and messages (text, multimedia, and voicemail).

- Set each alert separately by selecting **Ring Only**, **Vibrate Only**, **Ring and Vibrate** and **Be Silent**, as necessary and press the  Key [SET]. Press the Right Soft Key  [Skip] to go to the next option. Press the Left Soft Key  [Play] to preview the selected option.

6.2 Call Sounds

Allows you to set how the phone alerts you for various types of incoming calls. The **Call Sounds** menu has three submenus that are set independently.

6.2.1 Call Ringtone

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Call Sounds.
5. Press  Call Ringtone.
6. Use the Directional Key  to scroll to a ringtone then press the  Key to save the sound as your default ringtone.

6.2.2 Call Vibrate

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Call Sounds.
5. Press  Call Vibrate.
6. Use the Directional Key  to select either **On** or **Off**, then press the  Key.

6.2.3 Caller ID Readout

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Call Sounds.
5. Press  Caller ID Readout.
6. Use the Directional Key  to select either **Ring Only**, **Caller ID + Ring** or **Name Repeat**, then press the  Key.

6.3 Alert Sounds

Allows you to select the alert type for a new message.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Sounds Settings.
4. Press  Alert Sounds.
5. Select **TXT Message/**
Multimedia Message/
Voicemail/Emergency Tone/
Missed Call.

6. Set how you want to be alerted.
For **TXT Message, Multimedia Message, Voicemail and Missed Call** choose:

- **Tone:** Select the desired alert tone.
- **Vibrate:** Set the Vibrate as alert sound.
On/ Off
- **Reminder:** Once/ Every 2 Minutes/ Every 15 Minutes/ Off

For **Emergency Tone** choose:
Alert / Vibrate / Off

7. Select the desired setting and press the  Key.

6.4 Keypad Volume

Allows you to set the keypad volume.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Settings & Tools.**
3. Press  **Sounds Settings.**
4. Press  **Keypad Volume.**

5. Adjust the volume with the Directional Key  then press the  Key [SET] to save the setting.

6.5 Digit Dial Readout

Allows you to set the Digit Dial Readout.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Settings & Tools.**
3. Press  **Sounds Settings.**
4. Press  **Digit Dial Readout.**
5. Use the Directional Key  to select either **On** or **Off**, then press the  Key.

6.6 Service Alerts

Allows you to set any of the four Alert options to either On or Off.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Settings & Tools.**
3. Press  **Sounds Settings.**

SETTINGS & TOOLS

4. Press  **Service Alerts.**

5. Select an alert option.

ERI Alerts you for the current status of cellular service.

(ERI: Enhanced Roaming Indicator)

Minute Beep Alerts you 10 seconds before every minute during a call.

Call Connect Alerts you when the call is connected.

Charge Complete Alerts you when the battery is completely charged.

Software Update

This feature gives your phone the ability to upgrade to the latest software and keeps your phone operating with the latest features without visiting a Verizon Wireless Communications Store for the upgrade. You can either be notified automatically that there is an updated version of software available for your phone, or you can manually check to see if there are any updates available for you to download.

6. Use the Directional Key  to select either **On** or **Off**, then press the  Key.

6.7 Power On/Off

Allows you to set the phone to sound a tone when the phone is powered on/off.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Settings & Tools.**
3. Press  **Sounds Settings.**
4. Press  **Power On/Off.**
5. Select **Power On** or **Power Off** and press the  Key.
6. Use the Directional Key  to select either **On** or **Off**, then press the  Key.

6.8 Voice Clarity

Allows you to set the voice clarity.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Settings & Tools.**

3. Press  **Sounds Settings**.
4. Press  **Voice Clarity**.
5. Use the Directional Key  to select either **On** or **Off**, then press the  Key.

7. Display Settings

Provides options to customize the phone's display screen.

7.1 Easy Set-up

Allows you to quickly set the main Display Settings.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Settings & Tools**.
3. Press  **Display Settings**.
4. Press  **Easy Set-up**.
5. Customize the following display settings:
 - Enter the Banner text to be displayed on your screen.
 - Set the Backlight duration for internal display, external display and keypad.

- Set the internal & external wallpaper.
- Set Internal themes.
- Select your Main Menu Layout.
- Choose a menu type for the selected layout.
- Select your device External Display Theme.
- Set the fonts size.
- Select the format of the internal clock.
- Select the format of the external clock.

NOTE Set each alert separately. Press the Right Soft Key  [Skip] to go to the next option. Press the Left Soft Key  to perform the function listed above this key. The Left Soft Key function changes based upon the option.

7.2 Banner

Allows you to enter text to display on the inner and outer LCD's.

7.2.1 Personal Banner

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Banner.
5. Press  Personal Banner.
6. Enter up to 18 characters for the banner text you want to display on the inside LCD, then press the  Key to save it.
7. Scroll down to Select Color and using the Directional Key , select the color for the banner text, then press the  Key or press the Right Soft Key  [Options] and press  Preview to view the banner.

7.2.2 ERI Banner

If set as On, ERI Text is shown on the sub banner.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Banner.
5. Press  ERI Banner.
6. Use the Directional Key  to select either **On** or **Off**, then press the  Key .

7.3 Backlight

Allows you to set the duration for illuminating the backlight. Screens and Keypad are set separately.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Backlight.

5. Choose a Backlight submenu and press the  Key.

Internal Backlight/ External Backlight/ Keypad Backlight.

Choose the backlight duration and press the  Key to set.

- **Internal Backlight:** 7 Seconds/15 Seconds/30 Seconds/Always On/ Always Off
- **External Backlight:** 7 Seconds/15 Seconds/30 Seconds
- **Keypad:** 7 Seconds/15 Seconds/30 Seconds/Always On/ Always Off

TIP

When the phone's internal backlight is set to Always On, the battery may deplete more quickly and shorten battery life because it deactivates power save mode.

7.4 Brightness

Allows you to set the backlight levels.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.

4. Press  Brightness.

5. Choose a Brightness submenu and press the  Key .

Internal Brightness/ External Brightness

6. Choose the backlight brightness level using the Directional Key  and then press the  Key to set.

NOTE Brightness level can be set from 1 to 7.

7.5 Wallpaper

Allows you to choose the type of background wallpaper displayed on the phone. The possibilities are endless; Fun Animations, in particular, provides you with flash screens for your background wallpaper.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Wallpaper.

5. Select the wallpaper location and press the  Key.

Internal Wallpaper/ External Wallpaper

6. For Internal Wallpaper select a submenu.

My Pictures / My Videos / Fun Animations

NOTE External Wallpaper can only be selected from My Pictures.

7. Select from the available options then press the  Key.

7.6 Charging Screen

Allows you to set the screen displayed when you are charging the battery.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Charging Screen.
5. Scroll to a setting and press the  Key.

Off/ Desk Clock/ Calendar

NOTE Press the Left Soft Key  [Preview] to view the options for Desk Clock and Calendar before setting it.

7.7 Display Themes

Allows you to choose the color and style of the background screen.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
 2. Press  Settings & Tools.
 3. Press  Display Settings.
 4. Press  Display Themes.
 5. Select Internal Themes/
External Themes and press the  Key.
 6. Use the Directional Key  to scroll to a setting, then press the  Key.
- Internal Themes: White/ Slick Black/ Jean Pocket/ Paper Peeling
 - External Themes: Menu Card/ Notebook

NOTE Press the Left Soft Key  [Preview] to preview the selected display theme.

NOTE Default Theme is as follows;
Internal Themes (Jean Pocket)
External Themes (Notebook)

7.8 Main Menu Settings

Allows you to customize the main menu layout.

7.8.1 Menu Layout

Allows you to set how the menu items are positioned for access.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Main Menu Settings.
5. Press  Menu Layout.
6. Use the Directional Key  to scroll to a setting, then press the  Key.

Grid/ List/ Tab

NOTE Press the Left Soft Key  [Preview] to preview the selected display layout.

NOTE This User Manual gives navigation instructions according to the default "Grid" Menu Layout in the Display Setting menu. If other themes or menus are set, navigating the phone's menus may be different.

7.8.2 Replace Menu Items

Allows you to replace main menu items with menu items you access more often.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Main Menu Settings.
5. Press  Replace Menu Items.
6. To edit a menu item:
 - Select a menu item and press the  Key [EDIT].
 - Select the desired menu option and press the  Key [SET].

7.8.3 Position Menu Items

Allows you to reposition main menu items within the main screen.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Main Menu Settings.
5. Press  Position Menu Items.
6. To move or swap menu positions:
 - Select the menu item to move and press the  Key [MOVE].
 - Select a new location to move the menu item to and press the  Key [SWAP] to set it.

7.8.4 Reset Menu Settings

Allows you to undo any changes you made to the menu settings.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.

3. Press  Display Settings.
4. Press  Main Menu Settings.
5. Press  Reset Menu Settings.
6. Use the Directional Key  to scroll to a setting, then press the  Key.

Menu Layout/ Menu Items/
Item Positions/ All

7.9 Font Type

Allows you to set the Menu Fonts.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Font Type.
5. Use the Directional Key  to scroll to a setting, then press the  Key.

VZW Font/ LG Secret/ LG Mint

NOTE Press the Left Soft Key [Preview] to preview the Menu Font Type.

7.10 Font Size

Allows you to set the font size. This setting is helpful for those who need the text to display a little bit larger.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Press  Font Size.
5. Use the Directional Key  to scroll to **Internal Font Size** or **External Font Size** and press the  Key.
6. Press the Left Soft Key  [Info] or [Preview].
7. Use the Directional Key  to scroll to a setting, then press the  Key [SET] to save.

Dial Digits: Resizable/ Small/
Normal/ Large
Menu & List: Resizable/ Small/
Normal/ Large
Message: Resizable/ Small/
Normal/ Large

7.11 Clock Format

Allows you to choose the kind of clock to be displayed on the LCD screen.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Display Settings.
4. Use the Directional Key  to scroll to **Clock Format** and press .
5. Press  Internal Clock or  External Clock.
6. Use the Directional Key  to scroll to a setting, then press the  Key.

Internal Clock : Analog/ Large
Analog/ Digital 12/ Large
Digital 12/ Digital 24/ Large
Digital 24/ Dual City/ Off

External Clock : Digital/ Analog/
Minimize/ Off

NOTE Press the Left Soft Key  [Preview] to preview the selected clock format.

8. Phone Settings

The Phone Settings Menu allows you to designate specific settings to customize how you use your phone.

8.1 Airplane Mode

Allows you to use the non-wireless handset functions when radio transmission is restricted. Activating Airplane Mode will disable all wireless communications. When in Airplane Mode, services supporting Location On functionality will be suspended.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Airplane mode.
5. Use the Directional Key  to select either **On** or **Off**, then press the  Key.

8.2 Set Shortcuts

Allows you to set shortcuts to the phone menus by pressing the Directional Key either up, down, left, or right.

8.2.1 Set My Shortcuts

To access and use My Shortcuts, press the Directional Key right  from Idle mode with the flip open.

To configure My Shortcuts, follow the instructions below:

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Set Shortcuts.
5. Press  Set My Shortcuts.
6. Select **Shortcut 1**, **Shortcut 2**, **Shortcut 3**, or **Shortcut 4**, then press the  Key [SET].
7. Set the menu you want to be accessed by the selected Directional Key and press the  Key.

8.2.2 Set Directional Keys

To access and use these shortcuts, press the corresponding Directional Key direction while in Idle mode.

To configure the Directional Key shortcuts, follow the instructions below:

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Set Shortcuts.
5. Press  Set Directional Keys.
6. Select Up Directional Key, Left Directional Key, or Down Directional Key, then press the  Key [SET].
7. Set the menu you want to be accessed by the selected Directional Key and press the  Key.

8.2.3 Set QwertyShortcut

This Shortcut allows you to initiate either a Contact Search, New TXT Message or New Note by simply pressing any key on the internal Qwerty keypad.

To configure the desired Qwerty shortcut function, follow the instructions below:

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Set Shortcuts.
5. Press  Set QwertyShortcut.
6. Use the Directional Key  to scroll to a setting, then press the  Key.

Off/ Search Contact/ New TXT Message/ New Note

8.3 Voice Commands

This feature provides you with the following options equipped with AVR (Advanced Voice Recognition) technology.

8.3.1 Confirm Choices

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.

SETTINGS & TOOLS

4. Press **[3[#]]** Voice Commands.
5. Press **[1[~]]** Confirm Choices.
6. Use the Directional Key **[▲▼]** to scroll to a setting, then press the **(OK)** Key.

Automatic/ Always Confirm/
Never Confirm

8.3.2 Sensitivity

1. Open the flip and press the **(OK)** Key [MENU].
2. Press **[9[^]]** Settings & Tools.
3. Press **[8^{*}]** Phone Settings.
4. Press **[3[#]]** Voice Commands.
5. Press **[2[@]]** Sensitivity.
6. Use the Directional Key **[▲▼]** to scroll to a setting, then press the **(OK)** Key.

More Sensitive/ Automatic/
Less Sensitive

8.3.3 Adapt Voice

1. Open the flip and press the **(OK)** Key [MENU].
2. Press **[9[^]]** Settings & Tools.

3. Press **[8^{*}]** Phone Settings.
4. Press **[3[#]]** Voice Commands.
5. Press **[3[#]]** Adapt Voice.
6. Use the Directional Key **[▲▼]** to scroll to a setting, then press the **(OK)** Key.

Train Words/ Train Digits

8.3.4 Prompts

1. Open the flip and press the **(OK)** Key [MENU].
2. Press **[9[^]]** Settings & Tools.
3. Press **[8^{*}]** Phone Settings.
4. Press **[3[#]]** Voice Commands.
5. Press **[4^s]** Prompts.
6. Use the Directional Key **[▲▼]** to scroll to a setting, then press the **(OK)** Key.

- **Mode:** Prompts/ Readout + Alerts/ Readout/ Tones Only
- **Audio Playback:** Speakerphone/ Earpiece
- **Timeout:** 5 seconds/ 10 seconds

8.3.5 CLR Key Activation

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Voice Commands.
5. Press  CLR Key Activation.
6. Use the Directional Key  to select either **On** or **Off**, then press the  Key.

8.4 Language

Allows you to set the language mode (English or Spanish) according to your preference.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Language.
5. Use the Directional Key  to select either **English** or **Español**, then press the  Key.

8.5 Location

Allows you to set GPS (Global Positioning System: Satellite assisted location information system) mode.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Location.
5. Use the Directional Key  to select either **Location On** or **E911 Only**, then press the  Key.

NOTES

- GPS satellite signals are not always received by the phone under bad atmospheric and environmental conditions, indoors, etc.
- When a location lock mode is activated in the Security Menu, the lock code is required to access the location menu. The lock code is the same 4 digits you use as your device lock code; initially the last 4 digits of your phone number.
- When in Airplane Mode, services supporting Location On functionality will be suspended.

8.6 Current Country

Allows you to set the Current Country.

NOTE The current country setting cannot be changed after it's set for the first time unless real location changes to another country occur.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Current Country.
5. Use the Directional Key  to scroll to a country, then press the  Key.

8.7 Security

The Security menu allows you to secure the phone electronically.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.

3. Press  Phone Settings.

4. Press  Security.

5. Enter the four-digit lock code.

The lock code is the last 4 digits of your mobile phone number if it is set. The lock code is the last 4 digits of your MEID if your mobile phone number is not set.

8.7.1 Edit Codes

Allows you to enter a new four-digit lock code.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.
6. Press  Edit Codes.
7. Select **Phone Only** or **Calls & Services** and press the  Key.
8. Enter your new lock code, then enter it again to confirm.

9. If Calls & Services is selected, enter the Service Lock Code, then enter the New Code, and then under Confirm Code enter the new code again.

8.7.2 Restrictions

Allows you to set separate restrictions for Location Setting, Calls, Messages, and Dial-up Modem.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.
6. Press  Restrictions.
7. Enter the four-digit service lock code.
8. Scroll to a Restrictions submenu then press the  Key.
Location Setting/ Calls/
Messages/ Dial-up Modem

9. Use the Directional Key  to set the restriction then press the  Key.

Location Setting Lock Setting/
Unlock Setting

Calls Incoming Calls/ Outgoing
Calls (Allow All/ Contacts Only/
Block All)

Messages Incoming Messages/
Outgoing Messages (Allow All/
Block All)

Dial-up Modem Allow All/
Block All

8.7.3 Phone Lock Setting

Keeps your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock code using the Edit Codes submenu within the Security menu.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.

4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Phone Lock Setting**.
7. Scroll to an option then press the  **Key**.

Unlocked The phone is not locked.

On Power Up The phone locks when it is turned on.

8.7.4 Lock Phone Now

Using the Internal Keypad

1. Open the flip and press the  **Key [MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Lock Phone Now**.

NOTE To unlock the phone, from idle mode, press the Right Soft Key  **[Unlock]** and enter the four-digit lock code.

8.7.5 Reset Default

Allows you to reset your phone to the factory default settings.

Using the Internal Keypad

1. Open the flip and press the  **Key [MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Reset Default**.
7. Press the  **Key** after reading the warning message.
8. Select **Revert** and press the  **Key**.

A confirmation message is displayed briefly before the phone resets itself.

8.7.6 Restore Phone

Allows you to erase all user data and Contact information you've entered in the phone's memory so it's as if it just left the factory.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.
6. Press  Restore Phone.
7. Press the  Key after reading the warning message.
8. Enter the four-digit lock code.

8.8 System Select

Allows you to set up the phone management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  System Select.
5. Use the Directional Key  to scroll to a setting, then press the  Key.

Home Only/ Automatic

(Depending on the available PRL, the options may differ between Automatic or Automatic A/ Automatic B.)

8.9 NAM Select

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Phone Settings.
4. Press  NAM Select.

5. Use the Directional Key  to select either **NAM1** or **NAM2**, then press the  Key.

9. Call Settings

The Call Settings Menu allows you to designate how the phone handles both incoming and outgoing calls.

9.1 Answer Options

Allows you to determine how the phone will answer an incoming call.

Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Call Settings**.
4. Press  **Answer Options**.
5. Use the Directional Key  to scroll to a setting, then press the  Key **[MARK]** to place a checkmark next to each setting you want to activate (choose as many as you want).

Flip Open(Speakerphone)/Any Key/Auto with Handsfree

NOTE Auto with Handsfree is available only when an external device is connected to your phone.

6. Press the Left Soft Key  **[Done]** to set.

9.2 End Call Options

Allows you to determine how the phone will end a call.

Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Call Settings**.
4. Press  **End Call Options**.
5. Use the Directional Key  to select either **Flip Close** or **End Key Only**, then press the  Key.

9.3 Call Forwarding

Allows an incoming call to be redirected to a mobile telephone or other telephone number.

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Settings & Tools**.
3. Press  **Call Settings**.

4. Press **[3rd]** **Call Forwarding**.
5. Use the Directional Key **[↕]** to select either **Forward Call** or **Cancel Forwarding**, then press the **[OK]** Key.
6. After selecting **Forward Call**, enter the number to forward to. To cancel forwarding, select **Cancel Forwarding**.

9.4 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

Using the Internal Keypad

1. Open the flip and press the **[OK]** Key **[MENU]**.
2. Press **[9th]** **Settings & Tools**.
3. Press **[9th]** **Call Settings** .
4. Press **[4th]** **Auto Retry**.
5. Use the Directional Key **[↕]** to scroll to a setting, then press the **[OK]** Key.

Off/ Every 10 Seconds/ Every 30 Seconds/ Every 60 Seconds

9.5 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

Using the Internal Keypad

1. Open the flip and press the **[OK]** Key **[MENU]**.
2. Press **[9th]** **Settings & Tools**.
3. Press **[9th]** **Call Settings** .
4. Press **[5th]** **TTY Mode**.

An notification message is displayed.
5. Press the **[OK]** Key to continue.
6. Use the Directional Key **[↕]** to scroll to a setting, then press the **[OK]** Key.

TTY Full/ TTY + Talk/ TTY + Hear/ TTY Off

SETTINGS & TOOLS

TTY Full:

- Users who cannot talk and hear send and receive a text message through TTY equipment.

TTY + Talk:

- Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

TTY + Hear:

- Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

TTY Off:

- Users send and receive voice without TTY equipment.

Connecting TTY Equipment to a Terminal

1. Connect a TTY cable to TTY connection on the terminal (TTY connection location is the same as a headset jack).
2. Enter the phone menu and set the desired TTY mode.
3. After setting a TTY mode, check the LCD screen of the phone for the TTY icon.

TTY Mode (Tele Type writer)

Menu	User	Feature	Transmission/ Receiving Mode	When making communications with a normal terminal
TTY Full	For hearing-/ verbally- impaired		text message transmission, text message receiving	Operator required
TTY + Talk	For hearing- impaired	able to talk	voice transmission, text message receiving	Operator required
TTY + Hear	For verbally- impaired	audible	text message transmission, voice receiving	Operator required
TTY Off	For users not hearing-/verbally- impaired		voice transmission, voice receiving	

4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver displays on the TTY equipment display.

9.6 One Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, designated Speed Dial numbers will not function.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings .
4. Press  One Touch Dial.
5. Use the Directional Key  to select either On or Off, then press the  Key.

9.7 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls. CDMA already offers inherent voice privacy. Check with your service provider for availability.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings .
4. Press  Voice Privacy.
5. Use the Directional Key  to select either On or Off, then press the  Key.

9.8 DTMF Tones

Allows you to set the DTMF tone length.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Press  Call Settings .
4. Press  DTMF Tones.

5. Use the Directional Key  to select either **Normal** or **Long**, then press the  Key.

9.9 Assisted Dialing

Allows you to set the phone to assist in dialing numbers when you are outside your home country.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Settings & Tools**.
3. Press  **Call Settings**.
4. Press  **Assisted Dialing**.
5. Use the Directional Key  to scroll to **Assisted Dialing** and **Reference Country**.
- Select **Assisted Dialing** and press the Directional Key  left or right to choose from **Off** or **On**.
- Select **Reference Country** and press the Left Soft Key  [Set]. Choose the desired country and press the  Key.
6. Press the  Key.

10. USB Mode

Your phone automatically detects a USB device when it is connected to your phone for Sync Music or Sync Data operation. If the option is set to **Ask On Plug**, you are asked to confirm whenever a connection is made.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  **Settings & Tools**.
3. Use the Directional Key  to scroll to **USB Mode** and press the  Key.
4. Use the Directional Key  to scroll to a setting, then press the  Key.

Media Sync Mode/ Mass Storage/ Modem Mode/ Ask On Plug

NOTE

Be careful not to format the microSD card when connected to your PC in Mass Storage Mode. When formatted, the Music Player, Camera, Video, MMS and BREW applications may not function.

Backup your data to PC before formatting.

11. Memory

Allows you to check your LG Octane™ internal phone memory as well as the microSD™ external memory.

11.1 Save Options

Allows you to select which memory (phone or memory card) to use to save your files.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Use the Directional Key  to scroll to **Memory** and press the  Key.
4. Press  Save Options.
5. Scroll to **Pictures/ Videos/ Sounds/ Ringtones**, then press the  Key.
6. Scroll to **Phone Memory/ Card Memory** then press the  Key.

11.2 Phone Memory

Shows the memory information saved in your phone.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Use the Directional Key  to scroll to **Memory** and press the  Key.
4. Press  Phone Memory.
5. Scroll to **Memory Usage/ My Pictures/ My Videos/ My Ringtones/ My Music/ My Sounds / My Contacts/ Move All To Card**, then press the  Key.

11.3 Card Memory

Shows the memory information saved in the card.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.

3. Use the Directional Key  to scroll to **Memory** and press the  Key.
4. Press  **Card Memory**.
5. Scroll to **Memory Usage/ My Pictures/ My Videos/ My Ringtones/ My Music/ My Sounds/ My Contacts/ Move All To Phone**, then press the  Key.

NOTE The option Memory Usage shows the total used memory and memory space remaining.

12. Phone Info

Allows you to view the information specific to your phone and software.

Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Settings & Tools**.
3. Use the Directional Key  to scroll to **Phone Info** and press the  Key.

12.1 My Number

Allows you to view your phone number.

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Settings & Tools**.
3. Use the Directional Key  to scroll to **Phone Info** and press the  Key.
4. Press  **My Number**.

12.2 SW/HW Version

Allows you to view the versions of various applications.

Using the Internal Keypad

1. Open the flip and press the  Key **[MENU]**.
2. Press  **Settings & Tools**.
3. Use the Directional Key  to scroll to **Phone Info** and press the  Key.
4. Press  **SW/HW Version**.

Information is displayed for **SW Version/ PRL Version/ ERI Version/ Browser Version/ Media Center Version/ AVR**

Version/ EMS Version/ MMS
Version/ Bluetooth Version/
OTADM Version/ MSUI
Version/ HW Version/ MEID/
Warranty Date Code/
Operating System

12.3 Icon Glossary

Allows you to view all the icons and their meanings.

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Use the Directional Key  to scroll to **Phone Info** and press the  Key.
4. Press  Icon Glossary. Select **Status/ Home Screen/ Media Center/ Messaging/ Contacts/ Recent Calls/ Settings & Tools** and press the  Key.

Please refer to page 44 for message icons.

12.4 Software Update

This feature gives your phone the ability to upgrade to the latest software and keeps your phone operating with the latest features without visiting a Verizon Wireless Communications Store for the upgrade. You can either be notified automatically that there is an updated version of software available for your phone, or you can manually check to see if there are any updates available for you to download.

Automatic Update

Your phone will receive a notification that there is an updated version of software available to be downloaded. You can press the  Key when notified that a download is available or it can happen automatically. Once the download is complete you may, depending on the nature of the update, have three options available: Accept the update, Defer the update, or Reject the update.

NOTE During the update you cannot make or receive phone calls, including 911 calls, or text messages.

Manual Update

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Use the Directional Key  to scroll to **Phone Info** and press the  Key .
4. Press  Software Update.

The two options shown will be **Status** and **Check New**.

Press  **Status** to see the status of a download or update and see information on the last successful update. If updates have not yet been performed, status information will be unavailable.

Or press  **Check New** to check if any new software updates are available to download. If a newer software version is available, it will automatically begin downloading after 30 seconds or you can begin the download immediately by pressing the  Key. To stop the software download press the  or  Keys.

13. Set-up Wizard

Using the Internal Keypad

1. Open the flip and press the  Key [MENU].
2. Press  Settings & Tools.
3. Use the Directional Key  to scroll to **Set-up Wizard** and press the  Key.
4. Use the Directional Key  to scroll to a setting, then press the  Key [SET].

NOTE If you don't want to change the setting, press the Right Soft Key  [Skip] to go to the next setting.

1. INTERNAL FONT SIZE

Dial Digits/ Menu&List/ Message

2. EXTERNAL FONT SIZE

Dial Digits/ Manu&List/ Message

3. CALL SOUNDS

Ring Only/ Vibrate Only/ Ring and Vibrate/ Be Silent

4. INTERNAL THEMES

Jean Pocket/ Paper Peeling/
White/ Slick Black

5. EXTERNAL THEME

Menu Card/ Notebook

6. MENU LAYOUT

Tab/ List/ Grid

7. INTERNAL CLOCK

Analog/ Large Analog/ Digital
12/ Large Digital 12/ Digital 24/
Large Digital 24/ Dual City/ Off

8. EXTERNAL CLOCK

Digital/ Analog/ Minimize/ Off

9. UNLOCK OPTIONS

Press Once/ Press Twice

NOTE Scroll Left or Right with
Directional Key  for other
options.

Press the Left Soft Key 

[Info] or [Preview].

Press the  Key [SET].

Press the Right Soft Key 
[Skip] or [Done].

Troubleshooting

This section lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself

Symptom	Possible causes	Possible Corrective measures
No connection to the network	Signal is weak or you're outside of the carrier network.	Move to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required.	Contact your Service Provider.
Calls not available	Dialing error or service limitations.	Check the number dialed and check the reception. Contact your service provider.

Symptom	Possible causes	Possible Corrective measures
Phone cannot be switched on	END/PWR Key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press the END/PWR Key for at least two seconds. Charge battery. Check charging indicator in the display. Clean the battery contacts.
Charging error	Battery totally empty. Contact problem. No power from outlet. Charger defective. Wrong charger. Battery defective.	Charge battery. Check power supply and connection to the phone. Check the battery contacts, clean them if necessary. Plug in to a different socket or check voltage. Test with another charger. Only use approved accessories. Replace battery.
Network connection is lost.	Signal too weak.	Reconnection to another service provider if network mode is automatic.
Number not permitted	The Fixed Dial Number function is on.	Check the Settings menu and turn the function off.
Phone locked-up and does not function	Battery installing.	Remove the battery and install it to restart your phone again. (similar to how you may restart your PC/computer).

Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing

Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment

is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF

immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices and Health Care Facilities

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from the external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to the external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire

resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

 **Caution** Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.

- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- The phone shall only be connected to USB products that bear the USB-IF logo or have completed the USB-IF compliance program.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Please read the manual for proper installation and removal of the battery.
- Please read the manual for specified charger and charging method.
- Do not damage the power cord by bending, twisting, or heating. Do not use the plug if it is loose as it may cause electric shock or fire.
Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty. When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire. If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Recharge the battery after long periods of non-use to maximize battery life. Battery life will vary due to usage pattern and environmental conditions.
- Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.
- Never store your phone in temperatures less than -4°F or greater than 122°F.
- Charging temperature range is 32°F and 113°F. Do not charge the battery outside this range.

Doing so may generate excessive heat causing serious damage to the battery deteriorating battery life and/or other battery characteristics.

- Do not use or leave the battery in direct sunlight or inside a hot car. The battery may generate heat, smoke or flame, as well as deteriorating battery life and/or other battery characteristics.
- The battery pack has a protection circuit. Do not use near places that can generate more than 100V static electricity which could damage the protection circuit. Damaged protection circuits may rupture, smoke, or ignite.
- When using the battery for the first time, if it emits a bad smell, you see rust on it, or anything else abnormal, do not use the equipment. Return it to the place where it was bought.
- If children are allowed to use the device battery, an adult is responsible for teaching about the safe handling and use of batteries, as well as supervising their proper use and care.
- Keep the battery away from

young children. Safeguard so that small children do not remove the battery from the charger or device.

- If liquid from the battery rubs against skin or clothing, rinse with clean water. The battery liquid could cause skin irritation.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire. Don't short-circuit

the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean

the power plug pin when it's dirty.

- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near

your phone. The magnetism of the phone may damage the data stored in the magnetic strip.

- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or

upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.

- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Caution: Avoid potential hearing loss.

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to

permanent noise induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to

block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.

- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: www.audiology.org

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD USA 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet:

<http://www.nidcd.nih.gov/health/hearing>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

Internet:

<http://www.cdc.gov/niosh/topics/noise/default.html>

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and

Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in idle mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had

difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data does not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless

phones;

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency

working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable

Radio Frequency (RF) energy because of the short distance between the phone and the user's head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones

have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless



phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect, if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do —

may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around

the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission

(FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to

measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, “Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques”, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is

measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote

antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no

evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones (<http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhone>

[s/default.htm](http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhone))

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.hpa.org.uk/radiation>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless

phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your Voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are

driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.



7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or

other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise

restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological

effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the

closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the

user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 0.77 W/kg and when worn on the body, as described in this user's manual, is 0.76 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number

which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their

hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

 
 
The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing

device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

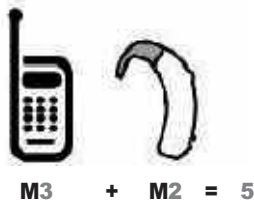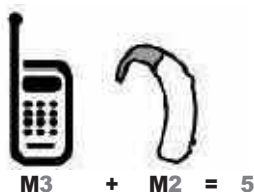

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with

“normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark.

The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

To enter that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN (this phone does not have WLAN) components must be disabled during a call. See Page 91 for instructions to disable these components.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC

<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>

HLAA (Hearing Loss Association of America)

<http://www.hearingloss.org/learn/cellphonetech.asp>

The Hearing Aid Compatibility FCC Order

http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.

- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized

LIMITED WARRANTY STATEMENT

connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets, P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS. Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Glossary

Terminology

Ez Tip Calculator

Feature for easy bill calculation using the total cost, tip, and number of people as variables.

Advanced Voice Commands

Feature that allows you to perform a wide range of verbal commands by training the phone to recognize your individual speech patterns.

Bluetooth® wireless technology

Technology used to allow mobile phones, computers, and other personal devices to be easily coordinated and interconnected using a short-range wireless connection.

Media Center

Feature that accesses the Internet to provide the ability to access and even download a wide variety of software, information, music, video, and more right on your wireless phone.

microSD™

Additional external memory for your mobile phone.

V CASTSM

Feature that is the next generation in wireless technology which transforms your wireless phone into a portable music player and delivers an amazing streaming mobile video experience.

V CAST uses technology that significantly increases download capabilities to deliver better graphics, sound and depth and uses the power of mobile broadband so that you can download the hottest entertainment, sports highlights, news and breaking weather to your Verizon Wireless V CAST capable phone.

Acronyms and Abbreviations

DTMF

Dual-Tone Multi Frequency (or “touch-tone”) is a method used to communicate keys pressed on the phone. Pressing a key generates two simultaneous tones, one for the row and one for the column to determine which key was pressed.

ERI

Enhanced Roaming Indicator is a feature to indicate whether a mobile phone is on its home system, a partner network, or a roaming network. Many phones indicate home vs. roaming as an icon, but ERI capable phones can clearly indicate third “partner network” status.

EVDO

Evolution Data Only or Evolution Data Optimized (abbreviated as EVDO, EV-DO, EvDO, 1xEV-DO or 1xEvDO) provides fast wireless broadband access (3G) anywhere, without needing a WiFi hotspot.

GPS

Global Positioning System is a system of satellites, computers, and receivers able to determine the latitude and longitude of a specific receiver on Earth. Position is calculated using time and distance.

IS 2000

Type of digital signaling. It's the second generation of CDMA digital cellular, an extension of IS-95.

Differences between signaling types have to do with pilot signal and links to provide more traffic channels, and control protocols.

NAM

Number Assignment Module is how the phone stores the phone number and its electronic serial number.

SSL

Secure Sockets Layer Protocol used to encrypt data sent over the air.

TTY

Teletypewriter. An electromechanical typewriter that either transmits or receives messages coded in electrical signals. A phone with TTY support is able to translate typed characters to voice or translate voice into characters to display on the TTY.

Index

123

10 Driver Safety Tips 149

A

Acronyms and Abbreviations 160

Adapt Voice 114

Add New Device 97

Adding Additional Phone Number(s) to an Existing Contact 34

Airplane Mode 112

Alarm Clock 93

Alert Sounds 102

All 57

Answer Options 120

Assisted Dialing 124

Auto Retry 121

B

Backlight 106

Backup Assistant 60

Banner 106

Battery Charge Level 24

Battery Temperature Protection 24

Bluetooth Menu 96

Brightness 107

Browse & Download 83

C

Calculator 90

Calendar 91

Call <Name or Number> 88

Call Forwarding 120

Call Ringtone 102

Call Settings 120

Call Sounds 101

Call Vibrate 102

Call Waiting 27

Caller ID Readout 102

Card Memory 125

Caution: Avoid potential hearing loss. 140

Changing the Default Number 34

Charging Screen 108

Charging the Battery 21

Charging with USB 22

Chat 53

Check <Item> 89

Clock Format 111

CLR Key Activation 115

Confirm Choices 113

Consumer Information on SAR 152

Contact List 59

CONTACTS 59

Contacts <Name> 89

Contacts in Your Phone's Memory 31

Current Country 116

Customizing Individual Entries 32

D

Deleting 35

Dialed 57

Digit Dial Readout 103

Display Settings 105

Display Themes 108

Document Viewer 95

Drafts 49

DTMF Tones 123

E

Easy Set-up 101, 105

End Call Options 120

ERI Banner 106

Extras 85

Ez Tip Calculator 90

F

Favorites 60

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 154

FDA Consumer Update 142

Font Size 111

Font Type 110

G

Games 80

Get New Pictures 75

Get New Ringtones 65

Get Ringback Tones 66

Getting Started with Your Phone 21

Glossary 160

Go to <Menu> 89

Groups 61

H

Help 90

How to Install Your microSD™ Card 23

How to Remove Your microSD™ Card 23

I

Icon Glossary 127

Important Information 9
Important Safety Precautions
1
In Case of Emergency (ICE)
62
Info Search 93

K

Keypad Settings 101
Keypad Volume 103

L

Language 115
LIMITED WARRANTY
STATEMENT 157
Location 115
Lock Phone Now 118

M

Main Menu Settings 109
Making Calls 25
Master Volume 87
MEDIA CENTER 64
Memory 125
Menu Layout 109
Messages 46
MESSAGING 38
Missed 56
Mobile Email 52, 86
Mobile IM 52
Mobile Web 80
Music & Tones 64
Mute Function 27
My Music 67
My Name Card 63
My Number 126
My Pictures 75
My Ringtones 66

My Sounds 70
My Verizon 87, 90
My Videos 76

N

NAM Select 119
New Contact 59
New Contact Basics 31
New Message 38
Notepad 95

O

One Touch Dial 123
Online Album 79

P

Personal Banner 106
Phone Info 126
Phone Memory 125
Phone Overview 13
Phone Settings 112
Picture & Video 72
Picture Message 40
Play 90
Position Menu Items 110
Power On/Off 104
Prompts 114

Q

Quick Access to Convenient
Features 27
Quick Volume Adjustment
27

R

Received 56
Receiving Calls 26
RECENT CALLS 56

Record Video 79
Redial 89
Redialing Calls 26
Removing the Battery 21
Replace Menu Items 109
Reset Default 118
Reset Menu Settings 110
Restore Phone 119

S

Safety 132
Safety Information 135
Save Options 125
Screen Icons 25
SEARCH 37, 64
Security 116
Sensitivity 114
Service Alerts 103
Set Directional Keys 113
Set My Shortcuts 112
Set QwertyShortcut 113
Set Shortcuts 112
Set-up Wizard 128
SETTINGS & TOOLS 87
Shortcuts 28
Signal Strength 25
Social Beat 50, 86
Software Update 127
Sounds Settings 101
Speed Dial 32
Speed Dialing 36
Speed Dials 62
Stopwatch 94
Storing a Number with
Pauses 33
SW/HW Version 126
Sync Music 71
System Select 119

Index

T

Table of Contents 4
Take Picture 77
Technical Details 9
Terminology 160
The Battery 21
TIA Safety Information 132
To Do List 92
Tools 87
Troubleshooting 130
TTY Mode 121
Turning the Phone On and Off 24
TXT Message 38

U

USB Mass Storage 95
USB Mode 124
Using the phone without battery 24
Using the Qwerty Keypad: Messaging 15

V

V CAST Music | Rhapsody 65
V CAST Videos 73
Vibrate Mode 27
Video Message 42
View Timers 58
Visual Voice Mail 51
Voice Clarity 104
Voice Commands 28, 87, 113
Voice Message 44
Voice Privacy 123
Voicemail 50
VZ NAVIGATOR 86

W

Wallpaper 107
World Clock 94