

SILVERCREST®



**BLUETOOTH® HEADPHONES /
AUDÍFONOS BLUETOOTH®**

Distributed by / Distribuido por:

Lidl US LLC., Arlington, VA 22202

Model No. / Modelo Núm.: HG00593A /

HG00593B / HG00593D

Version / Versión: 05 / 2017

FCC-ID: 2AJ90-HG593

Made in / Hecho en: China

Last Information Update - Estado de

las informaciones: 03 / 2017 - Ident.-No.:

HG00593A / B / D022017-US032017-9



**BLUETOOTH®
HEADPHONES**

Operation and Safety Notes



AUDÍFONOS BLUETOOTH®

Instrucciones de utilización y de seguridad

IAN 285814



IAN 285814

US

US-EN	Operation and Safety Notes	Page	3
US-ES	Instrucciones de utilización y de seguridad	Página	23

Description of signal words	Page 4
Customer service	Page 4
Introduction	Page 4
Intended use.....	Page 5
Trademark notices.....	Page 6
Scope of delivery.....	Page 6
Parts description.....	Page 6
Technical data.....	Page 8
Important safety notes	Page 9
Safety instructions for batteries / rechargeable batteries	Page 12
Before use	Page 13
Charging the battery.....	Page 13
Using the headphones	Page 14
Connecting the headphones to a second Bluetooth® device	Page 15
Clearing paired devices	Page 16
Putting on the headphones.....	Page 16
Headphones button functions for music playback.....	Page 16
Headphones button functions as a hands-free device.....	Page 17
Cleaning	Page 18
Storage	Page 18
Troubleshooting	Page 19
Disposal	Page 20
Warranty	Page 20

DESCRIPTION OF SIGNAL WORDS

WARNING

WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE indicates information considered important, but not hazard related (e.g. messages related to property damage).

CUSTOMER SERVICE



Call customer service at **1 (844) 543-5872**



Visit the Website Customer Service Platform at
www.lidl.com/contact-us

Visit a LIDL store for further assistance.

IAN 285814

Please have your IAN number ready.

Bluetooth® Headphones

● **Introduction**



Congratulations on your purchase. You have selected a high quality product. The instructions for use are a part of the product. They contain important information about the safety,

use and disposal of the product. Before using the product, please learn about all the safety information and usage instructions. Only use the product as described and for the specified applications. If you lend the product to someone else, please also give all the instructions.

● Intended use

That product, a consumer electronic, is intended to render audio transmitted from a smartphone, computer, or similar playback devices via Bluetooth connection. The product is also suitable as a hands-free device for mobiles; the mobile or the computer must support Bluetooth® 4.0 standard to do so.

The buttons built into the product allows you to select the piece of music from the playlist selected on the playback device. They are further used to adjust the volume of the product.

The headphones may be paired with two different devices (e.g. mobile and computer) at the same time to e.g. use both the telephone features of the mobile and the audio features of the computer. The built-in rechargeable battery allows for cordless operation.

This product was designed for personal use.

It must not be used for commercial purposes. Any other use is considered improper. Any claims resulting from improper use or due to unauthorised modification of the product will be considered unwarranted. Any such use is at your own risk.

● Trademark notices

- USB® is a registered trademark of USB Implementers Forum, Inc.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by **LIDL US, LLC** is under license.
- The SilverCrest trademark and trade name is the property of their respective owners.


Any other names and products may be trademarks or registered trademarks of their respective owners.

● Scope of delivery


- 1 Bluetooth® Headphones
- 1 Charging cable
- 1 Instructions for use

● Parts description

- | | | | |
|----|------------------------|----|-----------------------------|
| 1 | Control panel | 11 | Micro-USB socket |
| 2 | Speakers with ear pads | 12 | Micro-USB plug |
| 3 | Band | 13 | USB plug |
| 4 | + Button | 14 | Set of instructions for use |
| 5 | LED | | |
| 6 | > Button | | |
| 7 | < Button | | |
| 8 | 🎧▶️🔊 Button | | |
| 9 | - Button | | |
| 10 | Microphone | | |

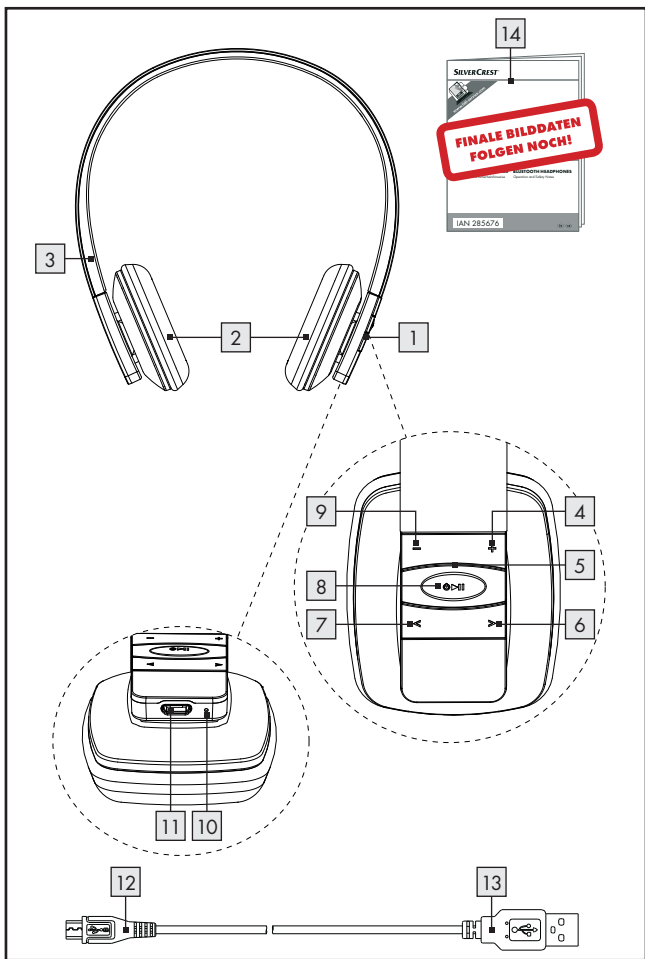

● Technical data

Operating voltage built-in rechargeable battery:	5V  (direct current) via USB charging socket 1 x 3.7V rechargeable lithium-ion polymer battery with 230mAh (battery not replaceable.)
Charging time:	3 hours
Operating time (music & phone):	15 hours (at medium volume)
Standby time:	1900 hours
Wireless standard:	Bluetooth®4.0
Supported profile:	A2DP, AVRCP, HSP, HFP
Range:	32.8 ft (10m)
Dimensions:	6.57 in x 6.57 in x 2.08 in (167 mm x 167 mm x 53 mm) (w x h x d)
Weight:	0.29 lb (135g)
Operating conditions:	+32 °F–+113 °F (0 °C–+45 °C), max. 85% rel. humidity
Storage temperature:	-4 °F–+140 °F (-20 °C–+60 °C)





IMPORTANT SAFETY NOTES

READ ALL INSTRUCTIONS. KEEP FOR FUTURE REFERENCE.
INCLUDE ALL DOCUMENTATION WHEN PASSING THIS PRODUCT
ON TO OTHERS.

⚠ WARNING

Failure to observe the following warnings can result in death or serious injuries.

-  **DANGER TO LIFE AND RISK OF ACCIDENT FOR INFANTS AND CHILDREN!**
- **Risk of suffocation!** Never leave children unsupervised with the packaging material. The packaging material poses a suffocation hazard. Children frequently underestimate the dangers. The packaging material is not a toy.
- This product may be used by children age 8 years and up, as well as by persons with reduced physical, sensory or mental capacities or lacking experience and / or knowledge, so long as they are supervised or instructed in the safe use of the product and understand the associated risks. Do not allow children to play with the product. Cleaning and user maintenance should not be performed by children without supervision. The product is not a toy.
-  Remember that excessive sound pressure or volumes from headphones or earphones can lead to damage to the hearing. Always adjust the volume to a pleasant, not too loud level. If you have adjusted the volume of the headphones to be too high and use that for an extended period, it can damage the listener's hearing.

- Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- However, there is no guarantee that interference will not occur in a particular installation. If this product causes harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try and correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the product and receiver.
 - Connect the product into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio / TV technician for help.
- This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.
- **Wireless interface**
Turn the device off on airplanes, in hospitals, service rooms or near medical electronic systems. The wireless signals transmitted could impact the functionality of sensitive electronics. Keep the device at least 7.874 in (20 cm) from pacemakers or implantable cardioverter defibrillators, as the electromagnetic radiation may impair the

functionality of pacemakers. The radio waves transmitted could cause interference in hearing aids. Do not place the device near flammable gasses or potentially explosives areas (e.g. paint shops) with the wireless components on, as the radio waves emitted can cause explosions and fire. The range of the radio waves varies by environmental conditions. In the event of wireless data transmission, unauthorized third parties receiving the data cannot be excluded. Lidl US LLC is not responsible for interference with radios or televisions due to unauthorized modification of the device. Lidl US LLC further assumes no liability for using or replacing cables and devices not distributed by Lidl US LLC. The user of the device is fully responsible for correcting interference caused by such unauthorized modification of the device, as well as replacement of such devices.

The RF Exposure Compliance distance is 5 mm.

NOTICE

- This product does not contain any parts which can be serviced by the user. The rechargeable battery cannot be replaced.
- Keep the product away from moisture, dripping and splash water!
- Do not place burning candles or other open fire on or next to the product.
- Check the product before every use! Discontinue use if any damage to the product or the charging cable is detected!
- If you notice smoke or unusual noise or odour, switch the product off immediately and remove the USB cable.
- Sudden temperature changes may cause condensation inside the product. In this case, allow the product to acclimate for some time before using it again to prevent short circuits!
- Do not operate the product near heat sources, e.g. radiators or other devices emitting heat!


- Do not throw the product into fire and do not expose to high temperatures.
- Do not try to open the product! It has no internal parts requiring maintenance.
- Do not cover the product during use or charging.
- Only charge the battery in a dry environment, as the product is not splash-proof.



Safety instructions for batteries / rechargeable batteries

⚠ WARNING


Failure to observe the following warnings may result in fatal or serious injuries.

- **DANGER TO LIFE!** Keep batteries / rechargeable batteries out of reach of children. If accidentally swallowed seek immediate medical attention.
-  **DANGER OF EXPLOSION!** Never recharge disposable batteries. Do not short-circuit batteries/rechargeable batteries and/or open them. Overheating, fire or bursting can be the result.
- Never throw batteries / rechargeable batteries into fire or water.
- Do not exert mechanical loads to batteries / rechargeable batteries.

Risk of battery leakage

⚠ CAUTION

Failure to observe the following warnings can result in injuries or property damage.

- Avoid extreme environmental conditions and temperatures which could affect batteries / rechargeable batteries, e.g. radiators / direct sunlight.
- Avoid contact with the skin, eyes and mucous membranes. In the event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek immediate medical attention.
-  **WEAR SAFETY GLOVES!** Leaked or damaged batteries / rechargeable batteries can cause burns on contact with the skin. Always wear suitable safety gloves when handling leaking batteries.
- This product contains an integrated battery which cannot be replaced by the user. The battery may only be removed or replaced by the manufacturer or his customer service or by a similarly qualified person in order to avoid hazards.

SAVE THESE INSTRUCTIONS

● Before use

 
- Before use, verify the package contents are complete and undamaged!


● Charging the battery

- The battery must be charged prior to first use.
- The LED 5 will flash red when the battery is drained. The battery should then be charged as soon as possible.

- Plug the micro-USB plug **12** on the charging cable into the micro-USB socket **11** on the headphones! Plug the USB plug **13** on the charging cable into the USB port on a PC or a USB adapter.
Note: The LED will flash red and blue whilst charging. Once the battery is fully charged, the LED will remain blue.
- Once charging has completed, remove the micro-USB plug from the headphones.


● Using the headphones

- Connect the headphones with a communication device.
- Place the headphones near a switched on communication device (e.g. mobile or computer).
- Pairing with a new Bluetooth® device: Hold the  button **8** for **6 seconds** until the LED **5** flashes red and blue and you hear two beeps. This indicates the headphones are now in pairing mode, which remains active for 5 minutes. The headphones will switch off if they do not detect a Bluetooth® device to connect to and sound 4 beeps.
- Now connect your communication device (mobile phone or computer) via Bluetooth® with the headphones. Please refer to the notes in the instructions for your communication device. Select the entry "HG00593" from the list of devices detected by your computer or mobile. If prompted, enter code "0000" to establish the connection.
- Once the connection has been established, the LED will briefly flash twice every 4 seconds.
- If you want to connect another device to the headphones, repeat the pairing as described previously.
- Please note, your communication device must support Bluetooth® Standard 4.0 to use all options.

- If you come into range of the paired device with the headphones switched on, a Bluetooth® connection will automatically be established.
- You may need to approve the connection on the communication device. Please refer to the instructions for use of the communication device on this topic!
- If you leave the range of your communication device with your headphones, the LED will flash red every 2 seconds. If the connection is not restored within 5 minutes, the headphones will switch off.
- The headphones may be manually switched off by holding the  button for 3 seconds until 4 beeps sounds and the LED goes out.

● Connecting the headphones to a second Bluetooth® device

The headphones may be connected to two Bluetooth® communication devices at the same time. If the headphones are already connected to a device, follow the steps below to connect to the second device:

- Activate multipoint mode by briefly pressing the  button 8 in pairing mode until four beeps sound.
- Now connect to the second device; please note the above chapter “Using the headphones”.
- To deactivate multipoint mode: disable the Bluetooth® connection on the communication device you wish to remove from multipoint link. If necessary for your purposes, then extend the functions of the Bluetooth® transmission of the communication device still connected.

● Clearing paired devices

Once the headphones have been connected to a communication device, your computer or mobile will save the connection. If necessary (e.g. due to purchasing a new device), this list can be deleted (please refer to the instructions for use of the communication device on this topic).



● Putting on the headphones

The headphones can be adjusted to your head size, if necessary: the speakers **2** are secured to the band **3** with a metal rail for this purpose. Adjust these to ensure optimal comfort.

Please note the marking "L" (= left) and "R" (= right) on the inside of the band immediately above the speakers. Put on the headphones so the control panel **1** is on the right.

● Headphones button functions for music playback









- Start a playlist on your playback device. Set the volume on the playback device to *Maximum*. You can adjust the headphones volume with the control unit **1**. Music is played back through the speakers **2**.
- The control panel has 5 buttons. These control the following functions:




Function	Action
Play/Pause	Briefly press the  button 8
Next title	Briefly press the  button 6

Function	Action
Replay title	Briefly press < button 7
Previous title	Briefly press < button 7 2 x
Scan forward	Hold > button 6
Scan backwards	Hold < button 7
Increase volume	Press + button 4
Reduce volume	Press - button 9

● Headphones button functions as a hands-free device

You may also use the headphones for telephone calls when used with a communication device which supports this function. If your communication device supports the Bluetooth® standard 4.0, you will be able to use the following functions:

Function	Action
Answer/end call	Briefly press the  >  button 8
Ignore call	Hold the  >  button 8 2 seconds until a beep sounds
Redial	Briefly press the  >  button 8 twice
Enable/disable voice command	Simultaneously press the + button 4 and the - button 9 briefly
Increase volume	Press + button 4
Reduce volume	Press - button 9
Send the call from the headphones to the mobile	Briefly press the  >  button 8 twice

Function	Action
Send the call from the mobile to the headphones	Briefly press the  button 8 twice
End the current call and answer call waiting*	Briefly press the  button 8
Switch between two calls (toggle)*	Hold the  button 8 2 seconds until it beeps

*These functions must be supported by your mobile service provider.

- The ringer and the caller's voice are rendered through the speakers **2**.
- Music playback is automatically paused when a call is received.
- The microphone **10** records your voice.
- Music continues after the call has been ended.

● Cleaning

NOTICE

Potential damage to the product!

- Switch the product off and remove all plugs before cleaning!
- Be sure moisture does not enter the product during cleaning to prevent damage to the product and related repairs.
- Only clean the product with a slightly dampened cloth and a mild spray!

● Storage

- Store the product in a dry environment, protected from dust and direct sunlight.

● **Troubleshooting**

● = **Fault**

⊙ = Possible cause

○ = Action

● **No functions**

⊙ Battery drained.

○ Recharge the battery as described in "Charging the battery".

● **No Bluetooth connection**

⊙ Error operating the headphones.

○ Switch the headphones off and on again.

⊙ Communication device error.

○ Reconnect the device.

○ Check if other devices using Bluetooth standard 4.0 work with the communication devices.

⊙ Bluetooth® connection error.

○ Move closer to the devices connected via Bluetooth®.

● **No sound**

⊙ The headphones volume is set to Minimum.

○ Press and hold the + button  to increase the volume.

⊙ Error operating the communication device.

○ Increase the volume on the playback device.

⊙ Bluetooth® connection error.

○ Move closer to the devices connected via Bluetooth®.

○ Disconnect Bluetooth® and reconnect.

● **Unable to use all functions**

⊙ Communication device error.

○ Verify your communication device supports all functions.

● **Disposal**



Dispose of the packaging through your local recycling facilities and in compliance with all federal, state and local regulations.

Contact your local waste management authority for additional information on how to dispose of the used product.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, do not throw in the garbage. Information on collection sites and their opening hours is available from your local authority.

Improper disposal of rechargeable batteries can damage the environment!

Never throw rechargeable batteries in the garbage. They may contain toxic heavy metals and must be handled as special waste. The chemical symbols of heavy metals are: Cd = cadmium, Hg = mercury, Pb = lead. Used rechargeable batteries should therefore be disposed of through a local collection point.

● **Warranty**

What does this warranty cover?

The warranty covers:

- Damage, breakage or inoperability due to defect.
- Damage not accounted for by normal wear and tear or following the safety and maintenance instructions provided in the user manual.

What is not covered by the warranty?

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.).
- Tampering with the product (such as removing cover, unscrewing screws etc.)

What is the period of coverage and warranty resolution?

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

What will we not do?

We will not:

- Start a new warranty period upon product exchange;
- We will not repair product.

How to process the warranty?

We recommend first either:

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at www.lidl.com/contact-us
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

What must you do to keep the warranty in effect?

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

How does state law relate to this warranty?

Any State Laws that contradict or modify the warranty listed here to the consumer's benefit will be followed.