 
 


airdisk®

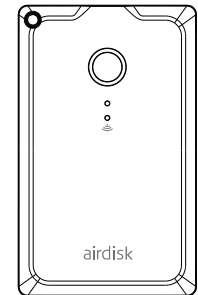

Quick Start Guide

## 1. General Overview

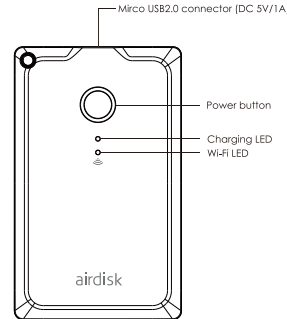

2

### • Micro USB2.0 connector (DC 5V/1A)

Charging and data transfer interface.

### • Power button

Press the button until the Wi-Fi LED lights up to turn on (goes out to turn off); Press for 30s ( when device is on ) until the Wi-Fi LED flashes rapidly, then release the button to restore to factory settings.

### • Charging LED

Flashes while charging, shines steadily when fully charged, flashed rapidly to prompt low power level.

### • Wi-Fi LED

Shines steadily when device is on, flashes rapidly during wireless data transfer.

### • Power saving mode

If no connection is detected to the AP & AP Client of the device for 15 consecutive minutes, it will shut down automatically.

## 2. APP Download

Both of iOS and Android users can scan the QR code as below to download and install HiDisk App.

3



You can also obtain the APP by searching "HiDisk" in the application markets as below:

 
**Android users:** Google Play

**iOS users:** App Store

## 3. Ways To Use airdisk

### 3.1 U-Disk function

airdisk works as a traditional U-disk when it is plugged into a PC USB port via data line.



4

### 3.2 Access and set airdisk through web browser

Connect to the airdisk Wi-Fi network, the SSID and password of the network is "airdisk\_\*\*\*\*\*" (\*\*\*\*\* is the last 6 characters of MAC address) and the password is "88888888" by default respectively. Launch an Internet browser then go to 192.168.222.254 to access and set your airdisk.

For example: set the airdisk connect to Internet through web browser.  
Settings >> Internet Connection >> Choose an available Wi-Fi hotspot

 
### 3.3 Connect and set airdisk via APP

For Android APP:

① Connect to airdisk; (For iOS users, you have to connect to the airdisk Wi-Fi network in your mobile devices settings instead of setting in the APP.)  
HiDisk >> Settings >> Connect to Device Wi-Fi >> Choose the device Wi-Fi network

② Set the airdisk connect to the Internet  
HiDisk >> Settings >> Device Wi-Fi Settings >> Connect to Internet >> Choose a network

5



#### Notes :

You will be not able to access the content of airdisk wirelessly when it is connected to a PC USB port.

## 4. Encryption Functionality

### 4.1 Encryption Tool For PC

An encryption tool has been pre-placed in the storage of airdisk, you can use this tool to partition the internal storage of airdisk to create encrypted partition, conduct password-related settings, login/logout the encrypted partition.

6

### 4.2 Access to encrypted partition via the APP

HiDisk >> Settings >> Encrypted Disk Login/Logout >> Enter Password

#### Notes :

Please backup your data before partitioning the airdisk, or data will be lost during this process.

## 5. OTA Firmware Upgrade

1) Pre-cautions: Please confirm that the battery is fully charged or stay connected to a power adapter, no any other operation is allowed during upgrading.

2) Please go to the settings page of the APP, tap "Check for FW Upgrade" and then follow the instructions.

7

### FCC Caution :

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.

8

– Increase the separation between the equipment and receiver.  
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
– Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operate in conjunction with any other antenna transmitter. The portable device designed to meet requirements for exposure to radio waves established by the Federal Communications Commission (USA).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that cause undesired operation.

9